


INSTALLATION

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- (a) Install a new gasket to the thermostat.

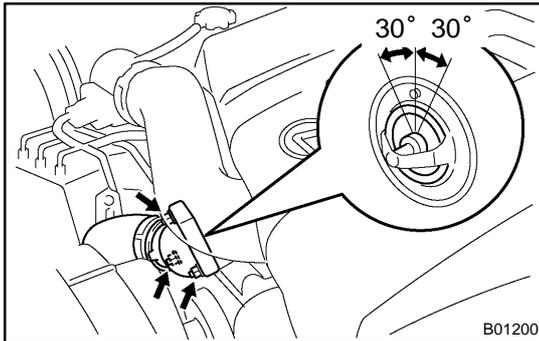

- (b) Insert the thermostat into the water inlet housing with the jiggle valve facing straight upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

2. INSTALL WATER INLET

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT LEAKS

5. RECHECK ENGINE COOLANT LEVEL

6. INSTALL AIR CLEANER INLET AND BATTERY CLAMP COVER