



INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Apply a light coat of gasoline to 2 new O-rings, and install them to the pressure regulator.
- (b) Insert the pressure regulator into the fuel filter by hand completely.
- (c) Insert the pressure regulator and fuel filter assembly into the delivery pipe by hand completely.
- (d) Check that the fuel pressure regulator and fuel filter rotate smoothly

NOTICE:

If it does not rotate smoothly. the O-ring may be pinched, so remove the pressure regulator, fuel filter and do steps (a) and (b) above again.

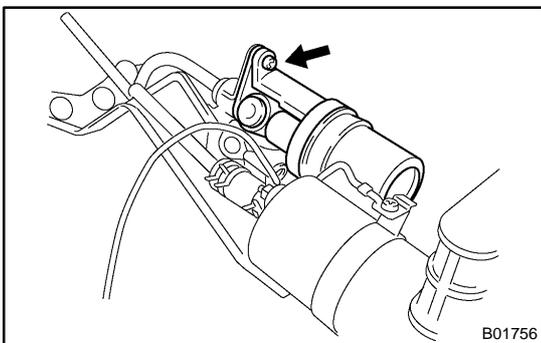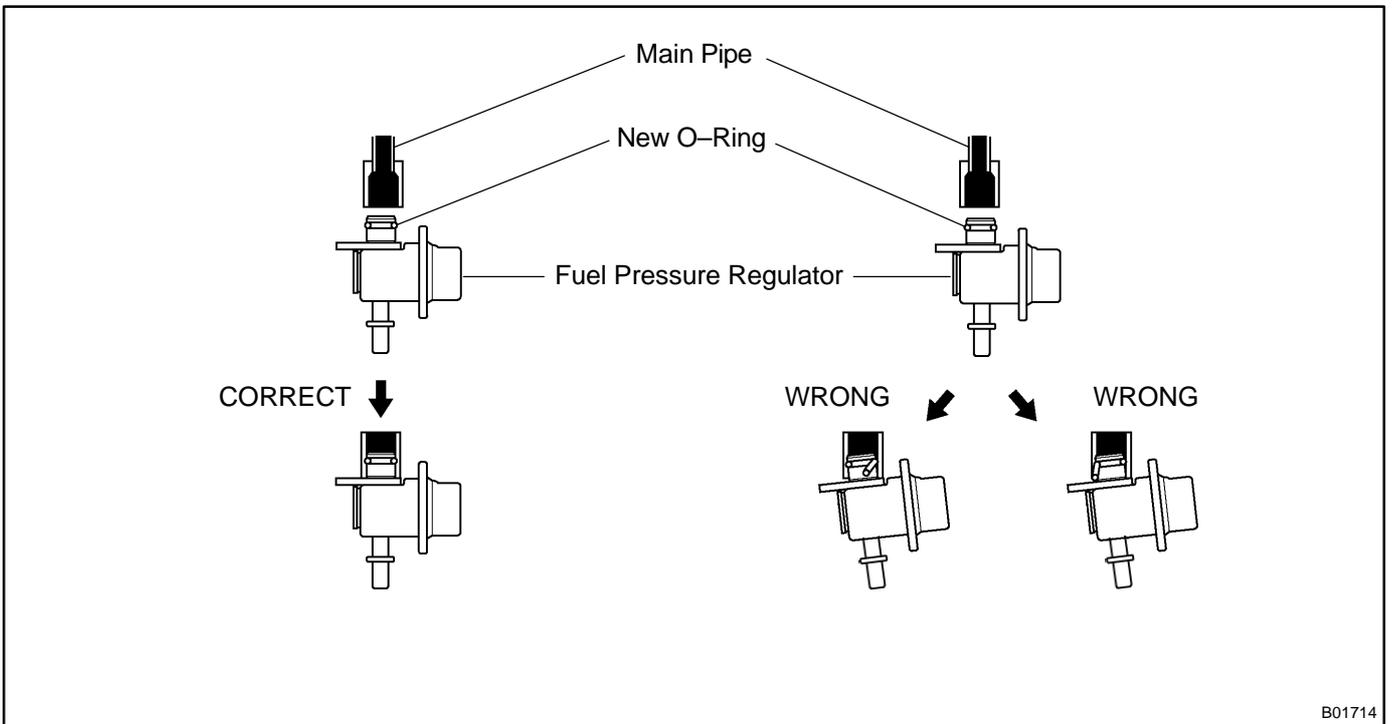

- (e) Install the screw.
Torque: 2.0 N·m (20 kgf·cm, 17 in.-lbf)
2. **INSTALL FUEL PUMP ASSEMBLY TO FUEL TANK**
(See page [SF-10](#))