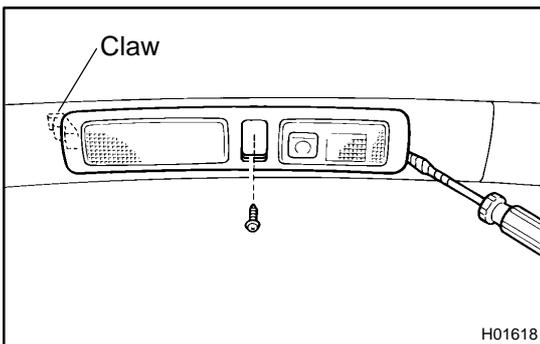
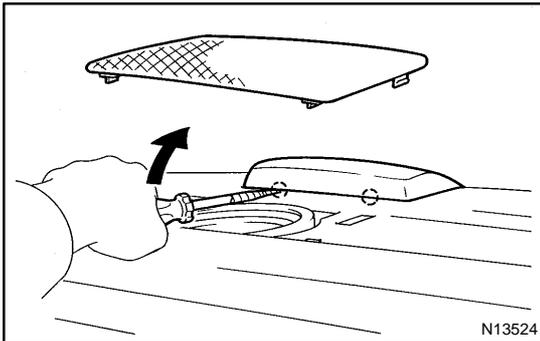


## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Front seat
- (b) Rear seat cushion
- (c) Rear seat belt floor anchors
- (d) Rear seatback
- (e) Front door scuff plates
- (f) Rear door scuff plates
- (g) Rear seat side garnishes
- (h) High-mounted stop light
- (i) Speaker grille
- (j) Package tray trim
- (k) Assist grip
- (l) Center pillar garnish



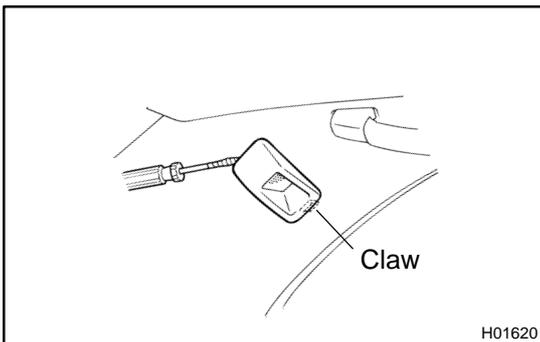
### 2. REMOVE REAR PERSONAL LIGHT

- (a) Remove the screw.
- (b) Using a screwdriver, remove the light as shown in the illustration.

**HINT:**

Tape the screwdriver tip before use.

- (c) Disconnect the connector.



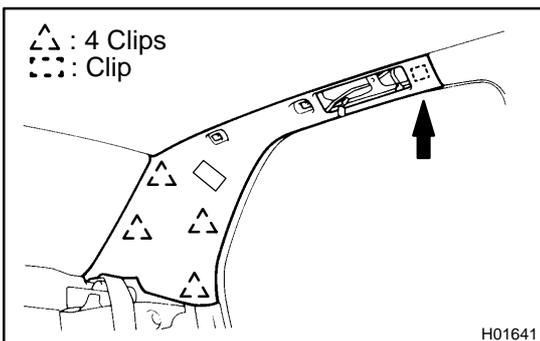
### 3. REMOVE SPOT LIGHT

- (a) Using a screwdriver, remove the light as shown in the illustration.

**HINT:**

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

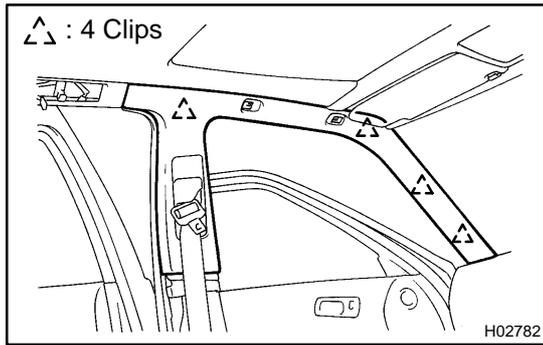


### 4. REMOVE ROOF SIDE INNER GARNISH

Remove the roof side inner garnish.

**NOTICE:**

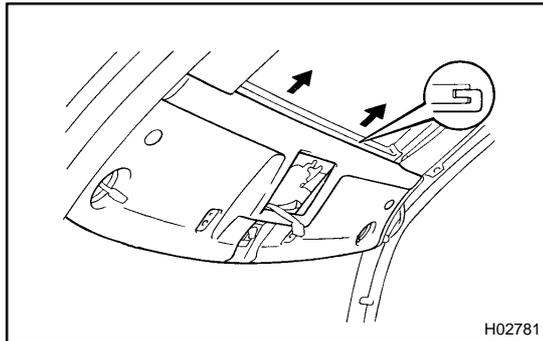
Paying enough attention remove the clip on the roof side inner garnish shown in the illustration. Otherwise, the roof side inner garnish or the front pillar garnish might be broken.

**5. REMOVE FRONT PILLAR GARNISH**

- (a) Remove the front seat outer belt shoulder anchor.
- (b) Remove the front pillar garnish.

**6. REMOVE THESE PARTS:**

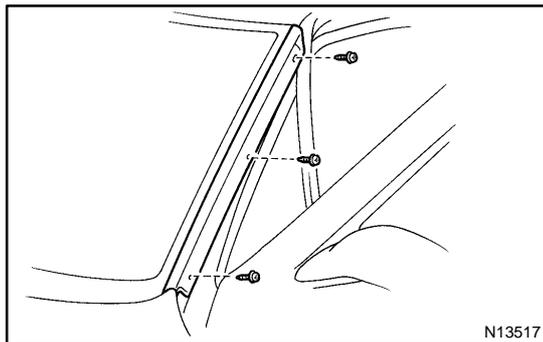
- (a) Sun visors and holders
- (b) Personal light
- (c) Center visor
- (d) Inner rear view mirror

**7. REMOVE FRONT ROOF HEADLINING**

Remove the front roof headlining as shown in the illustration.

**8. REMOVE THESE PARTS:**

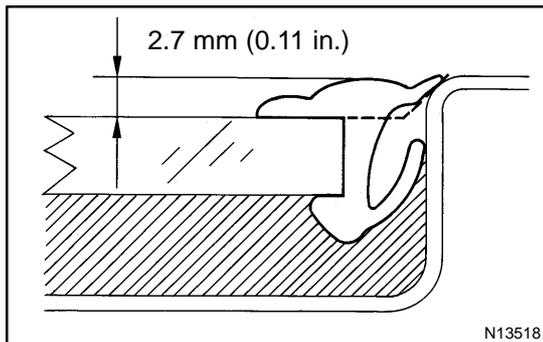
- (a) Hood
- (b) Wiper arms
- (c) Cowl louver weatherstrip
- (d) Cowl louver

**9. REMOVE FRONT DOOR WEATHERSTRIP**

Pull the weatherstrip by hand.

**10. REMOVE OUTSIDE MOULDING**

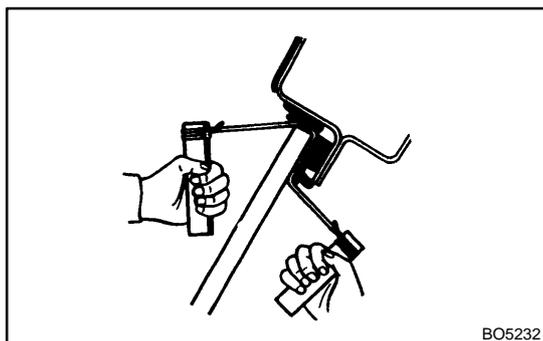
Remove the 3 screws and outside moulding.

**11. REMOVE WINDSHIELD UPPER MOULDING**

Using a knife, cut off the moulding as shown.

**NOTICE:**

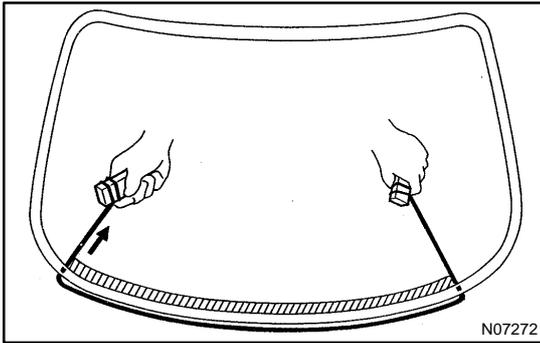
Do not damage the body with the knife.

**12. REMOVE WINDSHIELD GLASS**

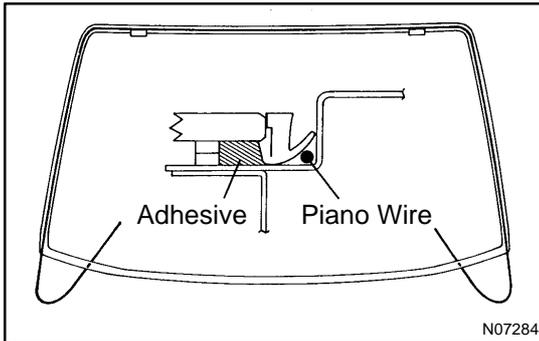
- (a) Push piano wire through between the body and glass from the interior.
- (b) Tie both wire ends to a wooden block or like object.

**HINT:**

Apply adhesive tape to the outer surface to keep the surface from being scratched.

**NOTICE:**

- When separating the glass, take care not to damage the paint, interior and exterior ornaments.
- To prevent scratching the instrument panel when removing the windshield, place a plastic sheet between the piano wire and instrument panel.



(c) Cut the adhesive by pulling the piano wire around it.

(d) Remove the glass.

**NOTICE:**

Leave as much of the adhesive on the body as possible when cutting off the glass.