

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount : 700 ± 50 g (24.69 ± 1.76 oz.)

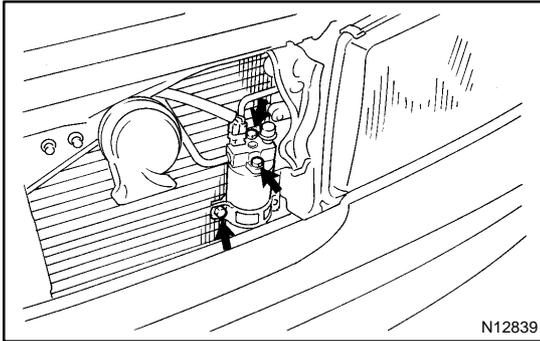

2. DISCONNECT 2 LIQUID TUBES

Remove the 2 bolts and disconnect the both tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install the tubes.

3. REMOVE RECEIVER

Remove the holder bolt and pull out the receiver.

HINT:

At the time of installation, please refer to the following item.

If receiver is replaced, add compressor oil to receiver.

Add 10 cc (0.34 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent