



**REMOVAL**


1. REMOVE FRONT SEAT  
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
2. REMOVE REAR SEAT CUSHION
3. REMOVE REAR SEAT BELT FLOOR ANCHORS  
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
4. REMOVE REAR SEATBACK  
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
5. REMOVE FRONT DOOR SCUFF PLATES
6. REMOVE REAR DOOR SCUFF PLATES
7. REMOVE REAR SEAT SIDE GARNISHES

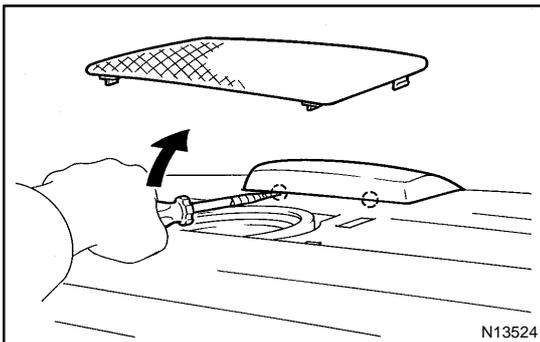


8. REMOVE HIGH-MOUNTED STOP LIGHT
9. REMOVE SPEAKER GRILLE
10. CANADA:  
REMOVE CRS TETHER ANCHOR COVERS AND TETHER ANCHOR BRACKETS  
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
11. REMOVE CRS TETHER ANCHOR COVERS AND PACKAGE TRAY TRIM
12. REMOVE ASSIST GRIPS
13. REMOVE CENTER PILLAR GARNISHES
14. REMOVE REAR PERSONAL LIGHT
  - (a) Remove the screw.
  - (b) Using a screwdriver, remove the light as shown in the illustration.

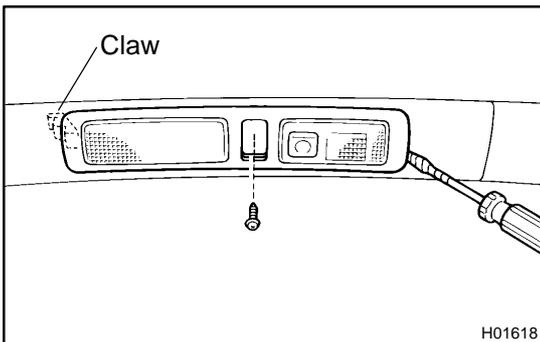

- HINT:
- Tape the screwdriver tip before use.
- (c) Disconnect the connector.
  - (d) Employ the same manner described above to the other side.

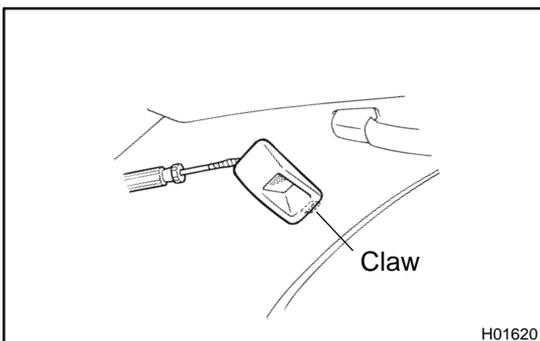

15. REMOVE SPOT LIGHT
    - (a) Using a screwdriver, remove the light as shown in the illustration.
- HINT:
- Tape the screwdriver tip before use.
- (b) Disconnect the connector.
  - (c) Employ the same manner described above to the other side.

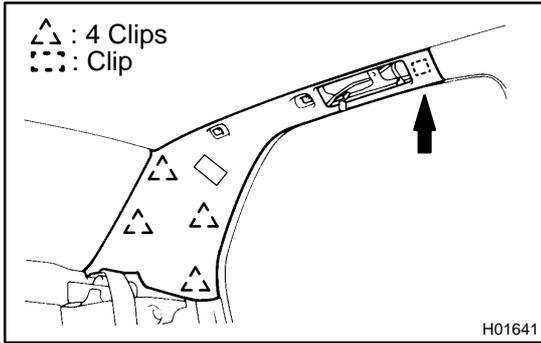
**16. REMOVE ROOF SIDE INNER GARNISH**

- (a) Remove the roof side inner garnish.


**NOTICE:**

Paying enough attention remove the clip on the roof side inner garnish shown in the illustration. Otherwise, the roof side inner garnish or the front pillar garnish might be broken.


- (b) Employ the same manner described above to the other side.

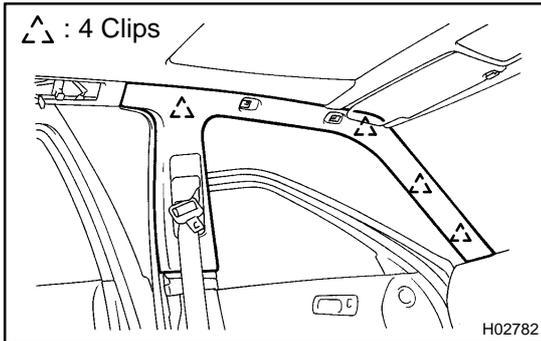**17. REMOVE FRONT PILLAR GARNISH**

- (a) Remove the front seat outer belt shoulder anchor.  
 (b) Remove the front pillar garnish.  
 (c) Employ the same manner described above to the other side.

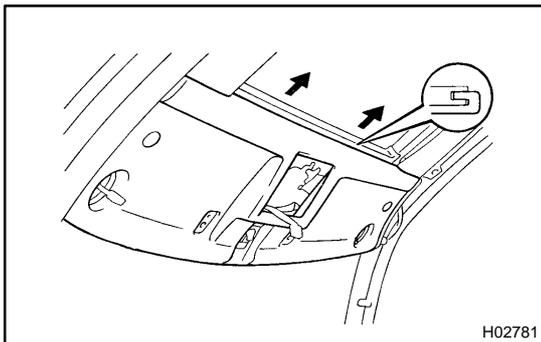**18. REMOVE SUN VISORS AND HOLDERS****19. REMOVE PERSONAL LIGHT****20. REMOVE CENTER VISOR****21. REMOVE INNER REAR VIEW MIRROR****22. REMOVE FRONT ROOF HEADLINING AND ROOF HEADLINING**

- (a) Pull the headlining backward and remove the front roof headlining.

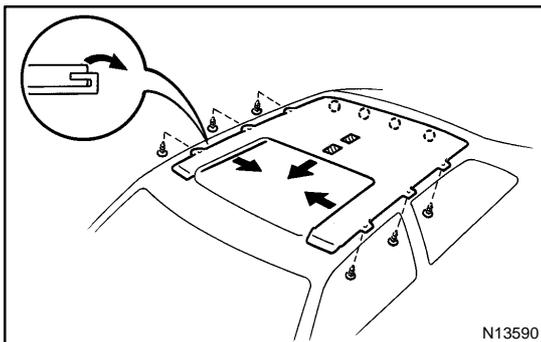

- (b) Pull out the portion fitting around the sliding roof.  
 (c) Using a clip remover, remove the 10 clips and release the fastener tapes, then remove the headlining.

**NOTICE:**

**Do not fold down the headlining.**