


PRESSURE SWITCH ON-VEHICLE INSPECTION


ACOP7-01

1. SET ON MANIFOLD GAUGE SET
(See page [AC-17](#))
2. DISCONNECT CONNECTOR FROM PRESSURE SWITCH
3. RUN ENGINE AT APPROX. 2,000 RPM

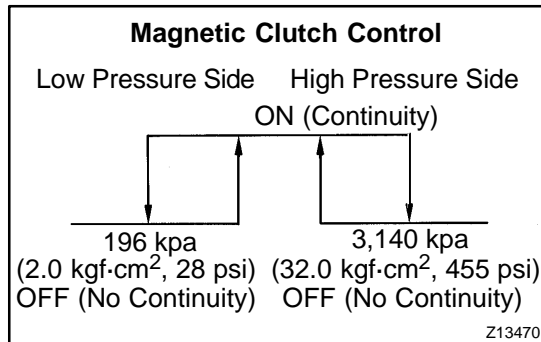

4. **Magnetic Clutch Control:**
INSPECT PRESSURE SWITCH OPERATION
 - (a) Connect the positive (+) lead from the ohmmeter to terminal 4 and the negative (–) lead to terminal 1.
 - (b) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.

If operation is not as specified, replace the pressure switch.

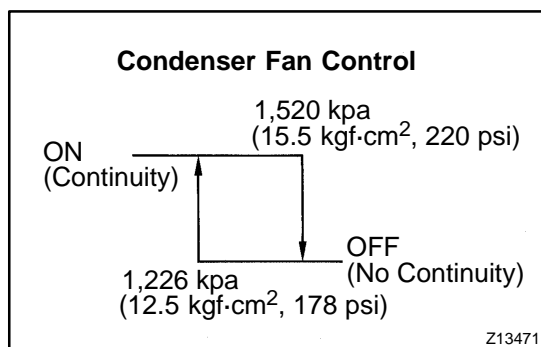

5. **Condenser Fan Control:**
INSPECT PRESSURE SWITCH OPERATION
 - (a) Connect the positive (+) lead from the ohmmeter to terminal 2 and the negative (–) lead to terminal 3.
 - (b) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.

If operation is not as specified, replace the pressure switch.
6. STOP ENGINE AND SET OFF MANIFOLD GAUGE SET
7. CONNECT CONNECTOR TO PRESSURE SWITCH