


REMOVAL

1. REMOVE BATTERY CLAMP COVER AND AIR CLEANER INLET

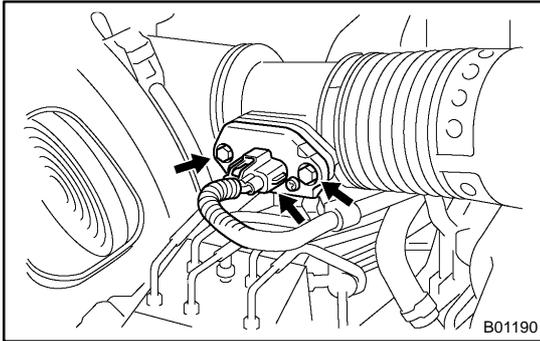

2. REMOVE MAF METER

- (a) Disconnect the MAF meter connector.
- (b) Remove the 2 bolts, MAF meter and gasket.