

SENSOR REMOVAL



AC0PU-01

1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor then disconnect the connector.


HINT:

- Tape the screwdriver tip before use.
- At the time of installation, please refer to the following item.
Install the sensor, as shown in the illustration.

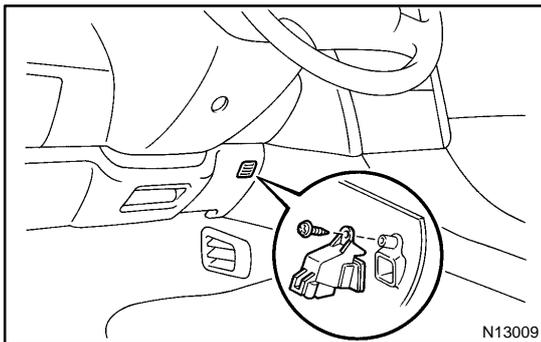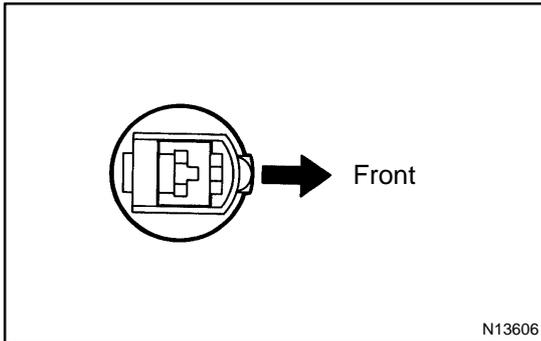

2. REMOVE ROOM TEMPERATURE SENSOR

- Remove the No.1 safety pad set bolts.
- Disconnect No.1 safety pad.
- Disconnect the connector and aspirator hose.
- Remove the screw and sensor.

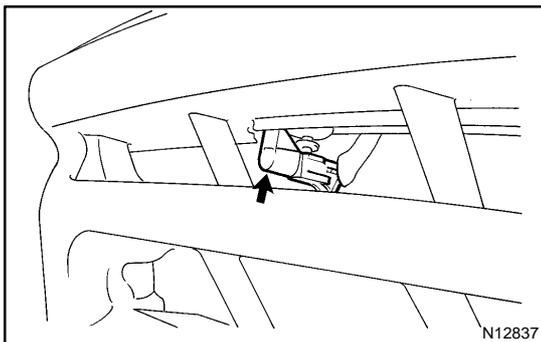


3. REMOVE AMBIENT TEMPERATURE SENSOR

- Disconnect the connector.
- Pull out the sensor.

4. REMOVE EVAPORATOR TEMPERATURE SENSOR


- (a) Remove the evaporator
(See page [AC-50](#))

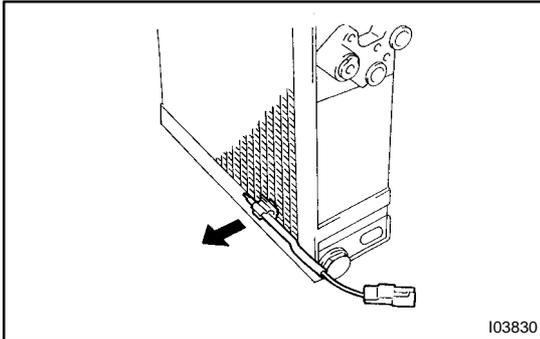


- (b) Remove the sensor.
(c) Pull out the sensor from evaporator.

5. REMOVE DUCT SENSOR

- (a) Remove the instrument panel
(See page [BO-83](#))

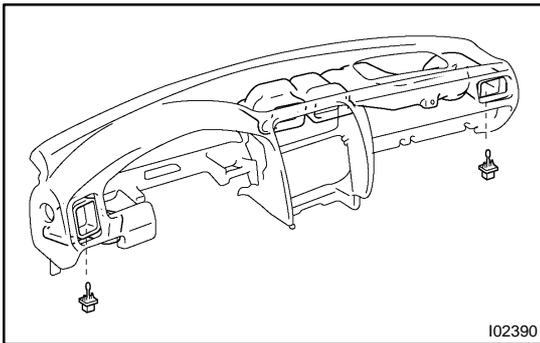

- (b) Remove the sensors.
- (1) Disconnect the connector.
 - (2) Remove driver side sensor from the No.3 heater to resistor duct.
 - (3) Remove passenger side sensor from the No.1 heater to resistor duct.

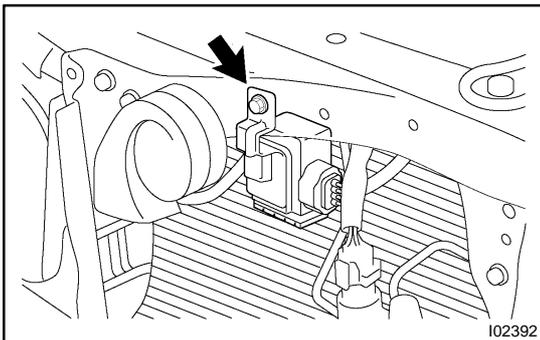**6. REMOVE SMOG VENTILATION SENSOR**

- (a) Disconnect the connector.
(b) Remove the bolt and sensor.