

## REMOVAL


### NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

### 1. REMOVE THESE PARTS

- (a) No.1 under cover
- (b) No.1 safety pad
- (c) End pad
- (d) No.2 under cover
- (e) Instrument panel box assembly
- (f) Upper console panel
- (g) Cluster finish panel
- (h) Lower console box
- (i) Console box
- (j) No.2 console box duct
- (k) No.1 console box duct
- (l) Lower console cover
- (m) Rear console cover
- (n) Glove compartment assembly
- (o) No.2 brace
- (p) No.2 register assembly
- (q) Electrical multivision assembly

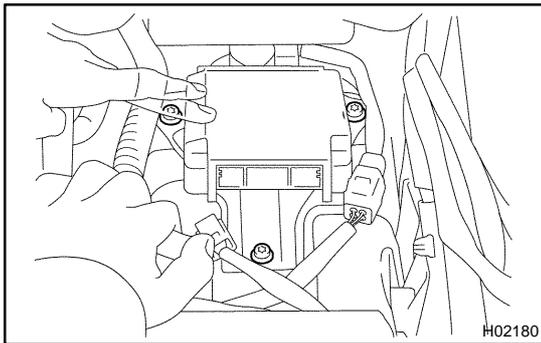

### 2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connectors.

### NOTICE:

Remove the connectors with the airbag sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**