

INSTALLATION

NOTICE:

Never use seat belt pretensioner from another vehicle. When replace parts, replace them with new parts.

1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the front seat belt parts by following the reverse order of removal and torque the following bolts.

- (1) Front seat outer belt retractor

Torque:

Upper bolt: 7.4 N·m (75 kgf·cm, 65 in.-lbf)

Lower bolt: 41 N·m (420 kgf·cm, 30 ft-lbf)

- (2) Seat belt shoulder anchor


Torque: 41 N·m (420 kgf·cm, 30 ft-lbf)

- (3) Seat belt floor anchor

Torque: 41 N·m (420 kgf·cm, 30 ft-lbf)

NOTICE:

- **Make sure that the front seat outer belt is installed with the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

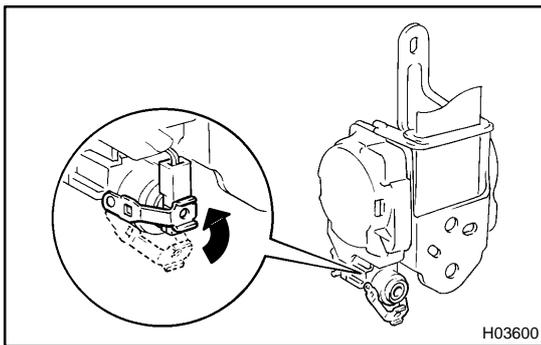

- (b) Connect the pretensioner connector as shown in the illustration.

- (c) w/ Seat Belt Warning:

Connect the retractor switch connector.

2. INSTALL THESE PARTS:

- (a) Center pillar garnish

- (b) Rear door scuff plate

- (c) Front door scuff plate