

## INSTALLATION


### 1. INSTALL NO.1 FAN SHROUD TO RADIATOR

Install the fan shroud with the 4 bolts.

**Torque: 5.0 N·m (50 kgf·cm, 44 ft·lbf)**

### 2. INSTALL RADIATOR ASSEMBLY


- (a) Install the 2 lower radiator supports to the radiator.
- (b) Place the radiator assembly on the body bracket.

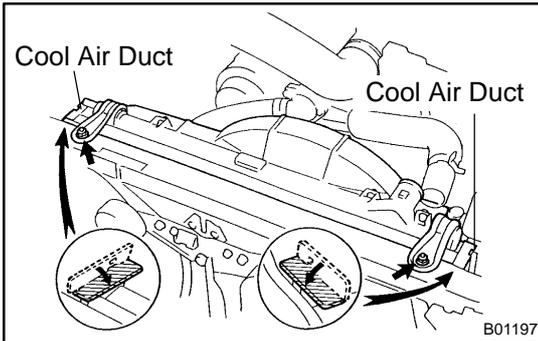

- (c) Install the radiator with the 2 upper radiator supports and 2 nuts.


**Torque: 13.5 N·m (135 kgf·cm, 10 ft·lbf)**

- (d) Install the upper sides of the RH and LH cool air ducts.
- (e) Connect the ECT switch connector for the A/C cooling fan.

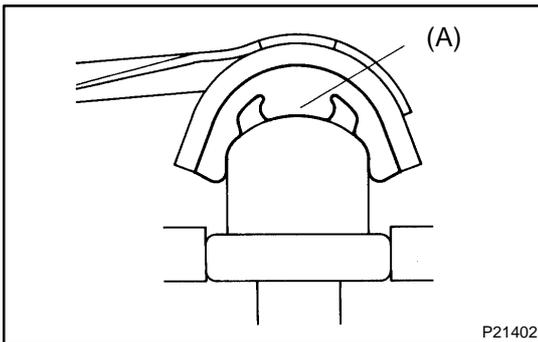

### HINT:

After installation, check that the rubber cushion (A) of the support is depressed.

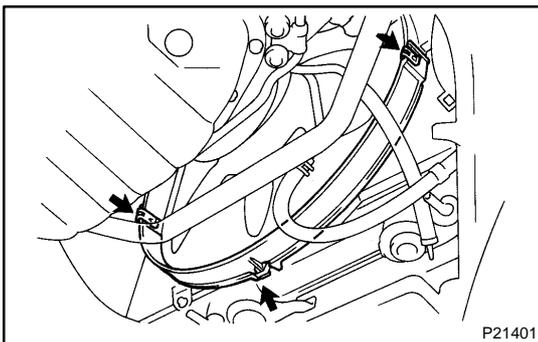

### 3. INSTALL NO.2 FAN SHROUD

- (a) Connect the claw of the No.2 fan shroud to the hook of the No.1 fan shroud.
- (b) Install the No.2 fan shroud with the 2 clips.

4. CONNECT UPPER RADIATOR HOSE TO RADIATOR
5. CONNECT LOWER RADIATOR HOSE TO RADIATOR
6. CONNECT A/T OIL COOLER HOSES TO RADIATOR
7. INSTALL RADIATOR RESERVOIR HOSE
8. FILL WITH ENGINE COOLANT
9. START ENGINE AND CHECK FOR LEAKS
10. RECHECK ENGINE COOLANT LEVEL
11. INSTALL AIR CLEANER INLET
12. INSTALL BATTERY CLAMP COVER
13. INSTALL ENGINE UNDER COVER
14. INSTALL OIL PAN PROTECTOR