


REMOVAL

1. REMOVE FUEL PUMP ASSEMBLY FROM FUEL TANK
(See page [SF-10](#))

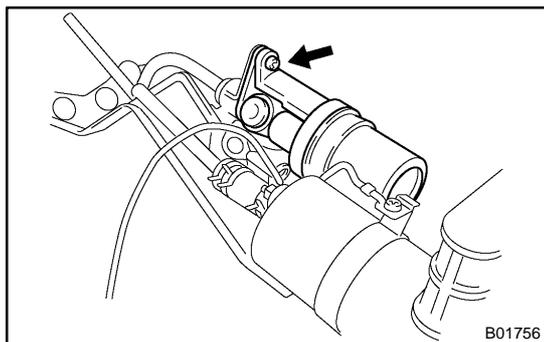

2. REMOVE FUEL PRESSURE REGULATOR
 - (a) Remove the screw, fuel filter and fuel pressure regulator.
 - (b) Remove the O-rings from fuel pressure regulator and fuel filter.