

PRE-CHECK

**1 Only wireless function (Remote control) will not operate.
(If a new transmitter or a transmitter of the same type that works properly with the vehicle is not available.)**

Make the vehicle in the initialized condition:
The initialized condition is the condition when the following conditions are satisfied.

- (1) Key plate has not been inserted in the ignition key cylinder.
- (2) All the doors are closed. (Door warning light is off.)
- (3) All the doors are locked.
- (4) Wireless door lock control switch (Buzzer switch) is ON.

Basic function check:

Under the standard operation, when repeating the operation of UNLOCK and LOCK switch 3 times or more alternately, check the UNLOCK-LOCK operation from 3rd time onward.

- Following procedures are standard operation.
- (1) Keep about 1 M away to the right direction from the outside handle of a driver's seat.
- (2) Face the transmitter toward the vehicle and press one of transmitter switches for about 1 sec.

<Reference>

- As of the security function, even the wireless function is normal, there may be the case that only UNLOCK operation will not work.
- As of the UNLOCK operation times adjustment function of body customize function, when using LEXUS hand-held tester to set "operation twice", only driver's seat is unlocked by unlock operation performed once.

No

Yes

Transmitter LED inspection:


Check when pressing UNLOCK switch and LOCK switch under standard operation, that the transmitter LED lights up one more once.


No


Yes


Normal
<Reference>

- Operative distance may differ according to an operator, the way of holding the transmitter or position.
- Because weak electric wave is used, when there is strong wave or noise in the used frequency, operation distance might be shortened.

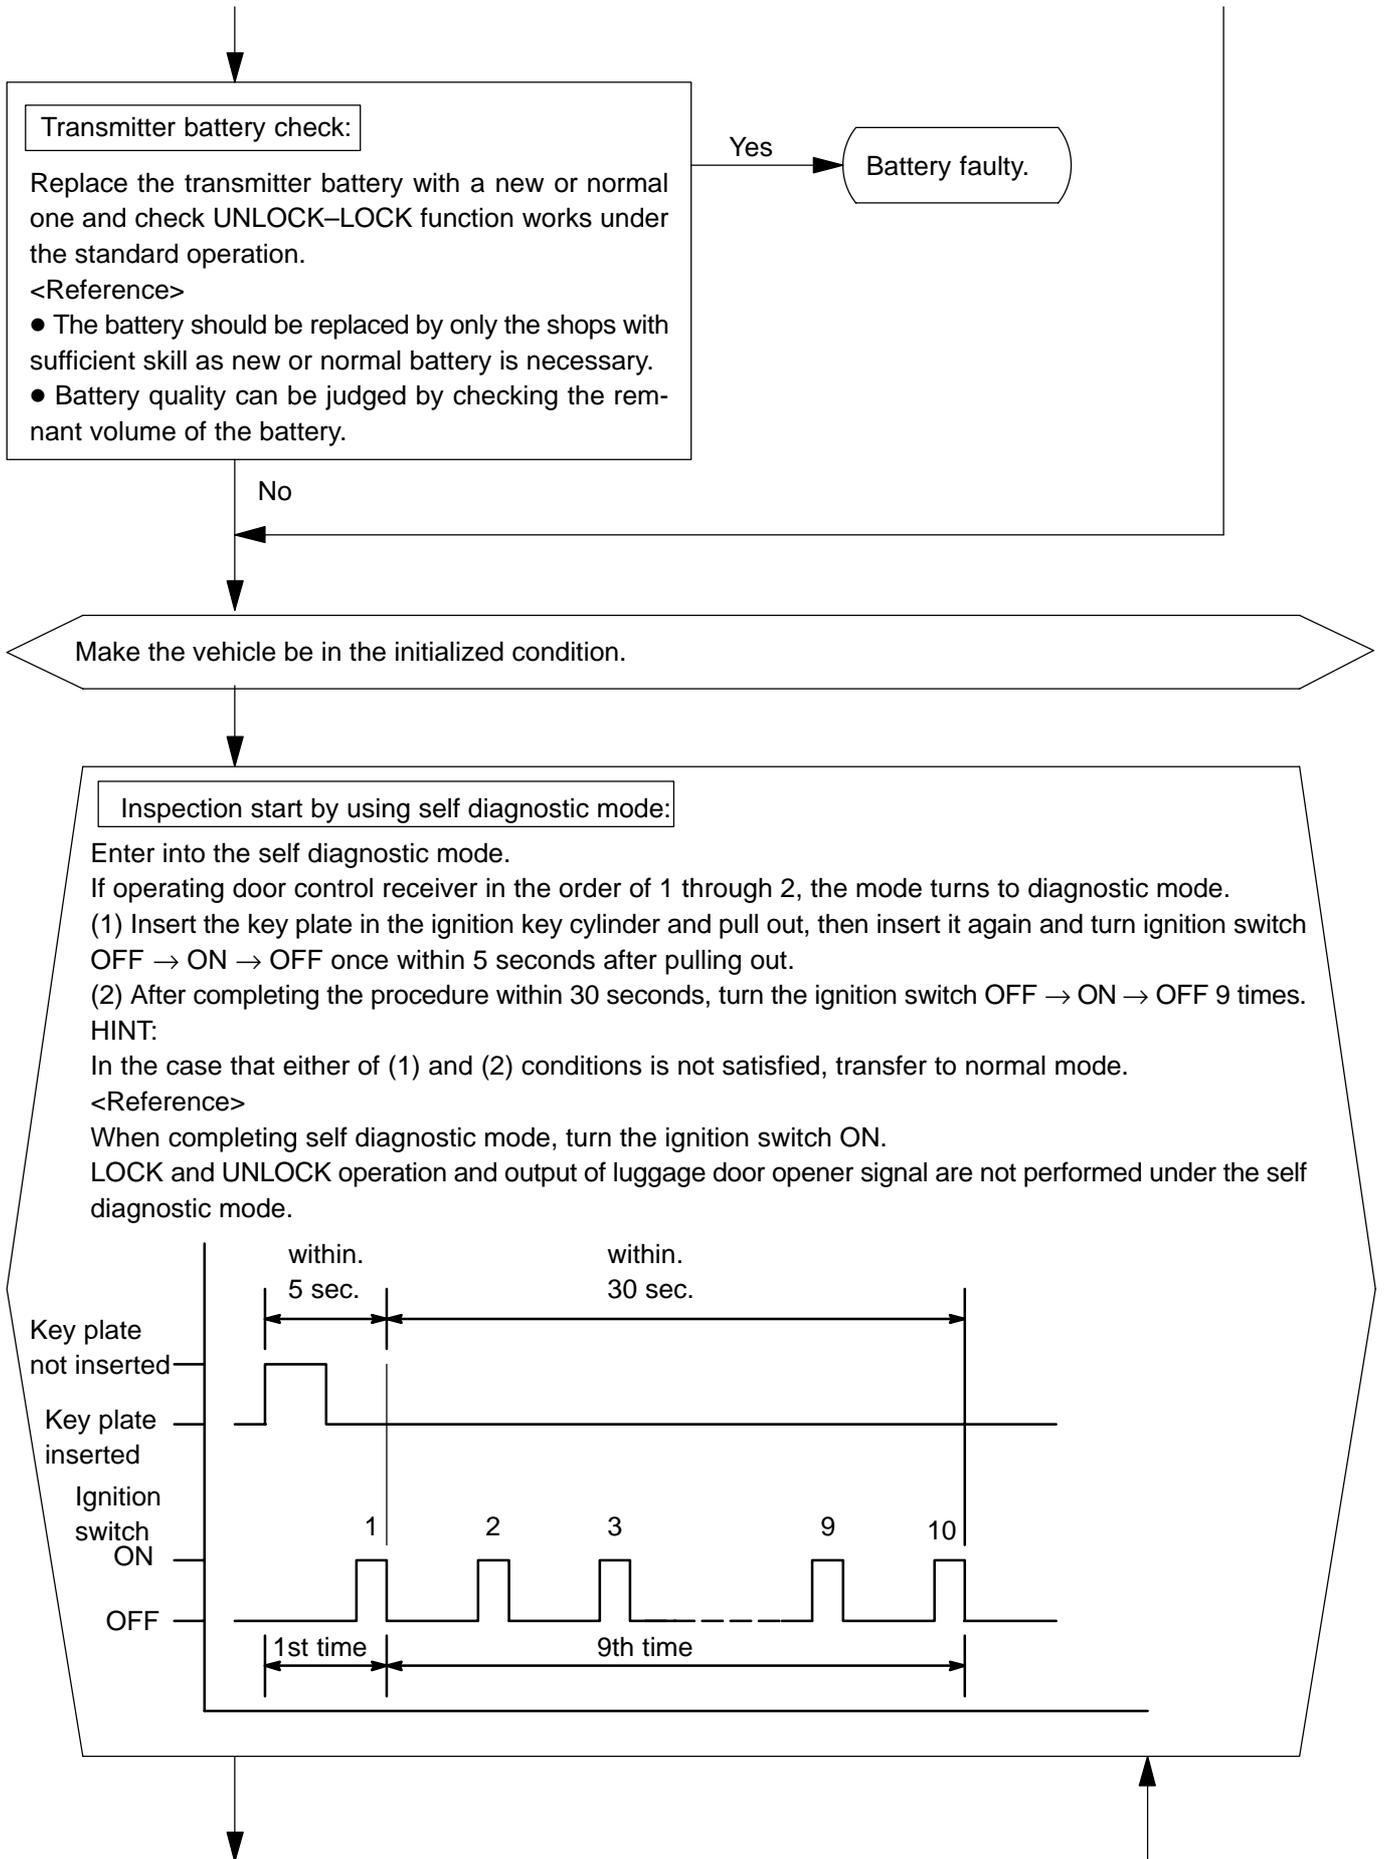

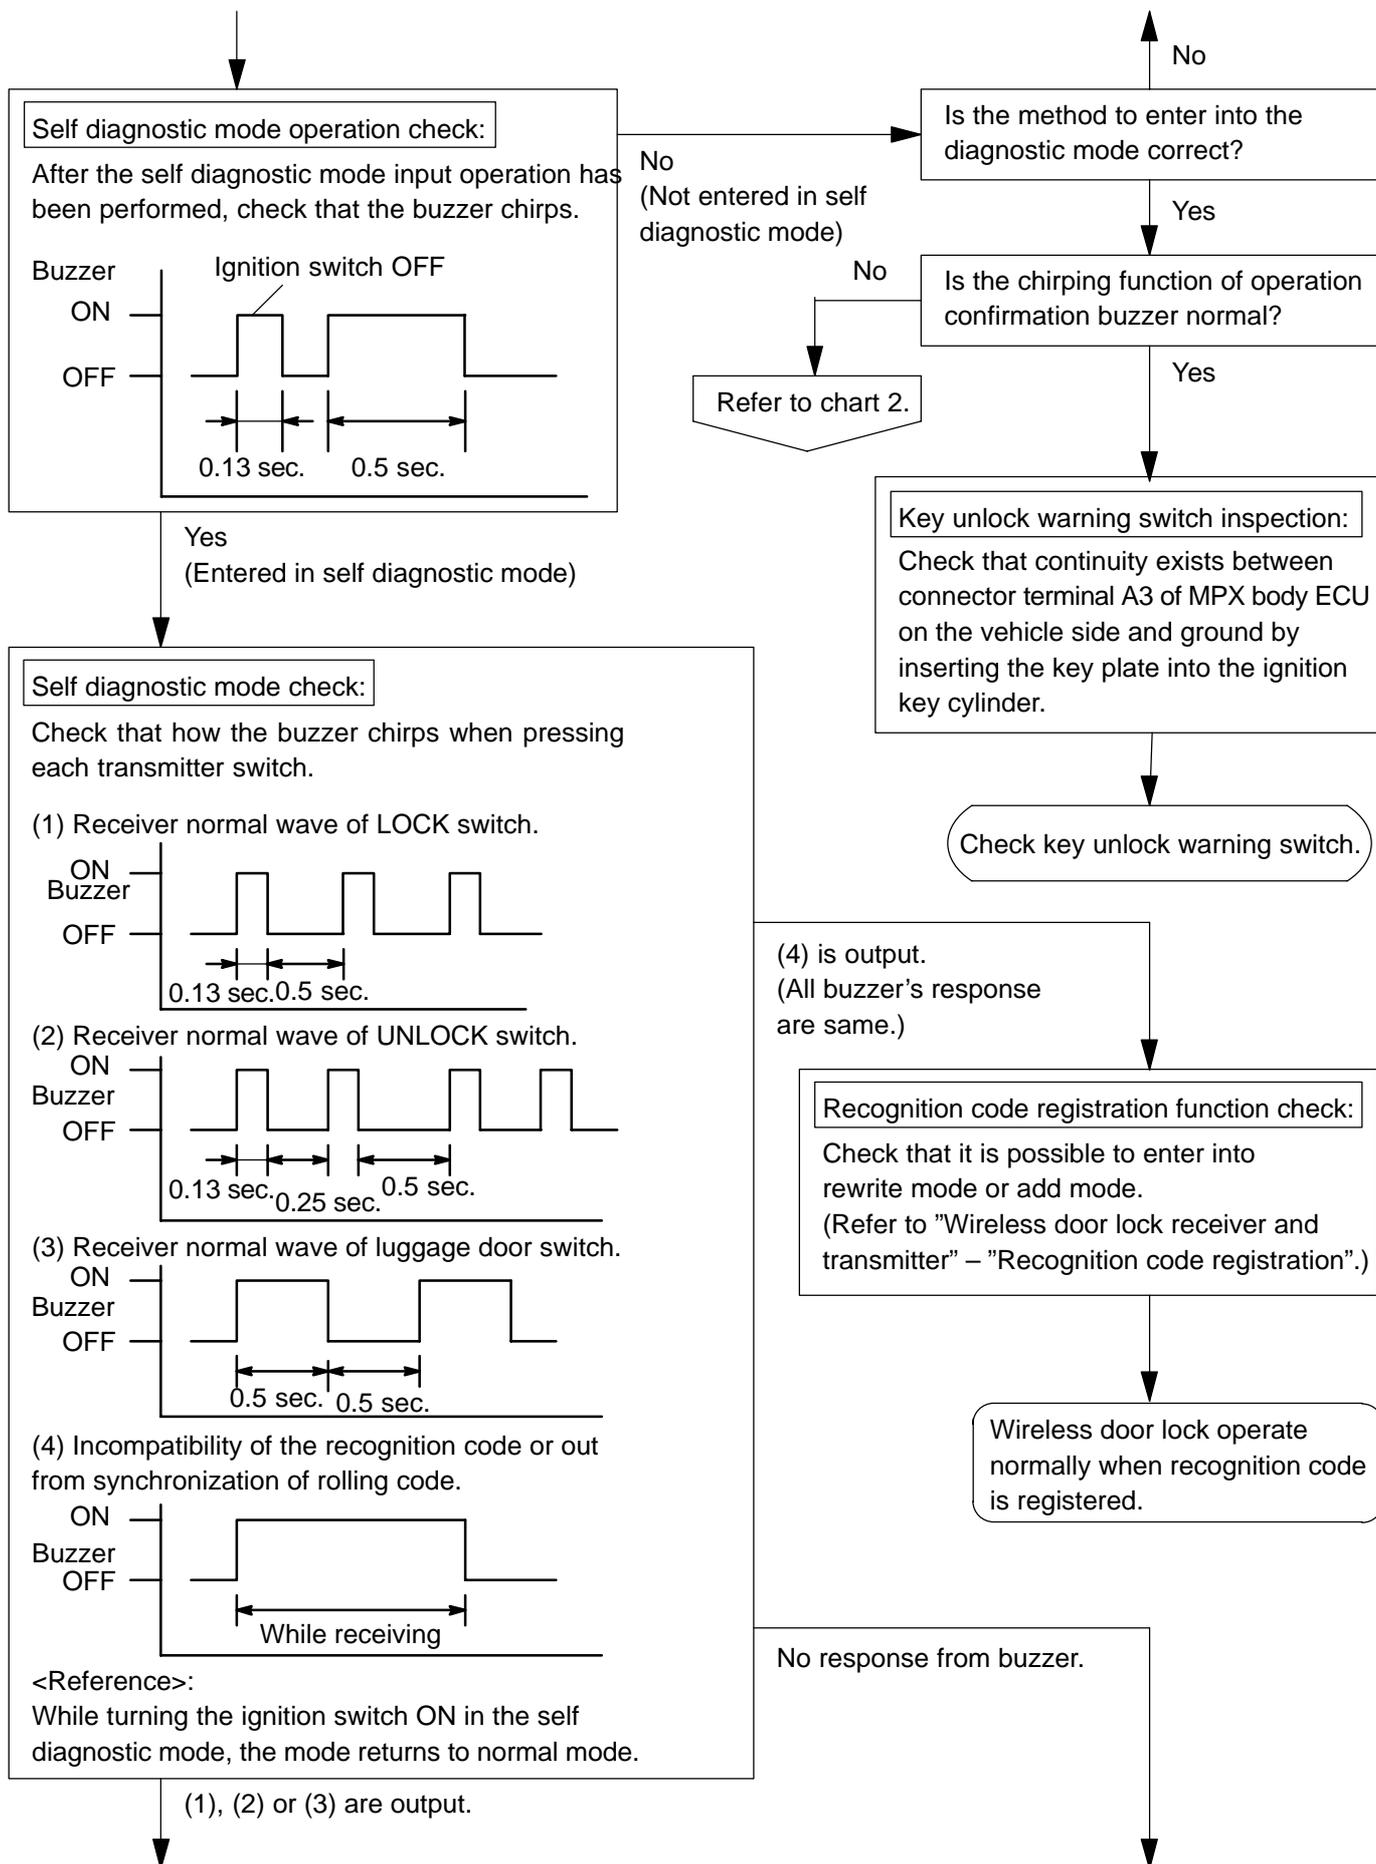

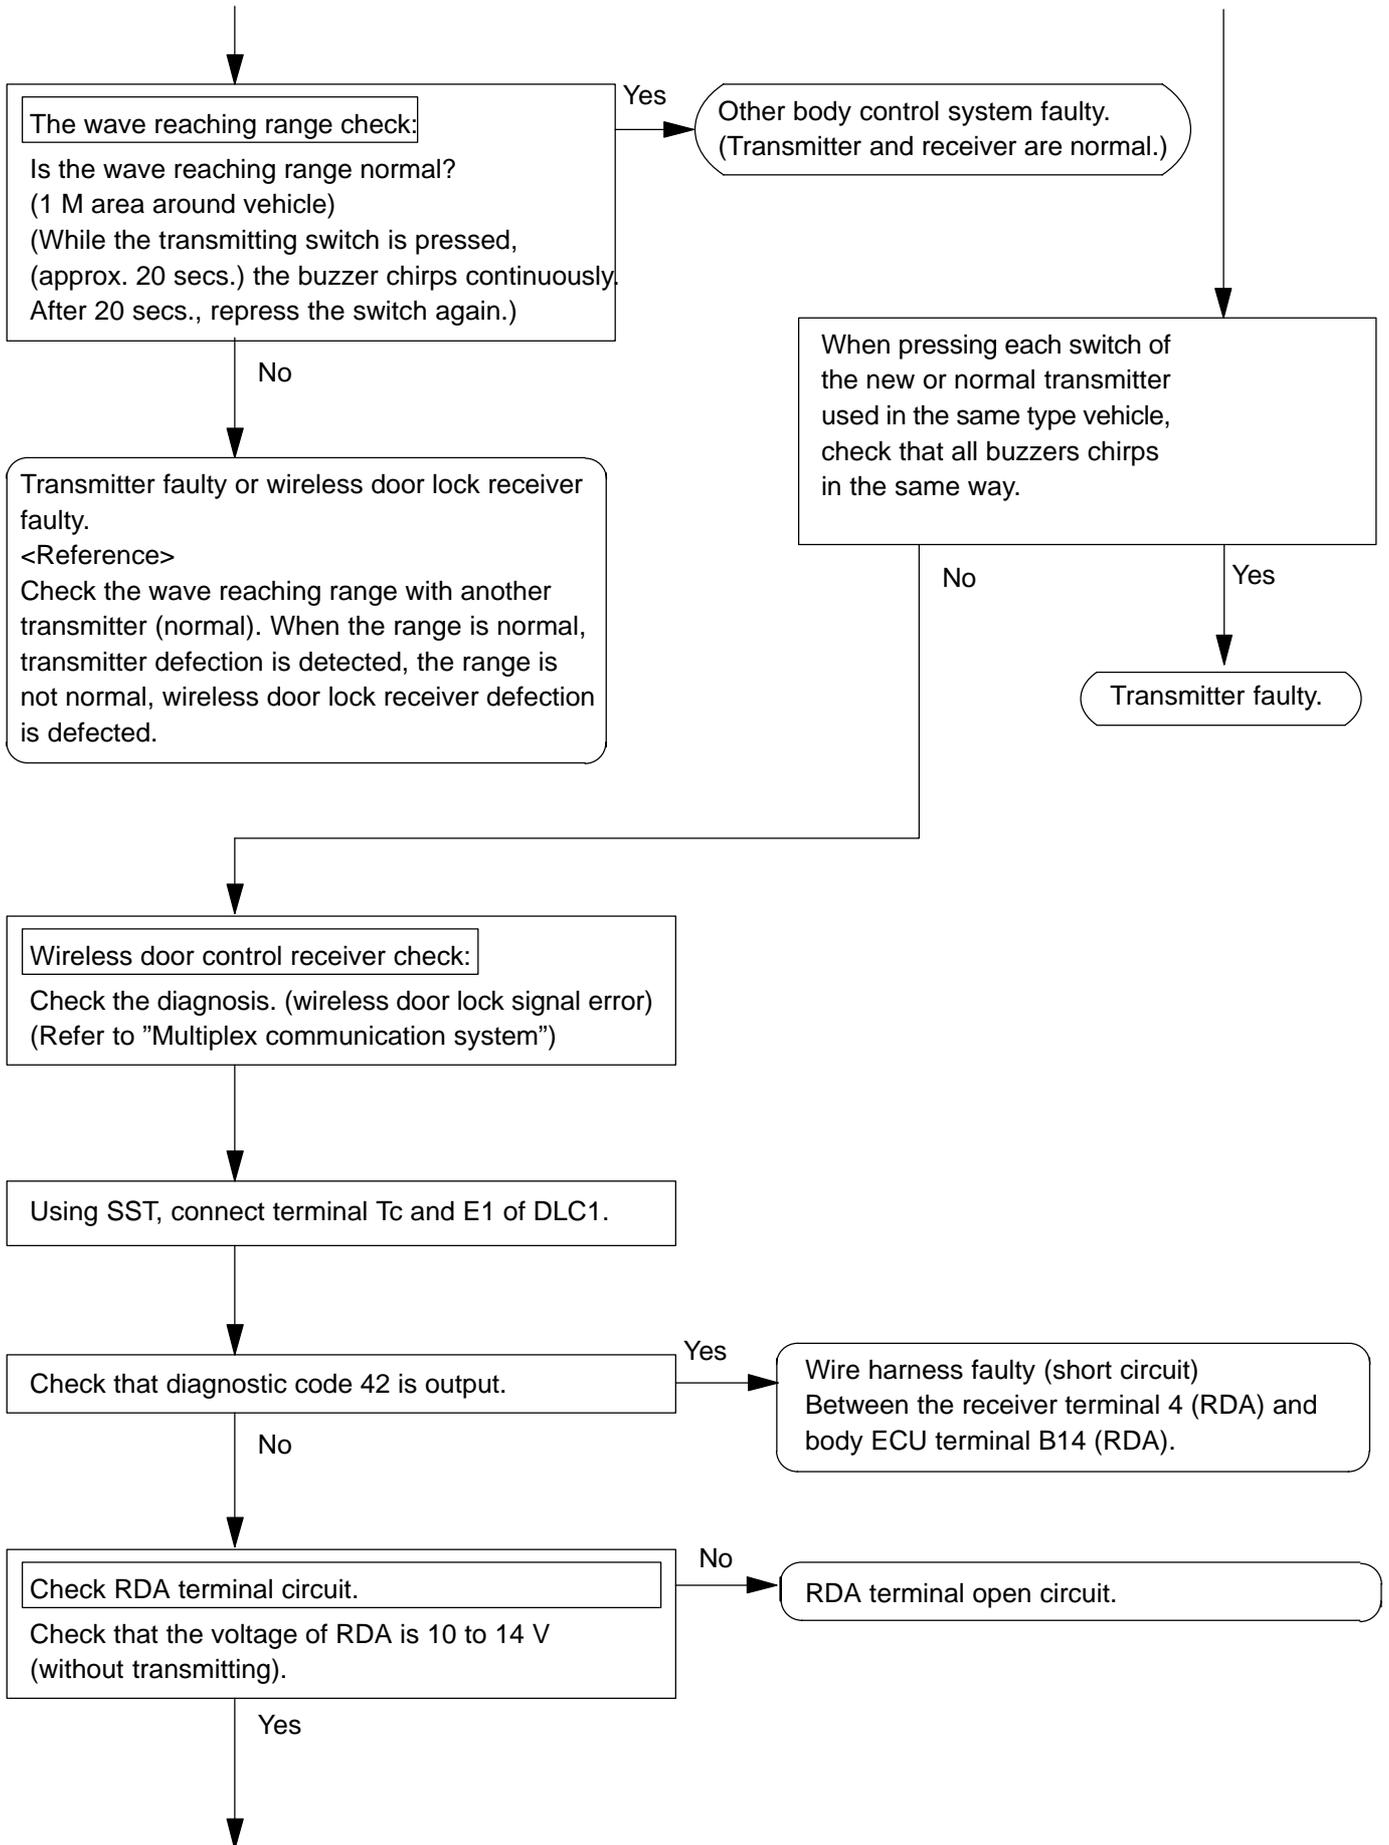

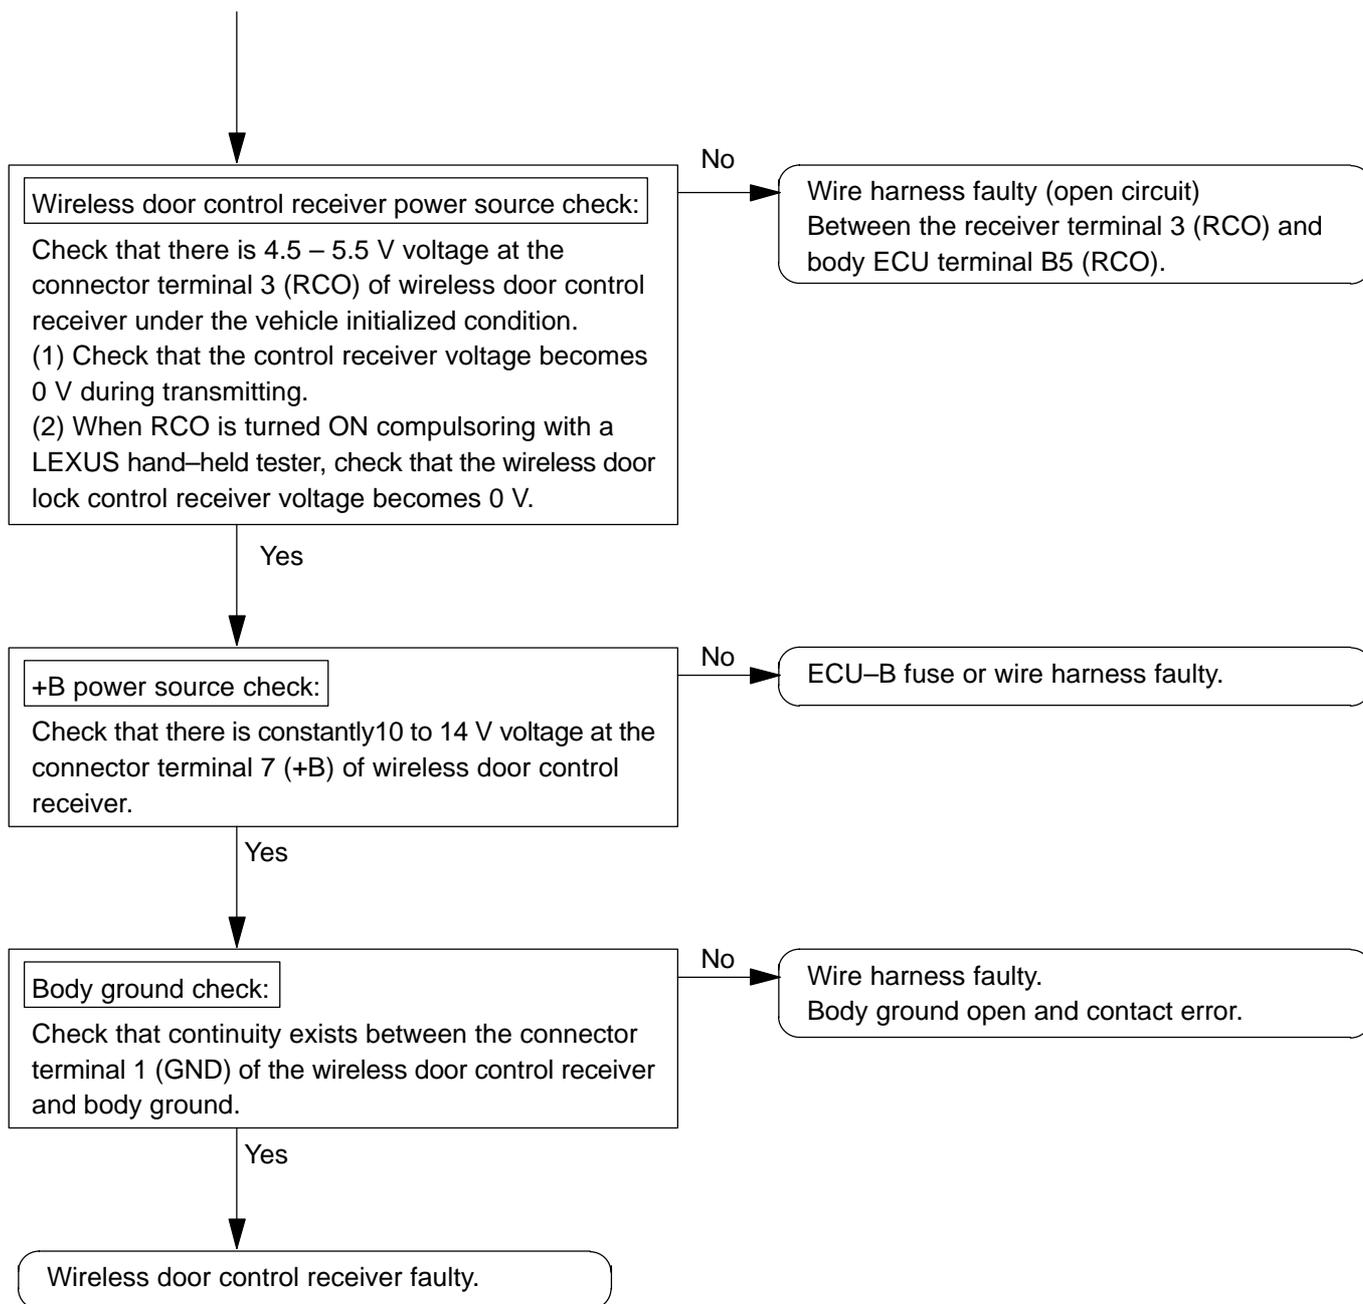

2 Wireless door lock buzzer does not chirp.

