


## DISASSEMBLY

### 1. REMOVE VALVE LIFTERS AND SHIMS

HINT:

Arrange the valve lifters and shims in correct order.

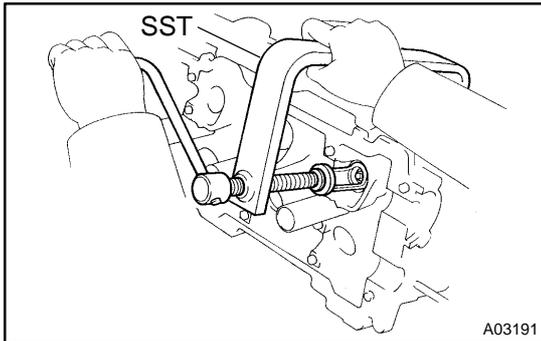

### 2. REMOVE VALVES


- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020

- (b) Remove the spring retainer.  
 (c) Remove the valve spring.  
 (d) Remove the valve.  
 (e) Remove the spring seat.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in correct order.

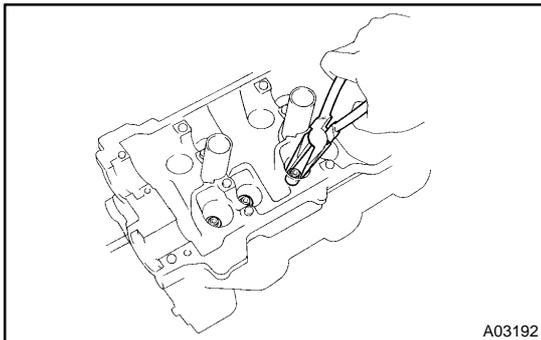

- (f) Using needle-nose pliers, remove the oil seal.