


REMOVAL

1. REMOVE THESE PARTS:

- (a) No. 2 under cover
- (b) Instrument panel box assembly
(See page [BO-83](#))

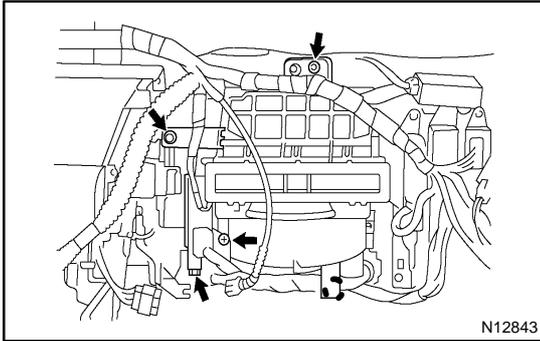

2. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the nut and disconnect the wire harness bracket.
- (c) Remove the screw and connect bracket.
- (d) Remove the 3 bolts, nut, and blower unit.