


RELAY INSPECTION

ACOPA-01

1. INSPECT HEATER MAIN RELAY (Making: HTR RLY) CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4	Continuity
	3 - 5	
Apply B + between terminals 3 and 5.	1 - 2	Continuity


If continuity is not as specified, replace the relay.

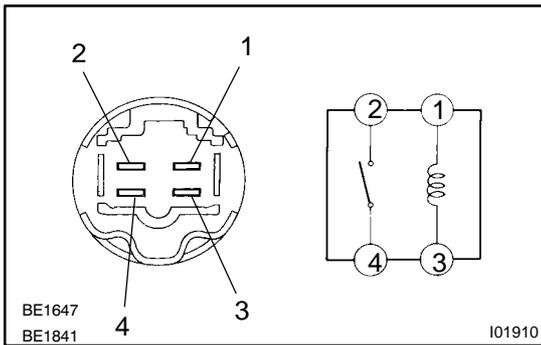

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: MG CLT RLY) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3	Continuity
Apply B + between terminals 1 and 3.	2 - 4	Continuity

If continuity is not as specified, replace the relay.

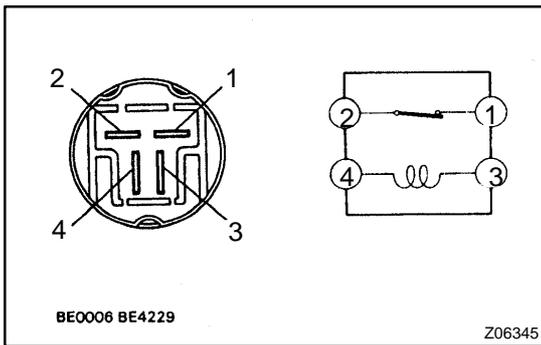

3. INSPECT COOLING FAN RELAY No.1 AND No.2 CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
	3 - 4	
Apply B + between terminals 3 and 4.	1 - 2	No Continuity

If continuity is not as specified, replace the relays.