


REMOVAL

1. REMOVE BOTH STABILIZER BAR LINKS

(a) Remove the 2 nuts and stabilizer bar link.

Torque: 65 N·m (660 kgf·cm, 48 ft·lbf)

(b) Employ the same manner described above to the other side.

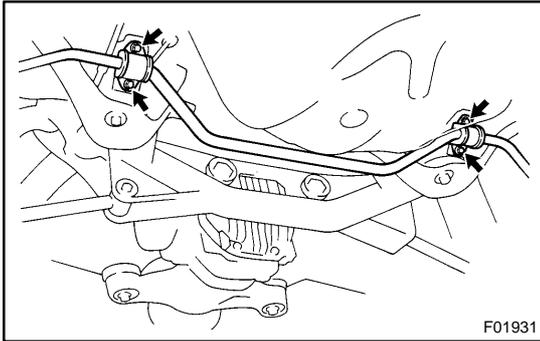

2. REMOVE BOTH STABILIZER BAR BRACKETS

Remove the 4 bolts and both stabilizer bar brackets.

Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)

3. REMOVE BOTH BUSHINGS