


## REMOVAL

### 1. REMOVE THESE PARTS :

- (a) Hood lock support set bolts
- (b) Center brace

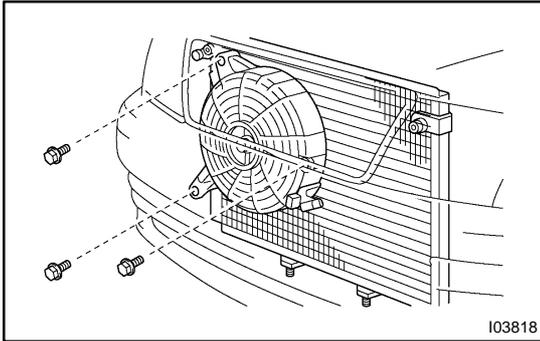

### 2. REMOVE CONDENSER FAN

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and fan.