


REMOVAL

1. REMOVE REAR AXLE HUB WITH UPPER SUSPENSION ARM (See page SA-54)

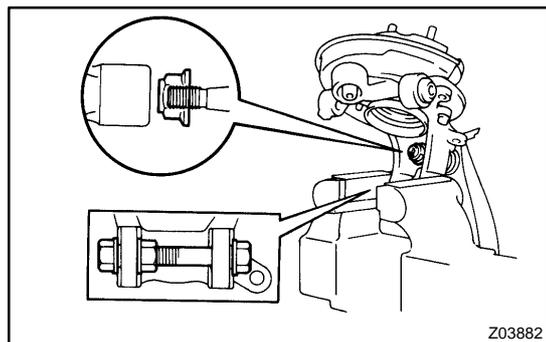

2. REMOVE UPPER SUSPENSION ARM
 - (a) Install a bolt and 2 nuts to the axle carrier and secure it in a vise.
 - (b) Loosen the nut to the position. Then tap the nut with a hammer and remove the upper suspension arm.
Torque: 108 N·m (1,100 kgf·cm, 80 ft·lbf)