


REMOVAL


1. REMOVE WIPER ARM AND BLADE ASSEMBLY
2. REMOVE COWL LOUVER WEATHERSTRIP
 - (a) Remove the cowl louver weatherstrip from the hood.

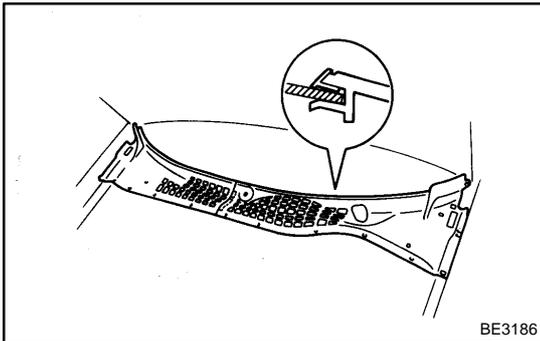

- (b) Remove the cowl louver.

HINT:

Raise up the front side of the cowl louver and remove the cowl louver.

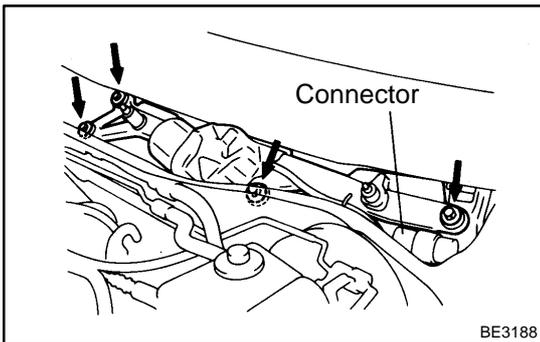

3. REMOVE WIPER MOTOR AND LINK ASSEMBLY
 - (a) Remove the 4 set bolts.
 - (b) Disconnect the connector.
 - (c) Raise the front side of the wiper motor and link assembly up and remove the wiper motor and link assembly.
 - (d) Remove the wiper motor cover.