


## REMOVAL

### 1. REMOVE AIR CLEANER ASSEMBLY AND AIR CLEANER INLET

- (a) Remove the battery clamp cover, bolt and air cleaner inlet.
- (b) Disconnect the MAF meter connector.
- (c) Remove the 3 bolts and loosen the hose clamp, pull out the air cleaner assembly with the cleaner hose.

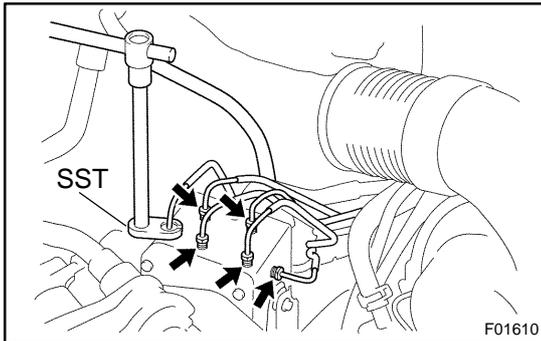


### 2. DISCONNECT BRAKE LINE

Using SST, disconnect the 6 brake lines from the brake actuator.

SST 09023-00100

**Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)**

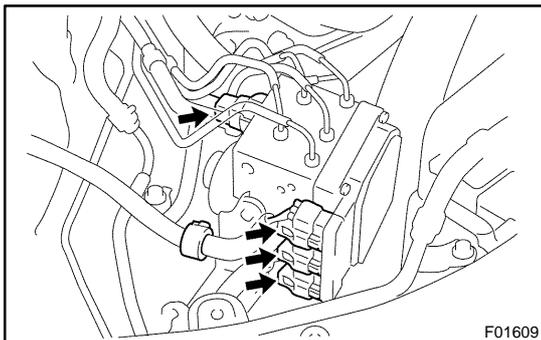

### 3. REMOVE BRAKE ACTUATOR ASSEMBLY

- (a) Disconnect the 2 connectors from the brake actuator.
- (b) Remove the bolt, 2 nuts and brake actuator assembly.  
**Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)**

### 4. REMOVE BRAKE ACTUATOR

- (a) Remove the 2 nuts and actuator from the actuator bracket.  
**Torque: 5.4 N·m (55 kgf-cm, 48 in.-lbf)**
- (b) Remove the 2 cushion bolts and 3 cushions from the brake actuator.