


AIR REFINER FILTER REMOVAL

ACOPP-01

1. OPEN INSTRUMENT PANEL BOX ASSEMBLY

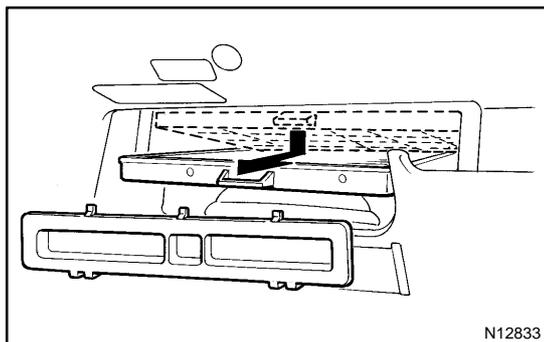

2. REMOVE AIR REFINER FILTER

- (a) Remove the glove box cover.
- (b) Remove the filter cover.
- (c) Pull out the filter assembly.
- (d) Remove the filter from filter case.

CAUTION:

Confirm the blower switch is off, when removing the filter.