


REMOVAL

HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. **DRAIN ENGINE COOLANT**
2. **REMOVE BATTERY CLAMP COVER AND AIR CLEANER INLET**

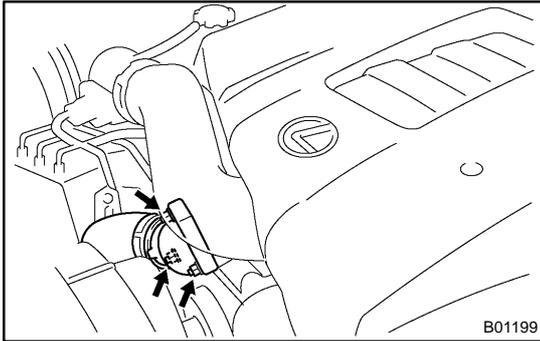

3. **DISCONNECT WATER INLET FROM WATER INLET HOUSING**

Remove the 3 nuts holding the water inlet to the inlet housing, and disconnect the water inlet together with the radiator hose from the water inlet housing.

4. **REMOVE THERMOSTAT FROM WATER INLET HOUSING**

- (a) Remove the thermostat.
- (b) Remove the gasket from the thermostat.