

SECTION **SE**
SEAT

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CONTENTS

PRECAUTION	3	Work Flow	10
PRECAUTIONS	3	Inspection Procedure	12
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	Diagnostic Worksheet	14
Precaution Necessary for Steering Wheel Rotation after Battery Disconnect	3	REMOVAL AND INSTALLATION	16
Service Notice	4	FRONT SEAT (2WD)	16
Precaution for Work	4	Exploded View	16
PREPARATION	5	Removal and Installation	19
PREPARATION	5	SEATBACK	19
Commercial Service Tool	5	SEATBACK : Disassembly and Assembly	19
CLIP LIST	6	SEAT CUSHION	20
Clip List	6	SEAT CUSHION : Disassembly and Assembly	21
SYSTEM DESCRIPTION	7	FRONT SEAT (4WD)	24
COMPONENT PARTS	7	Exploded View	24
HEATED SEAT SYSTEM	7	Removal and Installation	27
HEATED SEAT SYSTEM : Component Parts Location	7	SEATBACK	27
HEATED SEAT SYSTEM : Component Description	7	SEATBACK : Disassembly and Assembly	27
SYSTEM	8	SEAT CUSHION	28
HEATED SEAT SYSTEM	8	SEAT CUSHION : Disassembly and Assembly	29
HEATED SEAT SYSTEM : System Description	8	REAR SEAT (2WD)	32
WIRING DIAGRAM	9	Exploded View	32
HEATED SEAT SYSTEM	9	SEAT CUSHION	33
Wiring Diagram	9	SEAT CUSHION : Removal and Installation	33
SYMPTOM DIAGNOSIS	10	SEAT CUSHION : Disassembly and Assembly	33
SQUEAK AND RATTLE TROUBLE DIAGNOSES	10	SEATBACK	33
		SEATBACK : Removal and Installation	33
		SEATBACK : Disassembly and Assembly	35
		SEATBACK HINGE	38
		SEATBACK HINGE : Removal and Installation	38
		SEATBACK STRIKER	39
		SEATBACK STRIKER : Removal and Installation	39
		REAR SEAT (4WD)	41

Exploded View	41	SEATBACK HINGE	48
		SEATBACK HINGE : Removal and Installation	48
SEAT CUSHION	42	SEATBACK STRIKER	49
SEAT CUSHION : Removal and Installation	42	SEATBACK STRIKER : Removal and Installation...	49
SEAT CUSHION : Disassembly and Assembly	42		
SEATBACK	43	HEATED SEAT SWITCH	51
SEATBACK : Removal and Installation	43	Exploded View	51
SEATBACK : Disassembly and Assembly	44	Removal and Installation	51

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006441873

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

The vehicle may be equipped with a passenger air bag deactivation switch. Because no rear seat exists where a rear-facing child restraint can be placed, the switch is designed to turn off the passenger air bag so that a rear-facing child restraint can be used in the front passenger seat. The switch is located in the center of the instrument panel, near the ashtray. When the switch is turned to the ON position, the passenger air bag is enabled and could inflate for certain types of collision. When the switch is turned to the OFF position, the passenger air bag is disabled and will not inflate. A passenger air bag OFF indicator on the instrument panel lights up when the passenger air bag is switched OFF. The driver air bag always remains enabled and is not affected by the passenger air bag deactivation switch.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.
- The vehicle may be equipped with a passenger air bag deactivation switch which can be operated by the customer. When the passenger air bag is switched OFF, the passenger air bag is disabled and will not inflate. When the passenger air bag is switched ON, the passenger air bag is enabled and could inflate for certain types of collision. After SRS maintenance or repair, make sure the passenger air bag deactivation switch is in the same position (ON or OFF) as when the vehicle arrived for service.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000006441874

NOTE:

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

PRECAUTIONS

< PRECAUTION >

OPERATION PROCEDURE

1. Connect both battery cables.
NOTE:
Supply power using jumper cables if battery is discharged.
2. Turn the ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

Service Notice

INFOID:000000006365647

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

Precaution for Work

INFOID:000000006365648

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
 - Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.
Then rub with a soft and dry cloth.
 - Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Never use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION




< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tool

INFOID:000000006365649

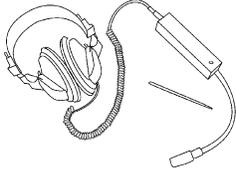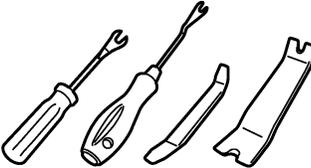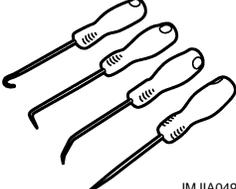Tool name	Description
<p>Engine ear</p>  <p>SIAA0995E</p>	<p>Locates the noise</p>
<p>Remover tool</p>  <p>JMKIA3050ZZ</p>	<p>Removes the clips, pawls and metal clips</p>
<p>Hook and pick tool</p>  <p>JMJIA0490ZZ</p>	<p>Removes the snap pins</p>

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST

< PREPARATION >

CLIP LIST

Clip List

INFOID:00000006365650

Shapes	Removal & Installation	Shapes	Removal & Installation
	<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p>		<p>Removal:</p>
	<p>Removal: Remove with a clip remover.</p>		<p>Removal:</p>
	<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Installation:</p>		<p>Removal: Holder portion of clip must be spread out to remove rod.</p>
	<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p> <p>Clip Finisher</p>		<p>Removal:</p> <ol style="list-style-type: none"> Screw out with a Phillips screwdriver. Remove female portion with flat-bladed screwdriver.
	<p>Removal:</p>		<p>Removal:</p> <p>Rotate 45° to remove.</p> <p>Installation:</p>
	<p>Removal:</p>		<p>Removal:</p>

JMJIA3734GB

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS HEATED SEAT SYSTEM

HEATED SEAT SYSTEM : Component Parts Location

INFOID:000000006488064

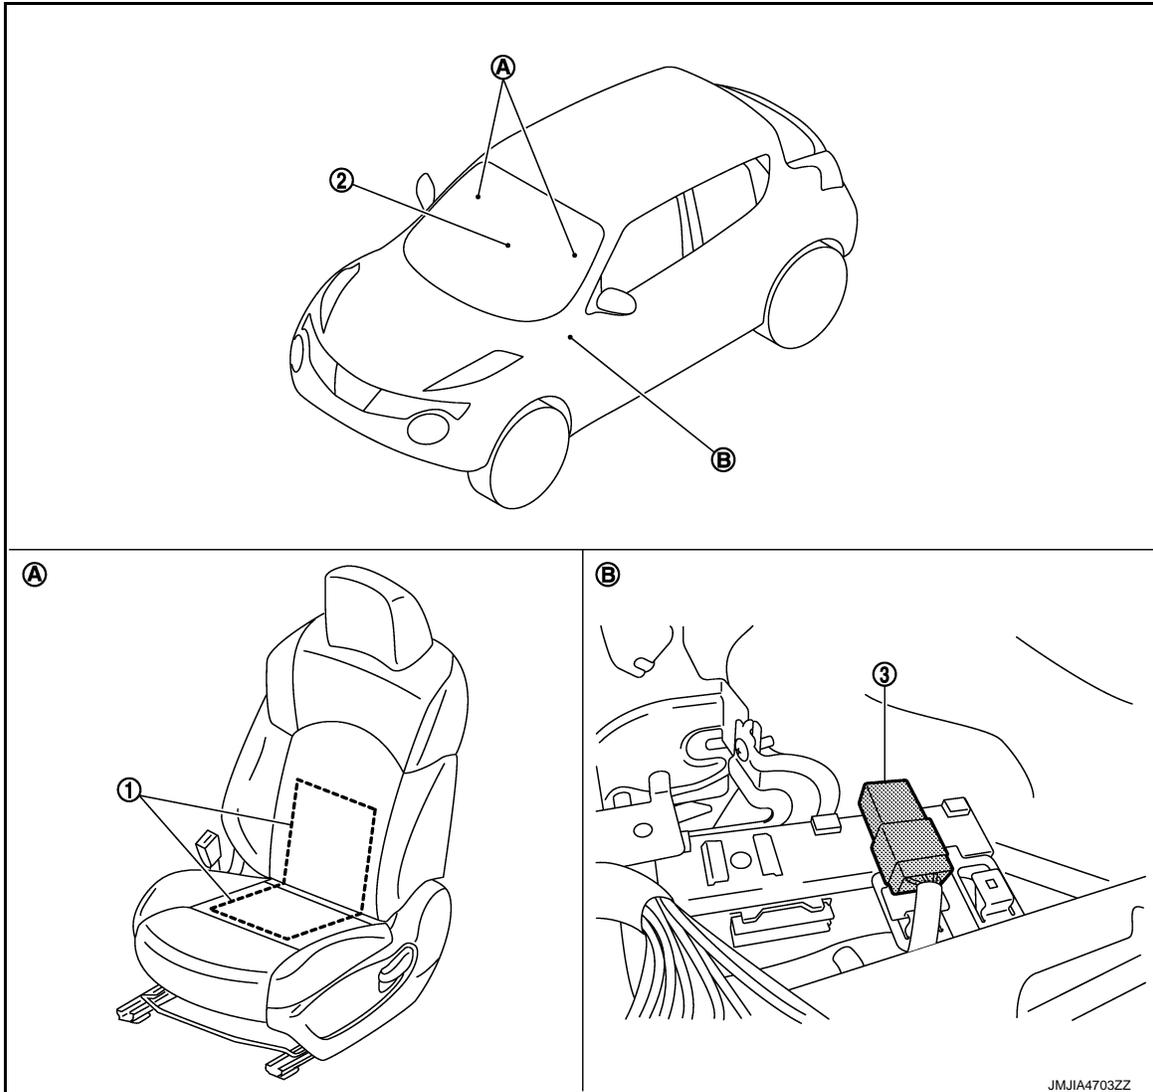

1. Seat heater

2. Heated seat switch

3. Heated seat relay

A. Front seat

B. Front LH of passenger room

HEATED SEAT SYSTEM : Component Description

INFOID:000000006488065

Item	Function
Heated seat switch	Supplies power supply to heated seat and operates switching of HI/LO of heated seat and ON/OFF of the system
Seat heater	Built-in in seat, the heater operates with the power supplied by heater seat switch
Heated seat relay	Supplies power to the heated seat switch in accordance with the key switch position that is ON or START

SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

HEATED SEAT SYSTEM

HEATED SEAT SYSTEM : System Description

INFOID:000000006488066

Heated seat is a system that operates when ignition switch is in ON position.

HEATER OPERATION

- When the heated seat switch is ON, seat cushion heater and seat back heater operate.
- Temperature of seat can be adjusted by operating on heated seat switch.

HEATED SEAT SYSTEM

< WIRING DIAGRAM >


WIRING DIAGRAM

HEATED SEAT SYSTEM

Wiring Diagram

INFOID:000000006488067

For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12. "Connector Information/Explanation of Option Abbreviation"](#).

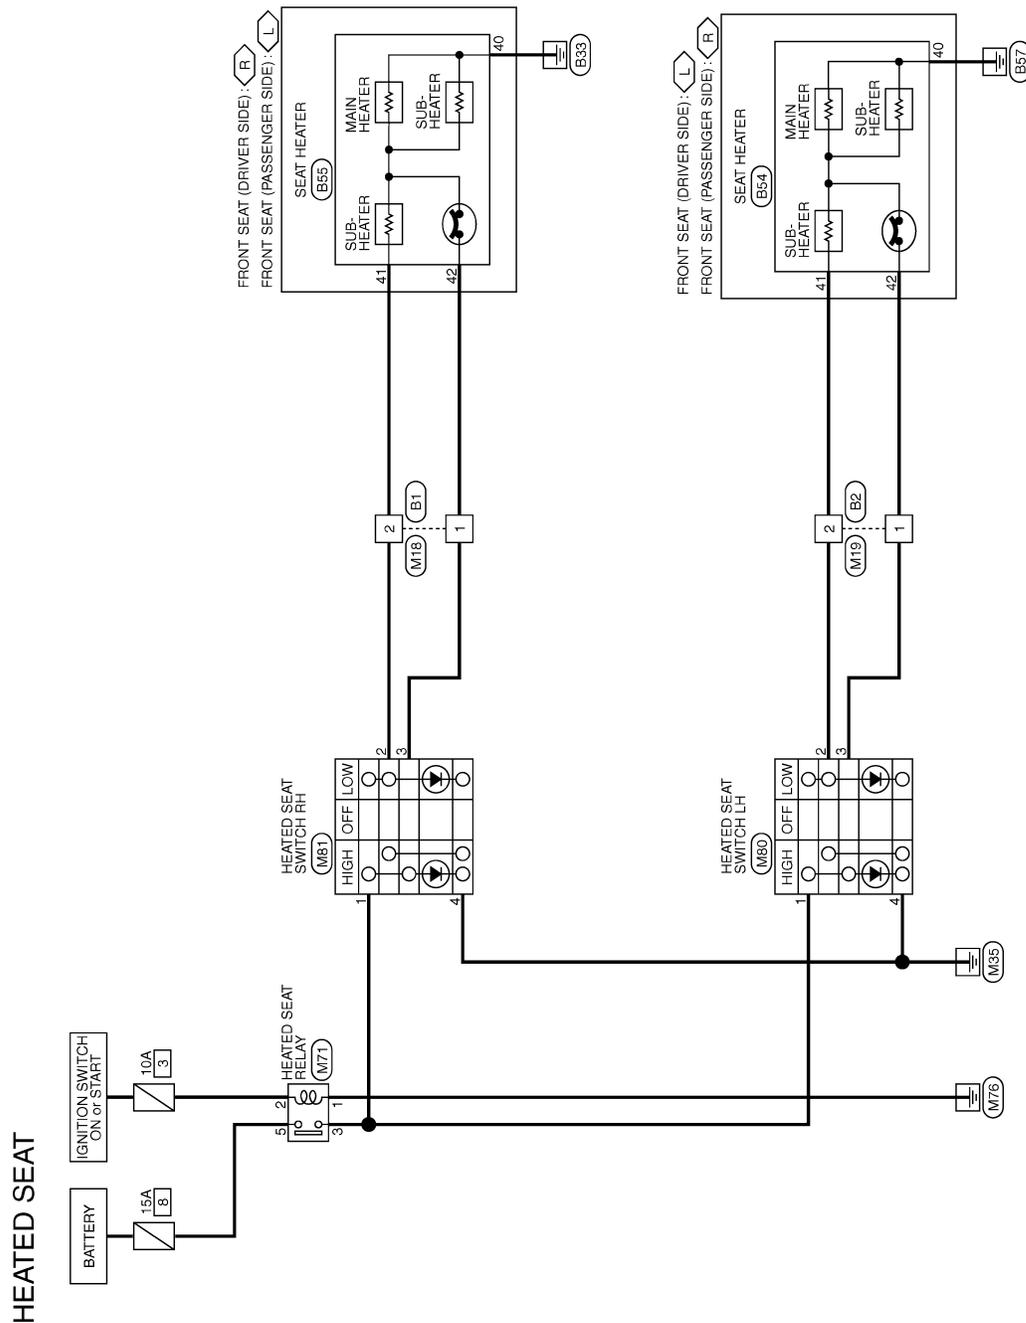

2010/07/07

JCJWA1278GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000006365651

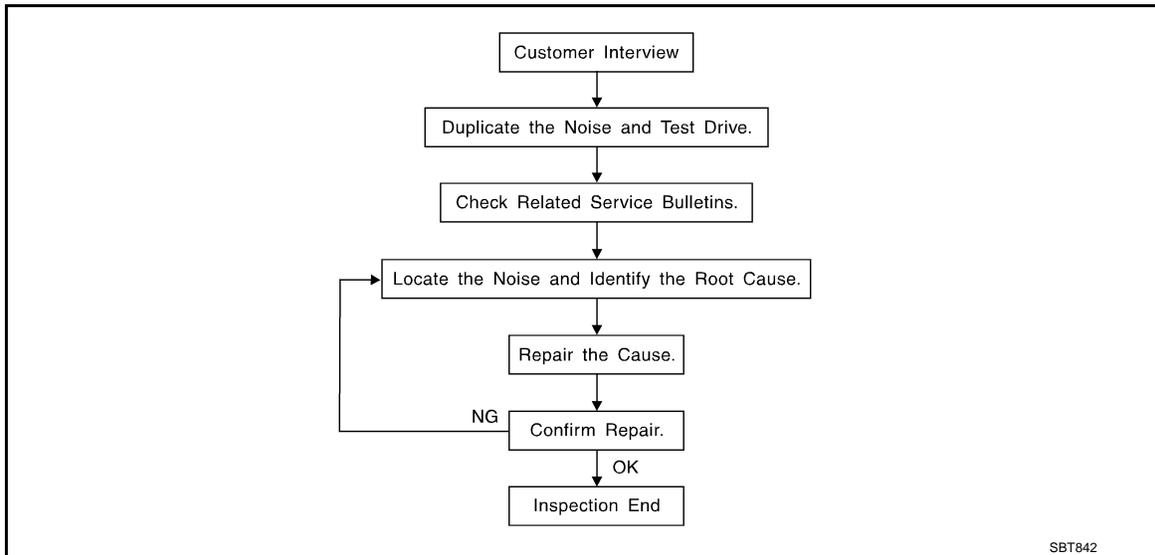

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of the customer's comments; refer to [SE-14, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by a test drive with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that a technician may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when the repair is reconfirmed.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on A/T model).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Engine Ear or mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - Removing the components in the area that is are suspected to be the cause of the noise.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - Tapping or pushing/pulling the component that is are suspected to be the cause of the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - Feeling for a vibration by hand by touching the component(s) that is are suspected to be the cause of the noise.
 - Placing a piece of paper between components that is are suspected to be the cause of the noise.
 - Looking for loose components and contact marks.
Refer to [SE-12. "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - Separate components by repositioning or loosening and retightening the component, if possible.
 - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. These insulators are available through the authorized Nissan Parts Department.

CAUTION:

Never use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

- URETHANE PADS
Insulates connectors, harness, etc.
- INSULATOR (Foam blocks)
Insulates components from contact. Can be used to fill space behind a panel.
- INSULATOR (Light foam block)
- FELT CLOTHTAPE
Used to insulate where movement does not occur. Ideal for instrument panel applications.
The following materials, not available through NISSAN Parts Department, can also be used to repair squeaks and rattles.
- UHMW(TEFLON) TAPE
Insulates where slight movement is present. Ideal for instrument panel applications.
- SILICONE GREASE
Used in place of UHMW tape that is be visible or does not fit.
Note: Will only last a few months.
- SILICONE SPRAY
Used when grease cannot be applied.
- DUCT TAPE
Used to eliminate movement.

CONFIRM THE REPAIR

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000006365652

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. Cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Never use silicone spray to isolate a squeak or rattle. If the area is saturated with silicone, the recheck of repair becomes impossible.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the following:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. The areas can usually be insulated with felt cloth tape or insulator foam blocks to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the customer.

In addition look for the following:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. Trunk lid torsion bars knocking together
4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

A

SEATS

When isolating seat noise it is important to note the position the seat is in and the load placed on the seat when the noise occurs. These conditions should be duplicated when verifying and isolating the cause of the noise.

B

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. Rear seatback lock and bracket

C

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

D

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

E

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

F

G

H

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

I

SE

K

L

M

N

O

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000006365653







SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Nissan Customer:

We are concerned about your satisfaction with your Nissan vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Nissan right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

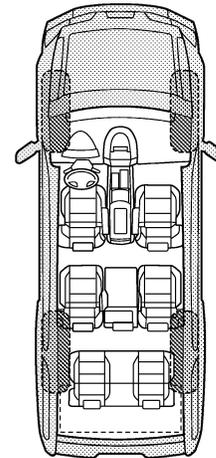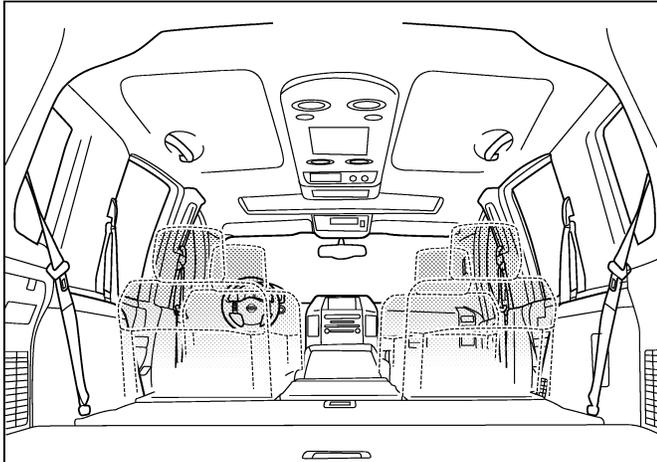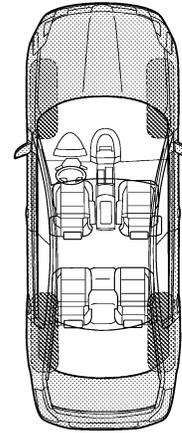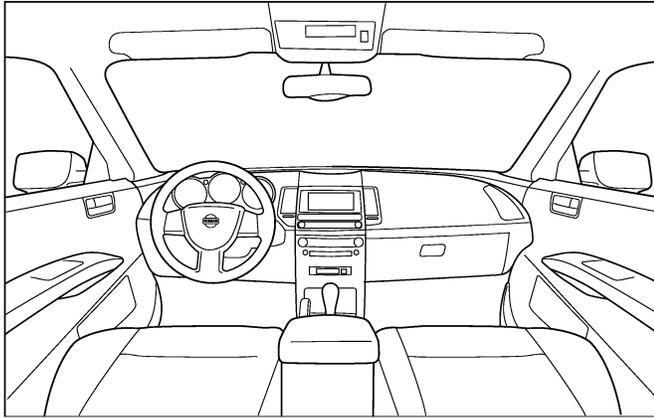

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8740E

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> anytime | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> when it is raining or wet |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions |
| <input type="checkbox"/> only when it is hot outside | <input type="checkbox"/> other: |

III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about ____ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: _____
- after driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

This form must be attached to Work Order

PIIB8742E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


FRONT SEAT (2WD)

Exploded View

INFOID:000000006365635

DRIVER SEAT

LHD models

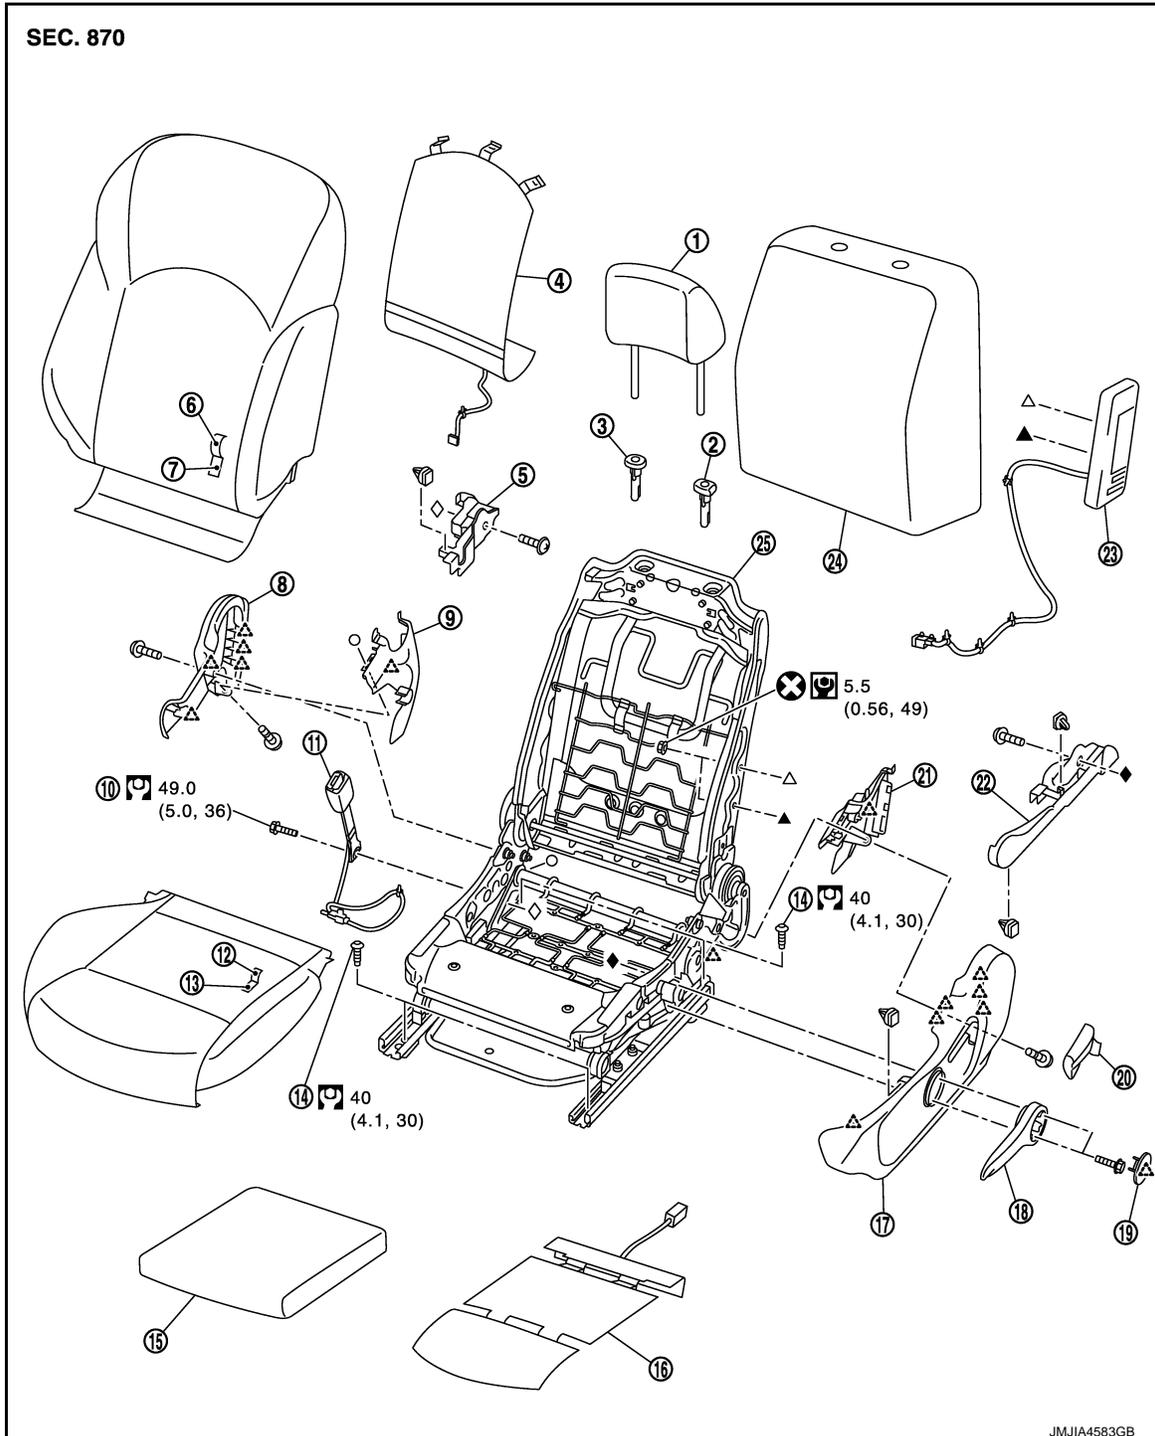

- | | | |
|-------------------------|--------------------------------|---------------------------------|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback heater unit | 5. Inner lower cover | 6. Seatback trim |
| 7. Seatback pad | 8. Seat cushion inner finisher | 9. Reclining device inner cover |

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

- | | | |
|------------------------------------|---------------------------------|----------------------------------|
| 10. Anchor bolt | 11. Seat belt buckle | 12. Seat cushion trim |
| 13. Seat cushion pad | 14. TORX bolt | 15. Seat cushion silencer |
| 16. Seat cushion heater unit | 17. Seat cushion outer finisher | 18. Lifter lever knob |
| 19. Lifter lever knob cap | 20. Reclining lever knob | 21. Reclining device outer cover |
| 22. Outer lower cover | 23. Side air bag module | 24. Seatback silencer |
| 25. Seat frame & adjuster assembly | | |

 : Pawl

 : Do not reuse

 : N·m (kg-m, in-lb)

 : N·m (kg-m, ft-lb)

PASSENGER SEAT


A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

LHD models

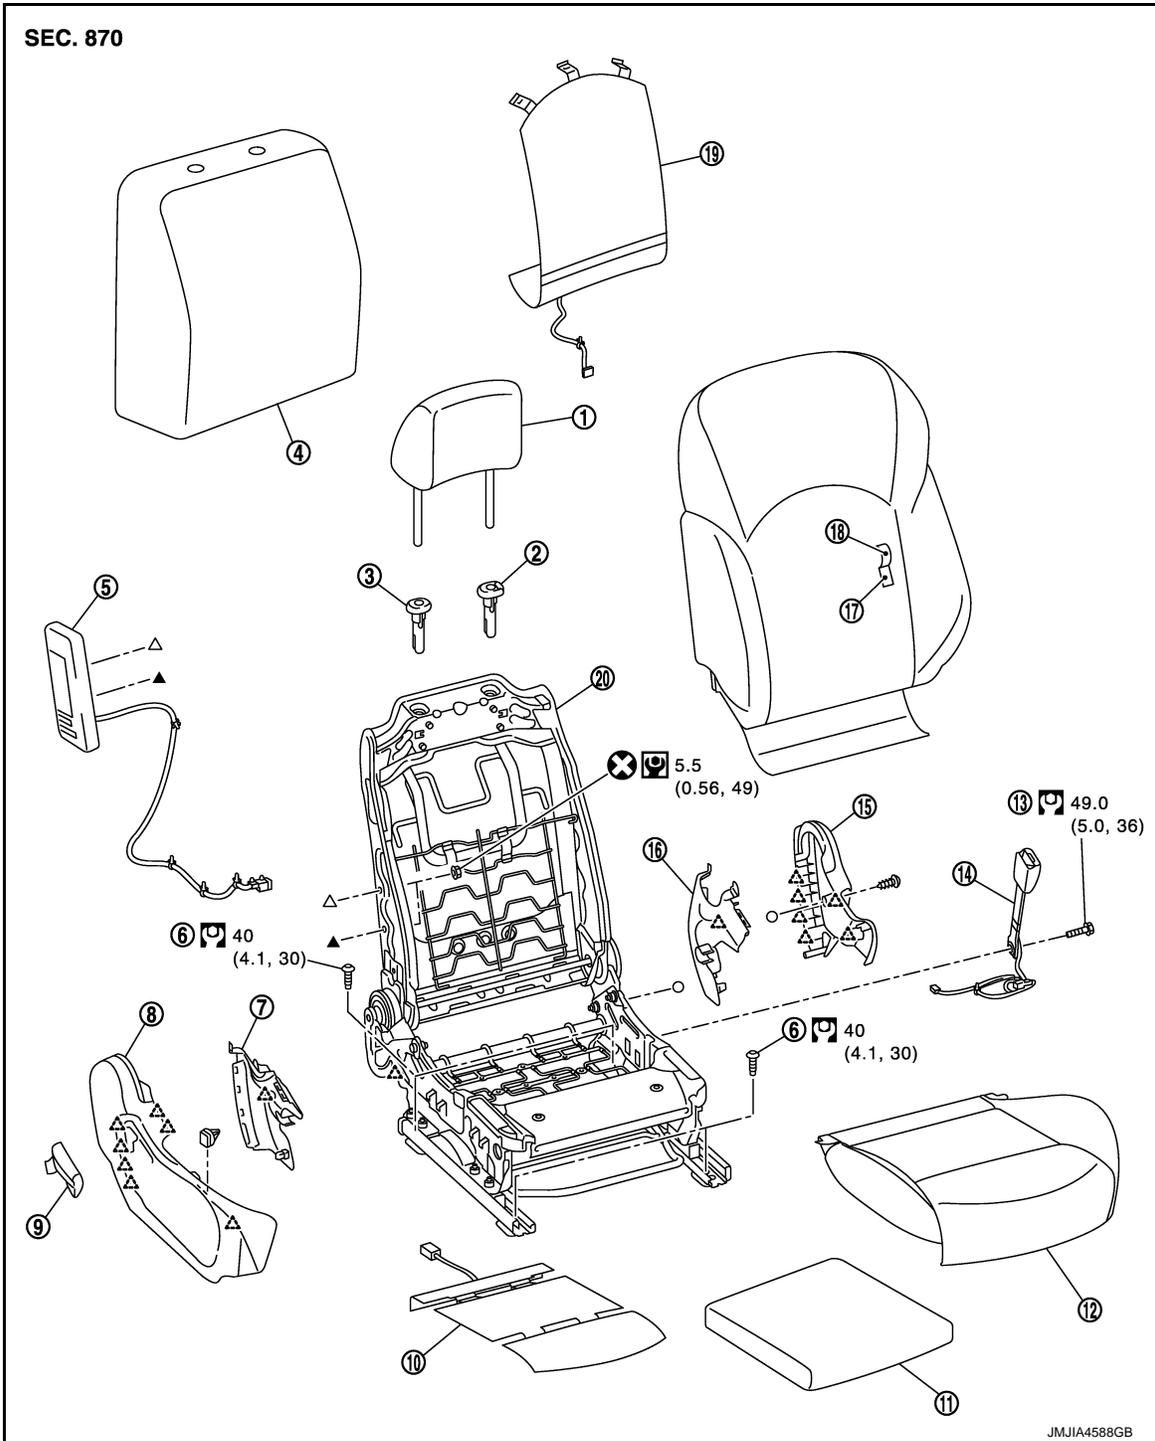

JM/JIA4588GB

- | | | |
|----------------------------------|------------------------------------|---------------------------------|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback silencer | 5. Side air bag module | 6. TORX bolt |
| 7. Reclining device outer cover | 8. Seat cushion outer finisher | 9. Reclining lever knob |
| 10. Seat cushion heater unit | 11. Seat cushion silencer | 12. Seat cushion assembly |
| 13. Anchor bolt | 14. Seat belt buckle | 15. Seat cushion inner finisher |
| 16. Reclining device inner cover | 17. Seatback pad | 18. Seatback trim |
| 19. Seatback heater unit | 20. Seat frame & adjuster assembly | |

△ : Pawl

⊗ : Do not reuse

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

 : N·m (kg-m, in-lb)

 : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:000000006365636

REMOVAL

CAUTION:

Before servicing, disconnect the battery cable from negative terminal or remove the fuse.

1. Remove headrest.
2. Set the seatback vertically.
3. Slide seat to the frontmost position.
4. Remove rear outer mounting TORX bolt.
5. Remove rear inner mounting TORX bolt.
6. Slide seat to the rearmost position.
7. Remove front outer mounting TORX bolt.
8. Remove front inner mounting TORX bolt.
9. Remove seat cushion lower harness connectors and harness fixing clamps.

CAUTION:

Before performing removal operation, check the installation position of harness connectors and harness fixing clamps.

10. Remove seat from the vehicle.

CAUTION:


When removing and installing, use shop cloths to protect parts from damage.

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- When installing, tighten mounting TORX bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure), starting from front inner mounting TORX bolt.

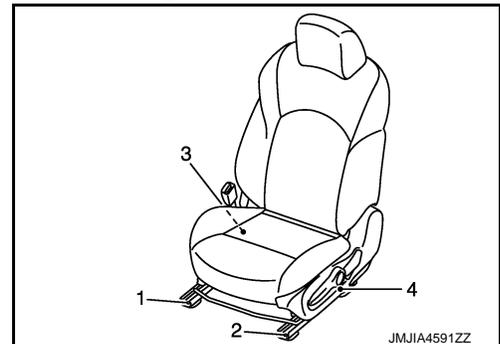

- Always fix the harness fixing clamp in position.

SEATBACK

SEATBACK : Disassembly and Assembly

INFOID:000000006365637

DISASSEMBLY


1. Remove seatback retainer installed in the lower portion of seat cushion.
2. Remove harness installed in the lower portion of seat cushion.

FRONT SEAT (2WD)


< REMOVAL AND INSTALLATION >

1. Disconnect seatback heater unit harness connector (A). (with heater seat only)
2. Remove seatback heater unit harness connector fixing clip (A) and harness fixing clamp (B). (with heater seat only)
3. Remove side air bag module harness connector fixing clip (C) and harness fixing clamp (D).

← : Vehicle front

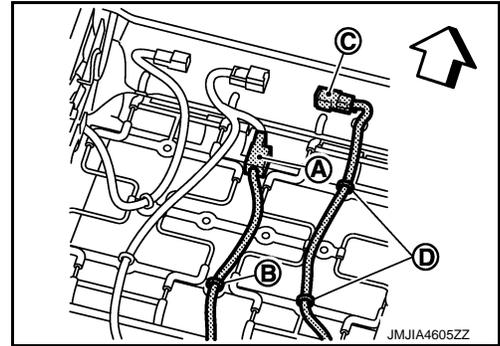


3. Open seatback fastener (A) and remove seatback retainer (B).

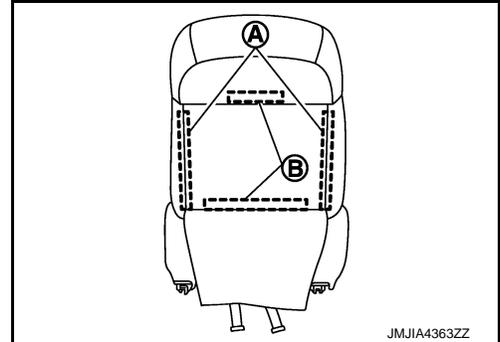

4. Remove side air bag module harness fixing clamps from seat frame & adjuster assembly.
5. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.

CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

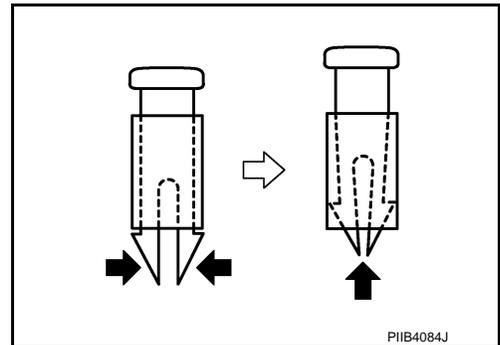

6. Remove side air bag module mounting nuts.
7. Remove seatback trim, seatback pad, side air bag module, and seatback heater unit (with heater seat only) from seat frame & adjuster assembly.

CAUTION:

Never subject side air bag module to impact by dropping or hitting.

8. Separate the seatback trim and seatback pad.
 1. Remove side air bag module from seatback pad.

CAUTION:

For handling of side air bag module, refer to [SR-22. "Removal and Installation"](#).

2. Remove hog rings, and separate the seatback trim and seatback pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

9. Separate the seatback pad and seatback heater unit.
10. Remove seatback silencer from seat frame & adjuster assembly.

ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

SEAT CUSHION

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

SEAT CUSHION : Disassembly and Assembly


INFOID:000000006365638

DISASSEMBLY

1. Remove seat cushion outer finisher.


1. Disengage pawls and remove lifter lever knob cap (1). (Driver seat only)
2. Remove fixing screws and remove lifter lever knob (2). (Driver seat only)

 : Pawl

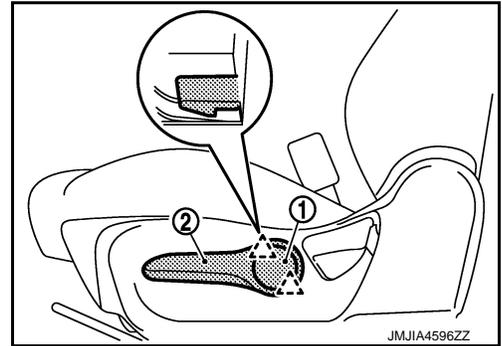


3. Disengage pawl using a screwdriver while pulling reclining lever knob. Slide reclining lever knob toward seat front and remove it.

 : Pawl

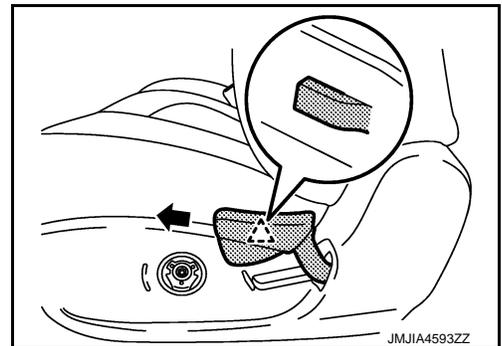


4. Tilt seat toward seat front until fixing screw (A) of seat cushion outer finisher (1) and reclining device outer cover (2) are visible. Remove fixing screw.

 : Vehicle front

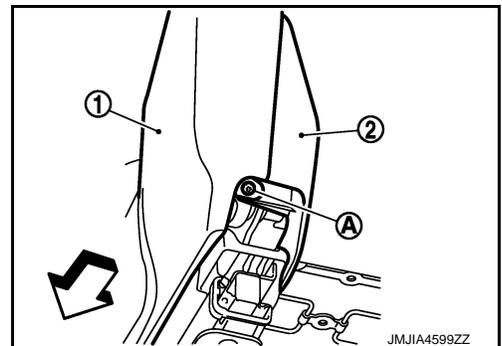

5. Pull seat cushion outer finisher toward seat front. Disengage pawls and clips. Slide seat cushion outer finisher toward seat front. Remove seat cushion outer finisher.

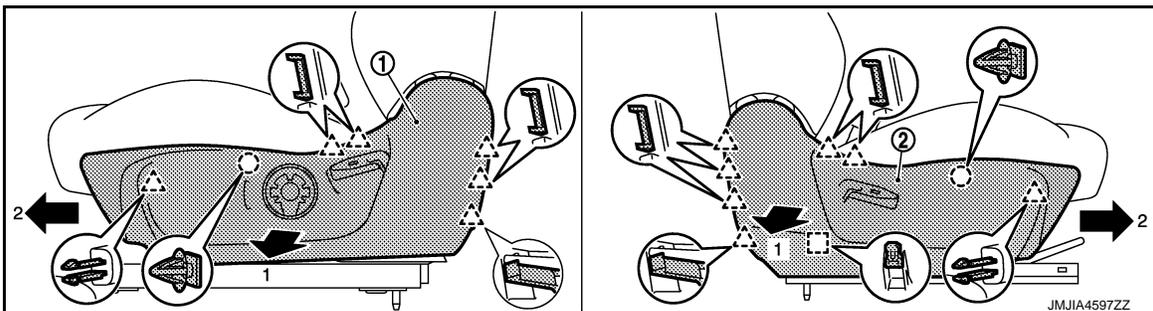

1. Seat cushion outer finisher (Driver seat)

2. Seat cushion outer finisher (Passenger seat)

 : Clip

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >




2. Remove harness installed in the lower portion of seat cushion.

Driver seat

1. Disconnect seat cushion heater unit harness connector (A). (with heater seat only)
2. Remove seat cushion heater unit harness connector fixing clip (B) and harness fixing clamp (C). (with heater seat only)
3. Remove seat belt buckle harness connector fixing clip (D) and harness fixing clamp (E).


← : Vehicle front

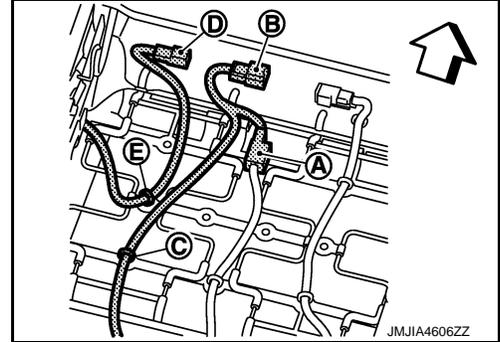

Passenger seat

1. Disconnect seat cushion heater unit harness connector (A). (with heater seat only)
2. Remove seat cushion heater unit harness connector fixing clip (B) and harness fixing clamp (C). (with heater seat only)
3. Disconnect occupant detection unit harness connector (D).
4. Remove seat belt buckle harness connector fixing clip (E) and harness fixing clamp (F).


← : Vehicle front

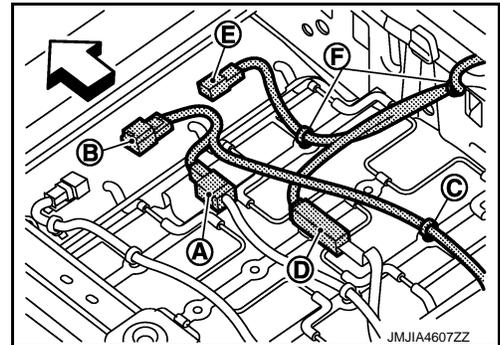


3. Remove seat cushion inner finisher.

1. Remove harness fixing clamps of seat belt buckle installed on seat frame & adjuster assembly.
2. Remove seat belt buckle mounting anchor bolt, and then remove seat belt buckle from seat frame & adjuster assembly.
3. Tilt seat toward seat front until fixing screw (A) of seat cushion inner finisher (1) and reclining device inner cover (2) are visible. Remove fixing screw.

← : Vehicle front

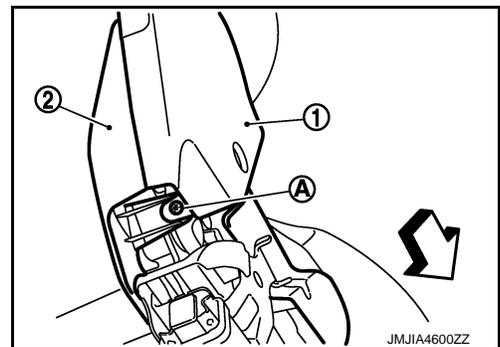

4. Remove fixing screws. Pull seat cushion inner finisher toward seat front. Disengage pawls. Remove seat cushion inner finisher.

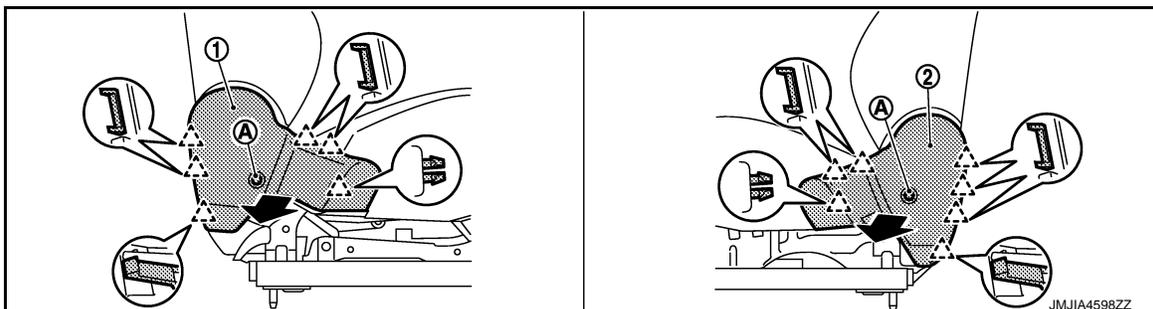

FRONT SEAT (2WD)

< REMOVAL AND INSTALLATION >

1. Seat cushion inner finisher
(Driver seat)

A : Screw

 : Pawl

2. Seat cushion inner finisher
(Passenger seat)

4. Remove seat cushion retainer from seat frame & adjuster assembly. Remove seat cushion trim, seat cushion pad, and seat cushion heater unit (with seat heater only).
5. Remove hog rings, and separate the seat cushion trim and seat cushion pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

6. Separate the seat cushion pad and seat cushion heater unit.
7. Remove seat cushion silencer from seat frame & adjuster assembly.
8. Remove seatback trim and seatback pad from seat frame & adjuster assembly.
Refer to [SE-19, "SEATBACK : Disassembly and Assembly"](#).
9. Remove reclining device cover.

Driver seat

- Pull reclining device outer cover toward seat inner. Disengage pawls. Remove reclining device outer cover.
- Remove fixing screw. Pull reclining device inner cover toward seat inner. Disengage clips. Remove reclining device inner cover.

Passenger seat

- Pull reclining device outer cover toward seat inner. Disengage pawls and metal clips. Remove reclining device outer cover.
- Pull reclining device inner cover toward seat inner. Disengage pawls and metal clips. Remove reclining device inner cover.

10. Remove following parts from seat frame & adjuster assembly. (driver seat only)
- Remove fixing screws. Pull outer lower cover toward seat inner and outer. Remove clips. Remove outer lower cover.
 - Remove fixing screws. Pull inner lower cover toward seat inner. Disengage clip. Remove inner lower cover.

ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >


FRONT SEAT (4WD)

Exploded View

INFOID:00000006404996

DRIVER SEAT

LHD models

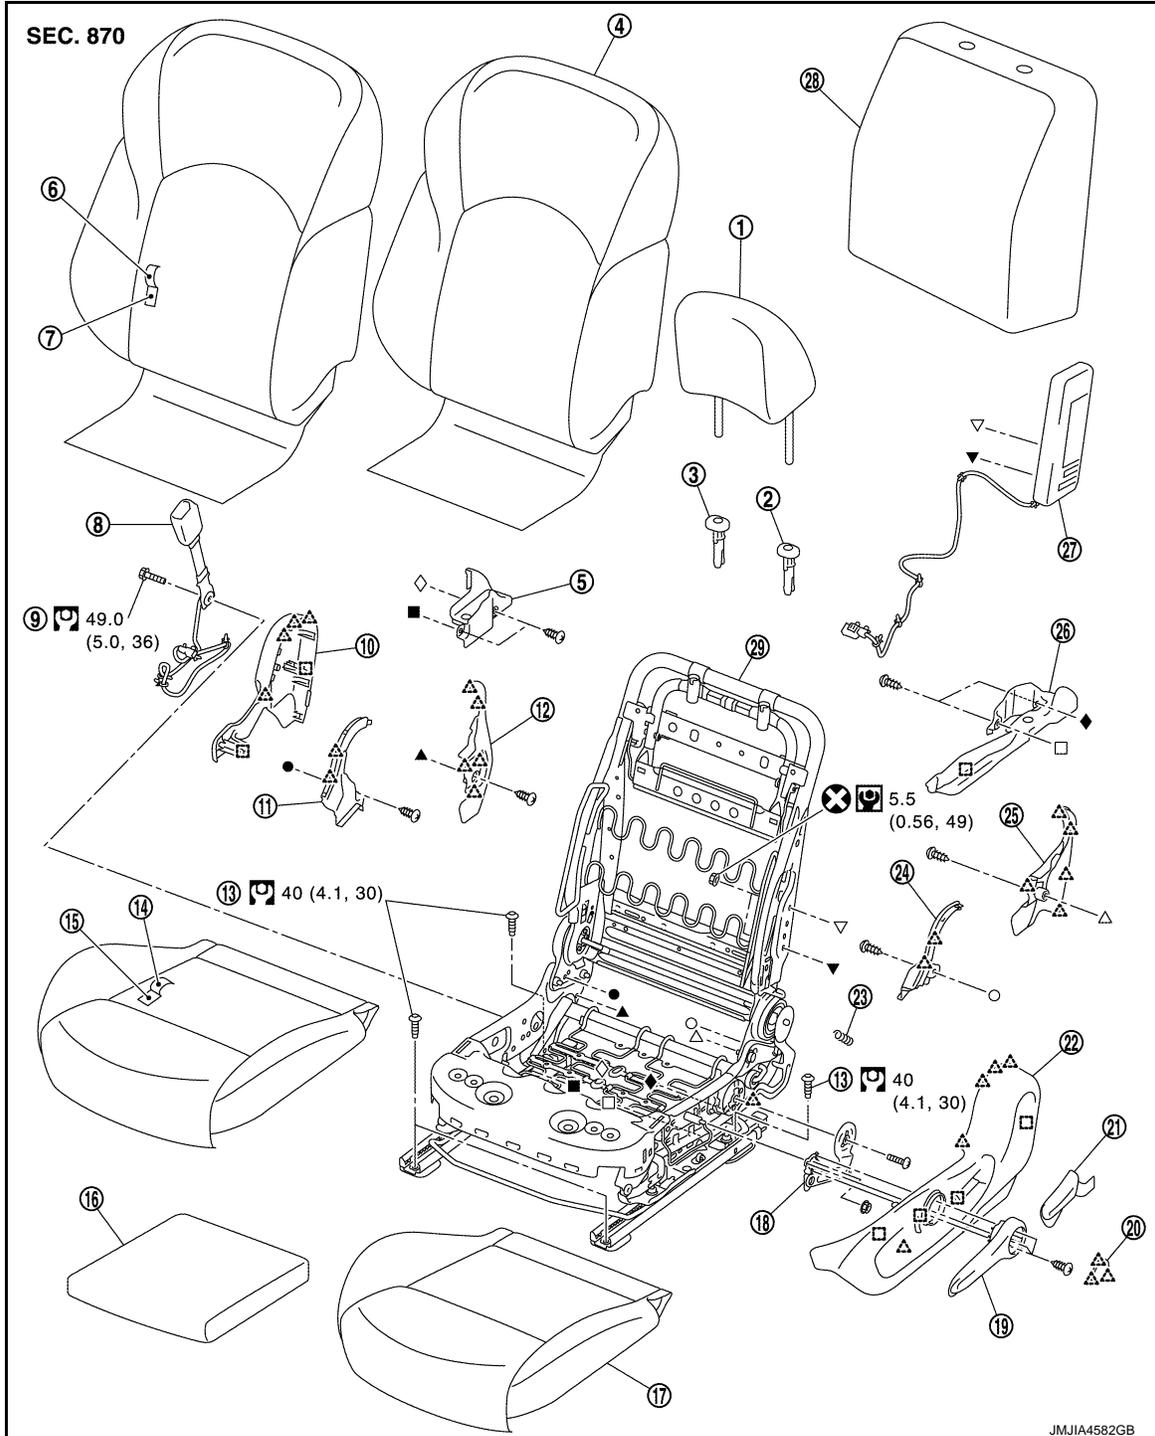

- | | | |
|--|-----------------------------|---|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback assembly (with heater seat only) | 5. Inner lower cover | 6. Seatback trim (without heater seat only) |
| 7. Seatback pad (without heater seat only) | 8. Seat belt buckle | 9. Anchor bolt |

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >

- | | | |
|---|--|--|
| 10. Seat cushion inner finisher | 11. Reclining device inner cover (front) | 12. Reclining device inner cover (rear) |
| 13. TORX bolt | 14. Seat cushion trim
(without heater seat only) | 15. Seat cushion pad
(without heater seat only) |
| 16. Seat cushion silencer | 17. Seat cushion assembly
(with heater seat only) | 18. Lifter link |
| 19. Lifter lever knob | 20. Lifter lever knob cap | 21. Reclining lever knob |
| 22. Seat cushion outer finisher | 23. Spring | 24. Reclining device outer cover (front) |
| 25. Reclining device outer cover (rear) | 26. Outer lower cover | 27. Side air bag module |
| 28. Seatback silencer | 29. Seat frame & adjuster assembly | |



: Pawl



: Metal clip



: Do not reuse



: N·m (kg-m, in-lb)



: N·m (kg-m, ft-lb)

PASSENGER SEAT

CAUTION:

Always replace seat cushion as an assembly because occupant detection unit is equipped.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >

-  : Metal clip
-  : Do not reuse
-  : N·m (kg-m, in-lb)
-  : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:000000006412871

REMOVAL

CAUTION:

Before servicing, disconnect the battery cable from negative terminal or remove the fuse.

1. Remove headrest.
2. Set the seatback vertically.
3. Slide seat to the frontmost position.
4. Remove rear outer mounting TORX bolt.
5. Remove rear inner mounting TORX bolt.
6. Slide seat to the rearmost position.
7. Remove front outer mounting TORX bolt.
8. Remove front inner mounting TORX bolt.
9. Remove seat cushion lower harness connectors and harness fixing clamps.

CAUTION:

Before performing removal operation, check the installation position of harness connectors and harness fixing clamps.

10. Remove seat from the vehicle.

CAUTION:


When removing and installing, use shop cloths to protect parts from damage.

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- **When removing and installing, use shop cloths to protect parts from damage.**
- **When installing, tighten mounting TORX bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure), starting from front inner mounting TORX bolt.**

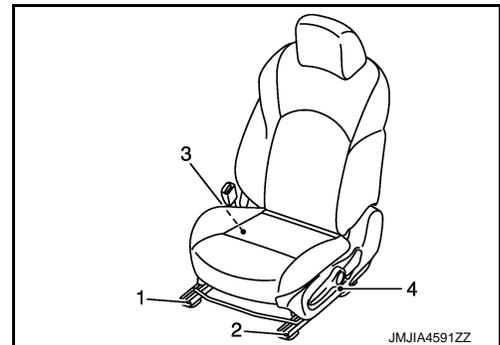

- **Always fix the harness fixing clamp in position.**

SEATBACK

SEATBACK : Disassembly and Assembly

INFOID:000000006384860

DISASSEMBLY

CAUTION:

For models with heater seat, always replace heater seat as a seatback assembly without disassembling trim and pad.


1. Remove seatback retainer installed in the lower portion of seat cushion.
2. Remove harness installed in the lower portion of seat cushion.

FRONT SEAT (4WD)


< REMOVAL AND INSTALLATION >

1. Disconnect seatback heater unit harness connector (A).(with heater seat only.)
2. Remove seatback heater unit harness connector fixing clips (A) and harness fixing clamp (B). (with heater seat only)
3. Remove side air bag module harness connector fixing clips (C) and harness fixing clamp (D).

← : Vehicle front

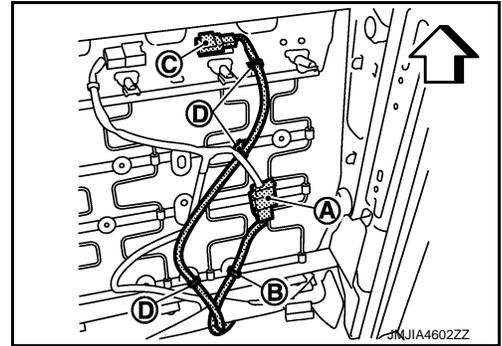


3. Open seatback fastener (A) and remove seatback retainer (B).

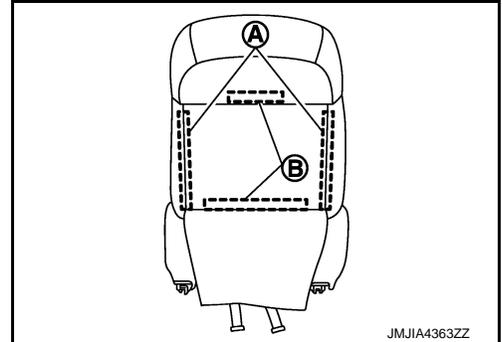

4. Remove side air bag module harness fixing clamps from seat frame & adjuster assembly.
5. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.

CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

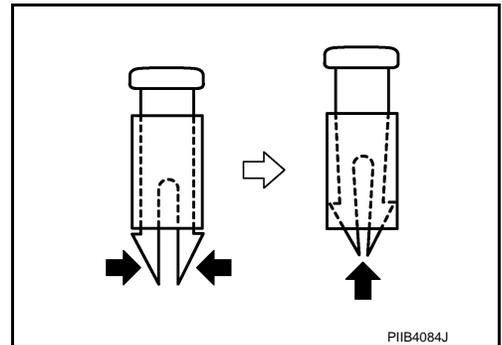

6. Remove side air bag module mounting nuts.
7. Remove seatback trim and seatback pad from seat frame & adjuster assembly.

CAUTION:

Never subject side air bag module to impact by dropping or hitting.

8. Remove side air bag module from seatback pad.

CAUTION:

For handling of side air bag module, refer to [SR-22, "Removal and Installation"](#).

9. Separate the seatback trim and seatback pad. (without heater seat only)
Remove hog rings, and separate the seatback trim and seatback pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

10. Remove seatback silencer from seat frame & adjuster assembly.

ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

SEAT CUSHION

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >

SEAT CUSHION : Disassembly and Assembly

INFOID:000000006384861


DISASSEMBLY

CAUTION:

For models with heater seat and occupant detection unit, always replace heater seat and reminder as a seat cushion assembly without disassembling trim and pad.


1. Remove seat cushion outer finisher.
 1. Disengage pawls and remove lifter lever knob cap (1). (Driver seat only)
 2. Remove fixing screws and remove lifter lever knob (2). (Driver seat only)

 : Pawl

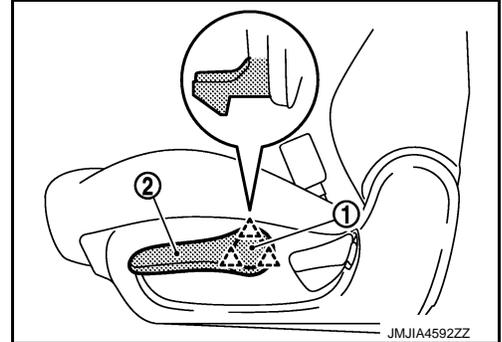


3. Disengage pawl using a screwdriver while pulling reclining lever knob. Slide reclining lever knob toward seat front and remove it.

 : Pawl

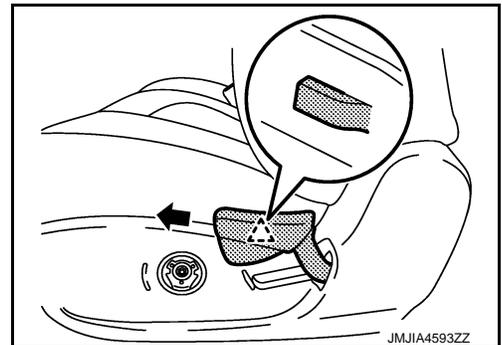

4. Pull seat cushion outer finisher toward seat front. Disengage pawls and metal clips. Slide seat cushion outer finisher toward seat front. Remove seat cushion outer finisher.

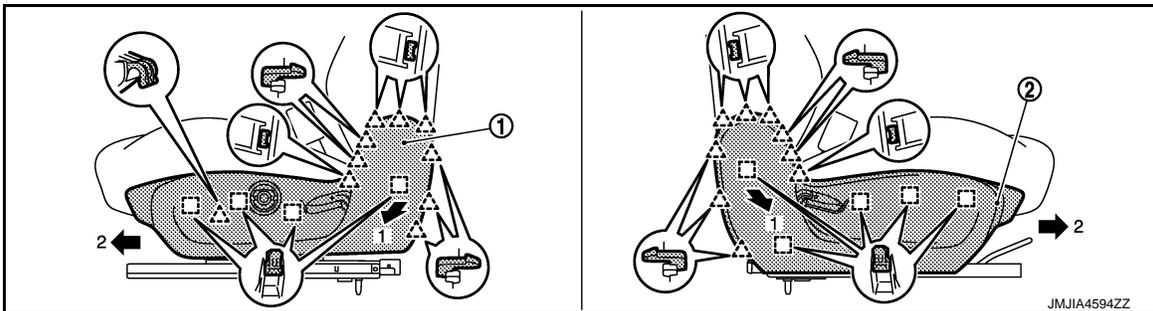

1. Seat cushion outer finisher (Driver seat)

2. Seat cushion outer finisher (Passenger seat)

 : Pawl

 : Metal clip

2. Remove harness installed in the lower portion of seat cushion.


Driver seat

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >

1. Disconnect seat cushion heater unit harness connector (A). (with heater seat only)
2. Remove seat cushion heater unit harness connector fixing clip (B) and harness fixing clamps (C). (with heater seat only)
3. Remove seat belt buckle harness connector fixing clip (D) and harness fixing clamps (E).


← : Vehicle front

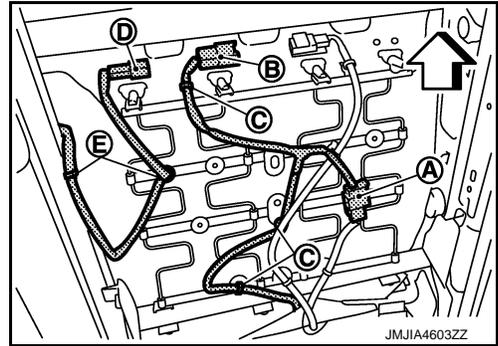

Passenger seat


1. Disconnect seat cushion heater unit harness connector (A). (with heater seat only)
2. Remove seat cushion heater unit harness connector fixing clip (B) and harness fixing clamps (C). (with heater seat only)
3. Disconnect occupant detection unit harness connector (D).
4. Remove seat belt buckle harness connector fixing clip (E) and harness fixing clamps (F).

← : Vehicle front

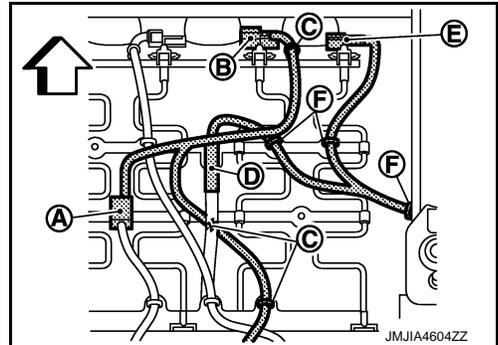

3. Remove seat cushion inner finisher.
 1. Remove harness fixing clamp of seat belt buckle installed on seat frame & adjuster assembly.
 2. Remove seat belt buckle mounting anchor bolt, and then remove seat belt buckle from seat frame & adjuster assembly.
 3. Pull seat cushion inner finisher forward. Disengage pawls and metal clips.

△ : Pawl
□ : Metal clip

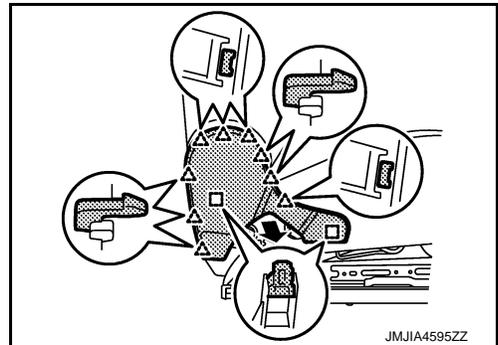

4. Remove seat cushion retainer from seat frame & adjuster assembly. Remove seat cushion trim and seat cushion pad.
5. Remove hog rings, and separate the seat cushion trim and seat cushion pad. (without driver heater seat only)

CAUTION:

Before performing separating operation, check the installation position of hog rings.

6. Remove seat cushion silencer from seat frame & adjuster assembly.
7. Remove seatback trim and seatback pad from seat frame & adjuster assembly. Refer to [SE-27, "SEATBACK : Disassembly and Assembly"](#).
8. Remove reclining device cover.
 - Remove fixing screw, and then remove reclining device outer cover (front and rear).
 - Remove fixing screw, and then remove reclining device inner cover (front and rear).
9. Remove following parts from seat frame & adjuster assembly.
 - Remove reclining spring.
 - Remove fixing screws. Pull outer lower cover toward seat outer. Disengage metal clips. Remove outer lower cover. (driver seat only)
 - Remove fixing screws, and then remove inner lower cover. (driver seat only)

FRONT SEAT (4WD)

< REMOVAL AND INSTALLATION >


ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

- Always install the hog rings in position.
- When installing seat cushion finisher, always slide seat cushion outer finisher toward seat rear, engage portion (A) of seat frame & adjuster assembly and portion (B) of seat cushion outer finisher, and then install pawls and metal clips of seat cushion outer finisher.

← : Vehicle front

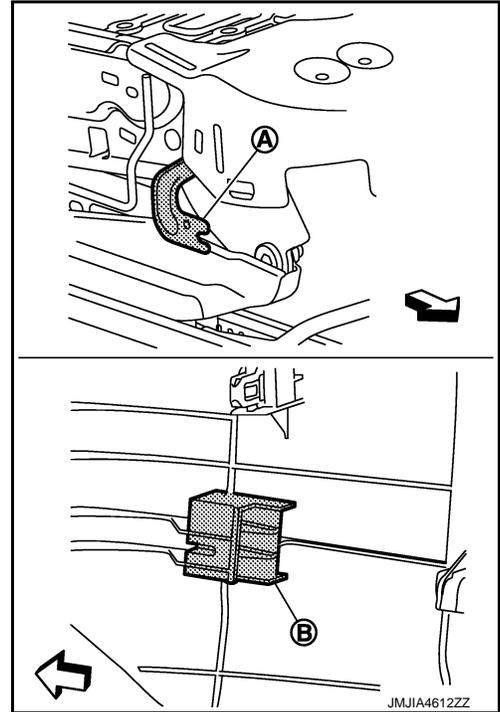

A
B
C
D
E
F
G
H
I

SE

K
L
M
N
O
P


REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

REAR SEAT (2WD)

Exploded View

INFOID:00000006404991

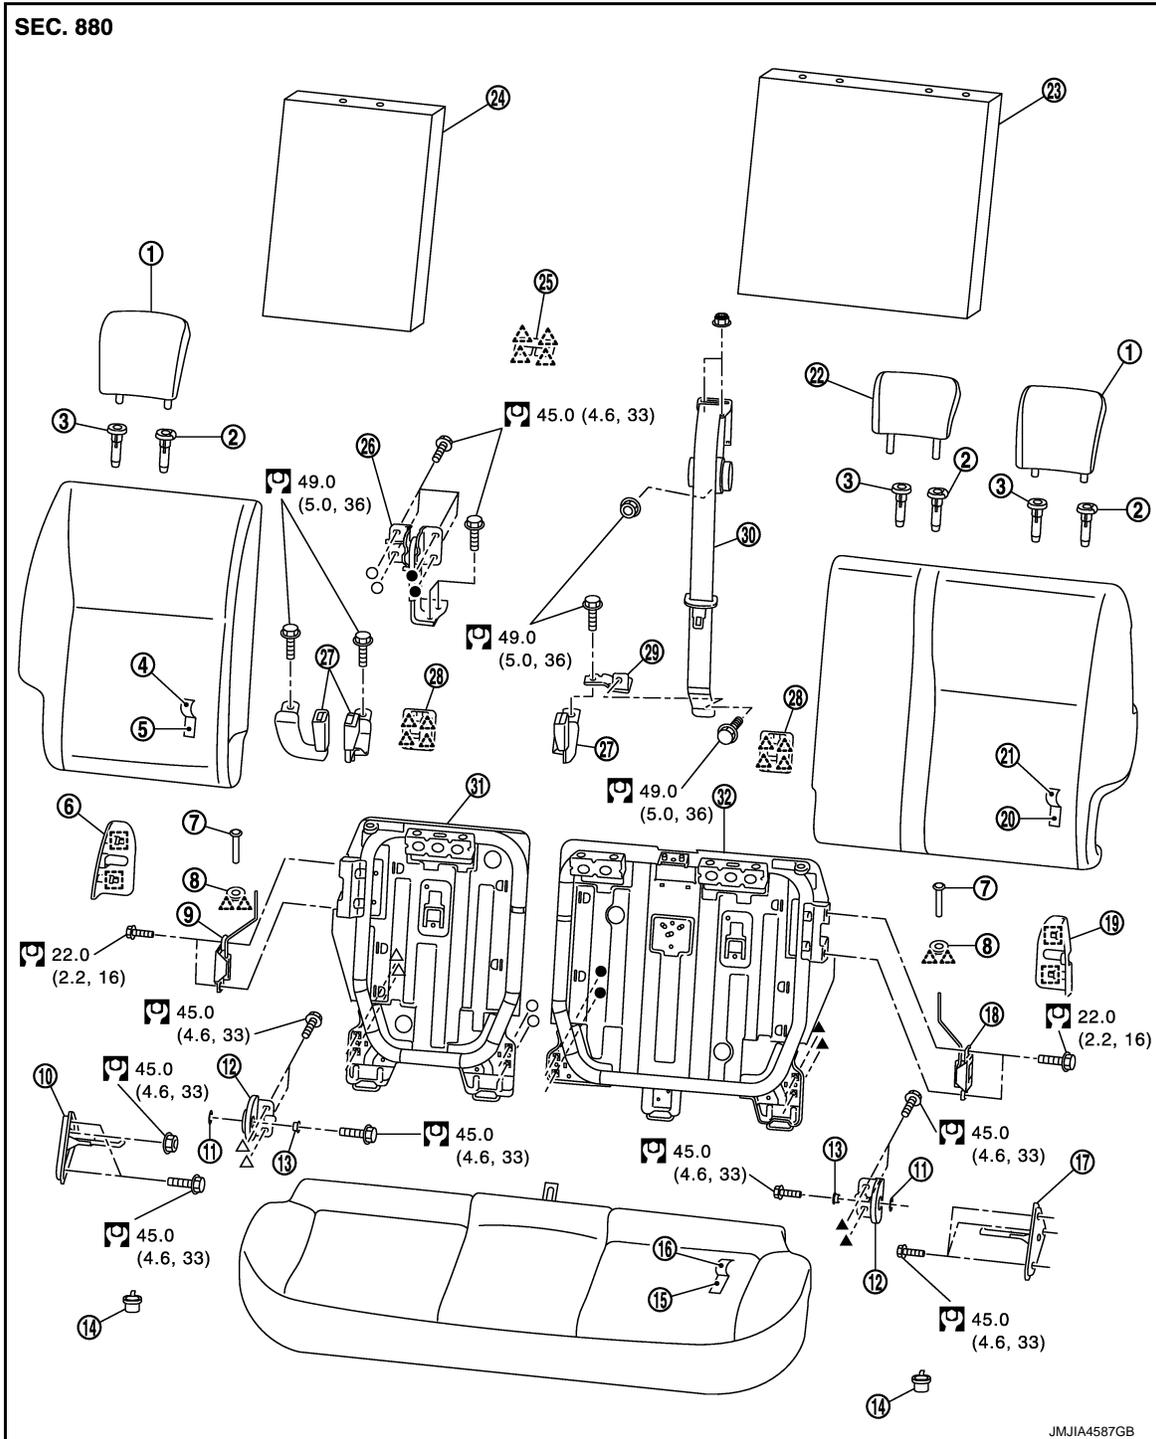

- | | | |
|------------------------|--------------------------------|-------------------------------|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback trim RH | 5. Seatback pad RH | 6. Seat lock cover RH |
| 7. Seatback lock knob | 8. Seatback lock knob finisher | 9. Seatback lock assembly RH |
| 10. Striker RH | 11. Lock washer | 12. Side hinge |
| 13. Bush | 14. Seat cushion hook | 15. Seat cushion pad |
| 16. Seat cushion trim | 17. Side hinge LH | 18. Seatback lock assembly LH |
| 19. Seat lock cover LH | 20. Seatback pad LH | 21. Seatback trim LH |

REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

- | | | |
|-------------------------------|------------------------------|--------------------------|
| 22. Center headrest | 23. Seatback silencer LH | 24. Seatback silencer RH |
| 25. Center seat belt finisher | 26. Center hinge | 27. Seat belt buckle |
| 28. Seatback tether cover | 29. Center seat belt bracket | 30. Center seat belt |
| 31. Seatback frame RH | 32. Seatback frame LH | |

 : Pawl

 : Metal clip

 : N·m (kg-m, ft-lb)


SEAT CUSHION

SEAT CUSHION : Removal and Installation

INFOID:000000006365640

REMOVAL

1. Lift up front end portion of seat cushion and disengage seat cushion hook.

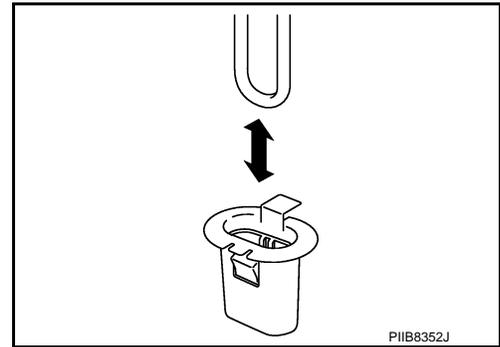

2. Pull out seat belt buckle from seat cushion.
3. Remove seat cushion from the vehicle.

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

SEAT CUSHION : Disassembly and Assembly

INFOID:000000006365641

DISASSEMBLY

Remove hog rings, and separate the seat cushion trim and seat cushion pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

ASSEMBLY

Note the following item, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

SEATBACK

SEATBACK : Removal and Installation

INFOID:000000006365642

LH SIDE SEATBACK

Removal

CAUTION:


Remove seatback with seat cushion installed.

1. Temporarily move seat cushion to the position where center anchor of center seat belts can be removed.
2. Remove center anchor mounting bolt of center seat belt. Remove center anchor.

REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

- Return seat cushion to the normal position.
- Unlock seatback lock assembly. Tilt seatback toward vehicle front. Remove headrests.
- Fold seatback toward vehicle front.
- Pull up seatback carpet (A). Remove mounting bolts (B) of seatback hinge portion.

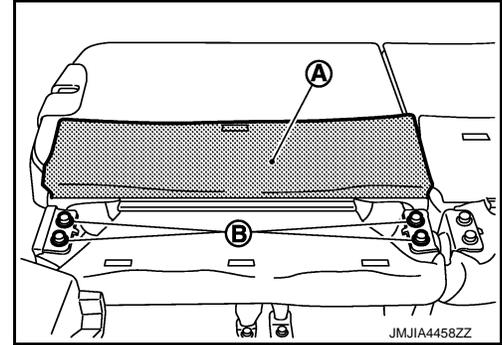

- Remove seatback from the vehicle.

CAUTION:


When removing and installing, use shop cloths to protect parts from damage.

Installation

Note the following items, and install in the reverse order of removal.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Install seat cushion to the vehicle, and then install seatback.
- When installing seatback, tighten mounting bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure).

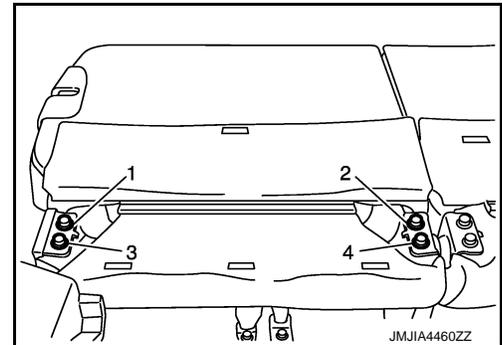


RH SIDE SEATBACK

Removal

CAUTION:

Remove seatback with seat cushion installed.

- Unlock seatback lock assembly. Tilt seatback toward vehicle front. Remove headrest.
- Fold seatback toward vehicle front.
- Pull up seatback carpet (A). Remove mounting bolts (B) of seatback hinge portion.

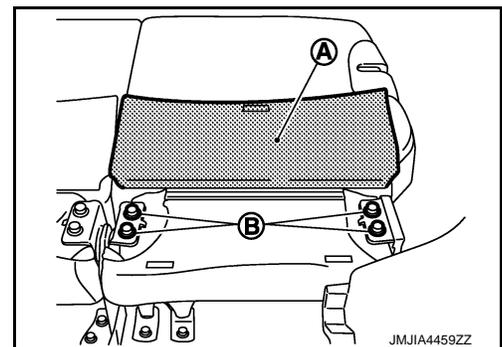

- Remove seatback from the vehicle.

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

REAR SEAT (2WD)


< REMOVAL AND INSTALLATION >

Installation

Note the following items, and install in the reverse order of removal.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Install seat cushion to the vehicle, and then install seatback.
- When installing seatback, tighten mounting bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure).

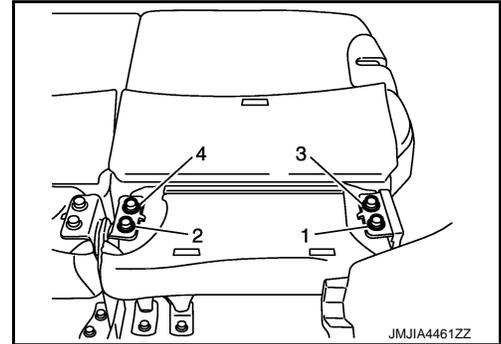

SEATBACK : Disassembly and Assembly


INFOID:000000006365643

DISASSEMBLY

LH side seatback


1. Remove headrest holder.
 1. Pull seat lock cover in direction indicated by the arrow as shown in the figure. Remove seat lock cover.

 : Metal clip

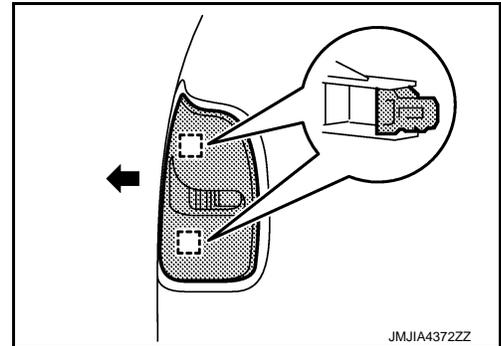


2. Pull tether cover in direction indicated by the arrow as shown in the figure. Remove tether cover.

 : Pawl

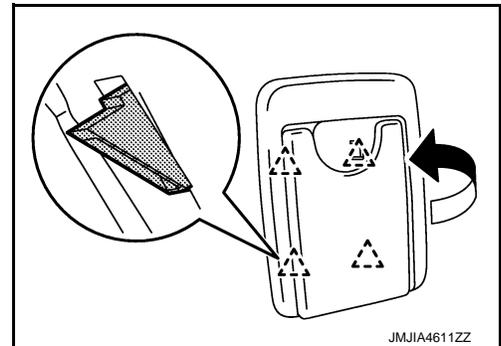

3. Open seatback fastener (A) and remove seatback retainer (B).

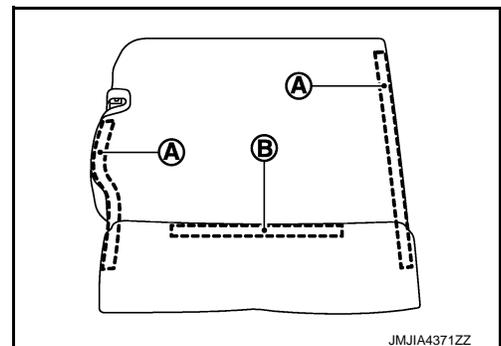

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

4. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.


CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

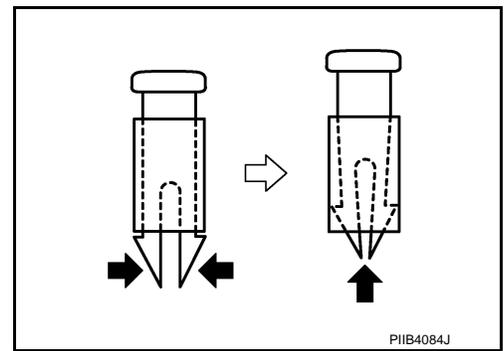

2. Remove seatback lock knob finisher.


1. Rotate seatback lock knob counterclockwise. Remove seatback lock knob.

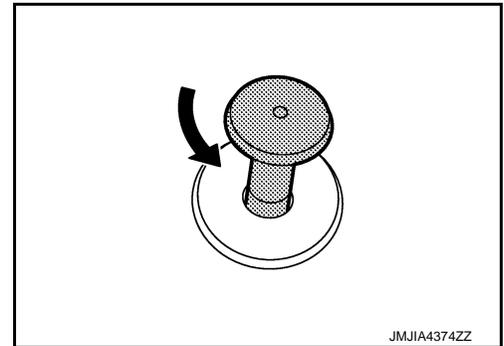

2. Push up seatback lock knob finisher while pressing pawls indicated by arrows as shown in the figure. Remove seatback lock finisher from seatback.

CAUTION:


When installing seatback lock knob finisher, check front and rear orientation and be careful to install it normally.

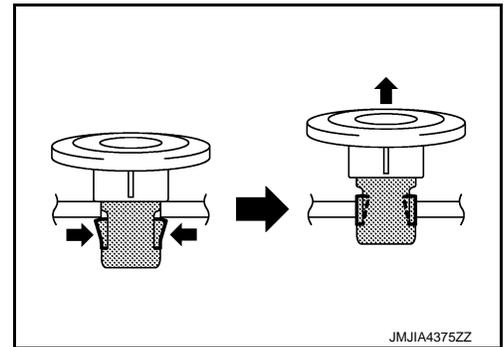

3. Remove center seat belt finisher from seatback.

Lift up front of center seat belt finisher. Disengage front pawls. Pull center seat belt finisher toward seat front. Disengage rear pawls.

 : Pawl

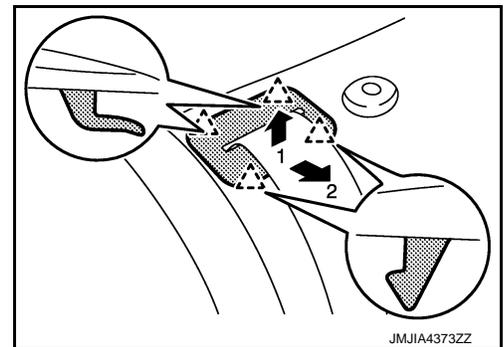

4. Remove seatback trim and seatback pad from seatback frame
5. Remove hog rings, and separate the seatback trim and seatback pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

6. Remove seatback silencer from seatback frame.
7. Remove seatback lock assembly mounting bolts, and then remove seatback lock assembly from seatback frame.

REAR SEAT (2WD)


< REMOVAL AND INSTALLATION >

8. Remove center seat belt retractor from seatback frame.
Refer to [SB-12, "SEAT BELT RETRACTOR : Removal and Installation"](#).

RH side seatback


1. Remove headrest holder.
 1. Pull seat lock cover in direction indicated by the arrow as shown in the figure. Remove seat lock cover.

 : Metal clip

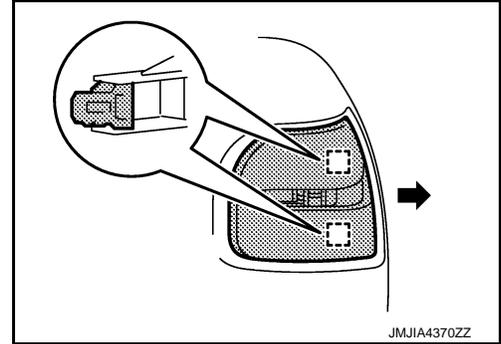


2. Pull tether cover in direction indicated by the arrow as shown in the figure. Remove tether cover.


 : Pawl

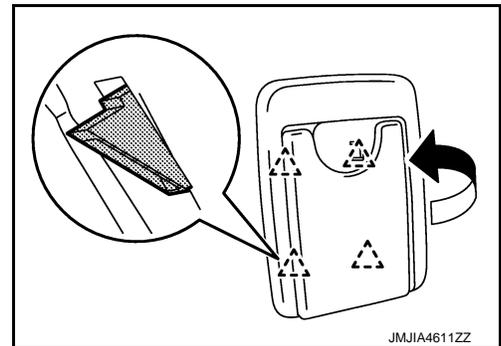

3. Open seatback fastener (A) and remove seatback retainer (B).

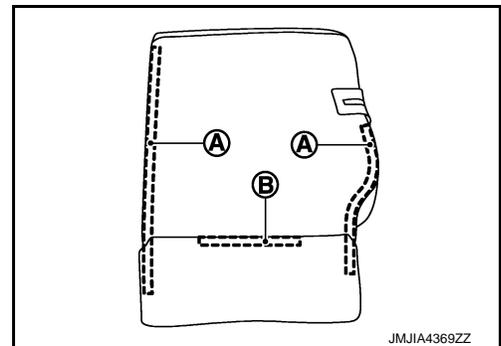

4. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.
CAUTION:
Before installing headrest holder check its orientation. (front/rear and right/left)

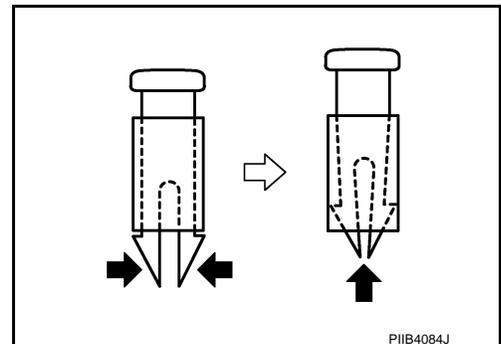


2. Remove seatback lock knob finisher.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >


1. Rotate seatback lock knob counterclockwise. Remove seatback lock knob.

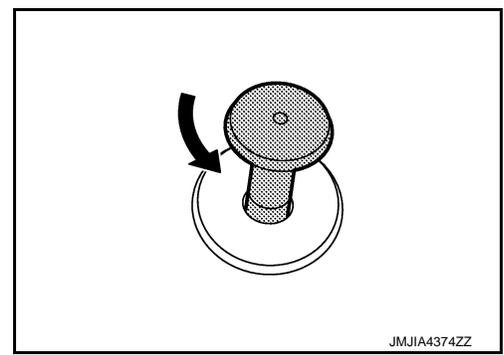

2. Push up seatback lock knob finisher while pressing pawls indicated by arrows as shown in the figure. Remove seatback lock finisher from seatback.

CAUTION:

When installing seatback lock knob finisher, check front and rear orientation and be careful to install it normally.

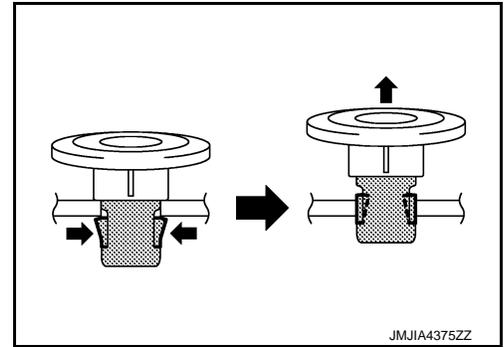

3. Remove seatback trim and seatback pad from seatback frame.
4. Remove hog rings, and separate the seatback trim and seatback pad.
CAUTION:
Before performing separating operation, check the installation position of hog rings.
5. Remove seatback silencer from seatback frame.
6. Remove seatback lock assembly mounting bolts, and then remove seatback lock assembly from seatback frame.

INSTALLATION

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

SEATBACK HINGE

SEATBACK HINGE : Removal and Installation

INFOID:000000006365644

CENTER HINGE

Removal

1. Remove seatback LH and RH from the vehicle.
Refer to [SE-33, "SEATBACK : Removal and Installation"](#).
2. Remove seat cushion from the vehicle.
Refer to [SE-33, "SEAT CUSHION : Removal and Installation"](#).
3. Remove center hinge mounting bolts, and then remove center hinge from the vehicle.

Installation

Note the following items, and install in the reverse order of removal.

CAUTION:


When installing center hinge, tighten mounting bolts to the specified torque according to the numerical order as shown in the figure.

REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

1. Temporarily tighten mounting bolt (1).
2. Tighten mounting bolts in numerical order (2 and 3 as shown in the figure) to the specified torque.
For the specified torque, refer to [SE-32. "Exploded View"](#).

← : Vehicle front

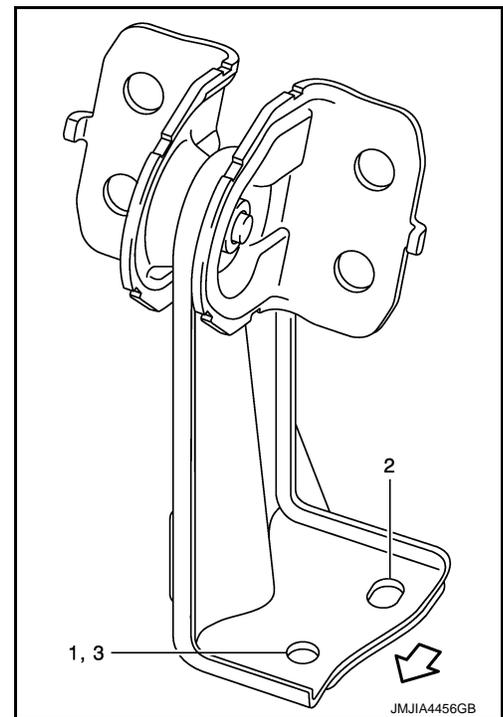

SIDE HINGE

Removal

1. Remove seatback from the vehicle.
Refer to [SE-33. "SEATBACK : Removal and Installation"](#).
2. Remove side hinge mounting bolt, and then remove side hinge from luggage side lower finisher.

Installation

Installation is the reverse order of removal. Tighten bolts to the specified torque.
For the specified torque, refer to [SE-32. "Exploded View"](#).

SEATBACK STRIKER

SEATBACK STRIKER : Removal and Installation

INFOID:000000006365645

REMOVAL

1. Remove seatback LH and RH from the vehicle.
Refer to [SE-33. "SEATBACK : Removal and Installation"](#).
2. Remove seat cushion from the vehicle.
Refer to [SE-33. "SEAT CUSHION : Removal and Installation"](#).
3. Remove side hinge from the vehicle.
Refer to [SE-38. "SEATBACK HINGE : Removal and Installation"](#).
4. Remove outer anchor mounting anchor bolt, and then remove outer anchor.
5. Remove luggage side lower finisher from the vehicle.
Refer to [INT-31. "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).
6. Remove mounting bolts or nuts of striker, and then remove striker from the vehicle.

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:


When installing striker, tighten mounting bolts or nuts to the specified torque according to the numerical order as shown in the figure.

REAR SEAT (2WD)

< REMOVAL AND INSTALLATION >

1. Temporarily tighten mounting bolts in numerical order (1 and 2 as shown in the figure).
2. Tighten mounting bolts or nuts to the specified torque in numerical order (3, 4, and 5 as shown in the figure).
For the specified torque, refer to [SE-32, "Exploded View"](#).

← : Vehicle front

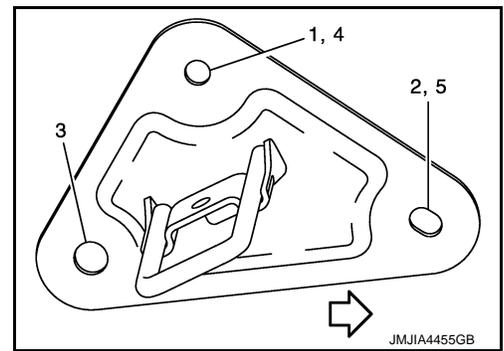

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

- | | | |
|---------------------------|-------------------------------|--------------------------|
| 10. Seat lock cover RH | 11. Bush | 12. Side hinge |
| 13. Spacer | 14. Lock washer | 15. Striker RH |
| 16. Seat cushion hook | 17. Seat cushion pad | 18. Seat cushion trim |
| 19. Striker LH | 20. Seatback lock assembly LH | 21. Seat lock cover LH |
| 22. Seatback pad LH | 23. Seatback trim LH | 24. Center headrest |
| 25. Seatback board LH | 26. Seatback silencer LH | 27. Seatback silencer RH |
| 28. Seatback tether cover | 29. Center seat belt finisher | 30. Center hinge |
| 31. Seat belt buckle | 32. Center seat belt | 33. Seatback frame RH |
| 34. Seatback frame LH | | |

 : Pawl

 : Metal clip

 : N·m (kg-m, ft-lb)


SEAT CUSHION

SEAT CUSHION : Removal and Installation

INFOID:000000006418496

REMOVAL

1. Lift up seat cushion at a close position (B) of engaging portion (A) and disengage seat cushion hook.

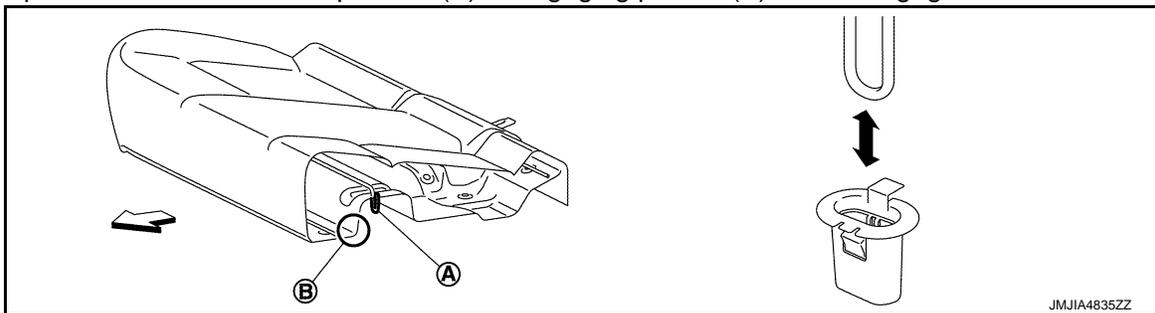

 : Vehicle front

CAUTION:

Seat cushion wire close to engaging portion deforms, if excessive force is applied to seat cushion front end when removing seat cushion.

To avoid the deformation, be careful to remove seat cushion while applying force to close position, as much as possible, of engaging portion.

2. Pull out seat belt buckle from seat cushion.
3. Remove seat cushion from the vehicle.

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

SEAT CUSHION : Disassembly and Assembly

INFOID:000000006418497

DISASSEMBLY

Remove hog rings, and separate the seat cushion trim and seat cushion pad.

CAUTION:

Before performing separating operation, check the installation position of hog rings.

ASSEMBLY

Note the following item, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

SEATBACK

SEATBACK : Removal and Installation

INFOID:000000006418492


LH SIDE SEATBACK

Removal

CAUTION:

Remove seatback with seat cushion installed.

1. Temporarily move seat cushion to the position where center anchor of center seat belts can be removed.
2. Remove center anchor mounting bolt of center seat belt. Remove center anchor.
3. Return seat cushion to the normal position.
4. Unlock seatback lock assembly. Tilt seatback toward vehicle front. Remove headrests.
5. Fold seatback toward vehicle front.
6. Pull up seatback carpet (A). Remove mounting bolts (B) of seatback hinge portion.

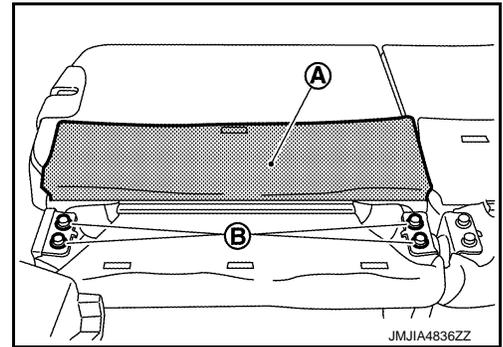

7. Remove seatback from the vehicle.

CAUTION:


When removing and installing, use shop cloths to protect parts from damage.

Installation

Note the following items, and install in the reverse order of removal.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Install seat cushion to the vehicle, and then install seatback.
- Temporarily tighten bolts, fold up seatback, check that lock and striker do not interfere, and then tighten bolts.
- When installing seatback, tighten mounting bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure).

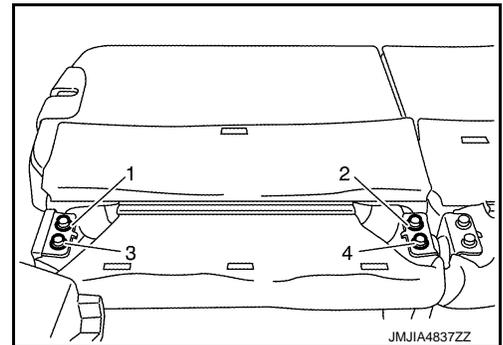

RH SIDE SEATBACK

Removal

CAUTION:

Remove seatback with seat cushion installed.


1. Unlock seatback lock assembly. Tilt seatback toward vehicle front. Remove headrests.
2. Fold seatback toward vehicle front.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

3. Pull up seatback carpet (A). Remove mounting bolts (B) of seatback hinge portion.

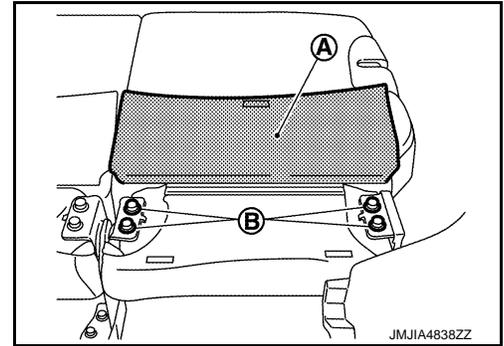

4. Remove seatback from the vehicle.

CAUTION:


When removing and installing, use shop cloths to protect parts from damage.

Installation

Note the following items, and install in the reverse order of removal.

CAUTION:

- When removing and installing, use shop cloths to protect parts from damage.
- Install seat cushion to the vehicle, and then install seatback.
- Temporarily tighten bolts, fold up seatback, check that lock and striker do not interfere, and then tighten bolts.
- When installing seatback, tighten mounting bolts according to the numerical order (1, 2, 3, and 4 as shown in the figure).

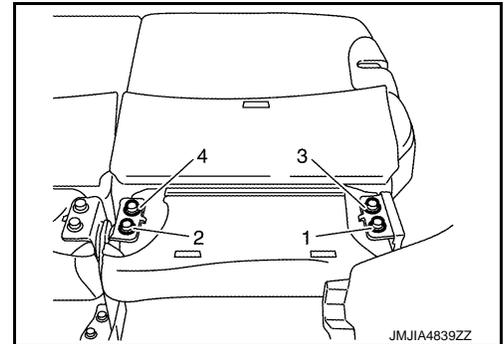

SEATBACK : Disassembly and Assembly


INFOID:000000006418493

DISASSEMBLY

LH side seatback

1. Remove headrest holder.
 1. Pull seat lock cover in direction indicated by the arrow as shown in the figure. Remove seat lock cover.

 : Metal clip

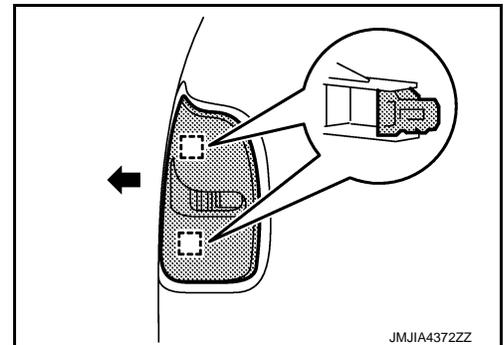


REAR SEAT (4WD)


< REMOVAL AND INSTALLATION >

2. Pull tether cover in direction indicated by the arrow as shown in the figure. Remove tether cover.


 : Pawl

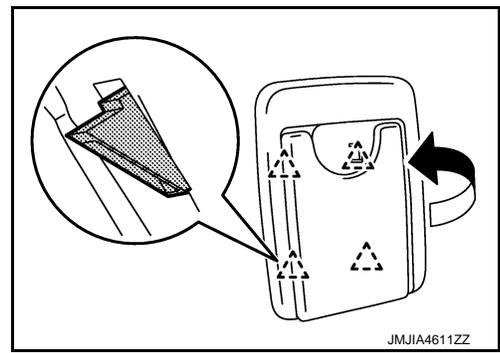

3. Open seatback fastener (A) and remove seatback retainer (B).

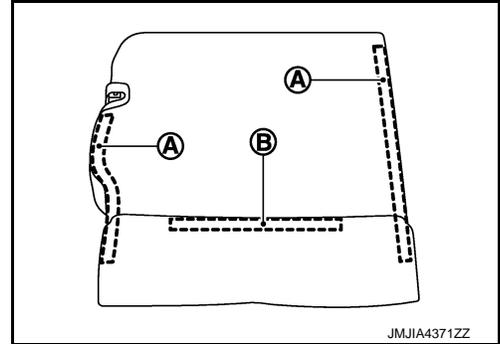


4. Slide and align the clips (B) to the holes on the seatback as shown in the figure, and then remove the seatback board (A).

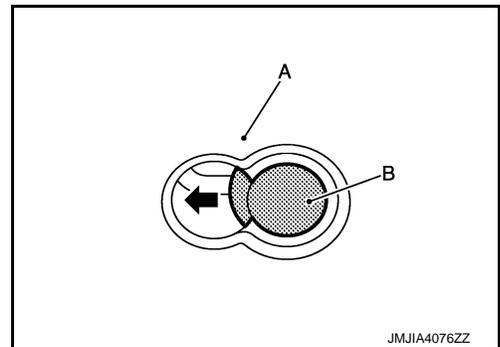

5. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.

CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

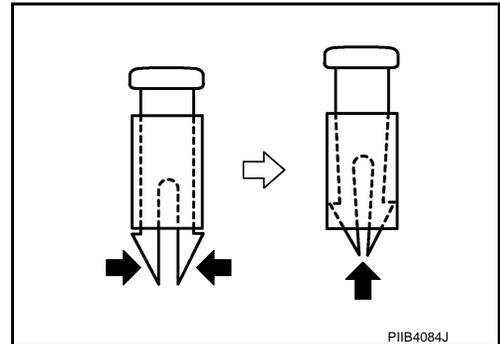


2. Remove seatback lock knob finisher.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >


1. Rotate seatback lock knob counterclockwise. Remove seatback lock knob.

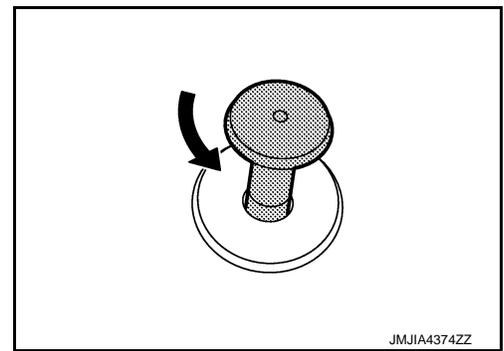

2. Push up seatback lock knob finisher while pressing pawls indicated by arrows as shown in the figure. Remove seatback lock finisher from seatback.


CAUTION:

When installing seatback lock knob finisher, check front and rear orientation and be careful to install it normally.

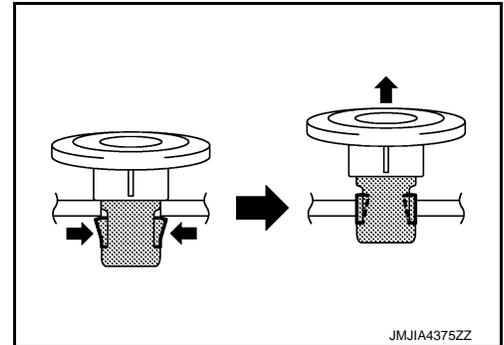

3. Remove center seat belt finisher from seatback.
Lift up front of center seat belt finisher. Disengage front pawls. Pull center seat belt finisher toward seat front. Disengage rear pawls.

 : Pawl

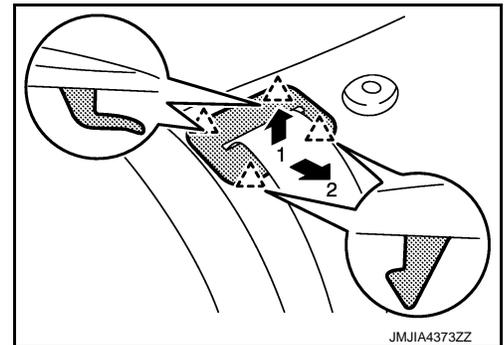

4. Remove seatback trim and seatback pad from seatback frame
5. Remove hog rings, and separate the seatback trim and seatback pad.
CAUTION:
Before performing separating operation, check the installation position of hog rings.
6. Remove seatback silencer from seatback frame.
7. Remove seatback lock assembly mounting bolts, and then remove seatback lock assembly from seatback frame.
8. Remove center seat belt retractor from seatback frame.
Refer to [SB-12, "SEAT BELT RETRACTOR : Removal and Installation"](#).

RH side seatback


1. Remove headrest holder.

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >


1. Pull seat lock cover in direction indicated by the arrow as shown in the figure. Remove seat lock cover.

 : Metal clip

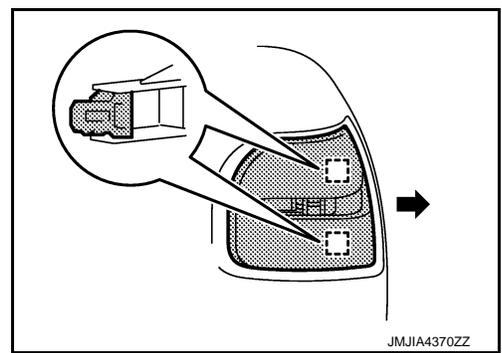


2. Pull tether cover in direction indicated by the arrow as shown in the figure. Remove tether cover.


 : Pawl

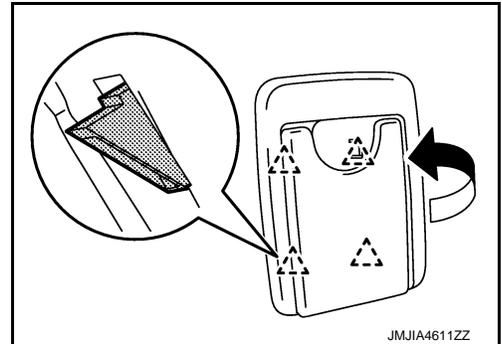

3. Open seatback fastener (A) and remove seatback retainer (B).

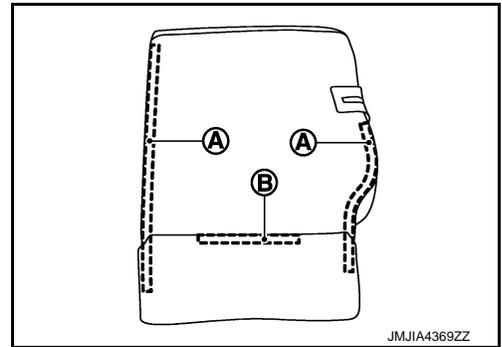

4. Slide and align the clips (B) to the holes on the seatback as shown in the figure, and then remove the seatback board (A).

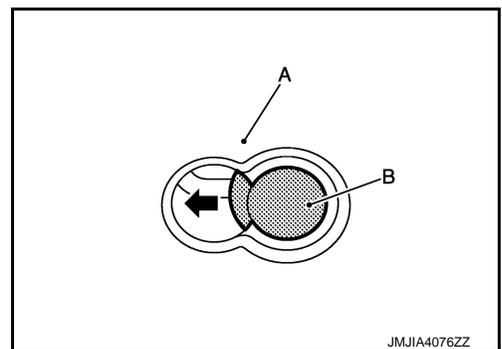

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

5. Use pincers, etc., to press up pawls as shown by the arrows in the figure, and remove headrest holder from seatback.


CAUTION:

Before installing headrest holder check its orientation. (front/rear and right/left)

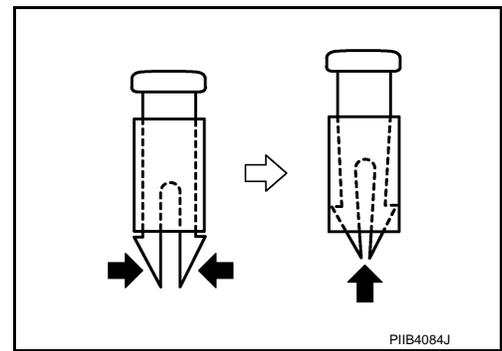

2. Remove seatback lock knob finisher.


1. Rotate seatback lock knob counterclockwise. Remove seatback lock knob.

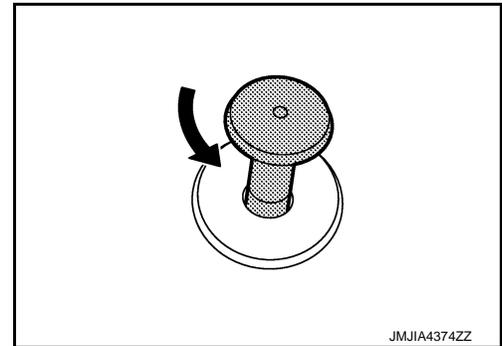

2. Push up seatback lock knob finisher while pressing pawls indicated by arrows as shown in the figure. Remove seatback lock finisher from seatback.

CAUTION:

When installing seatback lock knob finisher, check front and rear orientation and be careful to install it normally.

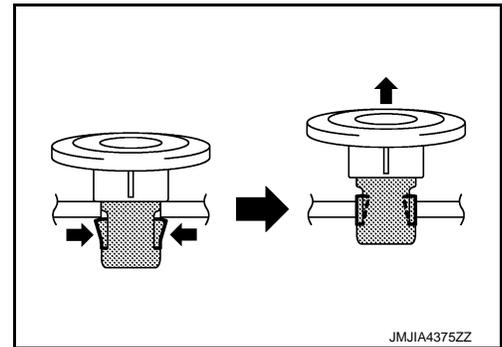

3. Remove seatback trim and seatback pad from seatback frame.
4. Remove hog rings, and separate the seatback trim and seatback pad.
CAUTION:
Before performing separating operation, check the installation position of hog rings.
5. Remove seatback silencer from seatback frame.
6. Remove seatback lock assembly mounting bolts, and then remove seatback lock assembly from seatback frame.

INSTALLATION

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

Always install the hog ring in position.

SEATBACK HINGE

SEATBACK HINGE : Removal and Installation

INFOID:000000006418494

CENTER HINGE

Removal

1. Remove seatback LH and RH from the vehicle.
Refer to [SE-43, "SEATBACK : Removal and Installation"](#).

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

2. Remove seat cushion from the vehicle.
Refer to [SE-42, "SEAT CUSHION : Removal and Installation"](#).
3. Remove center hinge mounting bolts, and then remove center hinge from the vehicle.

Installation


Note the following items, and install in the reverse order of removal.

CAUTION:

When installing center hinge, tighten mounting bolts to the specified torque according to the numerical order as shown in the figure

1. Temporarily tighten mounting bolt (1).
2. Tighten mounting bolts in numerical order (2 and 3 as shown in the figure) to the specified torque.
For the specified torque, refer to [SE-41, "Exploded View"](#).

← : Vehicle front

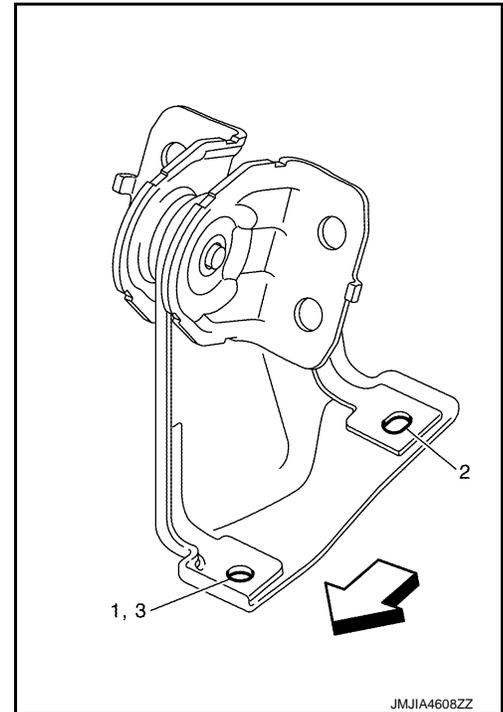

SIDE HINGE

Removal

1. Remove seatback from the vehicle.
Refer to [SE-43, "SEATBACK : Removal and Installation"](#).
2. Remove side hinge mounting bolt, and then remove side hinge from luggage side lower finisher.

Installation

Installation is the reverse order of removal. Tighten bolts to the specified torque.

For the specified torque, refer to [SE-41, "Exploded View"](#).

SEATBACK STRIKER

SEATBACK STRIKER : Removal and Installation

INFOID:000000006418495

REMOVAL

1. Remove seatback LH and RH from the vehicle.
Refer to [SE-43, "SEATBACK : Removal and Installation"](#).
2. Remove seat cushion from the vehicle.
Refer to [SE-42, "SEAT CUSHION : Removal and Installation"](#).
3. Remove side hinge from the vehicle.
Refer to [SE-48, "SEATBACK HINGE : Removal and Installation"](#).
4. Remove luggage side lower finisher from the vehicle.
Refer to [INT-31, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).
5. Remove outer anchor mounting anchor bolt, and then remove outer anchor.
6. Remove mounting bolts or nuts of striker, and then remove striker from the vehicle.

INSTALLATION

REAR SEAT (4WD)

< REMOVAL AND INSTALLATION >

Note the following items, and install in the reverse order of removal.


CAUTION:

When installing striker, tighten mounting bolts or nuts to the specified torque according to the numerical order as shown in the figure.

1. Temporarily tighten mounting bolts in numerical order (1 and 2 as shown in the figure).
2. Tighten mounting bolts or nuts to the specified torque in numerical order (3, 4, and 5 as shown in the figure).

For the specified torque, refer to [SE-41. "Exploded View"](#).

← : Vehicle front

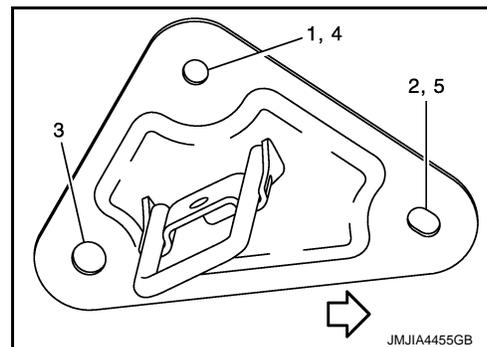


HEATED SEAT SWITCH

< REMOVAL AND INSTALLATION >

HEATED SEAT SWITCH

Exploded View

INFOID:000000006610146

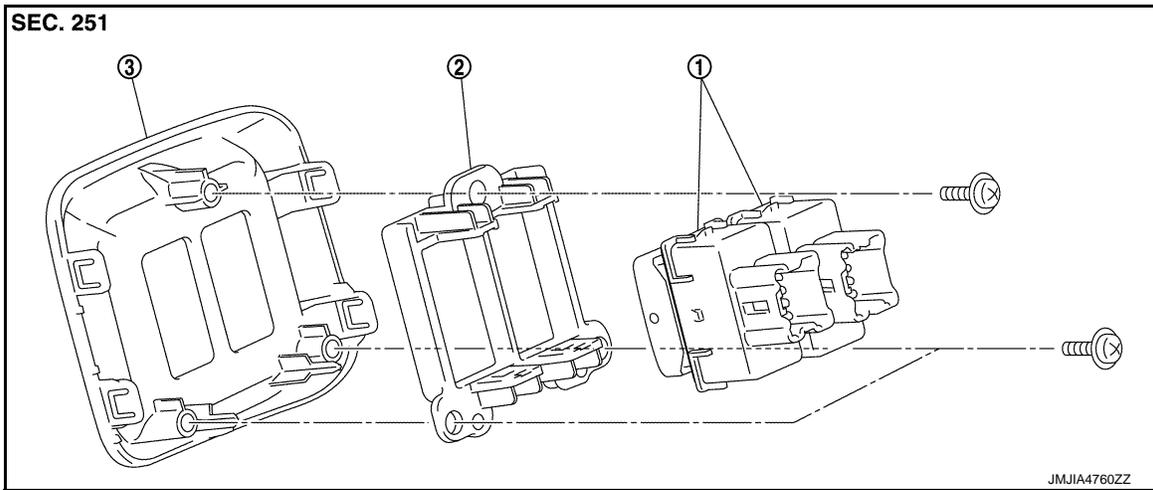

1. Heated seat switch
2. Switch bracket
3. Console switch finisher

Removal and Installation

INFOID:000000006610146

REMOVAL


CAUTION:

When removing and installing, use shop cloths to protect from damage.

1. Remove the console switch finisher. Refer to [IP-23, "Removal and Installation"](#).
2. Remove mounting screws and remove switch bracket (1) from console switch finisher.
3. Remove heated seat switch RH (2) and heated seat switch LH (3) from switch bracket (1) using flat-bladed screwdriver (A).



: Pawl

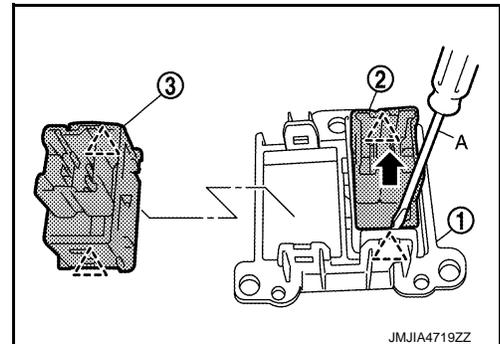

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P