
TP.MT5510S.PB756
Trouble Shooting


◎ Power troubleshooting
◎ Display troubleshooting
◎ Audio troubleshooting
◎ Function troubleshooting

TV Author: Tiegen Cai PS Author:Wu zhong hong Checked By:


1. Power System Block

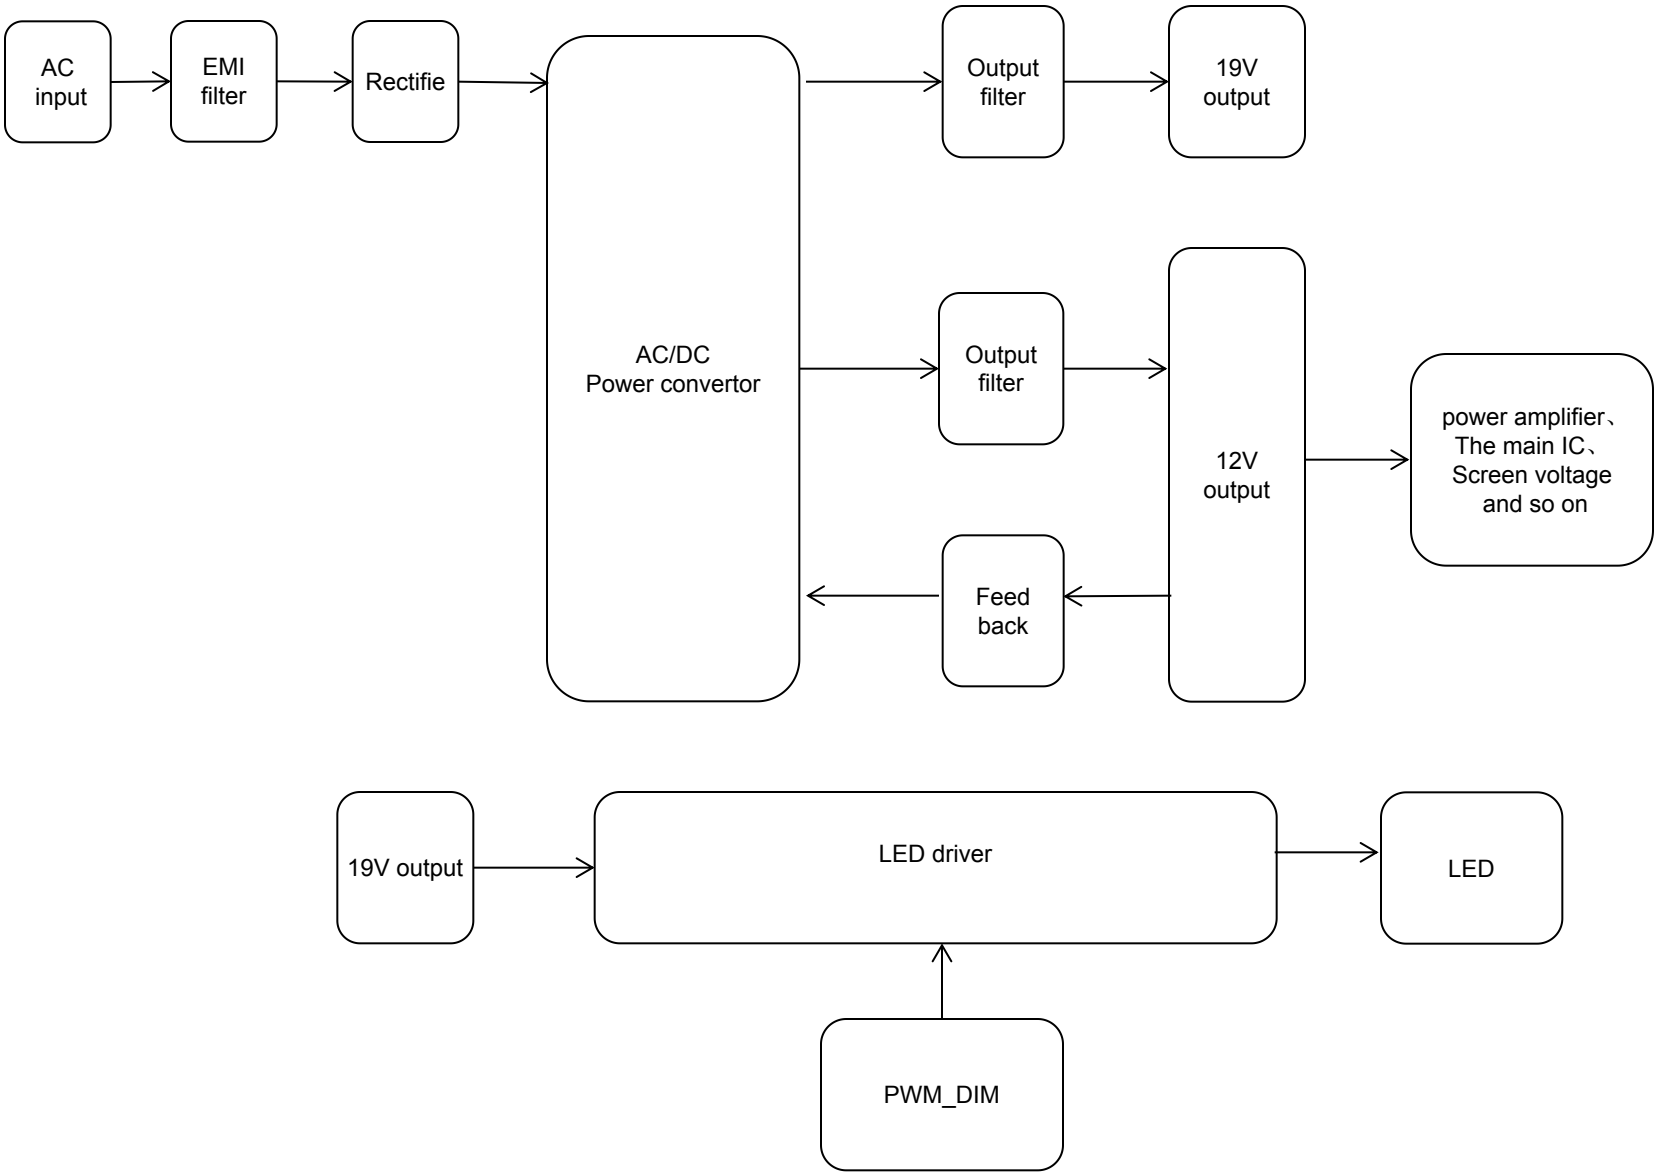


2.Power Supply Trouble 1

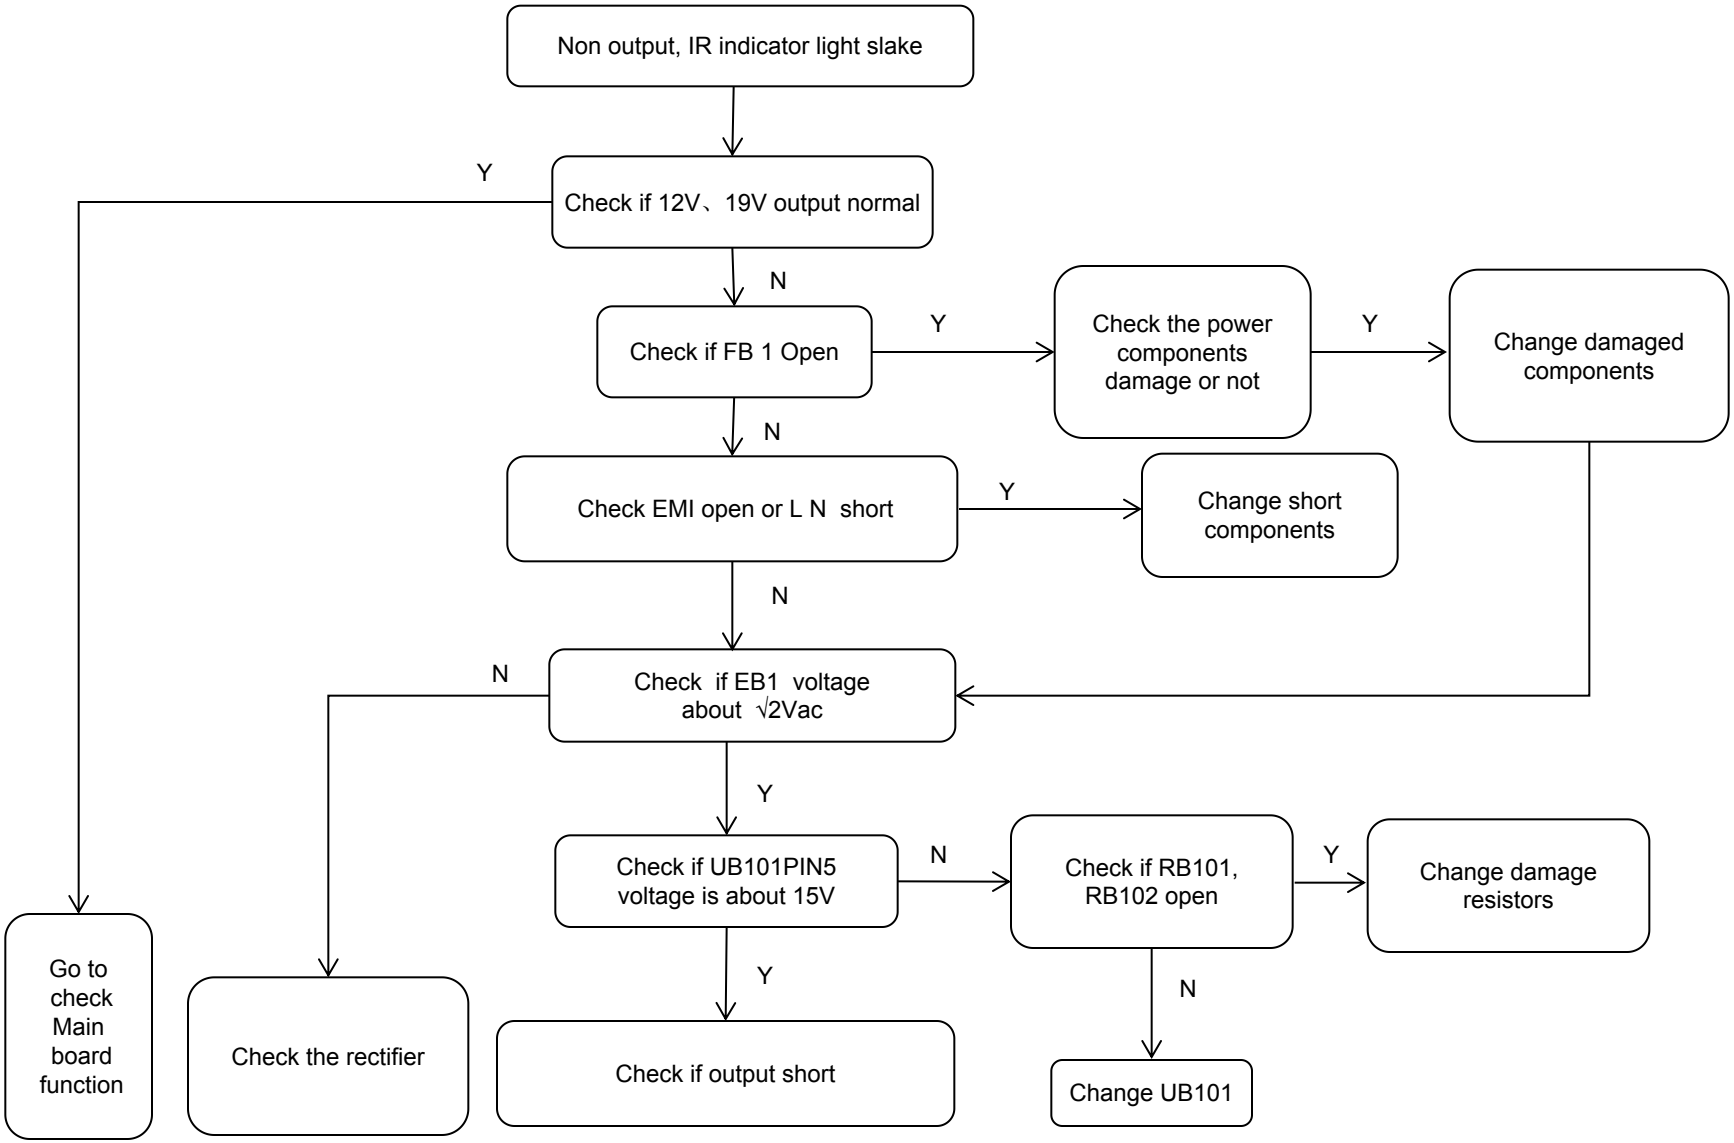


3.Power supply for LED drive

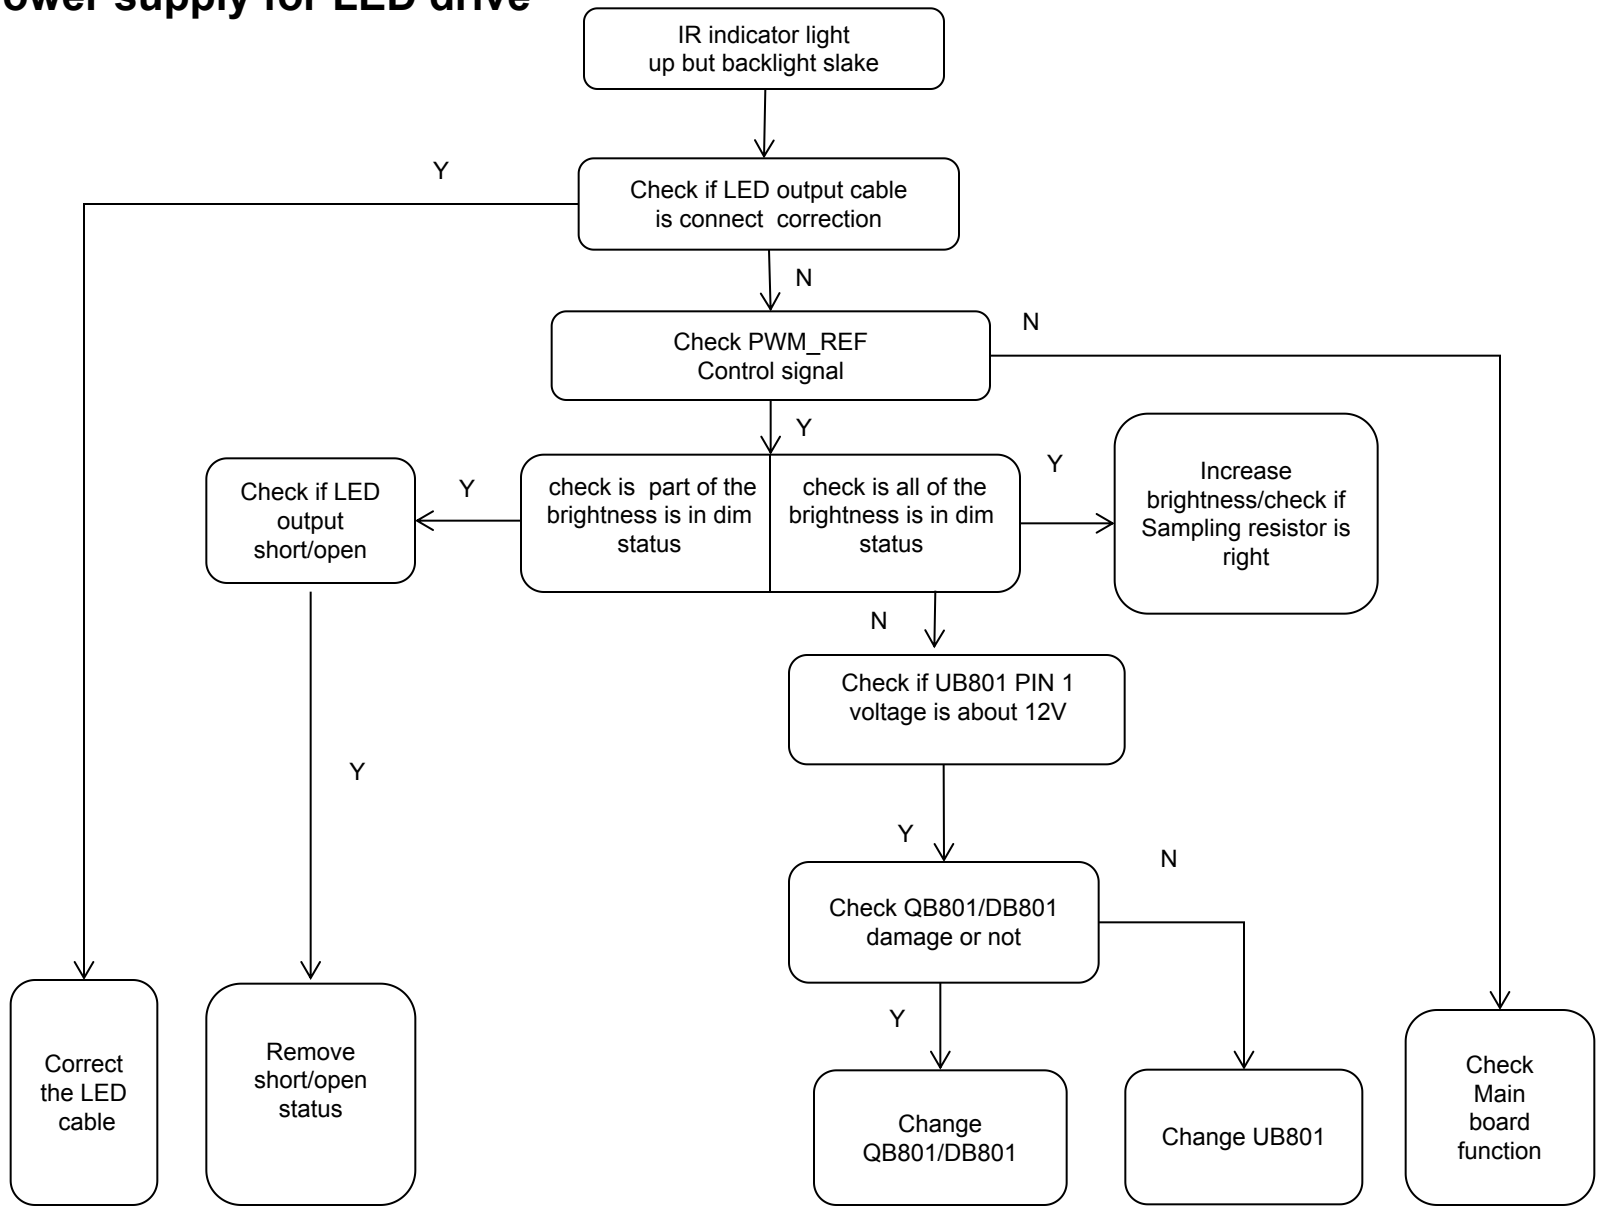


4. Power Troubleshooting

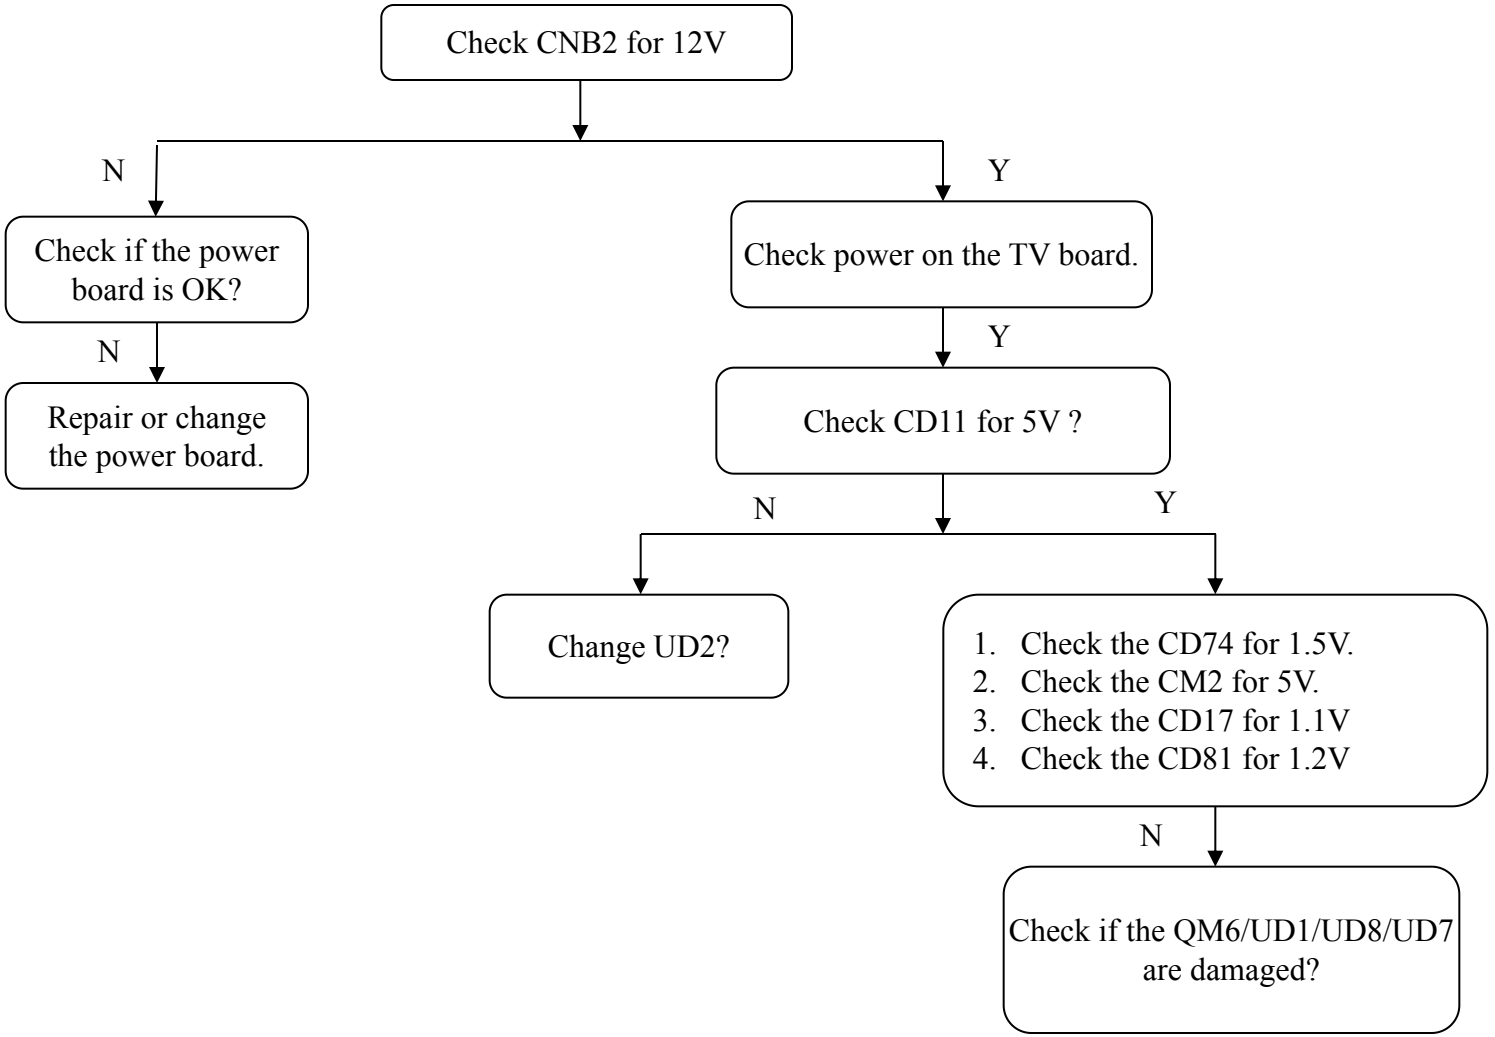


5. Display Troubleshooting (blank screen or show nothing)

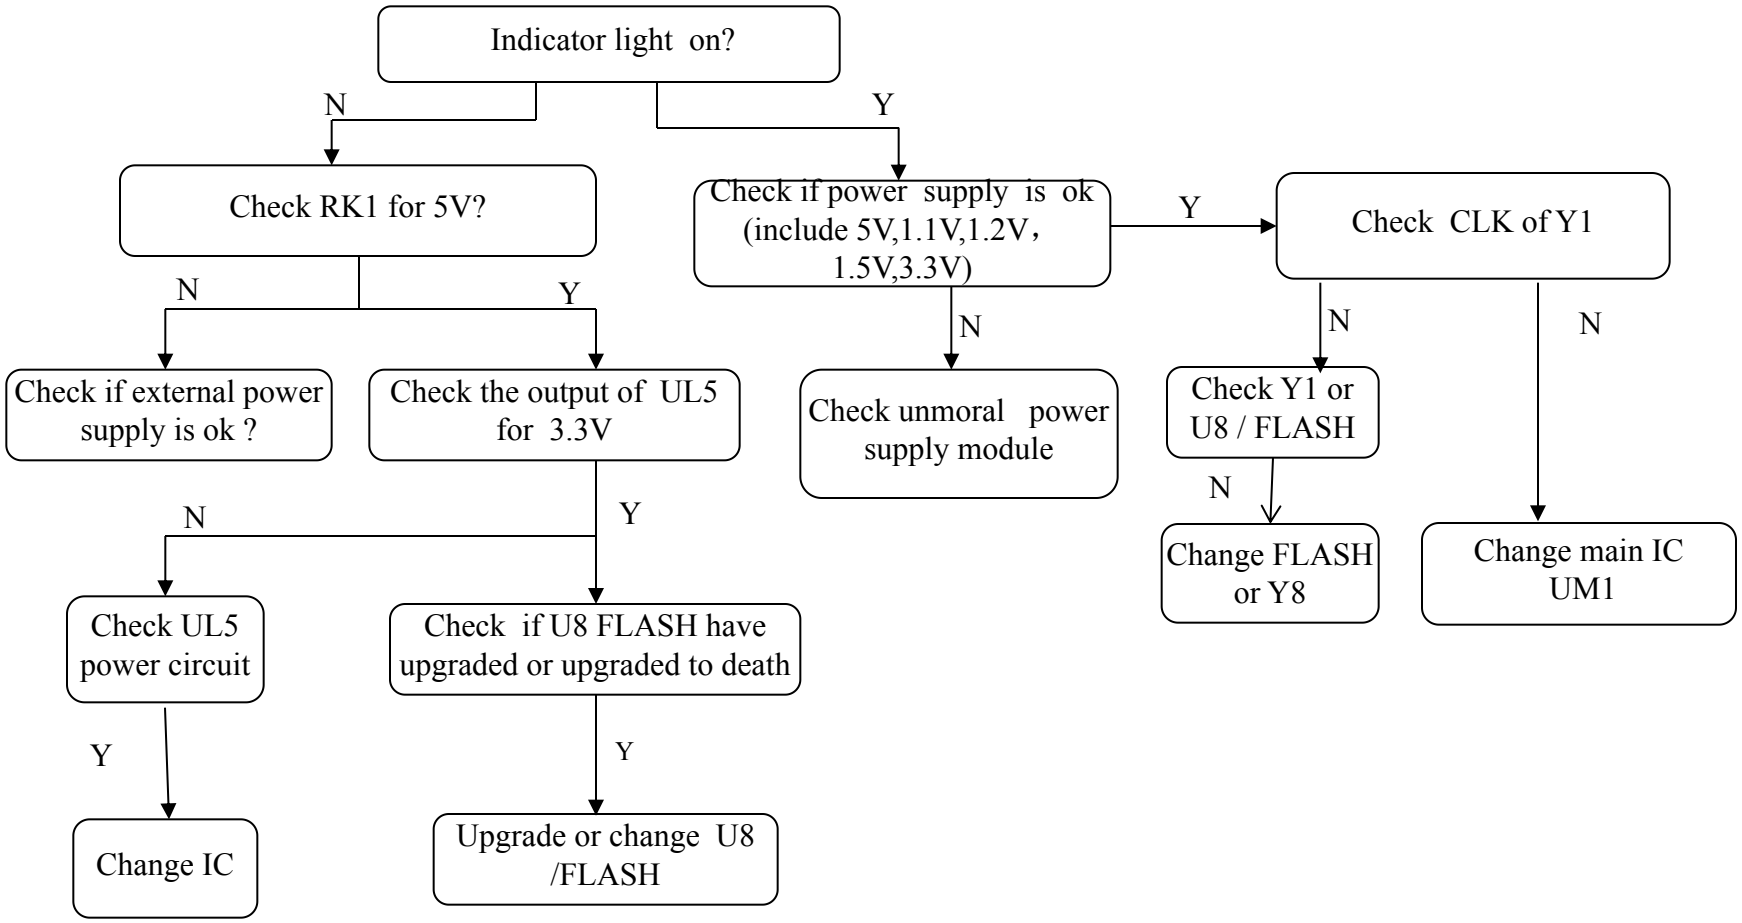


6. Display Troubleshooting (white screen)

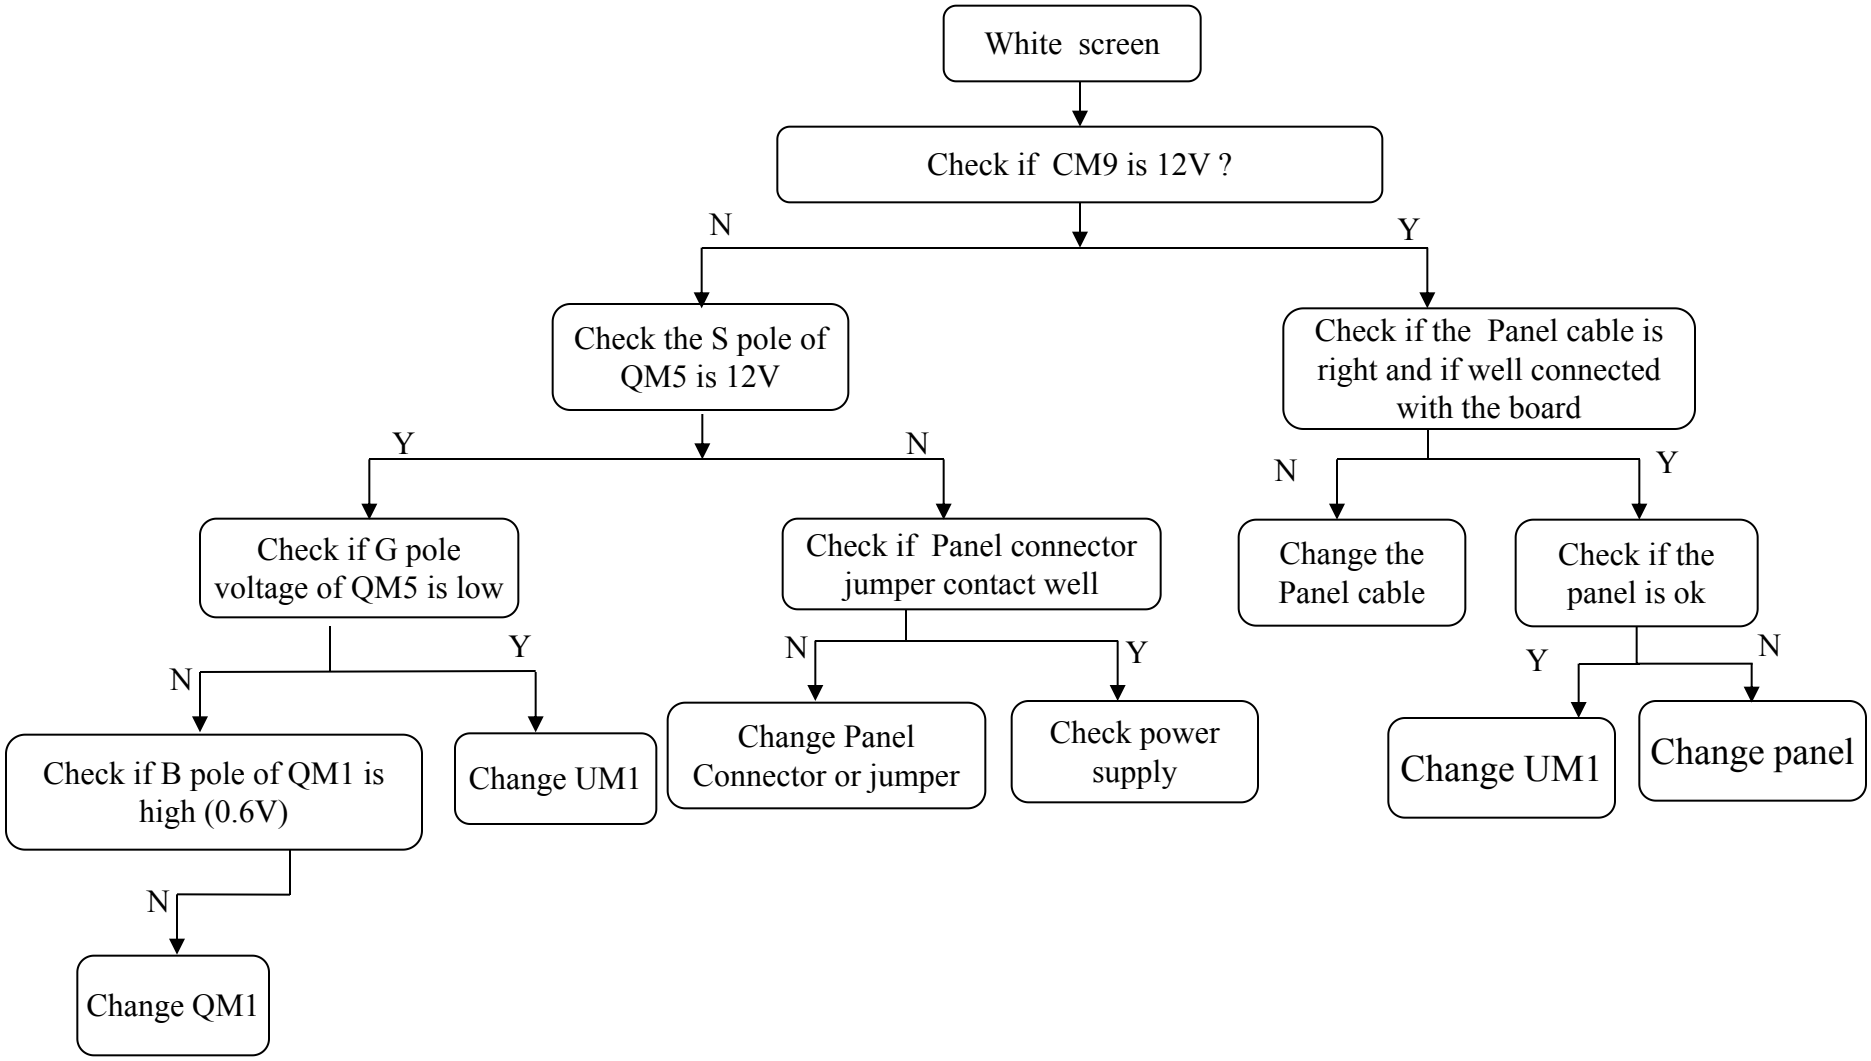


7. Display Troubleshooting (picture badness)

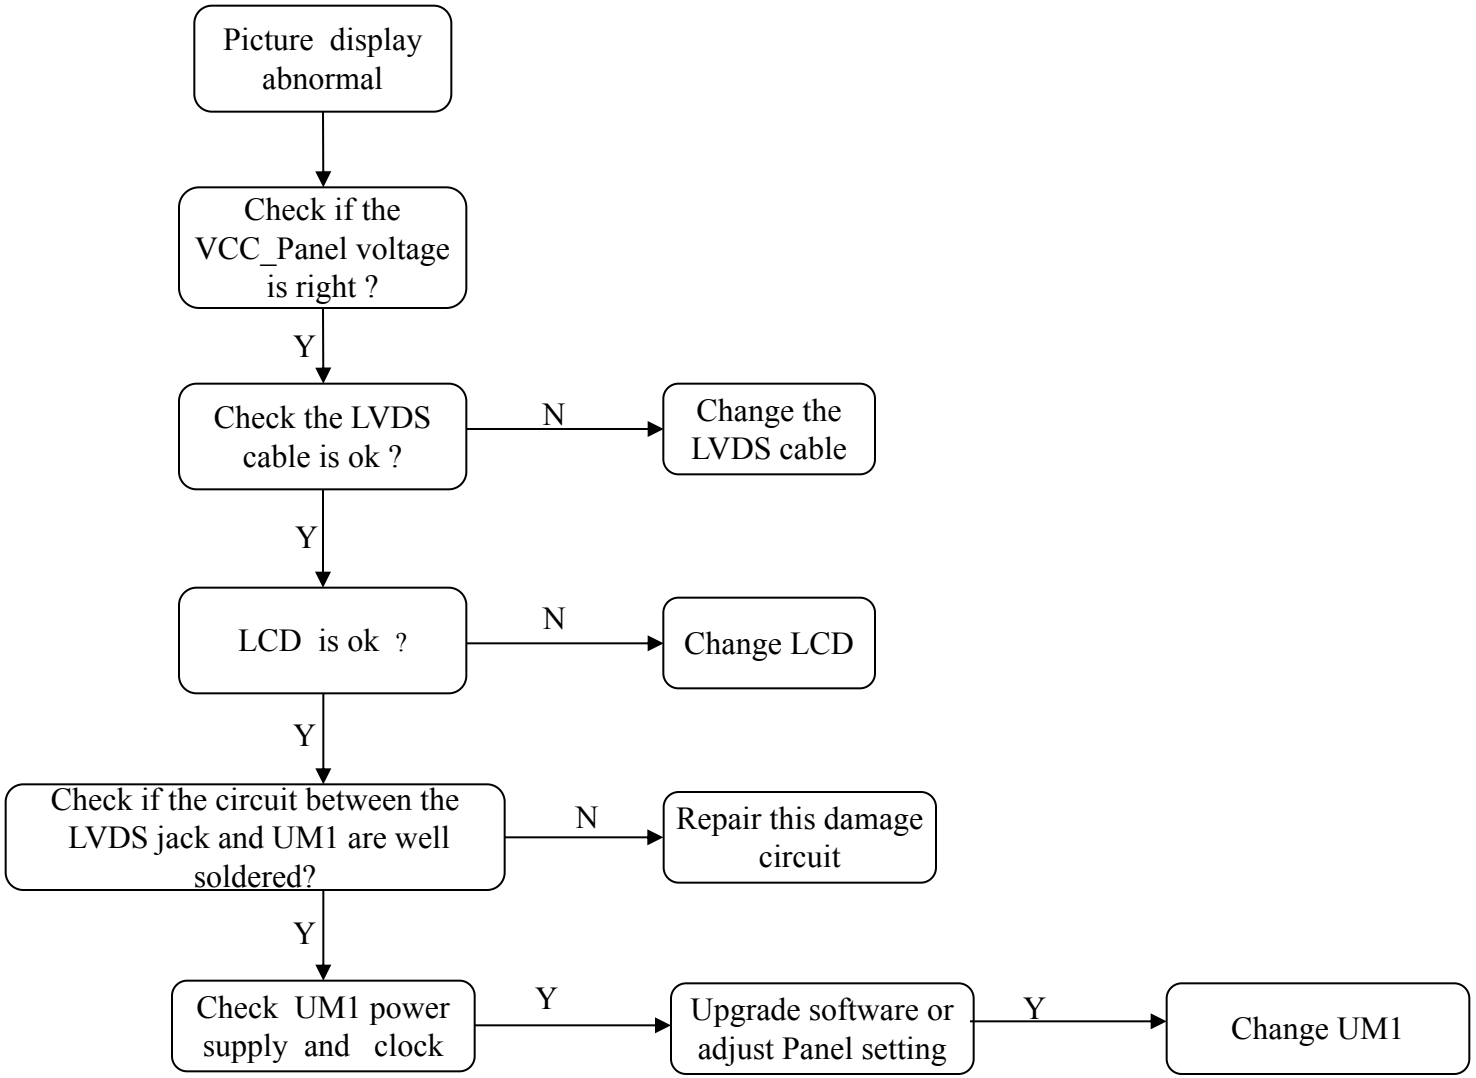


8. Audio Troubleshooting (no sound)

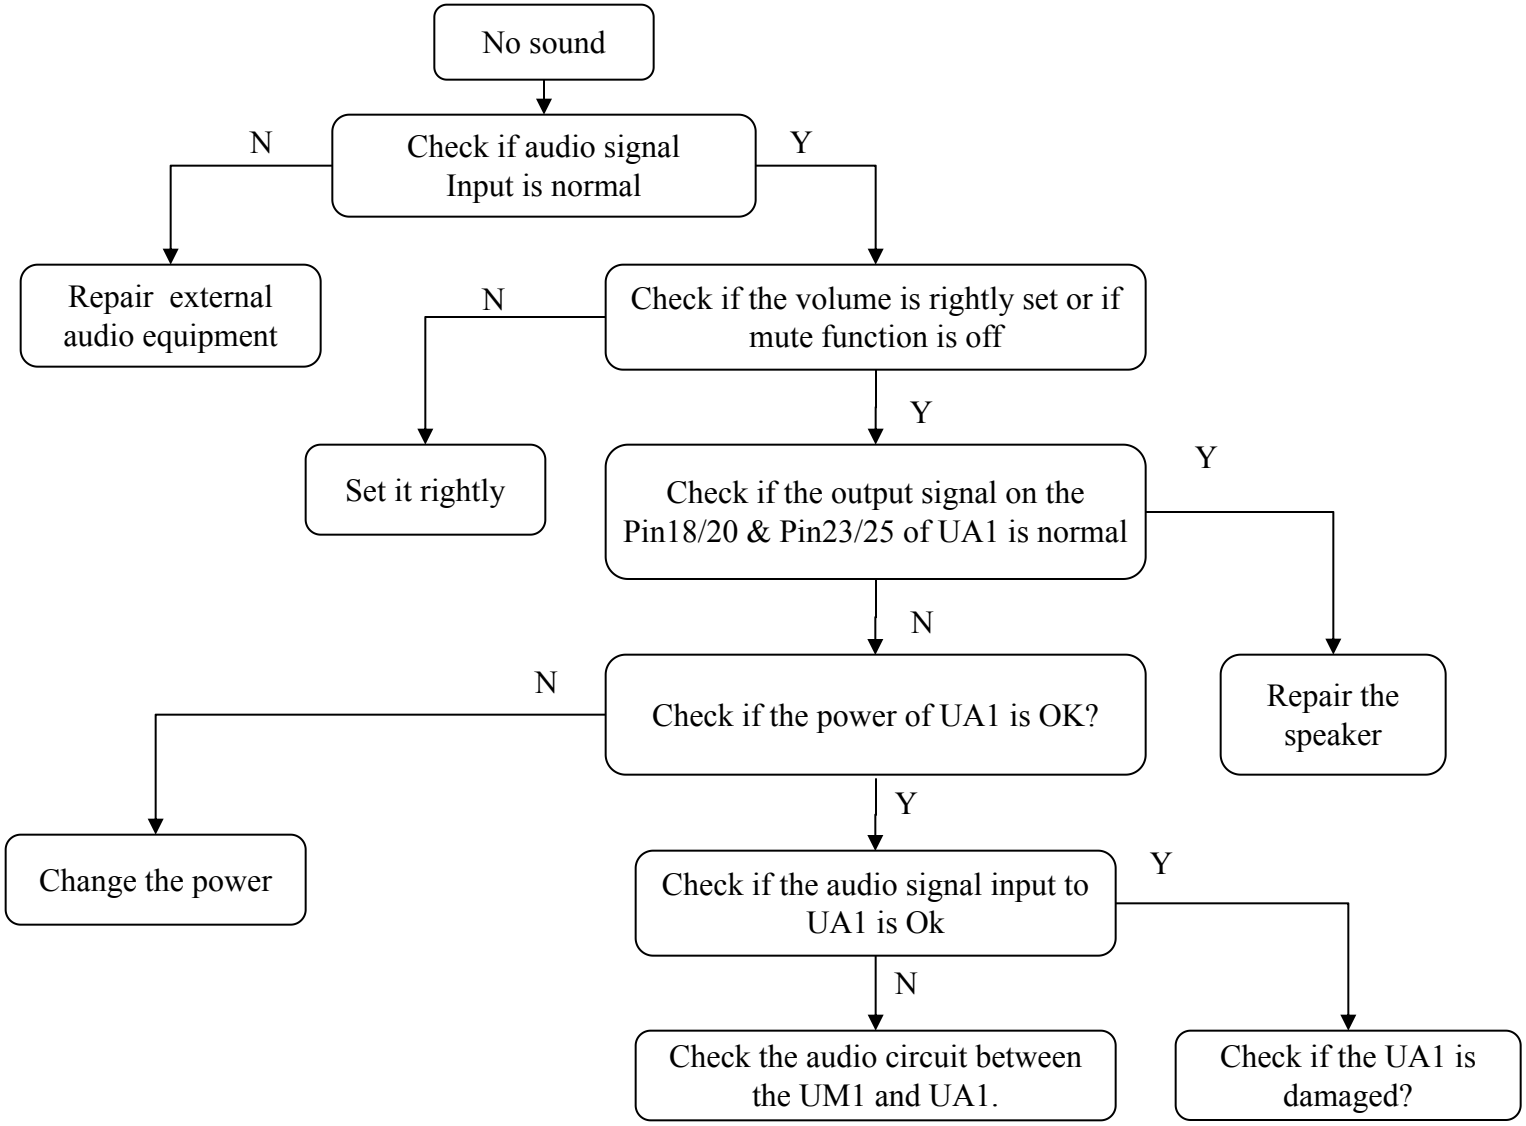


9. Function Troubleshooting (TV fault)

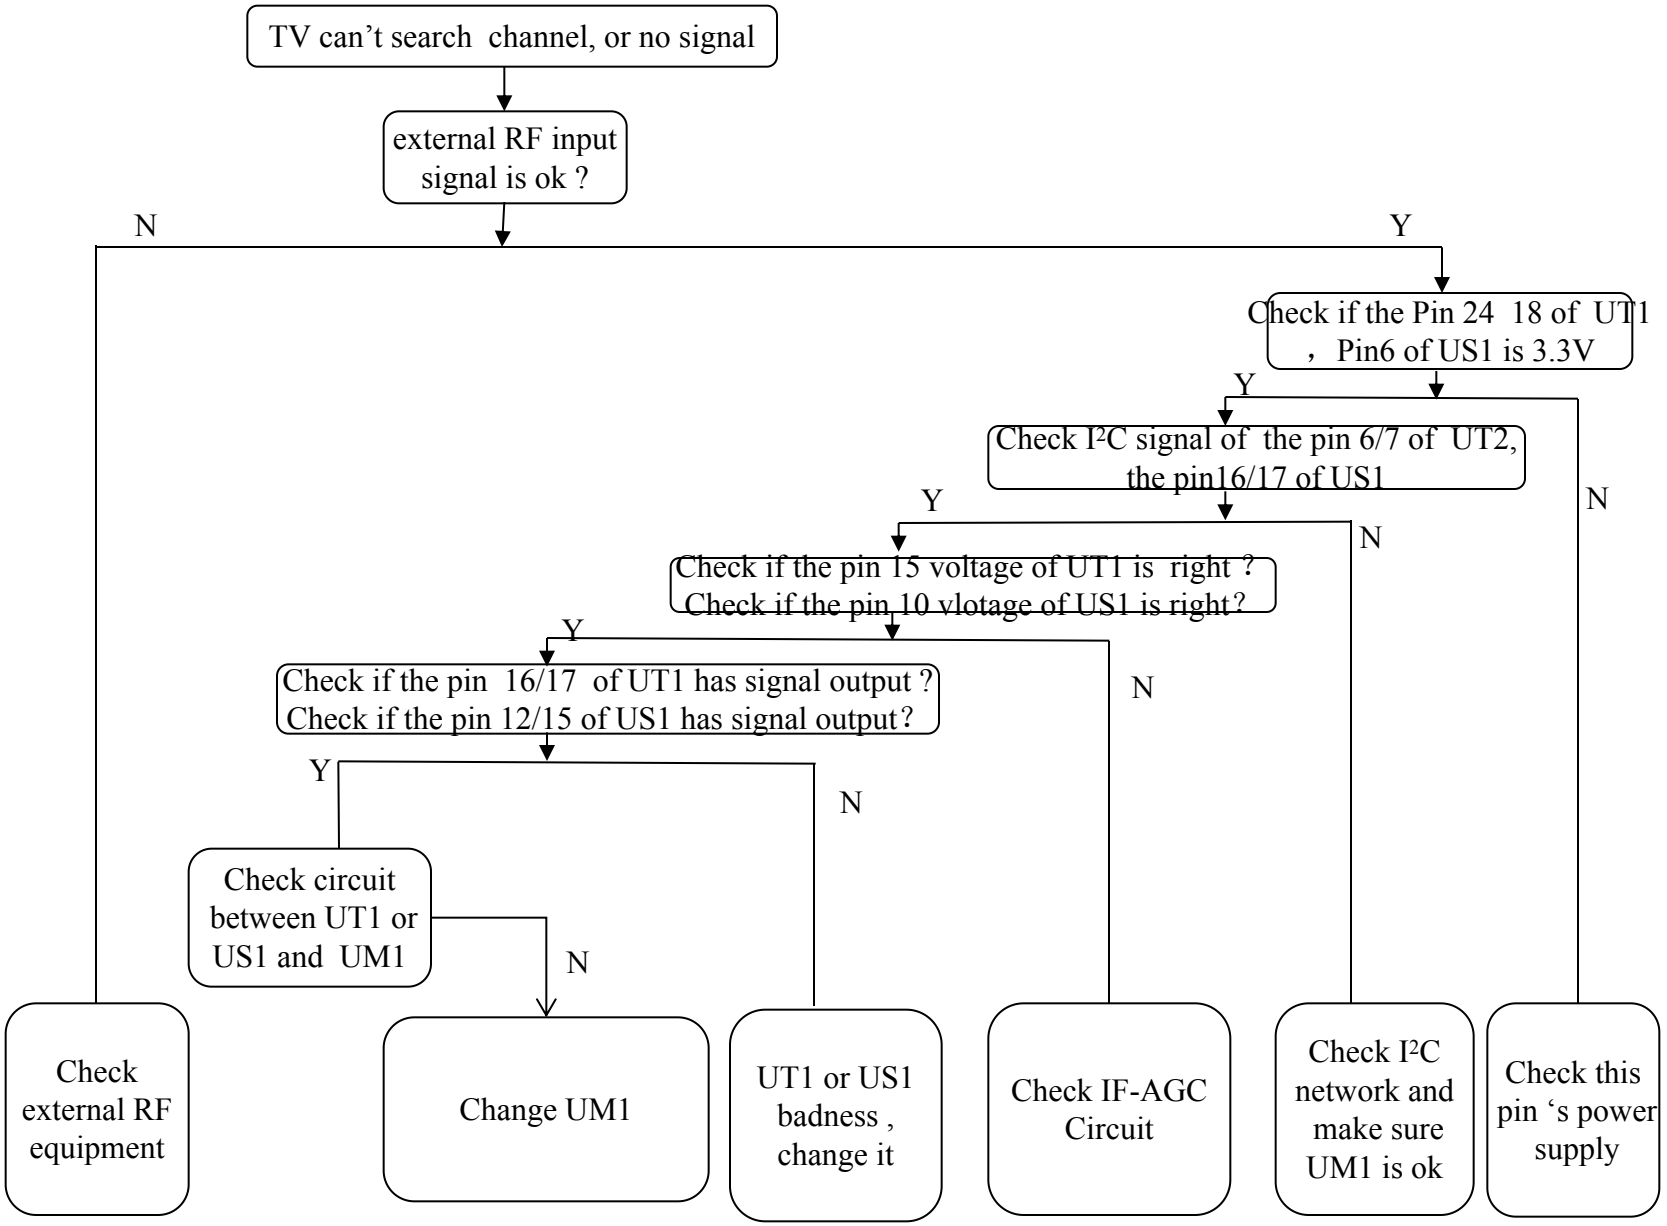


10. Function Troubleshooting (HDMI no sound)

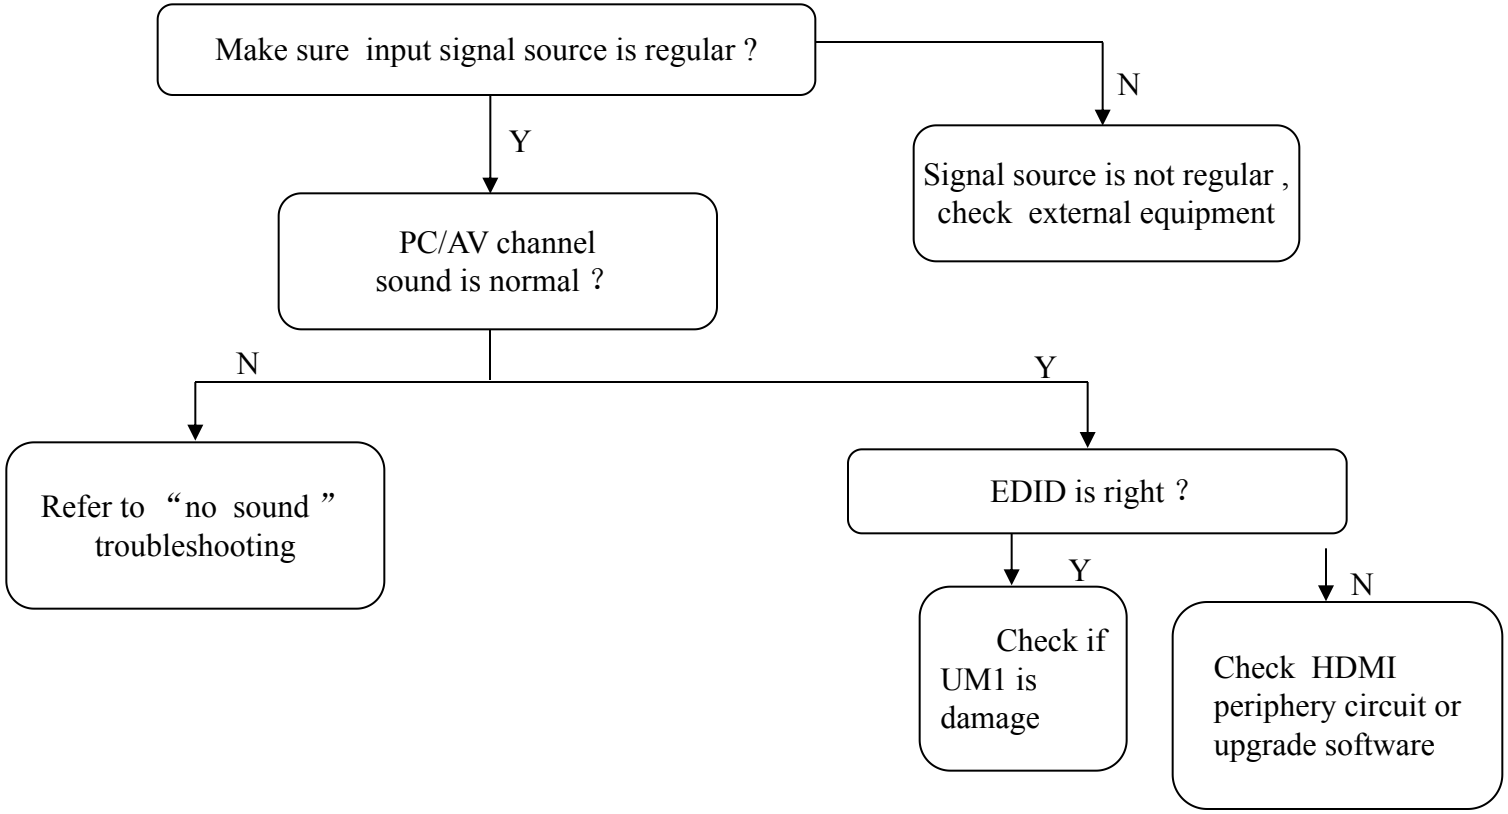


11. Function Troubleshooting (HDMI no picture)

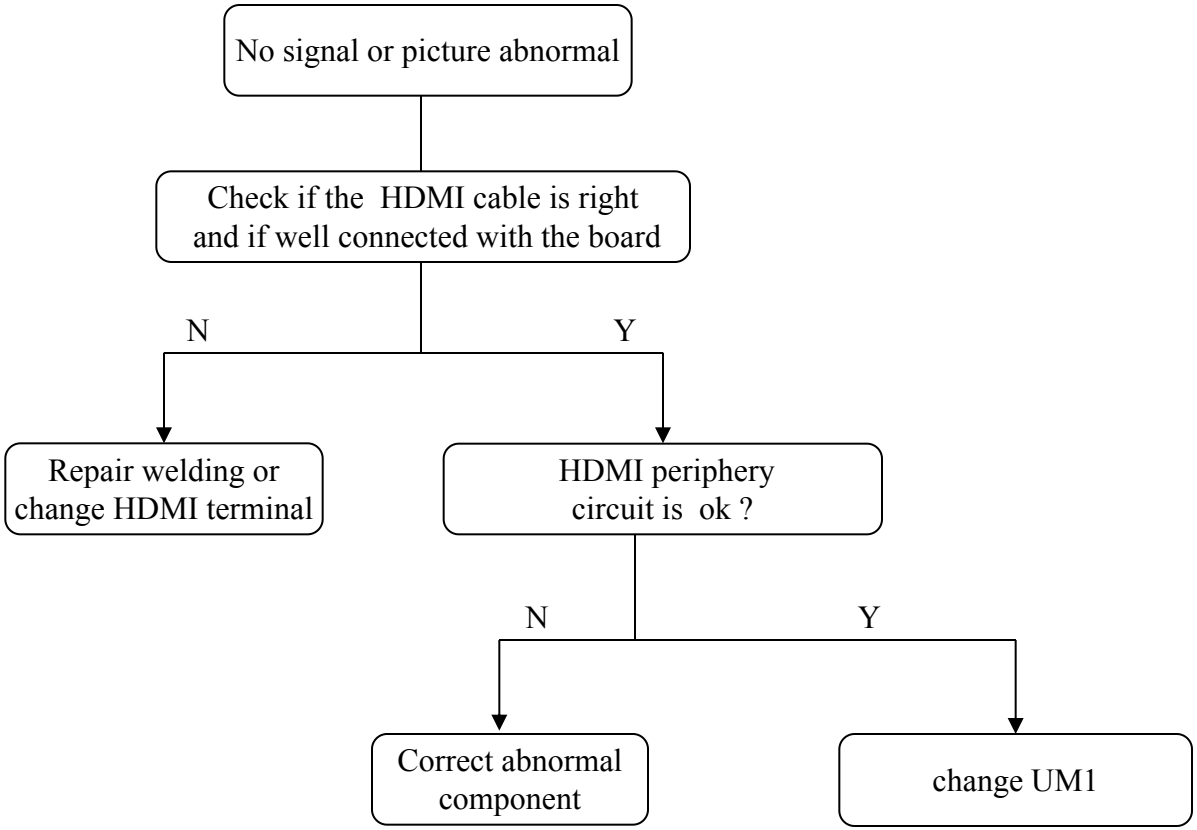

12. Function Troubleshooting (VGA no single)

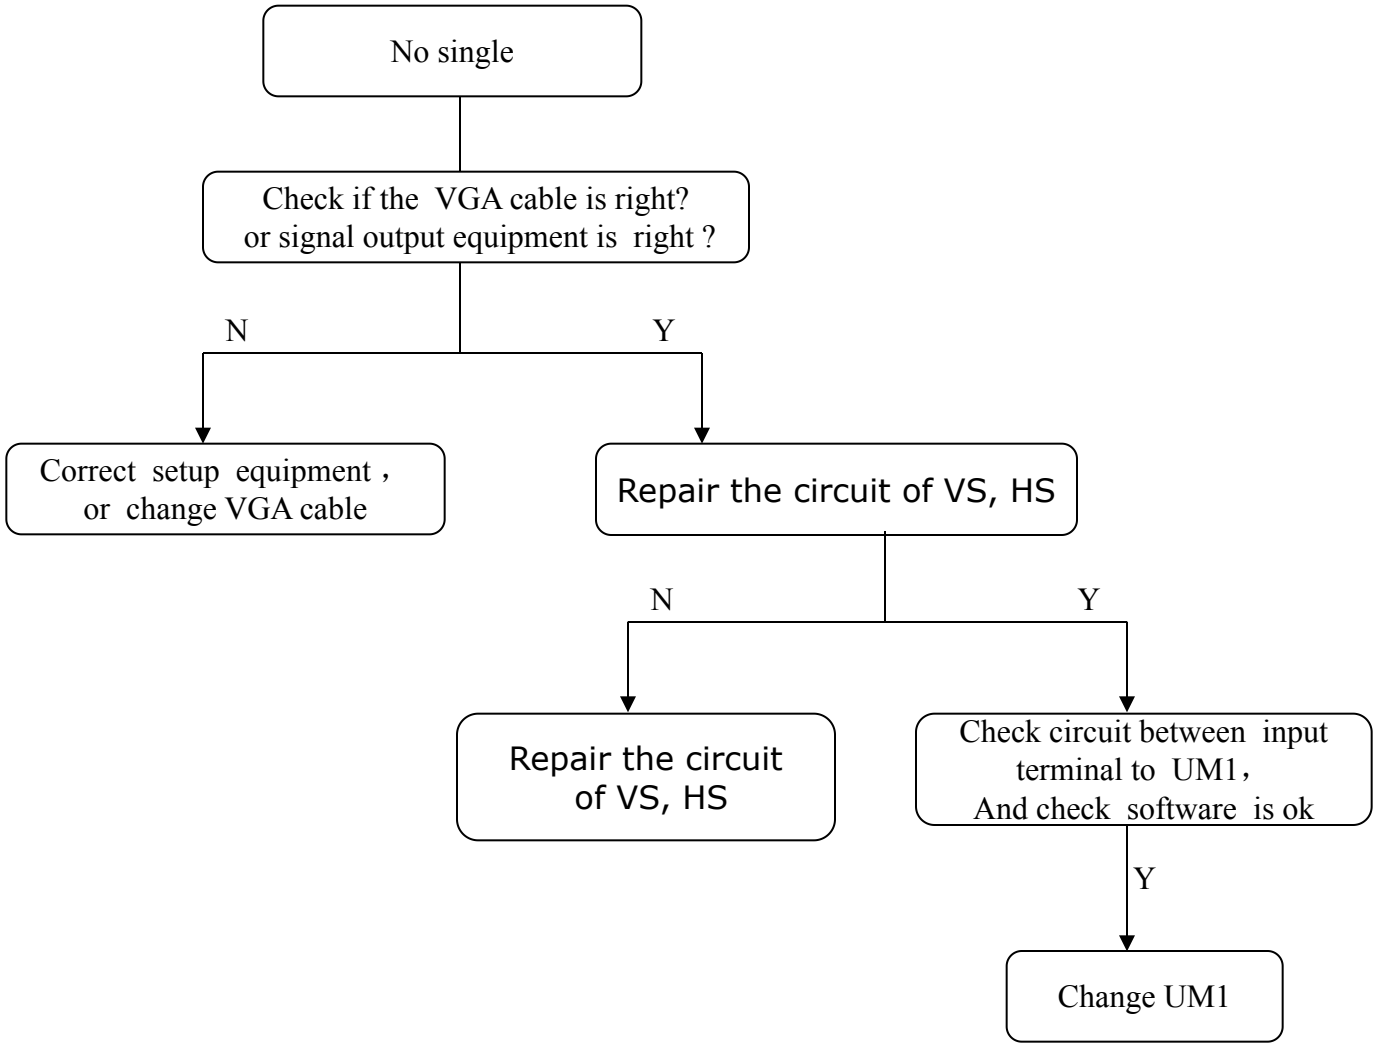

13. Function Troubleshooting (YPBPR or CVBS no signal)

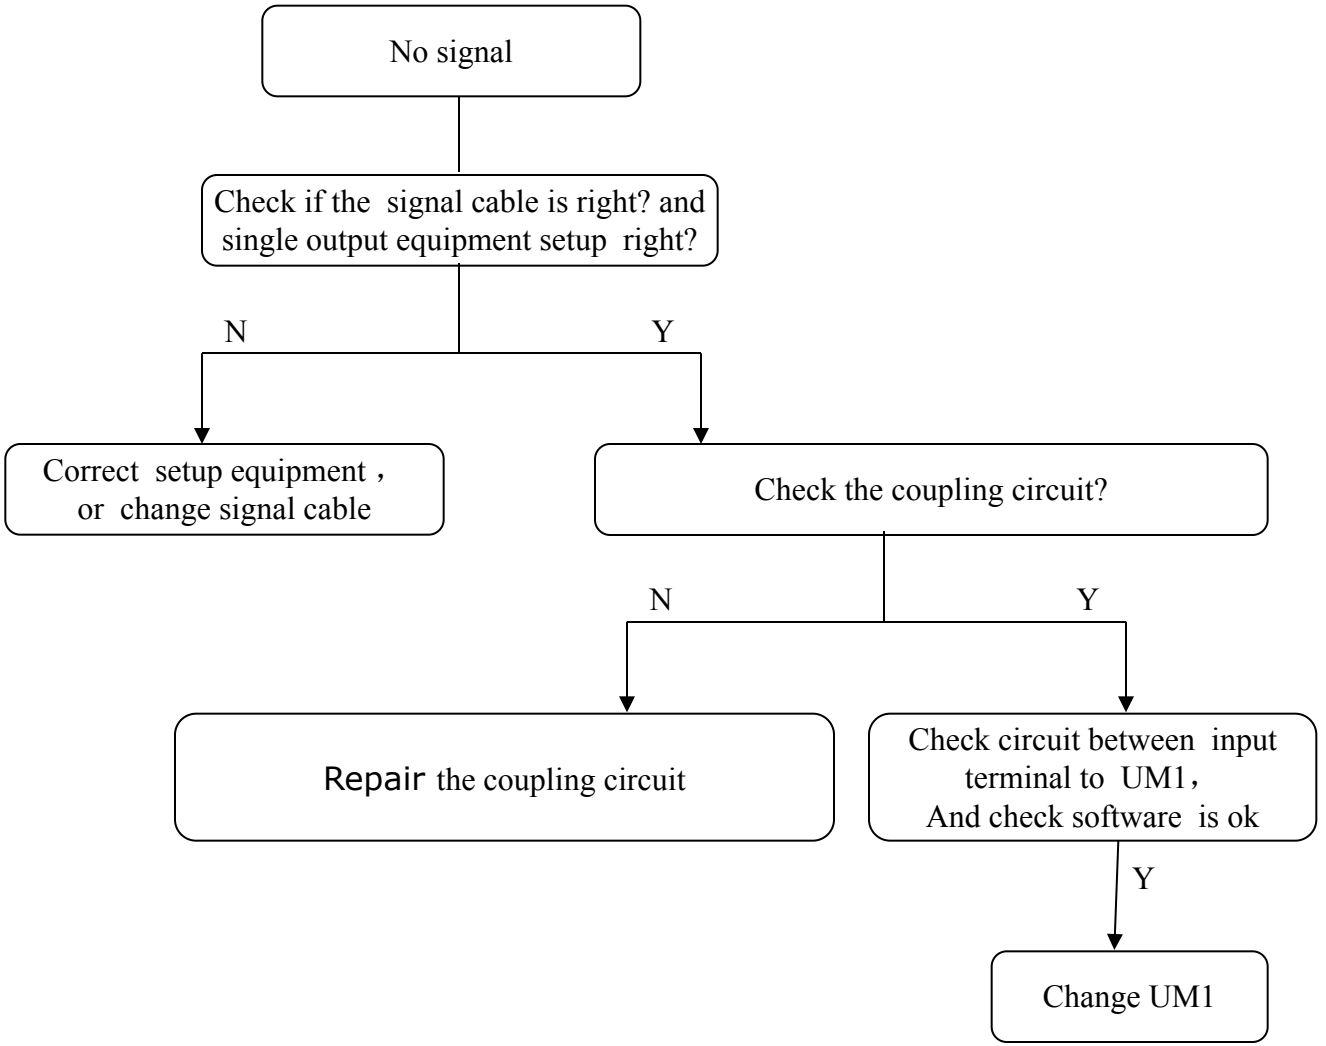

14. Function Troubleshooting (other)

