


ALTERNATE CIRCUIT USED  
IN CANADIAN MODELS ONLY

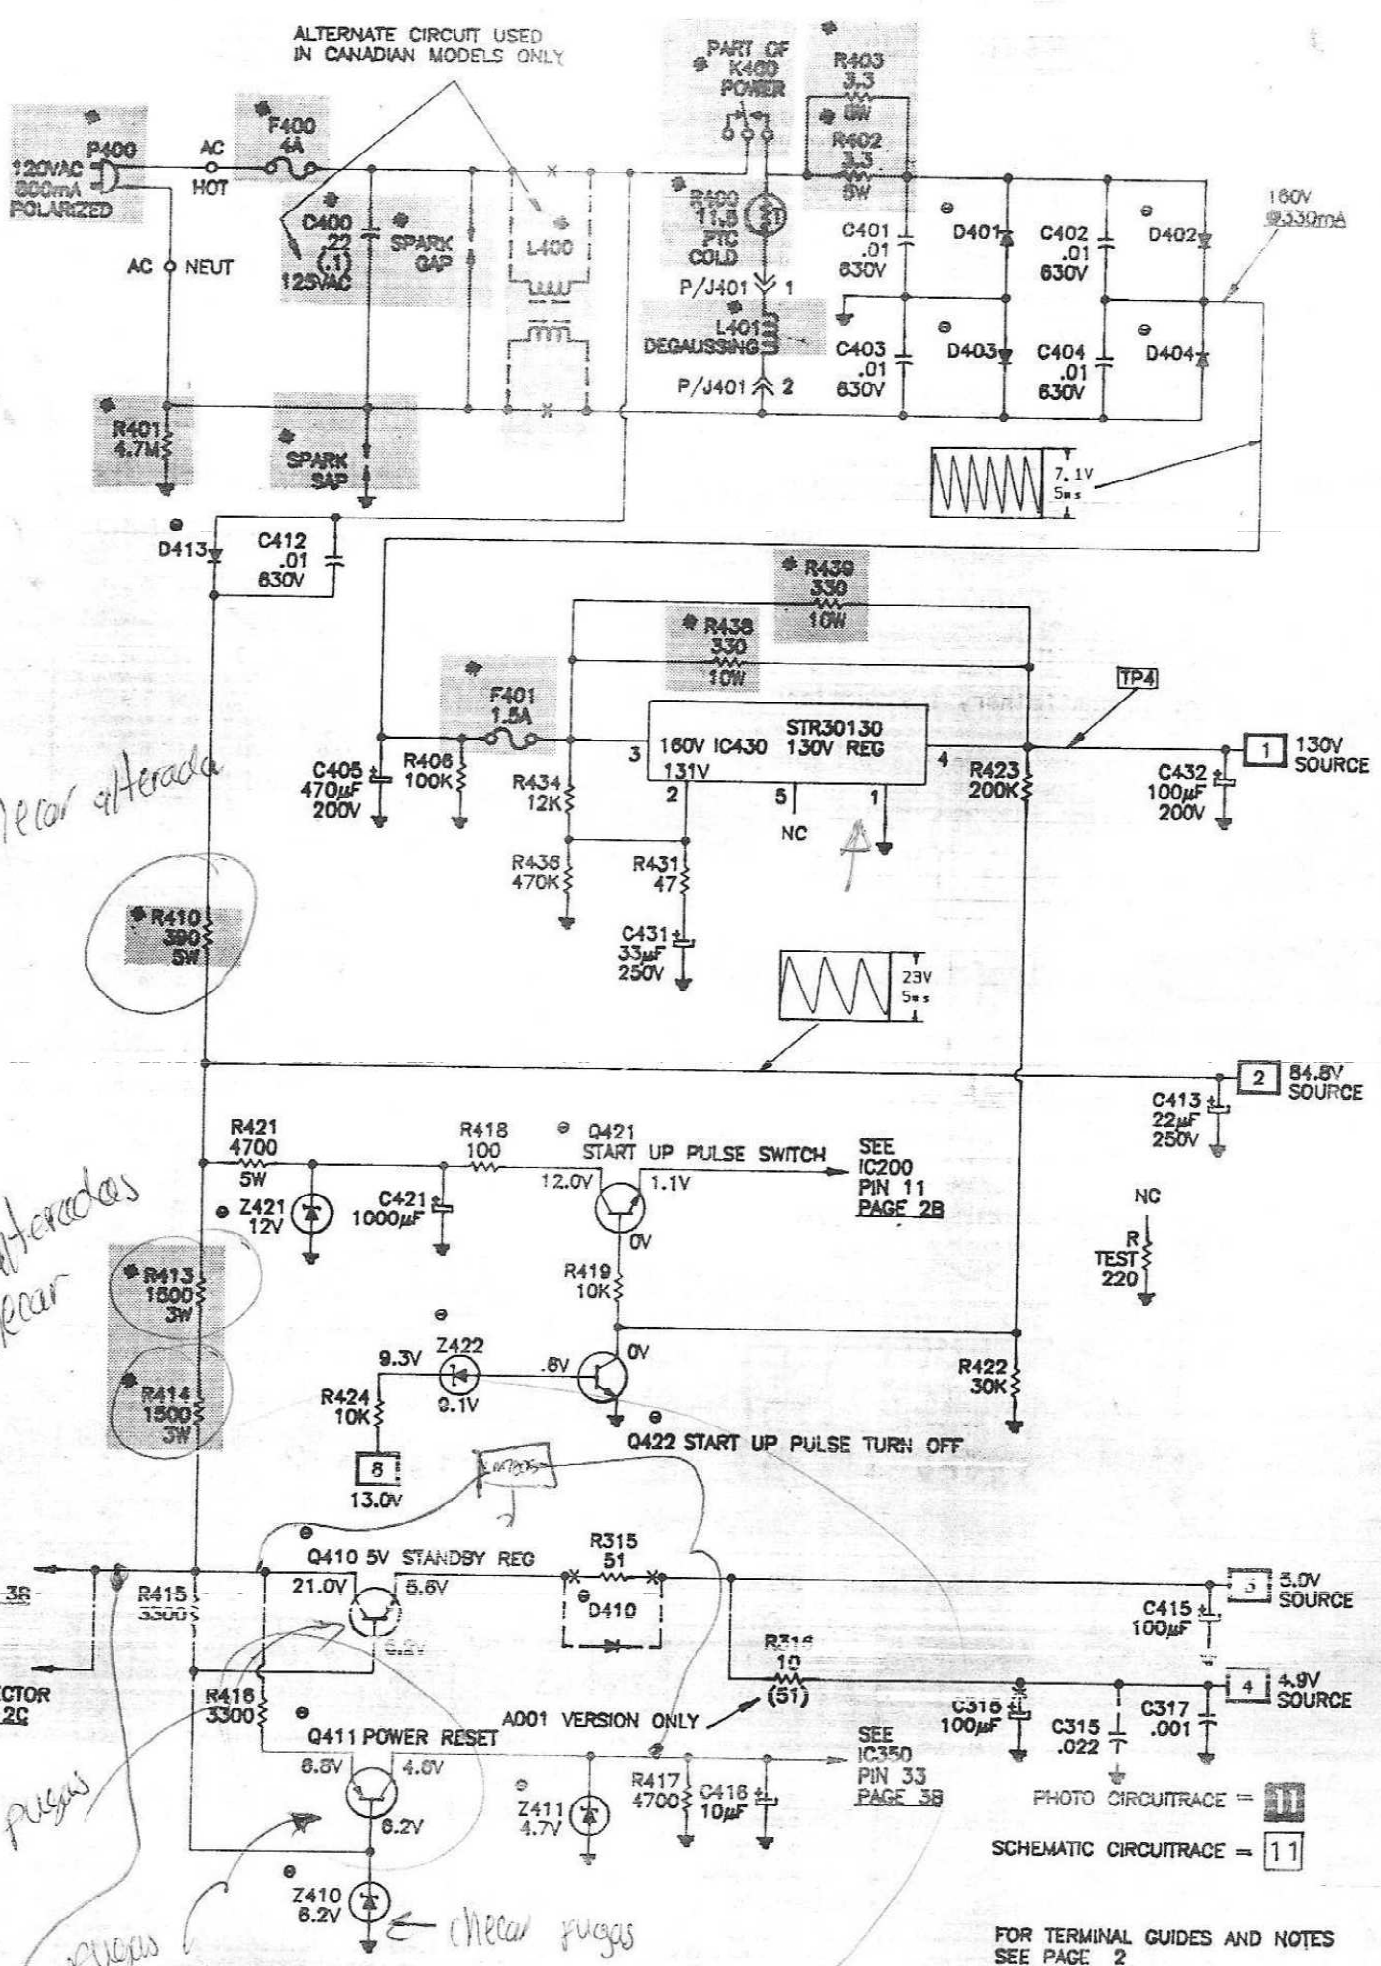

FOR TERMINAL GUIDES AND NOTES  
SEE PAGE 2

A PHOTOFACIT STANDARD NOTATION SCHEMATIC  
WITH **GROUNDPLANE**

© Howard W. Sams & Co. 1990


POWER SUPPLY

E

Page 2

El Voltaje se cae en (debe ser 0.4V)  
habia 7V en Q410 ahora habe mas  
se meco Q30 y Q531 y donado

ANTENNA  
LATOR


 TO  
RF  
INPUT  
UHF/VHF  
TUNER

VHF  
R  
NOR

VHF

MF  
3

MF


MF


HF

### OFAC STANDARD NOTATION SCHEMATIC

WITH CIRCUITRACE™

© Howard W. Sams & Co. 1990

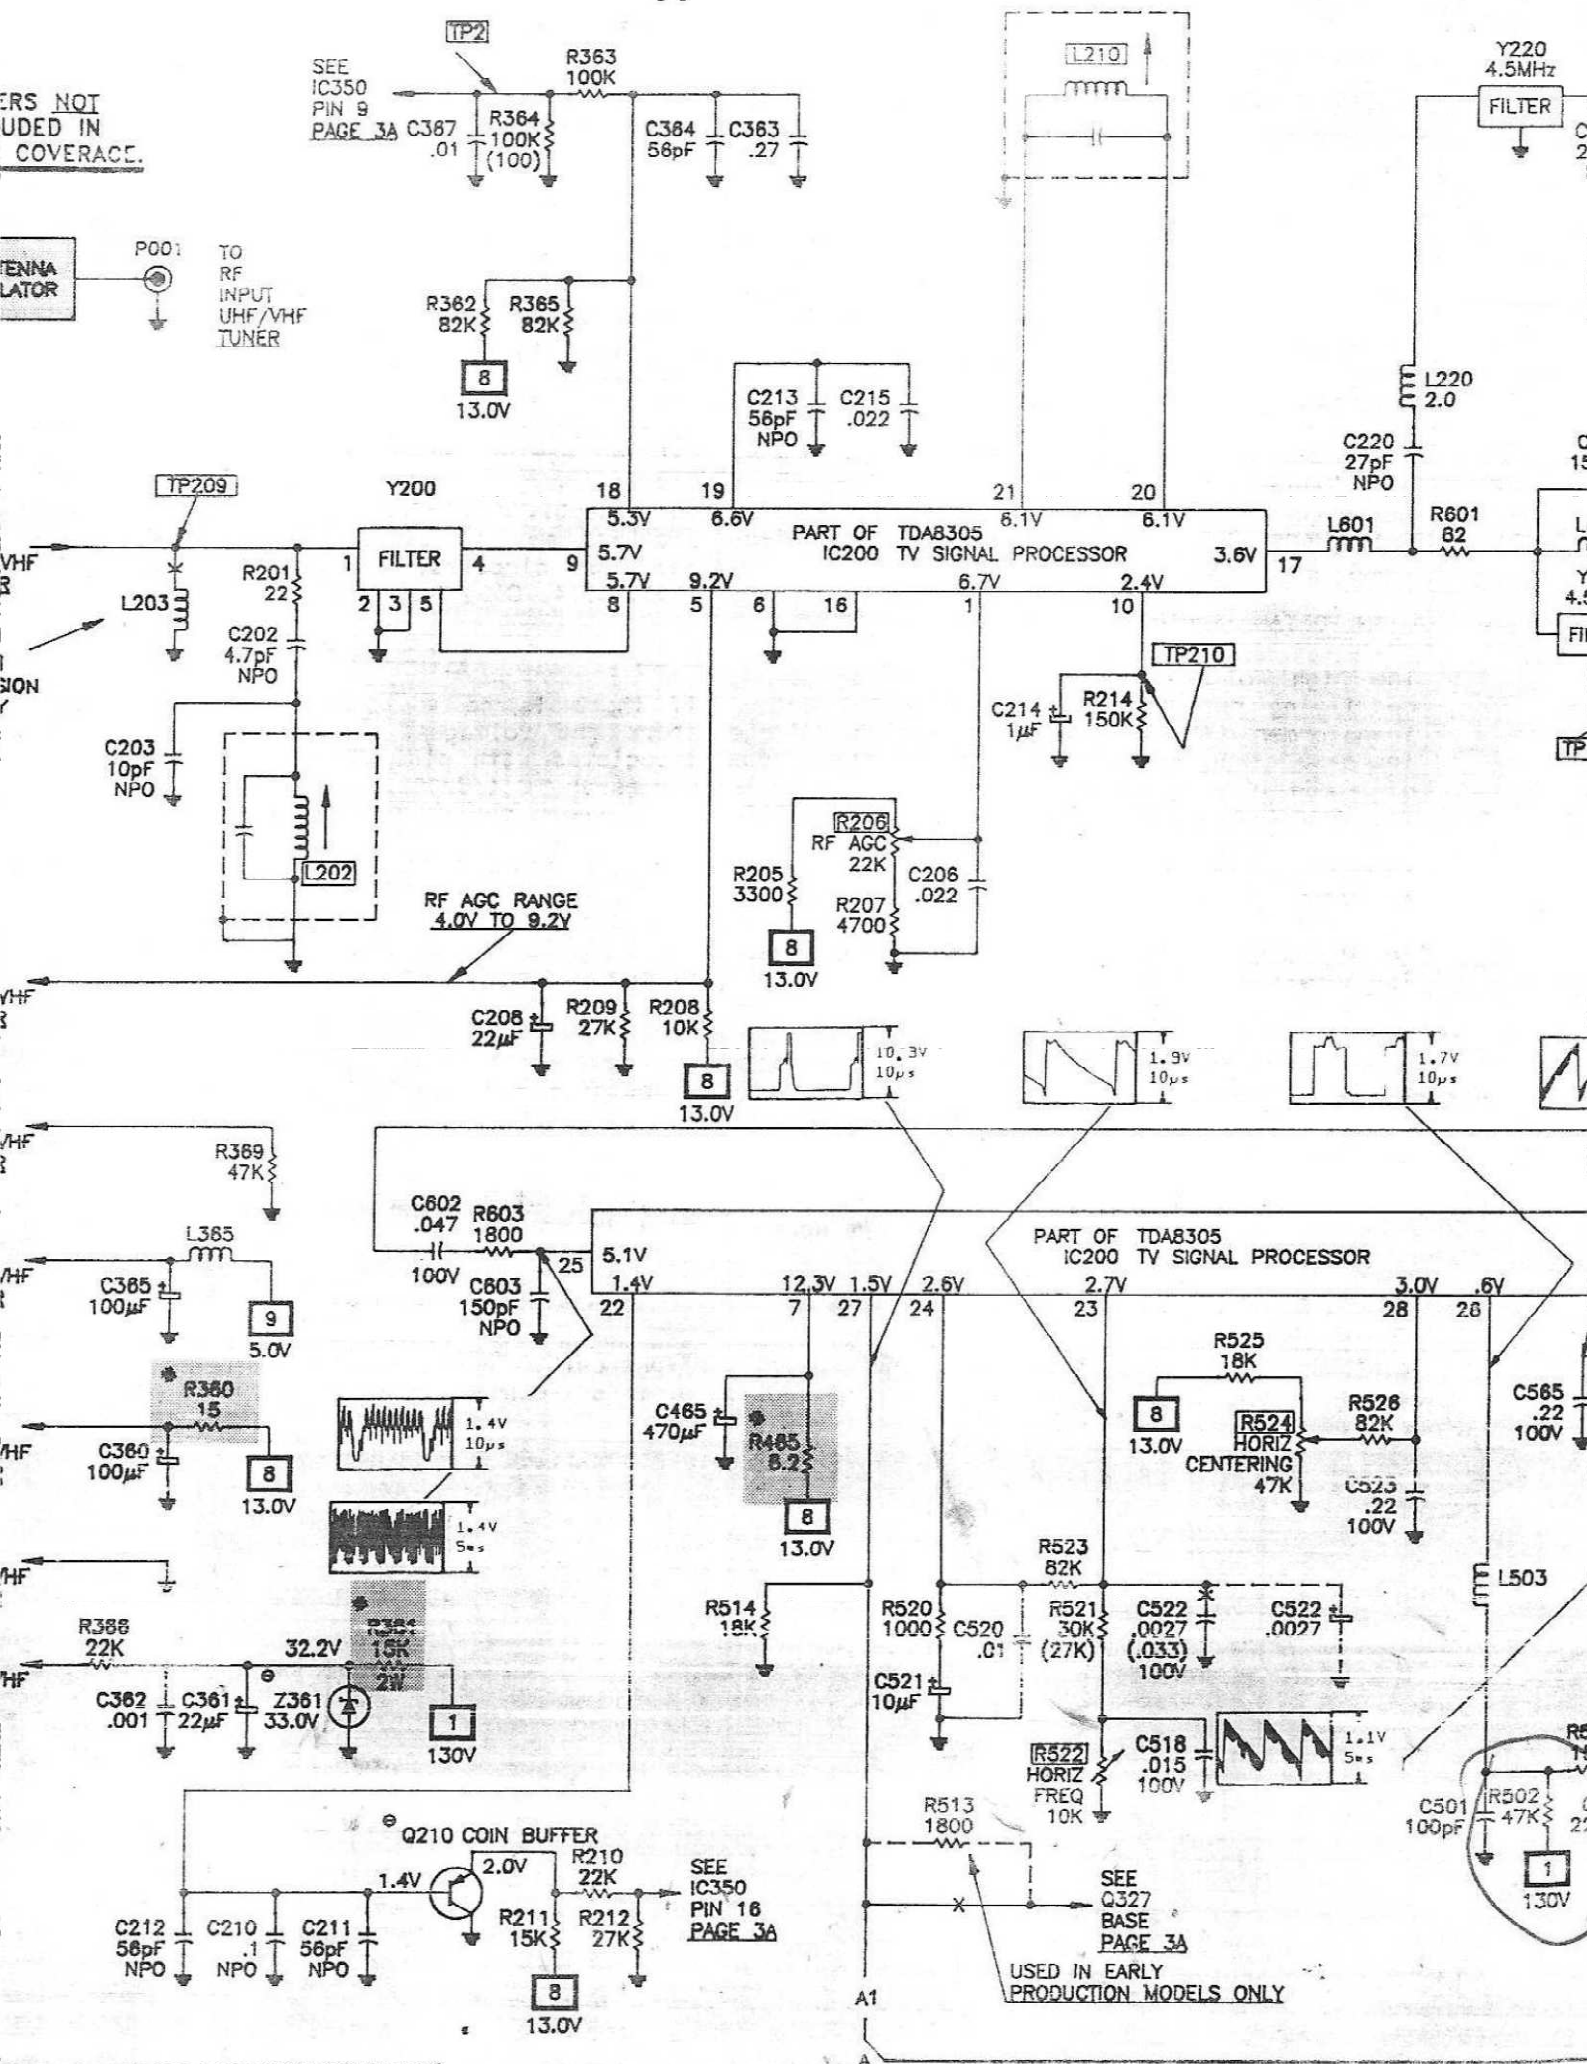

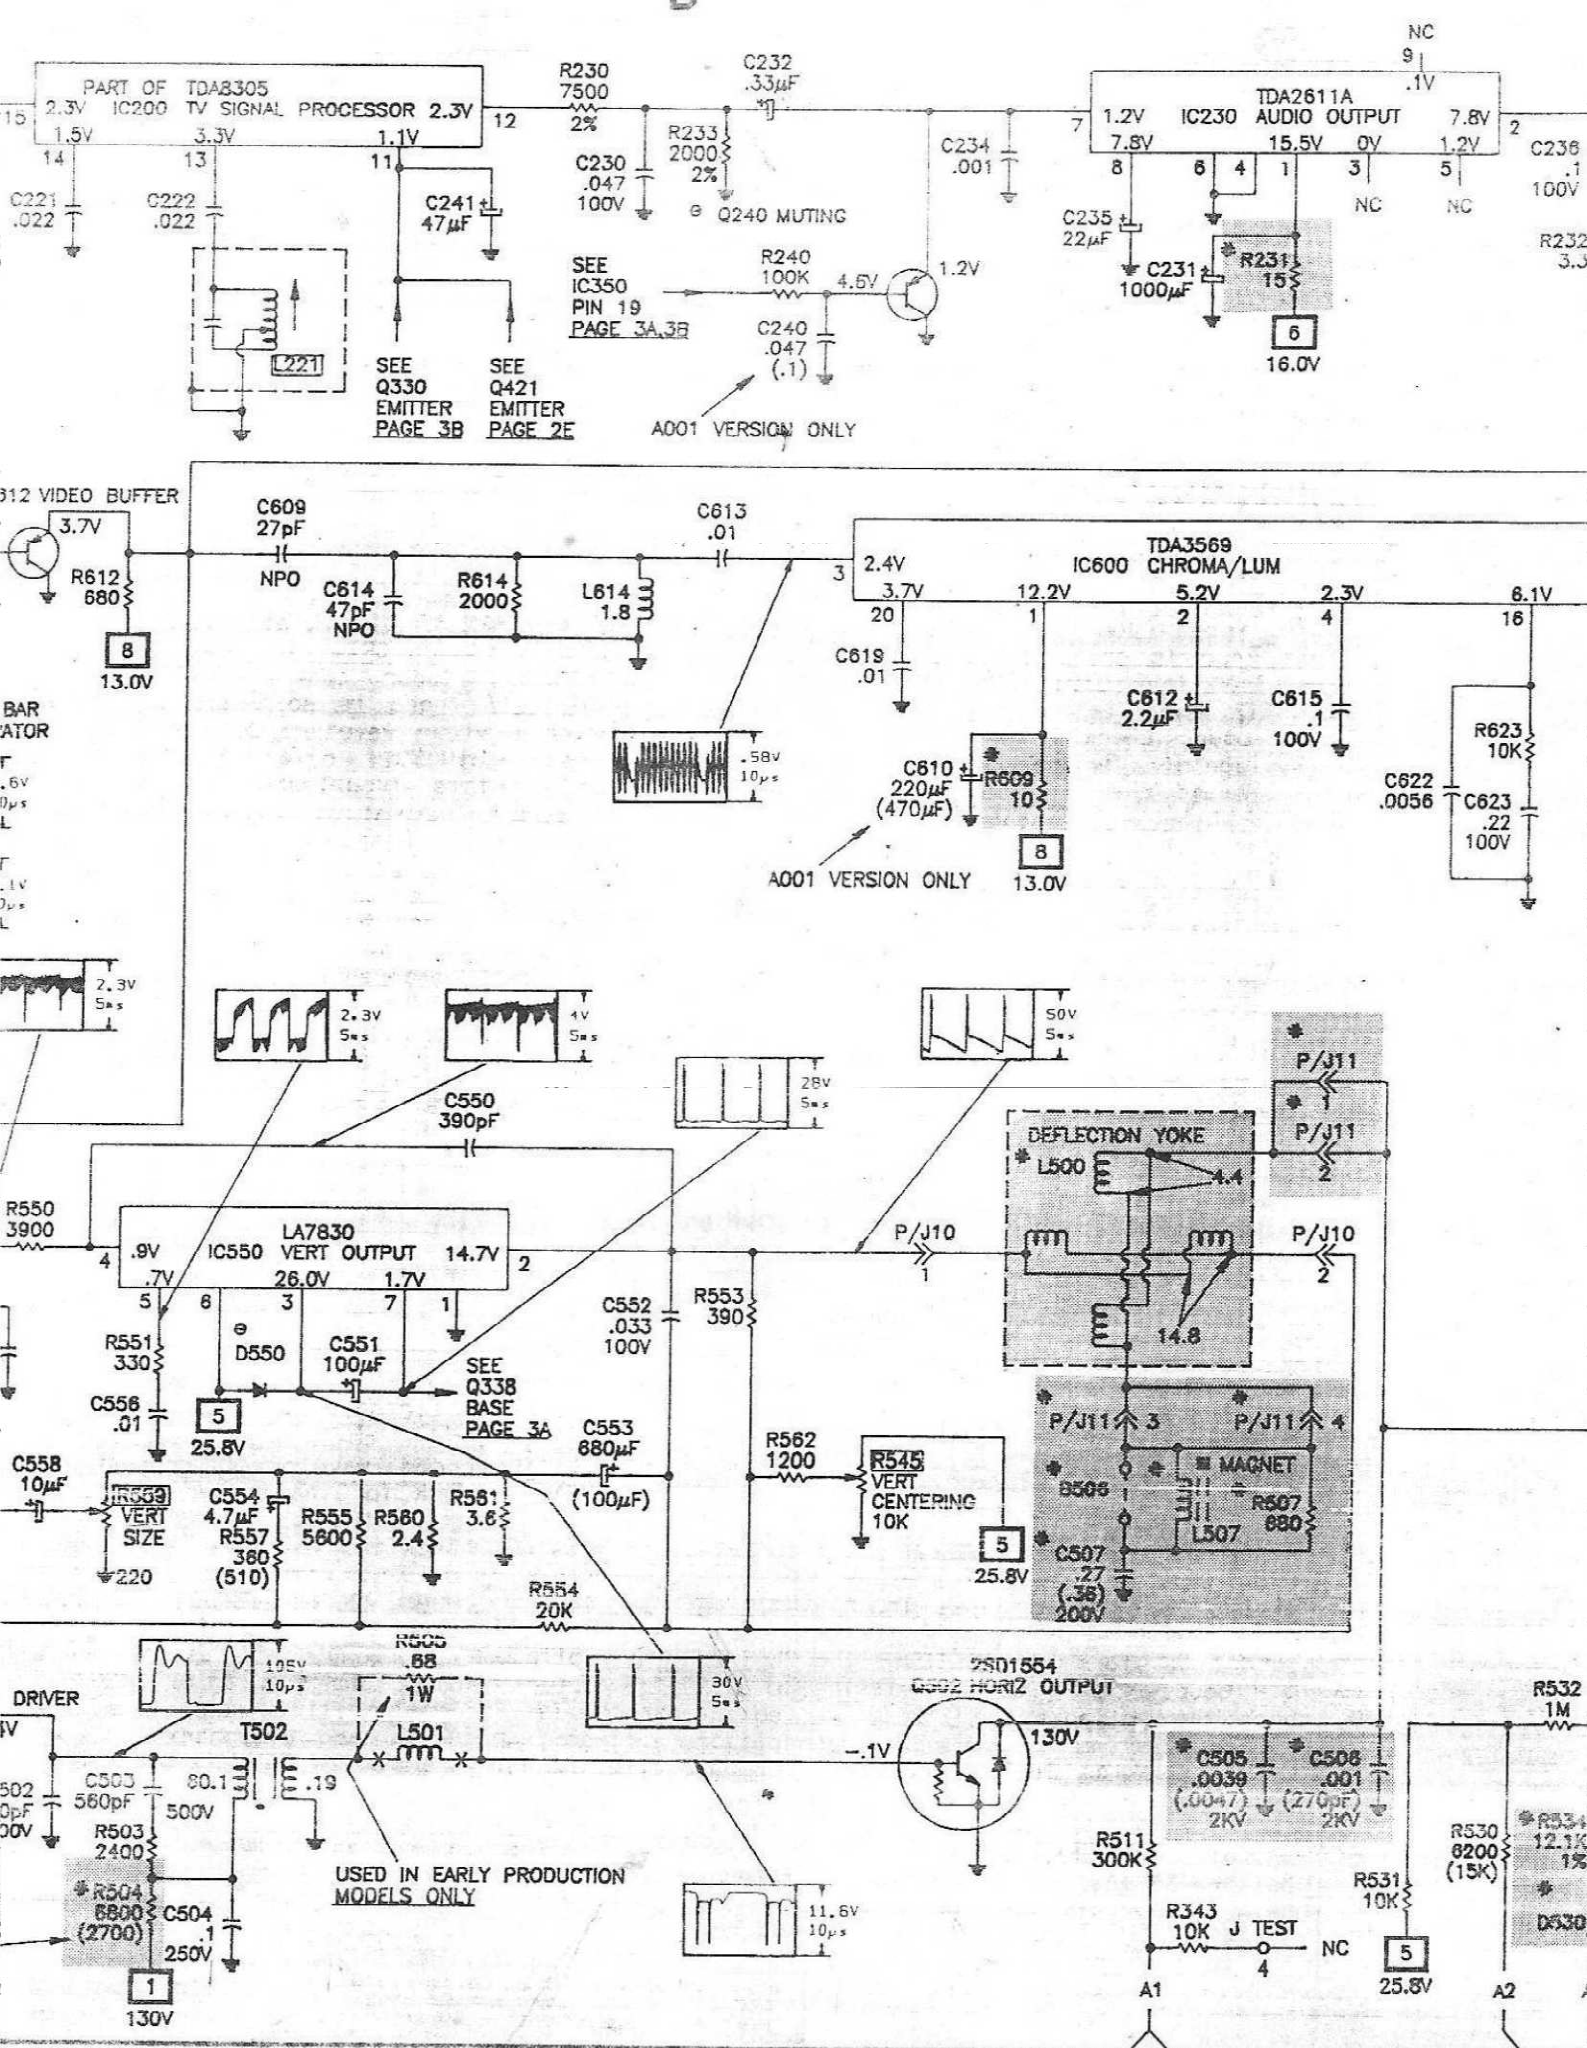




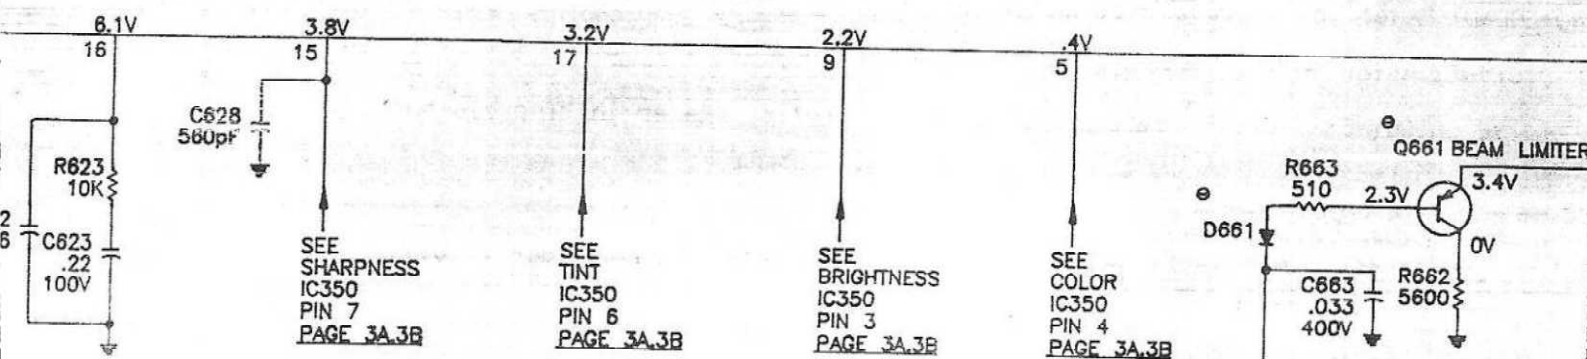


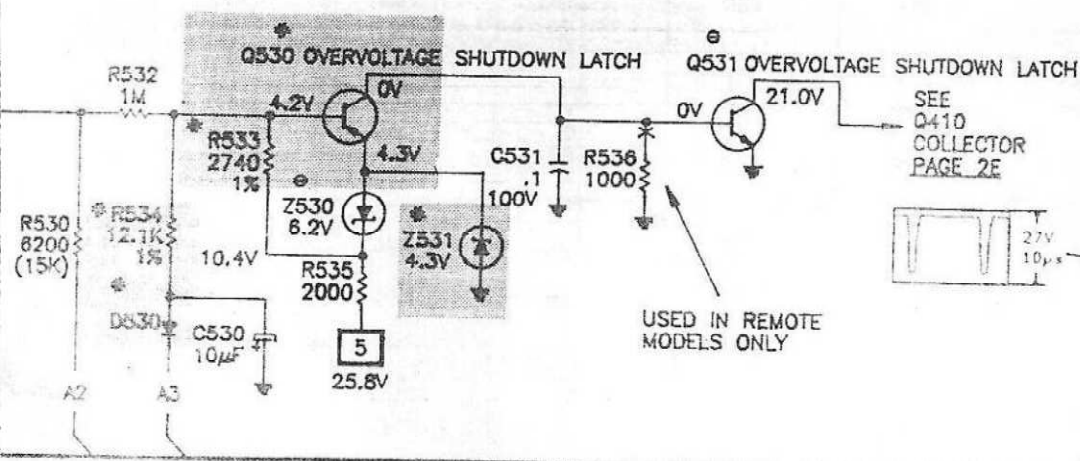
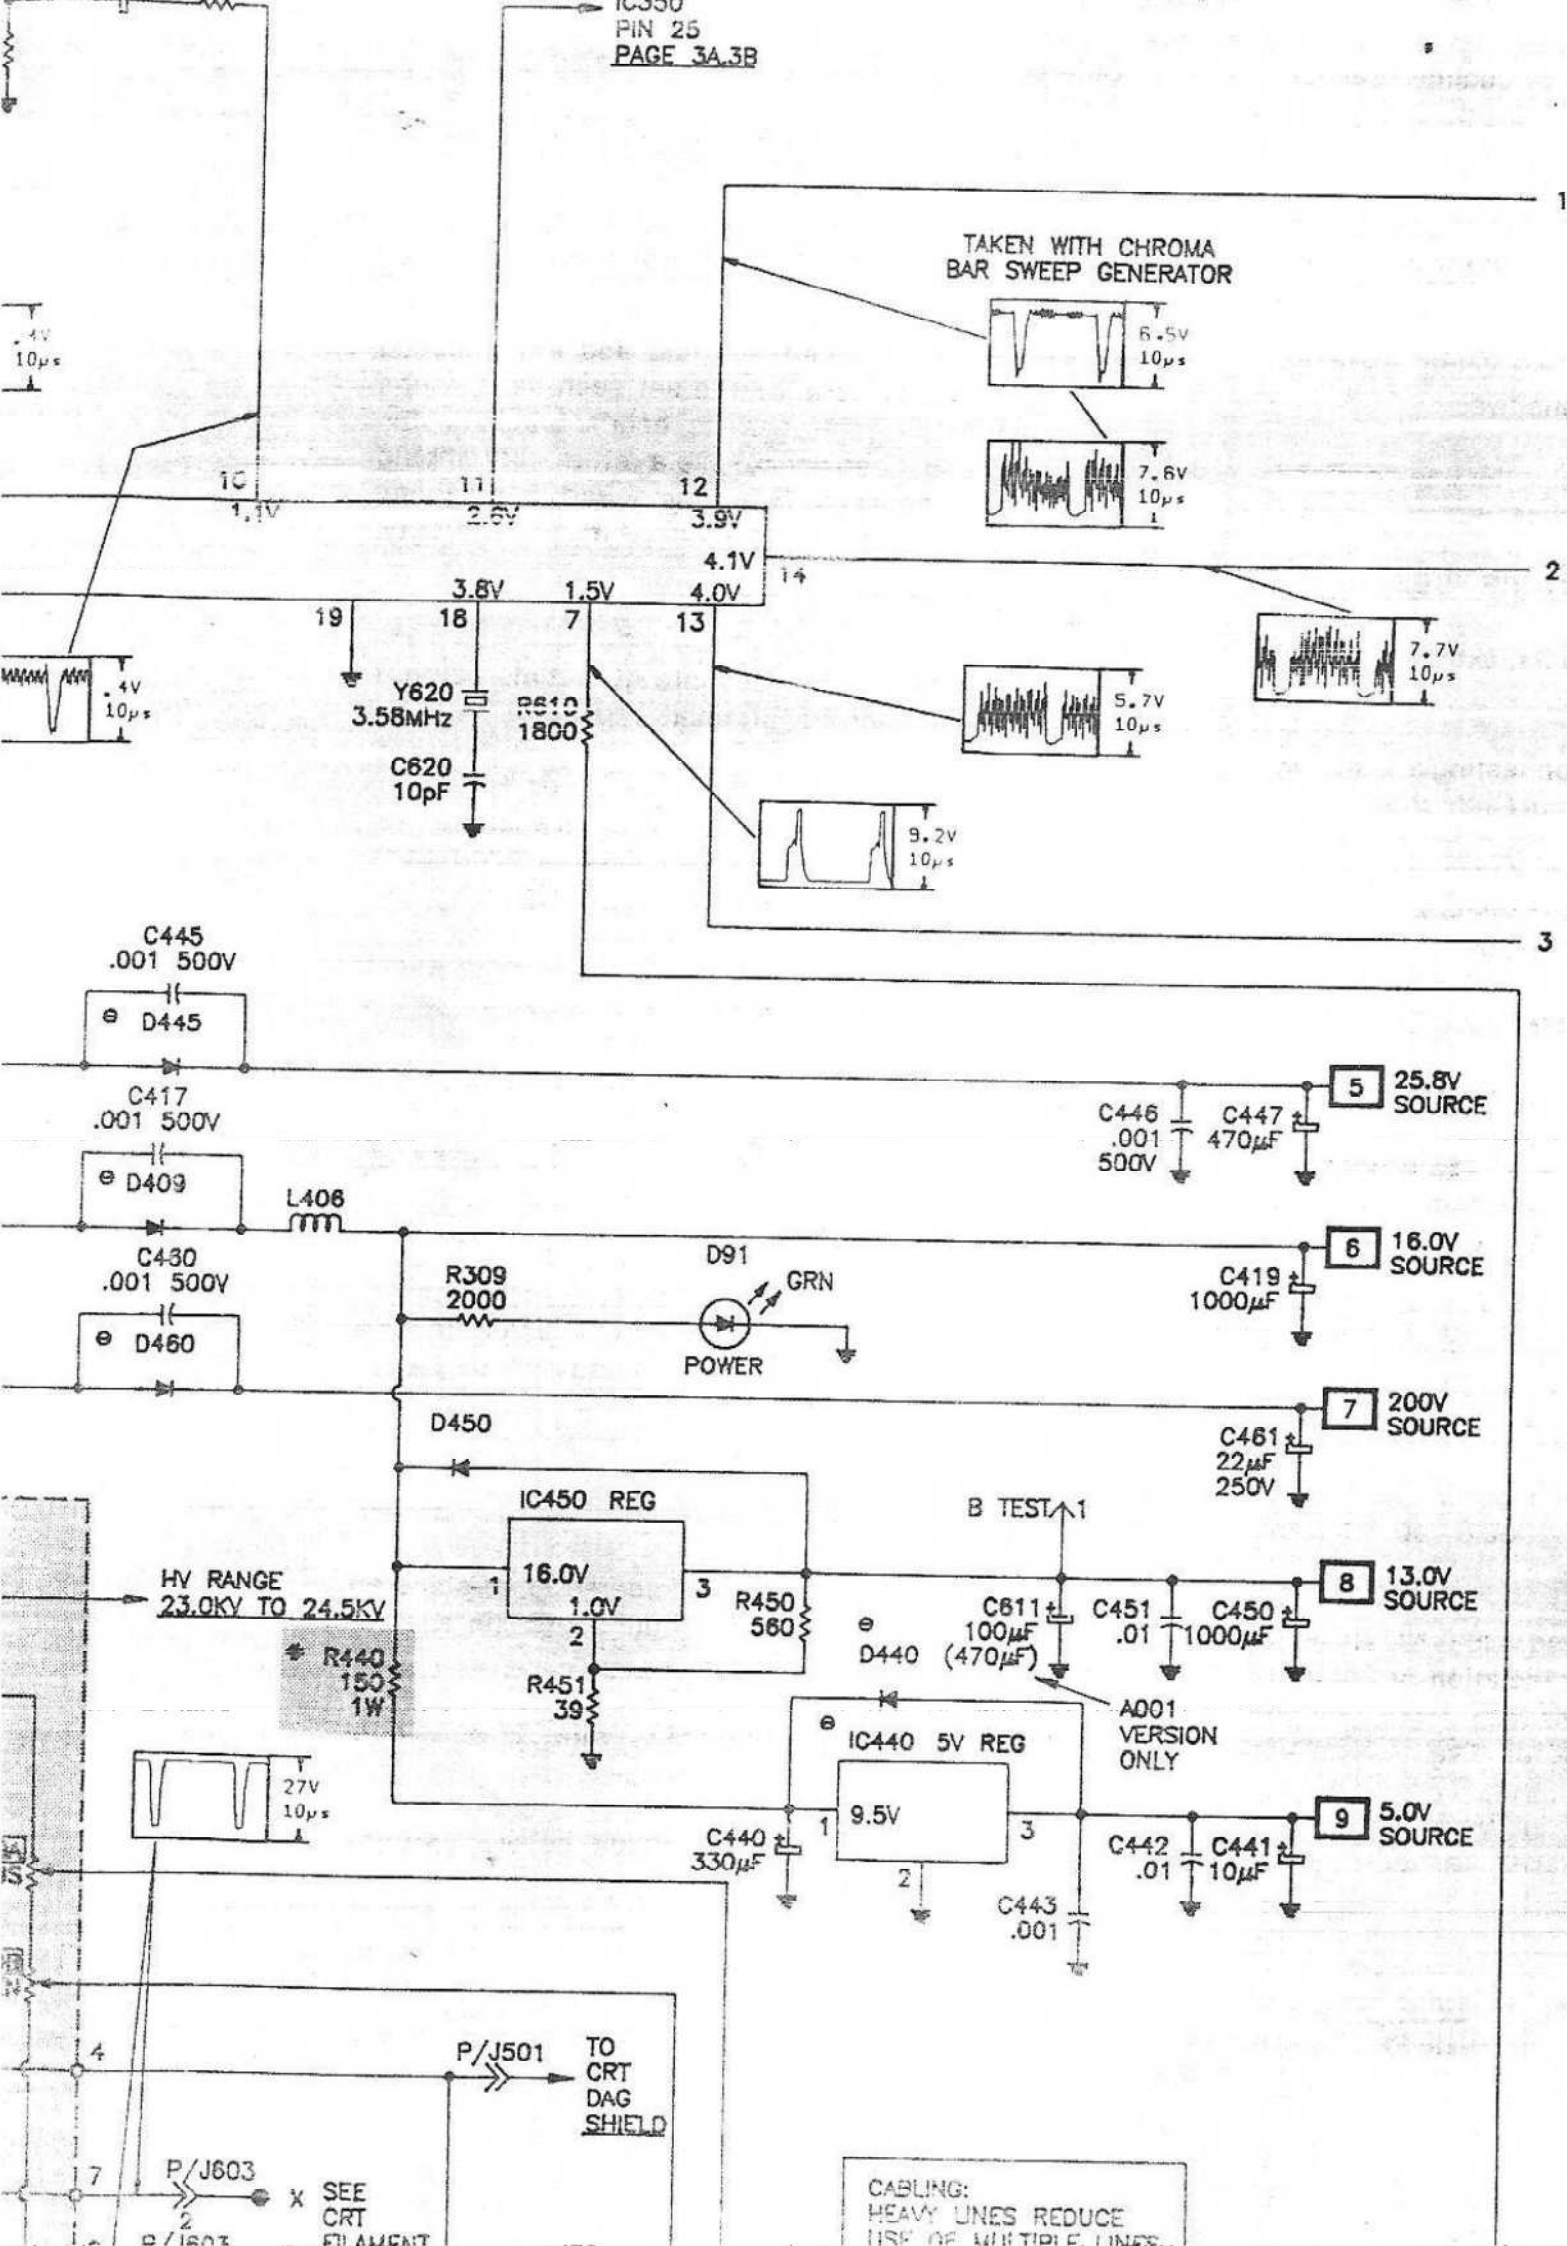


PHOTO CIRCUITRACE =   
SCHEMATIC CIRCUITRACE = 


FOR TERMINAL GUIDES AND NOTES  
SEE PAGE 2



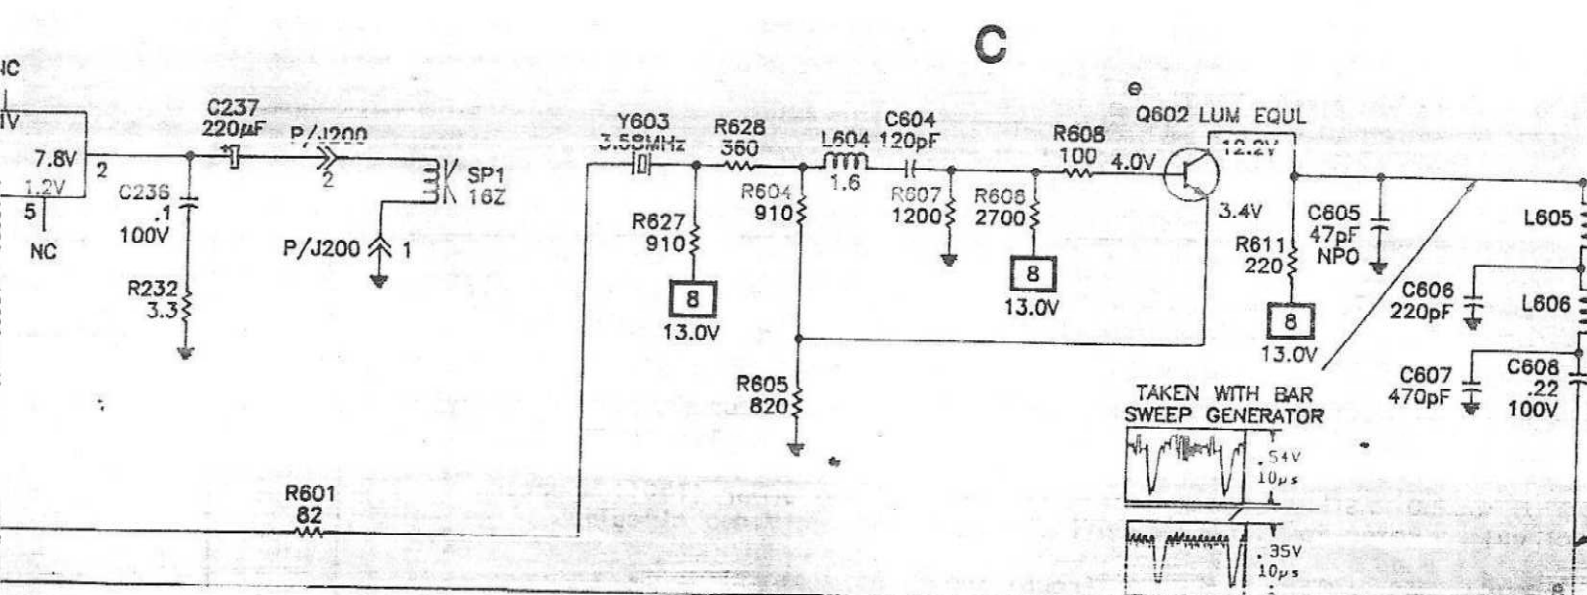


A

TUNERS NOT INCLUDED IN THIS COVERAGE.

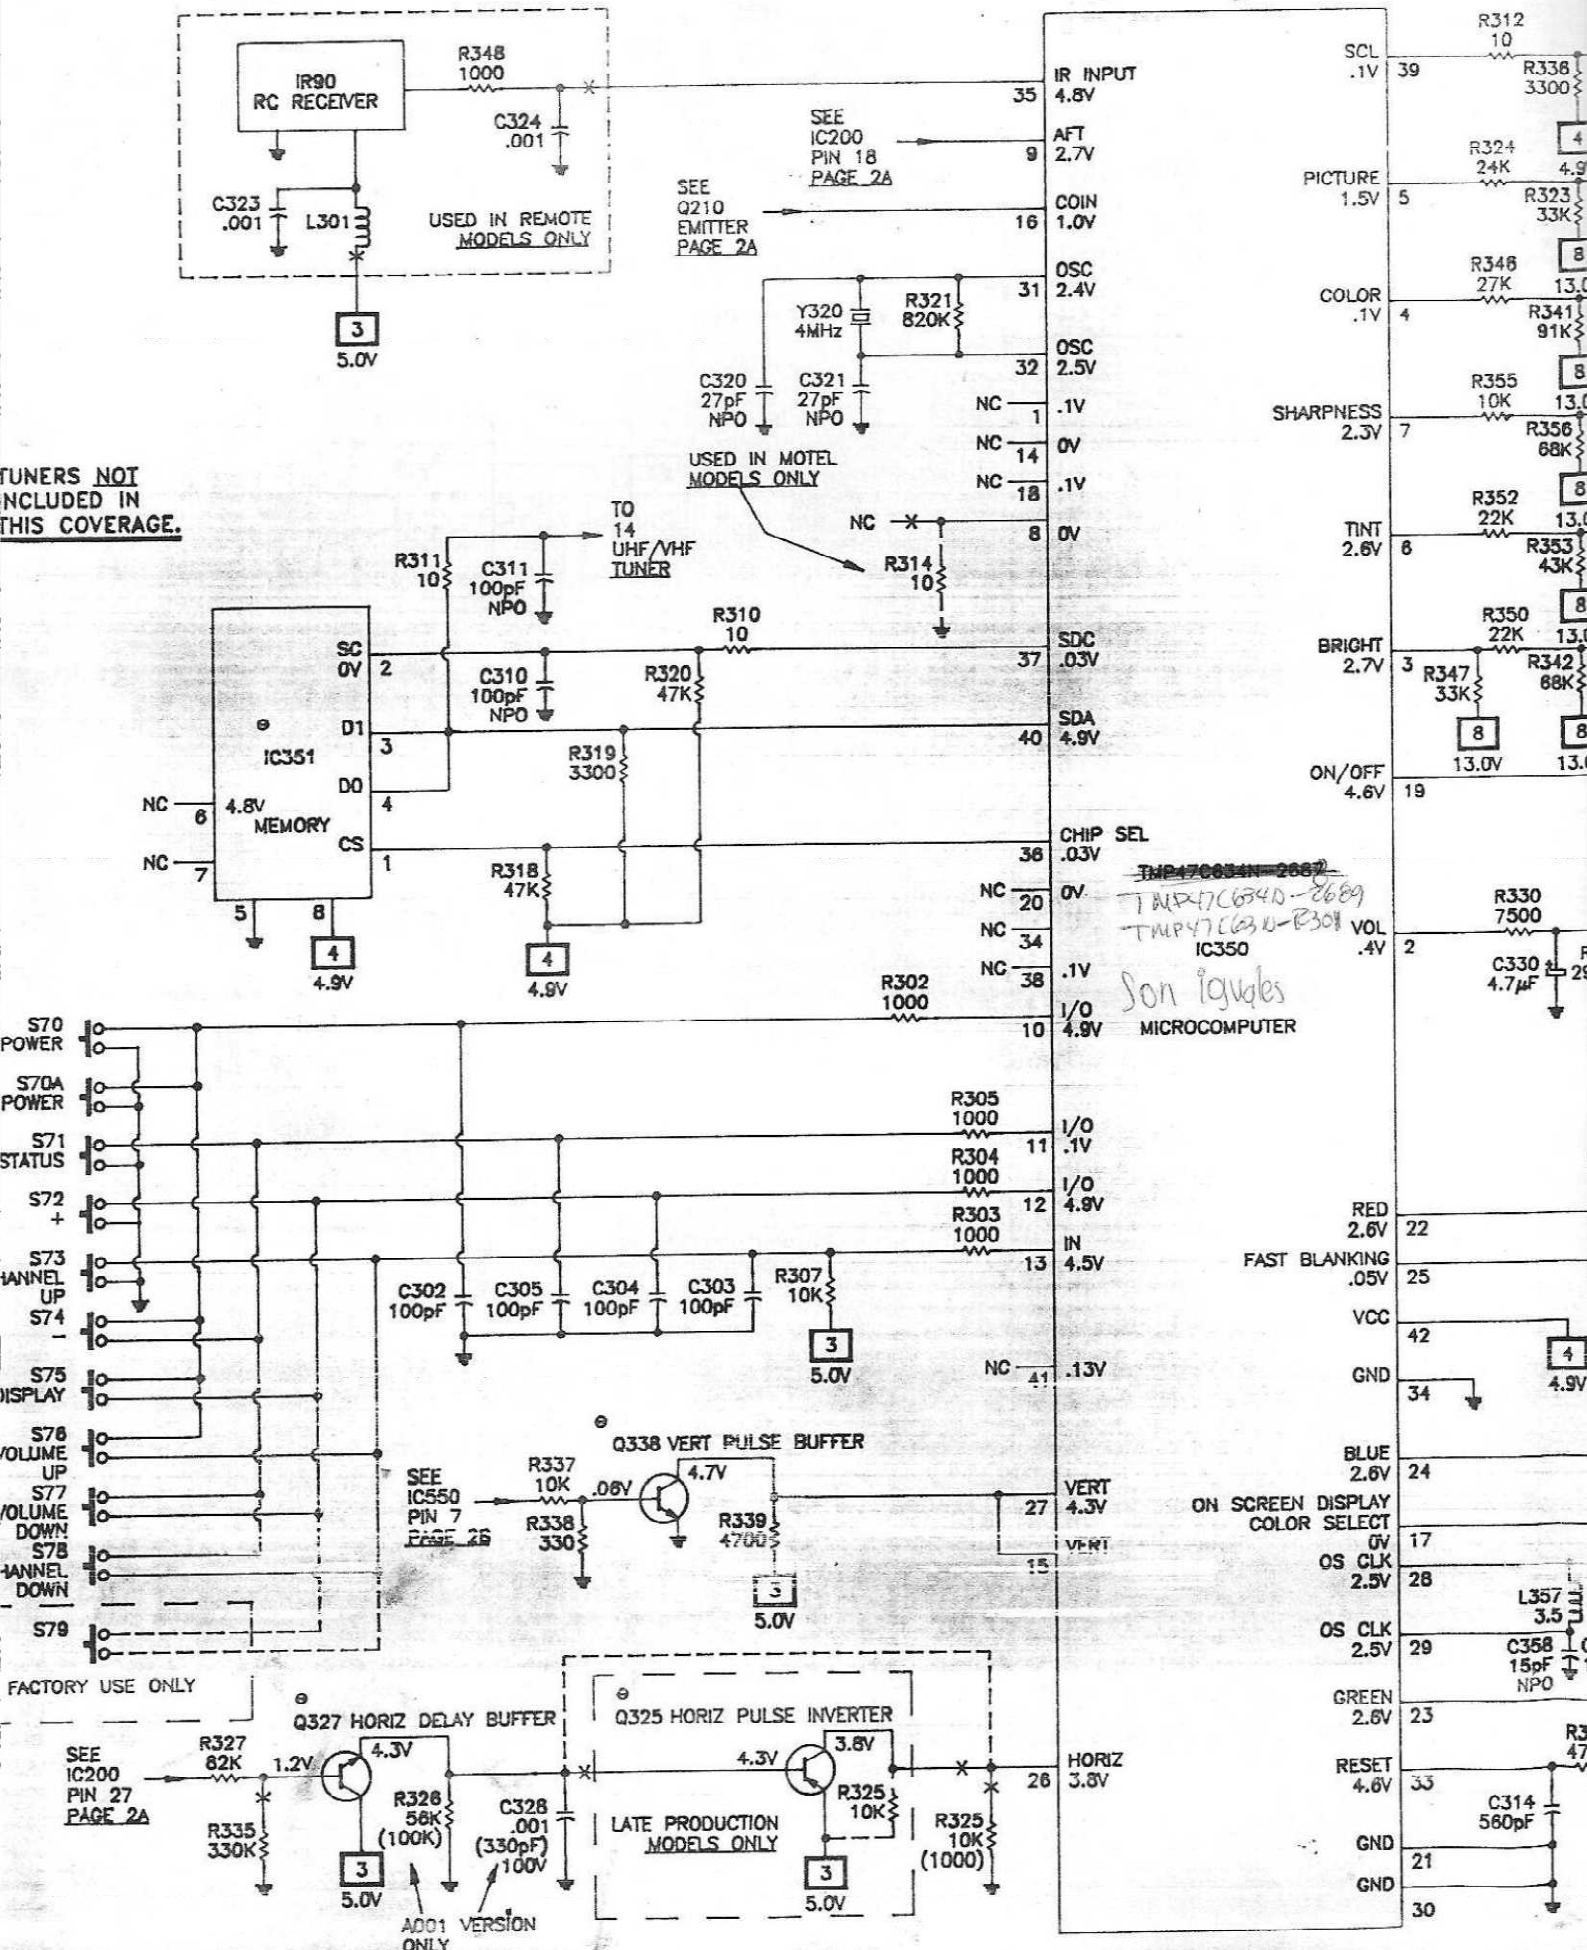





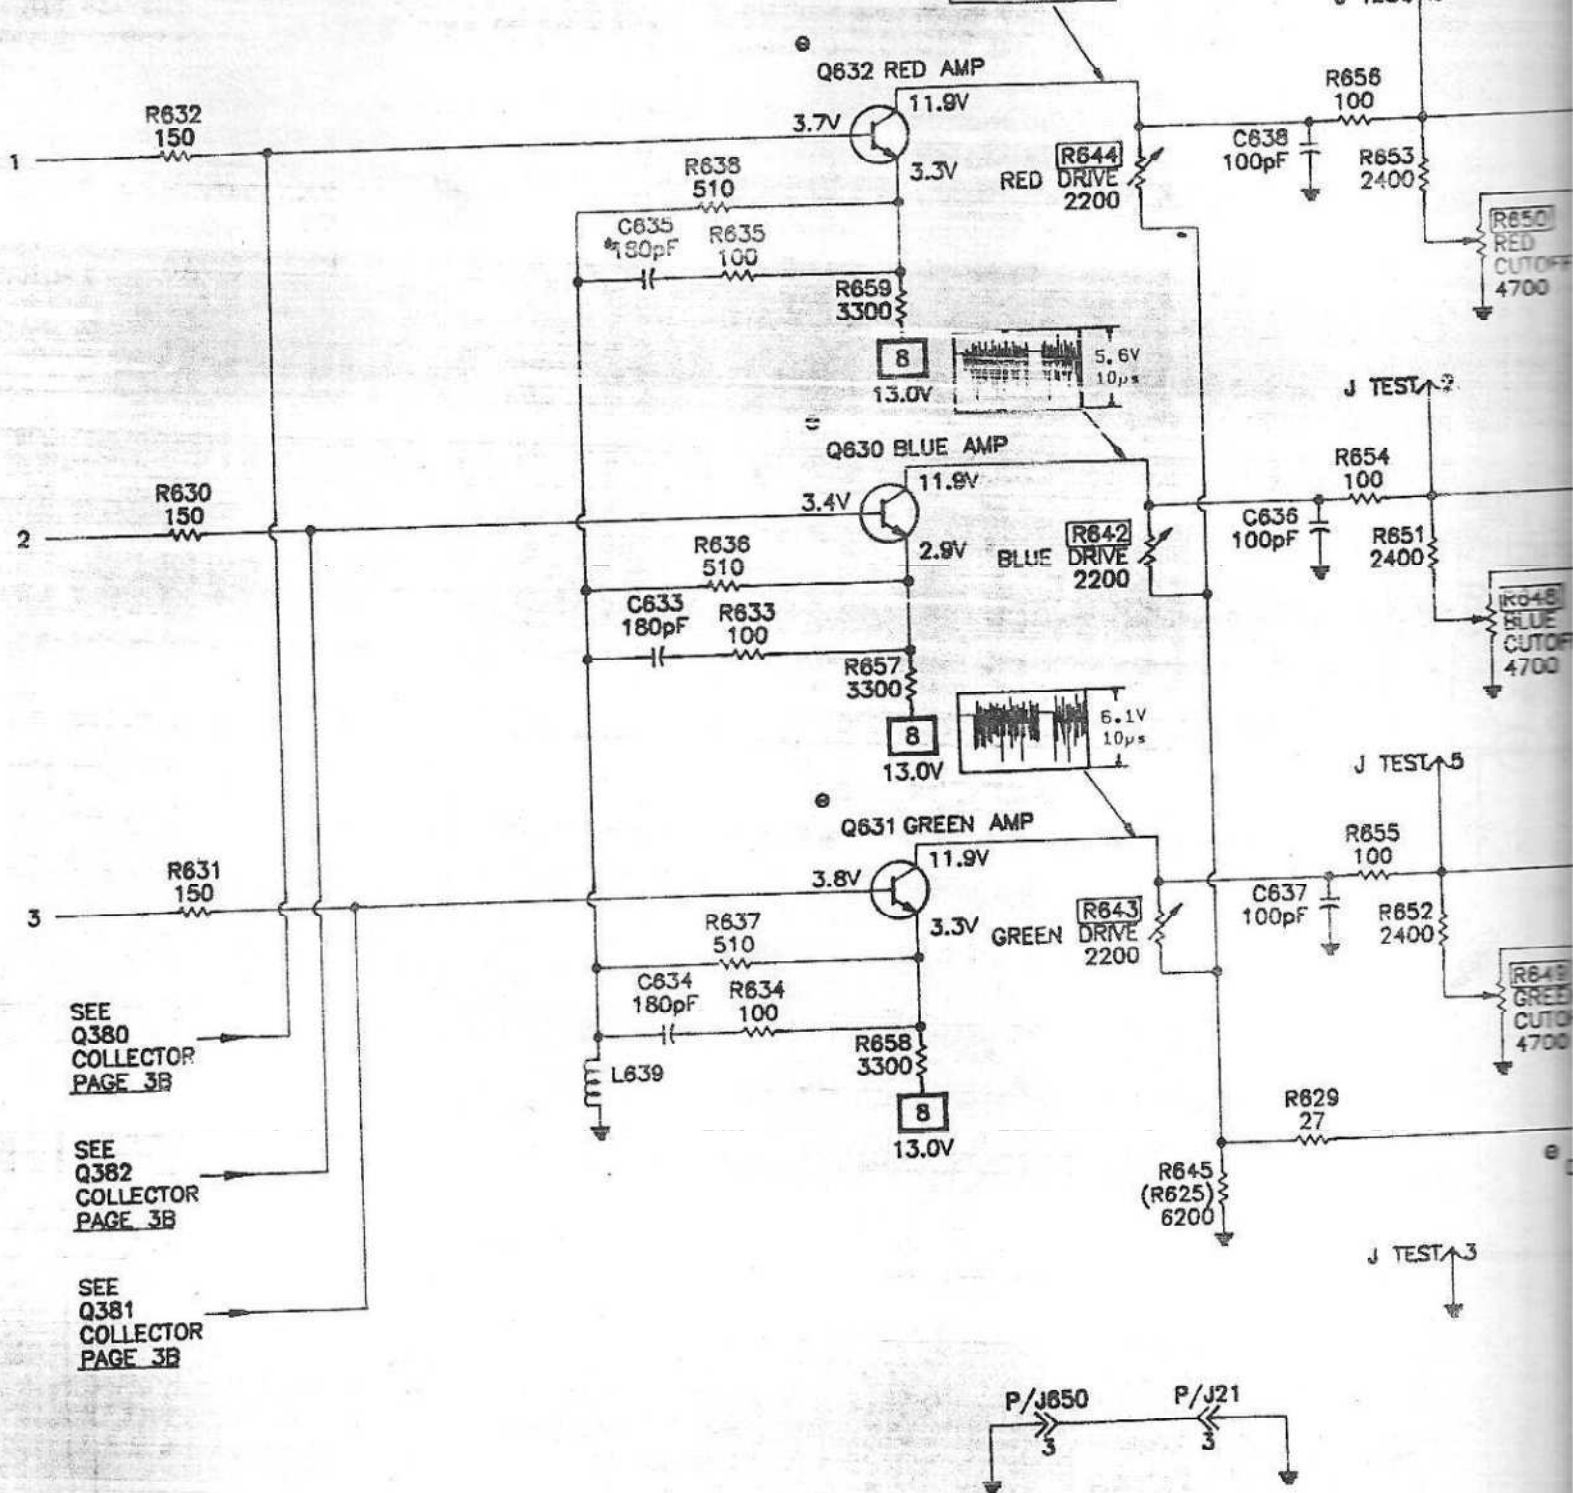

CABLING:  
HEAVY LINES REDUCE  
USE OF MULTIPLE LINES

FOR TERMINAL GUIDES AND NOTES  
SEE PAGE 2

PHOTO CIRC  
SCHEMATIC CIRC



