
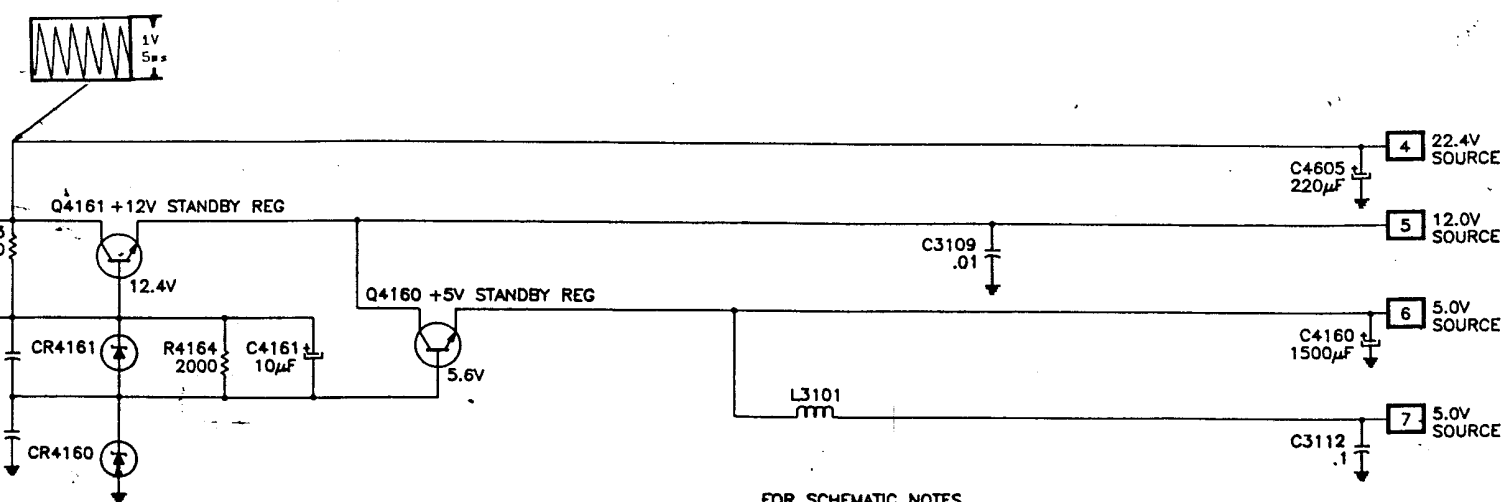


WITH CIRCUITRACE

© Howard W. Sams & Co. 1992


Y SCHEMATIC

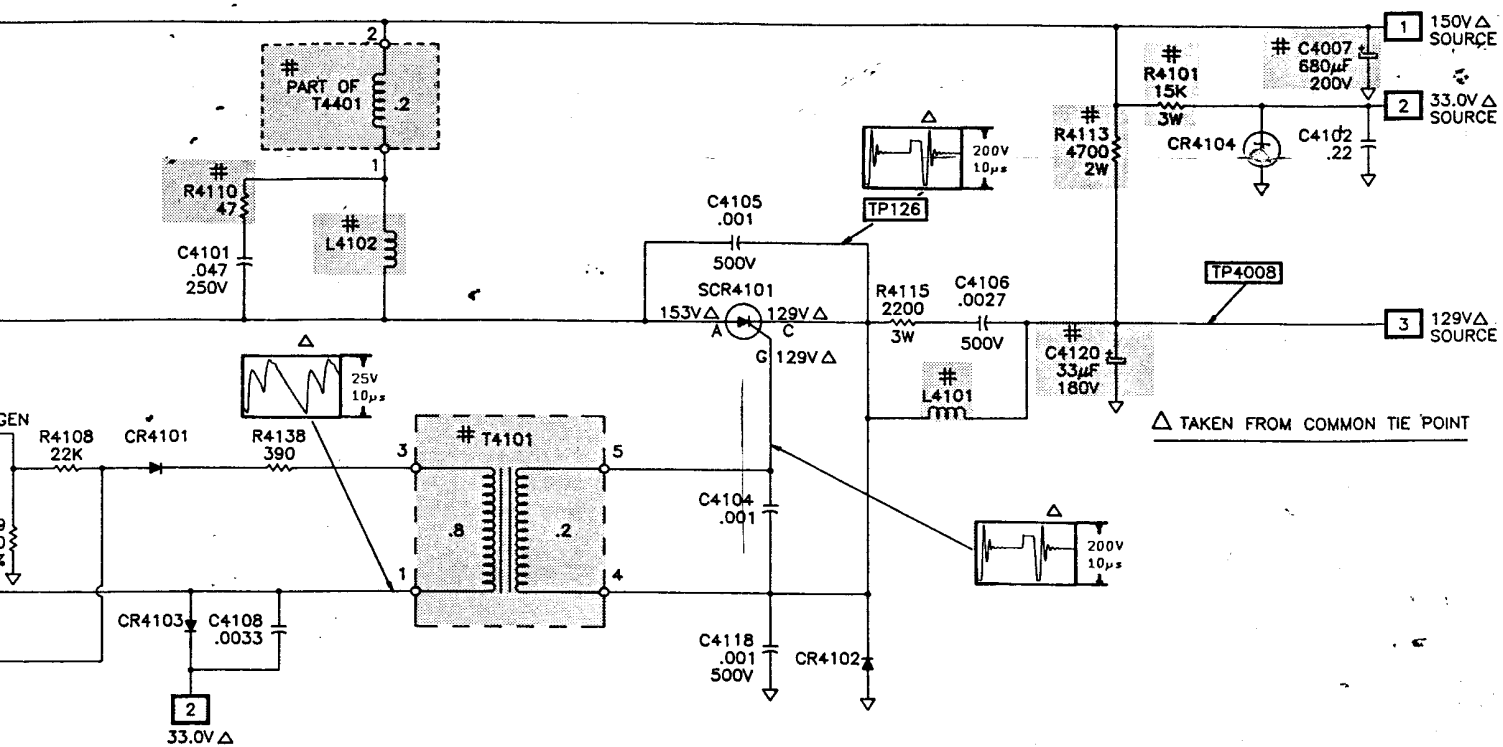


FOR SCHEMATIC NOTES
SEE PAGE 30

PHOTO CIRCUITRACE - **11**


SCHEMATIC CIRCUITRACE - **11**

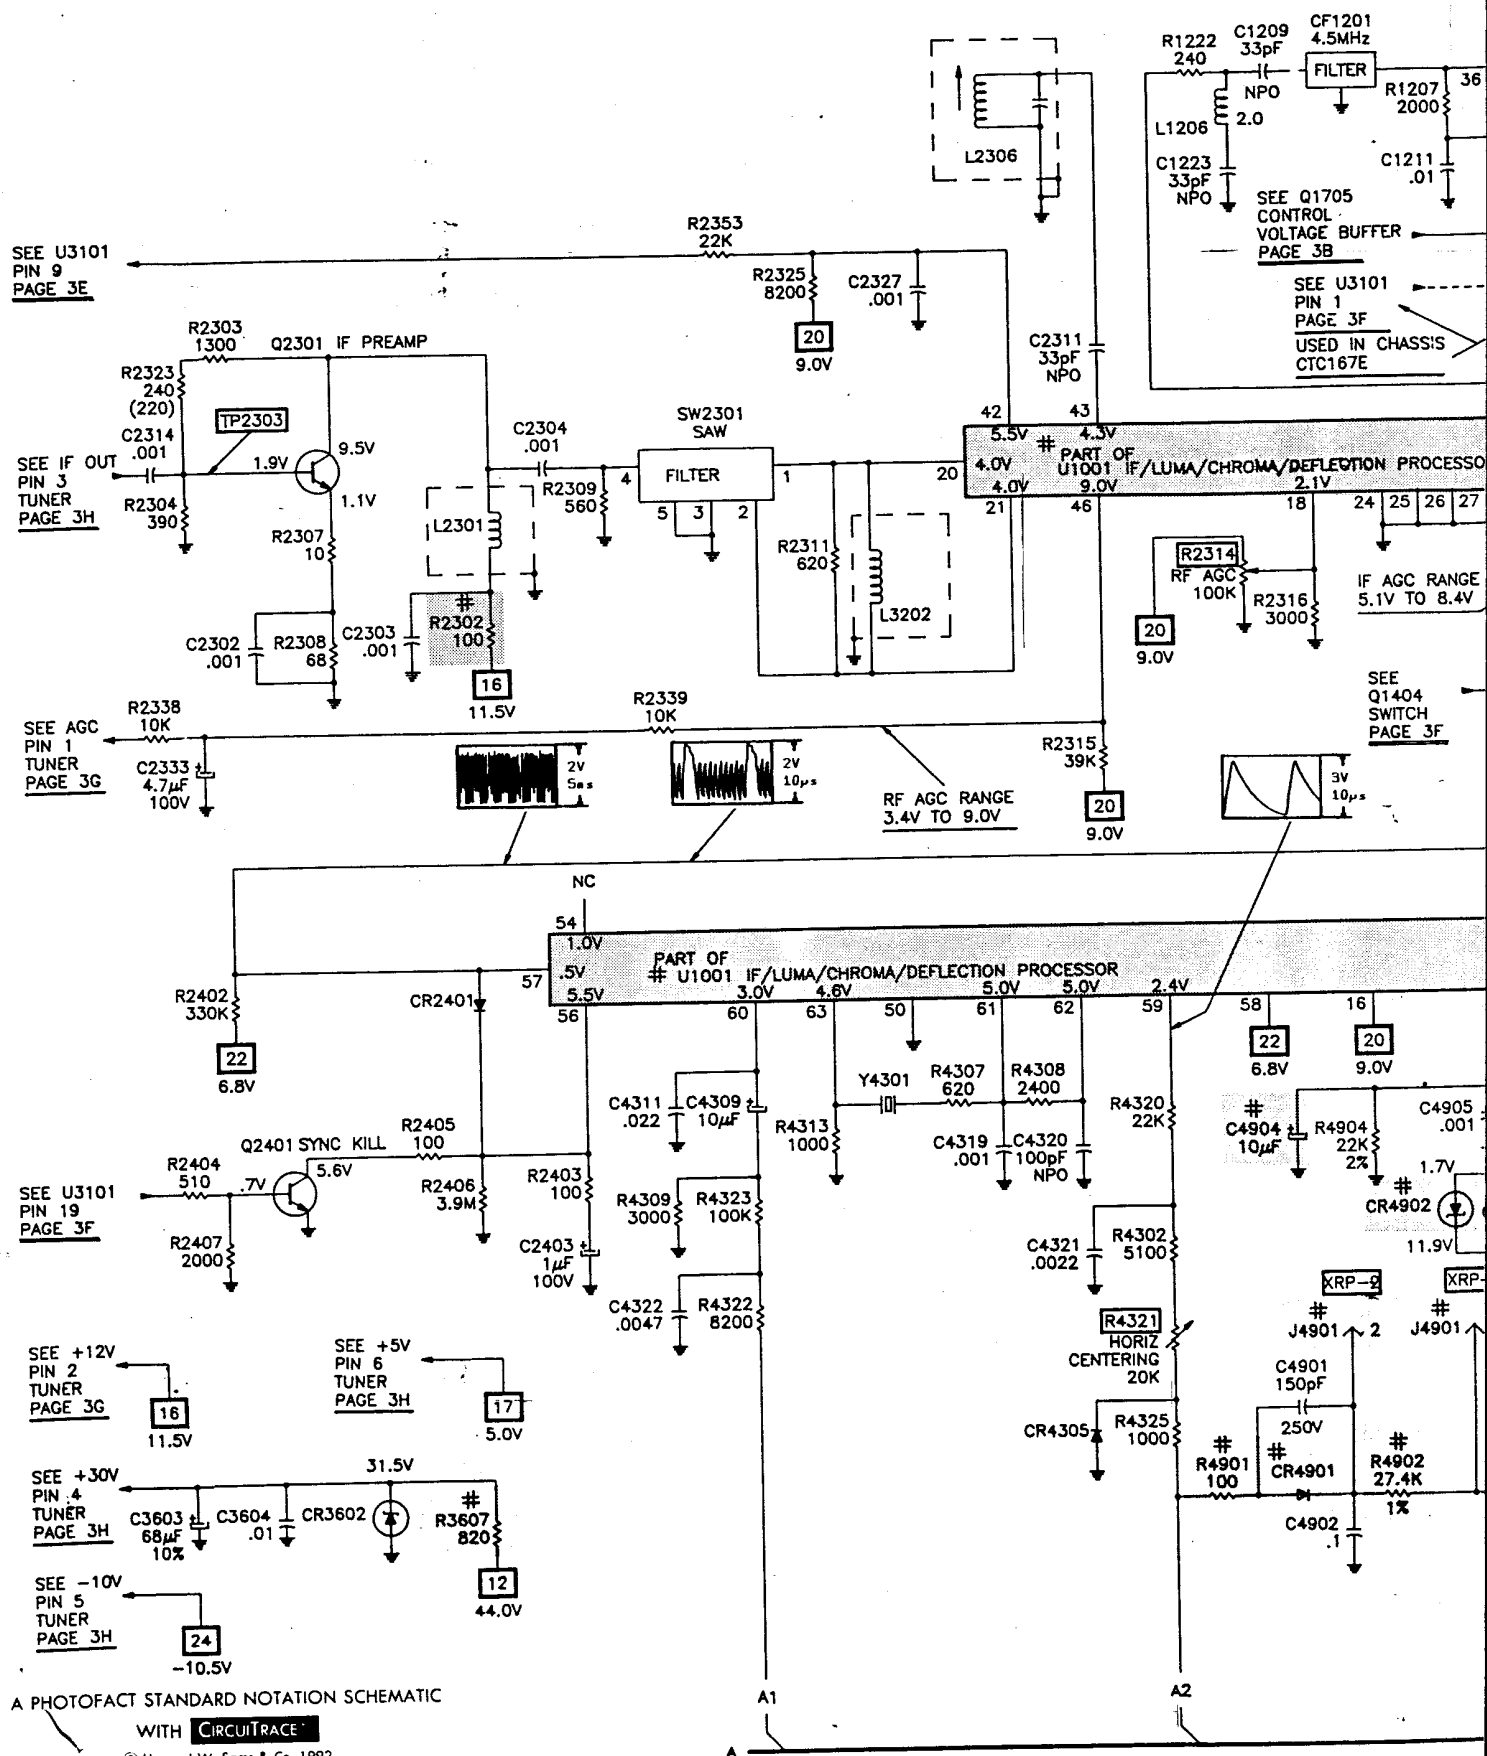


B

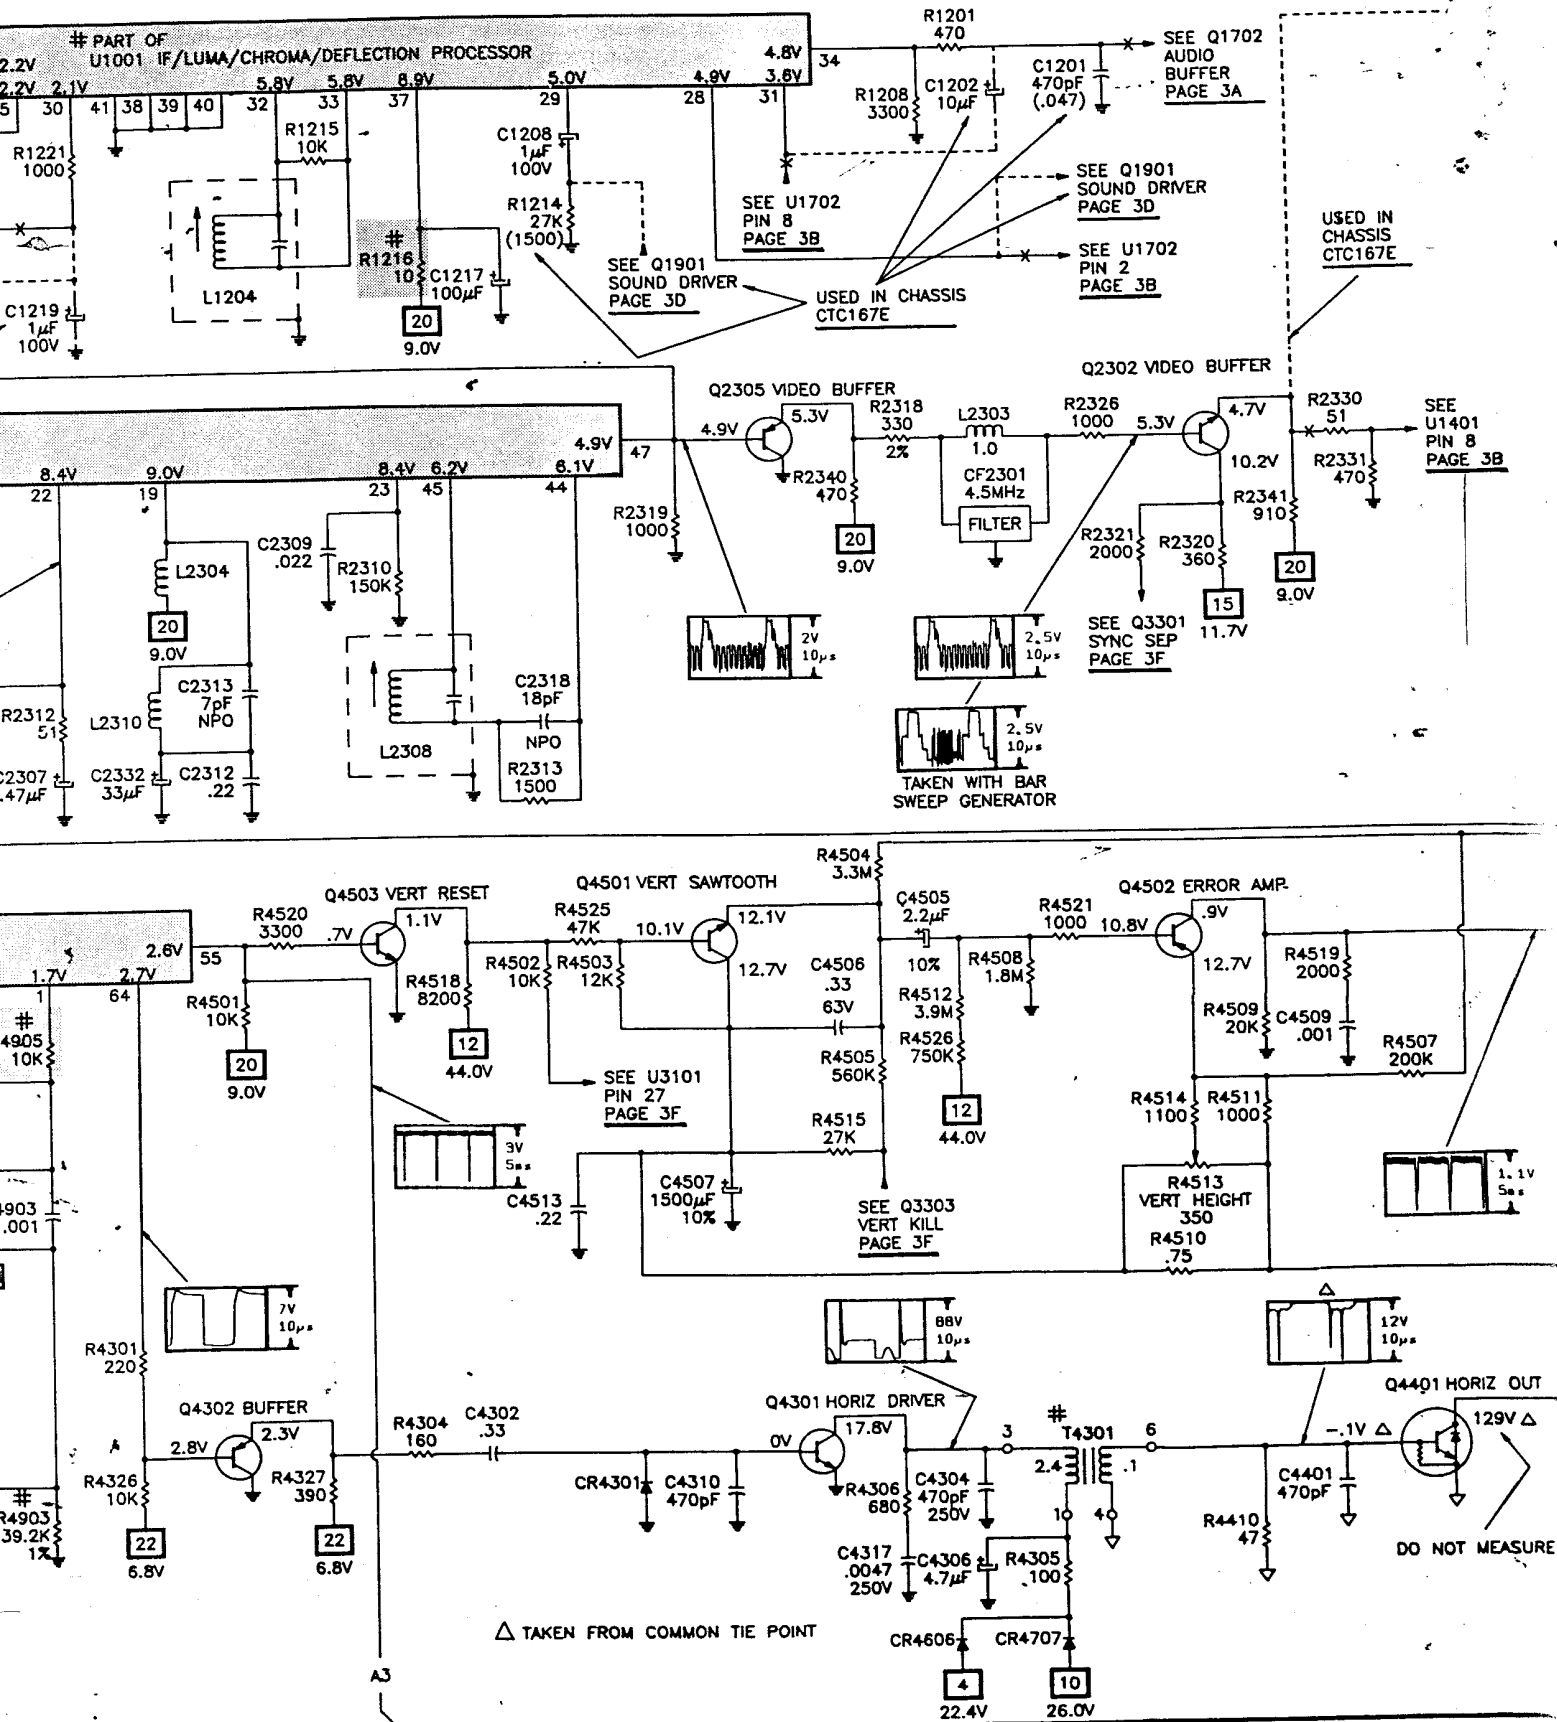


POWER SUPPLY SCHEMATIC continued

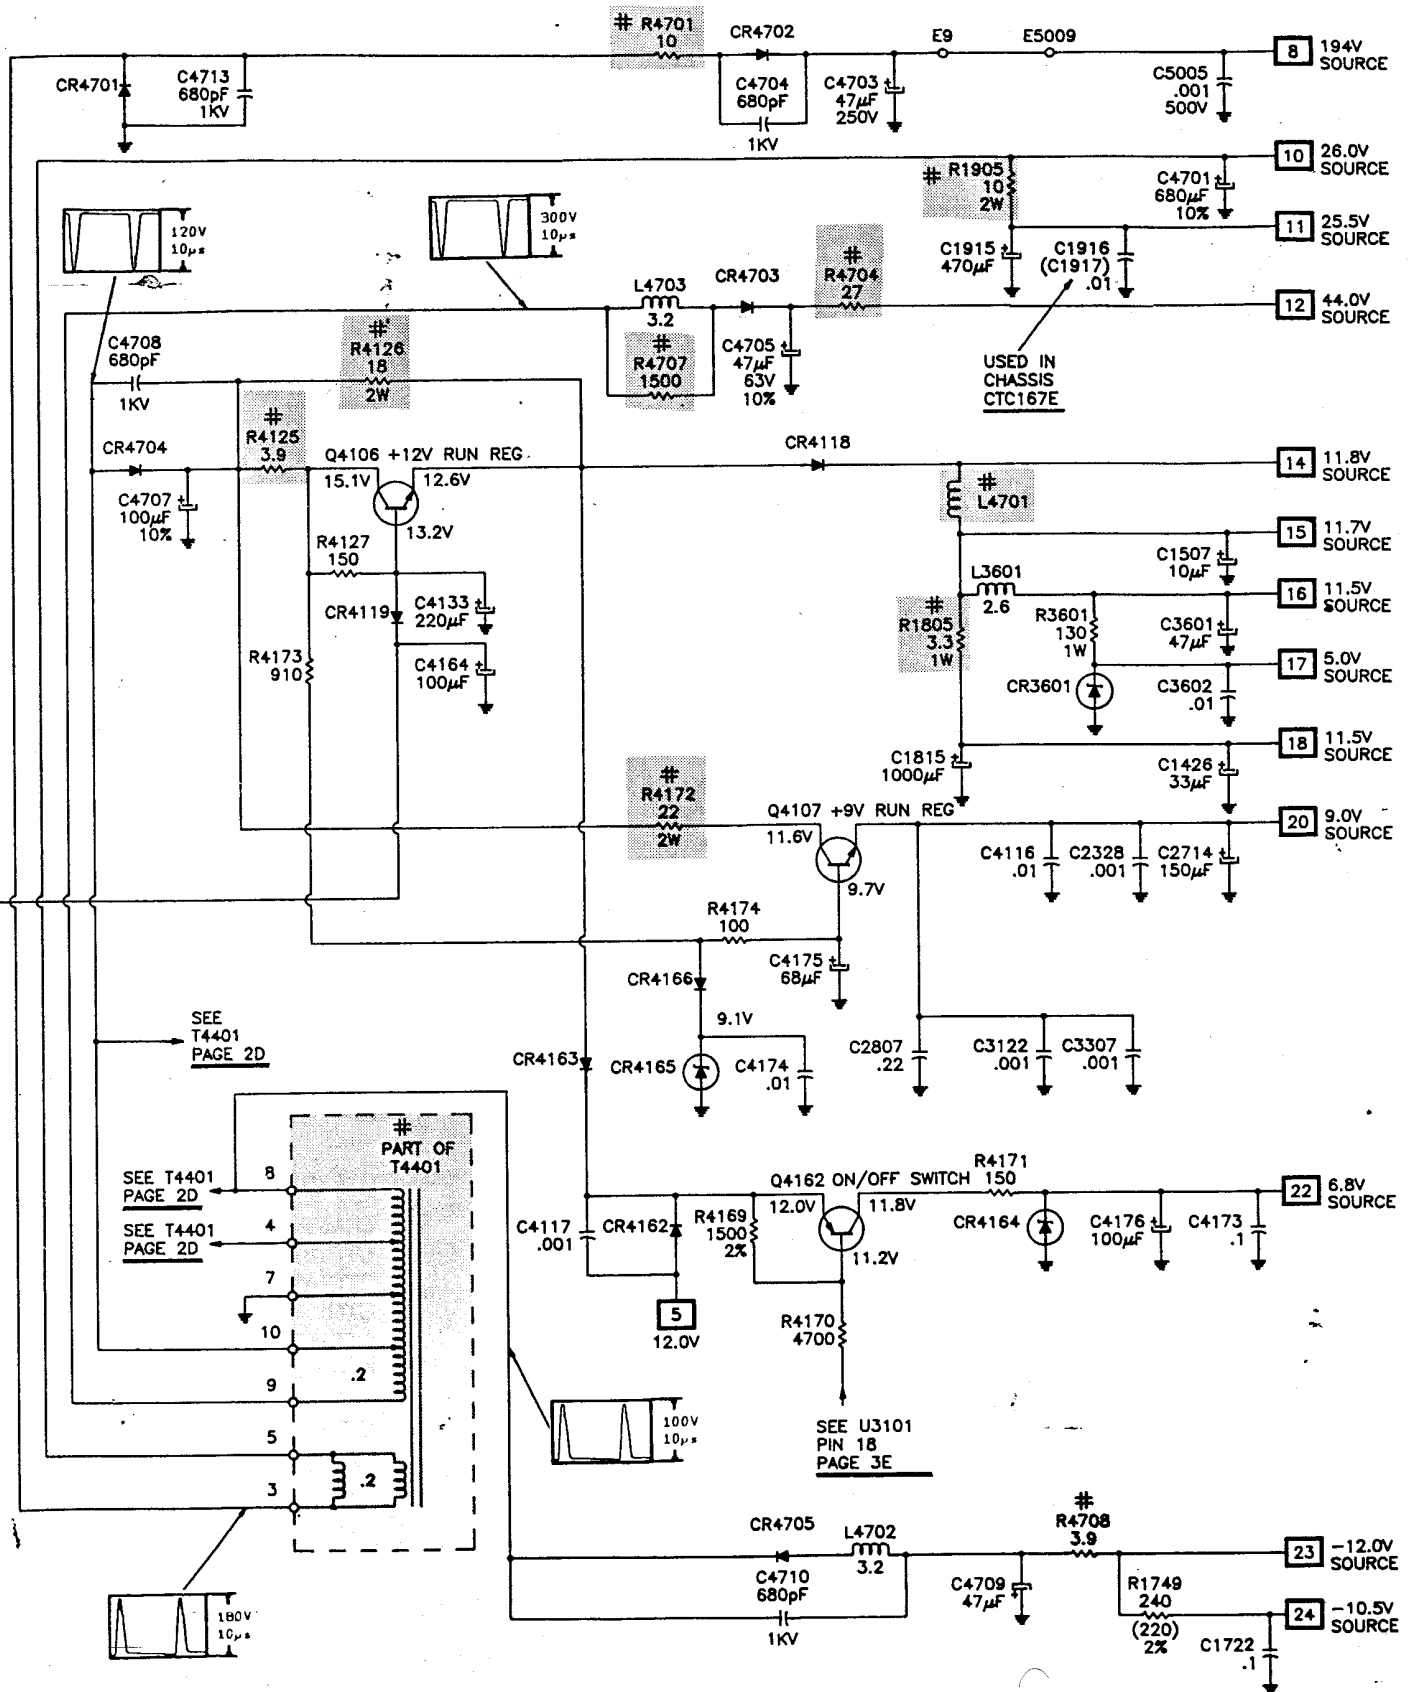


CRT SCHEMATIC

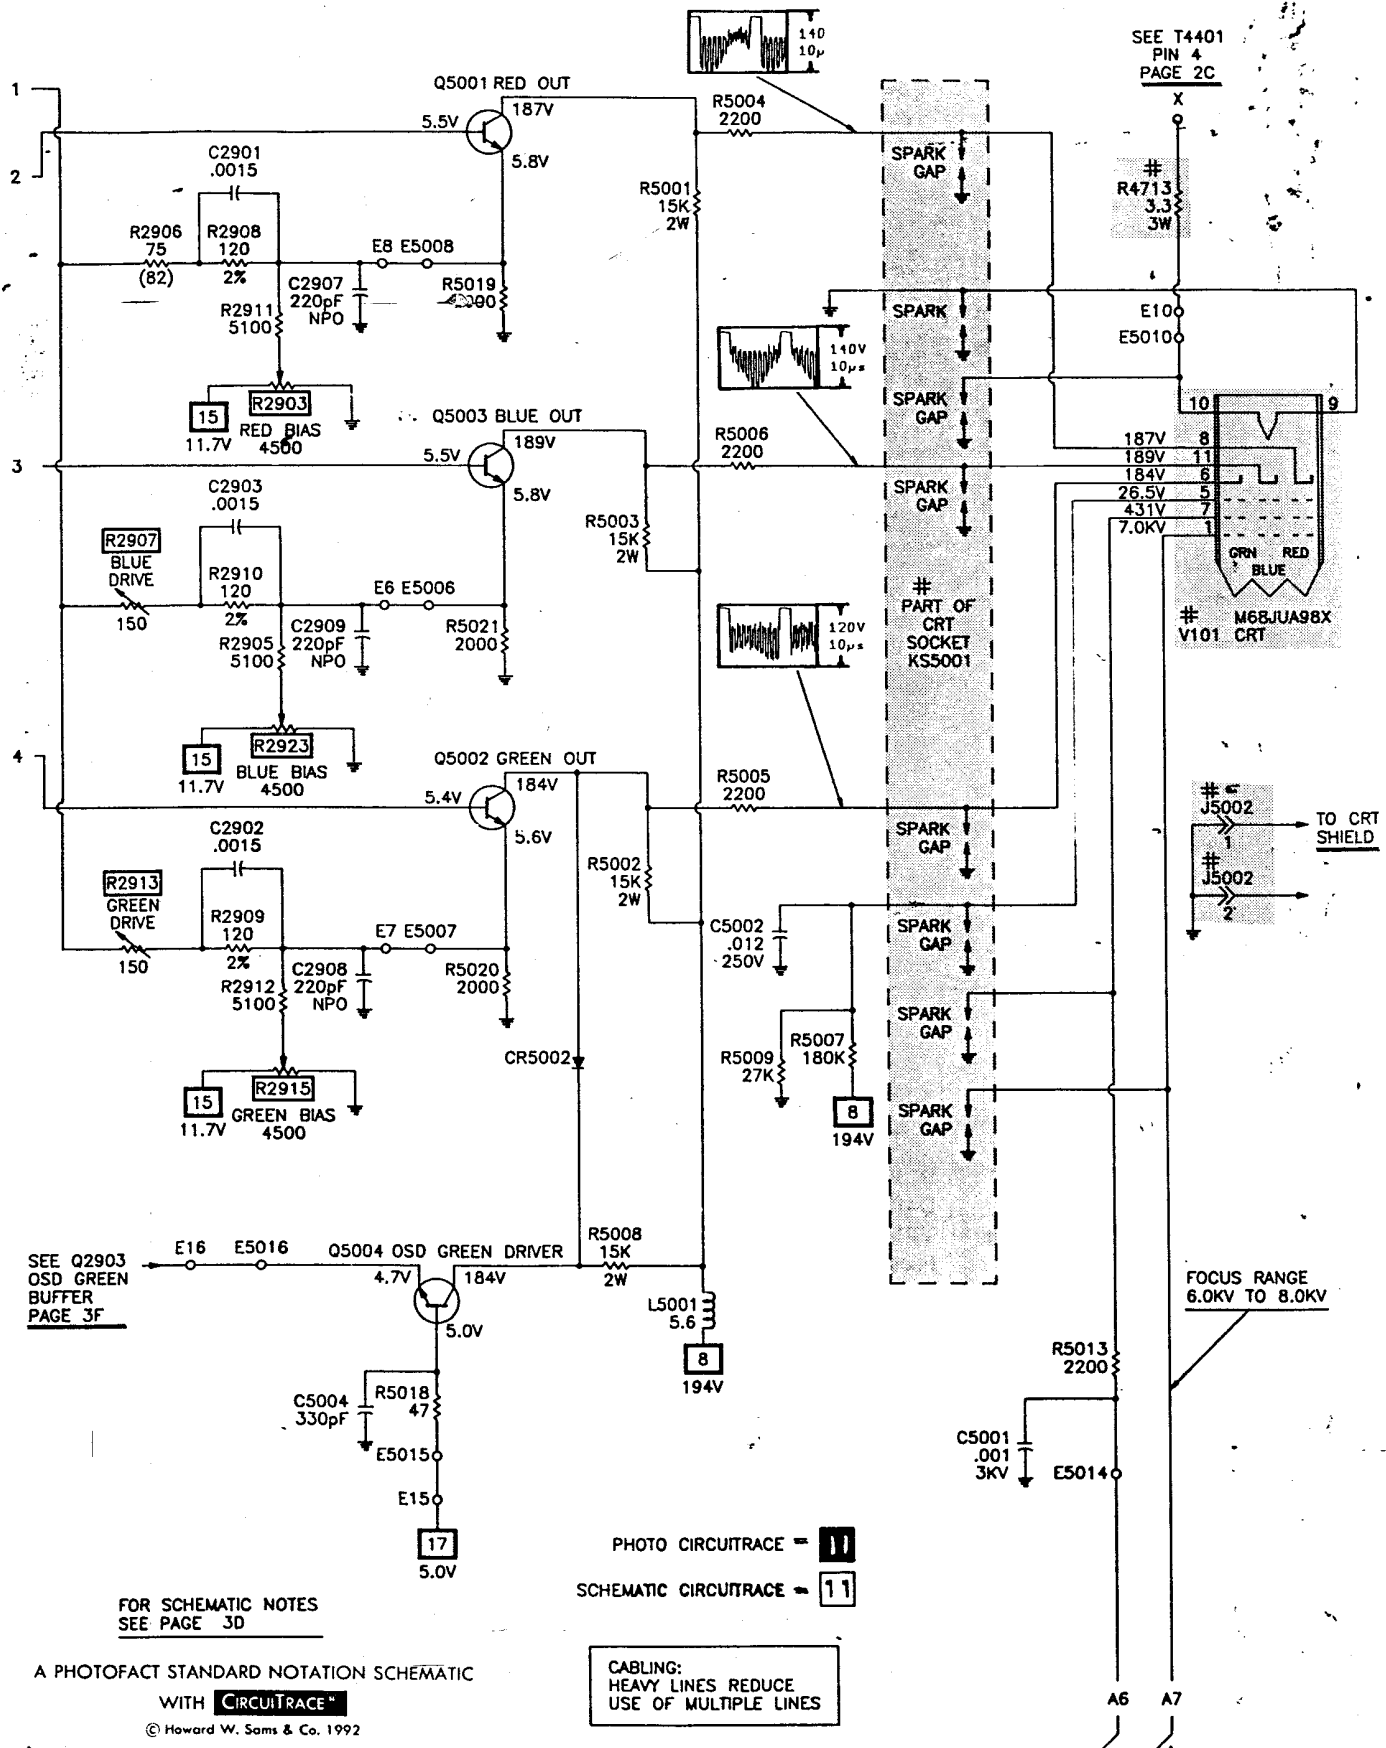

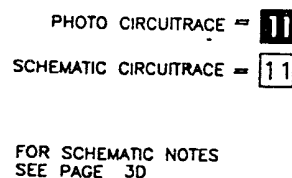

C

TELEVIS

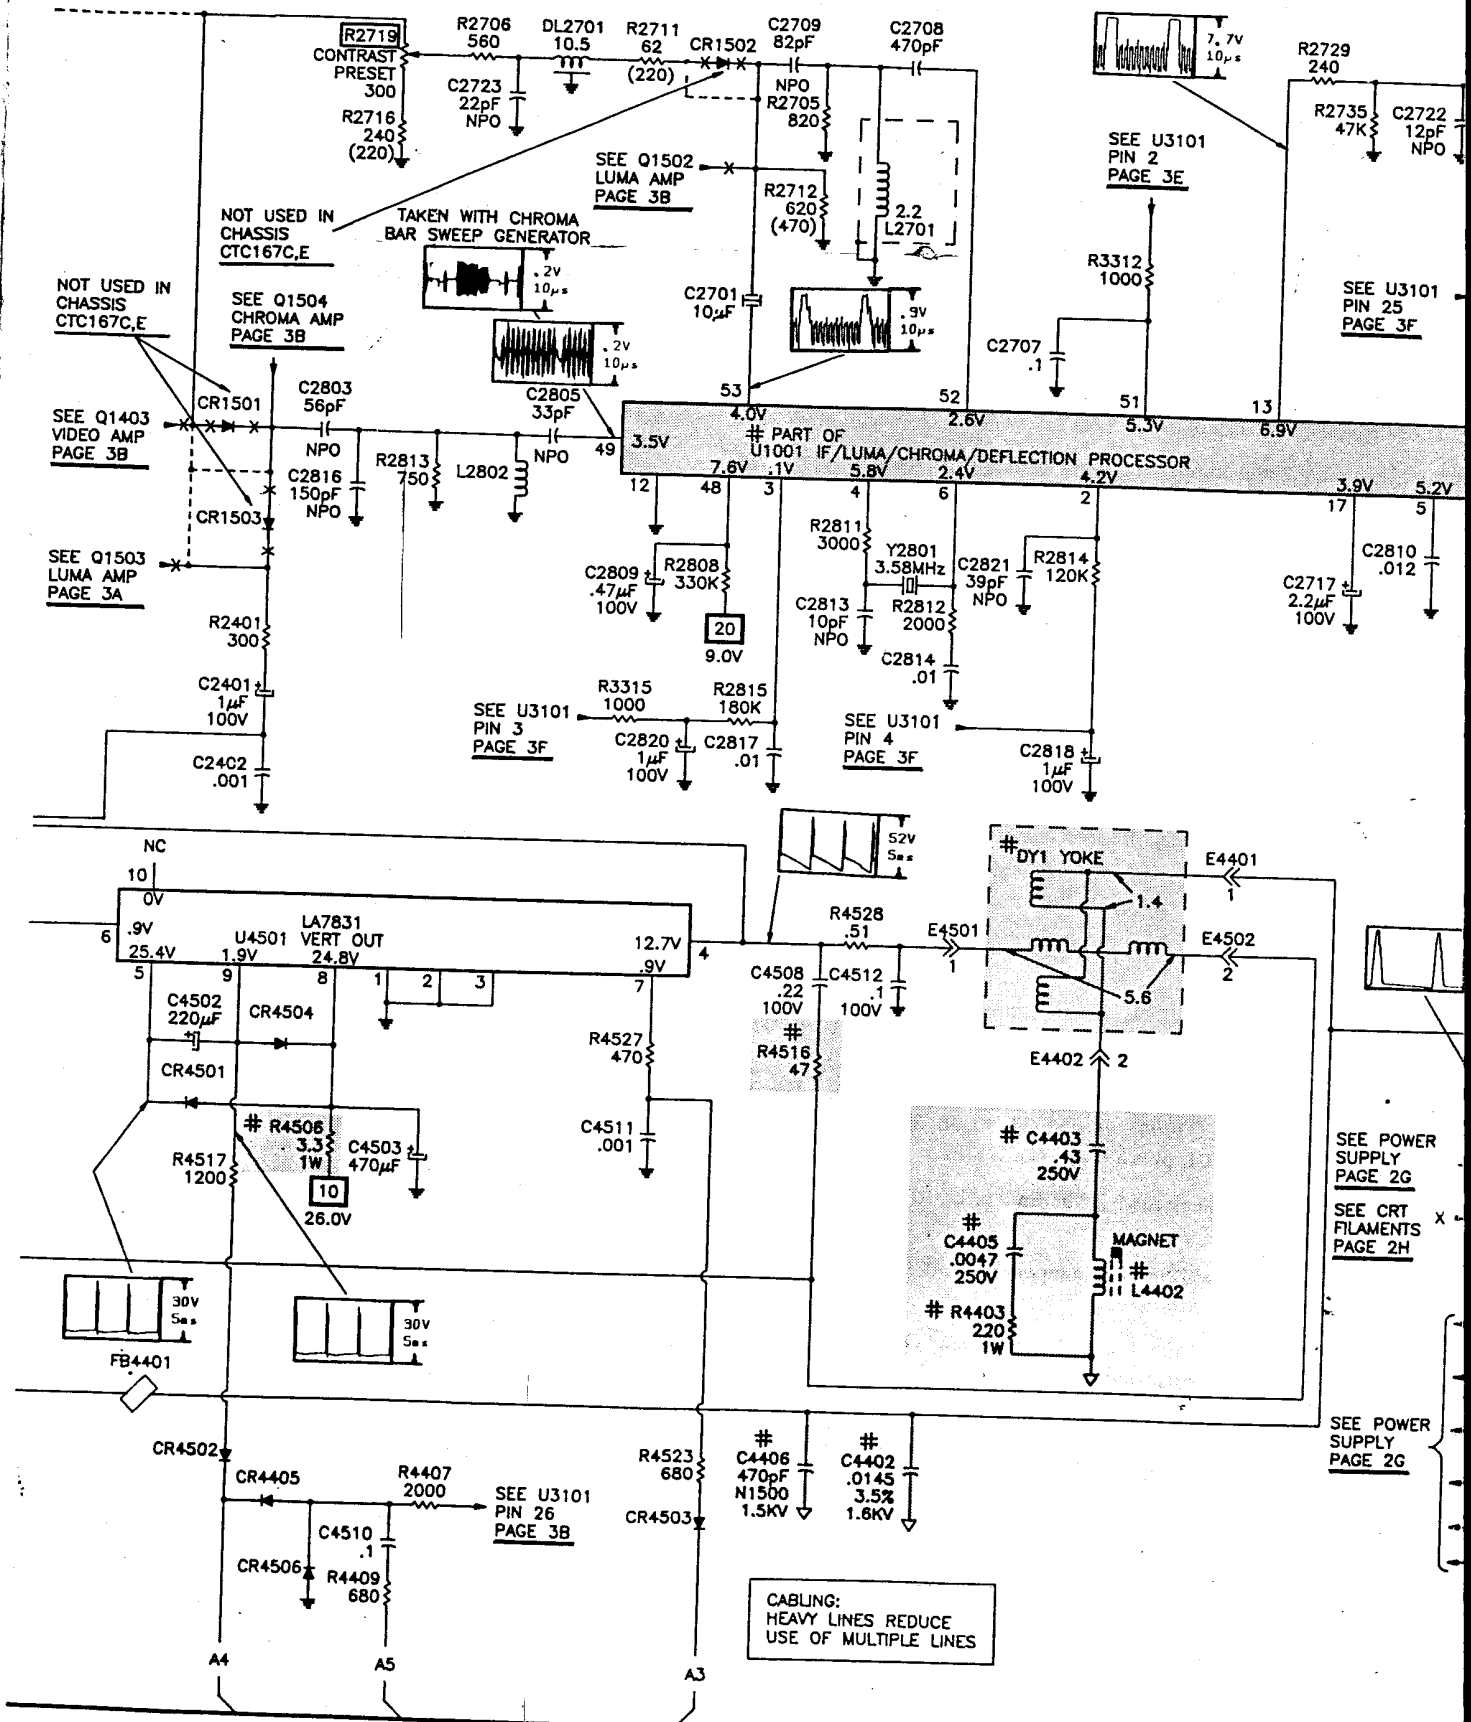

PHOTOFACT® Technical Service Data

3011

SET 3011

MODEL 25GC742KF1/MF1 (CHASSIS CTC167CS)

GENERAL ELECTRIC


INDEX

Convergence Adjustments	1
GridTrace Location Guide	
CRT Board	7
Main Board - Partial (1 of 2) -	
Bottom View	6
Main Board - Partial (2 of 2) -	
Bottom View	6
Main Board - Top View	5
IC Functions	4
Miscellaneous Adjustments	1
Parts List	
TV	7, 8
Photos	
Cabinet-Rear View	1
CRT Board	7
Front Panel Board	4
Main Board - Partial (1 of 2) -	
Bottom View	6
Main Board - Partial (2 of 2) -	
Bottom View	6
Main Board - Top View	5
Placement Chart	4
Quick-Checks Troubleshooting	
CRT Board	7
Main Board - Top View	5
Safety Precautions	1
Schematics	
Audio (Mono)	3
Audio/Video Switching	3
CRT	2
Notes	3
Power Supply	2
Remote Control Transmitters	
CRK50C	4
CRK53B	4
CRK59C	4
Tuner Control	3
TV	2
UHF/VHF Tuner	3
Stereo Adjustments	1
Test Equipment	1
Test Jig Hookup	1
Troubleshooting	1
Tuner Terminal Guide	1
Tuner Voltage Chart	1

For Supplier Address,
See PHOTOFACT Annual Index

GENERAL ELECTRIC

Model 25GC742KF1/MF1 (Chassis CTC167CS)

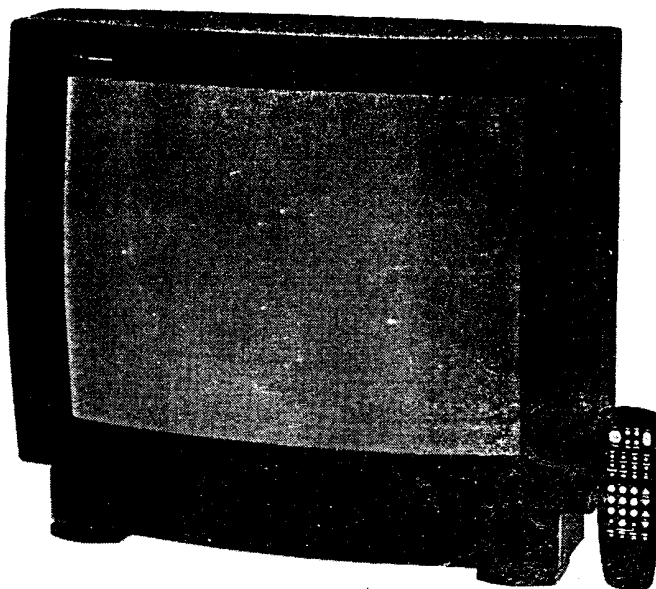

Representative Model

Complete coverage
for servicing a television receiver...

- Schematics
- Parts lists
- Component locations
- Troubleshooting guide

Coverage includes these additional models and chassis:

MODEL	CHASSIS
25GC703MF1	CTC167E
25GC725MF1	CTC167C
25GC729MF1	CTC167C
25GC744KF1/MF1	CTC167CS
25GT505FC1/NC1	CTC167E
25GT534FC1/NC1	CTC167C
25GT535FC1	CTC167CS
26GC751MF1	CTC167CS



HOWARD W. SAMs & COMPANY

JULY 1992 SET 3011