

Solucion de Fallas


Televisor a Color

CHASIS : CN-001M

Modelos	
DTQ-14P2/P3FCM	U.S.A CANADA (AC120V)
DTQ-14P2/V1FCWM/P2SCM	
DTQ-14V1/V5FCM/V1/V4SCM	
DTQ-14V5FCNM/15U5SCM	
DTQ-14V6FCBM/FCPM/FBBM/FPPM	
DTQ-14J4FCGM/FCCM	
DTQ-20V1/V4/V5FCM	
DTQ-20V1/V4SCM	
DTQ-20P2/P3FCM/P2SCM	
DTQ-14V6NBM/NPM	Am erica Central (AC 110V)
DTQ-14V1/V3/V5FSM	
DTQ-14V1/V3/V4/V5/V8/V9SSM	
DTQ-14U1FSM/SSM/20U1FSM/SSM	
DTQ-20P2SSM/15U5FSM	
DTQ-20V1/V3/V4FSM	
DTQ-20V1/V3/V4/V8/V9SSM	
DTQ-14V1/V4/V5FSPM	Chile, Peru, Filipinas (AC220V)
DTQ-14V1/V4/V5/U1SSPM	
DTQ-14V6NBPM/NPPM	
DTQ-20V1/V4FSPM	
DTQ-20V1/V3/V4/U1SSPM	
DTQ-15U5SSPM	Dominica (AC60~180)
DTQ-14V1/V4SSFM	
DTQ-20V1/V4SSFM	
DTQ-14V4/20V4FCFM	Corea, USA, Jap on(AC90~250V)


ELECTR ONICOS DAEWOO CO., LTDA.

Mayo de 2002

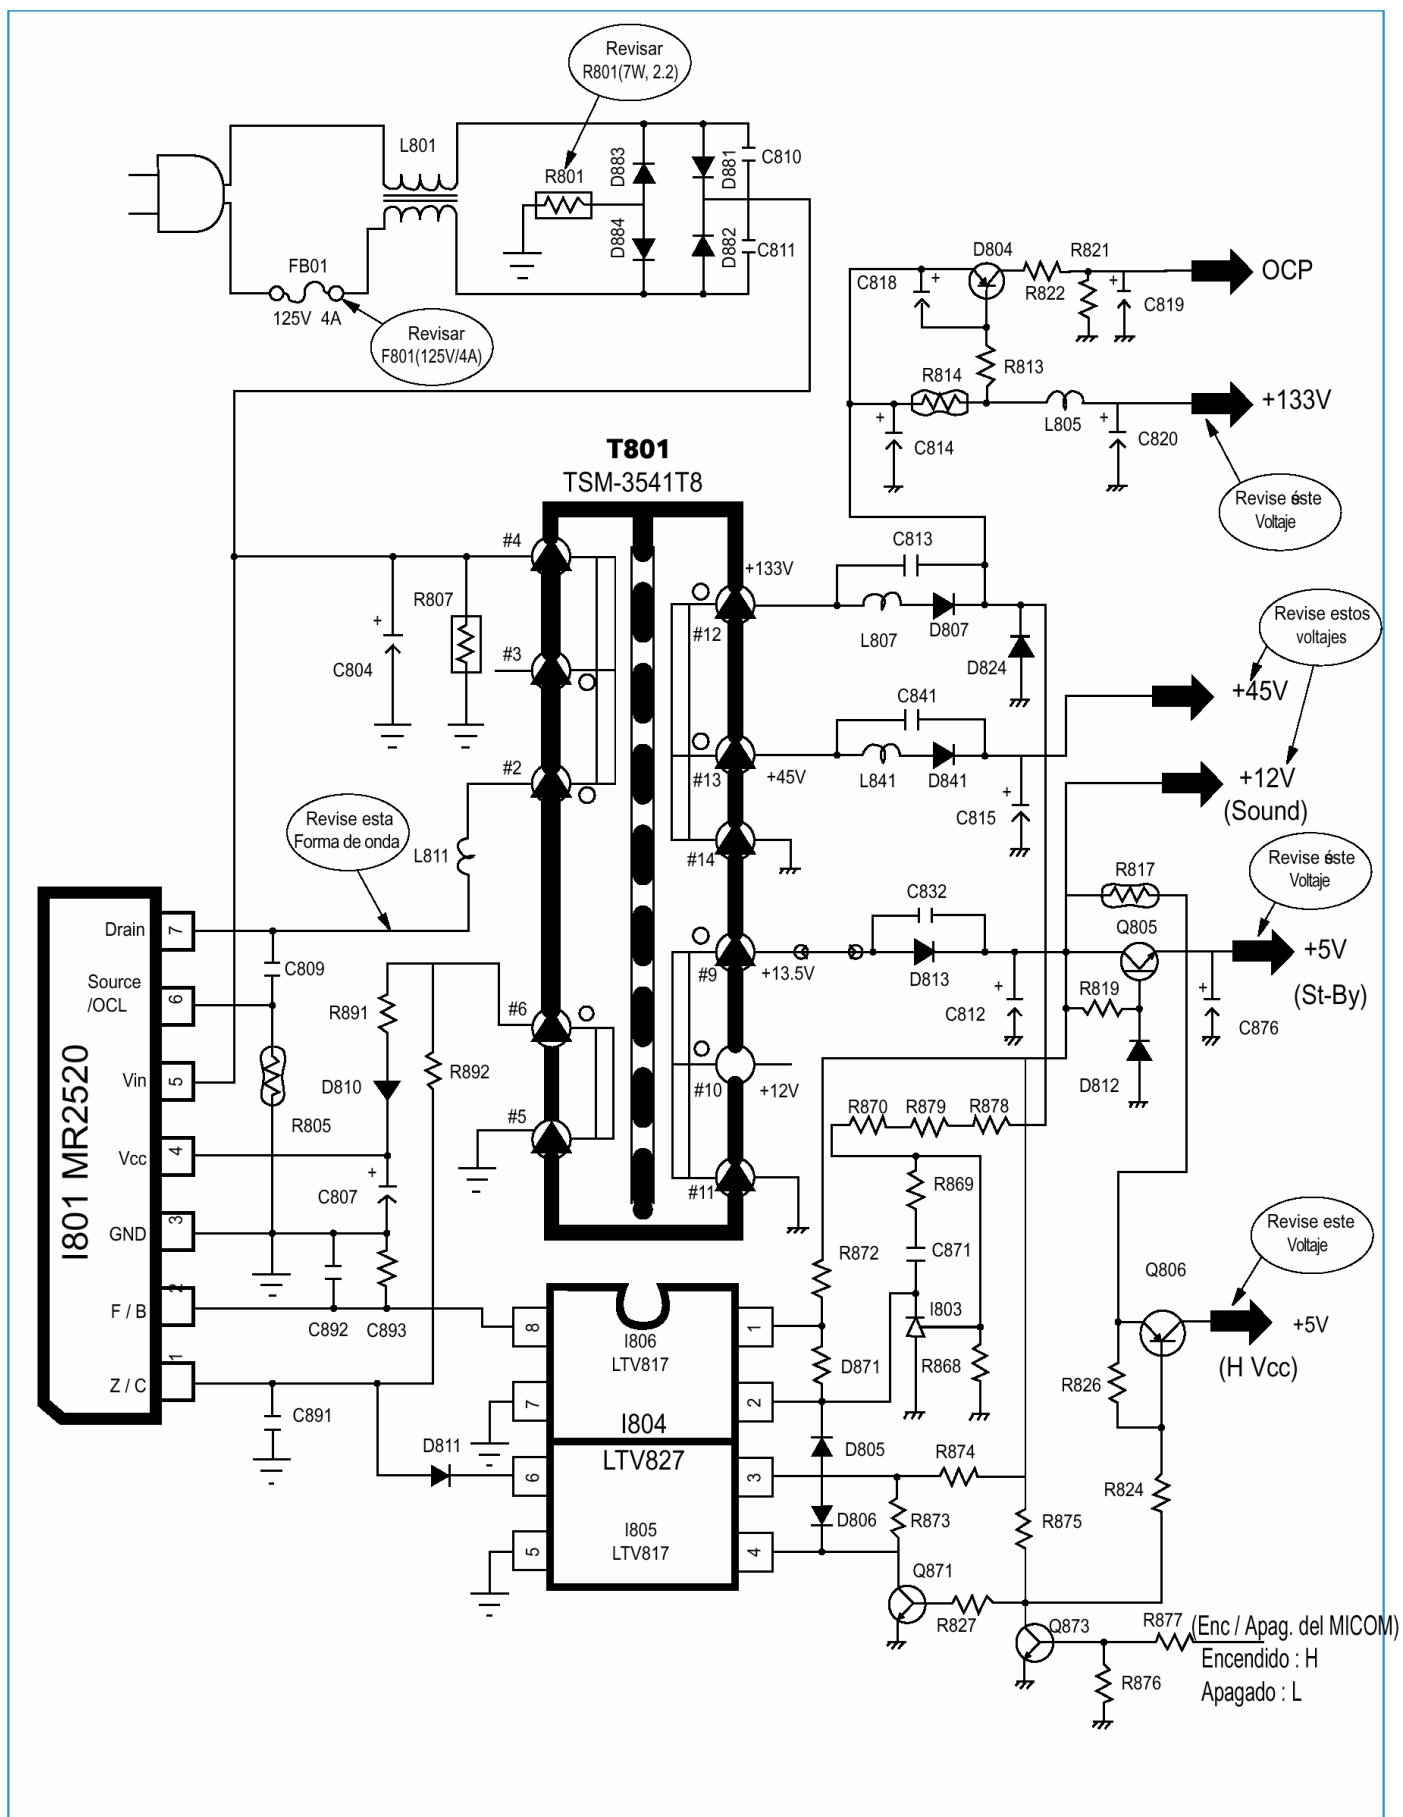

2. NO HAY IMAGEN


<p>Revise la forma de onda del Pin 46 del I101</p>	<p>NO : Vaya a la figura ©</p> <p>OK : Vaya a la figura ④</p>
--	---

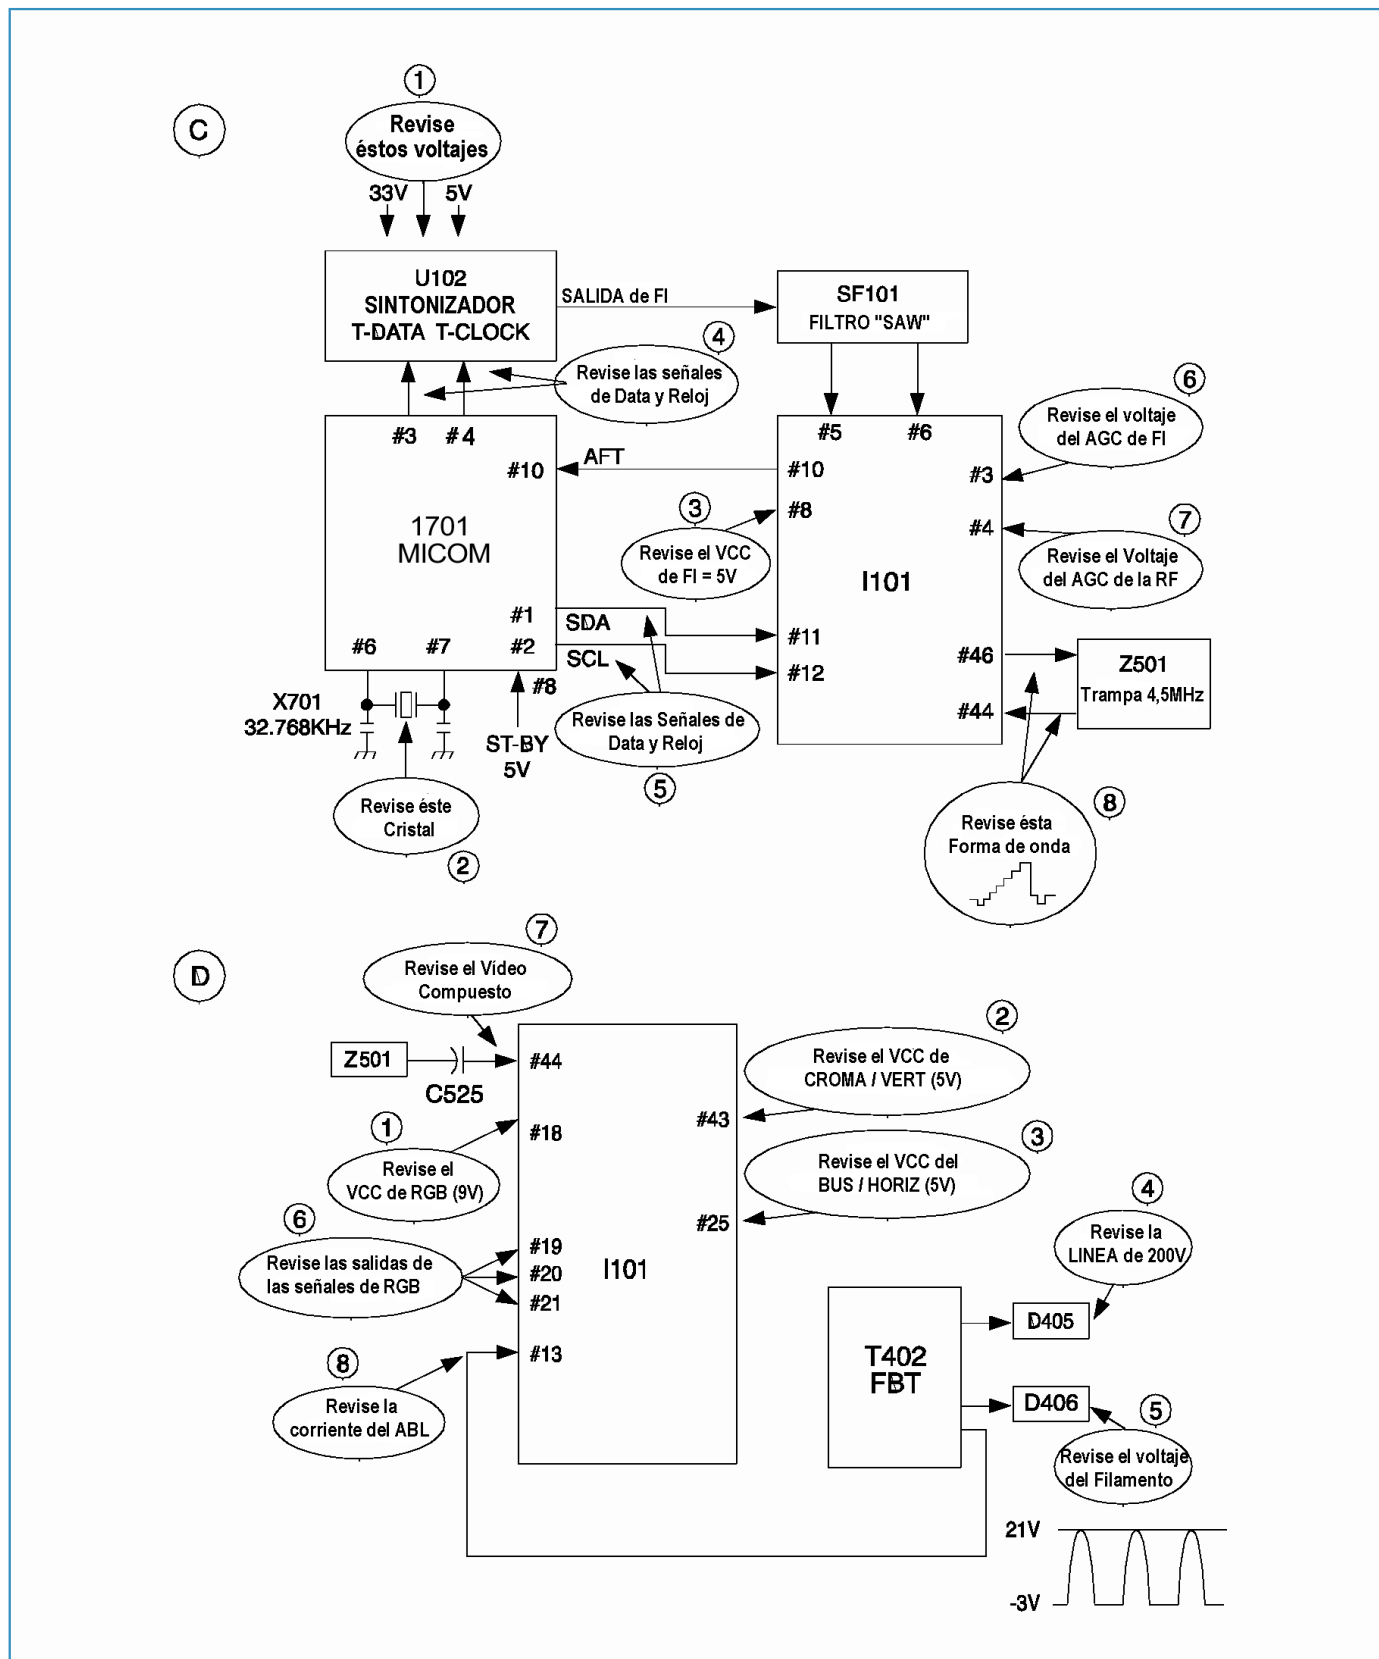

3. NO HAY SONIDO


Revise la señal de audio de salida del Pin 1 del I101	NO : Vaya a la figura ⑥
	OK : Vaya a la figura ⑦

⑤

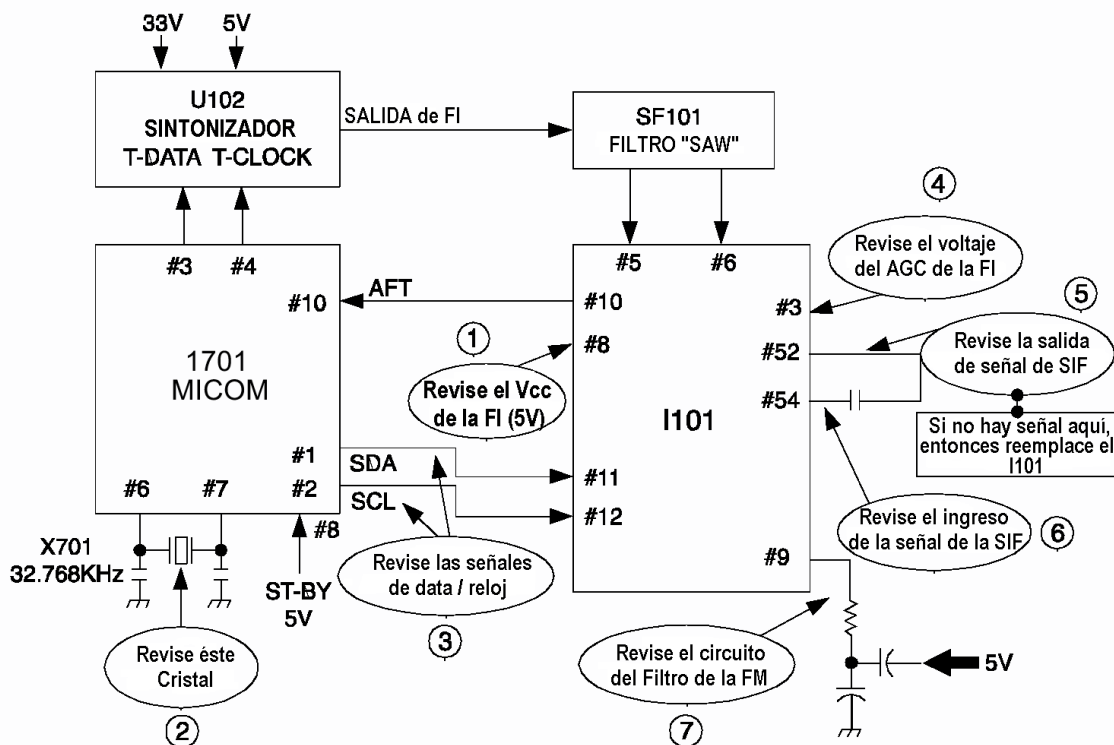


⑥

(MODELOS MONO SOLAMENTE)

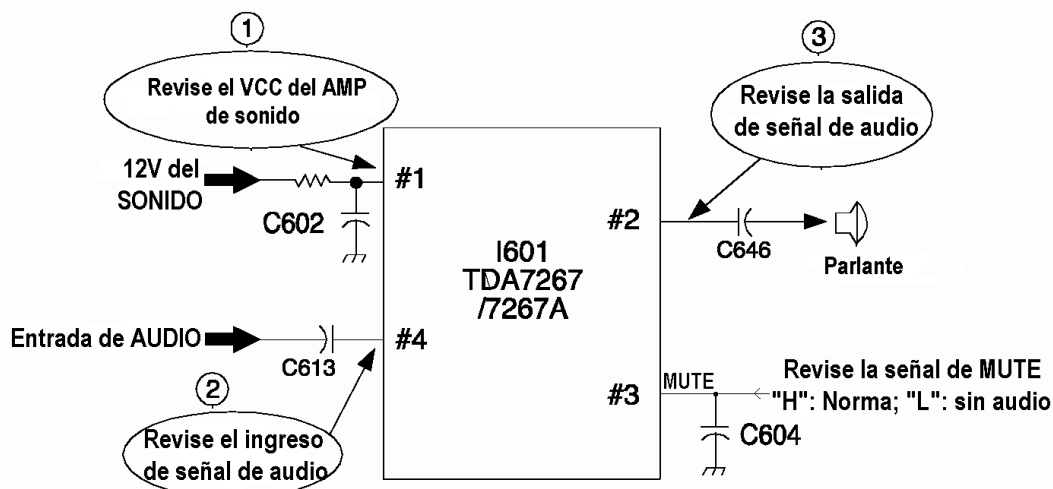


4. NO MEMORIZA CANALES o SE LOS SALTA


Revise las condiciones de ingreso de la señal	NO : La señal se pierde o está ausente
	OK : Vaya a la figura (h)

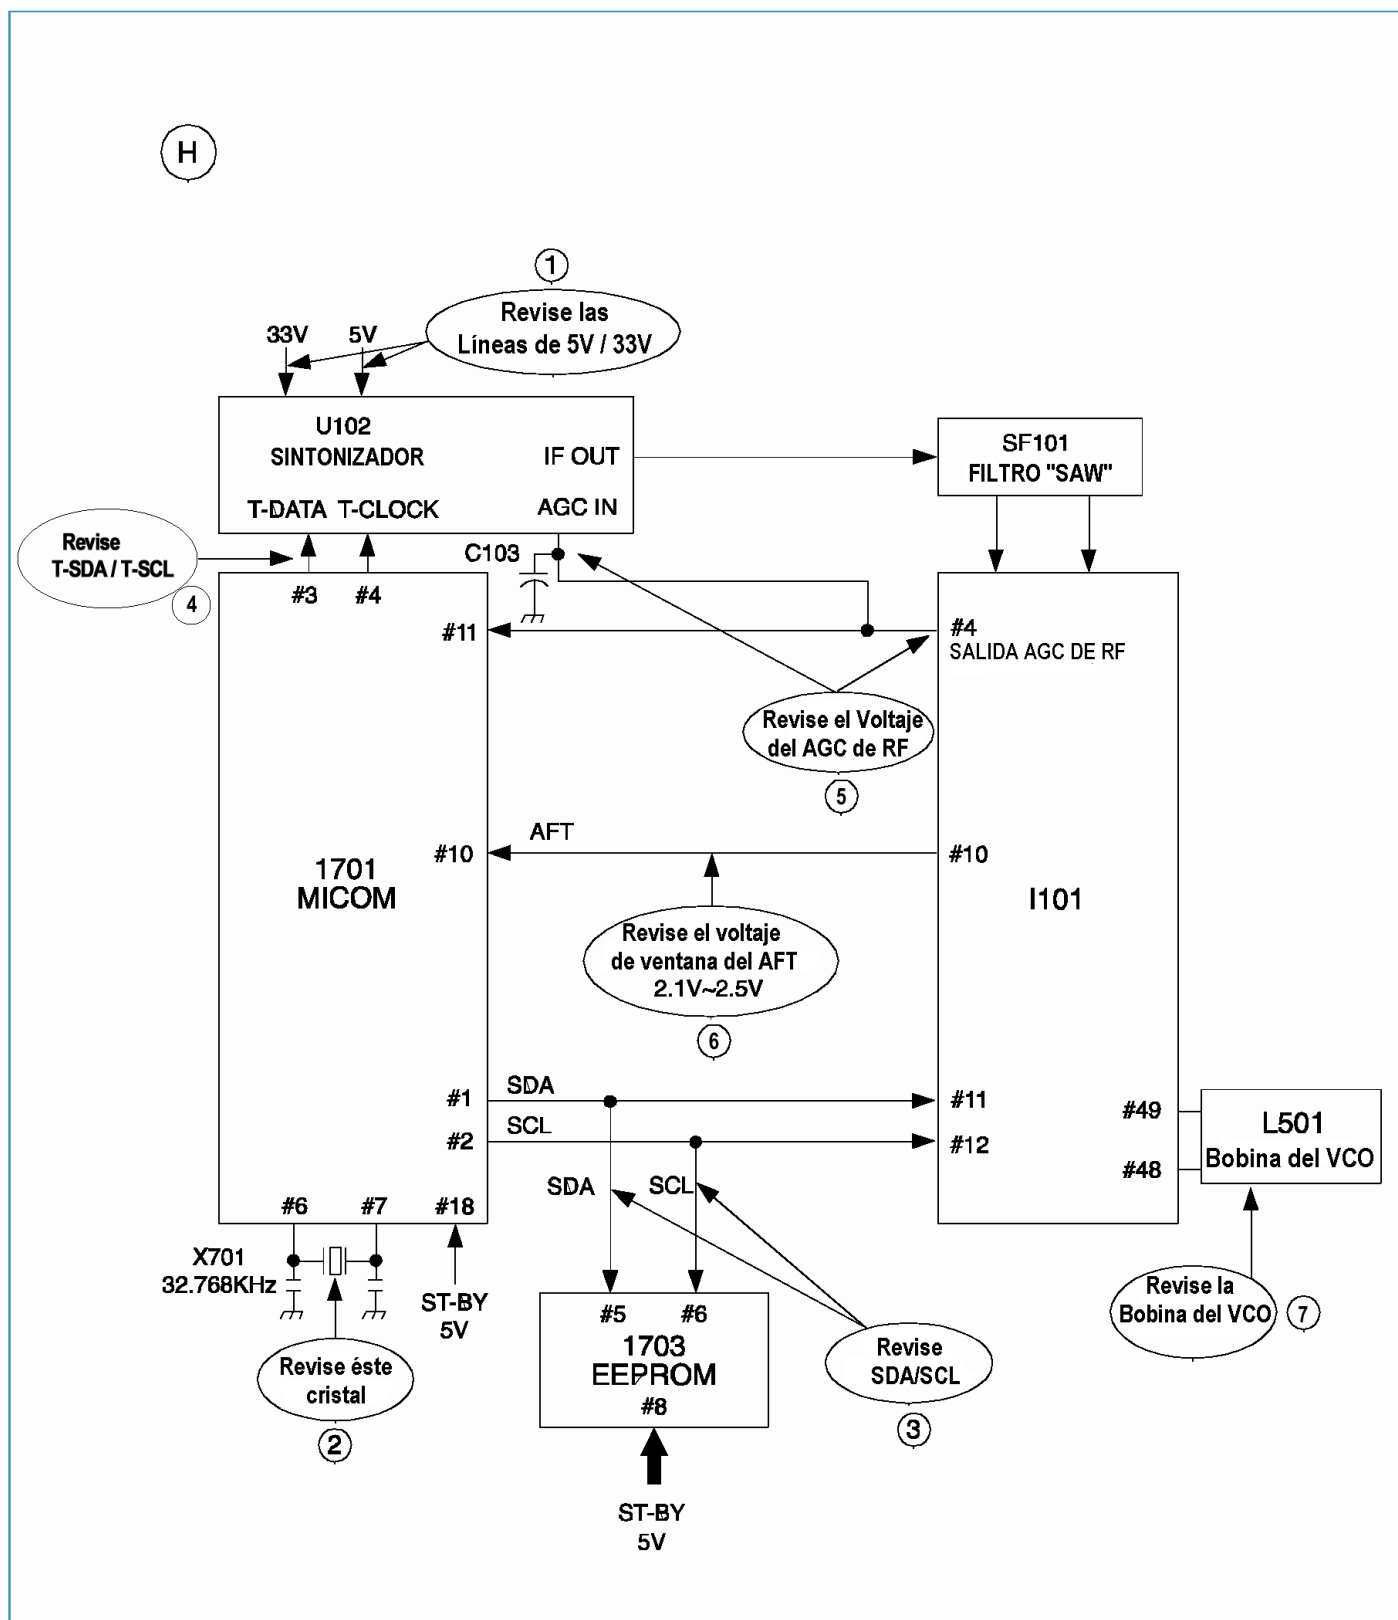


5. NO HAY COLOR

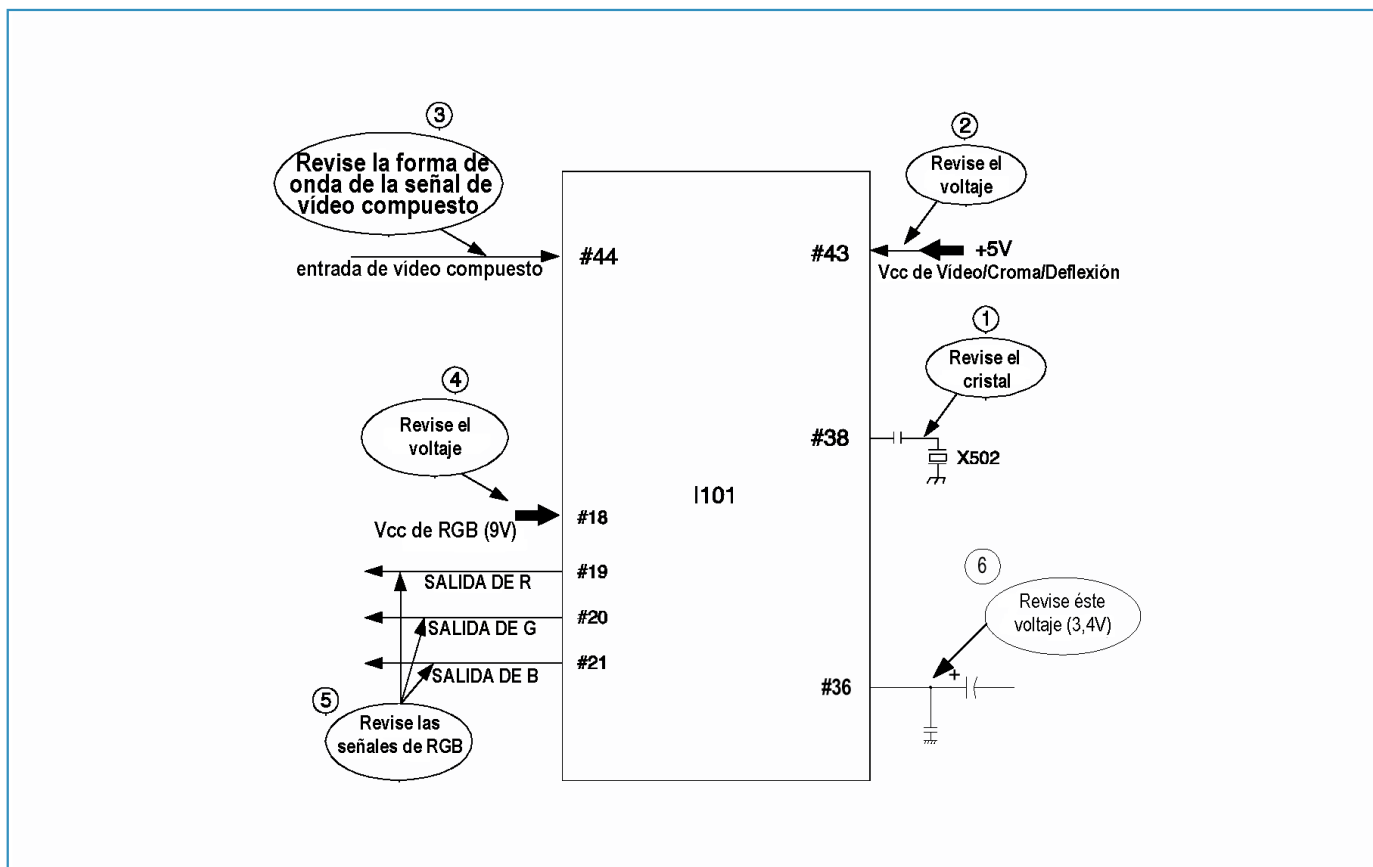


6. NO HAY DEFLEXIÓN VERTICAL

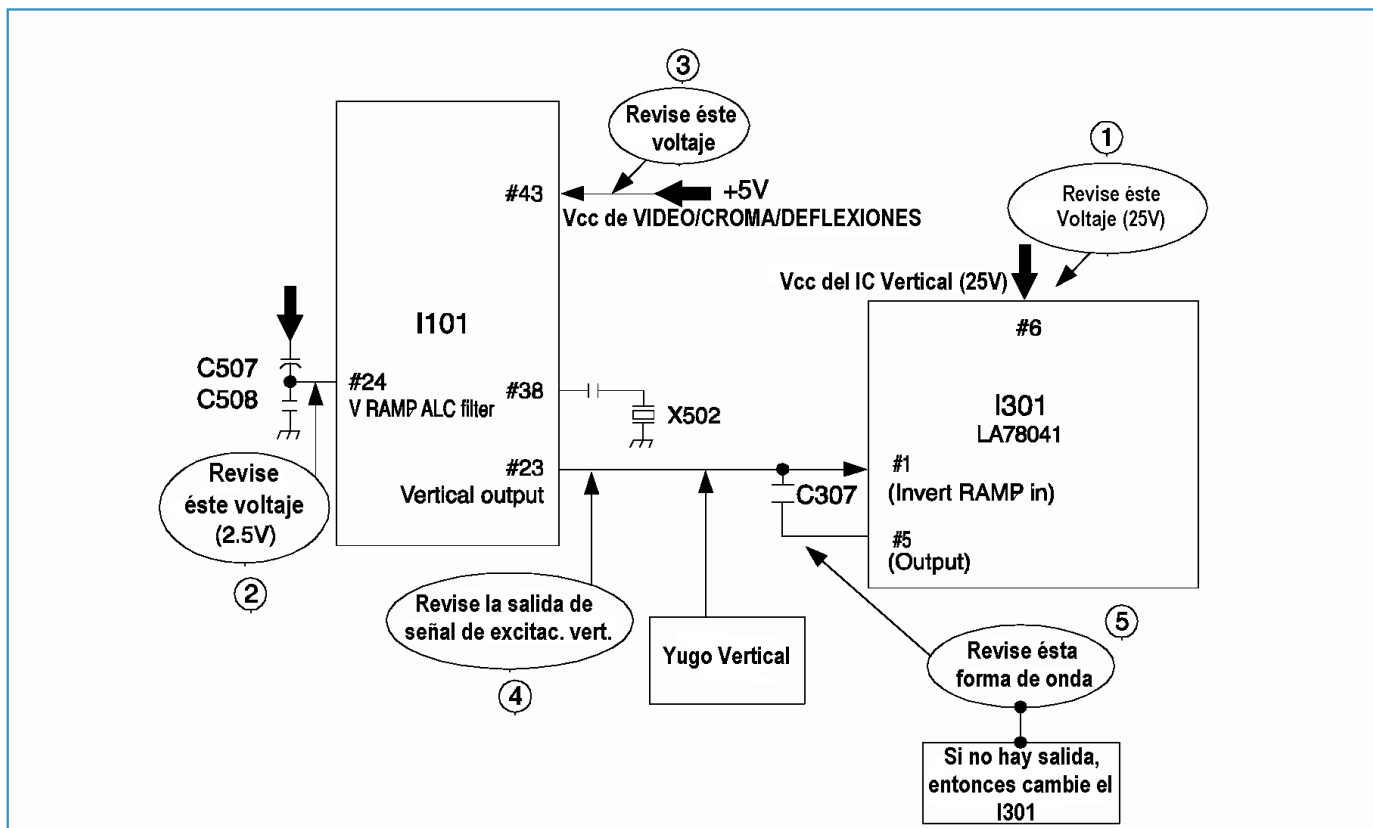

7. NO HAY OSD (NO APARECEN CARACTERES EN PANTALLA)

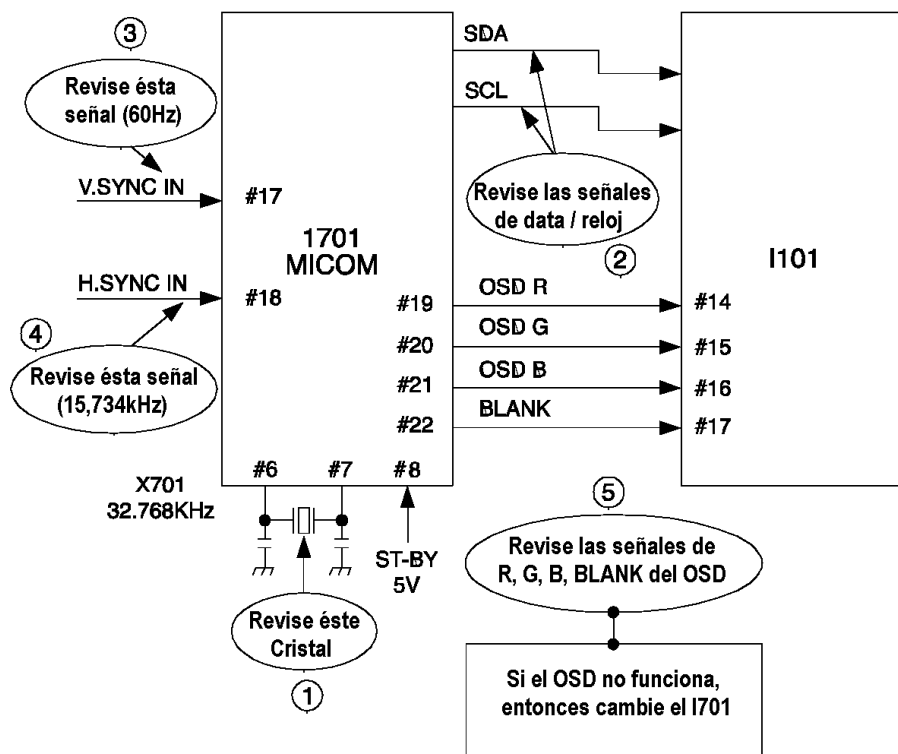

8. NO FUNCIONA CON EL CONTROL REMOTO

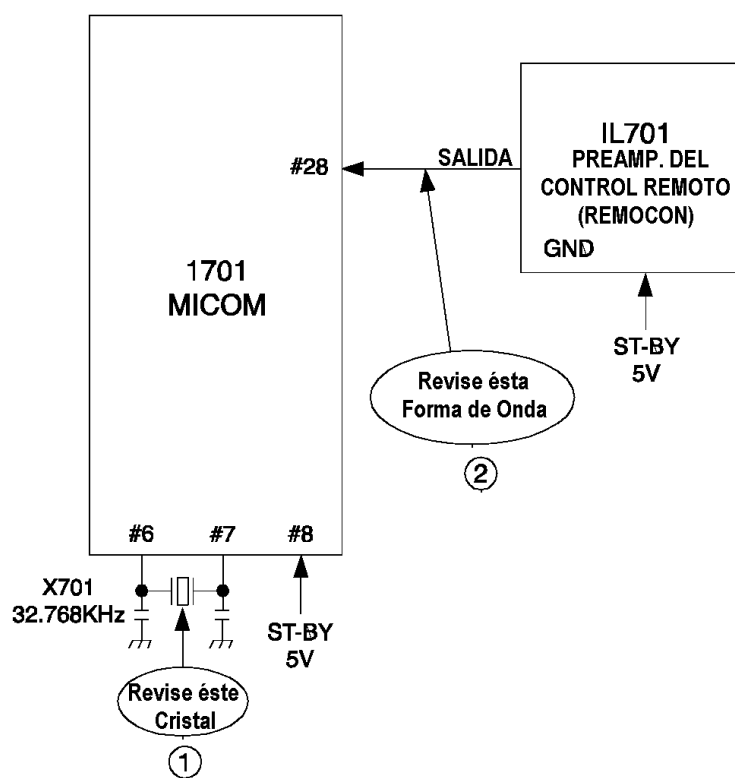

DAEWOO

CORPORACIÓN ELECTRÓNICA DAEWOO LTDA.

686, AHYEON-DONG MAPO-GU
SEOUL, KOREA
C.P.O. BOX 8003 SEOUL, KOREA
TELEX : DWELEC K28177-8
CABLE : "DAEWOOELEC"