

HCD-EC98P

SERVICE MANUAL

Ver. 1.1 2009.01

US Model
Canadian Model
Australian Model



- HCD-EC98P is the amplifier, CD player and tuner section in MHC-EC98P/EC98Pi.

Model Name Using Similar Mechanism	CDM77B-K6BD90-WOD	HCD-EC78P
	CDM88A-K6BD90-WOD	HCD-EC68
Mechanism Type	US, Canadian	CDM77B-K6BD90-WOD
	Australian	CDM88A-K6BD90-WOD
Base Unit Name	BU-K6BD90-WOD	
Optical Pick-up Block Name	KSM-213DCP	

SPECIFICATIONS

Main unit

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
(The United States model only)

Low channel

With 8 ohm loads, both channels driven, from 120 – 10,000 Hz; 60 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

High channel

With 8 ohm loads, both channels driven, from 2,000 – 13,000 Hz; 60 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

US and Canadian models:

Front Speaker

RMS output power (reference):

Low channel

95 W + 95 W (per channel at 8 Ω , 1 kHz, 10% THD)

High channel

95 W + 95 W (per channel at 8 Ω , 8 kHz, 10% THD)

Subwoofer

RMS output power (reference):

150 W (at 4 Ω , 80 Hz, 10% THD)

Australian model:

The following are measured at AC 240V, 50/60Hz

Front Speaker

Power output (rated):

Low channel

55 W + 55 W (at 8 Ω , 1 kHz, 1% THD)

High channel

55 W + 55 W (at 8 Ω , 8 kHz, 1% THD)

RMS output power (reference):

Low channel

75 W + 75 W (per channel at 8 Ω , 1 kHz, 10% THD)

High channel

75 W + 75 W (per channel at 8 Ω , 8 kHz, 10% THD)

Subwoofer

RMS output power (reference):

130 W (at 4 Ω , 80 Hz, 10% THD)

Inputs

AUDIO IN (stereo mini jack): Sensitivity 800 mV, impedance 22 kilohms

Outputs

PHONES (stereo mini jack): Accepts headphones with an impedance of 8 Ω or more

SPEAKER: impedance: 8 Ω

SUBWOOFER OUT: impedance 4 Ω

CD player section

System: Compact disc and digital audio system

Laser: Semiconductor laser ($\lambda=770 - 810$ nm)

Emission duration: continuous

Frequency response: 20 Hz – 20 kHz

Signal-to-noise ratio: More than 90 dB

Dynamic range: More than 88 dB

Tuner section

FM stereo, FM/AM superheterodyne tuner

Antenna:

FM lead antenna

AM loop antenna

FM tuner section:

Tuning range

North American model: 87.5 – 108.0 MHz (100 kHz step)

Australian model: 87.5 – 108.0 MHz (50 kHz step)

Intermediate frequency: 10.7 MHz

AM tuner section:

Tuning range

North American model:

530 – 1,710 kHz (with 10 kHz tuning interval)

531 – 1,710 kHz (with 9 kHz tuning interval)

Australian model:

531 – 1,710 kHz (with 9 kHz tuning interval)

530 – 1,710 kHz (with 10 kHz tuning interval)

Intermediate frequency: 450 kHz

General

Power requirements:

North American model: AC 120 V, 60 Hz

Australian model: AC 230 – 240 V, 50/60 Hz

Power consumption:

US model: 270 W

Canadian model: 350 VA

Australian model: 220 W

Dimensions (w/h/d) (excl. speakers):

Approx. 200 × 306 × 430 mm

Mass (excl. speakers):

US and Canadian models:

Approx. 6.9 kg

Australian model:

Approx. 7.0 kg

Design and specifications are subject to change without notice.

9-889-068-02

2009A05-1

© 2009.01

Sony Corporation

Audio&Video Business Group

Published by Sony Techno Create Corporation

COMPACT DISC RECEIVER

SONY®

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.


SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

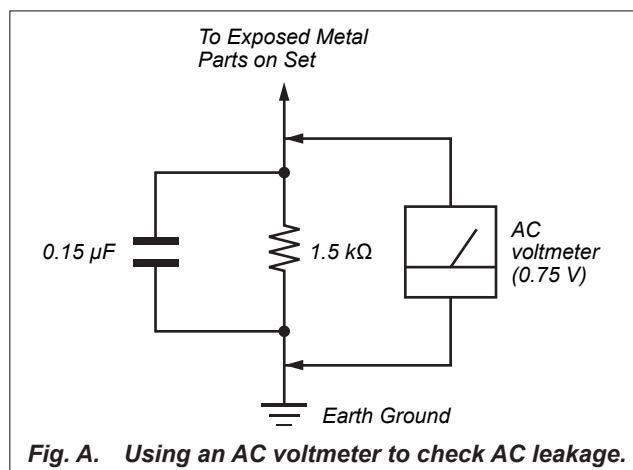

SAFETY-RELATED COMPONENT WARNING!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COM- POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1

SERVICING NOTES

TABLE OF CONTENTS

1. SERVICING NOTES	3
2. GENERAL	6
3. DISASSEMBLY	
3-1. Disassembly Flow	10
3-2. Side Panel (L)/(R)	11
3-3. Panel (Top)	11
3-4. MAIN Board	12
3-5. Front Panel Block (Australian model)	12
3-6. Front Panel Block (US and Canadian models)	13
3-7. Back Panel Block	13
3-8. 3 CD Mechanism Block (Australian model)	14
3-9. Base Unit (Australian model)	14
3-10. 1 CD Mechanism Block (US and Canadian models)	15
3-11. Base Unit (US and Canadian models)	15
3-12. Belt (US and Canadian models)	16
3-13. Belt (Australian model)	16
3-14. OP Base Assy (KSM-213D)	17
4. TEST MODE	18
5. ELECTRICAL ADJUSTMENTS	22
6. DIAGRAMS	
6-1. Block Diagram - CD SERVO, TUNER Section -	25
6-2. Block Diagram - MAIN Section -	26
6-3. Printed Wiring Board - CD Board -	28
6-4. Schematic Diagram - CD Board -	29
6-5. Printed Wiring Boards - MAIN Section -	30
6-6. Schematic Diagram - MAIN Section (1/3) -	31
6-7. Schematic Diagram - MAIN Section (2/3) -	32
6-8. Schematic Diagram - MAIN Section (3/3) -	33
6-9. Printed Wiring Board - HI AMP Board -	34
6-10. Schematic Diagram - HI AMP Board -	34
6-11. Printed Wiring Board - LOW AMP Board -	35
6-12. Schematic Diagram - LOW AMP Board -	35
6-13. Printed Wiring Board - PANEL Board -	36
6-14. Schematic Diagram - PANEL Board -	37
6-15. Printed Wiring Boards - KEY Section -	38
6-16. Schematic Diagram - KEY Section -	38
6-17. Printed Wiring Board - PT Board -	39
6-18. Schematic Diagram - PT Board -	39
6-19. Printed Wiring Board	
- MOTOR Board (US and Canadian models) -	40
6-20. Schematic Diagram	
- MOTOR Board (US and Canadian models) -	40
7. EXPLODED VIEWS	
7-1. Panel Section	47
7-2. Front Panel Section	48
7-3. Chassis Section	49
7-4. Main Section	50
7-5. 3 CD Mechanism Section (Australian model)	
(CDM88A-K6BD90-WOD)	51
7-6. 1 CD Mechanism Section (US and Canadian models)	
(CDM77B-K6BD90-WOD)	52
8. ELECTRICAL PARTS LIST	53

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pickup block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)



: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

RELEASING THE DISC TRAY LOCK


The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Releasing Procedure:


1. Press [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. While pressing the [■] button, press the [▲] button for more 5 seconds).
4. The message "UNLOCKED" is displayed and the disc tray is unlocked.

Note: When "LOCKED" is displayed, the slot lock is not released by turning power on/off with the [I/⏻] button.

HOW TO OPEN THE TRAY WHEN POWER SWITCH TURN OFF

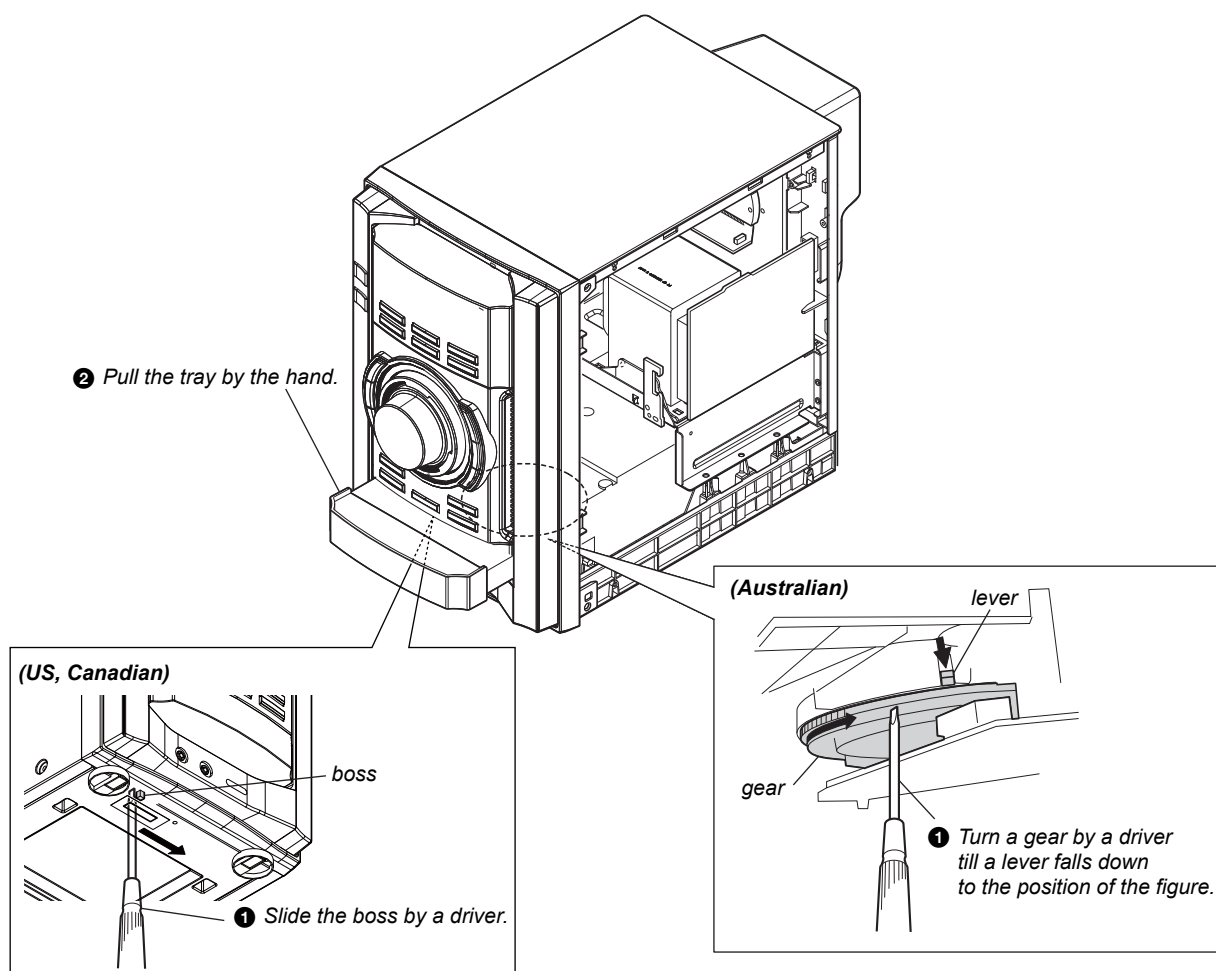


HOW TO REMOVE THE KNOB (VOL)

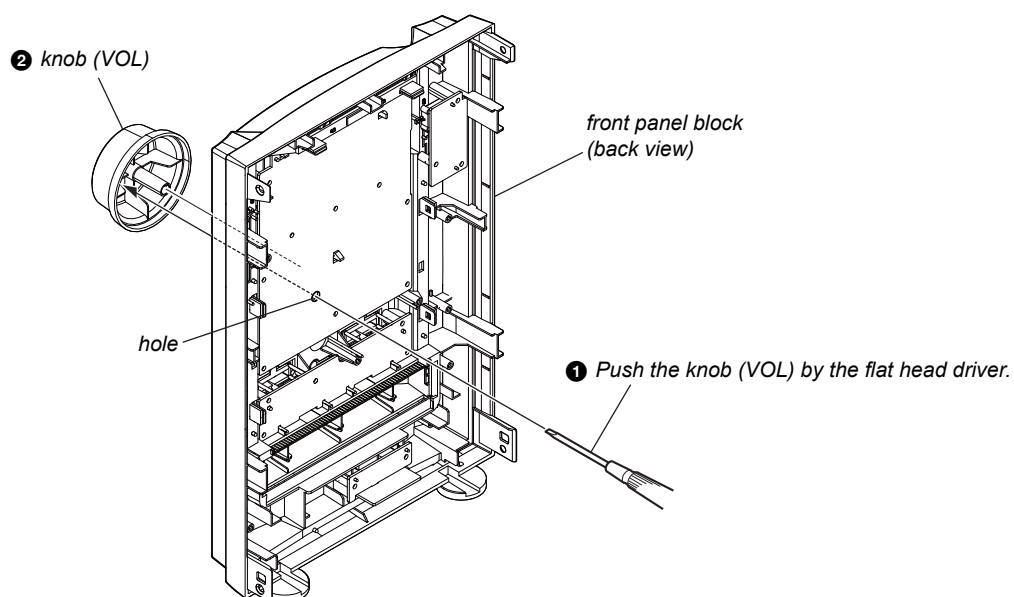


CAPACITOR DISCHARGE FOR ELECTRIC SHOCK PREVENTION

In checking the MAIN board, make a capacitor discharge of C622 and C626 for electric shock prevention.

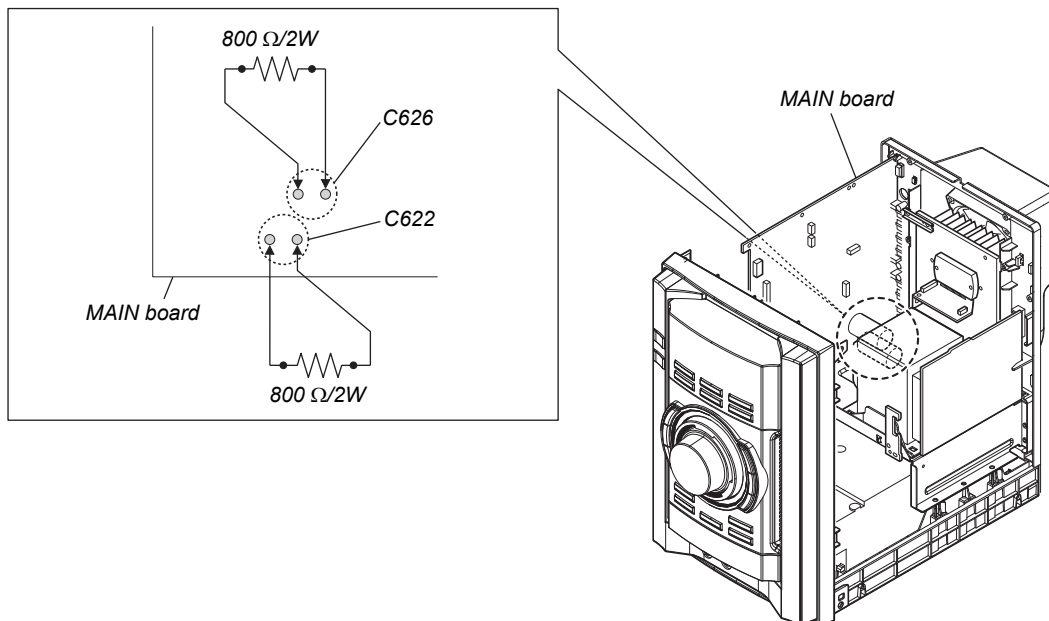

MODEL IDENTIFICATION


– Back Panel –

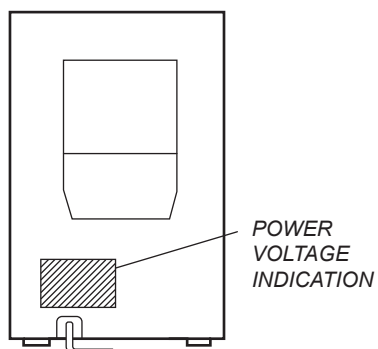

Model	Power Voltage Indication
US and Canadian models	AC 120 V, 60 Hz
Australian model	AC 230 - 240 V, 50/60 Hz

US and Canadian models:

Basic Operations

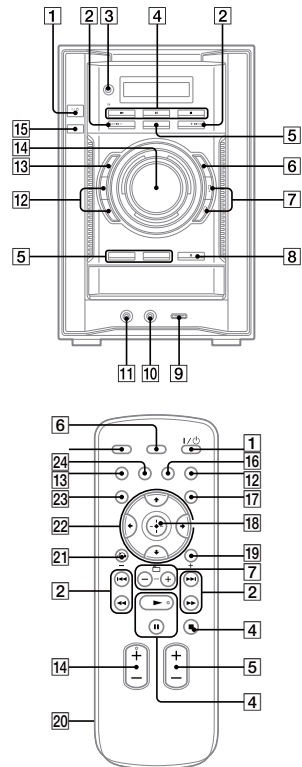


This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

Before using the system

To use the remote

Slide and remove the battery compartment lid 20, and insert the two R6 (size AA) batteries (supplied), ● side first, matching the polarities shown below.

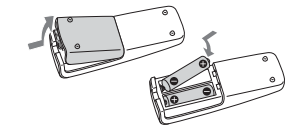

Notes on using the remote

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.
- Batteries installed devices shall not be exposed to excessive heat such as sunshine, fire or the like.

To set the clock

1 Turn on the system.

Press I/⏻ (on/standby) 1 to turn on the system.

2 Select the clock set mode.

Press TIMER MENU 17. The hour indication flashes. If "PLAY SET" flashes, press ⏮/⏭ 22 repeatedly to select "CLOCK", and then press ⏻ 18.

3 Set the time.

Press ⏮/⏭ 22 repeatedly to set the hour, then press ⏻ 18 (enter) 18. The minute indication flashes. Use the same procedure to set the minutes.

Note

The clock settings are lost when you disconnect the power cord or if a power failure occurs.

Adjusting the sound

To adjust the volume

Press VOLUME +/- (or turn the VOLUME control on the unit) 14.

To add a sound effect

To	Press
Generate a more dynamic sound (Dynamic Sound Generator X-tra)	DSGX 12 on the unit.
Set the sound effect	EQ 12.

To turn on the subwoofer

Press SUBWOOFER ON/OFF 15 on the unit until "SUBWOOFER" appears. The volume of the subwoofer is linked to the front speakers.

Playing a CD/MP3 disc

1 Select the CD function.

Press FUNCTION +/- (or FUNCTION on the unit) 5 repeatedly.

2 Place a disc.

Press ▲ (open/close) 8 on the unit, and place a disc with the label side up on the disc tray.

To close the disc tray, press ▼ (open/close) 8 on the unit.
Do not force the disc tray closed with your finger, as this may damage the unit.



3 Start playback.

Press ► (play) 4.

To	Press
Pause playback	⏸ (pause) 4. To resume play, press the button again.
Stop playback	■ (stop) 4.
Select a folder on an MP3 disc	⏮ +/- (select folder) 7.
Select a track or file	⏮/⏭ (go back/go forward) (or ⏮/⏭) on the unit) 2.
Find a point in a track or file	Hold down ◀/▶ (rewind/fast forward) 2 during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 24 repeatedly until "REP" or "REP1" appears.

To change the play mode

Press PLAY MODE 13 repeatedly while the player is stopped. You can select normal play (no display or "■" for all MP3 files in the folder on the disc), shuffle play ("SHUF" or "SHUF+" for folder shuffle), or program play ("PGM").

* When playing a CD-DA disc, SHUF Play performs the same operation as normal (SHUF) Play.

Notes on Repeat Play

- All tracks or files on a disc are played repeatedly up to five times.
- "REP1" indicates that a single track or file is repeated until you stop it.

Notes on playing MP3 discs

- Do not save other types of tracks or files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of "MP3".
- If there are files on the disc that have the "MP3" file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of:
 - folders is 150 (including the root folder).
 - MP3 files is 255.
 - MP3 files and folders that can be contained on a single disc is 300.
 - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and playback continues until another session is encountered.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

Listening to the radio

1 Select "TUNER FM" or "TUNER AM."

Press FUNCTION +/- (or FUNCTION on the unit) 5 repeatedly.

2 Select the tuning mode.

Press TUNING MODE 13 repeatedly until "AUTO" appears.

3 Tune in the desired station.

Press +/- (or TUNING +/- on the unit) 2.

Scanning stops automatically when a station is tuned in, and then "TUNED" and "ST" (for stereo programs) appear.



To stop automatic scanning

Press ■ (stop) 4.

To tune in a station with a weak signal

If "TUNED" does not appear and the scanning does not stop, press TUNING MODE 13 repeatedly until "MANUAL" appears, and then press +/- (or TUNING +/- on the unit) 2 repeatedly to tune in the desired station.

To reduce static noise on a weak FM stereo station

Press FM MODE 24 repeatedly until "MONO" appears to turn off stereo reception.

Changing the display

To	Press
Change information on the display*	DISPLAY 6 repeatedly when the system is turned on.
Change Display	DISPLAY 6 repeatedly when the mode (See below) system is turned off.

* For example, you can view CD/MP3 disc information, such as:
track or file number during normal play.
track or file name ("F") during normal play.
artist name ("A") during normal play.
album or folder name ("B") during normal play.
total playing time while the player is stopped.

The system offers the following display modes.

Display mode	When the system is off.
Power Saving Mode ¹⁾	The display is turned off to conserve power. The timer and clock continue to operate.
Clock ²⁾	The clock is displayed.

¹⁾You cannot set the clock in Power Saving Mode.

²⁾The clock display automatically turns to Power Saving Mode after eight seconds.

Notes on the display information


- Characters that cannot be displayed appear as "...".
- The following are not displayed:
 - total playing time for an MP3 disc.
 - remaining playing time for an MP3 file.
- The following are not displayed correctly:
 - elapsed playing time of an MP3 file encoded using VBR (variable bit rate).
 - folder and file names that do not follow either ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
 - total playing time for a CD-DA disc during normal play.
 - remaining playing time for a track.
 - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used (ID3 version 2 tag information display has priority when both ID3 version 1 and version 2 tags are used for a single MP3 file).
 - up to 15 characters of ID3 tag information using uppercase letters (A to Z), numbers (0 to 9), and symbols (" > + , - / @ { | } _).

Other Operations

Creating your own CD program (Program Play)

Use buttons on the remote to create your own program.

- 1 Press FUNCTION +/- [5] repeatedly to select the CD function.
- 2 Press PLAY MODE [13] repeatedly until "PGM" appears while the player is stopped.
- 3 Press [4] repeatedly until the desired track number appears.
When programming MP3 files, press [7] repeatedly to select the desired folder, and then select the desired file.

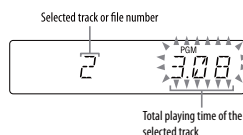

- 4 Press [18] to add the track or file to the program.
- 5 Repeat steps 3 through 5 to program additional tracks or files, up to a total of 25 tracks or files.
- 6 To play your program of tracks or files, press [4].
The program remains available until you open the disc tray. To play the same program again, select the CD function, and then press [4].

To cancel Program Play

Press PLAY MODE [13] repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program

Press CLEAR [16] while the player is stopped.


To view program information, such as total track number of the program

Press DISPLAY [6] repeatedly.

Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number.

- 1 Tune in the desired station (See "Listening to the radio").
- 2 Press TUNER MEMORY [23].



- 3 Press +/- (or TUNING +/- on the unit) [2] repeatedly to select your desired preset number.
If another station is already assigned to the selected preset number, the station is replaced by the new stations.
- 4 Press [18].
- 5 Repeat steps 1 through 4 to store other stations.
You can preset up to 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.
- 6 To call up a preset radio station, press TUNING MODE [13] repeatedly until "PRESET" appears, and then press +/- (or TUNING +/- on the unit) [2] repeatedly to select the desired preset number.

Using the timers

The system offers two timer functions. If you use both timers, the Sleep Timer has priority.

Use buttons on the remote to use the timer functions.

Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set.
Press SLEEP [28] repeatedly. If you select "AUTO" the system automatically turns off after the current disc stops or in 100 minutes.

Play Timer:

You can wake up to CD or tuner at a preset time.

Make sure you have set the clock.

- 1 Prepare the sound source.
Press VOLUME +/- [14] to adjust the volume.
To start from a specific CD track or MP3 file, create your own CD program.
- 2 Press TIMER MENU [17].
- 3 Press [22] repeatedly to select "PLAY SET," then press [18].
"ON TIME" appears, and the hour indication flashes.
- 4 Set the time to start playback.
Press [22] repeatedly to set the hour, then press [18].
The minute indication flashes. Use the procedure above to set the minutes.
- 5 Use the same procedure as in step 4 to set the time to stop playback.
- 6 Select the sound source.
Press [22] repeatedly until the sound source you want appears, and then press [18]. The display shows the timer settings.
- 7 Press I/⏏ [1] to turn off the system.
If the system is on at the preset time, the Play Timer will not play.

To activate or check the timer again

- 1 Press TIMER MENU [17].
"SELECT" flashes in the display.
- 2 Press [18].
- 3 Press [22] repeatedly to select "PLAY SEL," then press [18].

To cancel the timer

Repeat the same procedure as above until "OFF" appears in step 3, and then press [18].

To change the setting

Start over from step 1.

Tip

The Play Timer setting remains as long as the setting is not canceled manually.

Troubleshooting

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the checklist below, and take the indicated corrective action.
If the issue persists, contact your nearest Sony dealer.

If "PROTECT" appears on the display

Immediately unplug the power cord, and check the following items after "PROTECT" disappears.

- Are the + and - speaker cords short-circuited?
 - Is anything blocking the ventilation holes on the top or back of the system?
- After you have checked these above items and found to be all right, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The system does not turn on.

- Is the power cord plugged in?

There is no sound.

- Are the + and - speaker cords short-circuited?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the top or back of the system?

Sound comes from one channel, or the left and right volumes are unbalanced.

- Place the speakers as symmetrically as possible.
- Connect only the supplied speakers.

Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall socket.
- Install a noise filter (available separately) to the power cord.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor [3] on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's sensor.
- Move the remote closer to the system.

CD/MP3 player

The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).
- Move the speakers away from the system, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

Play does not start from the first track.

- Return to Normal Play by pressing PLAY MODE [13] repeatedly until both "PGM" and "SHUF" disappear.

Starting playback takes more time than usual.

- The following discs take a longer time to start playback.
 - a disc recorded with a complicated tree structure.
 - a disc recorded in multisession mode.
 - a disc that has not been finalized (a disc to which data can be added).
 - a disc that has many folders.

The disc tray does not open and "LOCKED" appears.

- Contact your Sony dealer or local authorized Sony service facility.

Tuner

Severe hum or noise, or stations cannot be received. ("TUNED" or "ST" flashes on the display.)

- Connect the antenna properly.
- Find a location and an orientation that provide good reception, and then set up the antenna again.
- Keep the antennas away from the speaker cords and the power cord to avoid picking up noise.
- Turn off nearby electrical equipment.

To change the AM tuning interval

The AM tuning interval is factory-preset to 9 kHz or 10 kHz.

Use buttons on the unit to change the AM tuning interval.

- 1 Tune in any AM station, and then turn off the system.
- 2 Press DISPLAY [6] to display the clock.
- 3 While holding down TUNING + [2], press I/⏏ [1].
All the AM preset stations are erased. To reset the interval to the factory preset, repeat the procedure.

To improve tuner reception

Turn off CD player power by using the CD power management function. By default, CD power is turned on.

- 1 Press FUNCTION +/- (or FUNCTION on the unit) [5] repeatedly to select the CD function.
- 2 Press I/⏏ [1] to turn off the system.
- 3 After "STANDBY" stops flashing, press DISPLAY [6] to display the clock, and then press I/⏏ [1] while holding down [4].
"CD POWER OFF" appears. With CD player power turned off, disc access time is increased. To turn on CD player power, repeat the procedure until "CD POWER ON" appears.

To reset the system to factory settings

If the system still does not operate properly, reset the system to factory settings.

Use buttons on the unit to reset the unit to its factory default settings.

- 1 Disconnect and reconnect the power cord, and then turn on the system.
- 2 Press [4], FUNCTION [5], and I/⏏ [1] at the same time.
All user-configured settings, such as preset radio stations, timer, and the clock, are deleted.

Messages

CANNOT LOCK : The system cannot be locked after you have done the procedure of "When carrying this system."

COMPLETE : The preset operation ended normally.

FULL : You tried to program more than 25 tracks or files (steps).

LOCKED : The disc tray does not open. Contact your nearest Sony dealer.

NO DISC : There is no disc in the player, or you have loaded a disc that cannot be played.

NO STEP : All of the programmed tracks have been erased.

OVER : You have reached the end of the disc while pressing [2] during playback or pause.

PUSH STOP : You pressed PLAY MODE [13] during playback.

PROTECT : The following causes can be considered:


- Speaker cords may be short-circuited.
- The ventilation holes may be blocked.
See "If "PROTECT" appears on the display" to check what to do if this message appears.

READING : The system is reading information from the disc. Some buttons are not available.

TIME NG : The Play Timer start and end times are set to the same time.

Australian model:


Basic Operations

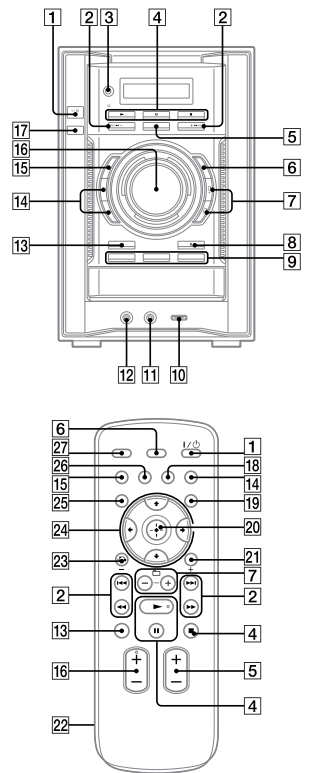

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

Before using the system

To use the remote
Slide and remove the battery compartment lid 22, and insert the two R6 (size AA) batteries (supplied), side first, matching the polarities shown below.

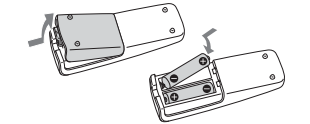

Notes on using the remote

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.
- Batteries installed devices shall not be exposed to excessive heat such as sunshine, fire or the like.

To set the clock

- 1 Turn on the system.
Press I/O (on/standby) 1 to turn on the system.
- 2 Select the clock set mode.
Press TIMER MENU 19. The hour indication flashes. If "PLAY SET" flashes, press 4/5 24 repeatedly to select "CLOCK," and then press 0 (enter) 20.
- 3 Set the time.
Press 4/5 24 repeatedly to set the hour; then press 0 (enter) 20. The minute indication flashes. Use the same procedure to set the minutes.

Note
The clock settings are lost when you disconnect the power cord or if a power failure occurs.

Adjusting the sound


To adjust the volume
Press VOLUME +/- (or turn the VOLUME control on the unit) 16.

To	Press
Generate a more dynamic sound (Dynamic Sound Generator X-tra)	DSGX 14 on the unit.
Set the sound effect	EQ 14.

To turn on the subwoofer
Press SUBWOOFER ON/OFF 17 on the unit until "SUBWOOFER" appears. The volume of the subwoofer is linked to the front speakers.

Playing a CD/MP3 disc

- 1 Select the CD function.
Press FUNCTION +/- (or FUNCTION on the unit) 5 repeatedly.
- 2 Place a disc.
Press 8 (open/close) 8 on the unit, and place a disc with the label side up on the disc tray. To place additional discs, slide the disc tray with your finger as shown below.
To close the disc tray, press 8 (open/close) 8 on the unit.
Do not force the disc tray closed with your finger, as this may damage the unit.

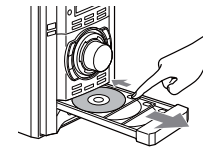

- 3 Select a disc.
If the discs are currently stopped, press DISC SKIP 13. To change discs while in other functions, press DISC1 - 3 9 on the unit.
- 4 Start playback.
Press 4 (play) 4. To exchange other discs during playback, press EX-CHANGE 13 on the unit.

To	Press
Pause playback	II (pause) 4. To resume play, press the button again.
Stop playback	■ (stop) 4.
Select a folder on an MP3 disc	Folder +/- (select folder) 7.
Select a track or file	Left/Right (go back/go forward) (or Left/Right/Stop) on the unit) 2.
Find a point in a track or file	Hold down Left/Right (rewind/fast forward) 2 during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 26 repeatedly until "REP" or "REP1" appears.

To change the play mode
Press PLAY MODE 15 repeatedly while the player is stopped. You can select normal play (no display for all discs or "1 DISC" for a disc or "PGM" for all MP3 files in the folder on the disc), shuffle play ("SHUF" for all discs shuffle, "1 DISC SHUF" for one disc shuffle or "PGM SHUF" for folder shuffle), or program play ("PGM").
* When playing a CD-DA disc, (SHUF) Play performs the same operation as 1 DISC (SHUF) Play.

Notes on Repeat Play

- All tracks or files on a disc are played repeatedly up to five times.
- You cannot select "REP" and "SHUF" (all discs shuffle) at the same time.
- "REP1" indicates that a single track or file is repeated until you stop it.

Notes on playing MP3 discs


- Do not save other types of tracks or files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of ".MP3".
- If there are files on the disc that have the ".MP3" file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of:
 - folders is 150 (including the root folder).
 - MP3 files is 255.
 - MP3 files and folders that can be contained on a single disc is 300.
 - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and playback continues until another session is encountered.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

Listening to the radio

- 1 Select "TUNER FM" or "TUNER AM."
Press FUNCTION +/- (or FUNCTION on the unit) 5 repeatedly.
- 2 Select the tuning mode.
Press TUNING MODE 15 repeatedly until "AUTO" appears.
- 3 Tune in the desired station.
Press +/- (or TUNING +/- on the unit) 2. Scanning stops automatically when a station is tuned in, and then "TUNED" and "ST" (for stereo programs) appear.



To stop automatic scanning
Press (stop) 4.

To tune in a station with a weak signal
If "TUNED" does not appear and the scanning does not stop, press TUNING MODE 15 repeatedly until "MANUAL" appears, and then press +/- (or TUNING +/- on the unit) 2 repeatedly to tune in the desired station.

To reduce static noise on a weak FM stereo station
Press FM MODE 26 repeatedly until "MONO" appears to turn off stereo reception.

Changing the display

To	Press
Change information on the display*	DISPLAY 6 repeatedly when the system is turned on.
Change Display mode (See below.)	DISPLAY 6 repeatedly when the system is turned off.

* For example, you can view CD/MP3 disc information, such as:
– track or file number during normal play.
– track or file name ("P") during normal play.
– artist name ("A") during normal play.
– album or folder name ("F") during normal play.
– total playing time while the player is stopped.

The system offers the following display modes.

Display mode	When the system is off,
Power Saving Mode ¹⁾	The display is turned off to conserve power. The timer and clock continue to operate.
Clock ²⁾	The clock is displayed.

¹⁾ You cannot set the clock in Power Saving Mode.
²⁾ The clock display automatically turns to Power Saving Mode after eight seconds.

Notes on the display information
Characters that cannot be displayed appear as "...".


- The following are not displayed:
 - total playing time for an MP3 disc
 - remaining playing time for an MP3 file.
- The following are not displayed correctly:
 - elapsed playing time of an MP3 file encoded using VBR (variable bit rate).
 - folder and file names that do not follow either ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
 - total playing time for a CD-DA disc when the play mode is "1 DISC".
 - remaining playing time for a track.
 - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used (ID3 version 2 tag information display has priority when both ID3 version 1 and version 2 tags are used for a single MP3 file).
 - up to 15 characters of ID3 tag information using uppercase letters (A to Z), numbers (0 to 9), and symbols ("<" ">" "+" "-" "/" "@" "\ | _").

Other Operations

Creating your own CD program (Program Play)

Use buttons on the remote to create your own program.

- 1 Press FUNCTION +/- (or FUNCTION on the unit) [5] repeatedly to select the CD function.
- 2 Press PLAY MODE [15] repeatedly until "PGM" appears while the player is stopped.
- 3 Press DISC SKIP [13] to select a disc.
- 4 Press [◀▶] (or [◀▶/▶▶] on the unit) [2] repeatedly until the desired track number appears. When programming MP3 files, press [◀▶] +/- [7] repeatedly to select the desired folder, and then select the desired file.

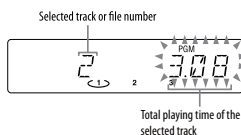

- 5 Press [0] [20] to add the track or file to the program.
- 6 Repeat steps 3 through 5 to program additional tracks or files, up to a total of 25 tracks or files.
- 7 To play your program of tracks or files, press [▶] [4]. The program remains available until you open the disc tray. To play the same program again, select the CD function, and then press [▶] [4].

To cancel Program Play

Press PLAY MODE [15] repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program


Press CLEAR [18] while the player is stopped.

To view program information, such as total track number of the program
Press DISPLAY [6] repeatedly.

Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number.

- 1 Tune in the desired station (See "Listening to the radio").
- 2 Press TUNER MEMORY [25].



- 3 Press +/- (or TUNING +/- on the unit) [2] repeatedly to select your desired preset number. If another station is already assigned to the selected preset number, the station is replaced by the new stations.
- 4 Press [0] [20].
- 5 Repeat steps 1 through 4 to store other stations. You can preset up to 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.
- 6 To call up a preset radio station, press TUNING MODE [15] repeatedly until "PRESET" appears, and then press +/- (or TUNING +/- on the unit) [2] repeatedly to select the desired preset number.

Using the timers

The system offers two timer functions. If you use both timers, the Sleep Timer has priority.

Use buttons on the remote to use the timer functions.

Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set. Press SLEEP [27] repeatedly. If you select "AUTO" the system automatically turns off after the current disc stops or in 100 minutes.

Play Timer:

You can wake up to CD or tuner at a preset time.

Make sure you have set the clock.

- 1 Prepare the sound source. Press VOLUME +/- (or turn VOLUME on the unit) [16] to adjust the volume. To start from a specific CD track or MP3 file, create your own CD program.
- 2 Press TIMER MENU [19].
- 3 Press [◀▶] [24] repeatedly to select "PLAY SET," then press [0] [20]. "ON TIME" appears, and the hour indication flashes.
- 4 Set the time to start playback. Press [◀▶] [24] repeatedly to set the hour, then press [0] [20]. The minute indication flashes. Use the procedure above to set the minutes.
- 5 Use the same procedure as in step 4 to set the time to stop playback.
- 6 Select the sound source. Press [◀▶] [24] repeatedly until the sound source you want appears, and then press [0] [20]. The display shows the timer settings.
- 7 Press I/⏏ [1] to turn off the system. If the system is on at the preset time, the Play Timer will not play.

To activate or check the timer again

- 1 Press TIMER MENU [19]. "SELECT" flashes.
- 2 Press [0] [20].
- 3 Press [◀▶] [24] repeatedly to select "PLAY SEL," and then press [0] [20].

To cancel the timer

Repeat the same procedure as above until "OFF" appears in step 3, and then press [0] [20].

To change the setting

Start over from step 1.

Tip

The Play Timer setting remains as long as the setting is not canceled manually.

Troubleshooting

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the checklist below, and take the indicated corrective action. If the issue persists, contact your nearest Sony dealer.

If "PROTECT" appears on the display

Immediately unplug the power cord, and check the following items after "PROTECT" disappears.

- Are the + and - speaker cords short-circuited?
 - Is anything blocking the ventilation holes on the top or back of the system?
- After you have checked these above items and found to be all right, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The system does not turn on.

- Is the power cord plugged in?

There is no sound.

- Are the + and - speaker cords short-circuited?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the top or back of the system?

Sound comes from one channel, or the left and right volumes are unbalanced.

- Place the speakers as symmetrically as possible.
- Connect only the supplied speakers.

Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall socket.
- Install a noise filter (available separately) to the power cord.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor [3] on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's sensor.
- Move the remote closer to the system.

CD/MP3 player

The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).
- Move the speakers away from the system, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

Play does not start from the first track.

- Return to Normal Play by pressing PLAY MODE [15] repeatedly until both "PGM" and "SHUF" disappear.

Starting playback takes more time than usual.

- The following discs take a longer time to start playback.
 - a disc recorded with a complicated tree structure.
 - a disc recorded in multisession mode.
 - a disc that has not been finalized (a disc to which data can be added).
 - a disc that has many folders.

The disc tray does not open and "LOCKED" appears.

- Contact your Sony dealer or local authorized Sony service facility.

Tuner

Severe hum or noise, or stations cannot be received. ("TUNED" or "ST" flashes on the display.)

- Connect the antenna properly.
- Find a location and an orientation that provide good reception, and then set up the antenna again.
- Keep the antennas away from the speaker cords and the power cord to avoid picking up noise.
- Turn off nearby electrical equipment.

To change the AM tuning interval

The AM tuning interval is factory-preset to 9 kHz or 10 kHz.

Use buttons on the unit to change the AM tuning interval.

- 1 Tune in any AM station, and then turn off the system.
- 2 Press DISPLAY [6] to display the clock.
- 3 While holding down TUNING + [2], press I/⏏ [1]. All the AM preset stations are erased. To reset the interval to the factory preset, repeat the procedure.

To improve tuner reception

Turn off CD player power by using the CD power management function. By default, CD power is turned on.

- 1 Press FUNCTION +/- (or FUNCTION on the unit) [5] repeatedly to select the CD function.
- 2 Press I/⏏ [1] to turn off the system.
- 3 After "STANDBY" stops flashing, press DISPLAY [6] to display the clock, and then press I/⏏ [1] while holding down [4]. "CD POWER OFF" appears. With CD player power turned off, disc access time is increased. To turn on CD player power, repeat the procedure until "CD POWER ON" appears.

To reset the system to factory settings

If the system still does not operate properly, reset the system to factory settings.

Use buttons on the unit to reset the unit to its factory default settings.

- 1 Disconnect and reconnect the power cord, and then turn on the system.
- 2 Press [4], FUNCTION [5], and I/⏏ [1] at the same time. All user-configured settings, such as preset radio stations, timer, and the clock, are deleted.

Messages

CANNOT LOCK : The system cannot be locked after you have done the procedure of "When carrying this system."

COMPLETE : The preset operation ended normally.

FULL : You tried to program more than 25 tracks or files (steps).

LOCKED : The disc tray does not open. Contact your nearest Sony dealer.

NO DISC : There is no disc in the player, or you have loaded a disc that cannot be played.

NO STEP : All of the programmed tracks have been erased.

OVER : You have reached the end of the disc while pressing [▶] [2] during playback or pause.

PUSH STOP : You pressed PLAY MODE [15] during playback.

PROTECT : The following causes can be considered:

- Speaker cords may be short-circuited.
- The ventilation holes may be blocked. See "If "PROTECT" appears on the display" to check what to do if this message appears.


READING : The system is reading information from the disc. Some buttons are not available.

TIME NG : The Play Timer start and end times are set to the same time.

SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

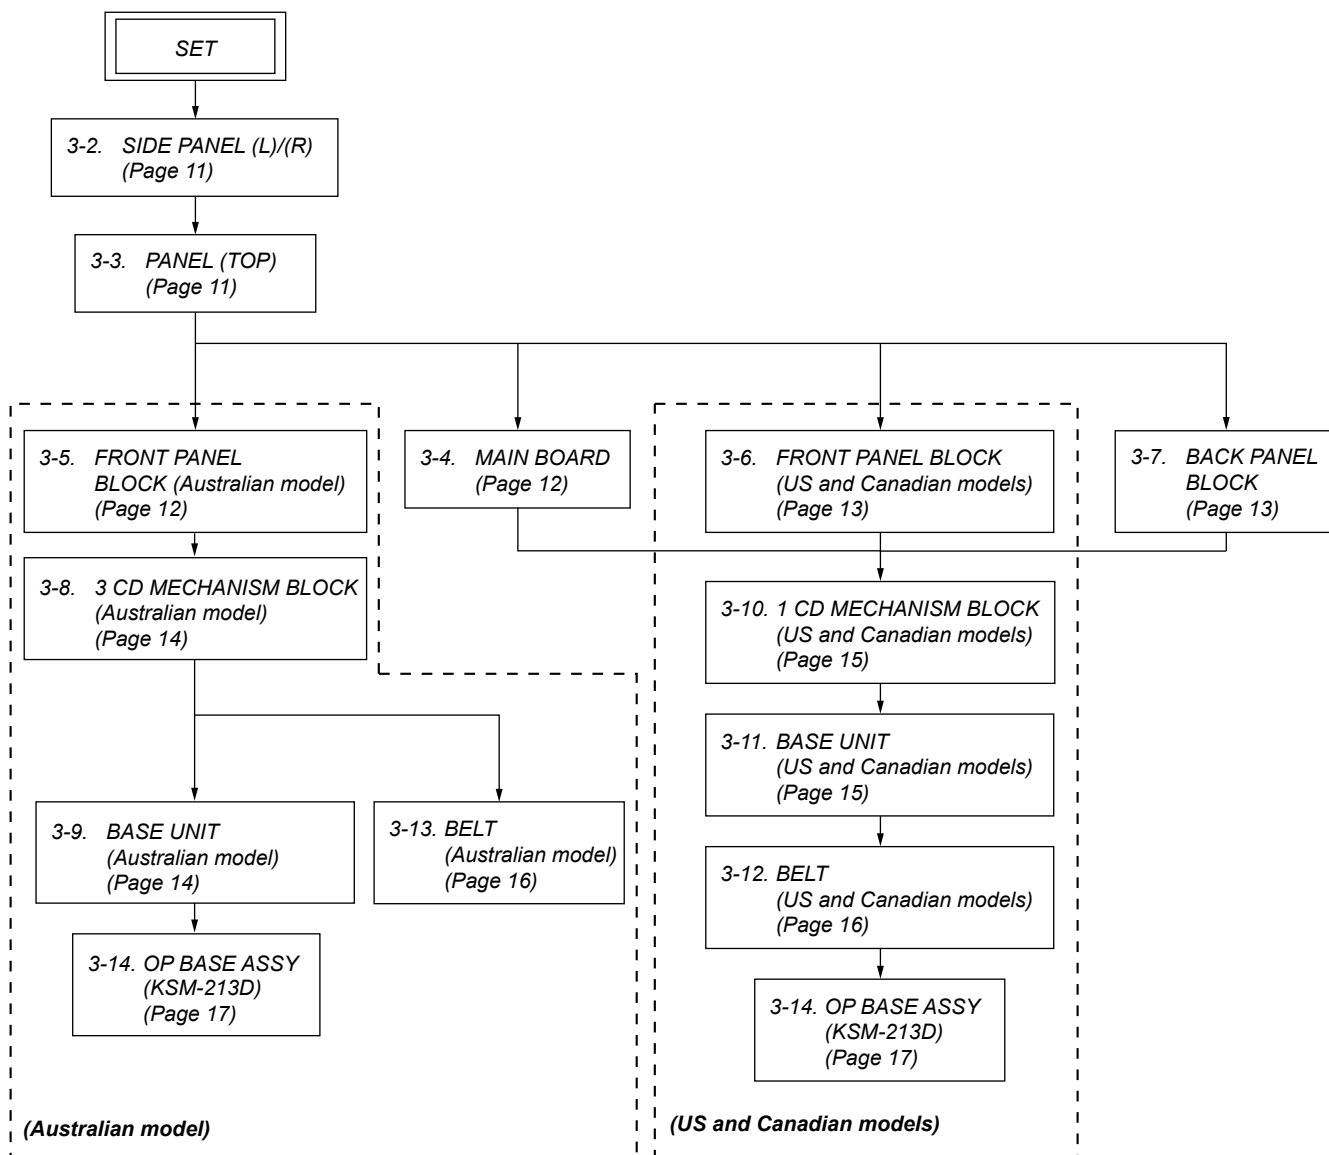


Note: Follow the disassembly procedure in the numerical order given.


3-2. SIDE PANEL (L)/(R)

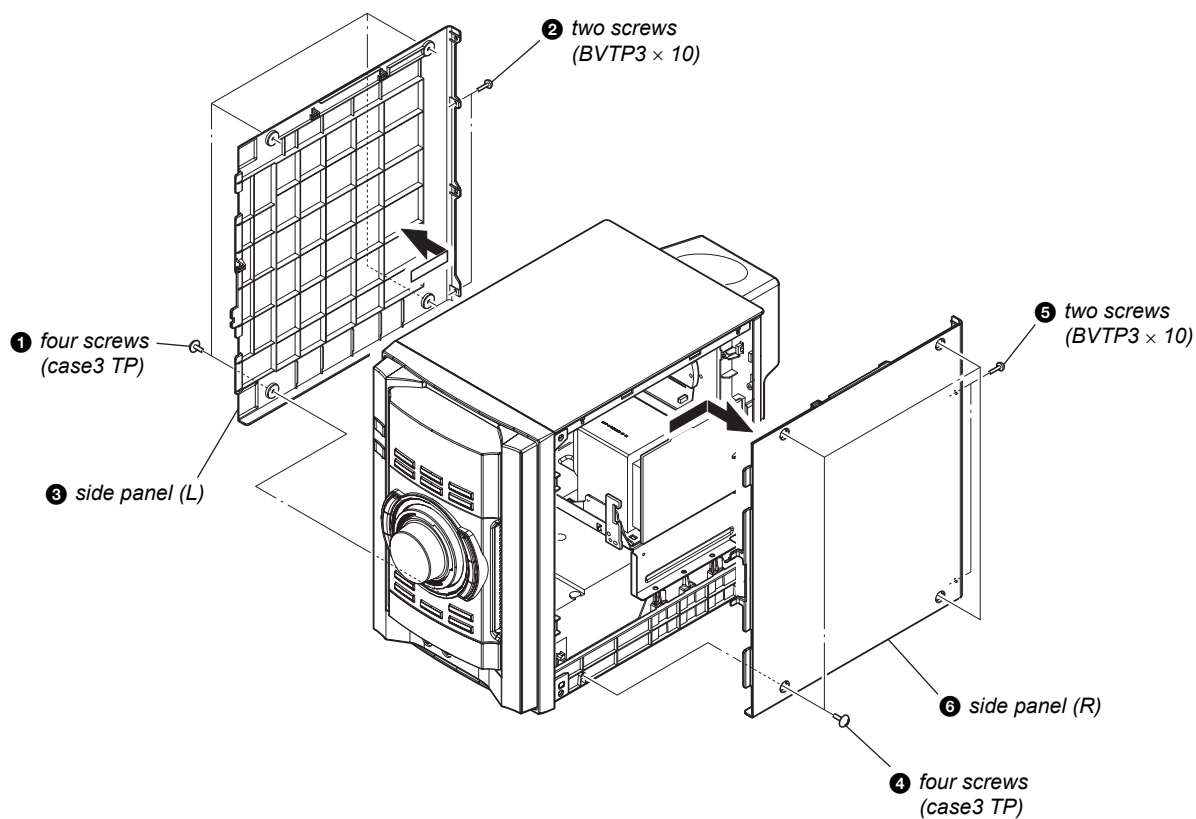


3-3. PANEL (TOP)

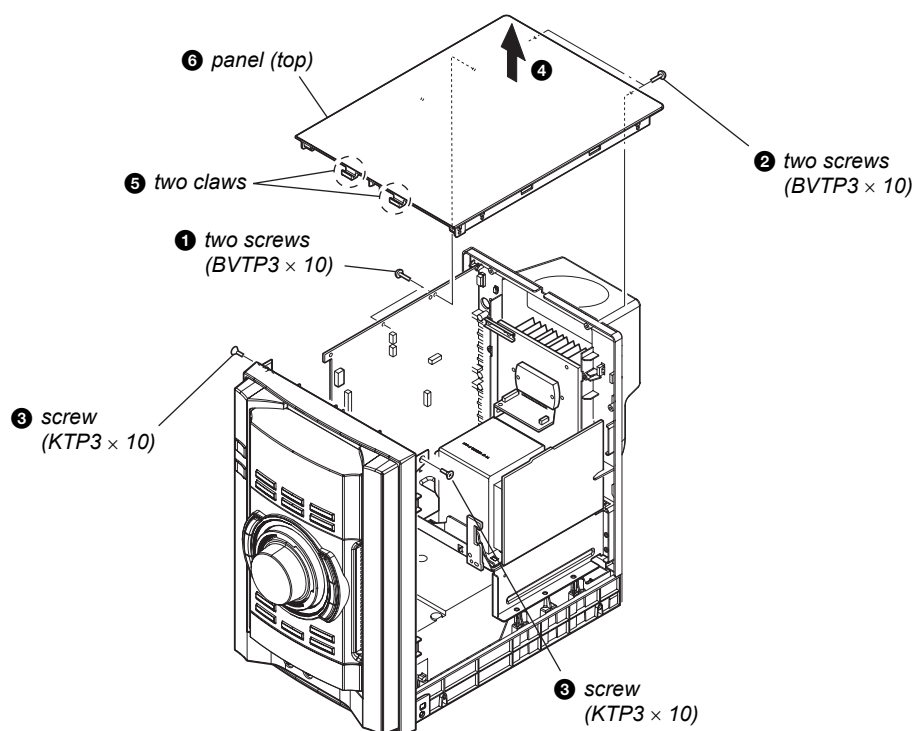


3-4. MAIN BOARD

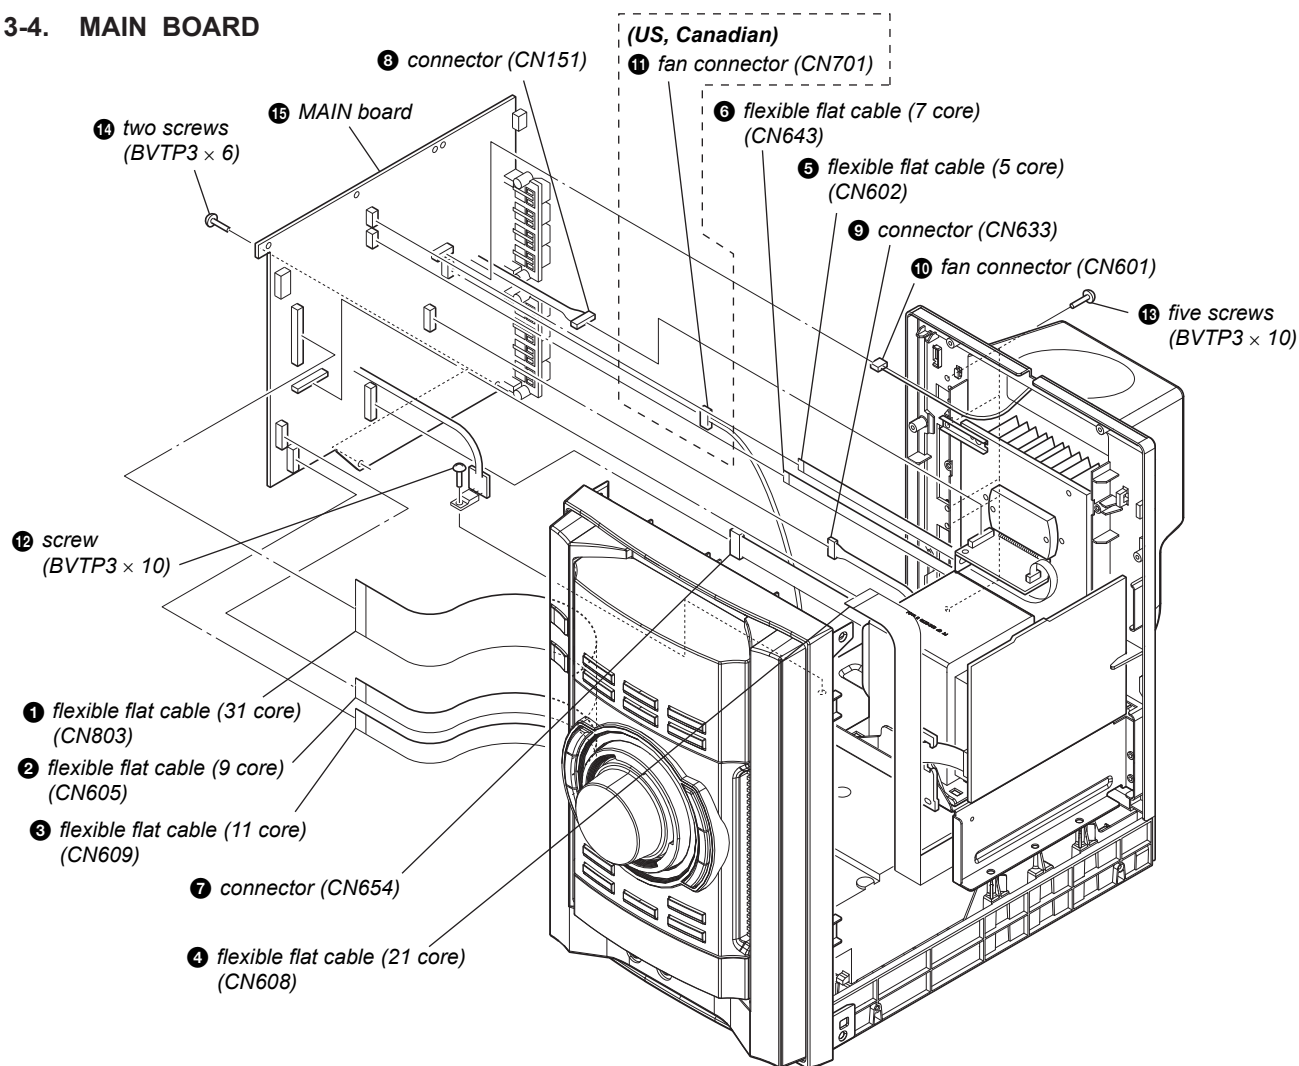


3-5. FRONT PANEL BLOCK (Australian model)

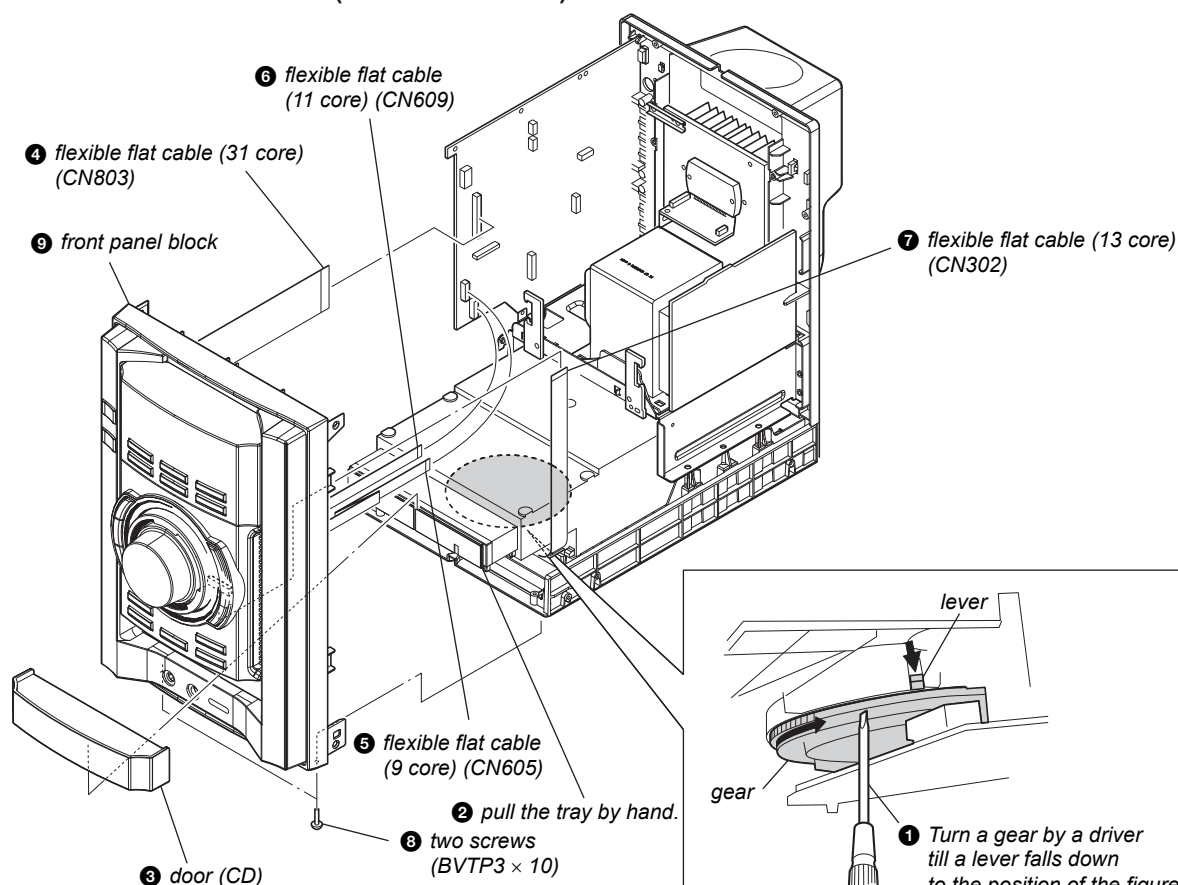


3-6. FRONT PANEL BLOCK (US and Canadian models)

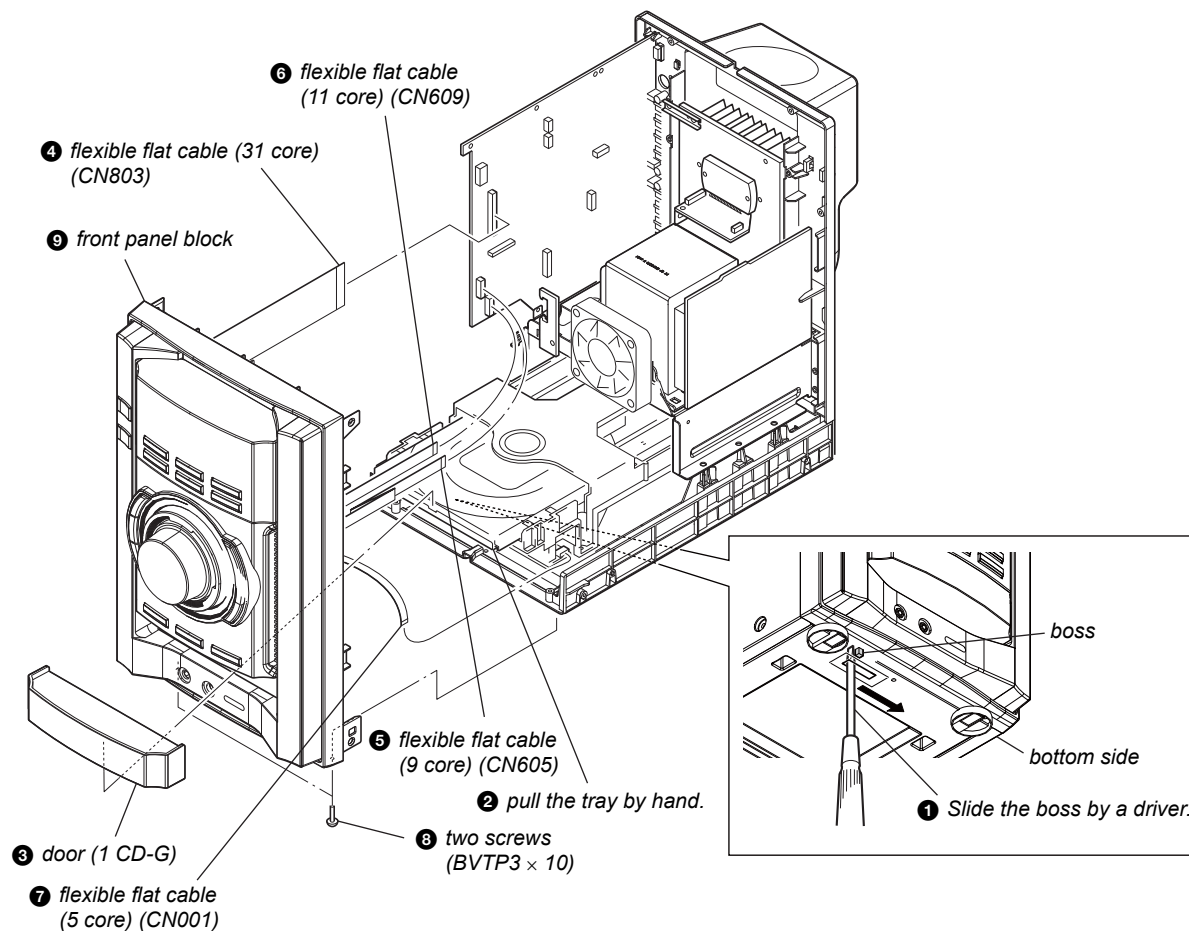


3-7. BACK PANEL BLOCK

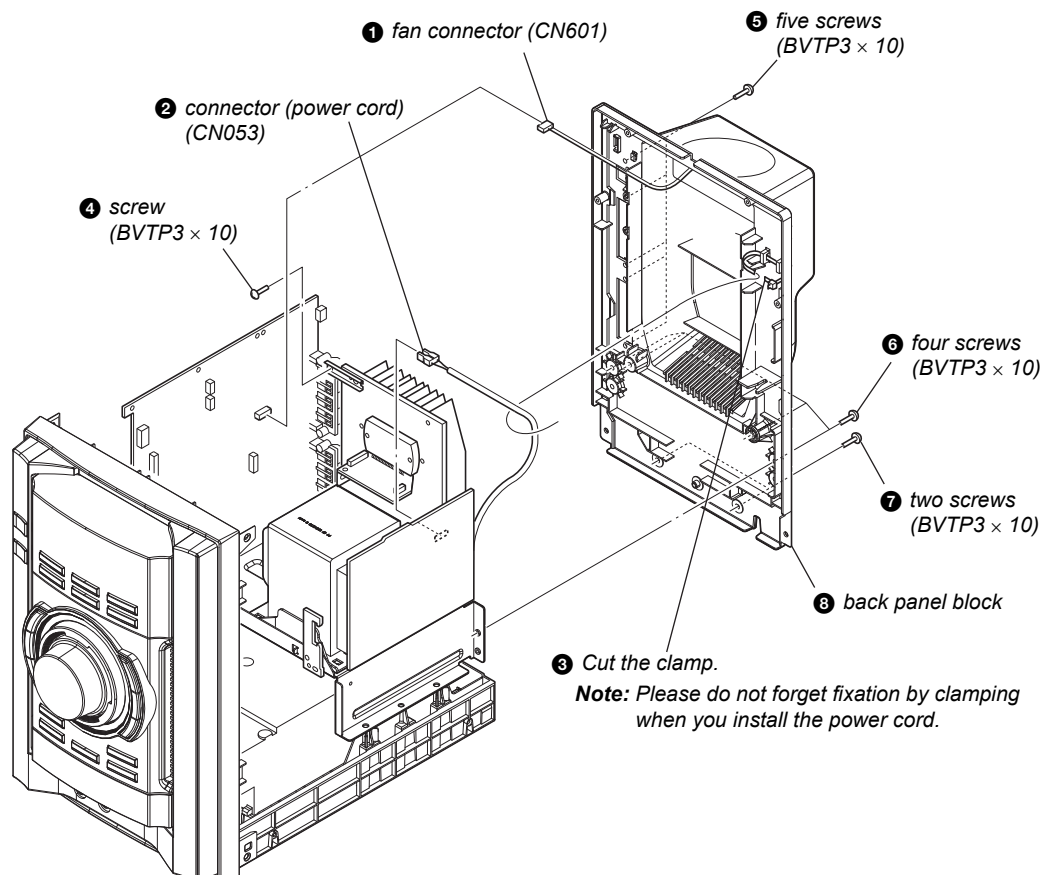


3-8. 3 CD MECHANISM BLOCK (Australian model)

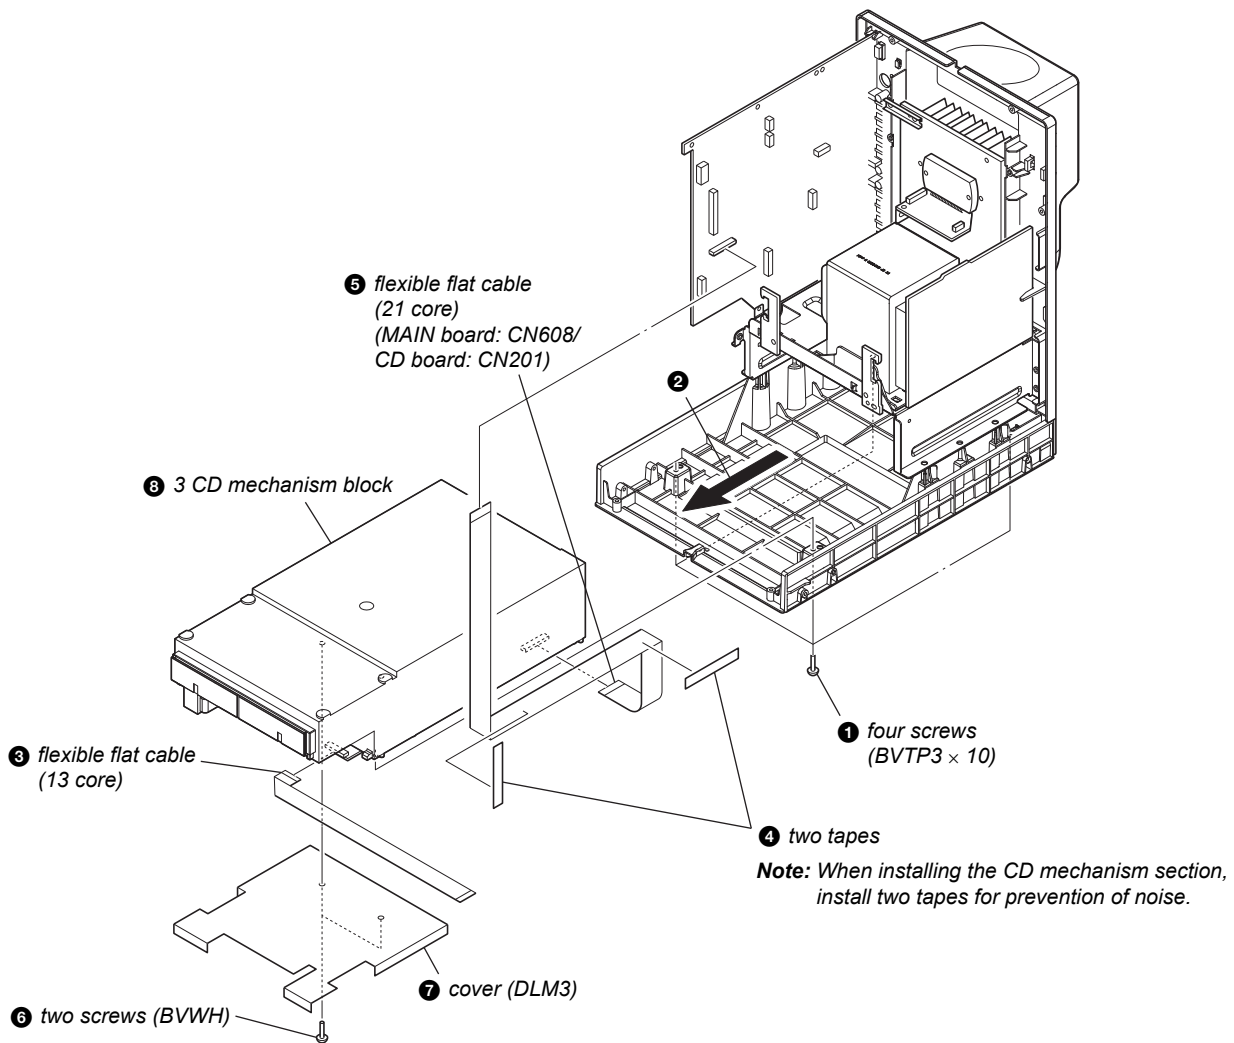


3-9. BASE UNIT (Australian model)

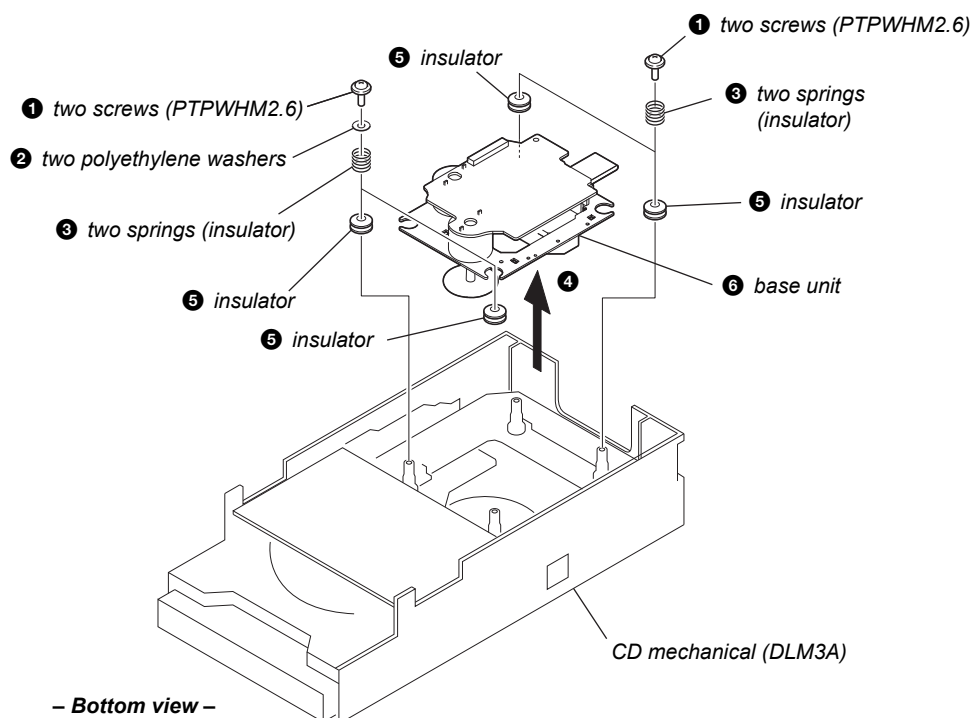

3-10. 1 CD MECHANISM BLOCK (US and Canadian models)

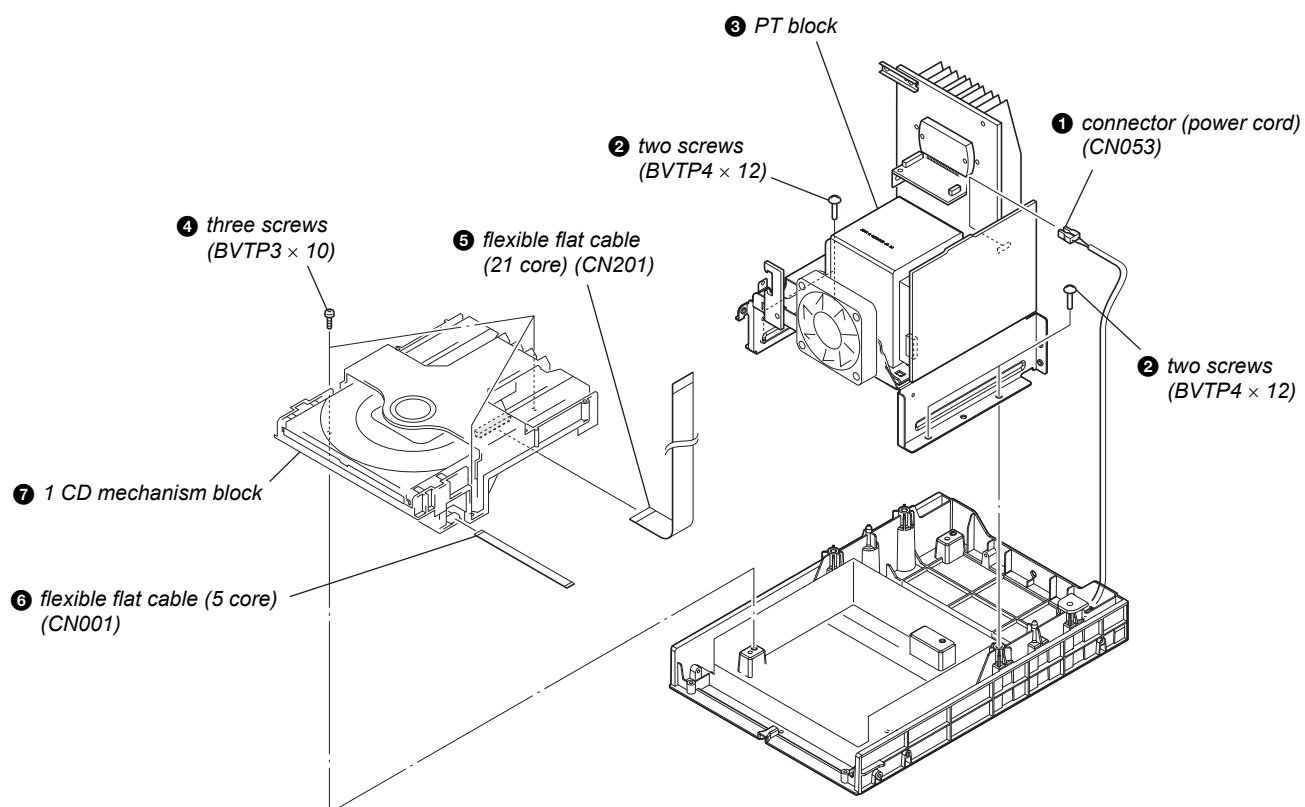


3-11. BASE UNIT (US and Canadian models)

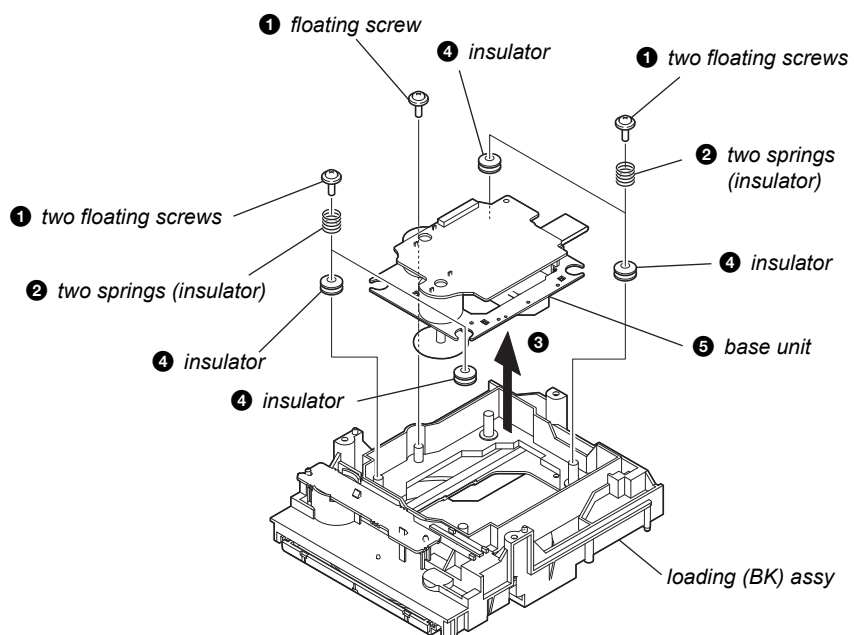


– Bottom view –


3-12. BELT (US and Canadian models)

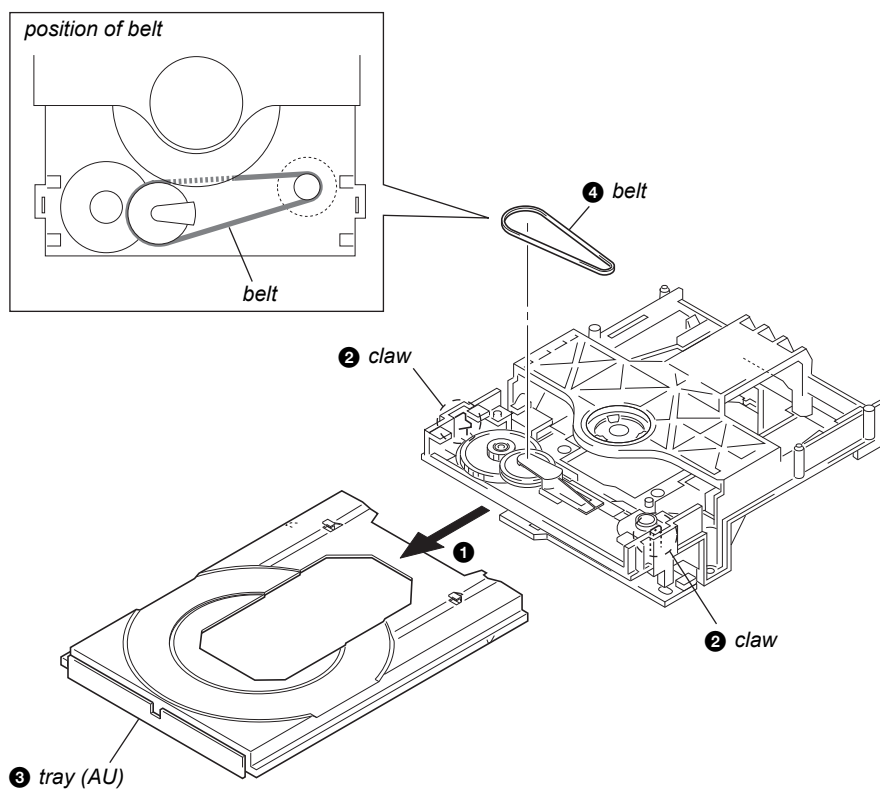

3-13. BELT (Australian model)

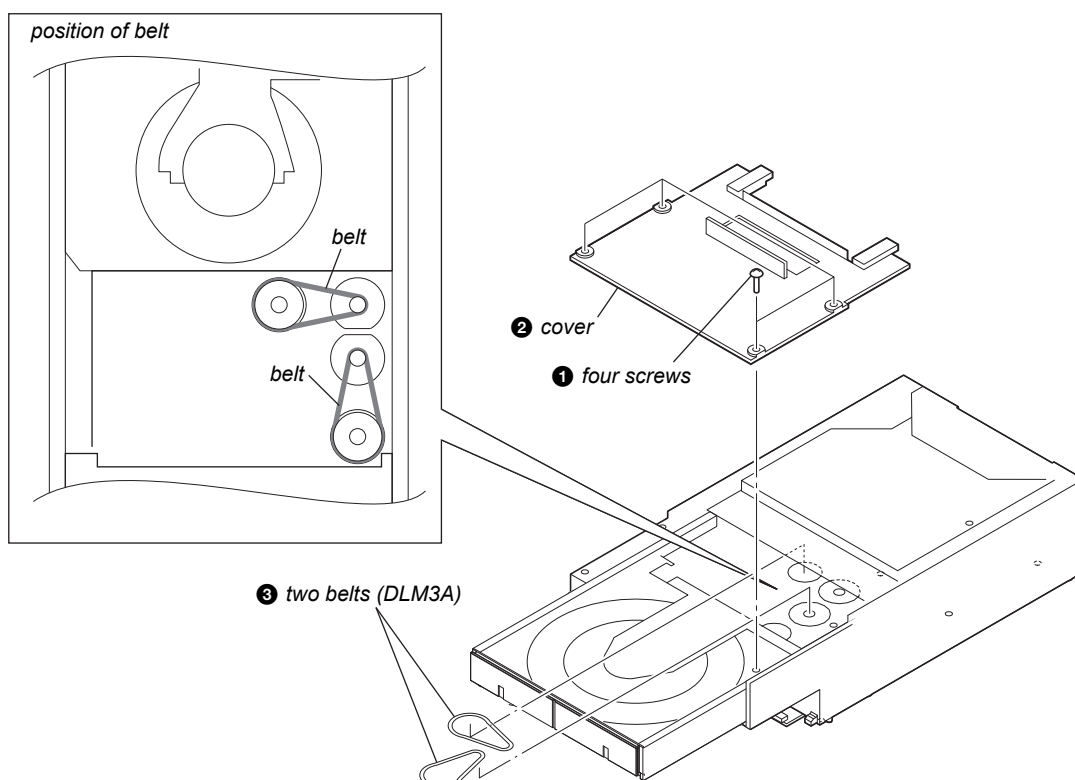

3-14. OP BASE ASSY (KSM-213D)

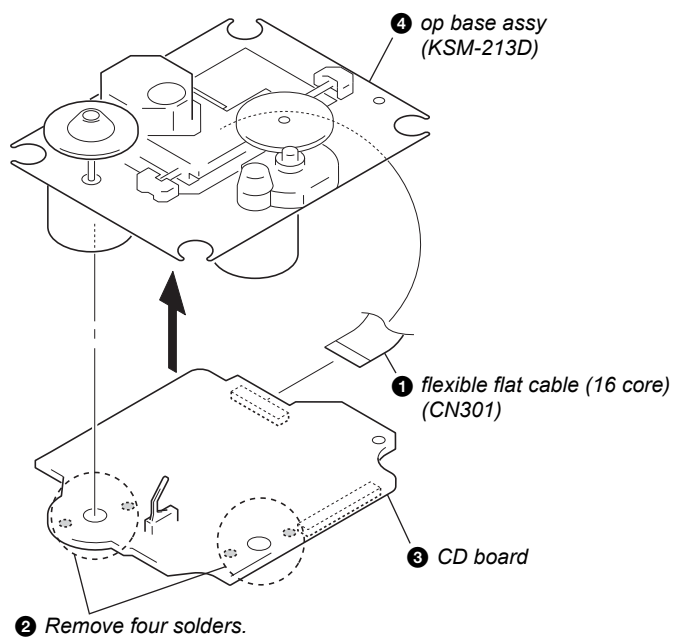

SECTION 4 TEST MODE

COLD RESET

The cold reset clears all data including preset data stored in the memory to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

1. In the standby status, press the [I/⏻] button to turn the power on.
2. Press three buttons of [■], [FUNCTION] and at last [I/⏻] simultaneously.
3. When "RESET" appears, the set enters standby status.

PANEL TEST MODE

Enter The Panel Test Mode

Procedure:

1. In the standby status, press the [I/⏻] button to turn the power on.
2. Press three buttons of [DISPLAY], [■], and [FUNCTION] simultaneously.
3. When the panel test mode is activated, LEDs and segments of the liquid crystal display are all turned on.

Version Check

Procedure:

1. In the panel test mode (all LEDs and segments of the liquid crystal display are turned on), press the [FUNCTION] button.
2. On the liquid crystal display, date and version are displayed "xxxxxxx". For example, "1114V102".
3. From this status, press the [■] button, and the destination and model name are displayed. For example, "CE2" and "ESLO-".
4. To release from this mode, press three buttons of [DISPLAY], [■], and [FUNCTION] simultaneously.

Key Test Mode

Procedure:

1. In the panel test mode (all LEDs and segments of the liquid crystal display are turned on), press the [DISPLAY] button.
2. The message "KEY0 0 0" displayed. Whenever any buttons are pressed and the [VOLUME] dial is turned, the value is changed.
3. To release from this mode, press three buttons of [DISPLAY], [■], and [FUNCTION] simultaneously.

CD REPEAT 5 LIMIT CANCEL MODE

Number of repeats for CD playback is 5 times when the repeat mode is "REPEAT". This mode enables CD to repeat playback for limitless times.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. Press three buttons of [DISPLAY], [■], and [⏮ ⏭] – TUNING simultaneously.
4. It enters the CD repeat 5 limit cancel mode and displays "NO LIMIT"
5. To release this mode, press the [I/⏻] button to turn the power off.

CD SHIP MODE

This mode can run the CD sled motor optionally. Use this mode, for instance, when cleaning the optical pick-up.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Confirm there is no disc in all trays.
3. Press the [FUNCTION] button to select CD function.
4. Press two buttons of [▶] and [I/⏻] simultaneously.
5. Set to the CD ship mode. (chucking on)
6. After blink "STANDBY", "LOCK" is displayed, disconnect the AC plug.

CD TRAY LOCK

This mode is for the antitheft of CD disc in shop. (not for transport)

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. Insert a disc.
4. While pressing the [■] button, press the [▲] button for more 5 seconds.
5. The message "LOCKED" is displayed and the disc tray is locked. (Even if exiting from this mode, the disc tray is still locked)
6. If press the [▲] button to eject the disc, the message "LOCKED" is displayed and can not eject the disc.
7. To release this lock, while pressing the [■] button, press the [▲] button for 5 seconds again.
8. The message "UNLOCKED" is displayed and the disc tray is unlocked.

CD POWER MANAGE

This mode is for switch the CD power supply on/off. Even if this state pulls out AC plug, it is held.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. Press the [I/⏻] button again to turn the power off (standby).
4. After pressing the [DISPLAY] button, while pressing the [■] button, press the [I/⏻] button.
5. It turns power on and display "CD POWER", then display "ON" or "OFF".

CHANGE-OVER THE AM TUNING INTERVAL

The AM tuning interval can be changed over 9 kHz or 10 kHz.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [TUNER/BAND] button to select TUNER (AM) function.
3. Press the [I/⏻] button again to turn the power off (standby).
4. After pressing the [DISPLAY] button, while pressing the [TUNING + ►► ►►] button, press the [I/⏻] button.
5. It turns power on and display "9k STEP" or "10k STEP", and thus the tuning interval is changed over.

CD SHIP AND COLD RESET

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Confirm there is no disc in all trays.
3. Press the [FUNCTION] button to select CD function.
4. Press three buttons of [PLAY MODE/TUNING MODE], [⏮ ⏭] – TUNING and [I/⏻] simultaneously.
5. After blink "STANDBY", "RESET" is displayed, disconnect the AC plug.

COMMON TEST MODE

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press three buttons of [PLAY MODE/TUNING MODE], [TUNING + ►► ►►], and [DISPLAY] simultaneously.
3. It enters the common test mode and displays "COMMON".
4. Each time the [VOLUME] dial is turned, "VOL MIN", "VOL 16", and "VOL MAX" are displayed.
5. To release from this mode, press three buttons of [PLAY MODE/TUNING MODE], [TUNING + ►► ►►], and [DISPLAY] simultaneously.

[CD SERVO TEST MODE]

This mode can check the servo system operations of the optical pick-up system (= optical unit + CD board).

Note1: Do not enter the [CD SERVO TEST MODE] while any other test mode is in progress.

Note2: Do not enter any other test mode while the [CD SERVO TEST MODE] is in progress.

How to Enter the CD Servo Test Mode

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. Press three buttons of [▶], [◀◀ – TUNING] and [DISPLAY] simultaneously.
4. It enters the CD servo test mode and displays “BDT S CU”.

How to Exit from the CD Servo Test Mode

Procedure:

1. Press three buttons of [▶], [◀◀ – TUNING] and [DISPLAY] simultaneously.
2. It releases from the CD Servo Test Mode and returns to the ordinary CD function.

Key Operation:

[◻ +], [◻ -]:

Use these keys to move between the five modes contained in the CD Servo Test Mode, that are the S-Curve Mode, the RAM Read Mode, the RAM Write Mode, the Command Out Mode and the Error Rate Mode as described below. Also, use these keys to move between the menus within the respective five modes. When [◻ +] is pressed, the screen advances to the next menu or to the next mode. When [◻ -] is pressed, the screen returns back to the previous menu or to the previous mode. Use these keys also to increase or decrease the numeric value when changing the numeric value. Pressing [◻ +] increases the value and pressing [◻ -] decreases the value.

[DSGX], [EQ]:

Use these keys to move between the different layers of the hierarchy of the CD Servo Test Mode shown below. Press [DSGX] to move down to the lower layer, and press [EQ] to move up to the higher layer.

[TUNING + ▶▶ ▷▷], [◀◀ – TUNING]:


Use these keys to move the cursor to the right digit or to the left digit in the six-digit number, when changing the numeric value.

Press [TUNING + ▶▶ ▷▷] to move the cursor to the right, and press [◀◀ – TUNING] to return the cursor to the left.

[FUNCTION]:

Use this key to execute Command Out in the Command Out Mode.

CD Servo Test Mode Tree:

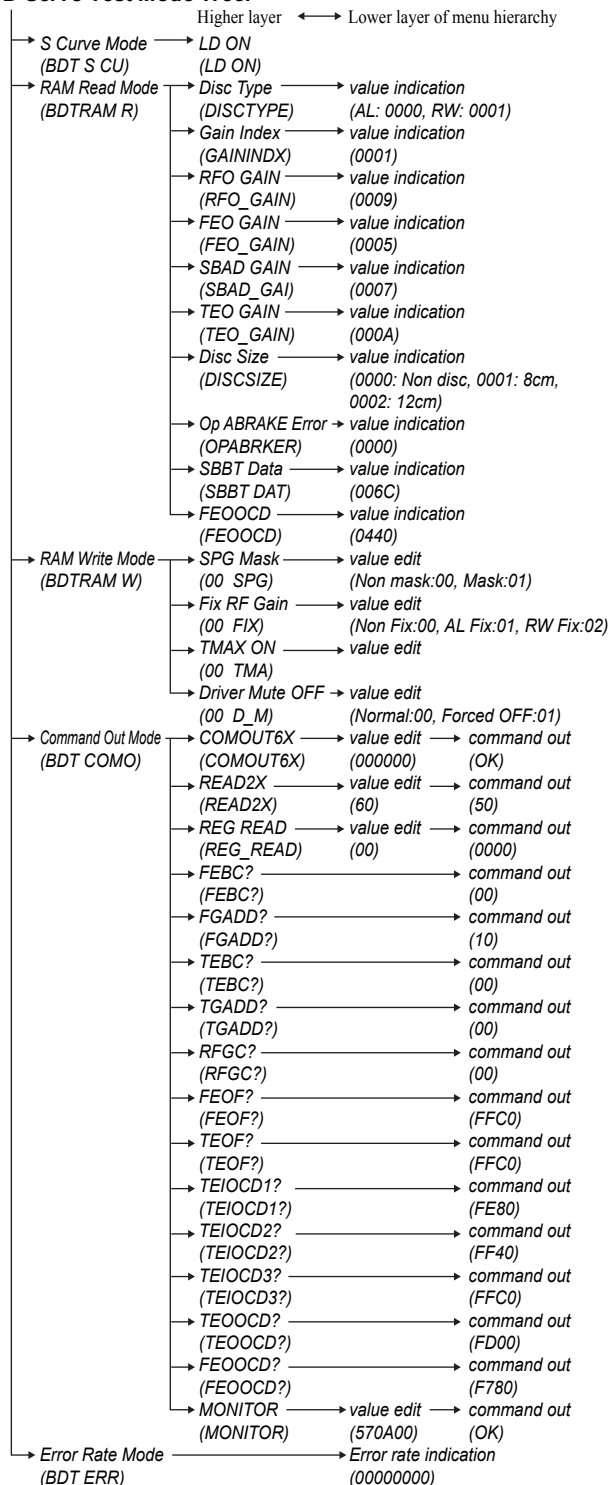

CD SERVICE MODE

This mode can move the SLED of the optical pick-up, and also can turn the optical pick-up laser power on and off.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press three buttons of [▶], [TUNING + ▶▶ ▶▶], and DISPLAY simultaneously.
3. Press the [FUNCTION] button to select CD function.
4. It enters the CD service mode and displays "SERVICE".
5. To exit from this mode, press three buttons of [▶], [TUNING + ▶▶ ▶▶] and DISPLAY simultaneously.

Key Operation:

[TUNING + ▶▶ ▶▶], [◀◀ – TUNING]:

Use these keys to move the SLED. When [TUNING + ▶▶ ▶▶] is pressed in this mode, the SLED moves to outer circumference and the message "SLED OUT" is displayed.

When [◀◀ – TUNING] is pressed in this mode, the SLED moves to inner circumference and the message "SLED IN" is displayed.

[DISPLAY]:

Use this key to turn the optical pick-up laser power on and off. When the laser power is turned on, the message "LD ON" is displayed. When the laser power is turned off, the message "LD OFF" is displayed.

CD ERROR CODE

The past errors of the CD mechanism (CDM) are displayed as the CDM Errors, and those of the optical pick-up system (= optical unit + CD board) are displayed as the BD Errors as shown below.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function.
3. Press three buttons of [TUNING + ▶▶ ▶▶], [■] and [DISPLAY] simultaneously.
4. Then, the CDM error code is displayed as "M0xxxxxx" (x means hexadecimal number) on the liquid crystal display as shown below.
5. Every pressing of the [TUNING + ▶▶ ▶▶] button in this mode increments the number after "M" starting from "M0" up to "M9", and then returns to "M0". Every pressing of the [◀◀ – TUNING] button in this mode decrements the number after "M". The smaller the error code number is, the newer the error content is.
6. When the [PLAY MODE/TUNING MODE] button is pressed then, the BD error code is displayed as "D0xxxxxx" (x means hexadecimal number) on the liquid crystal display as shown below. In the same way as the CDM error code, use of the [TUNING + ▶▶ ▶▶] and the [◀◀ – TUNING] buttons in this mode enables tracing of the error history.
7. To release from this mode, press the [I/⏻] button to turn the power off.

Contents of "CDM Errors"

Error display example

M 0 FF 11 42
① ② ③ ④

- ① It indicates the error history number
0 to 9: The error code number 0 indicates the newest error.
- ② It indicates whether the CDM error occurs in the normal operations or during the initialization operation.
FF : The error has occurred in the normal operations.
Other than FF: The error has occurred during the initialization operation.
- ③ It indicates the processing during which the trouble has occurred.
01: The disc EJECT processing is in progress.
02: The disc INSERTION-WAITING processing is in progress.
03: Processing of the disc INSERTION-REQUEST for the upper CD tray is in progress.
04: Processing of the disc EJECTION-REQUEST for the upper CD tray is in progress.
05: The disc pulling-in operation is in progress.
06: The disc chucking processing is in progress.
07: The disc re-chucking processing is in progress.
08: The disc chucking-release completion operation is in progress.
- ④ It indicates the operation during which the trouble has occurred.
00 : Waiting for the operation.
10 to 13: The disc EJECT operation is in progress.
20 : The disc pulling-in operation is in progress.
30 : The disc chucking-release operation is in progress.
40 to 43: The disc EJECT operation due to error is in progress.

Contents of "BD Errors"

Error display example

D 0 02 09 01
① ② ③ ④

- ① It indicates the error history number
0 to 9: The error code number 0 indicates the newest error.
- ② It indicates the error content
01: The focus servo cannot lock-in.
02: GFS is no good (NG).
03: The startup time exceeds the specified period of time (time over)
04: The focus servo is unlocked continuously.
05: Q code cannot be obtained within the specified period of time.
06: The tracking servo cannot lock-in.
07: Blank disc

- ③ It indicates the on-going processing of optical pick-up system (= optical unit + BD board) when the trouble has occurred.
- 01: The CD SHIP mode processing is in progress.
 - 02: The POWER OFF processing is in progress.
 - 03: The INITIALIZE processing is in progress.
 - 04: The optical pick-up system (= optical unit + BD board) is in the stop state.
 - 05: The STOP operation is in progress.
 - 06: The startup processing is in progress.
 - 07: The TOC read-in processing is in progress.
 - 08: The SEARCH operation is in progress.
 - 09: The PLAY operation is in progress.
 - 0A: The PAUSE operation is in progress.
 - 0B: The PLAY – MANUAL SEARCH operation is in progress.
 - 0C: The PAUSE – MANUAL SEARCH operation is in progress.
- ④ It indicates the operation that is being processed when the trouble has occurred.
- It indicates the step number of each processing specified by ③. Because the numbers of steps are different in each processing, this number is different in each processing.


CD FACTORY MODE

Note1: Do not enter the [CD FACTORY MODE] while any other test-mode is in progress.

Note2: Do not enter any other test mode while the [CD FACTORY MODE] is in progress.

Procedure:


1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to select CD function
3. Press three buttons of [▶], [FUNCTION], and [DISPLAY] simultaneously.
4. It enters the CD factory mode and displays the following message.

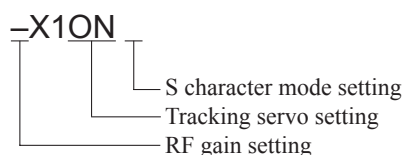

Key Operation:

[DISPLAY]:

The display changes in the following order whenever the button is pressed.

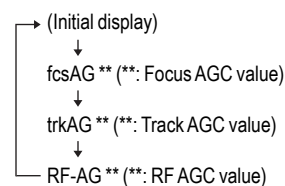

[DSGX]:

RF gain setting changes whenever the button is pressed.

“_”: No gain fixation.

“AL”: Fix to the gain for AL disc.

“RW”: Fix to the gain for RW disc.

[EQ]:

Tracking servo setting changes whenever the button is pressed.

“ON”: Tracking servo ON.

“OFF”: Tracking servo OFF.

[FUNCTION]:

S character mode setting changes whenever the button is pressed.

“ ”: S character mode OFF.

“S”: S character mode ON.

5. To release from this mode, press the [I/⏻] button to turn the power off.


SECTION 5 ELECTRICAL ADJUSTMENTS

CD SECTION

Note:


1. CD Block is basically constructed to operate without adjustment.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 M Ω impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
5. Check the focus bias check when optical pick-up block is replaced.

FOCUS BIAS CHECK

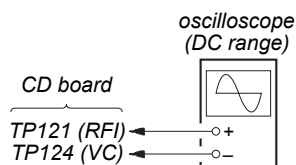


Procedure :

1. Connect the oscilloscope to TP121 (RFI) and TP124 (VC) on the CD board.
2. Press the [I/⏮] button to turn the power ON, and press the [▲] button to open the CD disc tray.
3. Set disc (YEDS-18) on the tray and press the [▶] button to playback.
4. Confirm that oscilloscope waveform is as shown in the figure below. (eye pattern)
A good eye pattern means that the diamond shape (◇) in the center of the waveform can be clearly distinguished.

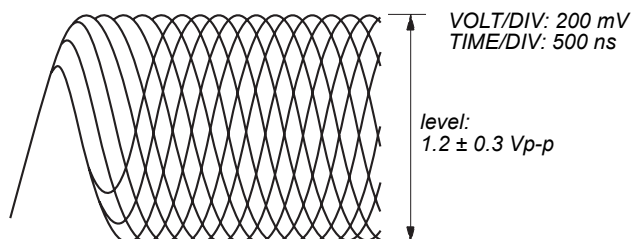

Checking Location:

– CD Board (Conductor Side) –

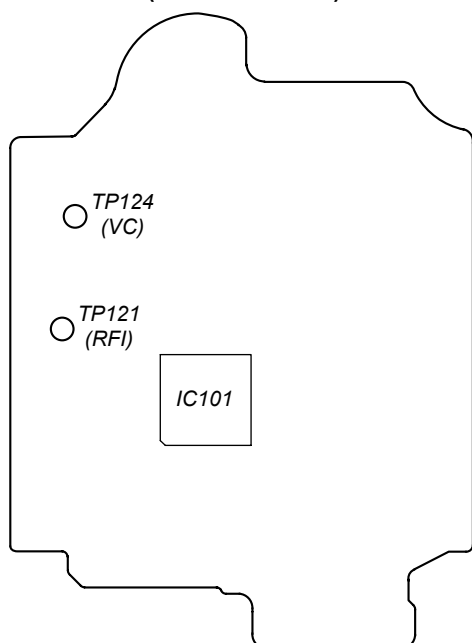


TUNER SECTION

0 dB = 1 μ V

[AM]

Setting:



FUNCTION: AM

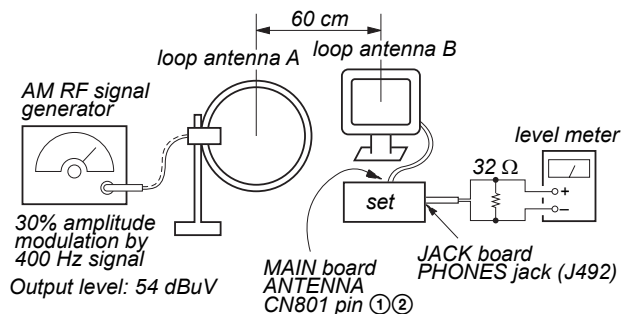

[FM]

Setting:

FUNCTION: FM

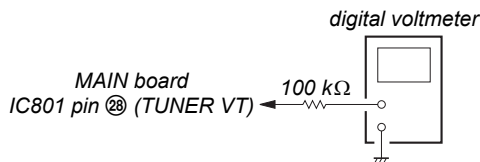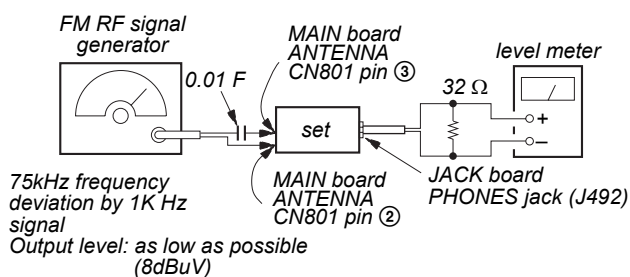

- Repeat the procedures in each adjustment several times.

AM FREQUENCY COVERAGE ADJUSTMENT		
Adjustment Part	Frequency Display	Reading on Digital Voltmeter
L801	530 kHz	1.5 ± 0.1 V
Confirmation	1,710 kHz	8 ± 0.5 V

AM TRACKING ADJUSTMENT	
Adjust for a maximum reading on level meter	
L805	530 kHz

FM FREQUENCY COVERAGE ADJUSTMENT		
Adjustment Part	Frequency Display	Reading on Digital Voltmeter
L803	87.5 kHz	1.75 ± 0.1 V
Confirmation	108 kHz	6.2 ± 0.5 V


FM TRACKING ADJUSTMENT	
Adjust for a minimum reading on level meter	
L804	98 MHz

Adjustment Location: MAIN board (See page 24)

FM DETECTOR ADJUSTMENT


Setting:

FUNCTION: FM

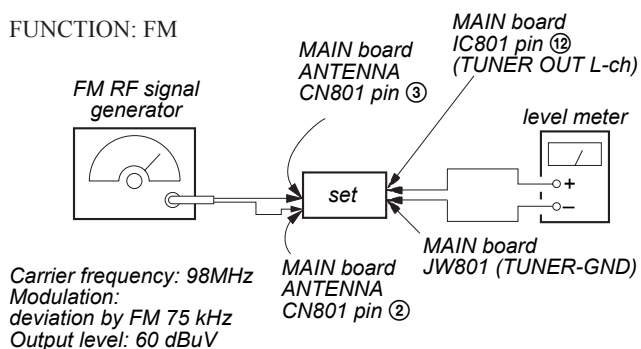

1. Turn the set to 98 MHz.
2. Adjust L802 so that modulation distortion may become the best in the vicinity of the maximum value where the tuner out level becomes -15dBuV or more.

FM AUTO STOP CHECK

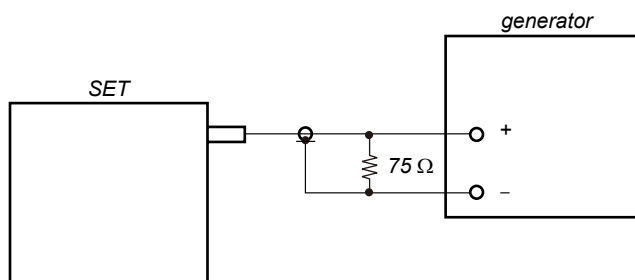

Procedure :

1. Turn the power on.
2. Input the following signal from Signal Generator to FM antenna input directly.

Carrier frequency : A = 87.5 MHz, B = 98 MHz, C = 108 MHz

Deviation : 75 kHz

Modulation : 1 kHz

ANT input : 35 dBu (EMF)


Note: Please use 75 ohm "coaxial cable" to connect SG and the set. You cannot use video cable for checking.
Please use SG whose output impedance is 75 ohm.

3. Set to FM tuner function and scan the input FM signal with automatic scanning.
4. Confirm that input Frequency of A, B and C detected and automatic scanning stops.


The stop of automatic scanning means "The station signal is received in good condition".

Adjustment Location and Connecting Points:

– MAIN Board (Component Side) –

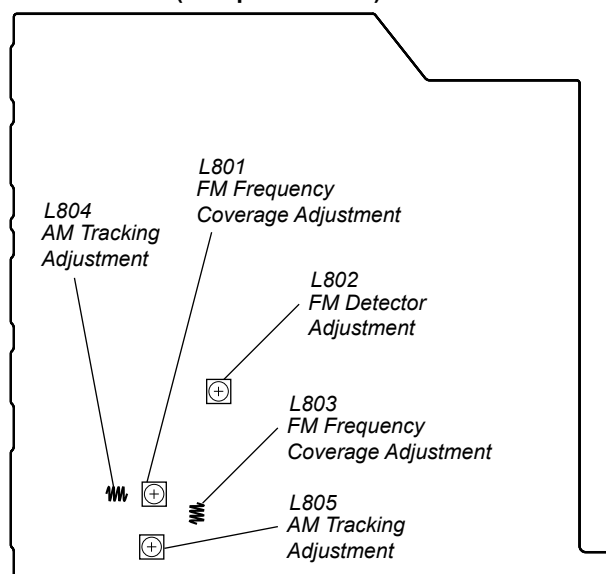


– MAIN Board (Conductor Side) –

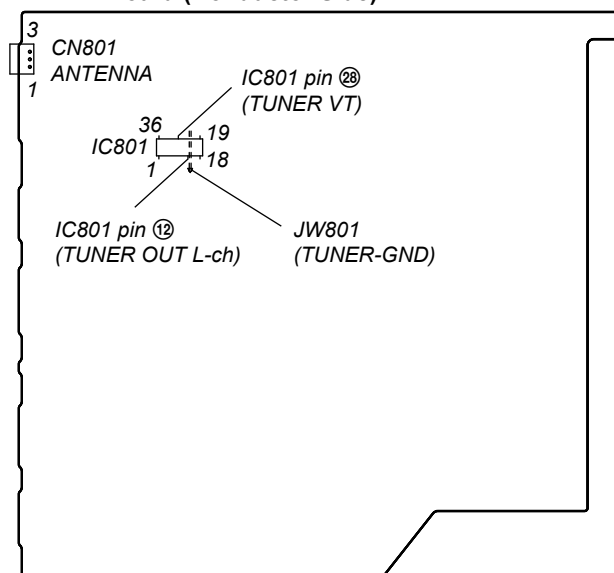


SECTION 6 DIAGRAMS

6-1. BLOCK DIAGRAM - CD SERVO, TUNER Section -

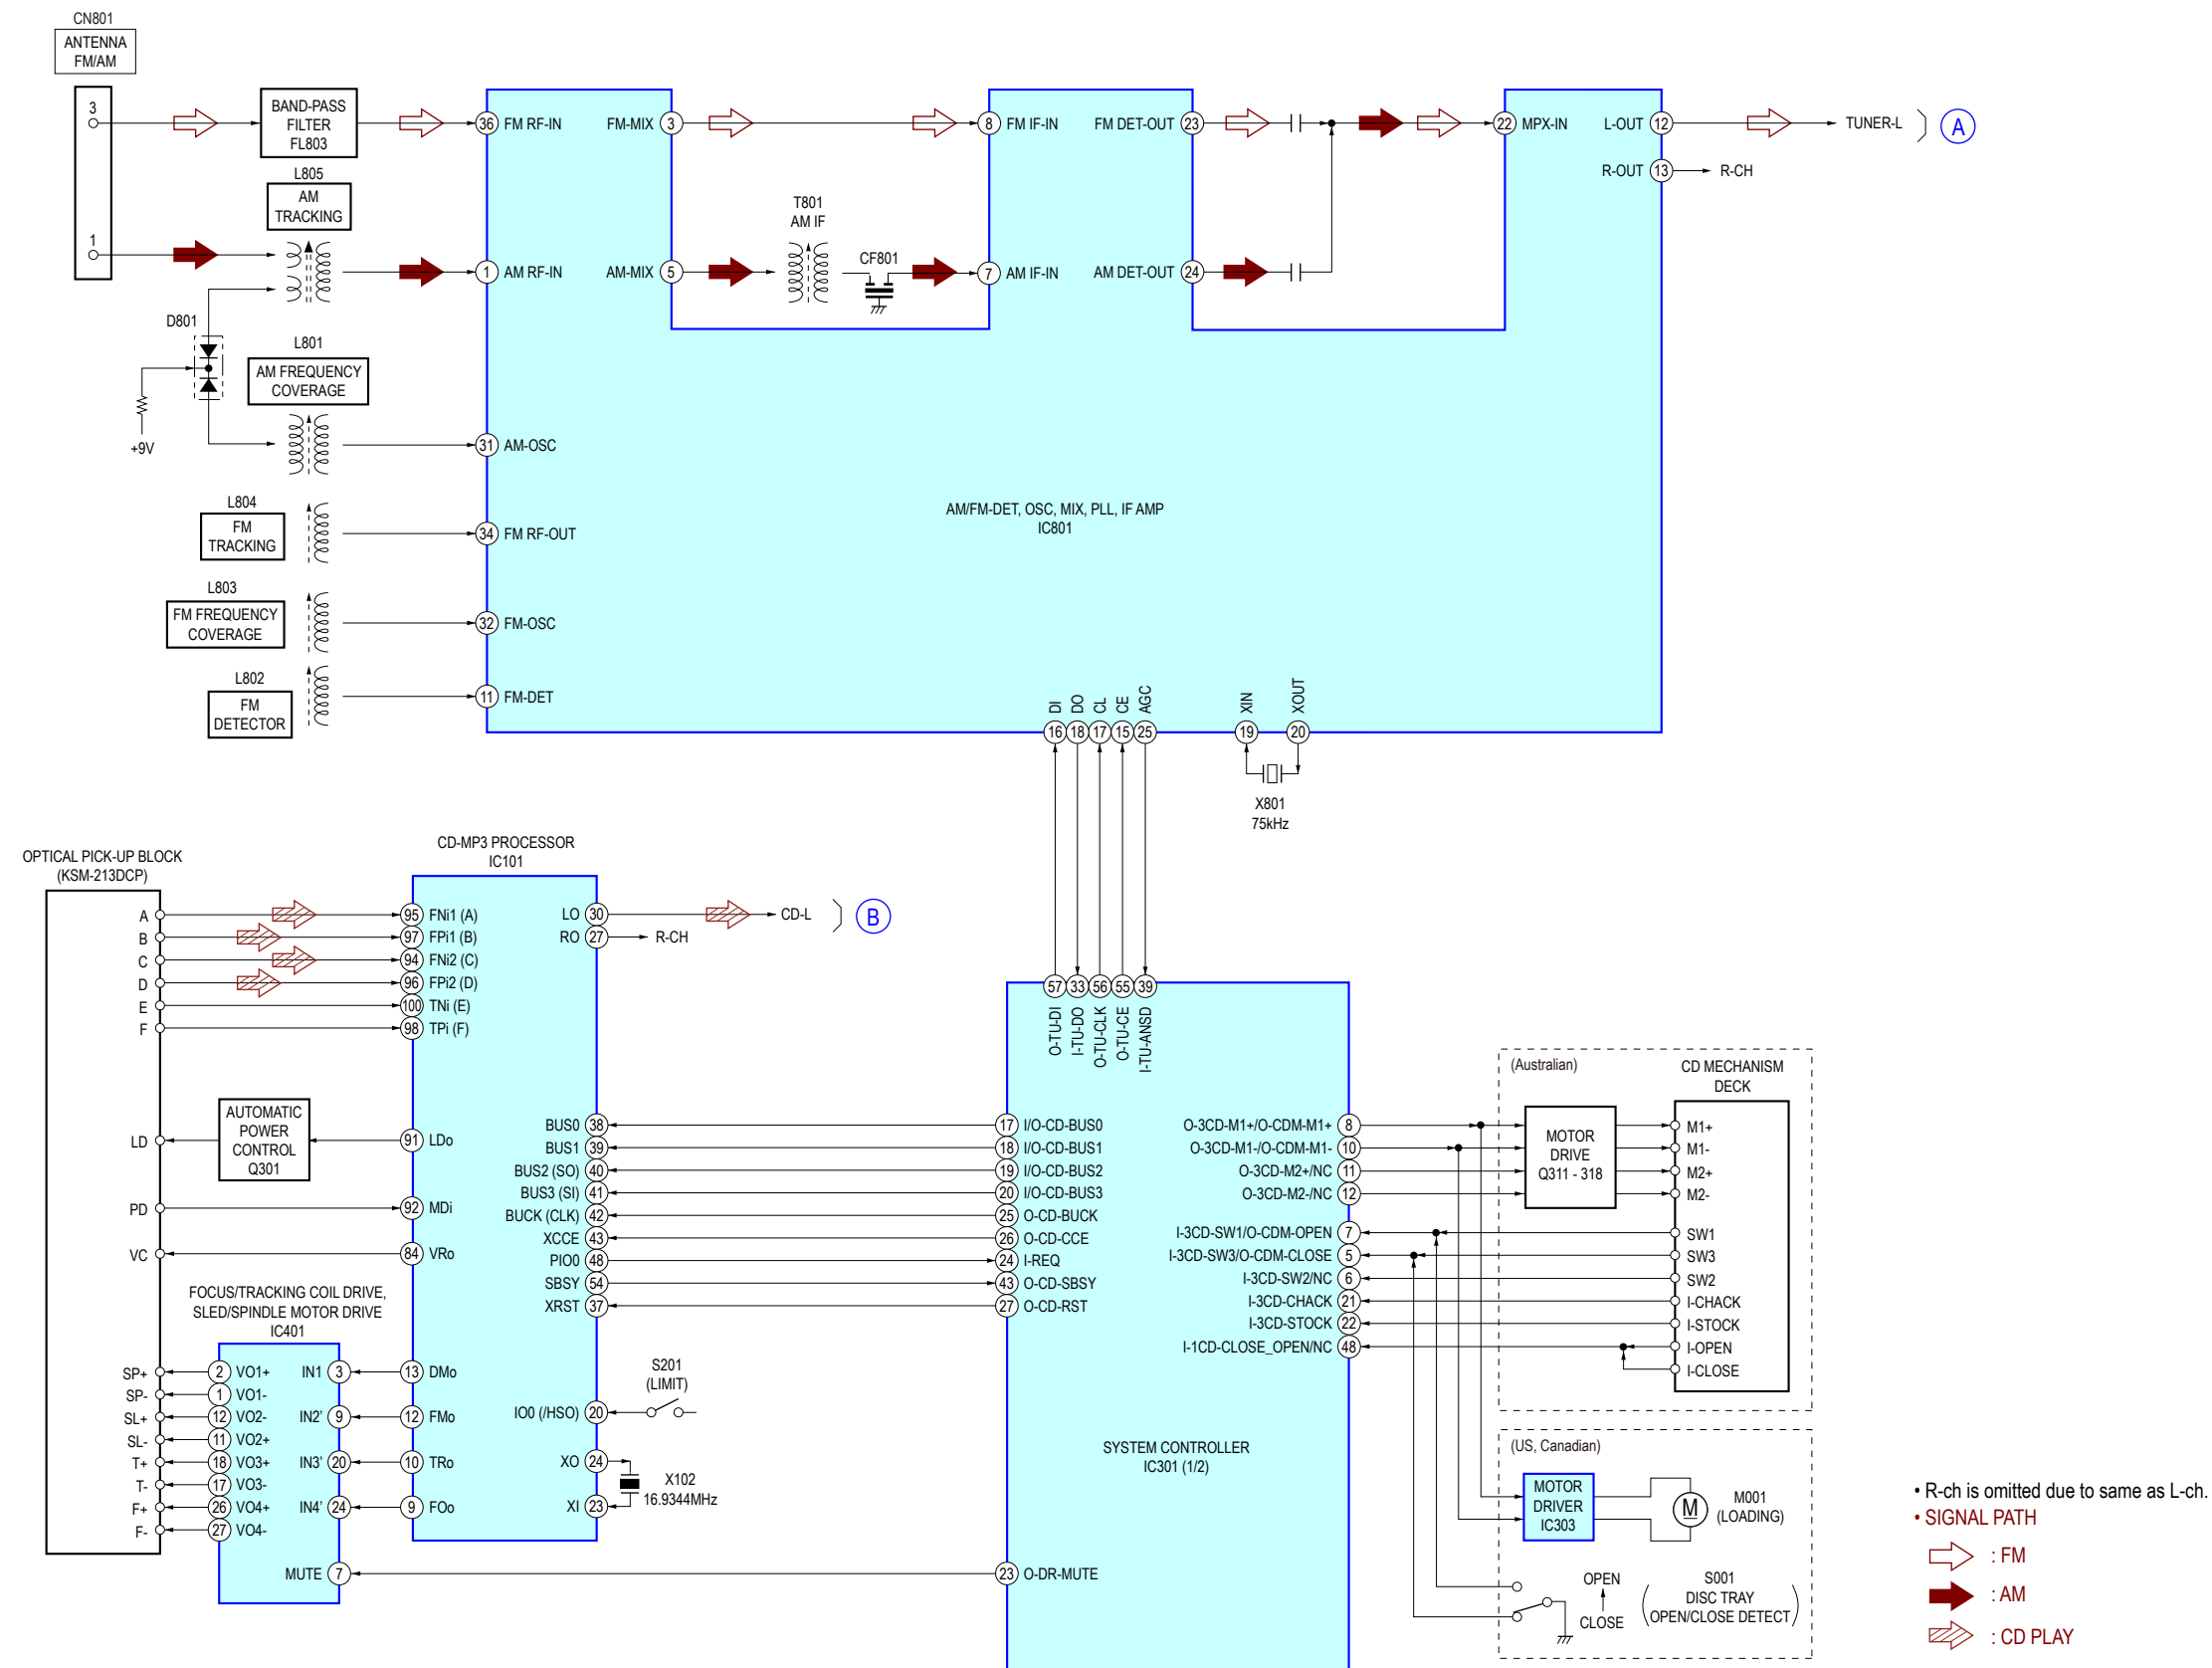

6-2. BLOCK DIAGRAM - MAIN Section -

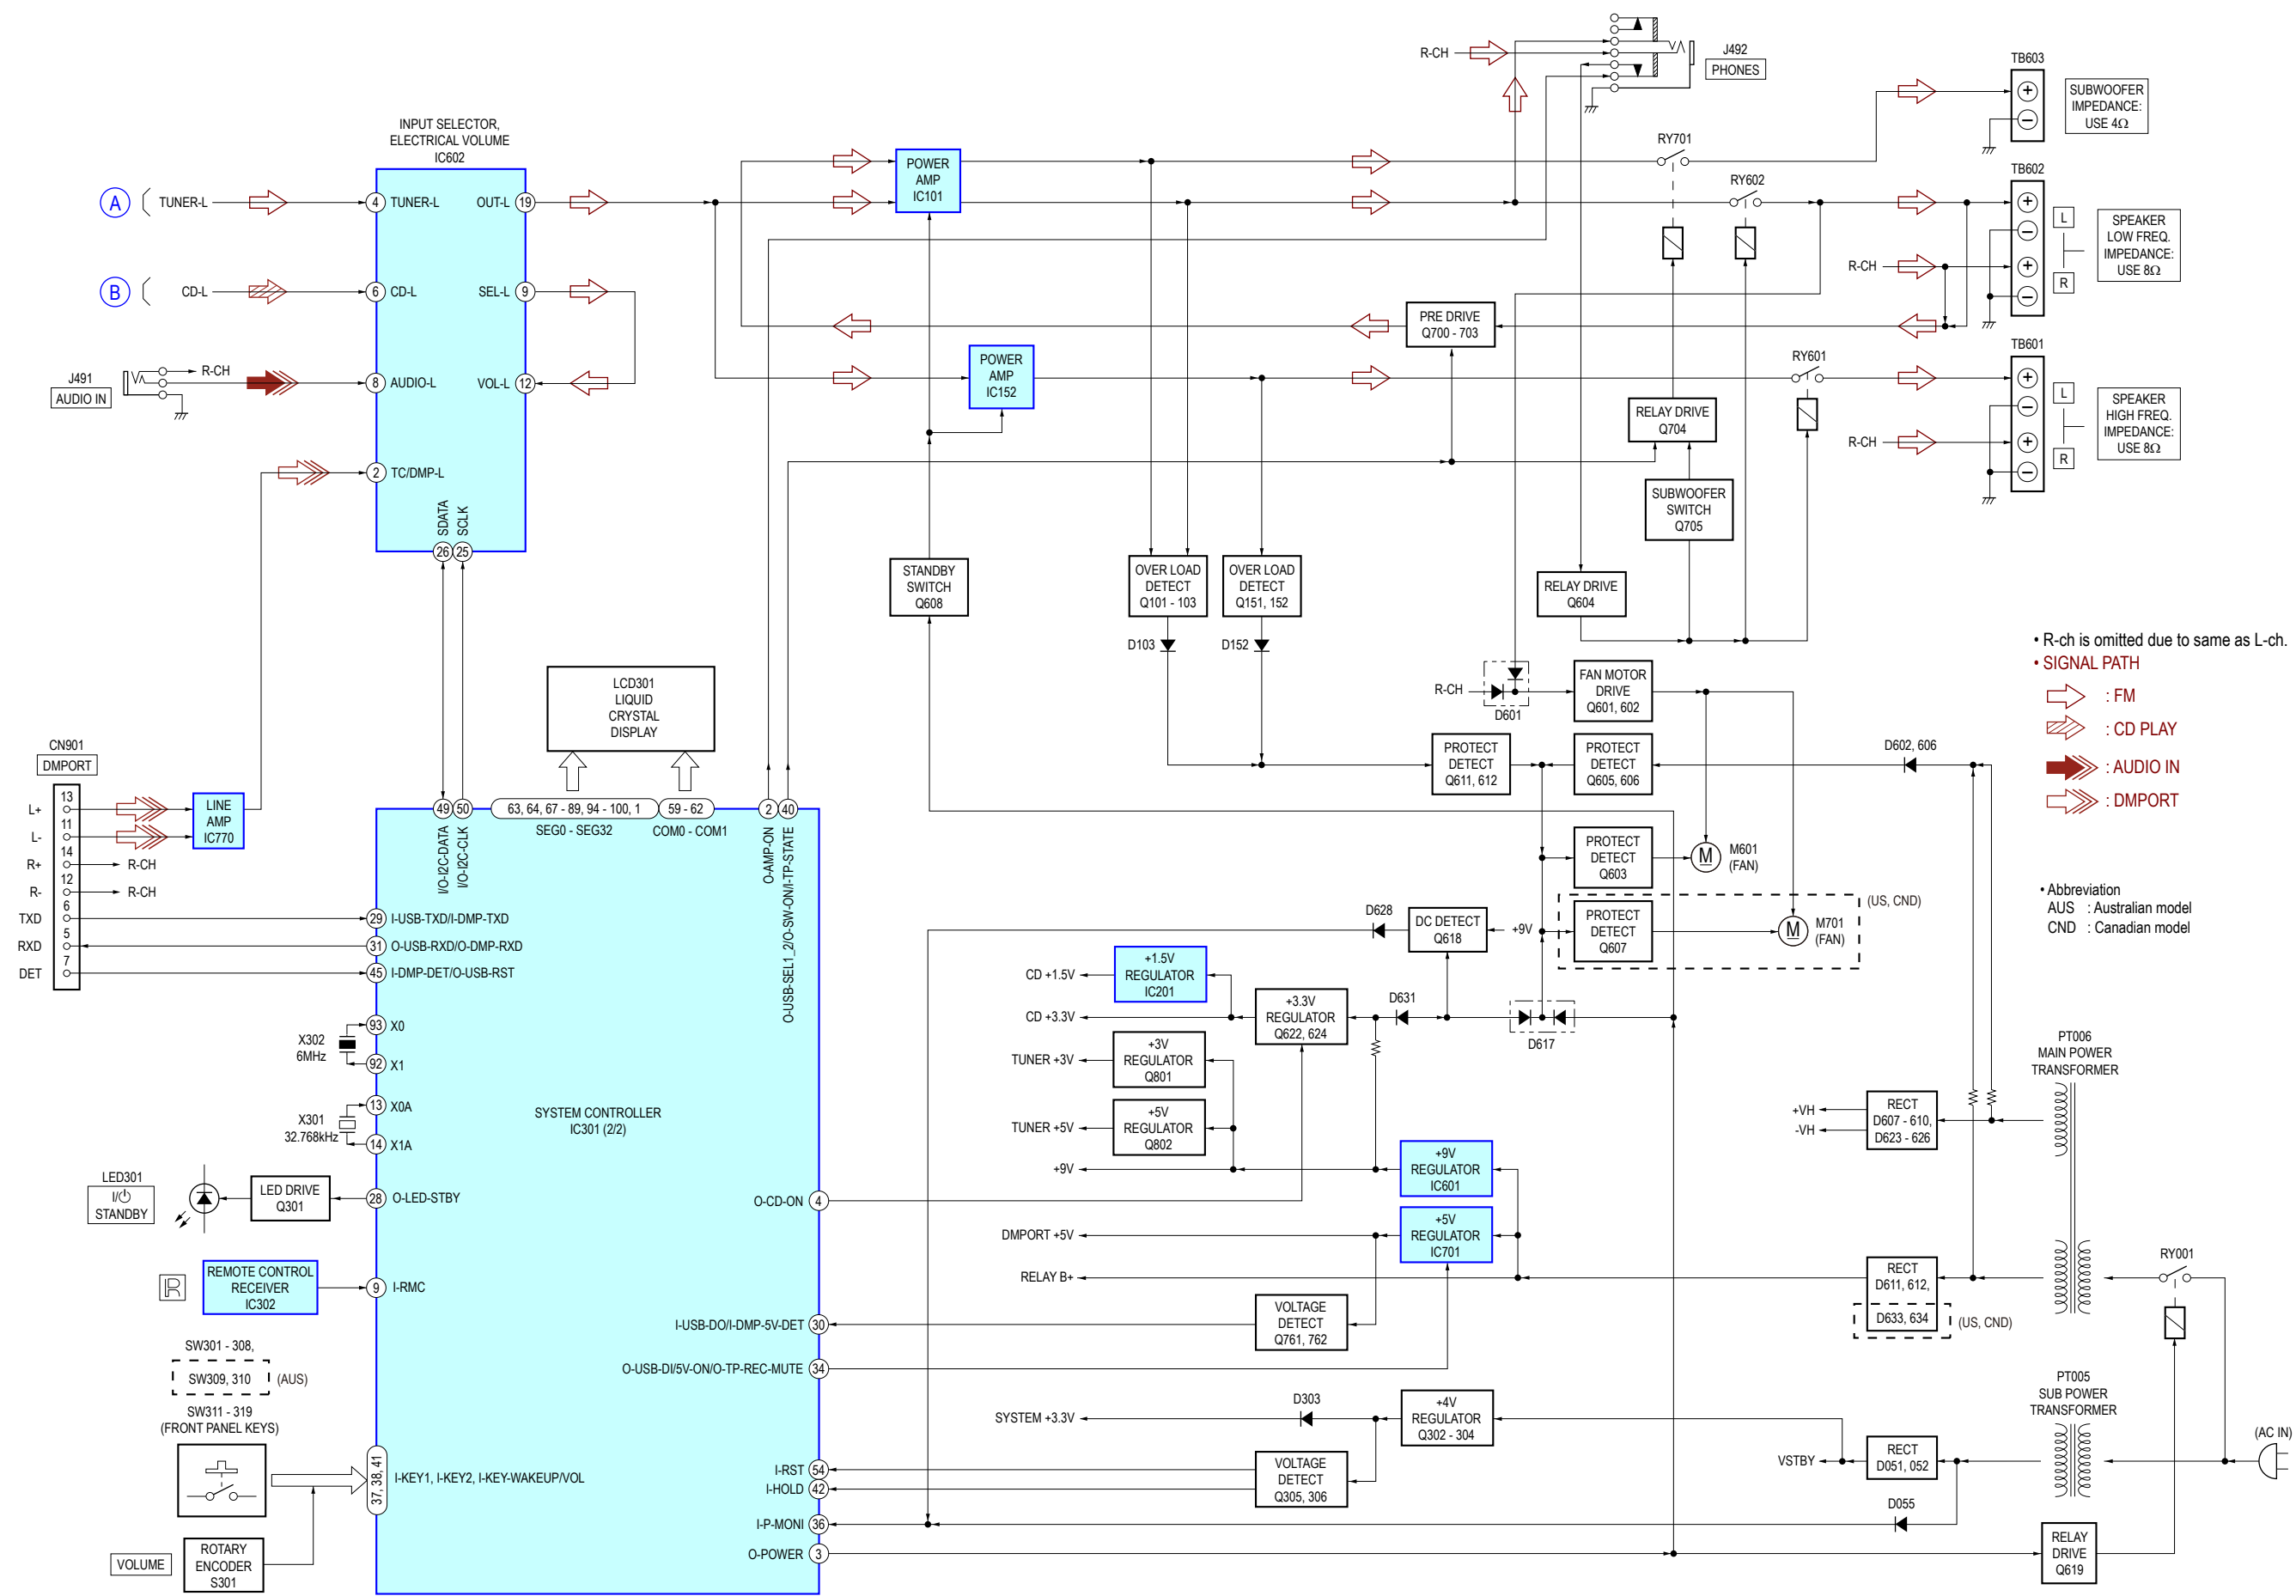


THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For Printed Wiring Boards.

- Note:**
- — : Parts extracted from the component side.
 - : Parts extracted from the conductor side.
 - — : indicated side identified with part number.
 - △ : Internal component.
 - : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Parts face side: Parts on the parts face side seen from the pattern face are indicated.
Pattern face side: Parts on the pattern face side seen from the parts face are indicated.

- Indication of transistor.

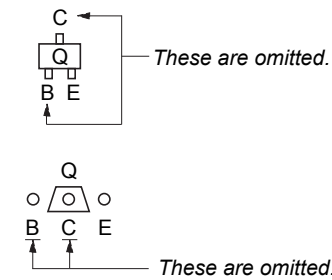


For Schematic Diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise specified.
 - △ : internal component.
 - — : nonflammable resistor.
 - — : panel designation.

Note: The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	---


- : B+ Line.
- - - : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- CD Board -
no mark : CD PLAY
- Other Boards -
no mark : TUNER (FM/AM)
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : FM
⇒ : AM
⇒ : CD PLAY
⇒ : AUDIO IN
⇒ : DMPORT
- Abbreviation
AUS : Australian model
CND : Canadian model

• Circuit Boards Location

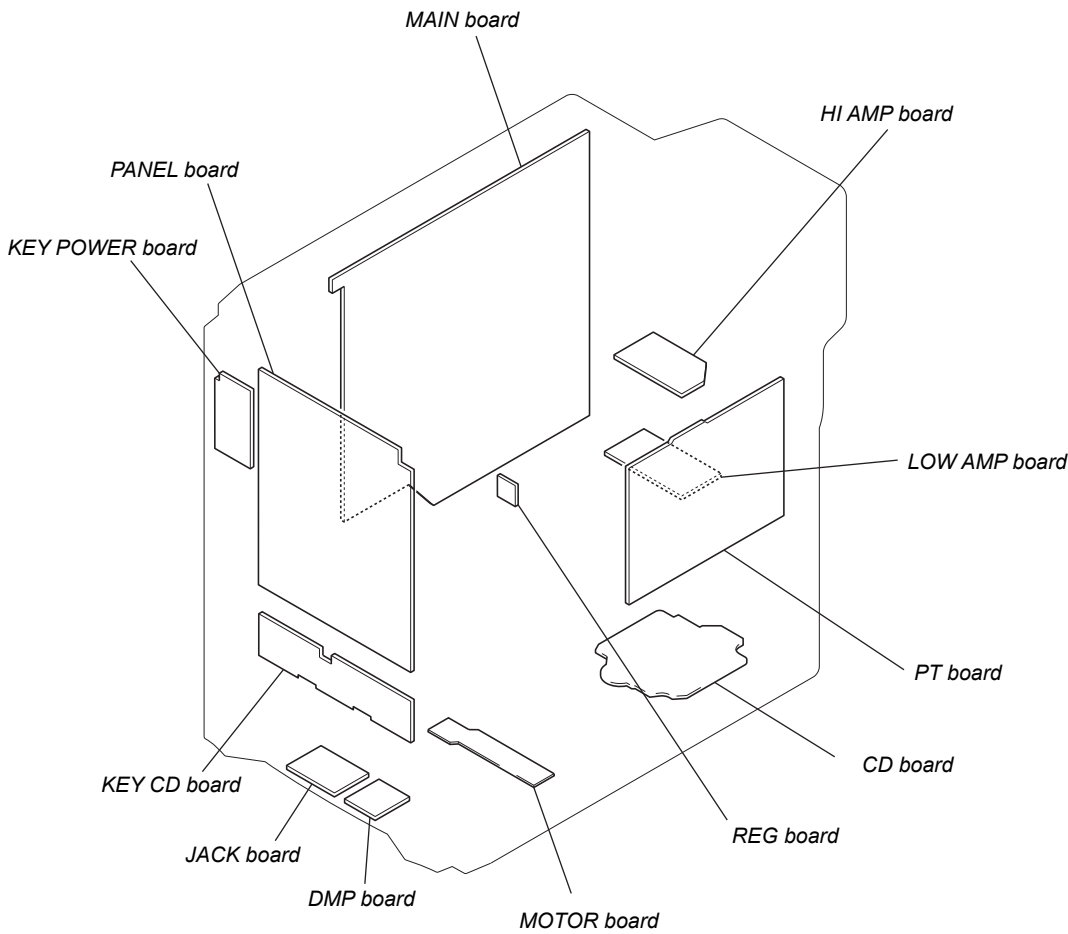

6-3. PRINTED WIRING BOARD - CD Board - • See page 27 for Circuit Boards Location.

4F : Uses unleaded solder.

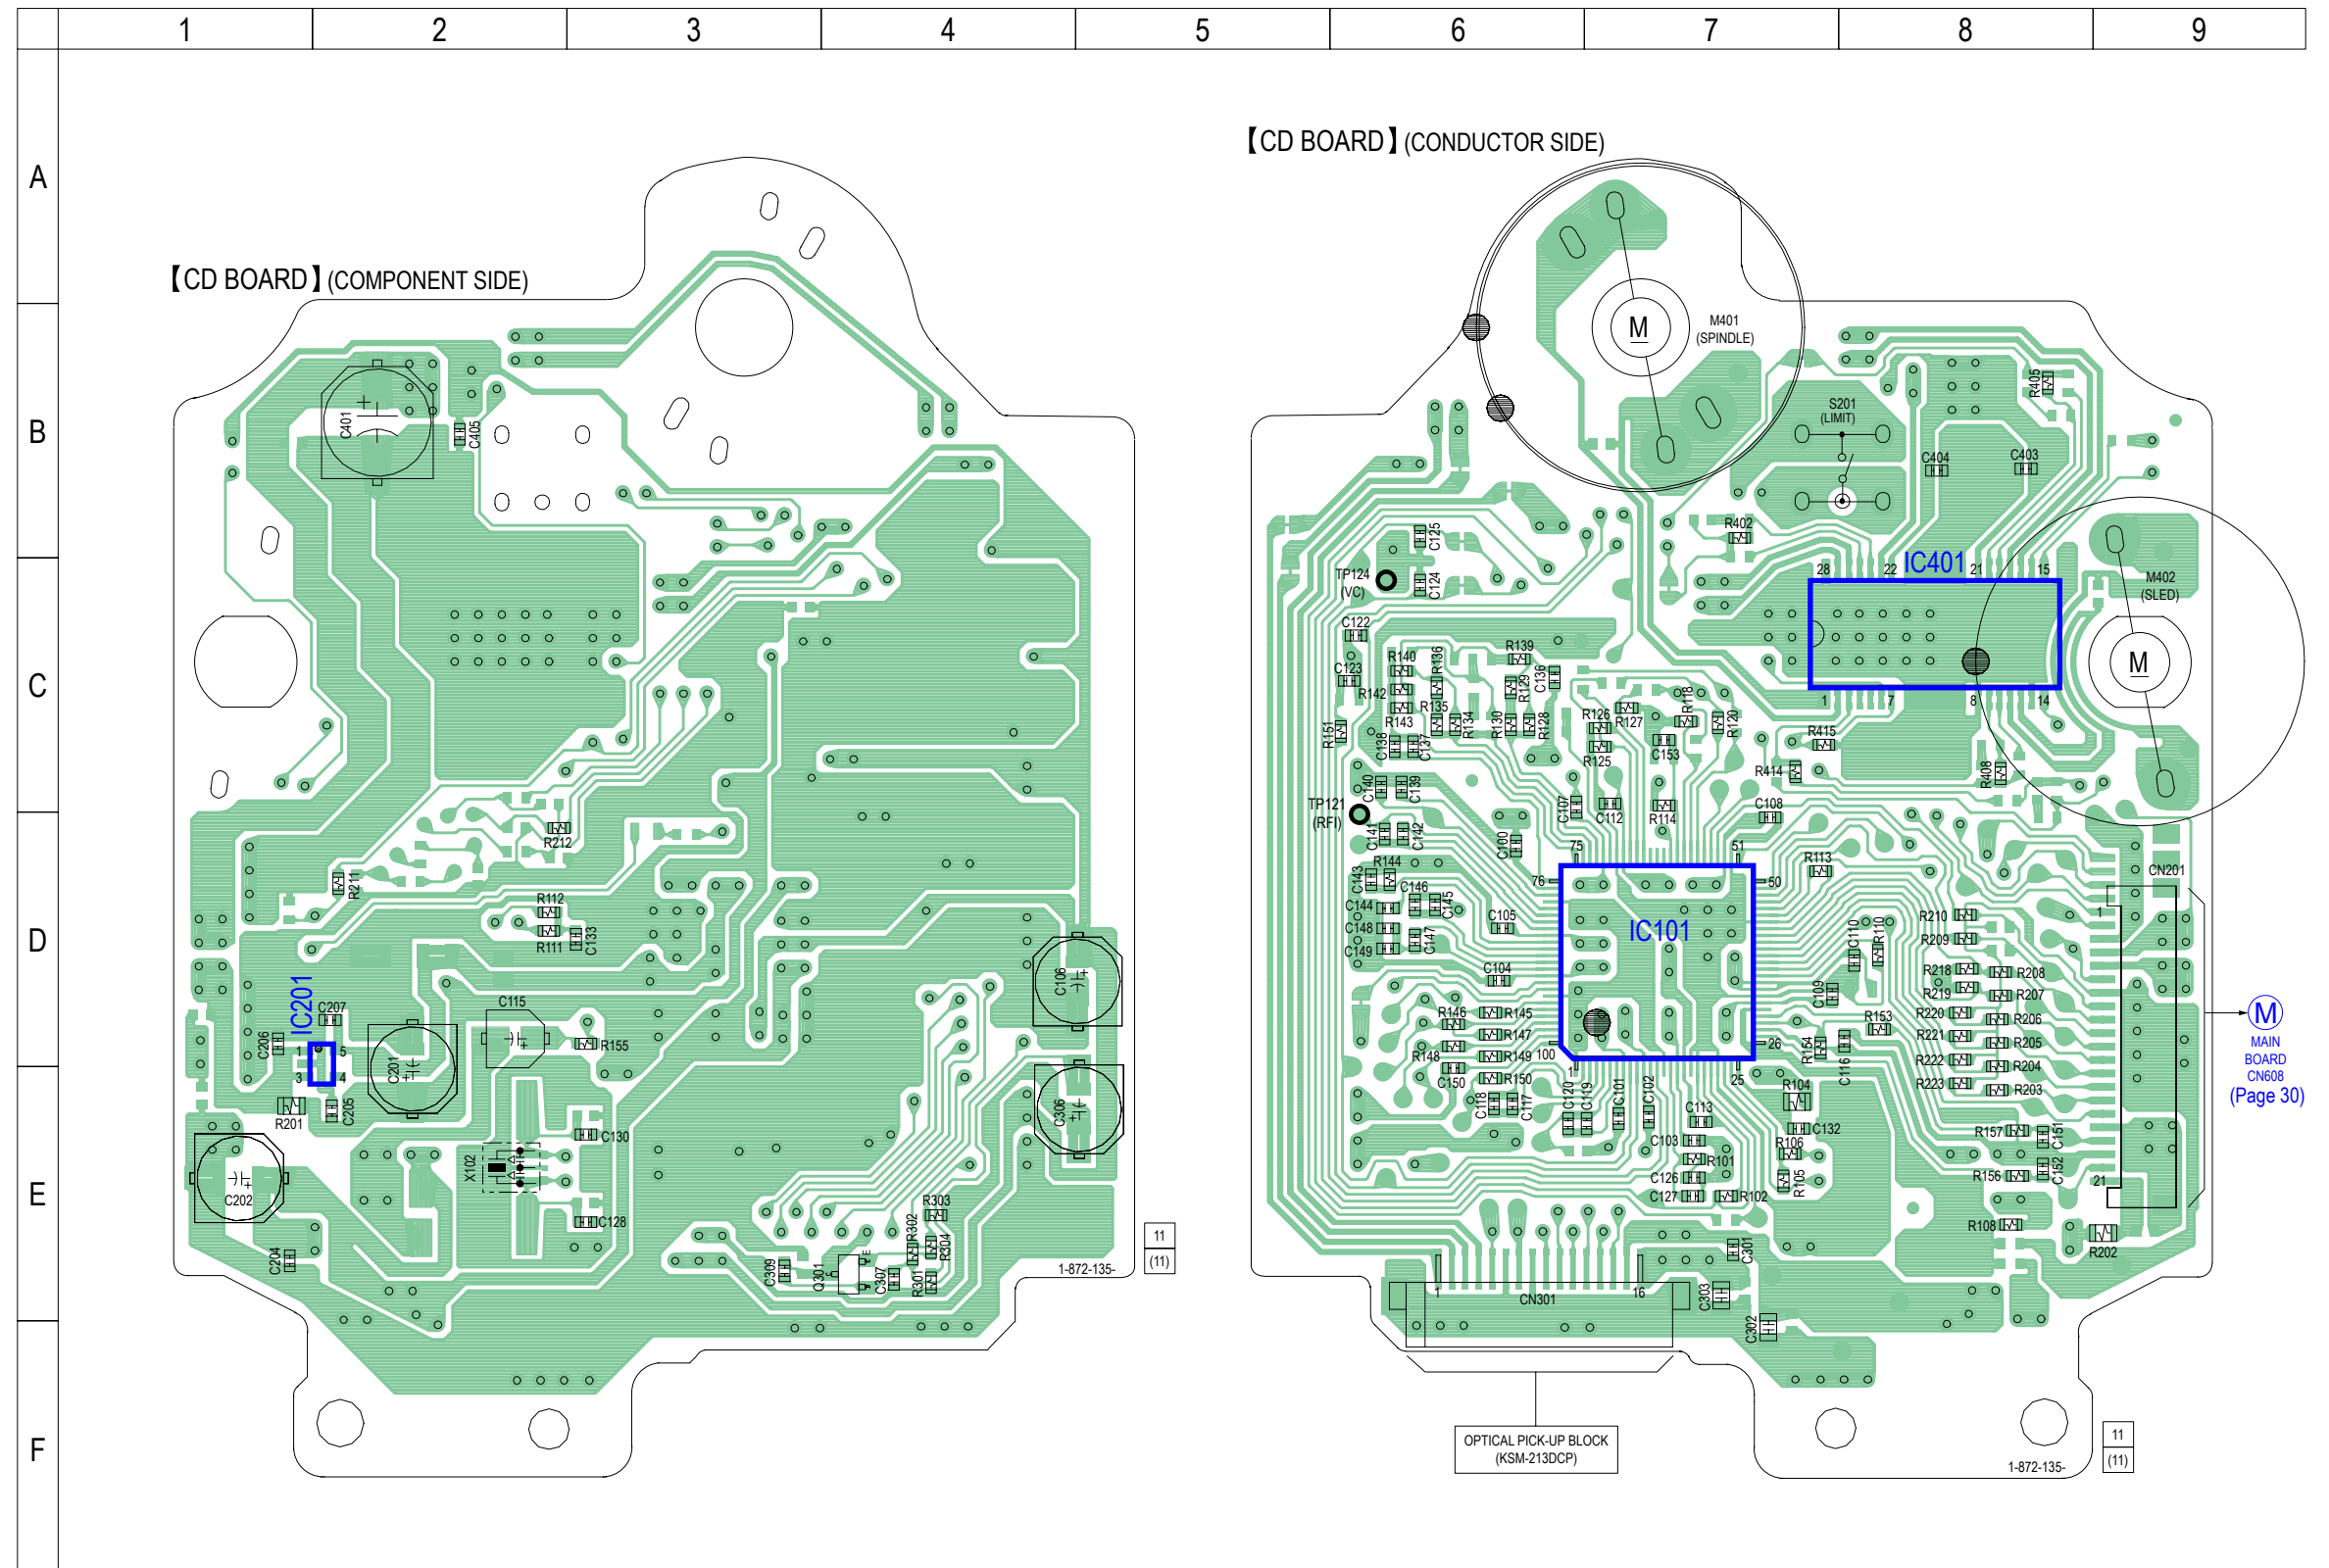

29




- See page 27 for Circuit Boards Location.


-  : Uses unleaded solder.


- **Semiconductor Location**


Ref. No.	Location
D601	F-2
D602	E-6
D603	E-4
D604	G-3
D605	E-5
D606	E-6
D607	G-6
D608	F-5
D609	H-5
D610	F-5
D611	H-6
D612	H-6
D614	B-6
D615	E-7
D617	D-7
D618	E-6
D619	E-7
D620	F-7
D621	D-5
D622	D-5
D623	G-6
D624	F-5
D625	G-5
D626	F-5
D628	D-7
D631	E-7
D633	H-6
D634	H-6
D701	G-7
D702	F-4
D703	D-5
D791	E-5
D801	B-4
D802	B-4
D803	B-4
D804	B-3
D805	B-2
D806	B-2
IC602	C-7
IC701	F-7
IC770	G-8
IC801	C-4
Q601	D-4
Q602	D-5
Q603	D-5
Q604	G-4
Q605	E-6
Q606	E-6
Q607	E-5
Q608	B-6
Q611	D-6
Q612	D-6
Q618	D-7
Q619	H-6
Q622	E-7
Q624	E-7
Q700	D-6
Q701	C-7
Q702	C-6
Q703	C-6
Q704	F-4
Q705	G-4
Q761	G-7
Q762	G-7
Q801	B-5
Q802	B-5

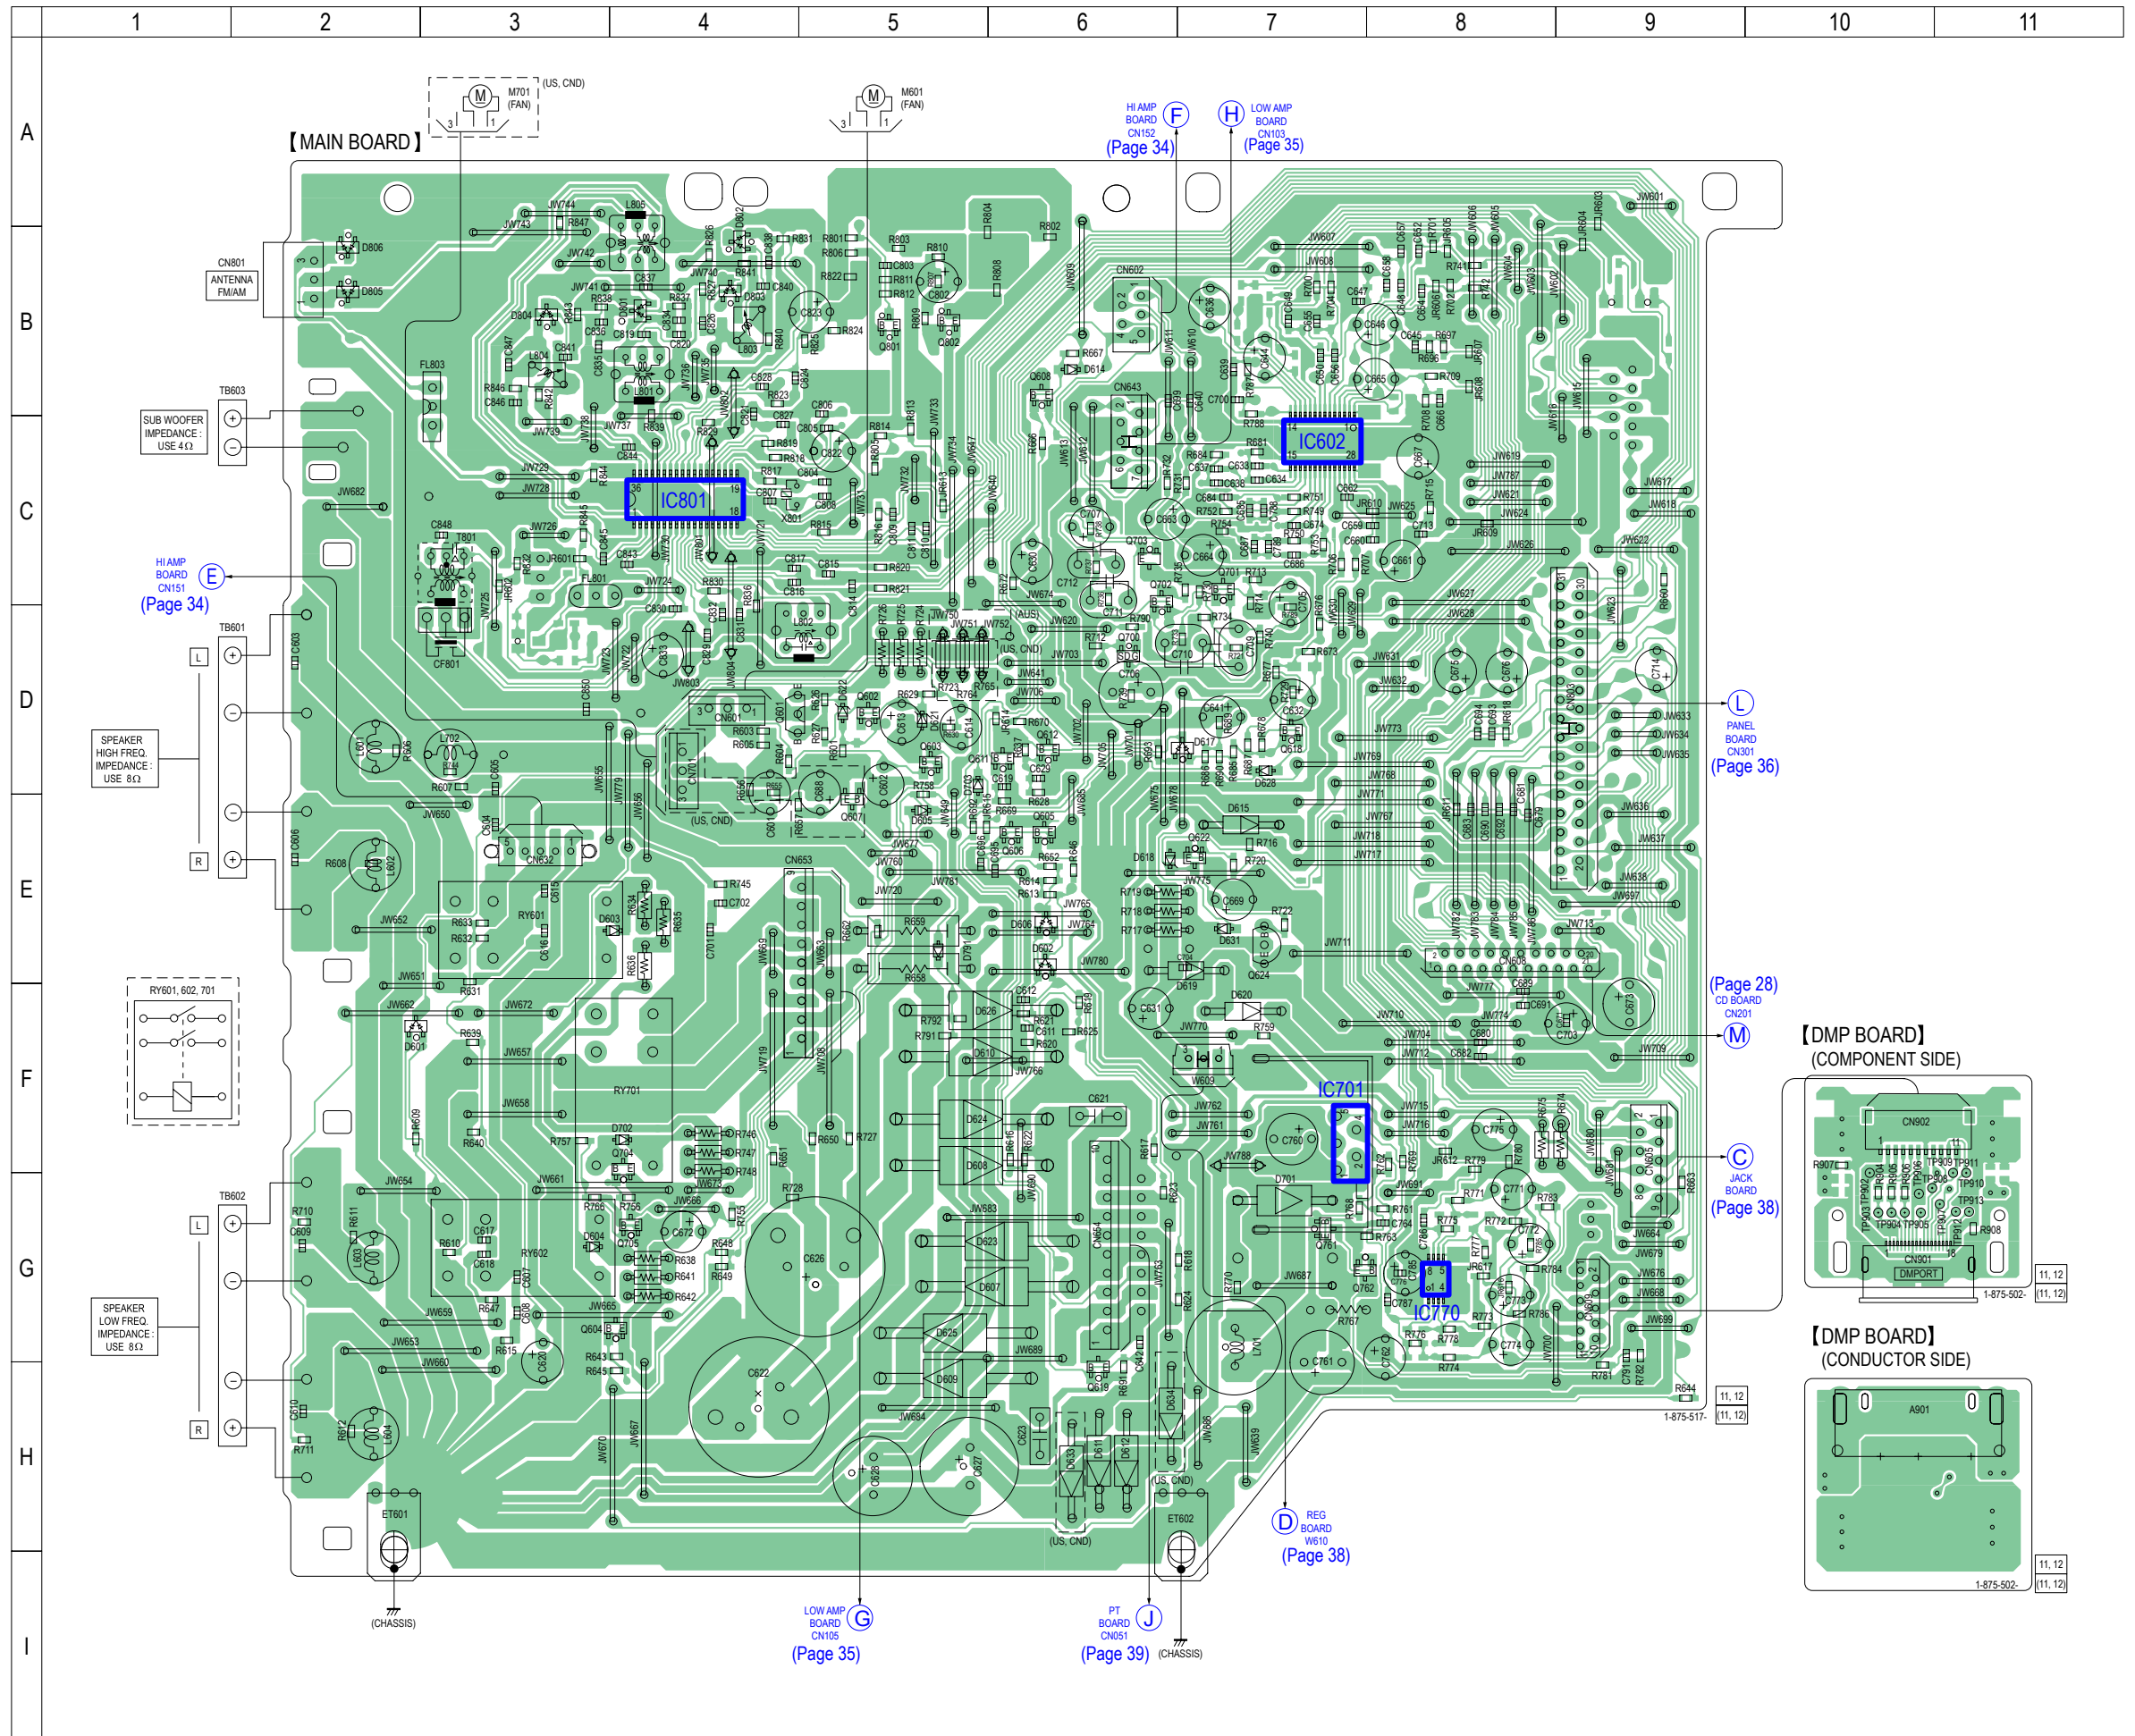

31 31

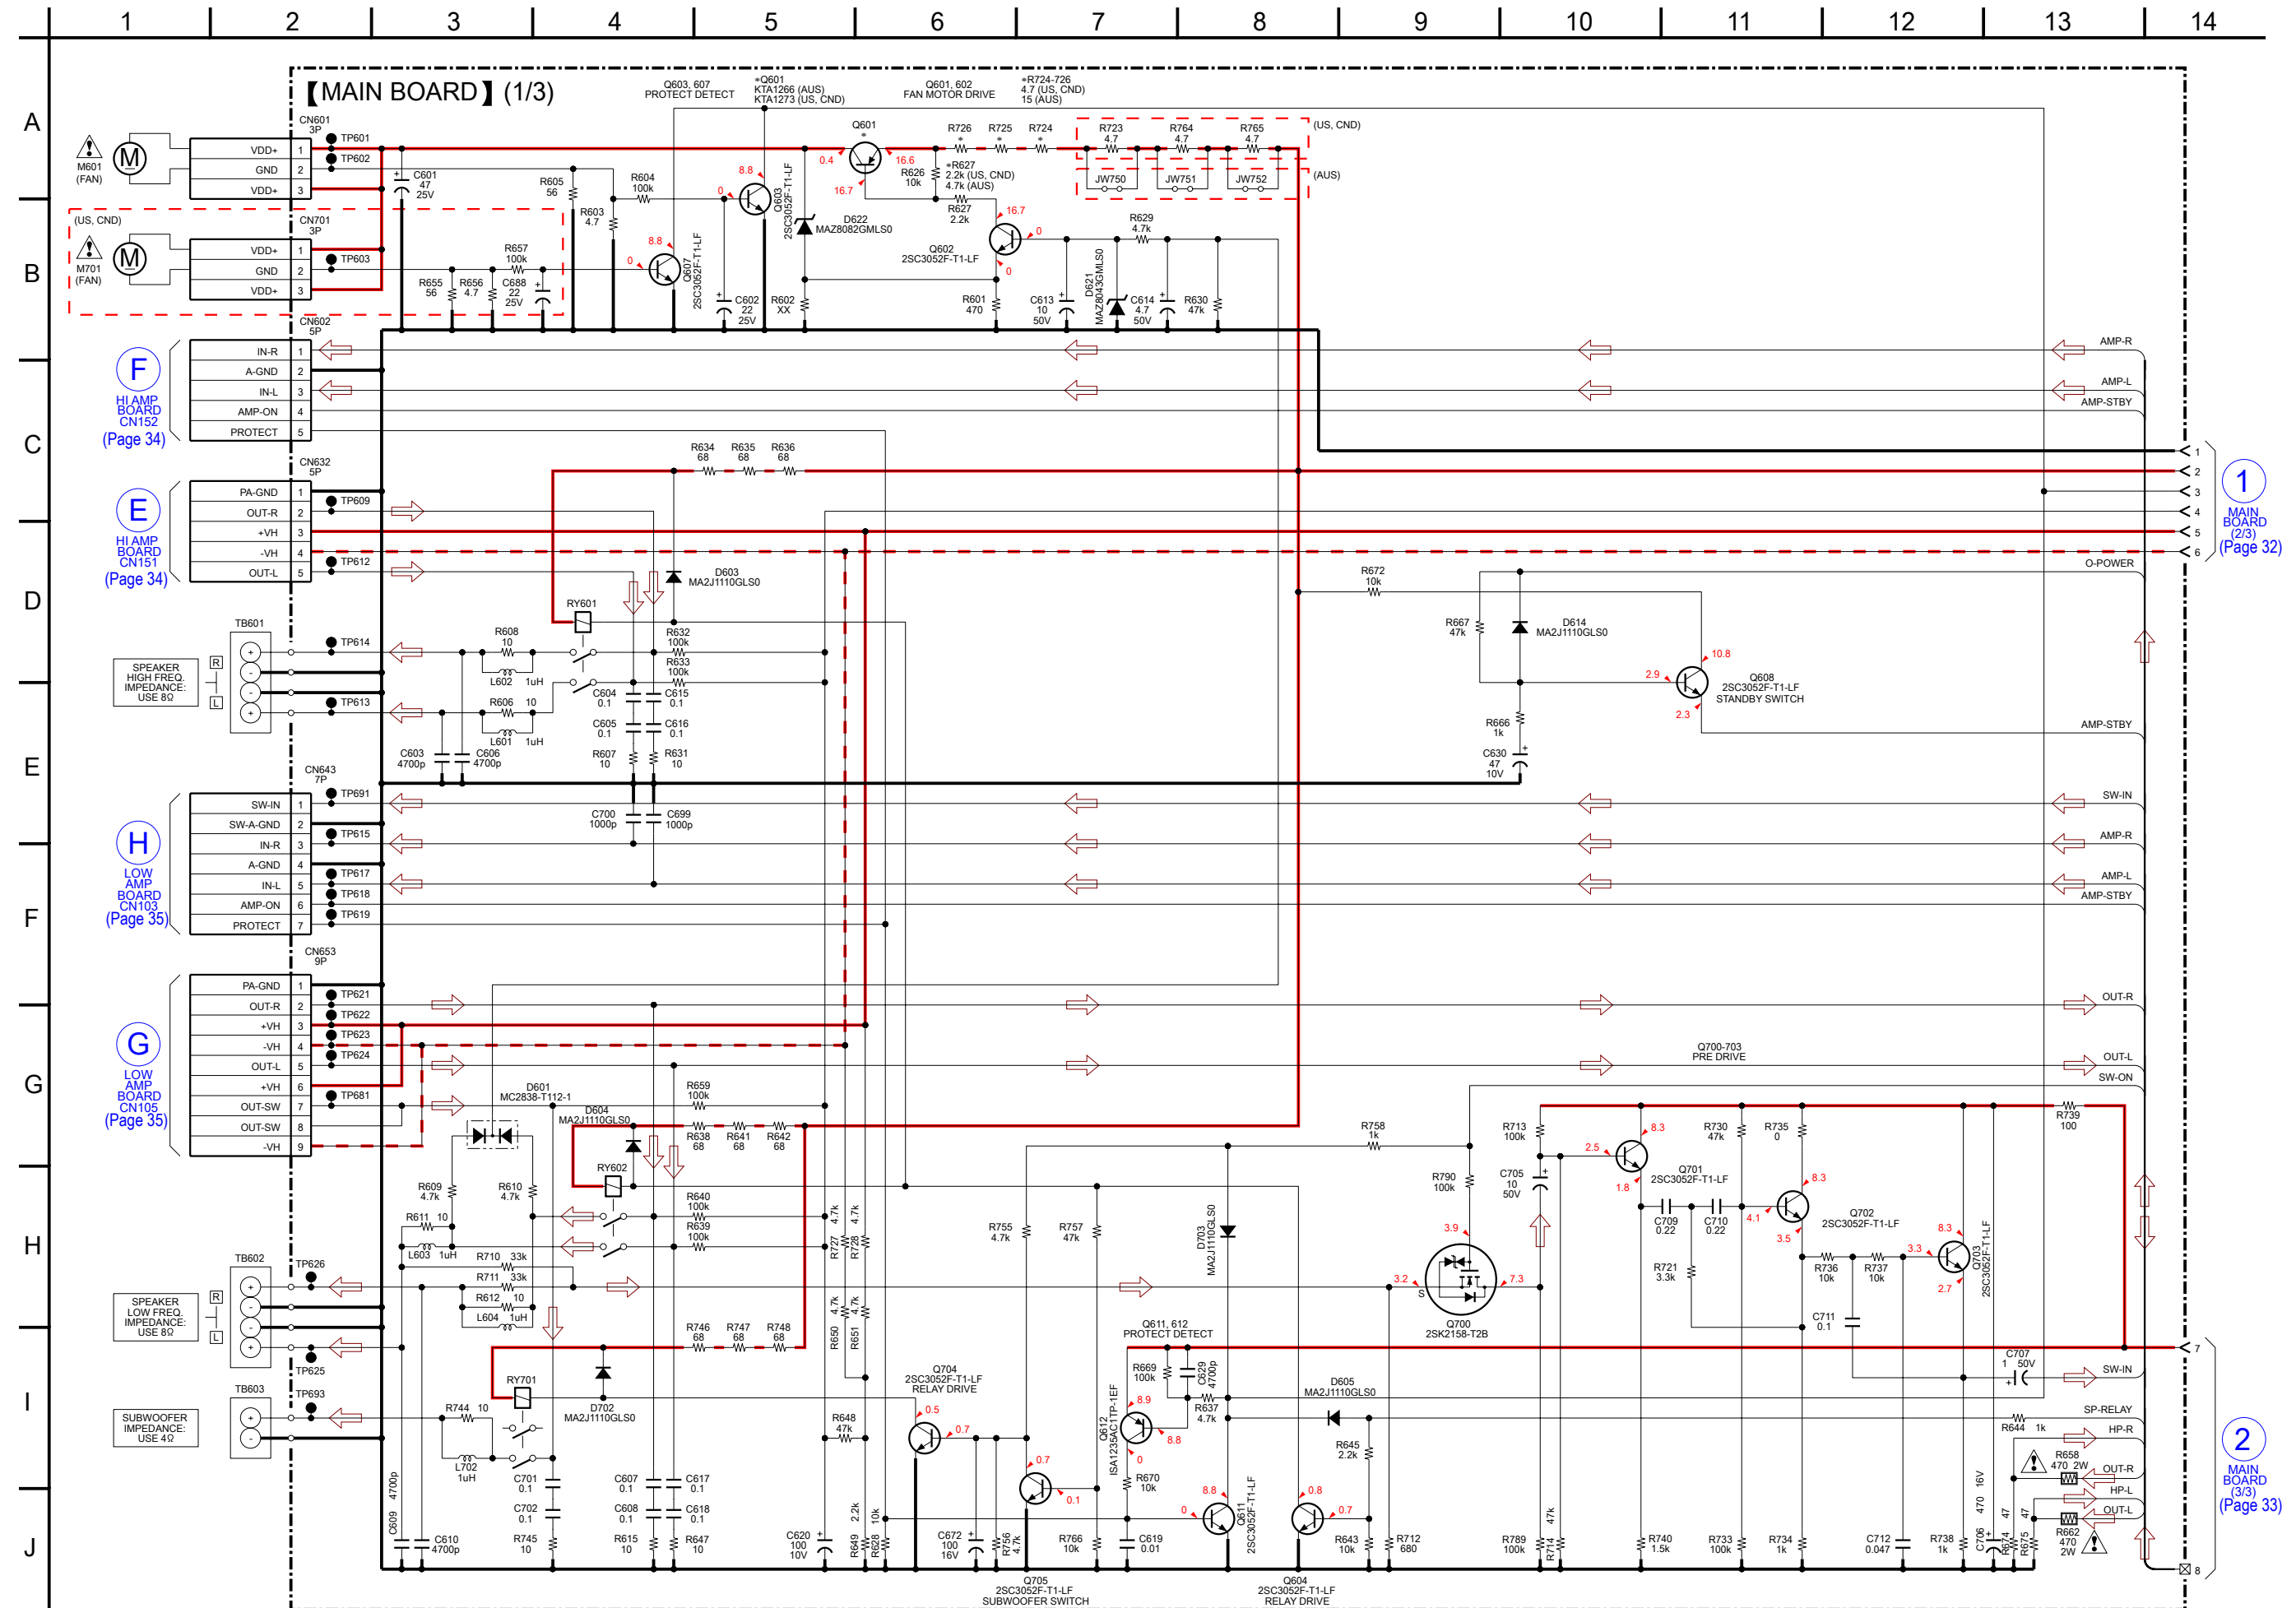








6-10




6-11. PRINTED WIRING BOARD - LOW AMP Board - • See page 27 for Circuit Boards Location. •  : Uses unleaded solder.

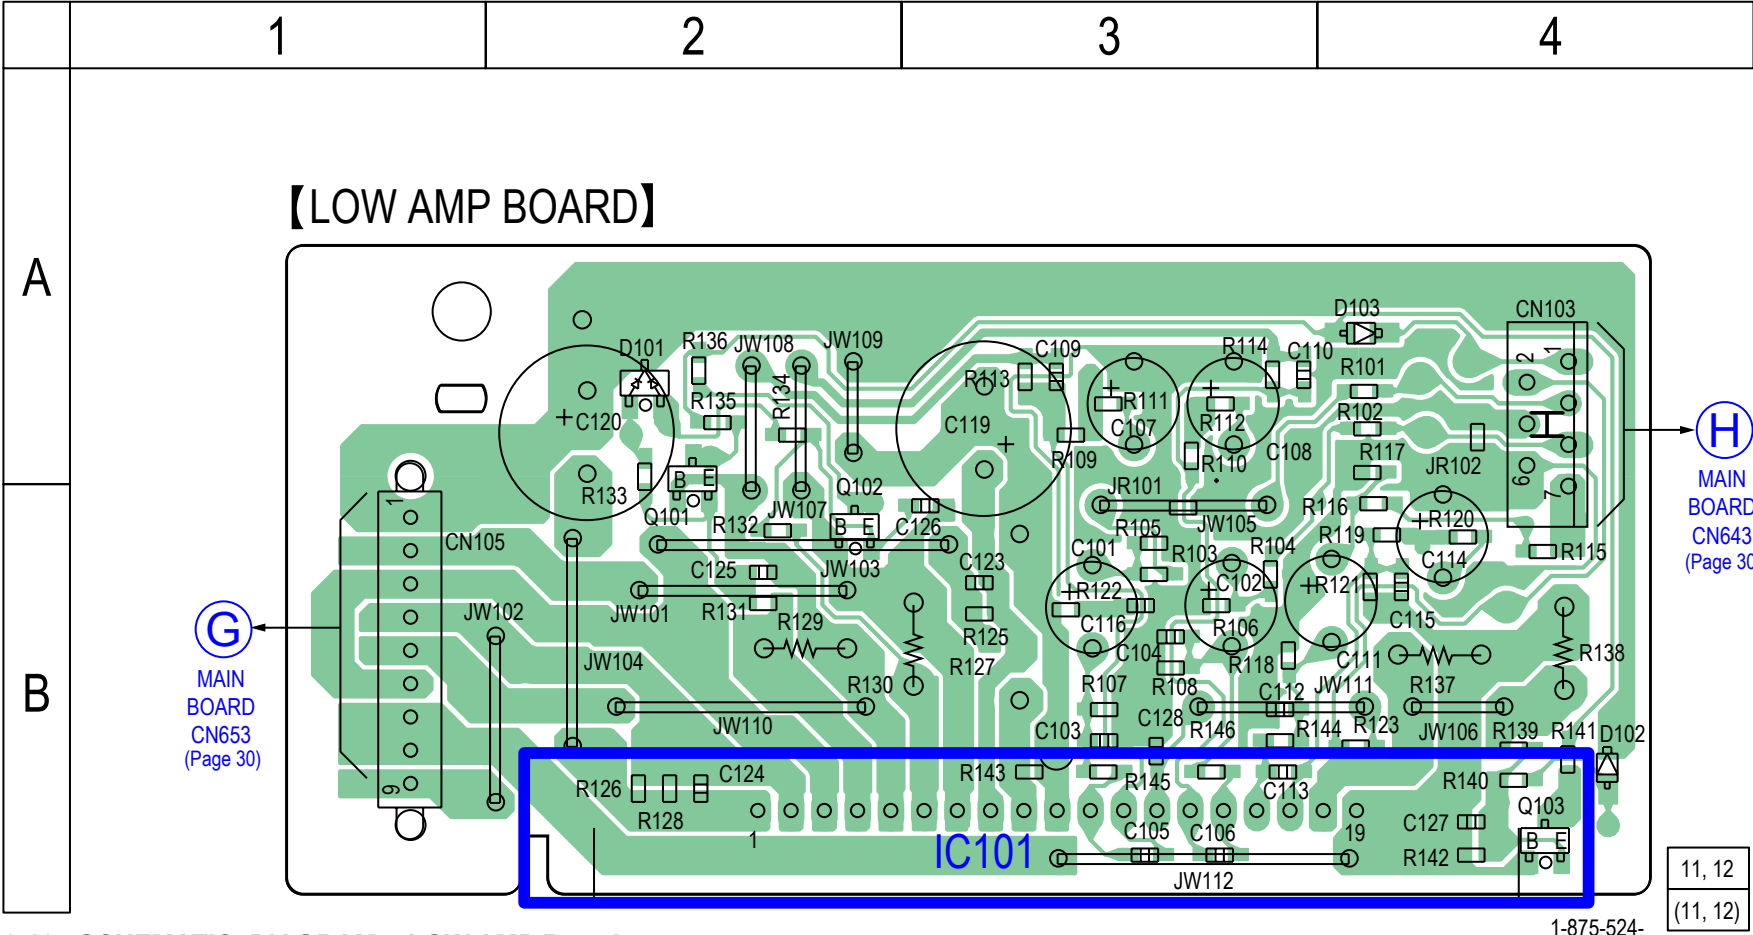

• Semiconductor Location


Ref. No.	Location
D101	A-2
D102	B-4
D103	A-4
IC101	B-3
Q101	A-2
Q102	B-2
Q103	B-4


6-12. SCHEMATIC DIAGRAM - LOW AMP Board -

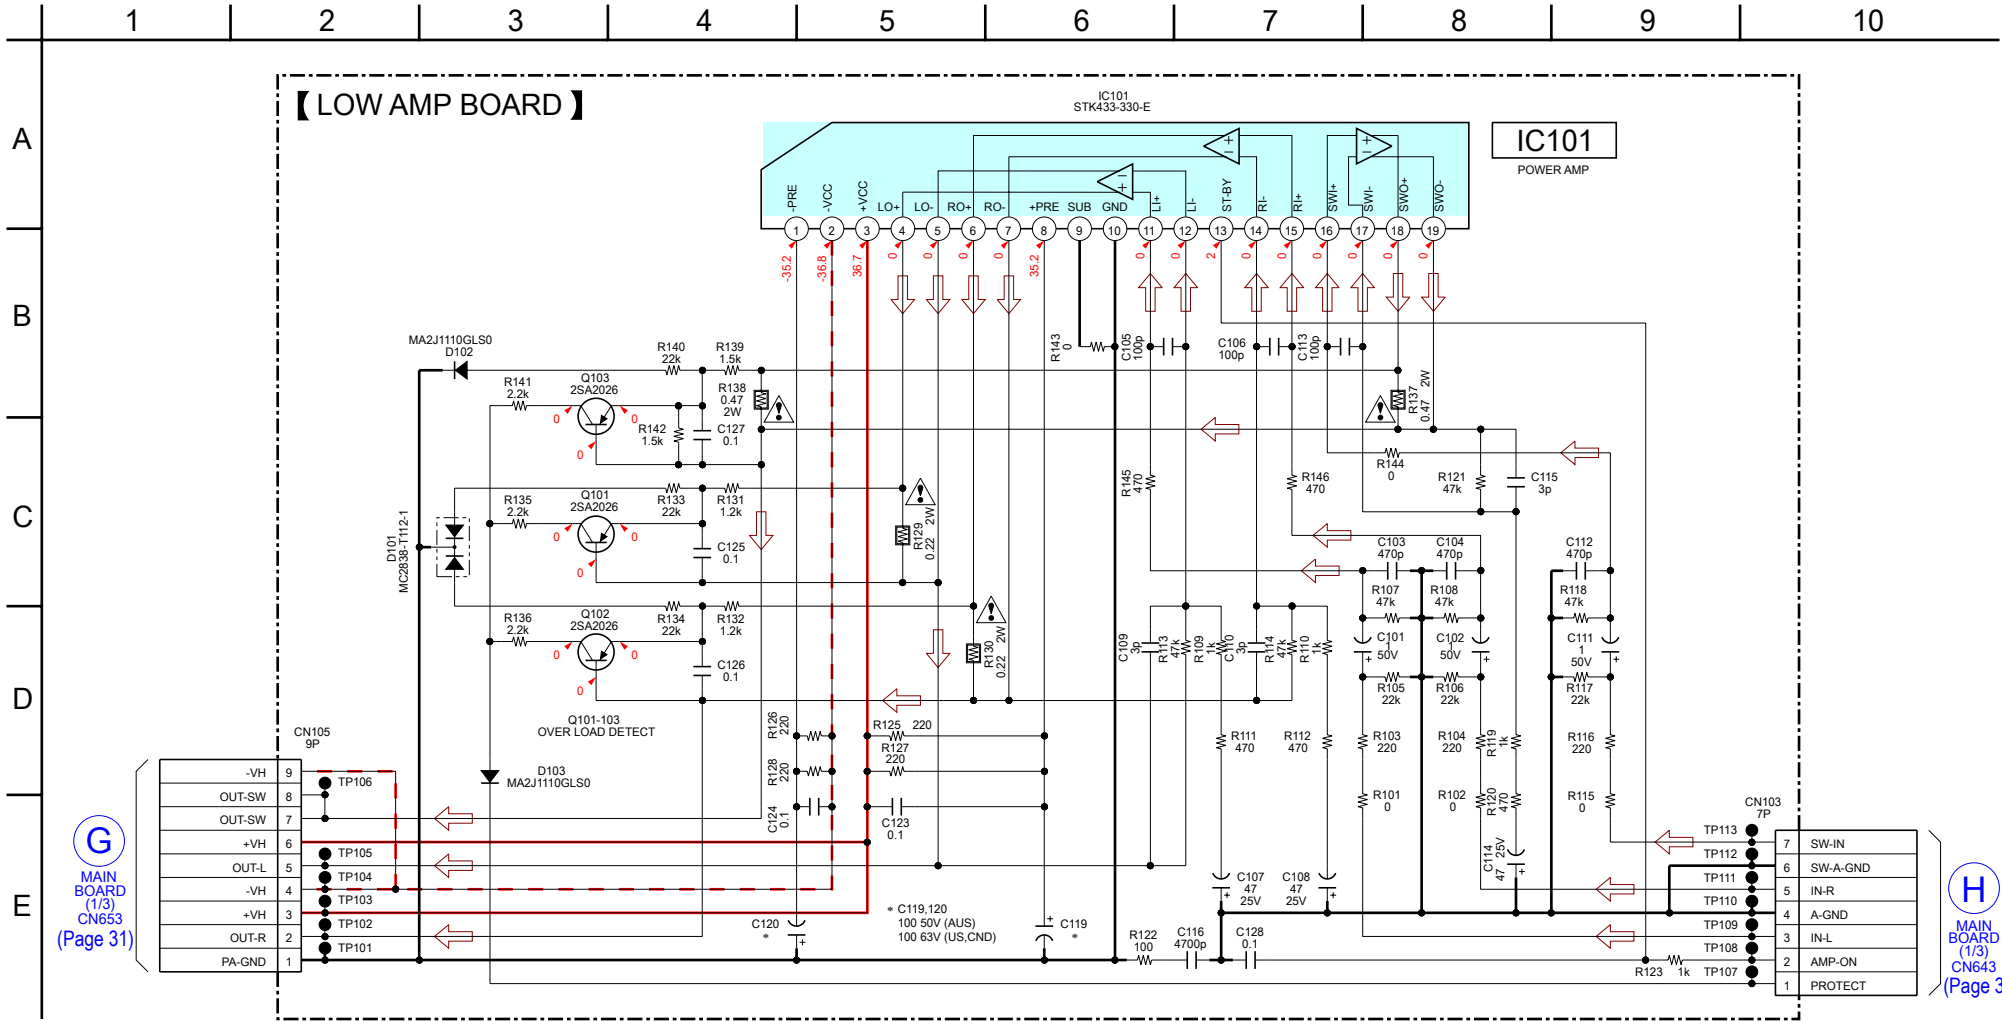

6-13. PRINTED WIRING BOARD - PANEL Board - • See page 27 for Circuit Boards Location. •  : Uses unleaded solder.

• Semiconductor Location	
Ref. No.	Location
D301	D-4
D302	D-2
D303	D-3
D304	C-4
D305	E-5
D306	E-2
D307	E-3
IC301	B-3
IC302	B-5
IC303	E-2
LED301	B-1
Q301	B-1
Q302	D-4
Q303	D-4
Q304	D-3
Q305	D-2
Q306	D-2
Q307	E-5
Q308	F-5
Q309	E-5
Q310	E-5
Q311	F-5
Q312	G-5
Q313	F-4
Q314	F-4
Q315	F-5
Q316	F-5
Q317	F-4
Q318	F-4

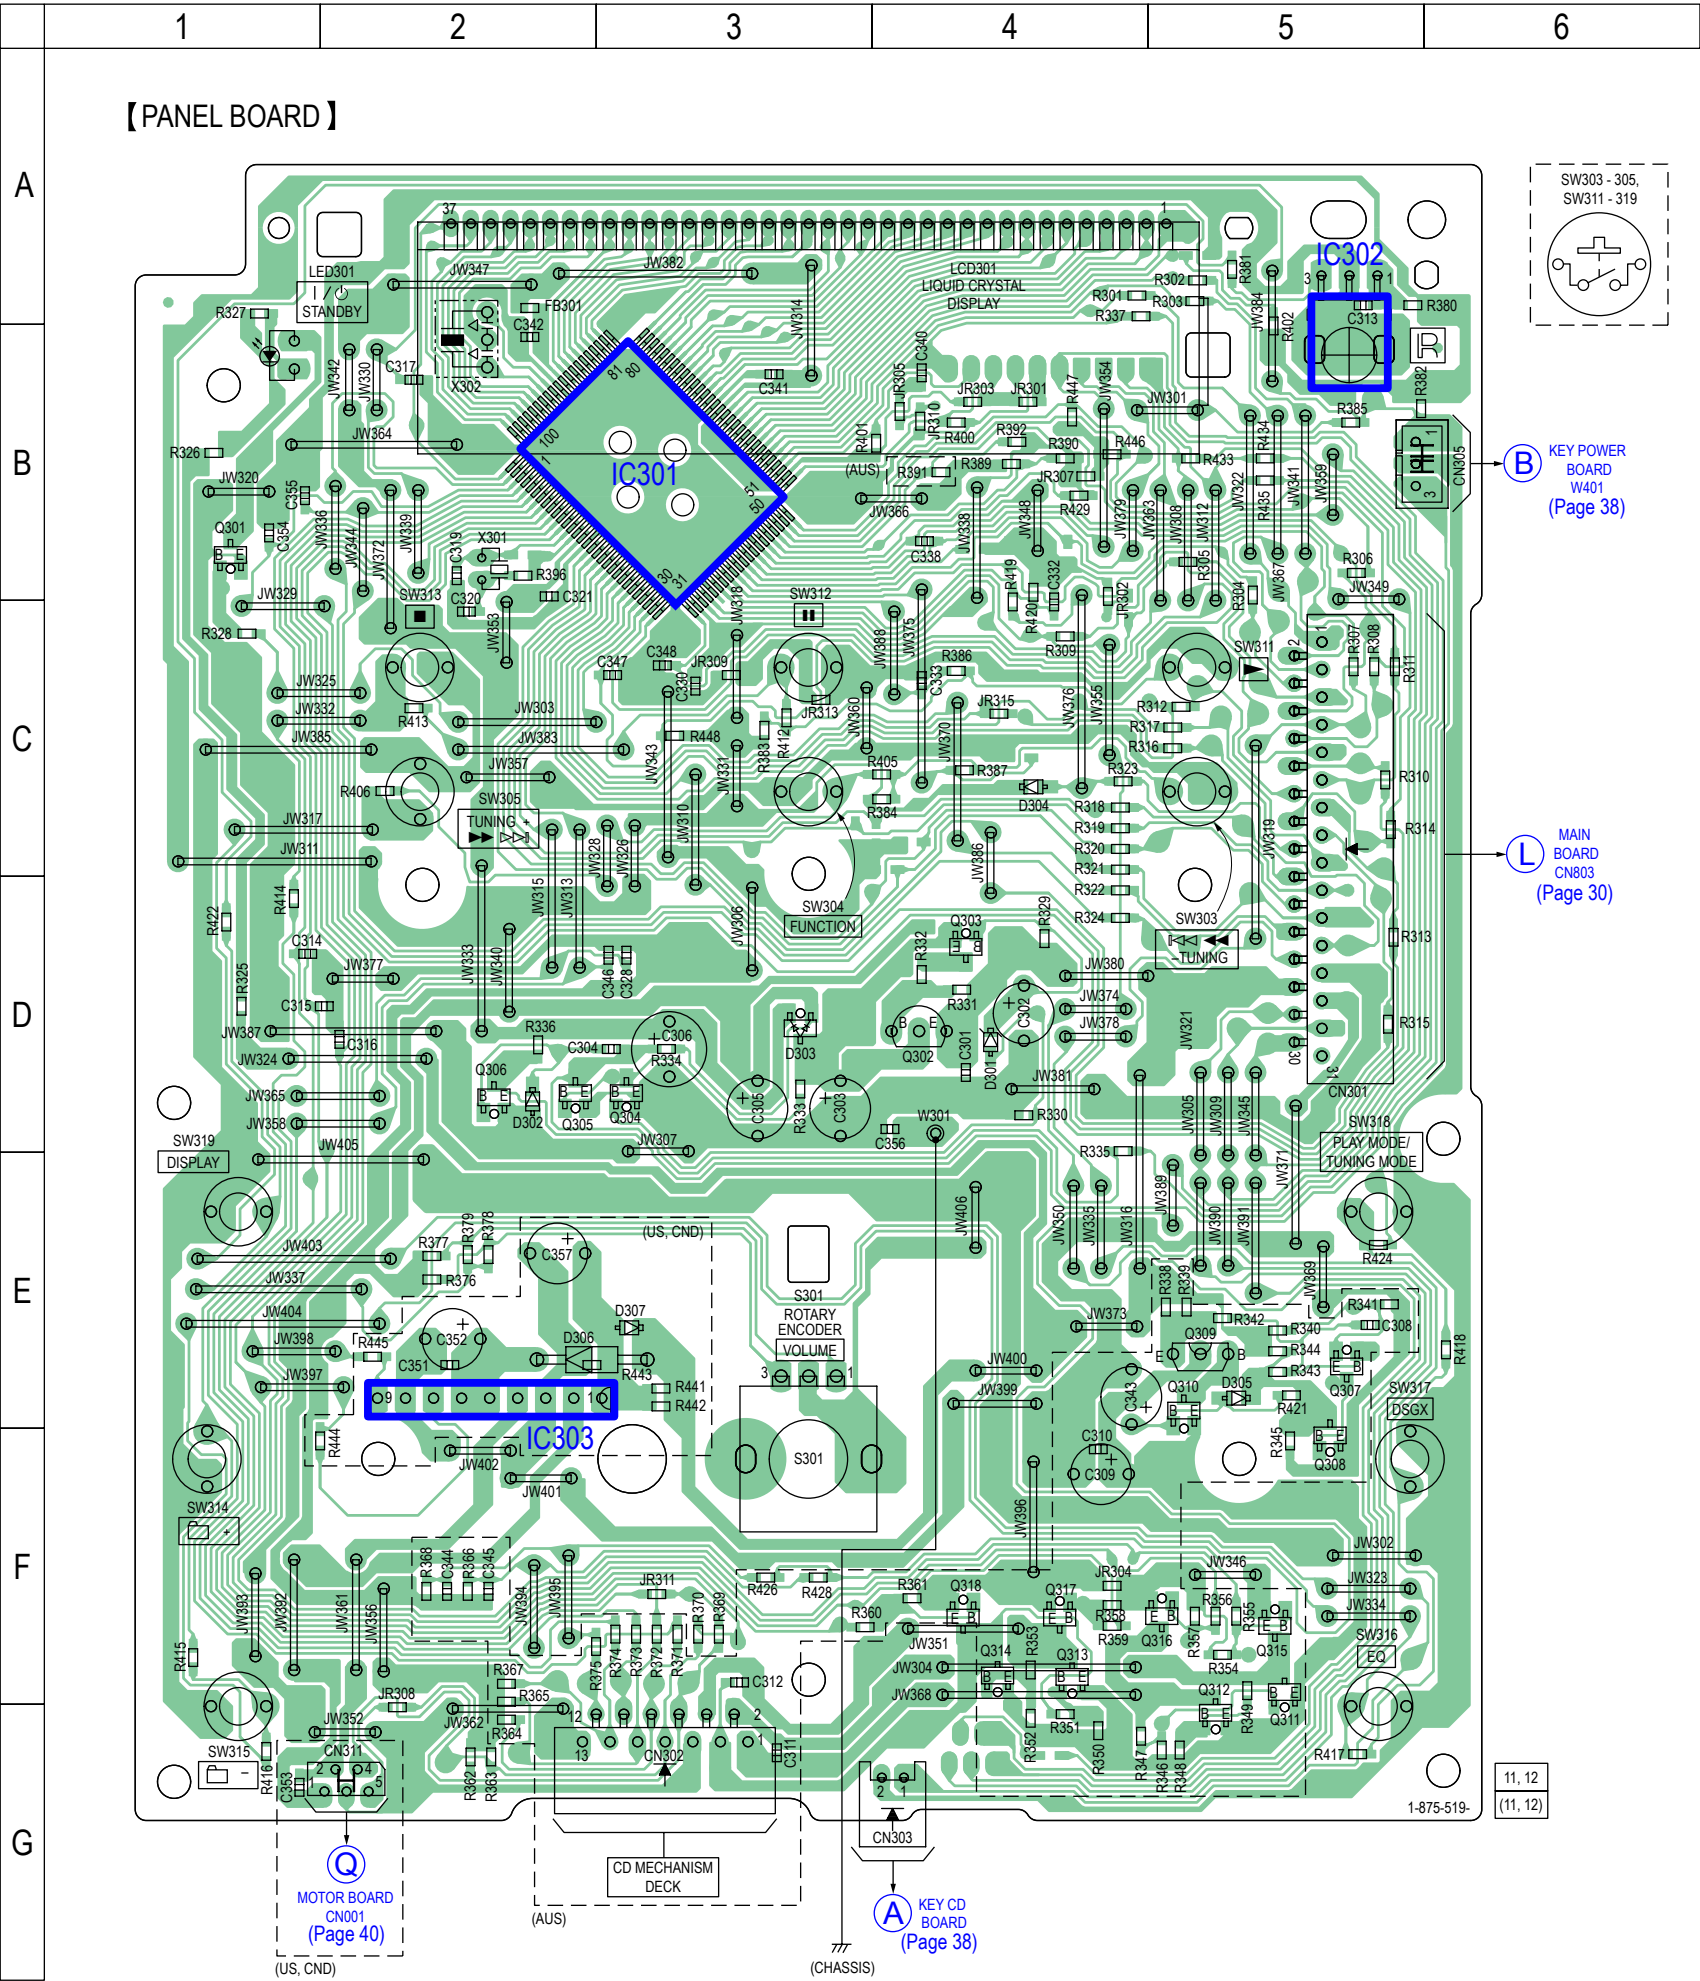



6-16. SCHEMATIC DIAGRAM - KEY Section -

123456

ABCDEFGHI

【KEY CD BOARD】

A
 PANEL BOARD
 CN303
 (Page 37)

【KEY POWER BOARD】

B
 PANEL BOARD
 CN305
 (Page 37)

【JACK BOARD】


C
 MAIN BOARD
 (2/3)
 CN605
 (Page 32)

【REG BOARD】


D
 MAIN BOARD
 (2/3)
 W609
 (Page 32)

6-17. PRINTED WIRING BOARD - PT Board -

• See page 27 for Circuit Boards Location. •  : Uses unleaded solder.

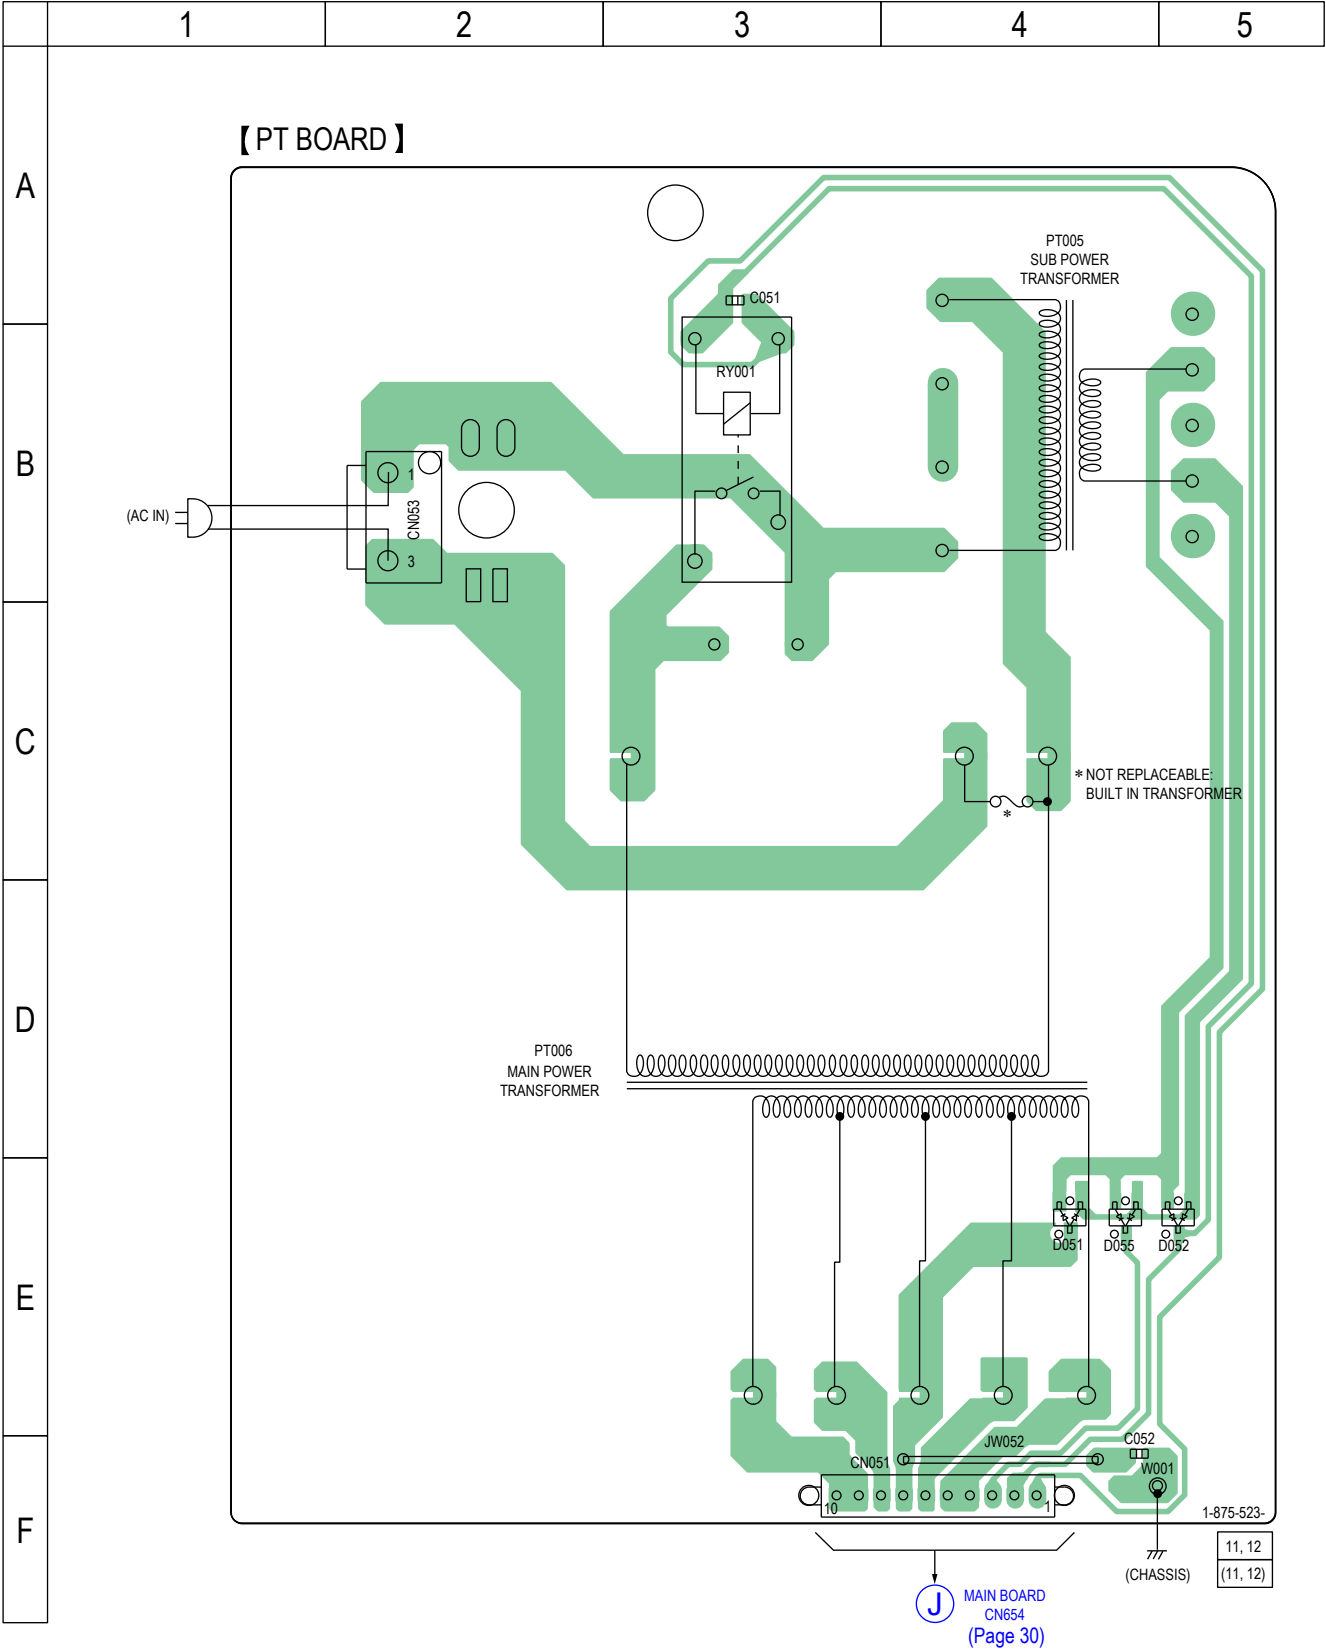


6-18. SCHEMATIC DIAGRAM - PT Board -

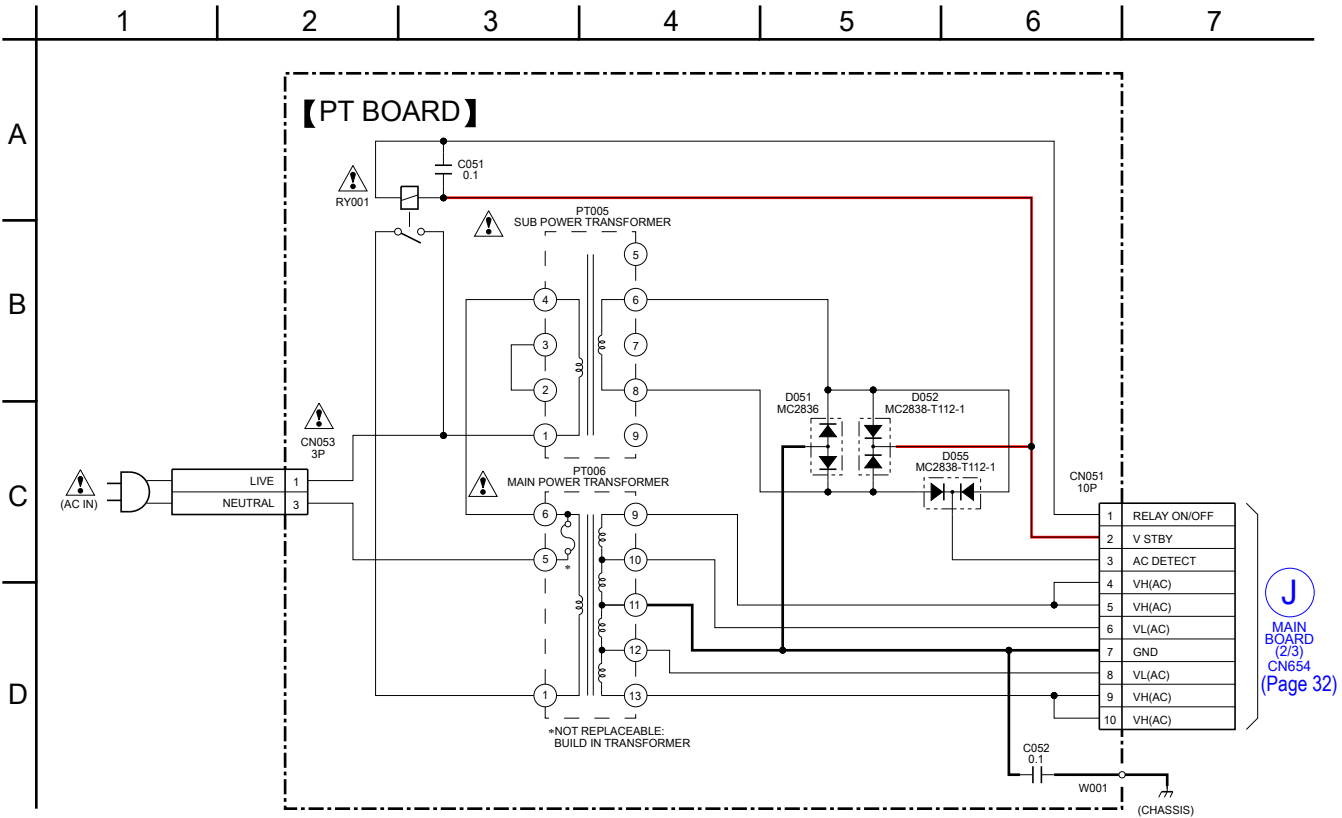


6-19. PRINTED WIRING BOARD - MOTOR Board (US, Canadian models) -


• See page 27 for Circuit Boards Location. •  : Uses unleaded solder.

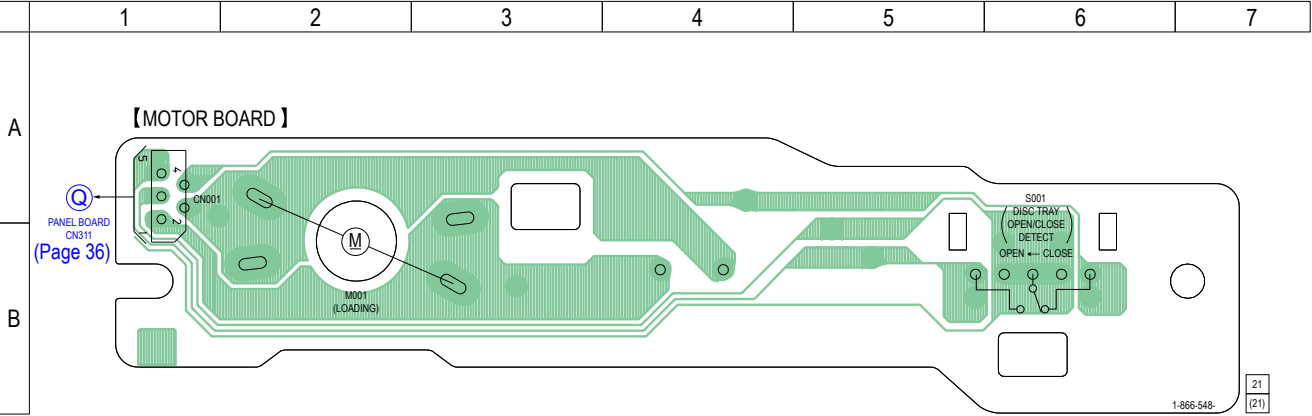


6-20. SCHEMATIC DIAGRAM - MOTOR Board (US and Canadian models) -

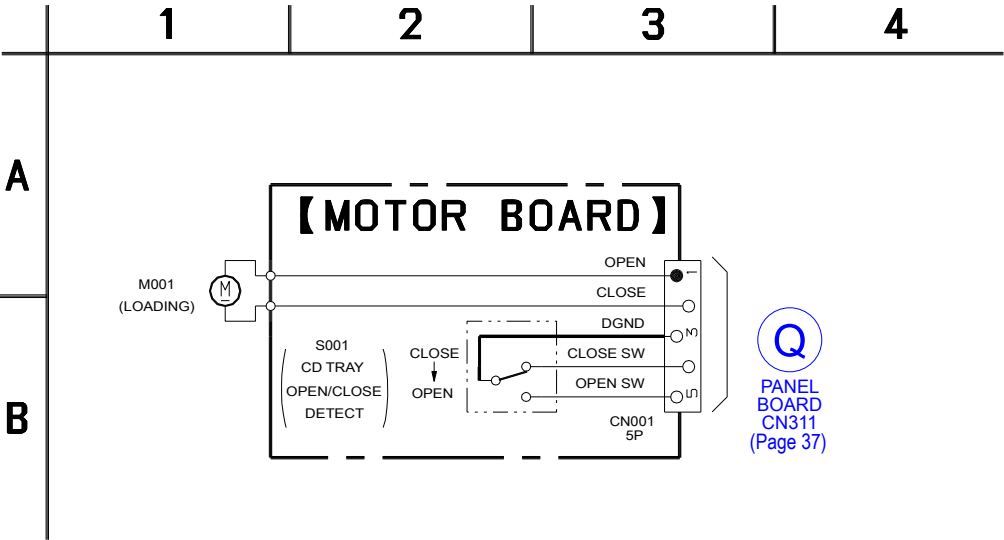


• Waveforms
- CD Board -

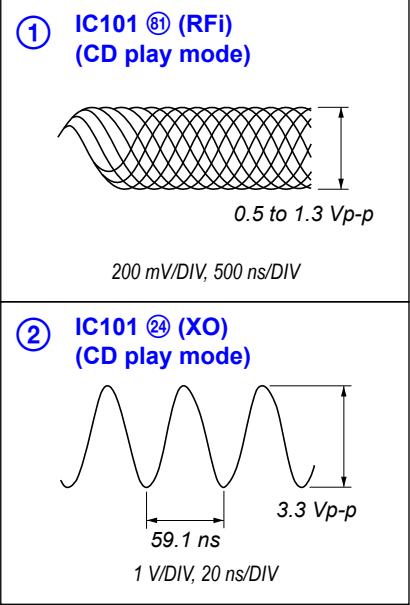

- MAIN Board -

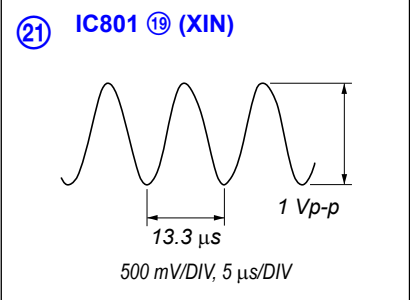


- PANEL Board -

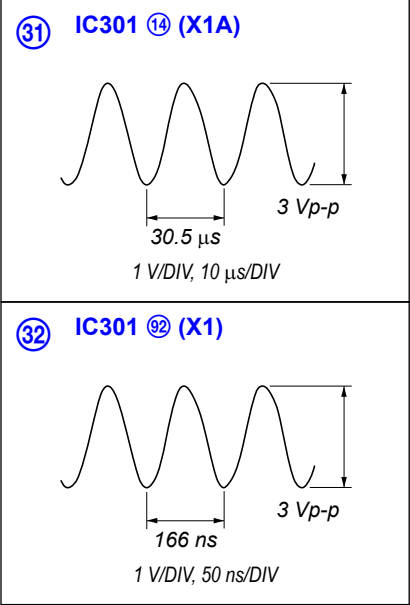


• IC Block Diagrams

- CD Board -

IC201 TK63115SCL-G@GT

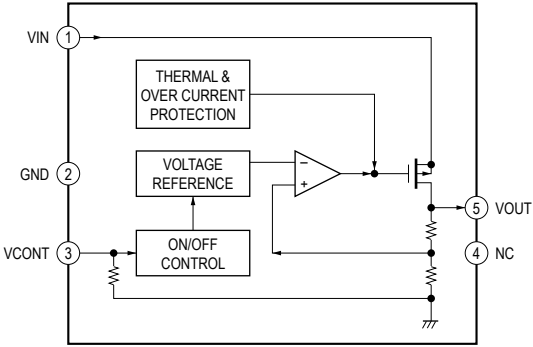


IC401 BA5826SFP-E2

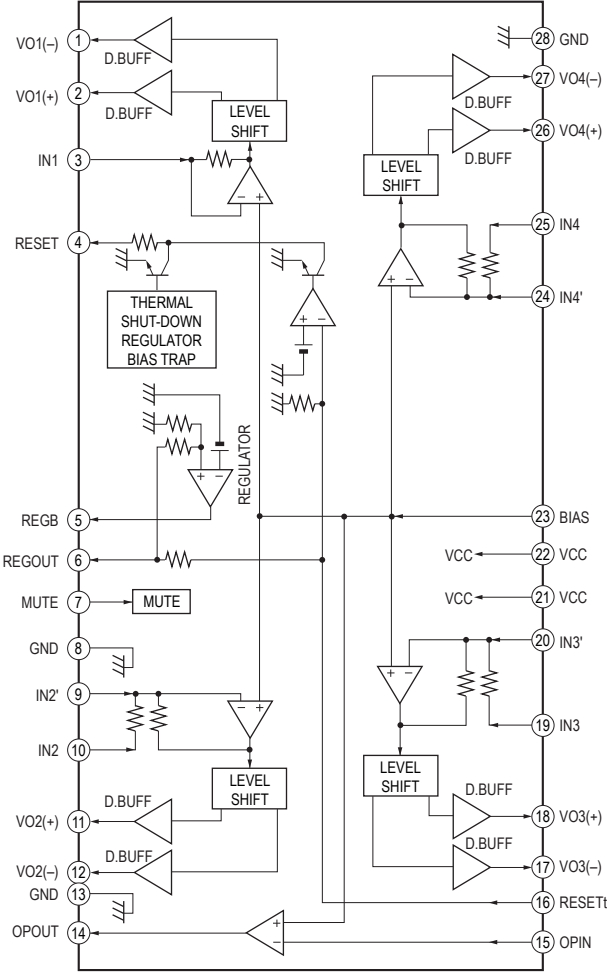


– MAIN Board –

IC602 BD3499FV-E2

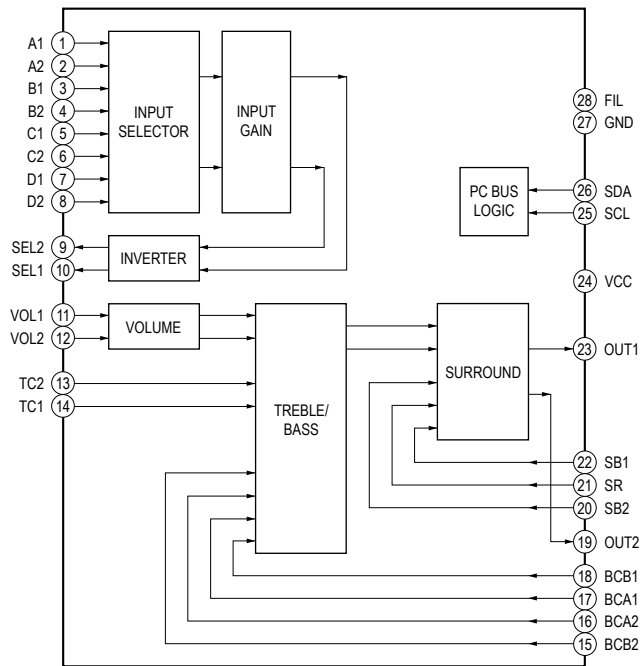


IC701 BD9701CP-V5

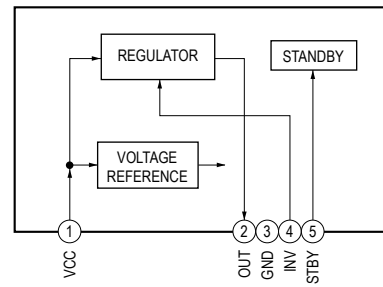


HCD-EC98P

IC801 LV23003VA

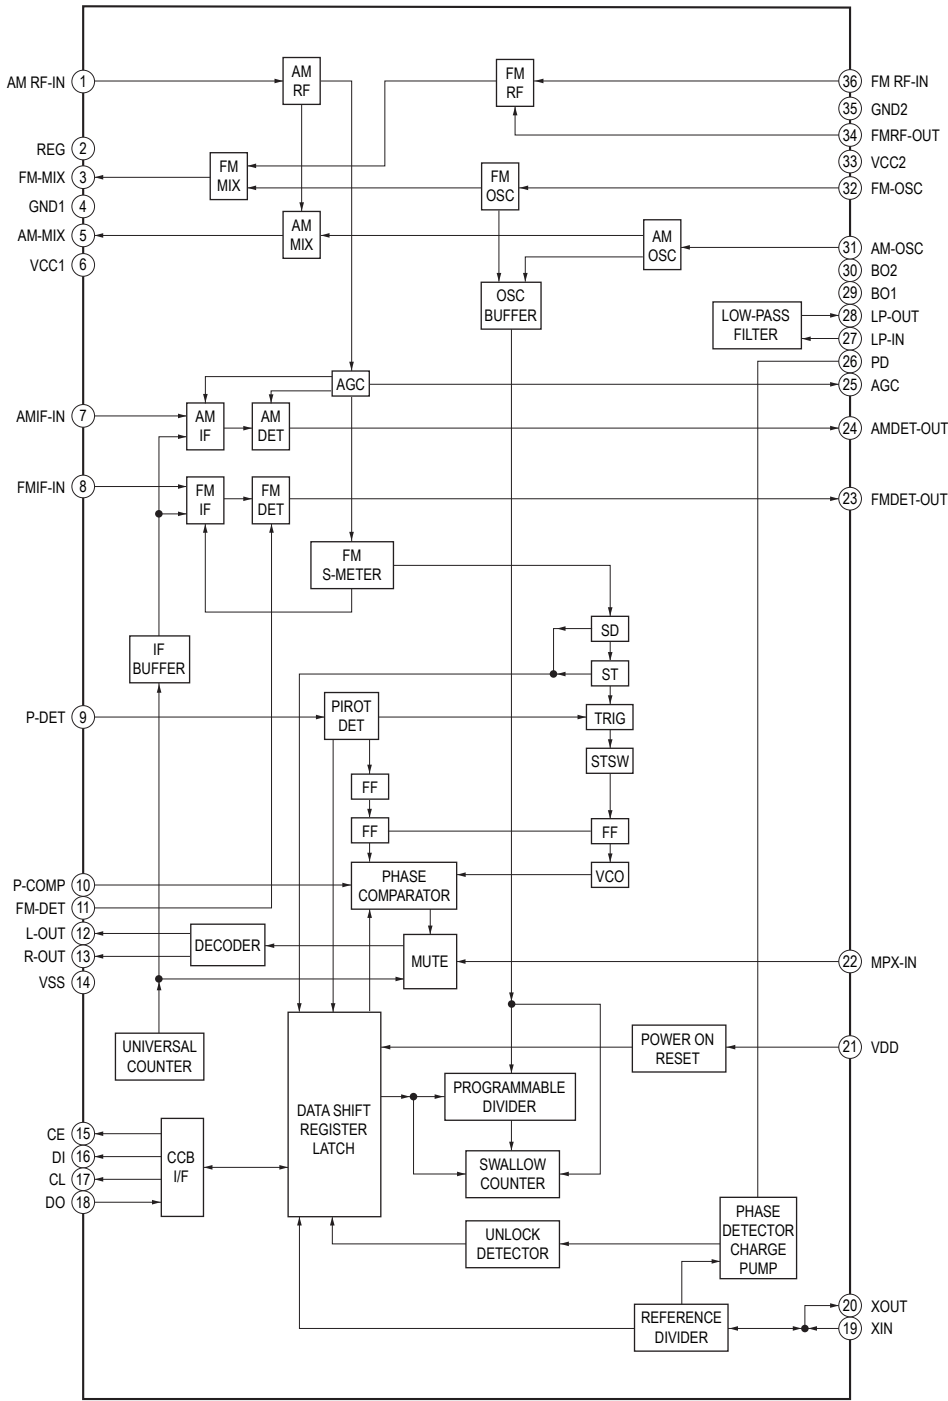

– PANEL Board –
IC303 BA6956AN

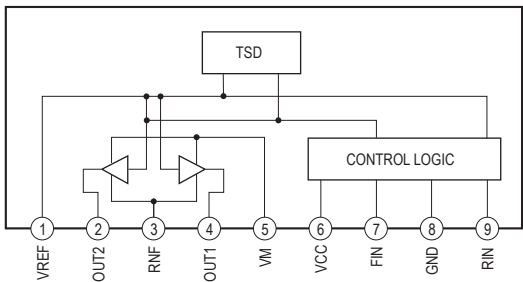

• IC Pin Function Description

CD BOARD IC101 TC94A70FG-006 (CD-MP3 PROCESSOR)

Pin No.	Pin Name	I/O	Description
1	AVSS3	-	Ground terminal
2	RFZi	I	RF ripple zero crossing signal input terminal
3	RFRP	O	RF ripple signal output terminal
4	SBAD/RFDC	O	Sub beam addition signal or RF peak detection signal output terminal Not used
5	FEi	O	Focus error signal output terminal Not used
6	TEi	O	Tracking error signal output terminal
7	TEZi	I	Tracking error zero crossing signal input terminal
8	AVDD3	-	Power supply terminal (+3.3 V)
9	FOo	O	Focus coil drive signal output terminal
10	TRo	O	Tracking coil drive signal output terminal
11	VREF	I	Reference voltage (+1.65V) input terminal
12	FMo	O	Sled motor drive signal output terminal
13	DMo	O	Spindle motor drive signal output terminal
14	VSSP3	-	Ground terminal
15	VCOi	I	VCO control voltage input terminal
16	VDDP3	-	Power supply terminal (+3.3 V)
17	VDD1	-	Power supply terminal (+1.5 V)
18	VSS	-	Ground terminal
19	FGiN	I	FG signal input terminal Not used
20	IO0 (/HSO)	I	Disc inner position detection signal input terminal
21	IO1 (/UHSO)	O	Not used
22	XVSS3	-	Ground terminal
23	XI	I	System clock input terminal (16.9344 MHz)
24	XO	O	System clock output terminal (16.9344 MHz)
25	XVDD3	-	Power supply terminal (+3.3 V)
26	DVSS3	-	Ground terminal
27	RO	O	Audio data (R-ch) output to the input selector
28	DVDD3	-	Power supply terminal (+3.3 V)
29	DVR	O	Reference voltage (+1.65V) output terminal
30	LO	O	Audio data (L-ch) output to the input selector
31	DVSS3	-	Ground terminal
32	VDDT3	-	Power supply terminal (+3.3 V)
33	VSS1	-	Ground terminal
34	VDD1	-	Power supply terminal (+1.5 V)
35	VDDM1	-	Power supply terminal (+1.5 V)
36	SRAMSTB	I	S-RAM standby mode control signal input terminal Fixed at "L" in this set
37	XRST	I	Reset signal input from the system controller "L": reset
38, 39	BUS0, BUS1	I	Serial data input from the system controller
40	BUS2 (SO)	I	Serial data input from the system controller
41	BUS3 (SI)	I	Serial data input from the system controller
42	BUCK (CLK)	I	Serial data transfer clock signal input from the system controller
43	XCCE	I	Chip enable signal input from the system controller
44	TEST	I	Setting terminal for test mode Normally fixed at "L"
45	IRQ	I	Interrupt request signal input terminal Not used
46	AoUT3 (PO4)	O	Request signal output terminal Not used
47	AoUT2 (PO5)	O	Audio data output terminal Not used
48	PIO0	O	Request signal output to the system controller
49, 50	PIO1, PIO2	O	Not used
51	PIO3	I	Gate signal input terminal Not used
52	VSS1	-	Ground terminal
53	VDDT3	-	Power supply terminal (+3.3 V)
54	SBSY	O	Subcode block sync signal output to the system controller
55	SBOK/FOK	O	Not used
56	IPF	O	Not used
57	SFSY/LOCK	O	Not used
58	ZDET	O	Zero detection signal output terminal Not used
59	GPIN	I	Not used
60	MS	I	Microcomputer interface mode selection signal input terminal Fixed at "H" in this set

Pin No.	Pin Name	I/O	Description
61	DOUT (PO6)	O	Digital audio data output terminal Not used
62	AOUT (PO7)	O	Audio data output terminal Not used
63	BCK (PO8)	O	Bit clock signal output terminal Not used
64	LRCK (PO9)	O	L/R sampling clock signal output terminal Not used
65	AIN (PI4)	I	Digital audio data input terminal Not used
66	BCKi (PI5)	I	Bit clock signal input terminal Not used
67	LRCKi (PI6)	I	L/R sampling clock signal input terminal Not used
68	VDD1	-	Power supply terminal (+1.5 V)
69	VSS	-	Ground terminal
70	AWRC	-	Not used
71	PVDD3	-	Power supply terminal (+3.3 V)
72	PDO	O	Phase error margin signal between EFM signal and PLCK signal output terminal
73	TMAXS	O	TMAX detection signal output terminal Not used
74	TMAX	O	TMAX detection signal output terminal
75	LPFN	I	Inverted signal input from the operation amplifier for PLL loop filter
76	LPFo	O	Signal output from the operation amplifier for PLL loop filter
77	PVREF	I	Reference voltage (+1.65V) input terminal
78	VCOF	O	VCO filter output terminal
79	PVSS3	-	Ground terminal
80	SLCo	O	EFM slice level output terminal
81	RFi	I	RF signal input terminal
82	RFRPi	I	RF ripple signal input terminal
83	RFEQo	O	EFM slice level output terminal
84	VRo	O	Reference voltage (+1.65V) output terminal
85	RESiN	O	External resistor connection terminal
86	VMDiR	O	Reference voltage (+1.65V) output terminal for automatic power control circuit
87	TESTR	O	Low-pass filter terminal for RFEQO offset correction
88	AGCi	I	RF signal amplitude adjustment amplification input terminal
89	RFo	O	RF signal generation amplification output terminal
90	RVDD3	-	Power supply terminal (+3.3 V)
91	LDo	O	Laser diode on/off control signal output to the automatic power control circuit "H": laser diode on
92	MDi	I	Light amount monitor input from the laser diode of optical pick-up block
93	RVSS3	-	Ground terminal
94	FNi2 (C)	I	Main beam (C) input from the optical pick-up block
95	FNi1 (A)	I	Main beam (A) input from the optical pick-up block
96	FPi2 (D)	I	Main beam (D) input from the optical pick-up block
97	FPi1 (B)	I	Main beam (B) input from the optical pick-up block
98	TPi (F)	I	Sub beam (F) input from the optical pick-up block
99	TNPC	O	External capacitor connection terminal
100	TNi (E)	I	Sub beam (E) input from the optical pick-up block

PANEL BOARD IC301 MB90F831PF-G-SPE1 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	SEG32	O	Segment drive signal output to the liquid crystal display
2	O-AMP-ON	O	Relay drive signal output terminal (for speaker)
3	O-POWER	O	Main power on/off control signal output terminal "H": on
4	O-CD-ON	O	CD power on/off control signal output terminal "H": on
5 to 7	I-3CD-SW3/O-CDM-CLOSE, I-3CD-SW2/NC, I-3CD-SW1/O-CDM-OPEN	I	Detection switch input terminal
8	O-3CD-M1+/O-CDM-M1+	O	Motor drive signal output terminal
9	I-RMC	I	Remote control signal input from the remote control receiver
10	O-3CD-M1-/O-CDM-M1-	O	Motor drive signal output terminal
11, 12	O-3CD-M2+/NC, O-3CD-M2-/NC	O	Motor drive signal output terminal
13	X0A	I	Sub system clock input terminal (32.768 kHz)
14	X1A	O	Sub system clock output terminal (32.768 kHz)
15	VCC	-	Power supply terminal (+3.1V)
16	VSS	-	Ground terminal
17 to 20	I/O-CD-BUS0 to I/O-CD-BUS3	O	Serial data output to the CD-MP3 processor
21	I-3CD-CHACK	I	Disc chucking detection switch input from the CD mechanism deck (Australian model)
22	I-3CD-STOCK	I	Disc stocking detection switch input from the CD mechanism deck (Australian model)
23	O-DR-MUTE	O	Muting signal output to the motor/coil driver
24	I-REQ	I	Request signal input from the CD-MP3 processor
25	O-CD-BUCK	O	Serial data transfer clock signal output to the CD-MP3 processor
26	O-CD-CCE	O	Chip enable signal output to the CD-MP3 processor
27	O-CD-RST	O	System reset signal output to the CD-MP3 processor "L": reset
28	O-LED-STBY	O	LED drive signal output terminal for STANDBY indicator
29	I-USB-TXD/I-DMP-TXD	I	Serial data input from the DMPORT connector
30	I-USB-DO/I-DMP-5V-DET	I	Power voltage detection signal input terminal
31	O-USB-RXD/O-DMP-RXD	O	Serial data output to the DMPORT connector
32	AVCC	-	Power supply terminal (+3.1V)
33	I-TU-DO	I	Serial data input from the AM/FM DET
34	O-USB-DI/5V-ON/O-TP-REC-MUTE	O	Power on/off control signal output terminal
35	AVSS	-	Ground terminal
36	I-P-MONI	I	Power monitor signal input terminal
37, 38	I-KEY1, I-KEY2	I	Front panel key input terminal (A/D input)
39	I-TU-ANSD	I	Power monitor signal input terminal
40	O-USB-SEL1_2/O-SW-ON/I-TP-STATE	O	Subwoofer on/off control signal output terminal
41	I-KEY-WAKE-UP/VOL	I	System wake up signal input terminal
42	I-HOLD	I	Hold signal input terminal
43	O-CD-SBSY	I	Subcode block sync signal input from the CD-MP3 processor
44	GND	-	Ground terminal
45	I-DMP-DET/O-USB-RST	I	DMPORT connector detection signal input terminal
46	I-MODEL	I	Model setting terminal
47	I-SUFFIX	I	Suffix setting terminal
48	I-1CD-CLOSE_OPEN/NC	I	CD table open/close detection signal input terminal (Australian model)
49	I/O-I2C-DATA	I/O	Two-way serial data bus with the electrical volume
50	I/O-I2C-CLK	O	Serial data transfer clock signal output to the electrical volume
51 to 53	MD2 to MD0	-	Not used
54	I-RST	I	Reset signal input from the voltage detect "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
55	O-TU-CE	O	Chip enable signal output to the FM/AM DET
56	O-TU-CLK	O	Serial data transfer clock signal output to the FM/AM DET

HCD-EC98P

Pin No.	Pin Name	I/O	Description
57	O-TU-DI	O	Serial data output to the FM/AM DET
58	VLCD	-	Terminal for doubler circuit capacitor connection to develop liquid crystal display drive voltage
59 to 62	COM0, COM1, CMO2, CMO3	O	Common drive signal output to the liquid crystal display
63, 64	SEG0, SEG1	O	Segment drive signal output to the liquid crystal display
65	VCC	-	Power supply terminal (+3.1V)
66	VSS	-	Ground terminal
67 to 89	SEG2 to SEG24	O	Segment drive signal output to the liquid crystal display
90	VCC	-	Power supply terminal (+3.1V)
91	VSS	-	Ground terminal
92	X1	I	Main system clock output terminal (6 MHz)
93	X0	O	Main system clock input terminal (6 MHz)
94 to 100	SEG25 to SEG31	O	Segment drive signal output to the liquid crystal display

SECTION 7 EXPLODED VIEWS

Note:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑
Parts of Color
↑
Cabinet's Color
- Abbreviation
 AUS : Australian model
 CND : Canadian model

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.


Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. PANEL SECTION

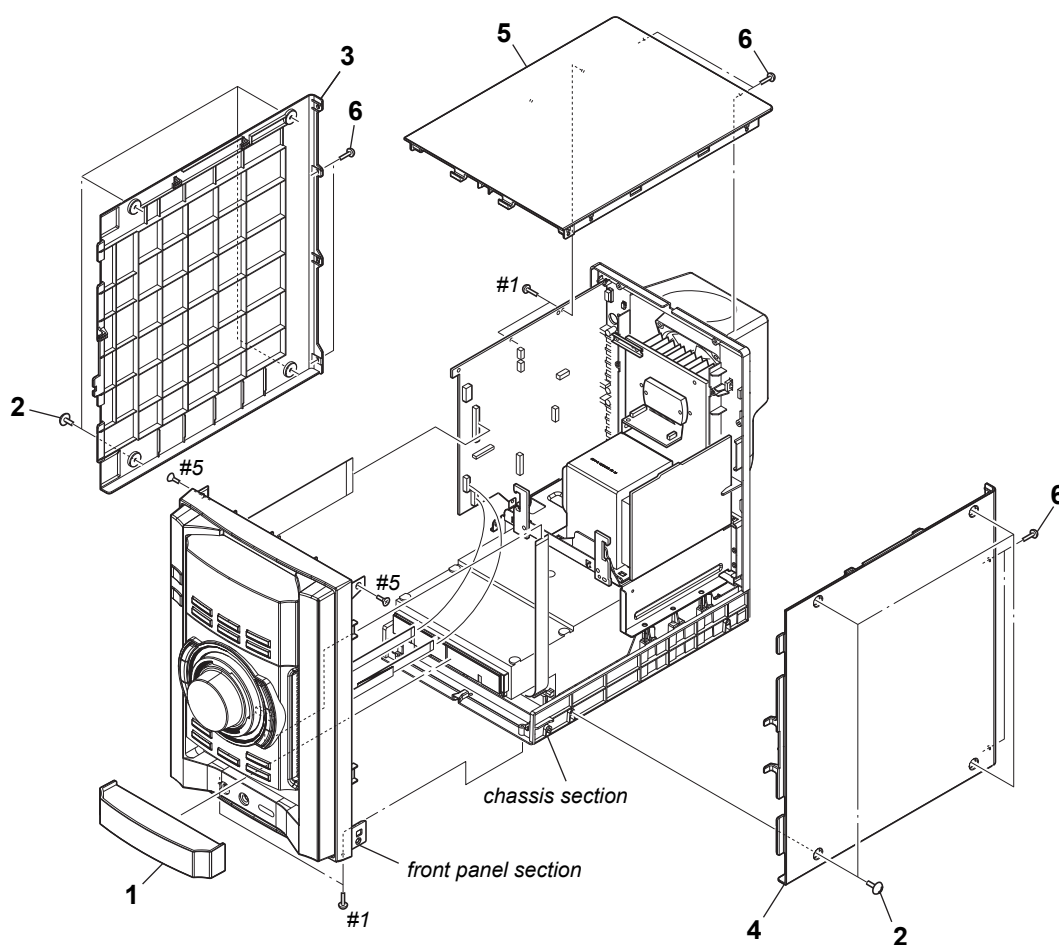


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-276-203-01	DOOR (CD) (AUS)		4	2-890-830-11	PANEL (R), SIDE (AUS)	
1	3-298-721-01	DOOR (1CD-G) (US, CND)		5	2-890-829-01	PANEL (TOP) (US, CND)	
2	3-363-099-32	SCREW (CASE 3 TP2)		5	2-890-829-11	PANEL (TOP) (AUS)	
3	2-890-831-01	PANEL (L), SIDE (US, CND)		6	3-254-143-11	SCREW (B3, (+) BV TAPPING	
3	2-890-831-11	PANEL (L), SIDE (AUS)					
4	2-890-830-01	PANEL (R), SIDE (US, CND)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
				#5	7-685-247-14	SCREW +KTP 3X10 TYPE2 NON-SLIT	

7-2. FRONT PANEL SECTION

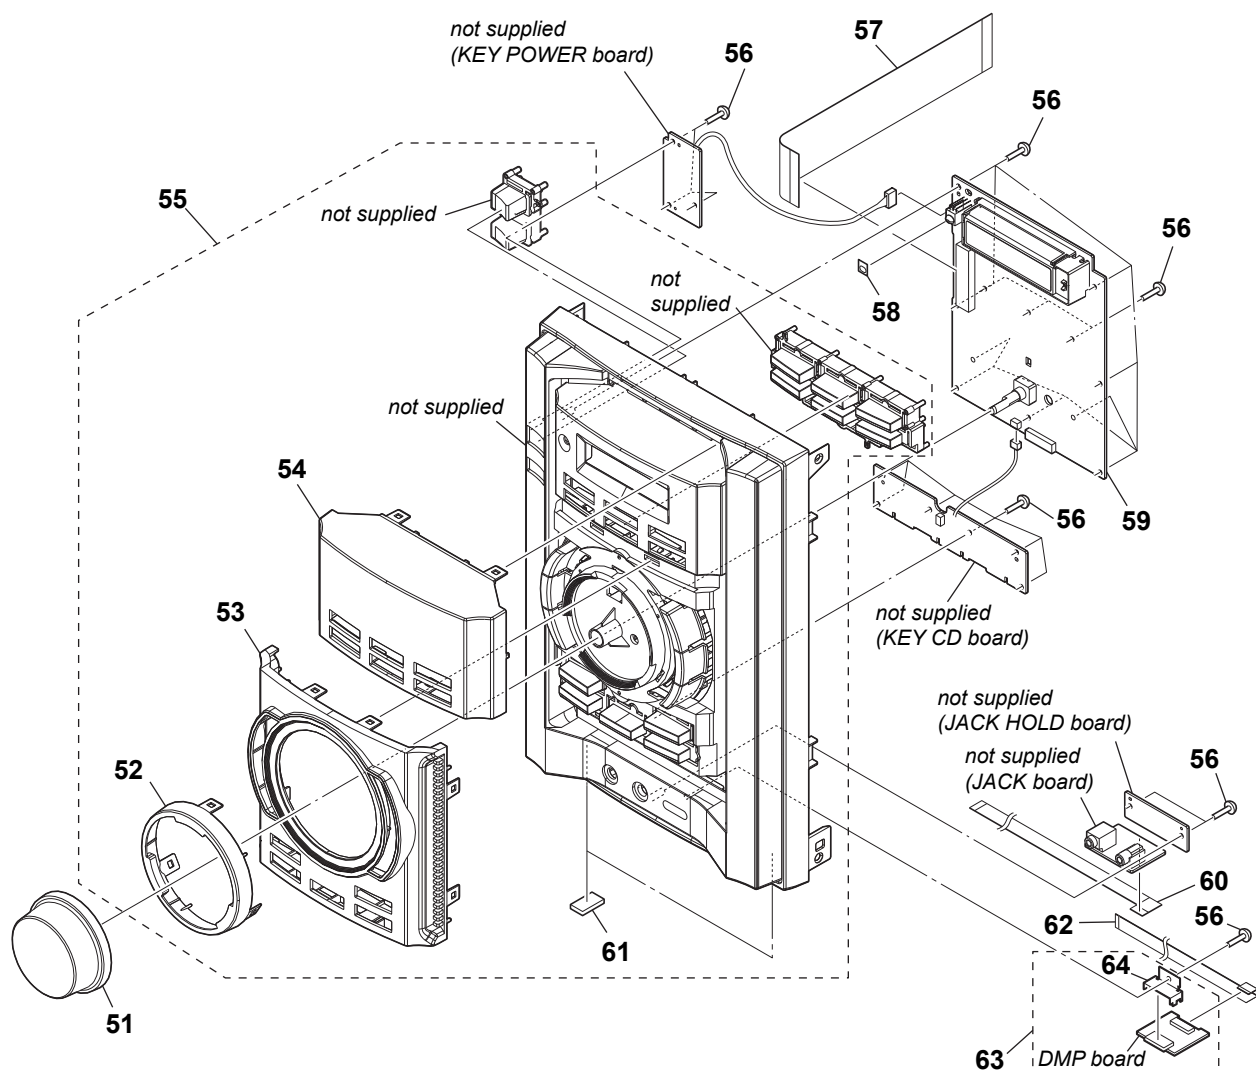

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-276-202-01	KNOB (VOL)		58	3-297-298-01	SHEET (RM)	
52	3-276-204-01	RING (VOL) (US, CND)		59	A-1379-636-A	PANEL BOARD, COMPLETE (US, CND)	
52	3-276-204-21	RING (VOL) (AUS)		59	A-1426-098-A	PANEL BOARD, COMPLETE (AUS)	
53	3-276-201-01	PLATE, ORNAMENTAL (AUS)		60	1-831-774-21	CABLE, FLEXIBLE FLAT (9 CORE)	
53	3-452-117-01	PLATE, ORNAMENTAL (1CD-G) (US, CND)		61	4-225-252-01	CUSHION (FOOT)	
54	3-276-198-01	WINDOW		62	1-835-336-21	CABLE, FLEXIBLE FLAT (11 CORE)	
55	A-1418-866-A	PANEL ASSY, FRONT (AUS)		63	A-1379-815-A	DMP BOARD, COMPLETE	
55	A-1418-867-A	PANEL ASSY, FRONT (US, CND)		64	3-276-209-01	BRACKET (DMPORT)	
56	3-087-053-01	+BVTP2.6 (3CR)					
57	1-835-338-21	CABLE, FLEXIBLE FLAT (31 CORE)					


7-4. MAIN SECTION

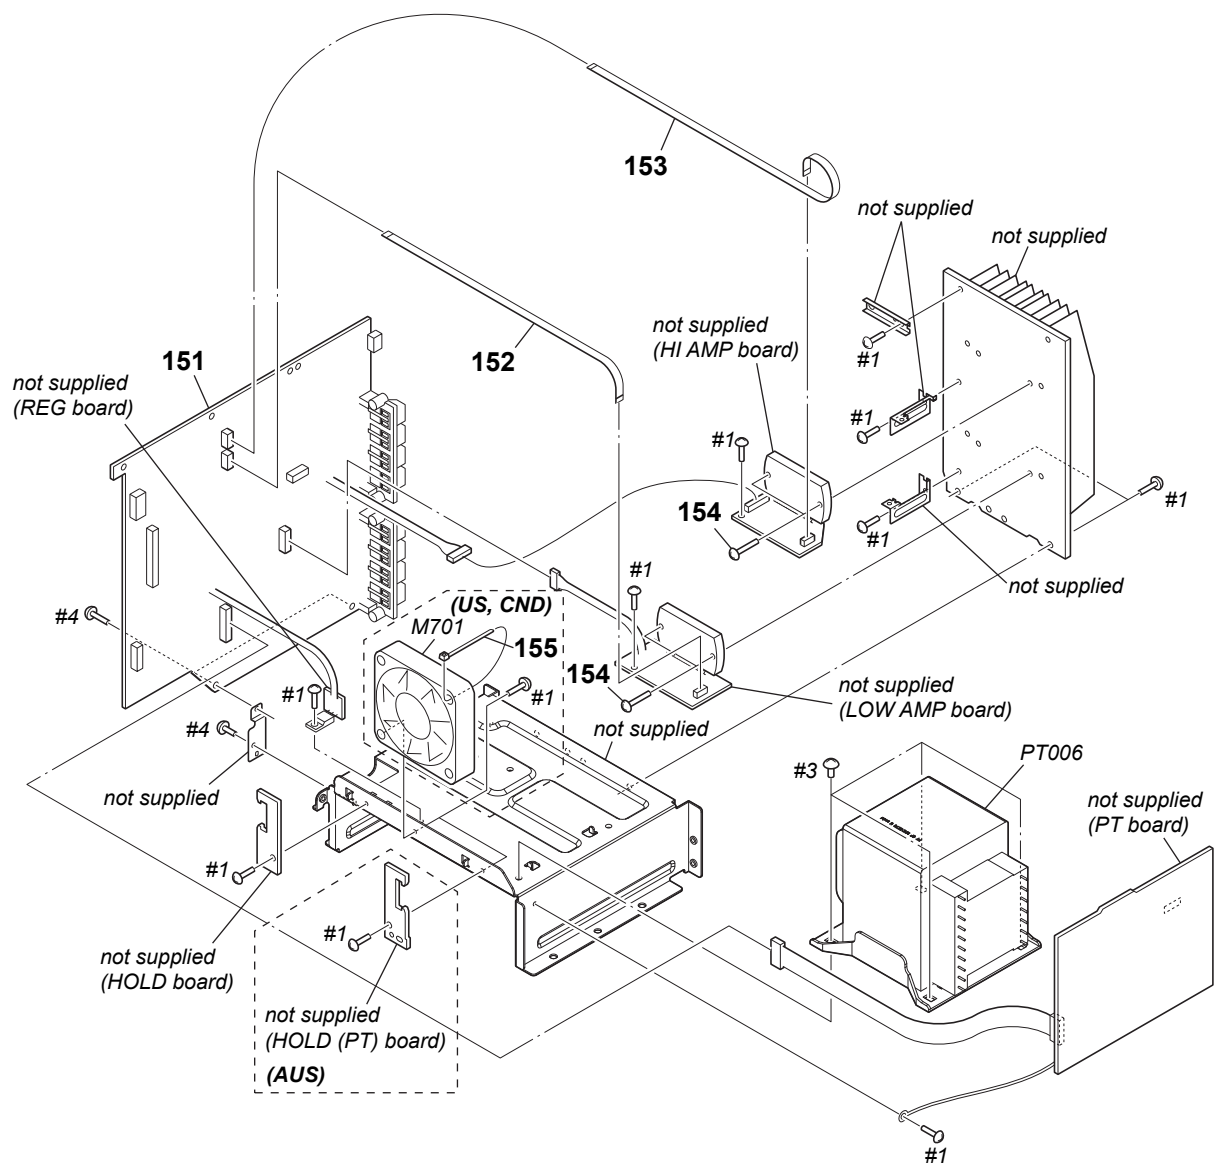

Ref. No.	Part No.	Description	Remark
151	A-1379-632-A	MAIN BOARD, COMPLETE (US, CND)	
151	A-1379-663-A	MAIN BOARD, COMPLETE (AUS)	
152	1-835-335-21	CABLE, FLEXIBLE FLAT (7 CORE)	
153	1-835-276-21	CABLE, FLEXIBLE FLAT (5 CORE)	
154	3-905-609-31	SCREW (TRANSISTOR)	
155	3-701-748-00	CLAMP (US, CND)	


Ref. No.	Part No.	Description	Remark
	M701	1-787-400-11	D.C. FAN (US, CND)
△ PT006		1-445-347-11	TRANSFORMER, POWER (US, CND)
△ PT006		1-445-349-11	TRANSFORMER, POWER (AUS)
#1		7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3
#3		7-685-880-09	SCREW +BVTT 4X6 (S)
#4		7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3

7-5. 3 CD MECHANISM SECTION (Australian model)
(CDM88A-K6BD90-WOD)

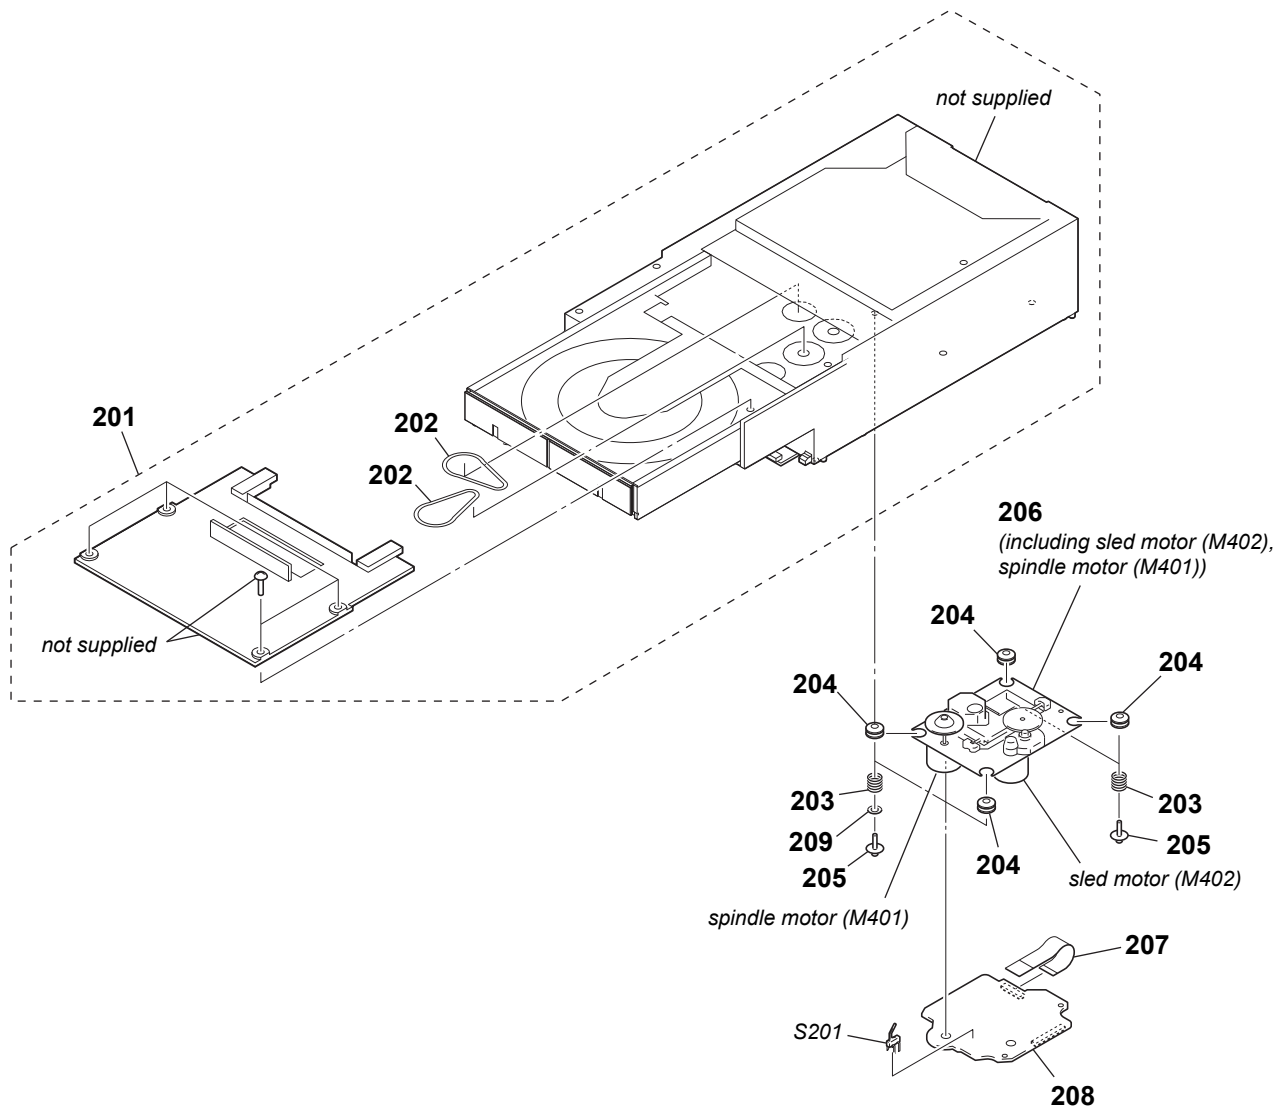

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	1-797-193-12	MECHANICAL, CD (DLM3A)		△ 206	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
202	2-632-062-11	BELT (DLM3A)		207	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
203	4-227-045-31	SPRING (INSULATOR), COIL		208	A-1217-914-A	CD BOARD, COMPLETE	
204	4-227-549-31	INSULATOR		209	2-584-656-01	WASHER, POLYETHYLENE	
205	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING		S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	

7-6. 1 CD MECHANISM SECTION (US and Canadian models)
(CDM77B-K6BD90-WOD)

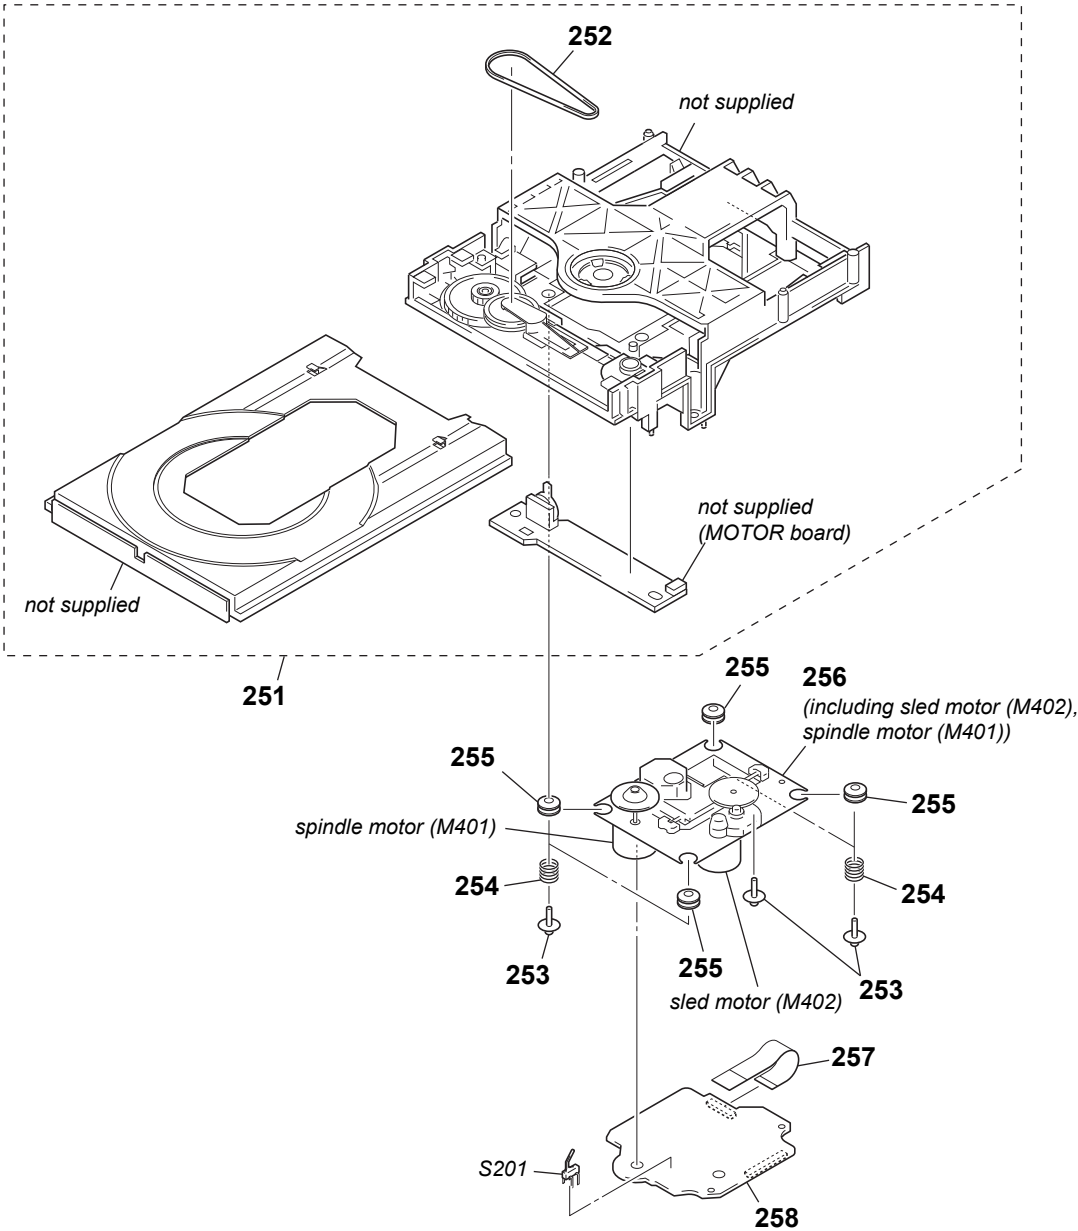

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-1242-967-A	LOADING (BK) ASSY		△ 256	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
252	3-080-478-01	BELT		257	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
253	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING		258	A-1217-914-A	CD BOARD, COMPLETE	
254	4-227-045-41	SPRING (INSULATOR)		S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	
255	4-229-005-41	INSULATOR					

SECTION 8 ELECTRICAL PARTS LIST

CD

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . , uPA. . . , μ PA. . . ,
uPB. . . : μ PB. . . , uPC. . . , μ PC. . . ,
uPD. . . : μ PD. . .
- Abbreviation
AUS : Australian model
CND : Canadian model

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
	A-1217-914-A	CD BOARD, COMPLETE *****				C148	1-162-923-11	CERAMIC CHIP 47PF	5%	50V	
		< CAPACITOR >				C149	1-162-919-11	CERAMIC CHIP 22PF	5%	50V	
						C150	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
						C151	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C100	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C152	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C101	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C153	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C102	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C201	1-128-995-21	ELECT CHIP 100uF	20%	10V	
C103	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C202	1-128-995-21	ELECT CHIP 100uF	20%	10V	
C104	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C204	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C105	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C205	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C106	1-128-995-21	ELECT CHIP 100uF	20%	10V		C206	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C107	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C207	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C108	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C301	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C109	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C302	1-137-710-91	CERAMIC CHIP 10uF	20%	6.3V	
C110	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C303	1-137-710-91	CERAMIC CHIP 10uF	20%	6.3V	
C112	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C306	1-128-995-21	ELECT CHIP 100uF	20%	10V	
C113	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C307	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C115	1-124-778-00	ELECT CHIP 22uF	20%	6.3V		C309	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
C116	1-164-360-11	CERAMIC CHIP 0.1uF		16V		C401	1-128-394-11	ELECT CHIP 220uF	20%	10V	
C117	1-164-227-11	CERAMIC CHIP 0.022uF	10%	25V		C403	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C118	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		C404	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C119	1-164-227-11	CERAMIC CHIP 0.022uF	10%	25V		C405	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C120	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V				< CONNECTOR >			
C122	1-164-315-11	CERAMIC CHIP 470PF	5%	50V		CN201	1-784-833-51	CONNECTOR, FFC (LIF (NON-ZIF)) 21P			
C123	1-164-315-11	CERAMIC CHIP 470PF	5%	50V		CN301	1-770-425-51	CONNECTOR, FFC/FPC 16P			
C124	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V				< IC >			
C125	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		IC101	6-709-624-01	IC TC94A70FG-006			
C126	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V		IC201	6-710-808-01	IC TK63115SCL-G@GT			
C127	1-162-966-11	CERAMIC CHIP 0.0022uF	10%	50V		IC401	6-710-637-01	IC BA5826SFP-E2			
C128	1-162-910-11	CERAMIC CHIP 5PF	0.25PF	50V				< TRANSISTOR >			
C130	1-162-910-11	CERAMIC CHIP 5PF	0.25PF	50V		Q301	6-551-120-01	TRANSISTOR 2SA2119K			
C132	1-164-360-11	CERAMIC CHIP 0.1uF		16V				< RESISTOR >			
C133	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V		R101	1-216-813-11	METAL CHIP 220	5%	1/10W	
C136	1-162-923-11	CERAMIC CHIP 47PF	5%	50V		R102	1-216-833-11	METAL CHIP 10K	5%	1/10W	
C137	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		R104	1-216-295-91	SHORT CHIP 0			
C138	1-164-315-11	CERAMIC CHIP 470PF	5%	50V		R105	1-216-857-11	METAL CHIP 1M	5%	1/10W	
C139	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		R106	1-216-821-11	METAL CHIP 1K	5%	1/10W	
C140	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		R108	1-216-864-11	SHORT CHIP 0			
C141	1-162-966-11	CERAMIC CHIP 0.0022uF	10%	50V		R110	1-216-833-11	METAL CHIP 10K	5%	1/10W	
C142	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V		R111	1-216-809-11	METAL CHIP 100	5%	1/10W	
C143	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		R112	1-216-809-11	METAL CHIP 100	5%	1/10W	
C144	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V							
C145	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V							
C146	1-164-315-11	CERAMIC CHIP 470PF	5%	50V							
C147	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V							

HCD-EC98P

CD

DMP

HI AMP

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R113	1-216-833-11	METAL CHIP	10K	5%	1/10W	< VIBRATOR >					
R114	1-216-833-11	METAL CHIP	10K	5%	1/10W	X102	1-795-101-21	VIBRATOR, CERAMIC (16.9344MHz)			
R118	1-216-845-11	METAL CHIP	100K	5%	1/10W	*****					
R120	1-216-864-11	SHORT CHIP	0								
R125	1-216-864-11	SHORT CHIP	0			A-1379-815-A	DMP BOARD, COMPLETE				
R126	1-216-864-11	SHORT CHIP	0			*****					
R127	1-216-864-11	SHORT CHIP	0			3-276-209-01	BRACKET (DMPORT)				
R128	1-216-853-11	METAL CHIP	470K	5%	1/10W	< CONNECTOR >					
R129	1-216-821-11	METAL CHIP	1K	5%	1/10W	CN901	1-817-615-21	CONNECTOR, SQUARE TYPE (RECE) (DMPORT)			
R130	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	CN902	1-784-863-51	CONNECTOR, FFC (LIF (NON-ZIF)) 11P			
R134	1-216-857-11	METAL CHIP	1M	5%	1/10W	< JUMPER RESISTOR >					
R135	1-216-853-11	METAL CHIP	470K	5%	1/10W	R904	1-216-864-11	SHORT CHIP	0		
R136	1-216-837-11	METAL CHIP	22K	5%	1/10W	R905	1-216-864-11	SHORT CHIP	0		
R139	1-216-841-11	METAL CHIP	47K	5%	1/10W	R906	1-216-864-11	SHORT CHIP	0		
R140	1-216-864-11	SHORT CHIP	0			R907	1-216-864-11	SHORT CHIP	0		
R142	1-216-837-11	METAL CHIP	22K	5%	1/10W	R908	1-216-864-11	SHORT CHIP	0		
R143	1-216-841-11	METAL CHIP	47K	5%	1/10W	*****					
R144	1-216-837-11	METAL CHIP	22K	5%	1/10W	HI AMP BOARD					
R145	1-216-864-11	SHORT CHIP	0			*****					
R146	1-216-864-11	SHORT CHIP	0			< CAPACITOR >					
R147	1-216-864-11	SHORT CHIP	0			C151	1-126-960-11	ELECT	1uF	20% 50V	
R148	1-216-864-11	SHORT CHIP	0			C152	1-126-960-11	ELECT	1uF	20% 50V	
R149	1-216-864-11	SHORT CHIP	0			C153	1-164-315-11	CERAMIC CHIP	470PF	5% 50V	
R150	1-216-864-11	SHORT CHIP	0			C154	1-164-315-11	CERAMIC CHIP	470PF	5% 50V	
R151	1-216-864-11	SHORT CHIP	0			C155	1-162-927-11	CERAMIC CHIP	100PF	5% 50V	
R153	1-216-857-11	METAL CHIP	1M	5%	1/10W	C156	1-162-927-11	CERAMIC CHIP	100PF	5% 50V	
R154	1-216-857-11	METAL CHIP	1M	5%	1/10W	C157	1-126-960-11	ELECT	1uF	20% 50V	
R155	1-216-805-11	METAL CHIP	47	5%	1/10W	C158	1-126-960-11	ELECT	1uF	20% 50V	
R156	1-216-809-11	METAL CHIP	100	5%	1/10W	C159	1-162-908-11	CERAMIC CHIP	3PF	0.25PF 50V	
R157	1-216-809-11	METAL CHIP	100	5%	1/10W	C160	1-162-908-11	CERAMIC CHIP	3PF	0.25PF 50V	
R201	1-216-295-91	SHORT CHIP	0			C161	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V	
R202	1-216-295-91	SHORT CHIP	0			C162	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V	
R203	1-216-809-11	METAL CHIP	100	5%	1/10W	C166	1-162-968-11	CERAMIC CHIP	0.0047uF	10% 50V	
R204	1-216-809-11	METAL CHIP	100	5%	1/10W	C169	1-126-968-11	ELECT	100uF	20% 50V (AUS)	
R205	1-216-809-11	METAL CHIP	100	5%	1/10W	C169	1-128-576-11	ELECT	100uF	20% 63V (US, CND)	
R206	1-216-809-11	METAL CHIP	100	5%	1/10W	C170	1-126-968-11	ELECT	100uF	20% 50V (AUS)	
R207	1-216-809-11	METAL CHIP	100	5%	1/10W	C170	1-128-576-11	ELECT	100uF	20% 63V (US, CND)	
R208	1-216-809-11	METAL CHIP	100	5%	1/10W	C173	1-165-621-91	CERAMIC CHIP	0.1uF	50V	
R209	1-216-809-11	METAL CHIP	100	5%	1/10W	C174	1-165-621-91	CERAMIC CHIP	0.1uF	50V	
R210	1-216-809-11	METAL CHIP	100	5%	1/10W	C175	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	
R211	1-216-809-11	METAL CHIP	100	5%	1/10W	C176	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	
R212	1-216-809-11	METAL CHIP	100	5%	1/10W	C178	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	
R218	1-216-845-11	METAL CHIP	100K	5%	1/10W	< CONNECTOR >					
R219	1-216-845-11	METAL CHIP	100K	5%	1/10W	CN151	1-819-134-11	PIN, CONNECTOR 6P			
R220	1-216-845-11	METAL CHIP	100K	5%	1/10W	CN152	1-784-766-11	CONNECTOR, FFC 5P			
R221	1-216-845-11	METAL CHIP	100K	5%	1/10W	< DIODE >					
R222	1-216-845-11	METAL CHIP	100K	5%	1/10W	D151	6-500-335-01	DIODE MC2838-T112-1			
R223	1-216-845-11	METAL CHIP	100K	5%	1/10W	D152	6-501-817-01	DIODE MA2J1110GLS0			
R301	1-216-845-11	METAL CHIP	100K	5%	1/10W	< IC >					
R302	1-216-864-11	SHORT CHIP	0			IC152	6-600-580-01	IC STK433-090-E			
R303	1-216-789-11	METAL CHIP	2.2	5%	1/10W						
R304	1-216-789-11	METAL CHIP	2.2	5%	1/10W						
R402	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R405	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R408	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R414	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R415	1-216-841-11	METAL CHIP	47K	5%	1/10W						

HI AMP

JACK

KEY CD

KEY POWER

LOW AMP

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark				
< JUMPER RESISTOR >						KEY CD BOARD *****								
JR151	1-216-864-11	SHORT CHIP	0				< RESISTOR >							
< TRANSISTOR >						R407	1-216-825-11	METAL CHIP	2.2K	5%	1/10W			
Q151	6-551-270-01	TRANSISTOR	2SA2026				R408	1-216-826-11	METAL CHIP	2.7K	5%	1/10W		
Q152	6-551-270-01	TRANSISTOR	2SA2026				R409	1-216-828-11	METAL CHIP	3.9K	5%	1/10W		
< RESISTOR >						R410	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	(AUS)		
R151	1-216-813-11	METAL CHIP	220	5%	1/10W		R411	1-216-835-11	METAL CHIP	15K	5%	1/10W	(AUS)	
R152	1-216-813-11	METAL CHIP	220	5%	1/10W		< SWITCH >							
R153	1-216-837-11	METAL CHIP	22K	5%	1/10W		SW306	1-771-410-21	SWITCH, TACTILE (CD) (US, CND)					
R154	1-216-837-11	METAL CHIP	22K	5%	1/10W		SW306	1-771-410-21	SWITCH, TACTILE (DISC 1) (AUS)					
R155	1-216-841-11	METAL CHIP	47K	5%	1/10W		SW307	1-771-410-21	SWITCH, TACTILE (DMPORT) (US, CND)					
R156	1-216-841-11	METAL CHIP	47K	5%	1/10W		SW307	1-771-410-21	SWITCH, TACTILE (DISC 2) (AUS)					
R159	1-216-821-11	METAL CHIP	1K	5%	1/10W		SW308	1-771-410-21	SWITCH, TACTILE (▲) (US, CND)					
R160	1-216-821-11	METAL CHIP	1K	5%	1/10W									
R161	1-216-817-11	METAL CHIP	470	5%	1/10W		SW308	1-771-410-21	SWITCH, TACTILE (DISC 3) (AUS)					
R162	1-216-817-11	METAL CHIP	470	5%	1/10W		SW309	1-771-410-21	SWITCH, TACTILE (▲) (AUS)					
R163	1-216-841-11	METAL CHIP	47K	5%	1/10W		SW310	1-771-410-21	SWITCH, TACTILE (DISC SKIP/EX-CHANGE) (AUS)					
R164	1-216-841-11	METAL CHIP	47K	5%	1/10W		*****							
R171	1-216-864-11	SHORT CHIP	0				KEY POWER BOARD *****							
R172	1-216-809-11	METAL CHIP	100	5%	1/10W		< SWITCH >							
R173	1-216-821-11	METAL CHIP	1K	5%	1/10W		SW301	1-771-410-21	SWITCH, TACTILE (I/II), STANDBY)					
△ R175	1-216-813-11	METAL CHIP	220	5%	1/10W		SW302	1-771-410-21	SWITCH, TACTILE (SUBWOOFER ON/OFF)					
R176	1-216-813-11	METAL CHIP	220	5%	1/10W		< CABLE HOLDER >							
R177	1-216-813-11	METAL CHIP	220	5%	1/10W		W401	1-824-027-21	HOLDER, CABLE 3P					
R178	1-216-813-11	METAL CHIP	220	5%	1/10W		*****							
△ R179	1-216-361-31	METAL OXIDE	0.22	5%	2W	F	LOW AMP BOARD *****							
△ R180	1-216-361-31	METAL OXIDE	0.22	5%	2W	F	< CAPACITOR >							
R181	1-216-822-11	METAL CHIP	1.2K	5%	1/10W		C101	1-126-960-11	ELECT	1uF	20%	50V		
R182	1-216-822-11	METAL CHIP	1.2K	5%	1/10W		C102	1-126-960-11	ELECT	1uF	20%	50V		
R183	1-216-837-11	METAL CHIP	22K	5%	1/10W		C103	1-164-315-11	CERAMIC CHIP	470PF	5%	50V		
R184	1-216-837-11	METAL CHIP	22K	5%	1/10W		C104	1-164-315-11	CERAMIC CHIP	470PF	5%	50V		
R185	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C105	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		
R186	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C106	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		
R195	1-216-817-11	METAL CHIP	470	5%	1/10W		C107	1-126-947-11	ELECT	47uF	20%	35V		
R196	1-216-817-11	METAL CHIP	470	5%	1/10W		C108	1-126-947-11	ELECT	47uF	20%	35V		
*****						C109	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V			
JACK BOARD *****						C110	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V			
< CAPACITOR >						C111	1-126-960-11	ELECT	1uF	20%	50V			
C491	1-164-156-11	CERAMIC CHIP	0.1uF		25V		C112	1-164-315-11	CERAMIC CHIP	470PF	5%	50V		
C495	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C113	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		
C496	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C114	1-126-947-11	ELECT	47uF	20%	35V		
< JACK >						C115	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V			
J491	1-566-822-51	JACK (AUDIO IN)					C116	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V		
J492	1-815-629-21	JACK (PHONES)					C119	1-126-968-11	ELECT	100uF	20%	50V (AUS)		
< RESISTOR >						C119	1-128-576-11	ELECT	100uF	20%	63V	(US, CND)		
R491	1-216-837-11	METAL CHIP	22K	5%	1/10W									
R492	1-216-837-11	METAL CHIP	22K	5%	1/10W		C120	1-126-968-11	ELECT	100uF	20%	50V (AUS)		
*****						C120	1-128-576-11	ELECT	100uF	20%	63V	(US, CND)		
						C123	1-165-621-91	CERAMIC CHIP	0.1uF		50V			

HCD-EC98P

LOW AMP

MAIN

Ref. No.	Part No.	Description	Remark			
C124	1-165-621-91	CERAMIC CHIP 0.1uF	50V			
C125	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C126	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C127	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C128	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
		< CONNECTOR >				
CN103	1-568-826-11	CONNECTOR, FFC 5P				
CN105	1-820-827-11	HOLDER, CABLE 9P				
		< DIODE >				
D101	6-500-335-01	DIODE MC2838-T112-1				
D102	6-501-817-01	DIODE MA2J1110GLS0				
D103	6-501-817-01	DIODE MA2J1110GLS0				
		< IC >				
IC101	6-712-141-01	IC STK433-330-E				
		< JUMPER RESISTOR >				
JR101	1-216-864-11	SHORT CHIP 0				
JR102	1-216-864-11	SHORT CHIP 0				
		< TRANSISTOR >				
Q101	6-551-270-01	TRANSISTOR 2SA2026				
Q102	6-551-270-01	TRANSISTOR 2SA2026				
Q103	6-551-270-01	TRANSISTOR 2SA2026				
		< RESISTOR >				
R101	1-216-864-11	SHORT CHIP 0				
R102	1-216-864-11	SHORT CHIP 0				
R103	1-216-813-11	METAL CHIP 220	5%	1/10W		
R104	1-216-813-11	METAL CHIP 220	5%	1/10W		
R105	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R106	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R107	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R108	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R109	1-216-821-11	METAL CHIP 1K	5%	1/10W		
R110	1-216-821-11	METAL CHIP 1K	5%	1/10W		
R111	1-216-817-11	METAL CHIP 470	5%	1/10W		
R112	1-216-817-11	METAL CHIP 470	5%	1/10W		
R113	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R114	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R115	1-216-864-11	SHORT CHIP 0				
R116	1-216-813-11	METAL CHIP 220	5%	1/10W		
R117	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R118	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R119	1-216-821-11	METAL CHIP 1K	5%	1/10W		
R120	1-216-817-11	METAL CHIP 470	5%	1/10W		
R121	1-216-841-11	METAL CHIP 47K	5%	1/10W		
R122	1-216-809-11	METAL CHIP 100	5%	1/10W		
R123	1-216-821-11	METAL CHIP 1K	5%	1/10W		
R125	1-216-813-11	METAL CHIP 220	5%	1/10W		
R126	1-216-813-11	METAL CHIP 220	5%	1/10W		
R127	1-216-813-11	METAL CHIP 220	5%	1/10W		
R128	1-216-813-11	METAL CHIP 220	5%	1/10W		
△ R129	1-216-361-31	METAL OXIDE 0.22	5%	2W	F	
△ R130	1-216-361-31	METAL OXIDE 0.22	5%	2W	F	
R131	1-216-822-11	METAL CHIP 1.2K	5%	1/10W		
R132	1-216-822-11	METAL CHIP 1.2K	5%	1/10W		

Ref. No.	Part No.	Description	Remark			
R133	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R134	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R135	1-216-825-11	METAL CHIP 2.2K	5%	1/10W		
R136	1-216-825-11	METAL CHIP 2.2K	5%	1/10W		
△ R137	1-216-365-61	METAL OXIDE 0.47	5%	2W	F	
△ R138	1-216-365-61	METAL OXIDE 0.47	5%	2W	F	
R139	1-216-823-11	METAL CHIP 1.5K	5%	1/10W		
R140	1-216-837-11	METAL CHIP 22K	5%	1/10W		
R141	1-216-825-11	METAL CHIP 2.2K	5%	1/10W		
R142	1-216-823-11	METAL CHIP 1.5K	5%	1/10W		
R143	1-216-864-11	SHORT CHIP 0				
R144	1-216-864-11	SHORT CHIP 0				
R145	1-216-817-11	METAL CHIP 470	5%	1/10W		
R146	1-216-817-11	METAL CHIP 470	5%	1/10W		

	A-1379-632-A	MAIN BOARD, COMPLETE (US, CND)				
	A-1379-663-A	MAIN BOARD, COMPLETE (AUS)				

	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S				
		< CAPACITOR >				
C601	1-126-947-11	ELECT 47uF	20%	35V		
C602	1-104-662-91	ELECT 22uF	20%	25V		
C603	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		
C604	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C605	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C606	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		
C607	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C608	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C609	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		
C610	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		
C611	1-127-715-11	CERAMIC CHIP 0.22uF	10%	16V		
C612	1-127-715-11	CERAMIC CHIP 0.22uF	10%	16V		
C613	1-126-964-11	ELECT 10uF	20%	50V		
C614	1-126-963-11	ELECT 4.7uF	20%	50V		
C615	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C616	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C617	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C618	1-100-566-91	CERAMIC CHIP 0.1uF	10%	25V		
C619	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V		
C620	1-104-658-91	ELECT 100uF	20%	10V		
C621	1-137-749-11	MYLAR 0.1uF		100V		
C622	1-114-471-51	ELECT 3300uF	20%	63V		
				(US, CND)		
C622	1-126-974-11	ELECT 3300uF	20%	50V (AUS)		
C623	1-137-749-11	MYLAR 0.1uF		100V		
C626	1-114-471-51	ELECT 3300uF	20%	63V		
				(US, CND)		
C626	1-126-974-11	ELECT 3300uF	20%	50V (AUS)		
C627	1-126-943-11	ELECT 2200uF	20%	25V		
C628	1-126-942-61	ELECT 1000uF	20%	25V		
C629	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V		
C630	1-126-947-11	ELECT 47uF	20%	35V		
C631	1-126-933-11	ELECT 100uF	20%	16V		
C632	1-126-963-11	ELECT 4.7uF	20%	50V		
C633	1-165-176-11	CERAMIC CHIP 0.047uF	10%	16V		
C634	1-165-176-11	CERAMIC CHIP 0.047uF	10%	16V		
C636	1-126-960-11	ELECT 1uF	20%	50V		
C637	1-165-176-11	CERAMIC CHIP 0.047uF	10%	16V		
C638	1-165-176-11	CERAMIC CHIP 0.047uF	10%	16V		

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C639	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C707	1-126-960-11	ELECT	1uF	20%	50V
C640	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C709	1-137-190-91	FILM	0.22uF	5%	50V
C641	1-126-962-11	ELECT	3.3uF	20%	50V	C710	1-137-190-91	FILM	0.22uF	5%	50V
						C711	1-136-497-81	FILM	0.1uF	5%	50V
C642	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	C712	1-136-161-00	FILM	0.047uF	5%	50V
C644	1-126-960-11	ELECT	1uF	20%	50V	C713	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C645	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C714	1-126-947-11	ELECT	47uF	20%	35V
C646	1-126-960-11	ELECT	1uF	20%	50V	C760	1-104-665-11	ELECT	100uF	20%	25V
C647	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C761	1-126-935-11	ELECT	470uF	20%	16V
C648	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C762	1-104-658-91	ELECT	100uF	20%	10V
C649	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C771	1-126-960-11	ELECT	1uF	20%	50V
C650	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C772	1-126-960-11	ELECT	1uF	20%	50V
C652	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C773	1-126-960-11	ELECT	1uF	20%	50V
C654	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C774	1-126-960-11	ELECT	1uF	20%	50V
C655	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C775	1-126-947-11	ELECT	47uF	20%	35V
C656	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C776	1-104-662-91	ELECT	22uF	20%	25V
C657	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C786	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C658	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C787	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C659	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C788	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V
C660	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C789	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V
C661	1-126-964-11	ELECT	10uF	20%	50V	C791	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C662	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V	C802	1-126-933-11	ELECT	100uF	20%	16V
C663	1-126-960-11	ELECT	1uF	20%	50V	C803	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C664	1-126-960-11	ELECT	1uF	20%	50V	C804	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C665	1-126-960-11	ELECT	1uF	20%	50V	C805	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C666	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C806	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C667	1-126-933-11	ELECT	100uF	20%	16V	C807	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C669	1-126-923-91	ELECT	220uF	20%	10V	C808	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C671	1-126-933-11	ELECT	100uF	20%	16V	C809	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C672	1-126-933-11	ELECT	100uF	20%	16V	C810	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C673	1-126-925-91	ELECT	470uF	20%	10V	C811	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C674	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	C814	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V (AUS)
C675	1-126-960-11	ELECT	1uF	20%	50V	C814	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C676	1-126-960-11	ELECT	1uF	20%	50V						(US, CND)
C679	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C815	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V (AUS)
C680	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C815	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C681	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V						(US, CND)
C682	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C816	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C683	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C817	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C684	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	C819	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C685	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	C820	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
C686	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	C821	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C687	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	C822	1-126-965-91	ELECT	22uF	20%	50V
C688	1-104-662-91	ELECT	22uF	20%	25V	C823	1-126-923-91	ELECT	220uF	20%	10V
					(US, CND)	C824	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C689	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C826	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C690	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C827	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C691	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C828	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C692	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C829	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C693	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C830	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C694	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C831	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C695	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C832	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C696	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C833	1-126-923-91	ELECT	220uF	20%	10V
C699	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C834	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C700	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C835	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C701	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C836	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C702	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C837	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C703	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C838	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C704	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C840	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C705	1-126-964-11	ELECT	10uF	20%	50V	C841	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C706	1-126-935-11	ELECT	470uF	20%	16V	C843	1-164-156-11	CERAMIC CHIP	0.1uF		25V

HCD-EC98P

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C844	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V		D802	8-719-062-51	DIODE 1PS226-115	
C845	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V		D803	6-501-369-01	DIODE SVC230-TB-E	
C846	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		D804	6-501-369-01	DIODE SVC230-TB-E	
C847	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V		D805	8-719-062-51	DIODE 1PS226-115	
C848	1-164-156-11	CERAMIC CHIP 0.1uF 25V		D806	8-719-062-51	DIODE 1PS226-115	
C850	1-164-156-11	CERAMIC CHIP 0.1uF 25V				< GROUND TERMINAL >	
		< FILTER >		ET601	1-537-771-21	TERMINAL BOARD, GROUND	
CF801	1-781-962-21	FILTER, CERAMIC		ET602	1-537-771-21	TERMINAL BOARD, GROUND	
		< CONNECTOR >				< FILTER >	
CN601	1-819-131-11	PIN, CONNECTOR 3P		FL801	1-760-393-11	FILTER, CERAMIC	
CN602	1-784-766-11	CONNECTOR, FFC 5P		FL803	1-236-711-21	FILTER, BAND PASS	
CN605	1-784-770-11	CONNECTOR, FFC 9P				< IC >	
CN608	1-779-289-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P		IC602	6-712-055-01	IC BD3499FV-E2	
CN609	1-779-279-11	CONNECTOR, FFC (LIF (NON-ZIF)) 11P		IC701	6-712-088-01	IC BD9701CP-V5	
CN632	1-824-030-21	HOLDER, CABLE 5P		IC770	8-759-278-58	IC NJM4558V-TE2	
CN643	1-568-826-11	CONNECTOR, FFC 7P		IC801	6-708-840-01	IC LV23003VA	
CN653	1-819-137-11	PIN, CONNECTOR 9P				< JUMPER RESISTOR >	
CN654	1-819-138-11	PIN, CONNECTOR 10P		JR601	1-216-864-11	SHORT CHIP 0	
CN701	1-819-131-11	PIN, CONNECTOR 3P (US, CND)		JR602	1-216-864-11	SHORT CHIP 0	
* CN801	1-506-680-11	PLUG, CONNECTOR (2.5mm) 3P (ANTENNA FM/AM)		JR603	1-216-864-11	SHORT CHIP 0	
CN803	1-784-792-11	CONNECTOR, FFC 31P		JR604	1-216-864-11	SHORT CHIP 0	
		< DIODE >		JR605	1-216-864-11	SHORT CHIP 0	
D601	6-500-335-01	DIODE MC2838-T112-1		JR606	1-216-864-11	SHORT CHIP 0	
D602	6-500-335-01	DIODE MC2838-T112-1		JR607	1-216-864-11	SHORT CHIP 0	
D603	6-501-817-01	DIODE MA2J1110GLS0		JR608	1-216-864-11	SHORT CHIP 0	
D604	6-501-817-01	DIODE MA2J1110GLS0		JR609	1-216-864-11	SHORT CHIP 0	
D605	6-501-817-01	DIODE MA2J1110GLS0		JR610	1-216-864-11	SHORT CHIP 0	
D606	6-500-334-01	DIODE MC2836-T112-1		JR611	1-216-864-11	SHORT CHIP 0	
D607	6-501-046-01	DIODE 1N5402-F46		JR612	1-216-864-11	SHORT CHIP 0	
D608	6-501-046-01	DIODE 1N5402-F46		JR613	1-216-864-11	SHORT CHIP 0	
D609	6-501-046-01	DIODE 1N5402-F46		JR614	1-216-864-11	SHORT CHIP 0	
D610	6-501-046-01	DIODE 1N5402-F46		JR615	1-216-864-11	SHORT CHIP 0	
D611	8-719-046-07	DIODE 2A02M		JR616	1-216-864-11	SHORT CHIP 0	
D612	8-719-046-07	DIODE 2A02M		JR617	1-216-864-11	SHORT CHIP 0	
D614	6-501-817-01	DIODE MA2J1110GLS0		JR618	1-216-864-11	SHORT CHIP 0	
D615	8-719-063-79	DIODE 1N4002B				< COIL >	
D617	6-500-335-01	DIODE MC2838-T112-1		L601	1-456-107-11	COIL, AIR-CORE	
D618	6-501-719-01	DIODE MAZ8039GHLS0		L602	1-456-107-11	COIL, AIR-CORE	
D619	8-719-063-79	DIODE 1N4002B		L603	1-456-107-11	COIL, AIR-CORE	
D620	8-719-063-79	DIODE 1N4002B		L604	1-456-107-11	COIL, AIR-CORE	
D621	6-501-722-01	DIODE MAZ8043GMLS0		L701	1-456-467-11	INDUCTOR 100uH	
D622	6-501-752-01	DIODE MAZ8082GMLS0		L702	1-456-107-11	COIL, AIR-CORE	
D623	6-501-046-01	DIODE 1N5402-F46		L801	1-456-596-11	COIL, MW OSC	
D624	6-501-046-01	DIODE 1N5402-F46		L802	1-457-168-11	COIL, DET	
D625	6-501-046-01	DIODE 1N5402-F46		L803	1-457-162-22	COIL, AIR-CORE	
D626	6-501-046-01	DIODE 1N5402-F46		L804	1-457-163-22	COIL, AIR-CORE	
D628	6-501-817-01	DIODE MA2J1110GLS0		L805	1-457-161-11	COIL, AM ANTENNA	
D631	6-501-817-01	DIODE MA2J1110GLS0				< TRANSISTOR >	
D633	8-719-046-07	DIODE 2A02M (US, CND)		Q601	8-729-037-03	TRANSISTOR KTA1266GR-AT (AUS)	
D634	8-719-046-07	DIODE 2A02M (US, CND)		Q601	8-729-040-76	TRANSISTOR KTA1273-Y-AT (US, CND)	
D701	8-719-079-47	DIODE RK36LF-A4		Q602	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D702	6-501-817-01	DIODE MA2J1110GLS0		Q603	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D703	6-501-817-01	DIODE MA2J1110GLS0		Q604	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D791	6-501-817-01	DIODE MA2J1110GLS0					
D801	6-501-142-01	DIODE SVC347A-TL-E					

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
Q605	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R638	1-249-403-11	CARBON	68	5%	1/4W	
Q606	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R639	1-216-845-11	METAL CHIP	100K	5%	1/10W	
Q607	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (US, CND)				R640	1-216-845-11	METAL CHIP	100K	5%	1/10W	
Q608	8-729-120-28	TRANSISTOR	2SC1623-L5L6										
Q611	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R641	1-249-403-11	CARBON	68	5%	1/4W	
							R642	1-249-403-11	CARBON	68	5%	1/4W	
Q612	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF				R643	1-216-833-11	METAL CHIP	10K	5%	1/10W	
Q618	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF				R644	1-216-821-11	METAL CHIP	1K	5%	1/10W	
Q619	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R645	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
Q622	8-729-120-28	TRANSISTOR	2SC1623-L5L6										
Q624	8-729-036-86	TRANSISTOR	KTC3203Y-AT				R646	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R647	1-216-797-11	METAL CHIP	10	5%	1/10W	
Q700	8-729-045-62	TRANSISTOR	2SK2158-T2B				R648	1-216-841-11	METAL CHIP	47K	5%	1/10W	
Q701	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R649	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
Q702	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R650	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
Q703	8-729-120-28	TRANSISTOR	2SC1623-L5L6										
Q704	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R651	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
							R652	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q705	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R655	1-216-806-11	METAL CHIP	56	5%	1/10W	
Q761	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF										(US, CND)
Q762	8-729-027-43	TRANSISTOR	DTC114EKA-T146				R656	1-216-793-11	METAL CHIP	4.7	5%	1/10W	
Q801	8-729-120-28	TRANSISTOR	2SC1623-L5L6										(US, CND)
Q802	8-729-120-28	TRANSISTOR	2SC1623-L5L6				R657	1-216-845-11	METAL CHIP	100K	5%	1/10W	
													(US, CND)
		< RESISTOR >											
							△ R658	1-215-890-51	METAL OXIDE	470	5%	2W	F
R601	1-216-817-11	METAL CHIP	470	5%	1/10W		R659	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R603	1-216-793-11	METAL CHIP	4.7	5%	1/10W		R660	1-216-864-11	SHORT CHIP	0			
R604	1-216-845-11	METAL CHIP	100K	5%	1/10W		△ R662	1-215-890-51	METAL OXIDE	470	5%	2W	F
R605	1-216-806-11	METAL CHIP	56	5%	1/10W		R663	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R606	1-216-797-11	METAL CHIP	10	5%	1/10W								
							R666	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R607	1-216-797-11	METAL CHIP	10	5%	1/10W		R667	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R608	1-216-797-11	METAL CHIP	10	5%	1/10W		R669	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R609	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R670	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R610	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R672	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R611	1-216-797-11	METAL CHIP	10	5%	1/10W								
							R673	1-216-864-11	SHORT CHIP	0			
R612	1-216-797-11	METAL CHIP	10	5%	1/10W		R674	1-249-401-11	CARBON	47	5%	1/4W	
R613	1-216-833-11	METAL CHIP	10K	5%	1/10W		R675	1-249-401-11	CARBON	47	5%	1/4W	
R614	1-216-833-11	METAL CHIP	10K	5%	1/10W		R676	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R615	1-216-797-11	METAL CHIP	10	5%	1/10W		R677	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R616	1-216-835-11	METAL CHIP	15K	5%	1/10W								
							R678	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R617	1-216-833-11	METAL CHIP	10K	5%	1/10W		R681	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R618	1-216-833-11	METAL CHIP	10K	5%	1/10W		R684	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R619	1-216-835-11	METAL CHIP	15K	5%	1/10W		R685	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R620	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R686	1-216-842-11	METAL CHIP	56K	5%	1/10W	
R621	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
							R687	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R622	1-216-839-11	METAL CHIP	33K	5%	1/10W		R689	1-216-838-11	METAL CHIP	27K	5%	1/10W	
R623	1-216-833-11	METAL CHIP	10K	5%	1/10W		R690	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R624	1-216-833-11	METAL CHIP	10K	5%	1/10W		R691	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R625	1-216-839-11	METAL CHIP	33K	5%	1/10W		R692	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R626	1-216-833-11	METAL CHIP	10K	5%	1/10W								
							R693	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R627	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		R696	1-216-833-11	METAL CHIP	10K	5%	1/10W	
					(US, CND)		R697	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R627	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R700	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
					(AUS)		R701	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R628	1-216-833-11	METAL CHIP	10K	5%	1/10W								
R629	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R702	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R630	1-216-841-11	METAL CHIP	47K	5%	1/10W		R704	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
							R706	1-216-813-11	METAL CHIP	220	5%	1/10W	
R631	1-216-797-11	METAL CHIP	10	5%	1/10W		R707	1-216-813-11	METAL CHIP	220	5%	1/10W	
R632	1-216-845-11	METAL CHIP	100K	5%	1/10W		R708	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R633	1-216-845-11	METAL CHIP	100K	5%	1/10W								
R634	1-249-403-11	CARBON	68	5%	1/4W		R709	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R635	1-249-403-11	CARBON	68	5%	1/4W		R710	1-216-839-11	METAL CHIP	33K	5%	1/10W	
							R711	1-216-839-11	METAL CHIP	33K	5%	1/10W	
R636	1-249-403-11	CARBON	68	5%	1/4W		R712	1-216-819-11	METAL CHIP	680	5%	1/10W	
R637	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R713	1-216-845-11	METAL CHIP	100K	5%	1/10W	

HCD-EC98P

MAIN

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
R714	1-216-841-11	METAL CHIP	47K	5%	1/10W		R765	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)
R715	1-216-809-11	METAL CHIP	100	5%	1/10W		R766	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R716	1-216-821-11	METAL CHIP	1K	5%	1/10W		△ R767	1-216-365-61	METAL OXIDE	0.47	5%	2W	F
R717	1-249-403-11	CARBON	68	5%	1/4W		R768	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R718	1-249-403-11	CARBON	68	5%	1/4W		R769	1-216-805-11	METAL CHIP	47	5%	1/10W	
R719	1-249-403-11	CARBON	68	5%	1/4W		R770	1-216-864-11	SHORT CHIP	0			
R720	1-216-837-11	METAL CHIP	22K	5%	1/10W		R771	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R721	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		R772	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R722	1-216-809-11	METAL CHIP	100	5%	1/10W								
R723	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)	R773	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
							R774	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R724	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)	R775	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R724	1-249-395-11	CARBON	15	5%	1/4W	(AUS)	R776	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R725	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)	R777	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
R725	1-249-395-11	CARBON	15	5%	1/4W	(AUS)							
R726	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)	R778	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	
							R779	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R726	1-249-395-11	CARBON	15	5%	1/4W	(AUS)	R780	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R727	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R781	1-216-839-11	METAL CHIP	33K	5%	1/10W	
R728	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R782	1-216-842-11	METAL CHIP	56K	5%	1/10W	
R729	1-216-845-11	METAL CHIP	100K	5%	1/10W								
R730	1-216-841-11	METAL CHIP	47K	5%	1/10W		R783	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R731	1-216-809-11	METAL CHIP	100	5%	1/10W		R784	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R732	1-216-809-11	METAL CHIP	100	5%	1/10W		R785	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R733	1-216-845-11	METAL CHIP	100K	5%	1/10W		R786	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R734	1-216-821-11	METAL CHIP	1K	5%	1/10W		R787	1-216-835-11	METAL CHIP	15K	5%	1/10W	
R735	1-216-864-11	SHORT CHIP	0										
R736	1-216-833-11	METAL CHIP	10K	5%	1/10W		R788	1-216-835-11	METAL CHIP	15K	5%	1/10W	
R737	1-216-833-11	METAL CHIP	10K	5%	1/10W		R789	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R738	1-216-821-11	METAL CHIP	1K	5%	1/10W		R790	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R739	1-216-809-11	METAL CHIP	100	5%	1/10W		R791	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R740	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		R792	1-216-849-11	METAL CHIP	220K	5%	1/10W	
R741	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R742	1-216-821-11	METAL CHIP	1K	5%	1/10W		R801	1-216-809-11	METAL CHIP	100	5%	1/10W	
R744	1-216-797-11	METAL CHIP	10	5%	1/10W		R802	1-216-801-11	METAL CHIP	22	5%	1/10W	
R745	1-216-797-11	METAL CHIP	10	5%	1/10W		R803	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R746	1-249-403-11	CARBON	68	5%	1/4W		R804	1-216-801-11	METAL CHIP	22	5%	1/10W	
							R805	1-216-853-11	METAL CHIP	470K	5%	1/10W	
R747	1-249-403-11	CARBON	68	5%	1/4W								
R748	1-249-403-11	CARBON	68	5%	1/4W		R806	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R749	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R807	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R750	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R808	1-216-801-11	METAL CHIP	22	5%	1/10W	
R751	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		R809	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R810	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R752	1-216-830-11	METAL CHIP	5.6K	5%	1/10W								
R753	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		R811	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R754	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		R812	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R755	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R813	1-216-853-11	METAL CHIP	470K	5%	1/10W	
R756	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R814	1-216-837-11	METAL CHIP	22K	5%	1/10W	
							R815	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R757	1-216-841-11	METAL CHIP	47K	5%	1/10W								
R758	1-216-821-11	METAL CHIP	1K	5%	1/10W		R816	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R759	1-216-805-11	METAL CHIP	47	5%	1/10W		R817	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R761	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R818	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R762	1-216-839-11	METAL CHIP	33K	5%	1/10W		R819	1-216-839-11	METAL CHIP	33K	5%	1/10W	
							R820	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R763	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R764	1-249-389-11	CARBON	4.7	5%	1/4W	(US, CND)	R821	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
							R822	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R823	1-216-833-11	METAL CHIP	10K	5%	1/10W	
							R824	1-216-817-11	METAL CHIP	470	5%	1/10W	
							R825	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
							R826	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R827	1-216-845-11	METAL CHIP	100K	5%	1/10W	
							R829	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
							R830	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
							R831	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
							R832	1-216-857-11	METAL CHIP	1M	5%	1/10W	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R836	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C311	1-164-156-11	CERAMIC CHIP	0.1uF		25V (AUS)
R837	1-216-845-11	METAL CHIP	100K	5%	1/10W	C312	1-164-156-11	CERAMIC CHIP	0.1uF		25V (AUS)
R838	1-216-837-11	METAL CHIP	22K	5%	1/10W	C313	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
R839	1-216-797-11	METAL CHIP	10	5%	1/10W	C314	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
R840	1-216-864-11	SHORT CHIP	0			C315	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
R841	1-216-833-11	METAL CHIP	10K	5%	1/10W	C316	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
R842	1-216-864-11	SHORT CHIP	0			C317	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R843	1-216-845-11	METAL CHIP	100K	5%	1/10W	C319	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
R844	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C320	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
R845	1-216-864-11	SHORT CHIP	0			C321	1-164-156-11	CERAMIC CHIP	0.1uF		25V
R846	1-216-797-11	METAL CHIP	10	5%	1/10W	C328	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
R847	1-216-864-11	SHORT CHIP	0			C330	1-164-156-11	CERAMIC CHIP	0.1uF		25V
		< RELAY >				C332	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
RY601	1-755-307-21	RELAY				C338	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
RY602	1-755-307-21	RELAY				C340	1-164-156-11	CERAMIC CHIP	0.1uF		25V
RY701	1-755-307-21	RELAY				C341	1-164-156-11	CERAMIC CHIP	0.1uF		25V
		< TRANSFORMER >				C342	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
T801	1-433-741-11	TRANSFORMER, IF				C343	1-126-965-91	ELECT	22uF	20%	50V (AUS)
		< TERMINAL >				C344	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (AUS)
TB601	1-780-381-11	TERMINAL BOARD, PUSH (ANTENNA) 4P (SPEAKER HIGH FREQ. IMPEDANCE USE 8Ω)				C345	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V (AUS)
TB602	1-536-708-81	TERMINAL BOARD, PUSH (4P) (SPEAKER LOW FREQ. IMPEDANCE USE 8Ω)				C346	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
TB603	1-780-600-11	TERMINAL BOARD (SPEAKER) 1P (SUBWOOFER IMPEDANCE: USE 4Ω)				C347	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
		< VIBRATOR >				C348	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
X801	1-813-917-11	VIBRATOR, CRYSTAL (75MHz)				C351	1-164-156-11	CERAMIC CHIP	0.1uF		25V
*****											(US, CND)
		MOTOR BOARD (US, CND)				C352	1-126-964-11	ELECT	10uF	20%	50V
		*****				C353	1-164-156-11	CERAMIC CHIP	0.1uF		25V
		< CONNECTOR >									(US, CND)
CN001	1-779-542-21	CONNECTOR, FFC (LIF (NON-ZIF)) 5P				CN301	1-784-753-11	CONNECTOR, FFC 31P			
		< SWITCH >				CN302	1-784-735-11	CONNECTOR, FFC 13P (AUS)			
S001	1-786-514-21	SWITCH, LEVER (SLIDE) (DISC TRAY OPEN/CLOSE DETECT)				CN303	1-815-550-11	PIN, CONNECTOR (PWB) 2P			
*****						CN305	1-815-444-11	PIN, CONNECTOR (PWB) 3P			
	A-1379-636-A	PANEL BOARD, COMPLETE (US, CND)				CN311	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P (US, CND)			
	A-1426-098-A	PANEL BOARD, COMPLETE (AUS)									

	2-649-178-01	PLATE, LIGHT GUIDE									
	2-649-179-01	SHEET (LCD)									
	2-665-175-01	SHEET (REFLECTOR)									
		< CAPACITOR >									
C301	1-164-156-11	CERAMIC CHIP	0.1uF		25V	D301	6-501-722-01	DIODE MAZ8043GMLS0			
C302	1-126-964-11	ELECT	10uF	20%	50V	D302	6-501-817-01	DIODE MA2J1110GLS0			
C303	1-126-964-11	ELECT	10uF	20%	50V	D303	6-500-334-01	DIODE MC2836-T112-1			
C304	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V	D304	6-501-817-01	DIODE MA2J1110GLS0			
C305	1-126-964-11	ELECT	10uF	20%	50V	D305	6-501-817-01	DIODE MA2J1110GLS0 (AUS)			
C306	1-104-655-91	ELECT	470uF	20%	6.3V	D306	8-719-063-79	DIODE 1N4002B (US, CND)			
C308	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V (AUS)	D307	6-501-817-01	DIODE MA2J1110GLS0 (US, CND)			
C309	1-126-965-91	ELECT	22uF	20%	50V (AUS)						
C310	1-164-156-11	CERAMIC CHIP	0.1uF		25V (AUS)						
		< FERRITE BEAD >									
						FB301	1-500-329-21	INDUCTOR, FERRITE BEAD			
		< IC >									
						IC301	A-1551-183-A	IC MB90F831PF-G-SPE1 (for SERVICE)			(US, CND)
						IC301	A-1551-185-A	IC MB90F831PF-G-SPE1 (for SERVICE) (AUS)			
						IC302	6-711-556-01	IC NJL24H400B-SA			
						IC303	8-759-598-69	IC BA6956AN (US, CND)			

HCD-EC98P

PANEL

Ref. No.	Part No.	Description	Remark			
< JUMPER RESISTOR >						
JR301	1-216-864-11	SHORT CHIP	0			
JR302	1-216-864-11	SHORT CHIP	0			
JR303	1-216-864-11	SHORT CHIP	0			
JR304	1-216-864-11	SHORT CHIP	0			
JR305	1-216-864-11	SHORT CHIP	0			
JR307	1-216-864-11	SHORT CHIP	0			
JR308	1-216-864-11	SHORT CHIP	0			
JR309	1-216-864-11	SHORT CHIP	0			
JR310	1-216-864-11	SHORT CHIP	0			
JR311	1-216-864-11	SHORT CHIP	0			
JR313	1-216-864-11	SHORT CHIP	0			
JR315	1-216-864-11	SHORT CHIP	0			
< LIQUID CRYSTAL DISPLAY >						
LCD301	1-802-584-11	DISPLAY PANEL, LIQUID				
< LED >						
LED301	6-501-479-01	LED 1L0341Y23E0CA602 (I/⬤, STANDBY)				
< TRANSISTOR >						
Q301	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q302	8-729-037-13	TRANSISTOR	KTA1271Y			
Q303	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q304	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q305	8-729-120-28	TRANSISTOR	2SC1623-L5L6			
Q306	8-729-038-28	TRANSISTOR	RT1N441C-TP-1			
Q307	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF (AUS)			
Q308	8-729-038-28	TRANSISTOR	RT1N441C-TP-1 (AUS)			
Q309	8-729-040-76	TRANSISTOR	KTA1273-Y-AT (AUS)			
Q310	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (AUS)			
Q311	8-729-024-43	TRANSISTOR	2SA1365-T112-1EF (AUS)			
Q312	8-729-024-43	TRANSISTOR	2SA1365-T112-1EF (AUS)			
Q313	8-729-024-43	TRANSISTOR	2SA1365-T112-1EF (AUS)			
Q314	8-729-024-43	TRANSISTOR	2SA1365-T112-1EF (AUS)			
Q315	8-729-047-62	TRANSISTOR	2SC3440-T12-1F (AUS)			
Q316	8-729-047-62	TRANSISTOR	2SC3440-T12-1F (AUS)			
Q317	8-729-047-62	TRANSISTOR	2SC3440-T12-1F (AUS)			
Q318	8-729-047-62	TRANSISTOR	2SC3440-T12-1F (AUS)			
< RESISTOR >						
R301	1-216-809-11	METAL CHIP	100	5%	1/10W	
R302	1-216-809-11	METAL CHIP	100	5%	1/10W	
R303	1-216-809-11	METAL CHIP	100	5%	1/10W	
R304	1-216-809-11	METAL CHIP	100	5%	1/10W	
R305	1-216-809-11	METAL CHIP	100	5%	1/10W	
R306	1-216-809-11	METAL CHIP	100	5%	1/10W	
R307	1-216-809-11	METAL CHIP	100	5%	1/10W	
R308	1-216-809-11	METAL CHIP	100	5%	1/10W	
R309	1-216-809-11	METAL CHIP	100	5%	1/10W	
R310	1-216-809-11	METAL CHIP	100	5%	1/10W	
R311	1-216-817-11	METAL CHIP	470	5%	1/10W	
R312	1-216-809-11	METAL CHIP	100	5%	1/10W	
R313	1-216-809-11	METAL CHIP	100	5%	1/10W	
R314	1-216-809-11	METAL CHIP	100	5%	1/10W	
R315	1-216-809-11	METAL CHIP	100	5%	1/10W	
R316	1-216-809-11	METAL CHIP	100	5%	1/10W	
R317	1-216-809-11	METAL CHIP	100	5%	1/10W	
R318	1-216-809-11	METAL CHIP	100	5%	1/10W	

Ref. No.	Part No.	Description				Remark
R319	1-216-809-11	METAL CHIP	100	5%	1/10W	
R320	1-216-809-11	METAL CHIP	100	5%	1/10W	
R321	1-216-809-11	METAL CHIP	100	5%	1/10W	
R322	1-216-809-11	METAL CHIP	100	5%	1/10W	
R323	1-216-809-11	METAL CHIP	100	5%	1/10W	
R324	1-216-809-11	METAL CHIP	100	5%	1/10W	
R325	1-216-797-11	METAL CHIP	10	5%	1/10W	
R326	1-216-809-11	METAL CHIP	100	5%	1/10W	
R327	1-216-809-11	METAL CHIP	100	5%	1/10W	
R328	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R329	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R330	1-216-819-11	METAL CHIP	680	5%	1/10W	
R331	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R332	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R333	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R334	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R335	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R336	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R337	1-216-813-11	METAL CHIP	220	5%	1/10W	
R338	1-216-789-11	METAL CHIP	2.2	5%	1/10W	(AUS)
R339	1-216-789-11	METAL CHIP	2.2	5%	1/10W	(AUS)
R340	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	(AUS)
R341	1-216-839-11	METAL CHIP	33K	5%	1/10W	(AUS)
R342	1-216-849-11	METAL CHIP	220K	5%	1/10W	(AUS)
R343	1-216-853-11	METAL CHIP	470K	5%	1/10W	(AUS)
R344	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	(AUS)
R345	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	(AUS)
R346	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R347	1-216-817-11	METAL CHIP	470	5%	1/10W	(AUS)
R348	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R349	1-216-817-11	METAL CHIP	470	5%	1/10W	(AUS)
R350	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R351	1-216-817-11	METAL CHIP	470	5%	1/10W	(AUS)
R352	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R353	1-216-817-11	METAL CHIP	470	5%	1/10W	(AUS)
R354	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R355	1-216-821-11	METAL CHIP	1K	5%	1/10W	(AUS)
R356	1-216-821-11	METAL CHIP	1K	5%	1/10W	(AUS)
R357	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R358	1-216-841-11	METAL CHIP	47K	5%	1/10W	(AUS)
R359	1-216-821-11	METAL CHIP	1K	5%	1/10W	(AUS)

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R360	1-216-821-11	METAL CHIP	1K	5%	1/10W (AUS)	R421	1-216-833-11	METAL CHIP	10K	5%	1/10W (AUS)
R361	1-216-841-11	METAL CHIP	47K	5%	1/10W (AUS)	R422	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R362	1-216-837-11	METAL CHIP	22K	5%	1/10W	R424	1-216-841-11	METAL CHIP	47K	5%	1/10W
R363	1-216-837-11	METAL CHIP	22K	5%	1/10W	R426	1-216-845-11	METAL CHIP	100K	5%	1/10W (AUS)
R364	1-216-837-11	METAL CHIP	22K	5%	1/10W (AUS)	R428	1-216-841-11	METAL CHIP	47K	5%	1/10W (AUS)
R365	1-216-837-11	METAL CHIP	22K	5%	1/10W (AUS)	R429	1-216-833-11	METAL CHIP	10K	5%	1/10W
R366	1-216-833-11	METAL CHIP	10K	5%	1/10W (AUS)	R433	1-216-817-11	METAL CHIP	470	5%	1/10W
R367	1-216-837-11	METAL CHIP	22K	5%	1/10W (AUS)	R434	1-216-817-11	METAL CHIP	470	5%	1/10W
R368	1-216-833-11	METAL CHIP	10K	5%	1/10W (AUS)	R435	1-216-817-11	METAL CHIP	470	5%	1/10W
R369	1-216-821-11	METAL CHIP	1K	5%	1/10W	R441	1-216-840-11	METAL CHIP	39K	5%	1/10W (US, CND)
R370	1-216-821-11	METAL CHIP	1K	5%	1/10W	R442	1-216-837-11	METAL CHIP	22K	5%	1/10W (US, CND)
R371	1-216-821-11	METAL CHIP	1K	5%	1/10W (AUS)	R443	1-216-833-11	METAL CHIP	10K	5%	1/10W (US, CND)
R372	1-216-821-11	METAL CHIP	1K	5%	1/10W (AUS)	R444	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (US, CND)
R373	1-216-864-11	SHORT CHIP	0 (AUS)			R445	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (US, CND)
R374	1-216-821-11	METAL CHIP	1K	5%	1/10W (AUS)	R446	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R375	1-216-864-11	SHORT CHIP	0 (AUS)			R447	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R376	1-216-833-11	METAL CHIP	10K	5%	1/10W	R448	1-216-833-11	METAL CHIP	10K	5%	1/10W
R377	1-216-833-11	METAL CHIP	10K	5%	1/10W	< ROTARY ENCODER >					
R378	1-216-839-11	METAL CHIP	33K	5%	1/10W	S301	1-786-417-11	ENCODER, ROTARY (VOLUME)			
R379	1-216-843-11	METAL CHIP	68K	5%	1/10W	< SWITCH >					
R380	1-216-817-11	METAL CHIP	470	5%	1/10W	SW303	1-771-410-21	SWITCH, TACTILE (◀◀◀ ◀◀ – TUNING)			
R381	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW304	1-771-410-21	SWITCH, TACTILE (FUNCTION)			
R382	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW305	1-771-410-21	SWITCH, TACTILE (TUNING + ▶▶▶ ▶▶▶)			
R383	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW311	1-771-410-21	SWITCH, TACTILE (▶▶)			
R384	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW312	1-771-410-21	SWITCH, TACTILE (■)			
R385	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW313	1-771-410-21	SWITCH, TACTILE (■)			
R386	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW314	1-771-410-21	SWITCH, TACTILE (FOLDER +)			
R387	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW315	1-771-410-21	SWITCH, TACTILE (FOLDER –)			
R389	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (US, CND)	SW316	1-771-410-21	SWITCH, TACTILE (EQ)			
R389	1-216-832-11	METAL CHIP	8.2K	5%	1/10W (AUS)	SW317	1-771-410-21	SWITCH, TACTILE (DSGX)			
R390	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW318	1-771-410-21	SWITCH, TACTILE (PLAY MODE/TUNING MODE)			
R391	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (AUS)	SW319	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
R392	1-216-833-11	METAL CHIP	10K	5%	1/10W	< VIBRATOR >					
R396	1-216-851-11	METAL CHIP	330K	5%	1/10W	X301	1-814-067-11	OSCILLATOR, CRYSTAL (32.768kHz)			
R400	1-216-821-11	METAL CHIP	1K	5%	1/10W	X302	1-813-548-21	VIBRATOR, CERAMIC (6MHz)			
R401	1-216-821-11	METAL CHIP	1K	5%	1/10W	*****					
R402	1-216-845-11	METAL CHIP	100K	5%	1/10W	PT BOARD					
R405	1-216-822-11	METAL CHIP	1.2K	5%	1/10W	*****					
R406	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	< CAPACITOR >					
R412	1-216-822-11	METAL CHIP	1.2K	5%	1/10W	C051	1-165-621-91	CERAMIC CHIP	0.1uF		50V
R413	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	C052	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V
R414	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	< CONNECTOR >					
R415	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	CN051	1-820-973-11	HOLDER, CABLE 10P			
R416	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	△ CN053	1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P			
R417	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	< DIODE >					
R418	1-216-835-11	METAL CHIP	15K	5%	1/10W	D051	6-500-334-01	DIODE	MC2836-T112-1		
R419	1-216-838-11	METAL CHIP	27K	5%	1/10W						
R420	1-216-845-11	METAL CHIP	100K	5%	1/10W						

HCD-EC98P

PT

REG

Ref. No.	Part No.	Description	Remark
D052	6-500-335-01	DIODE MC2838-T112-1	
D055	6-500-335-01	DIODE MC2838-T112-1	
< RELAY >			
⚠ RY001	1-755-334-11	RELAY, AC POWER	
< TRANSFORMER >			
⚠ PT005	1-443-846-11	TRANSFORMER, POWER (US, CND)	
⚠ PT005	1-445-105-11	TRANSFORMER, POWER (AUS)	

REG BOARD			

< CAPACITOR >			
C698	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
< IC >			
IC601	8-759-231-56	IC TA7809S	
< CABLE HOLDER >			
W610	1-824-027-21	HOLDER, CABLE 3P	

MISCELLANEOUS			

57	1-835-338-21	CABLE, FLEXIBLE FLAT (31 CORE)	
60	1-831-774-21	CABLE, FLEXIBLE FLAT (9 CORE)	
62	1-835-336-21	CABLE, FLEXIBLE FLAT (11 CORE)	
101	1-832-838-21	CABLE, FLEXIBLE FLAT (13 CORE) (AUS)	
⚠ 106	1-834-967-21	CORD, POWER (AUS)	
⚠ 106	1-834-978-11	CORD, POWER (US, CND)	
107	1-834-181-21	CABLE, FLEXIBLE FLAT (21 CORE) (AUS)	
107	1-835-334-21	CABLE, FLEXIBLE FLAT (21 CORE) (US, CND)	
108	1-832-666-21	CABLE, FLEXIBLE FLAT (5 CORE) (US, CND)	
152	1-835-335-21	CABLE, FLEXIBLE FLAT (7 CORE)	
153	1-835-276-21	CABLE, FLEXIBLE FLAT (5 CORE)	
201	1-797-193-12	MECHANICAL, CD (DLM3A)	
⚠ 206	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
207	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
251	A-1242-967-A	LOADING (BK) ASSY	
⚠ 256	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
257	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
M601	1-787-400-11	D.C. FAN	
M701	1-787-400-11	D.C. FAN (US, CND)	
⚠ PT006	1-445-347-11	TRANSFORMER, POWER (US, CND)	
⚠ PT006	1-445-349-11	TRANSFORMER, POWER (AUS)	
S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	

MEMO

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]