

Service Manual

CD Stereo System



SA-AK350PL

Colour

(S)... Silver Type

Remote
Control

SB-AK350

SA-AK350

SB-AK350

Notes: This model's CD mechanism changer unit is CRS1. Please refer to the original Service Manual (Order No. MD0509368C0) for this mechanism.

Specifications

| | | | |
|---------------------------------------|-----------------------------------|--|-------------------------|
| RMS output power | | Input Sensitivity/ Input Impedance | |
| THD 10%, both channels driven | | Aux | 250 mV, 14.7 k Ω |
| 1 kHz | | Music Port input jack | |
| (Low channel) | 112.5 W per channel (3 Ω) | Terminal | Stereo, 3.5 mm jack |
| 10 kHz | | Sensitivity | 100 mV, 4.7 k Ω |
| (High channel) | 112.5 W per channel (3 Ω) | Phone jack | |
| Total Bi-Amp power | 450 W | Terminal | Stereo, 3.5 mm jack |
| PMPO | 4800 W | Mic jack | |
| FM/AM TUNER, TERMINALS SECTION | | Terminal | Mono, 3.5 mm jack |
| Preset station | FM 20 stations | Sensitivity | 0.7 mV, 680 Ω |
| | AM 15 stations | CASSETTE DECK SECTION | |
| Frequency Modulation (FM) | | Track system | 4 track, 2 channel |
| Frequency range | 87.9 to 107.9 MHz (200 kHz steps) | Heads | |
| | 87.5 to 108.0 MHz (100 kHz steps) | Record/playback | Solid permalloy head |
| | | Erasure | Double gap ferrite head |
| Sensitivity | 4.0 μ V (IHF) | Motor | DC servo motor |
| S/N 26 dB | 2.2 μ V | Recording system | AC bias 100 kHz |
| Antenna terminal(s) | 75 Ω (unbalanced) | Erasing system | AC erase 100 kHz |
| Amplitude Modulation (AM) | | Tape speed | 4.8 cm/s |
| Frequency range | 520 to 1710 kHz (10 kHz step) | Overall frequency response (+3, -6 dB) at DECK OUT | |
| Sensitivity | | NORMAL | 35 Hz to 14 kHz |
| S/N 20 dB (at 1000 kHz) | 560 μ V/m | S/N ratio | 50 dB (A weighted) |
| Audio performance (Amplifier) | | Wow and flutter | 0.18 % (WRMS) |

Panasonic®

© 2007 Matsushita Electric Industrial Co. Ltd.. All rights reserved. Unauthorized copying and distribution is a violation of law.

Fast forward and rewind time Approx. 120 seconds with
C-60 cassette tape

n DISC SECTION

Disc played [8 cm or 12 cm]

(1) CD-Audio (CD-DA)

(2) CD-R/RW (CD-DA, MP3* formatted disc)

(3) MP3*

*MPEG-1 Layer 3, MPEG-2 Layer 3

Bit rate

MP3 32 kbps to 320 kbps

Sampling frequency

MP3 32 kHz, 44.1 kHz, 48 kHz

CD-DA 44.1 kHz

Decoding 16 bit linear

Digital filter 8 fs

D/A converter MASH (1 bit DAC)

Pick up

Wavelength 780 nm

Beam Source Semiconductor laser

Audio output (Disc)

Number of channels 2 (Stereo) (FL, FR)

n GENERAL

Power supply AC 120 V, 60Hz

Power consumption 115 W

Power consumption in standby mode 0.28 W

Dimensions (W x H x D) 250 x 330 x 323 mm

Mass 7.1 kg

Operating temperature range +5 to +35°C

Operating humidity range 5 to 90% RH (no condensation)

n SYSTEM

SC-AK350 (PL) Music center: SA-AK350 (PL)

Speaker: SB-AK350 (PL)

For Information on speaker system, please refer to the original Service Manual (Order No. MD0704046CE) for SB-AK350PL-S.

Notes:

1. Specifications are subject to change without notice. Mass and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

Page

Page

| | |
|--|-----------|
| 1 Safety Precautions | 4 |
| 1.1. General Guidelines | 4 |
| 1.2. Before repair and adjustment | 4 |
| 1.3. Protection Circuitry | 5 |
| 1.4. Safety Part Information | 5 |
| 2 Prevention of Electro Static Discharge (ESD) to | |
| Electrostatically Sensitive (ES) Devices | 5 |
| 3 Handling Precautions For Traverse Deck | 7 |
| 4 Precaution of laser diode | 9 |
| 5 About Lead Free Solder (PbF) | 10 |
| 5.1. Service caution based on legal restrictions | 10 |
| 6 Accessories | 11 |
| 7 Operating Procedures | 12 |
| 7.1. Main Unit Key Buttons Operations | 12 |
| 7.2. Remote Control Key Buttons Operations | 13 |
| 8 New Features | 14 |
| 8.1. Using the Music Port | 14 |
| 9 Self diagnosis and special mode setting | 16 |
| 9.1. Service Mode Summary Table | 16 |
| 9.2. Special Mode Table 1 | 16 |
| 9.3. Reliability Test Mode (CRS1 Mechanism) | 19 |
| 9.4. Error code Table Display | 21 |
| 10 Assembling and Disassembling | 26 |
| 10.1. Caution | 26 |
| 10.2. Disassembly flow chart | 27 |

| | |
|---|-----------|
| 10.3. Main Parts Location | 28 |
| 10.4. Disassembly of Top Cabinet | 29 |
| 10.5. Disassembly of CD Changer Unit (CRS1) | 29 |
| 10.6. Disassembly of Rear Panel | 30 |
| 10.7. Disassembly of Main P.C.B. | 31 |
| 10.8. Disassembly of Transformer P.C.B. | 31 |
| 10.9. Disassembly of Power P.C.B. | 32 |
| 10.10. Disassembly of Front Panel Unit | 33 |
| 10.11. Disassembly for Panel P.C.B. | 34 |
| 10.12. Disassembly of Tact Switch P.C.B. | 34 |
| 10.13. Disassembly of Deck mechanism unit | 35 |
| 10.14. Disassembly of Deck P.C.B. | 35 |
| 10.15. Disassembly of Traverse Unit | 35 |
| 10.16. Disassembly for Deck Mechanism | 37 |
| 10.17. Disassembly of Deck Mechanism P.C.B. | 39 |
| 10.18. Disassembly of cassette lid | 40 |
| 10.19. Rectification for tape jam problem | 40 |
| 11 Service Fixture and Tools | 42 |
| 12 Service Positions | 42 |
| 12.1. Checking and Repairing of Main P.C.B. | 42 |
| 12.2. Checking and Repairing of Transformer P.C.B. | 43 |
| 12.3. Checking and Repairing of Panel, Deck & Deck | |
| Mechanism P.C.B. | 43 |
| 12.4. Checking and Repairing of Power P.C.B. | 44 |

| | | | |
|---|-----------|---|-----------|
| 13 Procedure for Checking Operation of Individual Parts of Deck Mechanism Unit | 45 | 19.3. (C) Panel Circuit | 70 |
| 13.1. Operation Check with Cassette Tape | 45 | 19.4. (D) Sub Panel Circuit & (G) Deck Mechanism Circuit | 71 |
| 13.2. Operation Check without Cassette Tape | 45 | 19.5. (E) Power Circuit | 72 |
| 14 Measurement And Adjustments | 47 | 19.6. (F) Deck Circuit | 74 |
| 14.1. Cassette Deck Section | 47 | 19.7. (H) Transformer Circuit | 75 |
| 15 Voltage and Waveform Chart | 49 | 20 Printed Circuit Board | 77 |
| 15.1. CD Servo P.C.B. | 49 | 20.1. (A) CD Servo P.C.B., (F) Deck P.C.B. & (G) Deck Mechanism P.C.B. | 78 |
| 15.2. Deck P.C.B. & Deck Mechanism P.C.B. | 49 | 20.2. (B) Main P.C.B. | 79 |
| 15.3. Main P.C.B. | 50 | 20.3. (C) Panel P.C.B. | 80 |
| 15.4. Panel P.C.B. | 50 | 20.4. (D) Sub Panel P.C.B. | 81 |
| 15.5. Power P.C.B. & Transformer P.C.B. | 51 | 20.5. (E) Power P.C.B. | 82 |
| 15.6. Waveform Chart | 52 | 20.6. (H) Transformer P.C.B. | 83 |
| 16 Wiring Connection Diagram | 53 | 21 Illustration of ICs, Transistors and Diodes | 85 |
| 17 Block Diagram | 55 | 22 Terminal Function of IC's | 86 |
| 17.1. CD Servo Diagram | 55 | 22.1. IC7001 (MN6627954MA) Servo Processor, Digital Signal Processor/Digital filter and D/A Converter | 86 |
| 17.2. Deck/ Deck Mechanism Diagram | 56 | 22.2. IC7002 (BA5948FPE2) IC 4CH Drive | 87 |
| 17.3. Main Diagram | 57 | 22.3. IC2801 (C2CBYY000482) System Microprocessor | 87 |
| 17.4. Panel Diagram | 59 | 23 Exploded Views | 89 |
| 17.5. Power Diagram | 60 | 23.1. Cabinet Parts Location | 89 |
| 17.6. Transformer Diagram | 61 | 23.2. Deck Mechanism Parts Location (RAA4403-S) | 91 |
| 18 Notes Of Schematic Diagram | 63 | 23.3. Packaging | 92 |
| 19 Schematic Diagram | 65 | 24 Replacement Parts List | 93 |
| 19.1. (A) CD Servo Circuit | 65 | | |
| 19.2. (B) Main Circuit | 66 | | |

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, ensure that all the protective devices such as insulation barriers and insulation papers shields are properly installed.
3. After servicing, check for leakage current checks to prevent from being exposed to shock hazards.

(This "Safety Precaution" is applied only in U.S.A.)

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Using an ohmmeter measure the resistance value, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1M\Omega$ and $5.2M\Omega$.
When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5k\Omega$, 10 watts resistor, in parallel with a $0.15\mu F$ capacitor, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. Should the measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

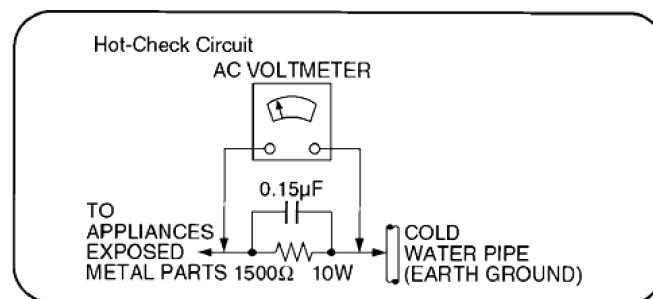


Fig. 1

1.2. Before repair and adjustment

Disconnect AC power, discharge Power Capacitors C5101, C5104, C5171, C5172, C5920, C5940 and C5950 through a 10Ω , 5W resistor to ground.

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 120V, 60 Hz in NO SIGNAL mode (volume min at CD mode) should be $\sim 500mA$.

1.3. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are “shorted”, or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note :

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

1.4. Safety Part Information

Safety Parts List:

There are special components used in this equipment which are important for safety.

These parts are marked by \triangle in the Schematic Diagrams & Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

Table 1

| Reference No. | Part No. | Part name & Description | Remarks |
|---------------|--------------|-------------------------|-------------|
| 360 | RAE0165A-V | TRAVERSE UNIT | \triangle |
| L5601 | G0B9R5K00001 | CHOKE COIL | \triangle |
| L5602 | G0B9R5K00001 | CHOKE COIL | \triangle |
| L5603 | G0B9R5K00001 | CHOKE COIL | \triangle |
| L5604 | G0B9R5K00001 | CHOKE COIL | \triangle |
| L5950 | ELF15N035AN | LINE FILTER | \triangle |
| T5950 | G4CYAYY00134 | MAIN TRANSFORMER | \triangle |
| T5951 | G4C2AAJ00005 | SUB TRANSFORMER | \triangle |
| Z5950 | ERZV10V511CS | ZENER | \triangle |
| RL5950 | K6B1AEA00015 | POWER RELAY | \triangle |
| F1 | K5D402APA008 | FUSE | \triangle |
| FP5940 | K5G702Z00004 | FUSE PROTECTOR | \triangle |
| FP5920 | K5G702A00009 | FUSE PROTECTOR | \triangle |
| FP5950 | K5G402A00025 | FUSE PROTECTOR | \triangle |
| JK5950 | K2AB2B000007 | JK AC INLET | \triangle |
| A2 | K2CB2CB00018 | AC CORD | \triangle |
| R5950 | ERC12UGK335D | 3.3M 1/2W | \triangle |
| C5920 | ECA1HM102E | 1000 50V | \triangle |

2 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor “chip” components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminium foil, to prevent electrostatic charge build up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder remover device. Some solder removal devices not classified as “anti-static (ESD protected)” can generate electrical charge to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.

6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminium foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize body motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).


3 Handling Precautions For Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by the static electricity of clothes or our human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

• Way of handling the traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FFC board).
3. Do not to apply excessive stress to the flexible board (FFC board). When removing or connecting the short pin, finish the job in as short time as possible.
4. Do not turn the variable resistor for laser power adjustment. (It is pre-adjusted during production time)

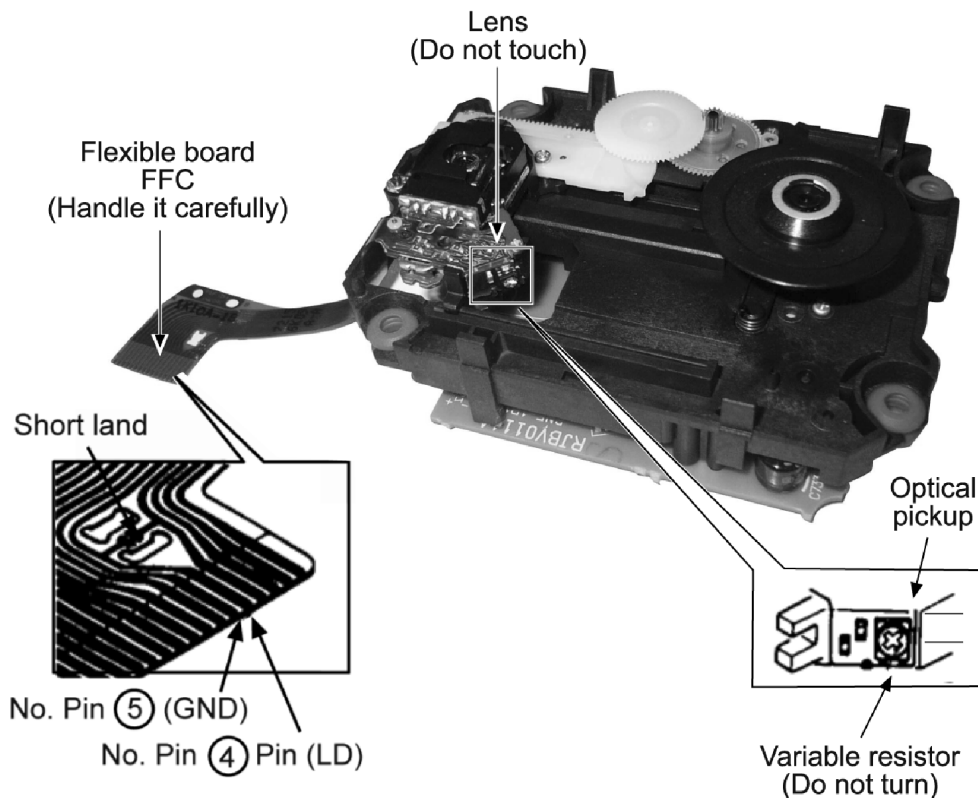

Grounding for electrostatic breakdown prevention

1. Human body grounding

Use the anti-static wrist strap to discharge the static electricity from your body.

2. Work table grounding


Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is place, and ground the sheet.

Caution :

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

Caution when replacing the Traverse Deck

The traverse deck has a short point shorted with solder to protect the laser diode against electrostatics breakdown. Be sure to remove the solder from the short point before making connections.

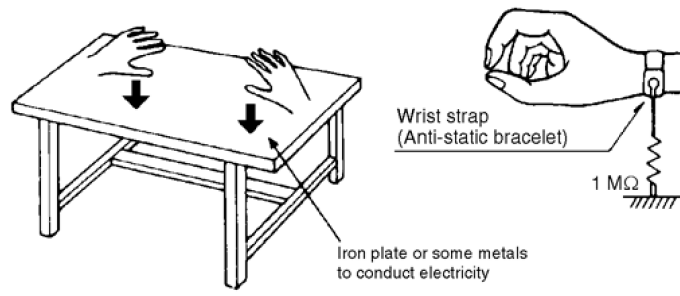

4 Precaution of laser diode

CAUTION:

This unit utilizes a class 1 laser diode in the optical pickup unit .

Invisible laser radiation is emitted from the optical pickup lens.

Wavelength: 780nm

When the unit is turned on:


1. Do not look directly into the optical pickup lens.
2. Do not use optical instruments to look at the optical pickup lens.
3. Do not adjust the preset variable resistor on the optical pickup lens.
4. Do not disassemble the optical optical pickup unit.
5. If the optical pickup is replaced, use the manufacturer's specified replacement pickup only.
6. Use of control or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION!

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

n Use of caution label

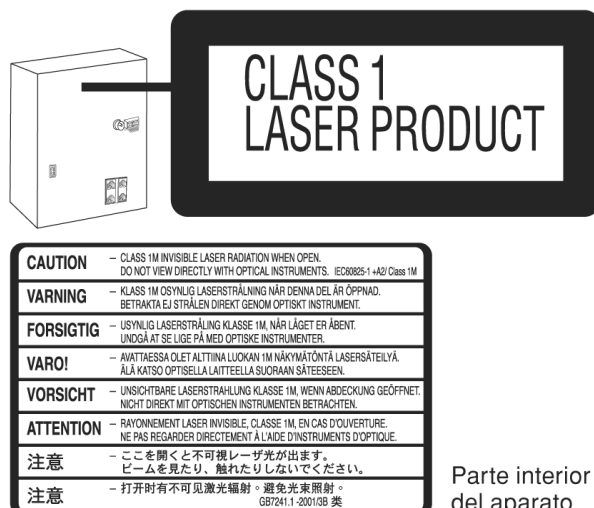

5 About Lead Free Solder (PbF)

5.1. Service caution based on legal restrictions

5.1.1. General description about Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30 degrees C (86°F) more than that of the normal solder.

Definition of PCB Lead Free Solder being used

| | |
|---|-----|
| The letter of "PbF" is printed either foil side or components side on the PCB using the lead free solder. (See right figure) | PbF |
|---|-----|

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
(Definition: The letter of "PbF" is printed on the PCB using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the PCB cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30 degrees C (662±86°F).


Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.
RFKZ03D01K----- (0.3mm 100g Reel)
RFKZ06D01K----- (0.6mm 100g Reel)
RFKZ10D01K----- (1.0mm 100g Reel)


Note

* Ingredient: Tin (Sn), 96.5%, Silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%


6 Accessories

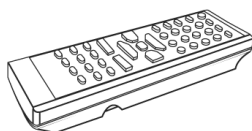


Remote Control



FM Antenna Wire

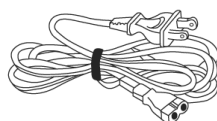


AC Cord

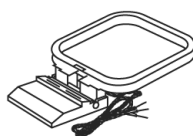


AM Loop Antenna

7 Operating Procedures

7.1. Main Unit Key Buttons Operations

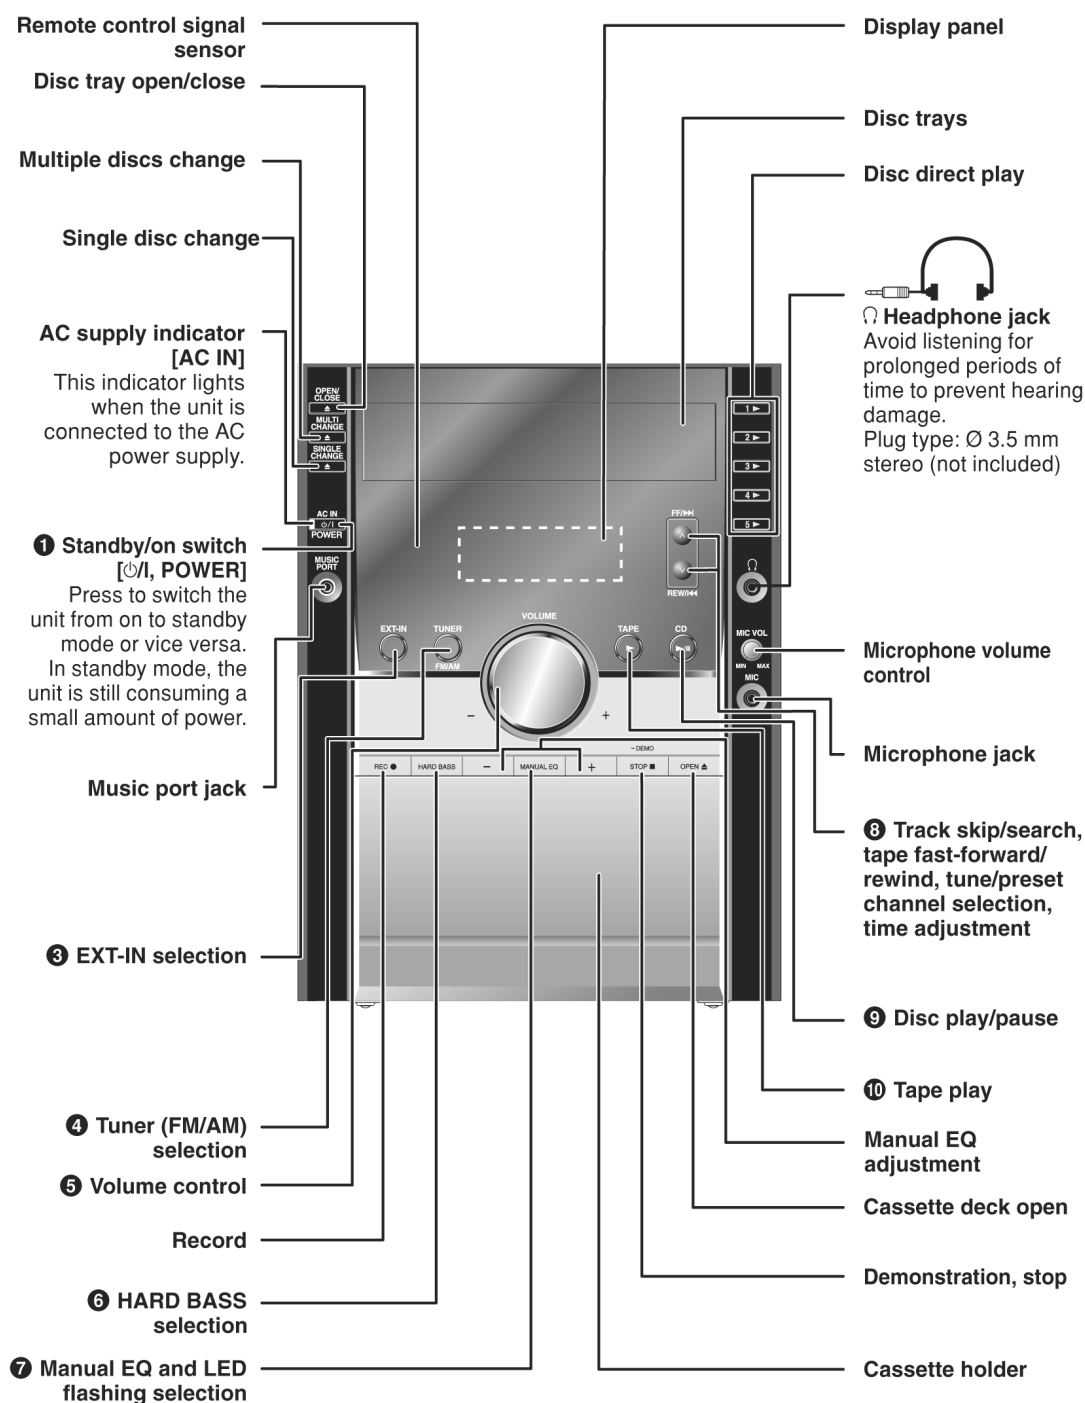

7.2. Remote Control Key Buttons Operations

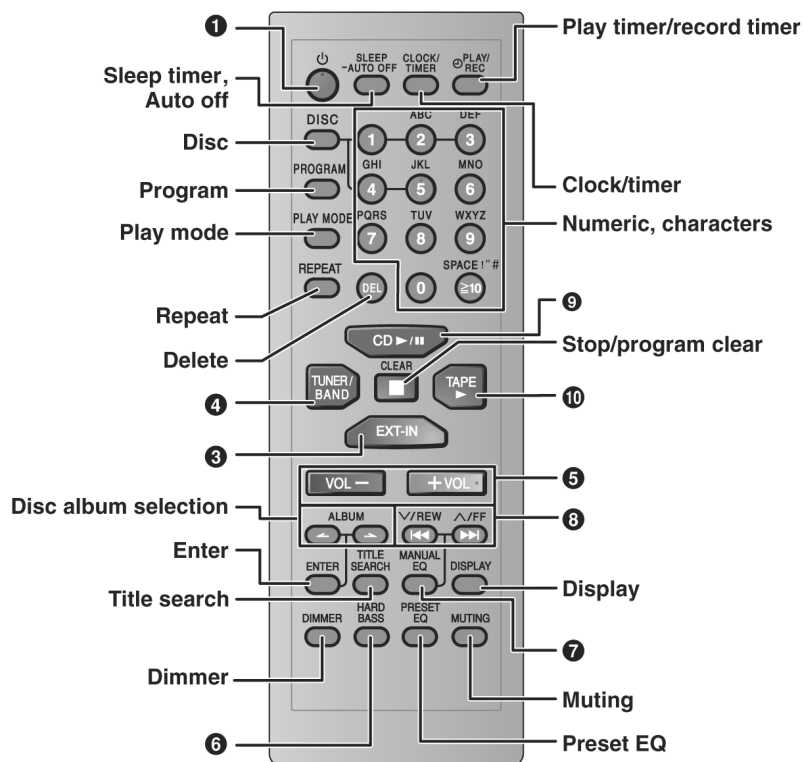

SLEEP -AUTO OFF

This auto off function allows you to turn off the unit in **disc, tape or USB** mode only after left unused for 10 minutes.

- Press and hold [-AUTO OFF] to activate the function.
- Press and hold [-AUTO OFF] again to cancel.
- The setting is maintained even if the unit is turned off.

DIMMER -PLAY/REC / DIMMER

To dim the display panel.

MUTING

To mute the sound.

- Press the button to activate.
- Press again to cancel.

8 New Features

8.1. Using the Music Port

This feature enables you to enjoy music from a portable audio equipment.


External unit

Connecting to a portable audio equipment

This feature enables you to enjoy music from a portable audio equipment.

Note:


All peripheral components and cables are sold separately.

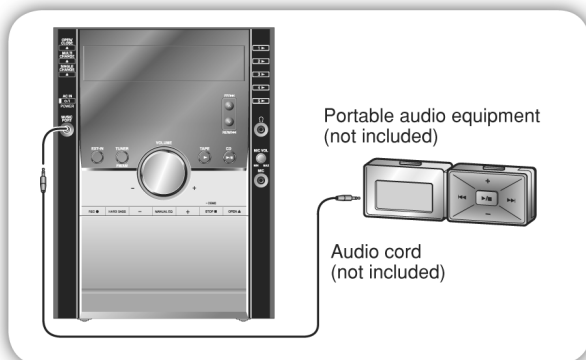

EXT-IN **Playing from a portable audio equipment**

Switch off the equalizer function (if there is any) of the portable audio equipment before you plug into the MUSIC PORT jack. Otherwise, sound from the speaker may be distorted.

- 1 Plug the audio cord into the MUSIC PORT jack.**
- 2 Press [EXT-IN] repeatedly until “MUSIC PORT” is displayed.**
- 3 Play the portable audio equipment.**

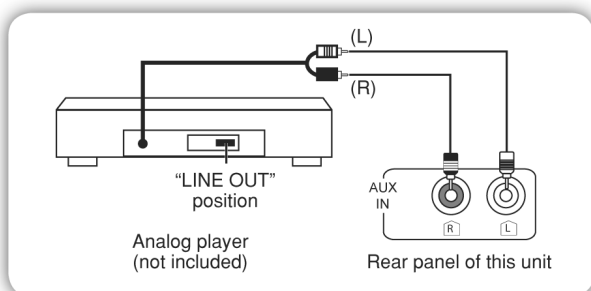

REC **Playing or recording from an external unit**

You can connect to an analog player with a built-in phone equalizer.

- 1 Press [EXT-IN] repeatedly until “AUX” is displayed.**
- 2 For listening :** Proceed to step 3.
For recording : Press [●, REC] on the main unit to start recording.
- 3 Start playback from the external source.**

Note:

- For details, refer to the instruction manual of the unit which is to be connected.
- When units other than those described above are to be connected, please consult your audio dealer.
- Sound distortion may occur when you use an adaptor other than the one supplied.

With reference to page 15 of the operating instruction manual.

9 Self diagnosis and special mode setting

This unit is equipped with functions for checking and inspecting namely: Self-Diagnostic and Test Mode.

9.1. Service Mode Summary Table






The service modes can be activated by pressing various button combination on the main unit and remote control unit. Below is the summary for the various modes for checking:








| Player button | Remote control button unit | Application | Note |
|---------------|----------------------------|---------------------------|---|
| [■] | [4], [7] | Entering into Doctor Mode | Refer to the section, "9.2 Special Mode Table 1 for more information. |

| Mode | Remote control button unit | Application | Note |
|----------------|--------------------------------|---|--|
| In Doctor Mode | Main unit [STOP, ■], [4]+[7] | Display of firmware version and EEPROM checksum | Refer to the section, "9.2.1 for more information. |
| | [4] | Set for cold start when reset start is executed the next time | Refer to the section, "9.2 for more information. |
| | [Muting] | Clock Setting | Refer to the section, "9.2 for more information. |
| | [0] | Tape Eject Test | Refer to the section, "9.2 for more information. |
| | [DIMMER] | All segment display for the FL | Refer to the section, "9.2 for more information. |
| | [DISC] | CRS1 Mechanism checking | Refer to the section, "9.2 for more information. |
| | [7] | Volume 50 Setting check | |
| | [8] | Volume 41 Setting check | |
| | [9] | Volume 35 Setting check | |
| | [>10] | Volume 0 Setting check | |
| | [PRESET EQ] | EQ Off | |
| | [H. Bass] | EQ Heavy | |
| | [PROGRAM] | HIC force MUTE ON/ OFF | |
| | [5] | CD To Tape recording Inspection | |
| | [6] | Tape record's playback | |
| | [SLEEP] | TPS Inspection | |
| | [<] | FM Tuning check | |
| | [>] | Tuner STEREO/ forced MONO | |
| | [◀▶] | FM Checking | |
| | [▶▶] | AM Checking | |

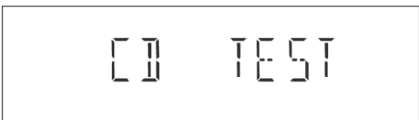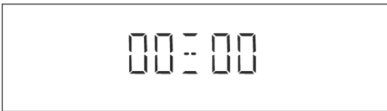9.2. Special Mode Table 1

| Item | FL Display | Key Operation |
|-----------------------|---|---|
| Mode Name | Description | Front Key |
| Self -Diagnostic Mode | To enter into self diagnostic checking for main unit. | <p>1. Select [TAPE, ▶] for TAPE mode (Ensure no tape is inserted).</p> <p>2. Press and hold [STOP, ■] button for 3 seconds follow by [FF/▶▶].</p> <p>To exit, press [◻/I, POWER] button on main unit or remote control.</p> |

| Item | | FL Display | Key Operation |
|------------------------------------|--|--|---|
| Mode Name | Description | | Front Key |
| Doctor Mode | To enter into Doctor Mode for checking of various items and displaying checksum and software version. FL Display sequence: Display 1 → 2 | <p>1. All segments will light up for 1 second. (Display 1)</p>  <p>↑ EEPROM Checksum (if applicable) ↑ Opecon Version</p> <p>2. The Check Sum of EEPROM and firmware version will be display. (Display 2)</p>  <p>* ROM correction ** Firmware version No:</p> | <p>In any mode:</p> <p>1. Press [STOP, ■] button on main unit follow by [4] and [7] on remote control.</p> <p>To exit, press [ENTER] button on remote control or [⏻/I, POWER] button on main unit.</p> |
| CD Test Mode | To enter into checking the reliability of changer unit. |  | <p>In any mode:</p> <p>1. Select [CD, ►/■] for CD mode.</p> <p>2. Press and hold [STOP, ■] button for 3 seconds follow by [FF/►►].</p> <p>To exit, press [⏻/I, POWER] button on main unit or remote control.</p> |
| CD Auto Adjustment | To check the CD auto adjustment result for FLOCK, TLOCK and CLVS. FLOCK: Focus Lock TLOCK: Traverse Lock CLVS: Constant Linear Velocity Speed |  <p>↑ Self adjustment result ↑ CLVS (I: NG, O: OK) ↑ TLOCK (I: NG, O: OK) ↑ FLOCK (I: NG, O: OK)</p> | <p>In CD Test Mode:</p> <p>1. Press [0] button on the remote control.</p> <p>To exit, press [⏻/I, POWER] button on main unit or remote control.</p> |
| CD Changer Reliability Test (CRS1) | To determine the reliability of CD Changer Unit. (For more information, refer to section 9.3) |  | <p>In Self-Diagnostic Mode:</p> <p>1. Select [CD, ►/■] for CD mode.</p> <p>2. Press [REW/◀◀] button.</p> <p>To exit, press [⏻/I, POWER] button on main unit. (The tray will return to PLAY position and then power off)</p> |
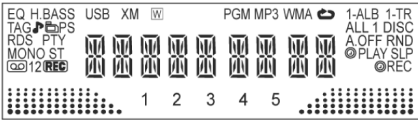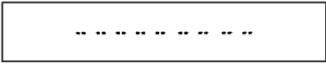
| Item | | FL Display | Key Operation |
|---------------------|---|--|---|
| Mode Name | Description | | Front Key |
| SRVC_TRV | To unlock the traverse unit for service. FL Display sequence: Display 1 → 2 | (Display 1)  (Display 2)  | In TAPE mode: 1. With no cassette tape inserted, 2. Press [STOP, ■], [FF/▶▶] button on main unit. 3. Press [SINGLE CHANGE] on main unit. To exit, press [⏻/I, POWER] button on main unit. |
| Open/ Close Test | To check the function operation of changer unit. (For more information, refer to 9.3) |  | In doctor mode: 1. Press [DISC] on remote control. To exit, press [ENTER] button on remote control or [⏻/I, POWER] button on main unit. |
| Tape Eject Test | To check on the tape eject function (For deck 1/2) |  | In doctor mode: 1. Press [0] button on remote control. |
| FL Display Test | To check the FL segments display (All segments will light up and LED will blink at 0.5 second interval) |  | In doctor mode: 1. Press [DIMMER] button on remote control. |
| Cold Start | To activate cold start upon next AC power up. |  | In doctor mode: 1. Press [4] button on remote control. To exit, press [ENTER] button on remote control or [⏻/I, POWER] button on main unit. |
| Clock Setting Check | To indicate that a clock time was set properly |  | In doctor mode: 1. Press [MUTING] button on remote control. |

9.2.1. EEPROM Checksum (ROM Correction)

Purpose: To check for microprocessor firmware version and EEPROM checksum (ROM correction).


Below are the procedures for this mode.

Step 1: Enter into Doctor mode (for more information, refer to section 9.2 on the key operation to enter into this mode).


Step 2: Check for firmware version and EEPROM checksum (By pressing STOP button on main unit followed by “4” and “7” on remote control).

- When entering into DOCTOR MODE, the firmware version and checksum data of EEPROM (if applicable) will appear on FL display. Below is the information on the EEPROM IC (ROM correction) under 3 possible situations:


1. In the case that the correction point existence data is other than 0 (ie. correction file exists), EEPROM checksum display for the microprocessor shall be made after calculating checksum by summing up the content of data area from EEPROM IC.

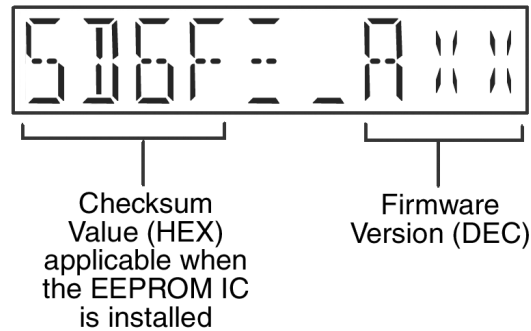

2. In the case when no EEPROM IC is installed. It is display as below (no display of checksum data)

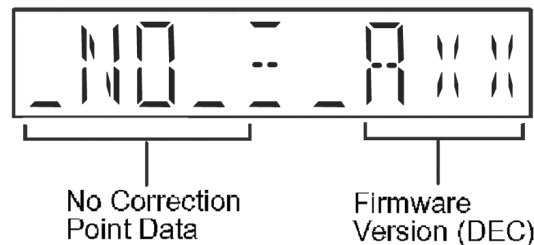


3. In cases that the filename is different even though a EEPROM is installed, or no correction file exists, [NG] shall be displayed (the correction point existence data is set to 0 at this condition).

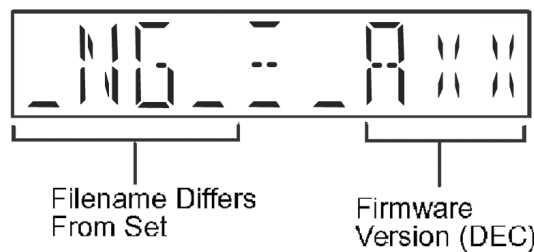


Note: Microprocessor firmware refers to version number for microprocessor IC located on PANEL P.C.B.. It is subject to change which would be updated accordingly. ROM correction checksum refers to the HEX code that is displayed upon key buttons pressed if an EEPROM is loaded in the unit.

9.3. Reliability Test Mode (CRS1 Mechanism)


Below is the process flow chart of ageing for the CD changer unit. (CRS1)




Mode 3 PLAY-CHANGE-OPEN mode aging (1 cycle) CHANGE while PLAY 1


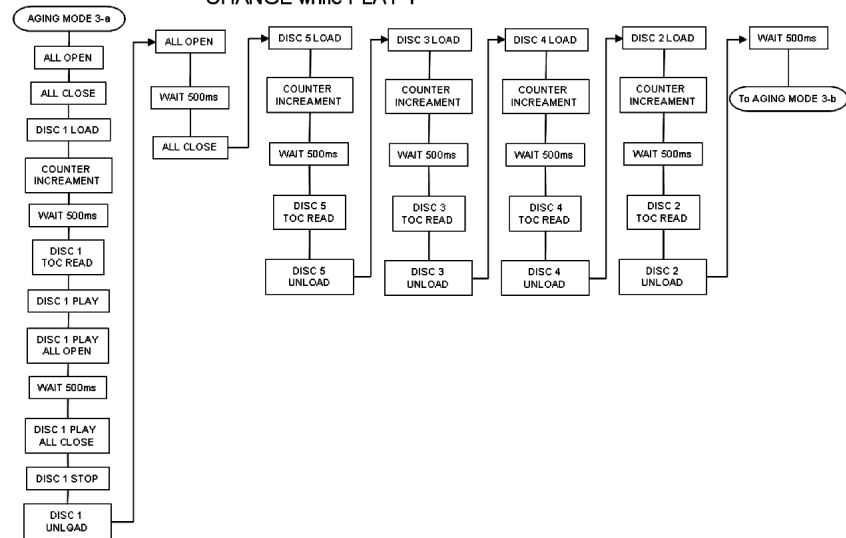


Mode 3 PLAY-CHANGE-OPEN mode aging (1 cycle) CHANGE while PLAY 5

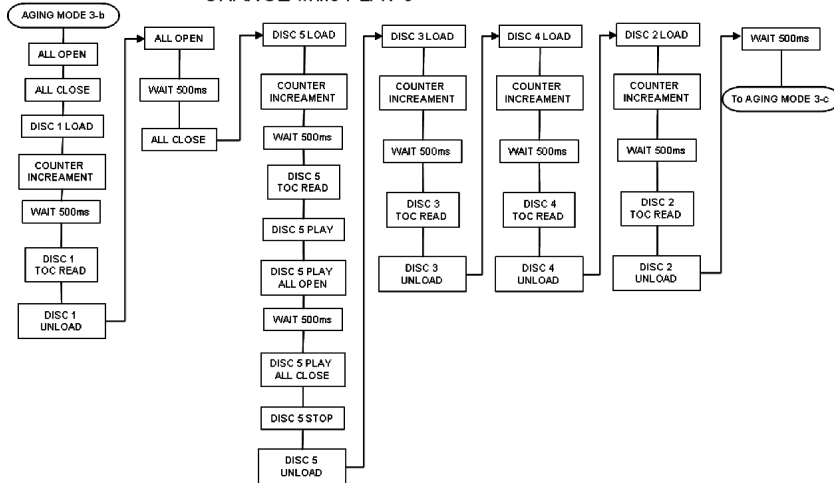

Mode 3 PLAY-CHANGE-OPEN mode aging (1 cycle) CHANGE while PLAY 3

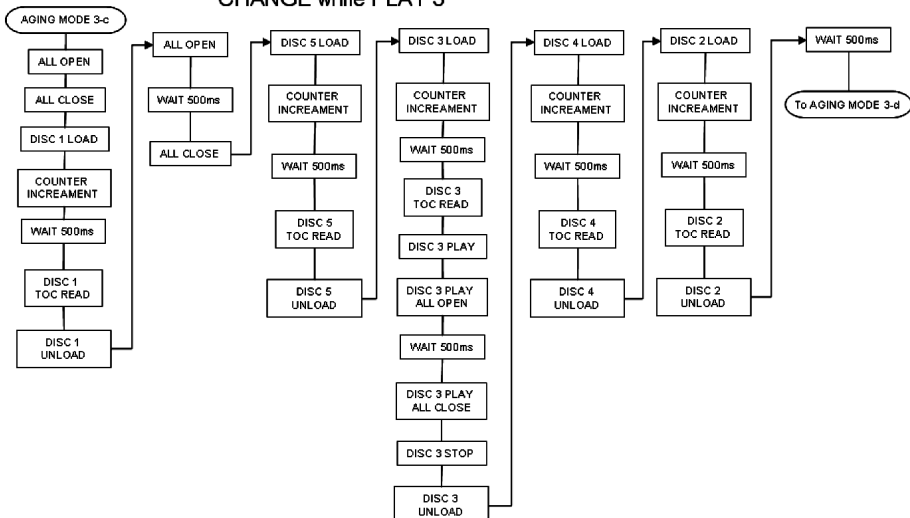

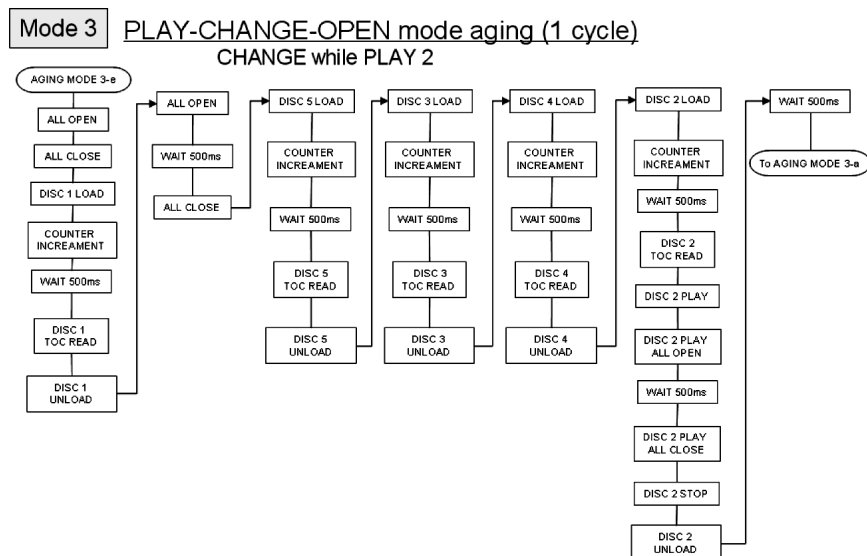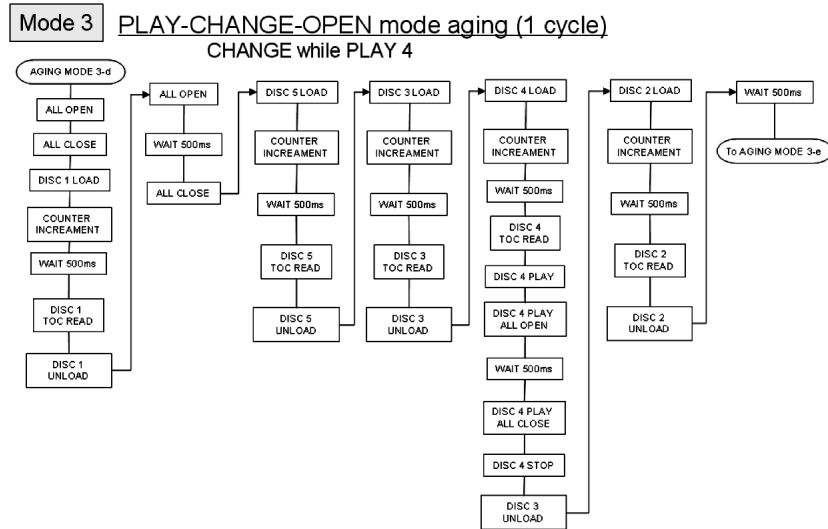


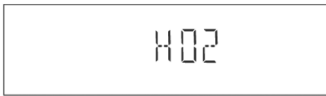


9.4. Error code Table Display

Self-Diagnosis Function (refer Section 9.2) provides information on any problems occurring for the unit and its respective components by displaying the error codes. These error code such as U**, H** and F** are stored in memory and held unless it is cleared.





The error code is automatically display after entering into self-diagnostic mode.

9.4.1. Error Code Table for Deck Mechanism



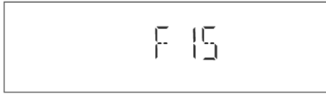


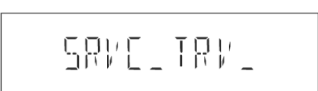

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|--------------------|---|--|--|
| H01 | Mode SW abnormal | Normal operation during mecha transition, MODE SW abnormal is memorized. The content of abnormality can be confirmed in the abnormal detection mode explained in the later section. |  | For deck mechanism unit. Press [STOP, ■] on main unit for next error. |

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|---------------------|----------------------|--|--|
| H02 | Rec INH SW abnormal | |  | For deck mechanism unit. Press [STOP, ■] on main unit for next error. |
| H03 | HALF SW abnormal | |  | For deck mechanism unit. Press [STOP, ■] on main unit for next error. |
| F01 | Reel pulse abnormal | |  | For deck mechanism unit. Press [STOP, ■] on main unit for next error. |


9.4.2. Error Code Table For CD Changer Block

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|--|--|--|---|
| F15 | RESET SW abnormal | REST SW: ON is not detected within the specified time. |  | For CD unit (For Traverse). Press [STOP, ■] on main unit for next error. |
| F26 | Transmission error between CD Servo LSI IC and microprocessor IC | When set to CD mode, the sense signal does not turn "Low", a fail safe time after system command transmission is sent. |  | For CD unit (For Traverse). Press [STOP, ■] on main unit for next error. |
| IHMS | Cam gear abnormality | Cam gear does not rotate to "HOME" position. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| ICSL | Cam gear/gear units abnormal | Cam gear does not rotate to "PLAY" driving position and hence does not drive playing tray to "STOCK" position. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|-----------------------------------|---|----------------------|--|
| ISTK | Drive rack/gear assembly abnormal | The tray drive rack does not move to "STOCK" position. (Tray does not move to "STOCK" position) | ISTK | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| IPLY | Drive rack/gear assembly abnormal | The tray drive rack does not move to "PLAY" position. (Tray does not move to "PLAY" position) | IPLY | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| ITOP | UD assembly | UD Rack does not move to front direction. This lead to UD base not raise to top position. | ITOP | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| IUDS | UD assembly | After TOP SW is detected, UD rack does not move into tray 1 position. | IUDS | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| HOME | Cam gear/gear assembly abnormal | Cam gear does not move to "HOME" position under following conditions 1. After tray is load to "PLAY" position. 2. After tray is unload to "STOCK" position. | HOME | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| LOAD | Tray drive assembly abnormal | Tray unit does not move from "STOCK" to "PLAY" position | LOAD | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| UNLD | Tray drive assembly abnormal | Tray unit does not move from "PLAY" to "STOCK" position | UNLD | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|---|---|--|--|
| PDRV | Cam gear/gear assembly abnormal | Cam gear does not move from "HOME" to "PLAY" drive position. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| UDU | UD base assembly abnormal | UD Base assembly does not move upwards from tray 5 to tray 2 |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| UDD | UD base assembly abnormal | UD Base assembly does not move downwards from tray 1 to tray 5. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| F1NG | Fail - safe mode. (For open/close tray unit(s)) | When the tray open operation is performed, it fails to open. It will automatically close all trays after the time-out by the microprocessor. During this time when it fails, the error code will appear. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| F2NG | Fail - safe mode. (For open/close tray unit(s)) | When the tray close operation is performed, it fails to close. It will automatically open all trays after the time-out by the microprocessor. During this time when it fails, the error code will appear. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| SRVC_TRV | To unlock the traverse unit for service | 1. All trays set to "STOCK" position 2. Mechanism set to tray 5 3. Cam gear set to "HOME" position |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |
| RSET | Cam gear jam/close sensor faulty | During tray re-open, the cam gear will rotate in the opposite direction to reset the cam gear position. When it fails, the error code will appear. |  | For CD changer unit (CRS1). Press [SINGLE CHANGE] on main unit for next error. |

9.4.3. Error Code Table For Power Supply

| Error Code | Diagnosis Contents | Description of error | Automatic FL Display | Remarks |
|------------|------------------------------|--|--|--|
| F61 | Power Amp IC output abnormal | Upon power on, PCONT=HIGH, DCDET=L after checking LSI. |  | For power. Press [STOP, ■] on main unit for next error. |

9.4.4. CRS1 Error Code display

CRS1 Error Code display

1. The errors that occurred in CRS1 Mechanism can be recalled and displayed, in the order of the occurrence under self-diagnostic for procedures to enter this mode.

· Only the first 5 errors will be memorized (in backup memory). The subsequence error shall be ignored and not memorize.

For system with EEPROM as memory backup, memory space in EEPROM is necessary.

2. To display all error code memorized

In CRS1 Self-Diagnostic mode, press [SINGLE CHANGE] to display subsequence error code.

It shall repeat after reaching error no. 5.

e.g.:

[1 _ _ _ _ I H M S] → [SINGLE CHANGE]

[2 _ _ _ _ I T O P] → [SINGLE CHANGE]

[3 _ _ _ _ H O M E] → [SINGLE CHANGE]

[4 _ _ _ _ L O A D] → [SINGLE CHANGE]

[5 _ _ _ _ U D D] → [SINGLE CHANGE]

3. To clear the error code memory

In CRS1 Self-Diagnostic mode, long press [SINGLE CHANGE] key (2s or more)

10 Assembling and Disassembling

10.1. Caution

Special Note:

This model uses a new CD changer unit CRS1. In this following section does not contain the necessary disassembly & assembly information for the CD changer unit (CRS1) except the disassembly & assembly of traverse unit. Kindly refer to the original service manual for the CD changer unit. (Order No. MD0509368C0).

“ATTENTION SERVICER”

Some chassis components may have sharp edges. Be careful when disassembling and servicing.

1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures.
Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.
4. Refer to the Parts No. on the page of “Parts Location and Replacement Parts List” (Section 24), if necessary.

Caution:

After replacing of CD Changer Unit, ageing test is necessary. Please confirm operation for CD Changer Unit.

Below is the list of disassembly sections

- Disassembly of Top Cabinet
- Disassembly of Rear Panel
- Disassembly of CD Changer Unit (CRS1)
- Disassembly of Main P.C.B.
- Disassembly of Transformer P.C.B.
- Disassembly of Power P.C.B.
- Disassembly of Front Panel Unit
- Disassembly of Panel P.C.B.
- Disassembly of Tact Switch P.C.B.
- Disassembly of Deck Mechanism Unit
- Disassembly for Deck P.C.B.
- Disassembly of Traverse Unit
- Disassembly of Deck Mechanism
- Disassembly of Deck Mechanism P.C.B.
- Disassembly of cassette lid
- Rectification for tape jam problem

CAUTION NOTE:

Please use original screws and at correct locations.


Below shown is part no. of different screws types used:

| Screw Type | Part No. |
|------------|--------------|
| a | RHD30007-1SJ |
| b | RHD30119-S |
| c | XTW3+12TFJ |
| d | RHD30111-3 |
| e | XTW3+10TFC |
| f | RHD26046-L |
| g | XTWS3+6TFJ |
| i | XTV3+10GFJ-M |
| p | XTW2+5LFJ |
| q | XTW26+10SFJ |
| r | RHD26022-1 |
| s | XYC2+JF17FJ |


10.2. Disassembly flow chart

The following chart is the procedure for disassembling the casing and inside parts for internal inspection when carrying out the servicing.

To assemble the unit, reverse the steps shown in the chart as below.

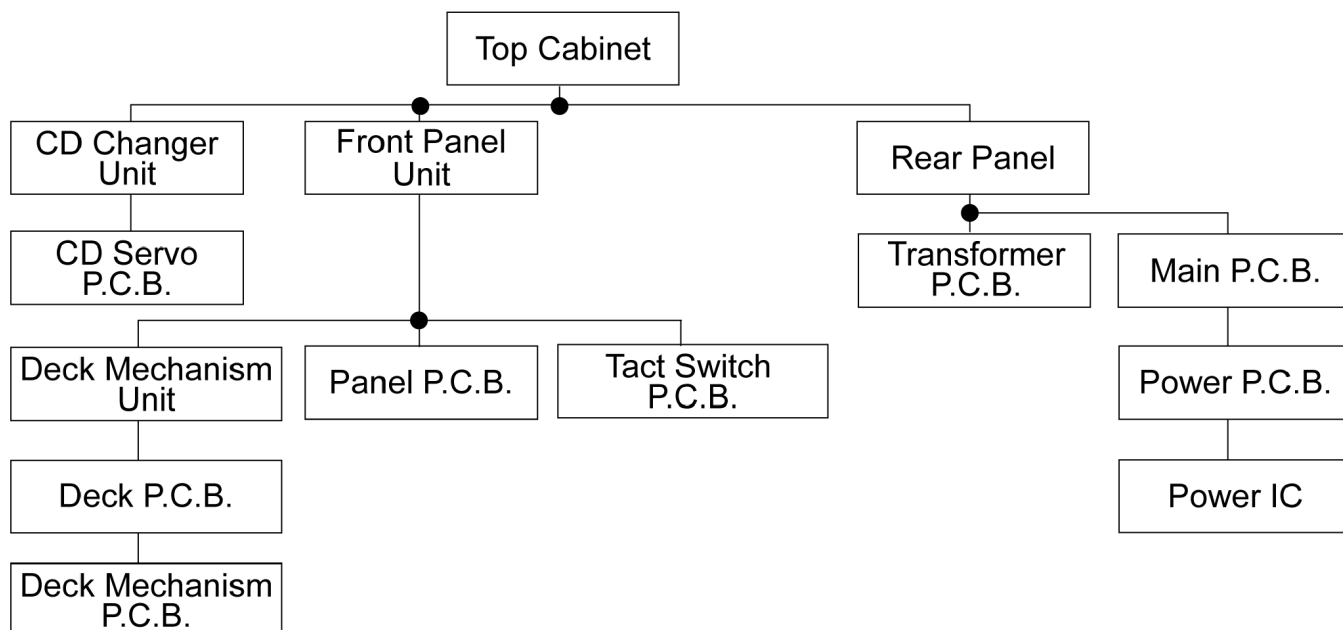

10.3. Main Parts Location

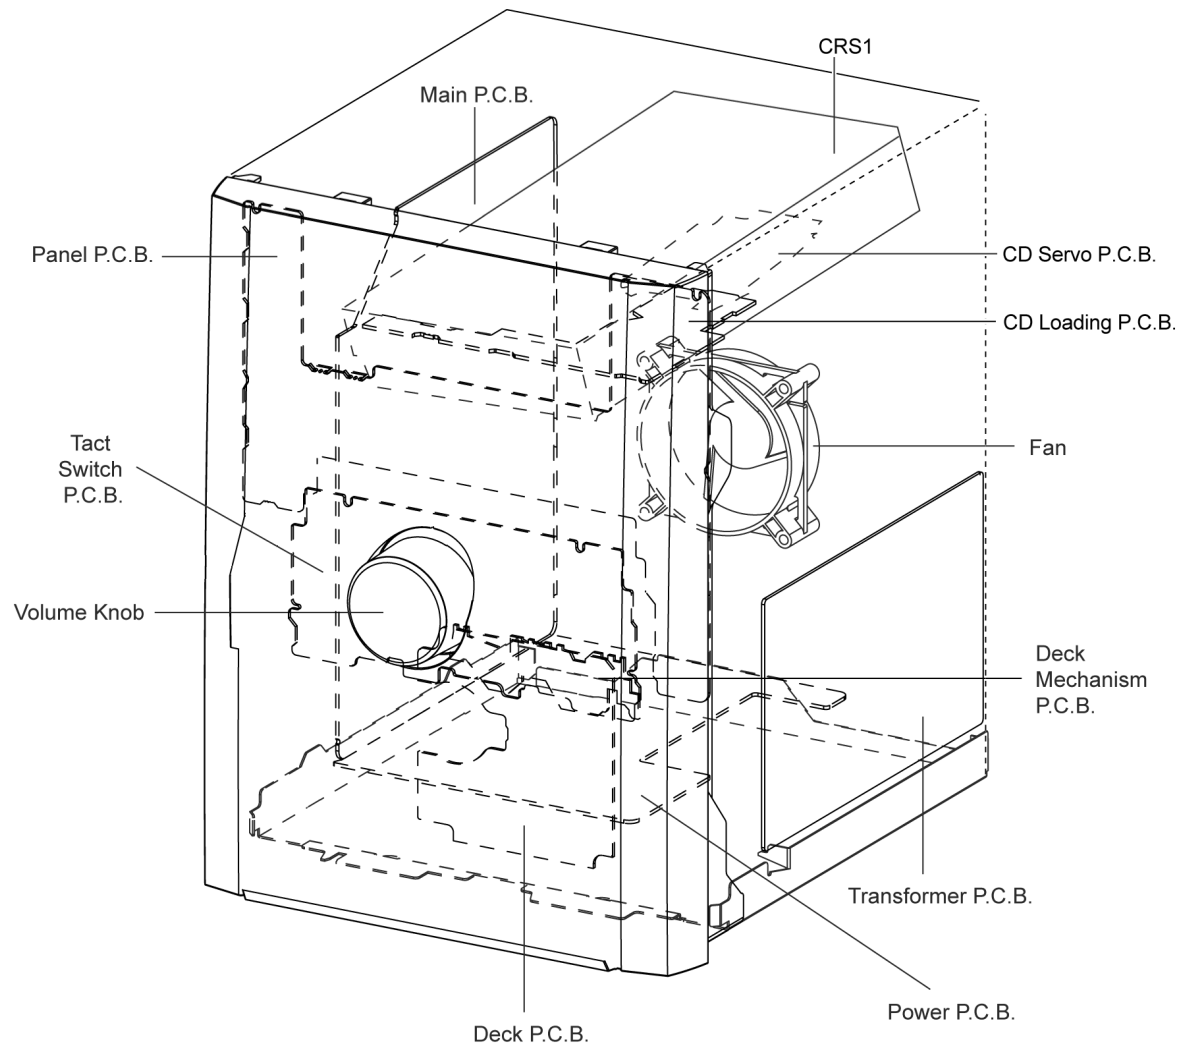

10.4. Disassembly of Top Cabinet


Step 1 Remove 3 screws on both sides on top cabinet.

Step 2 Remove 5 screws at the rear.

Step 3 Lift the sides of top cabinet outwards.

Step 4 Push the top cabinet backwards to release catches.


Step 5 Remove top cabinet.

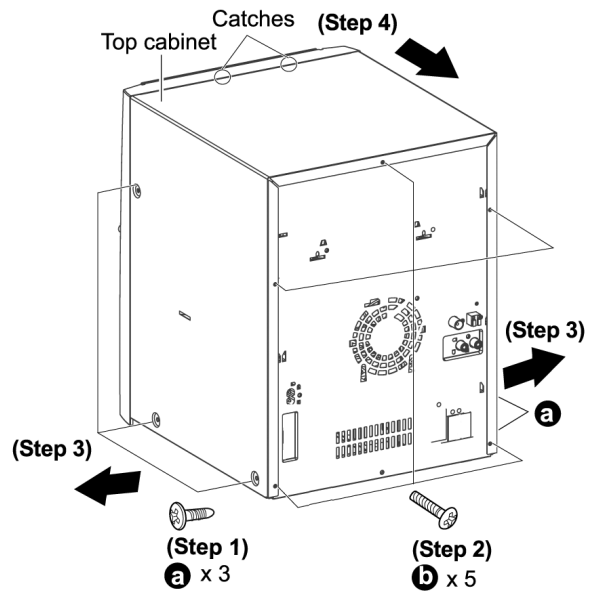



10.5. Disassembly of CD Changer Unit (CRS1)

· Follow the (Step 1) - (Step 5) of Item 10.4


Step 1 Remove 1 screw at rear panel.

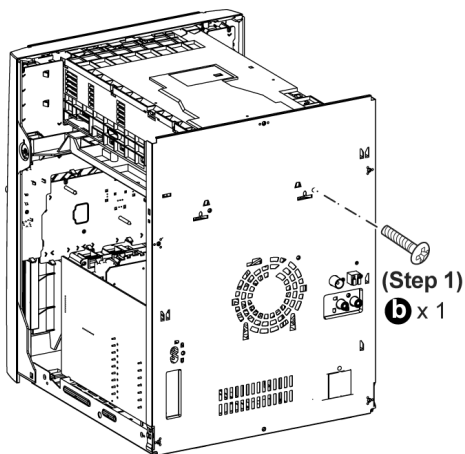

Step 2 Detach the FFC cables at connectors (CN2801 & CN2805) on Main P.C.B..

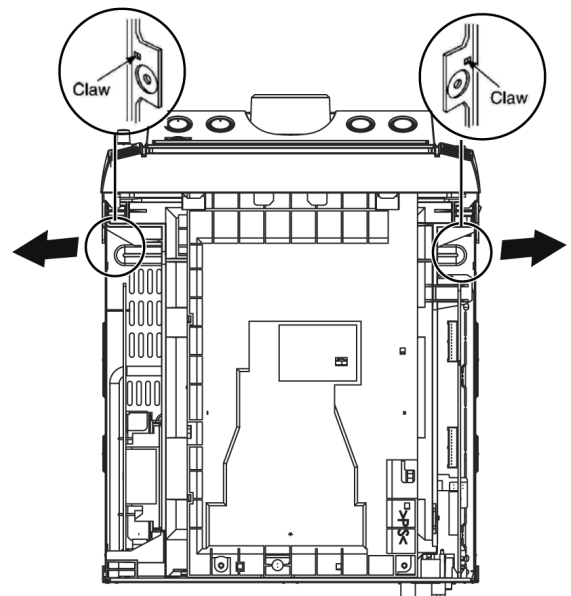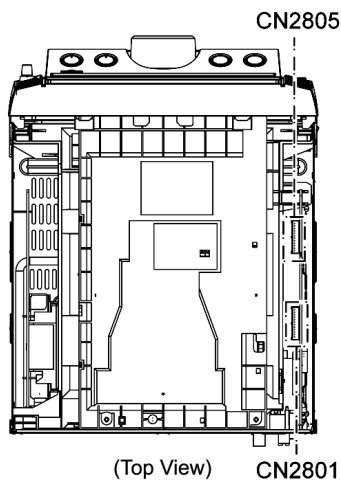


(Step 4)

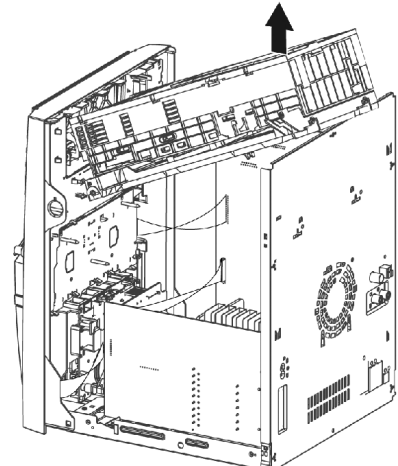

Step 3 Release the claws outwards on both ends.

Step 4 Lift the CD changer unit upwards to remove it.

Disassembly of Mecha Chassis

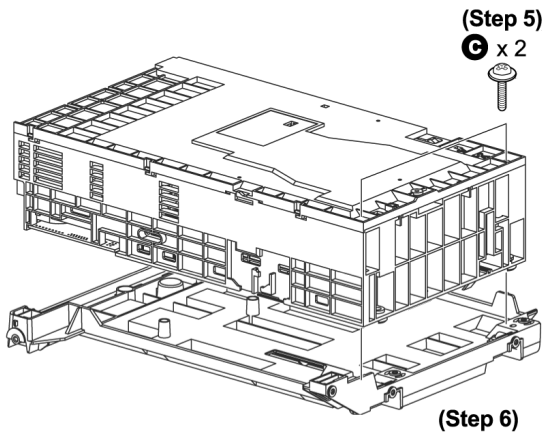

Step 5 Remove 2 screws.

Step 6 Remove the Mecha Chassis.


Note:

For disassembly & assembly of traverse unit, please refer to section 10.15 of this service manual. Please refer to original Service Manual for the Disassembly and Assembly of the CD Changer Unit (CRS1).


10.6. Disassembly of Rear Panel

Follow the (Step 1) - (Step 5) of Item 10.4


Step 1 Remove 7 screws.

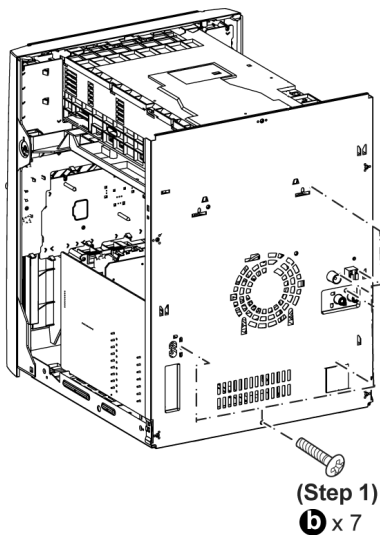

Step 2 Detach cable at connector (CN2810) on Main P.C.B..

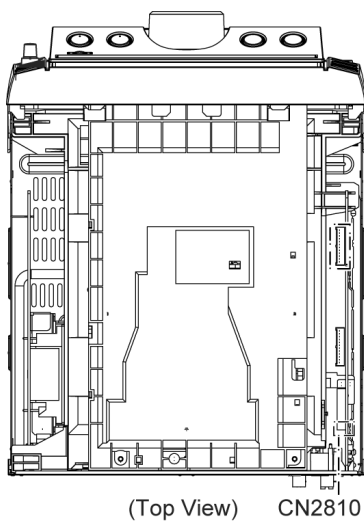

Step 3 Detach FFC cables at connectors (CN2801 & CN2805) on Main P.C.B..

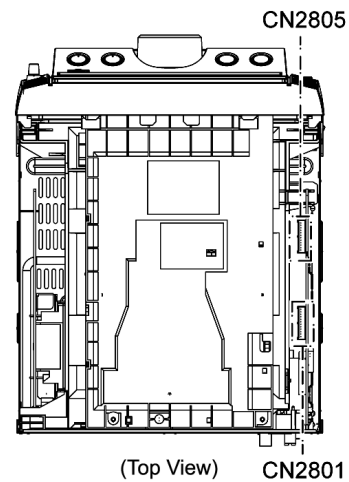


Step 4 Remove rear panel.

10.7. Disassembly of Main P.C.B.

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 4) of Item 10.6

Step 1 Detach FFC cables at connectors (CN2803 & CN2806) on Main P.C.B..

Step 2 Remove Main P.C.B..

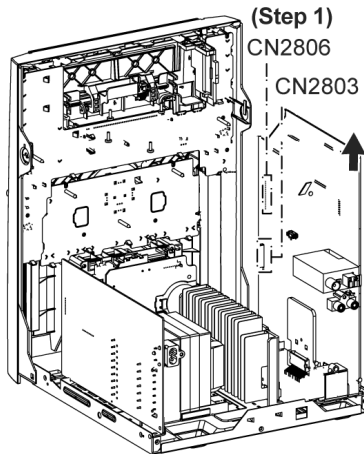


10.8. Disassembly of Transformer P.C.B.

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 4) of Item 10.6

CAUTION: HOT!!
DO NOT TOUCH THE
HEAT SINK

Step 1 Detach cables at connectors (CN5950 & CN5951) on Transformer P.C.B..

Step 2 Remove 3 screws (Mounting screws for transformer to bottom chassis).

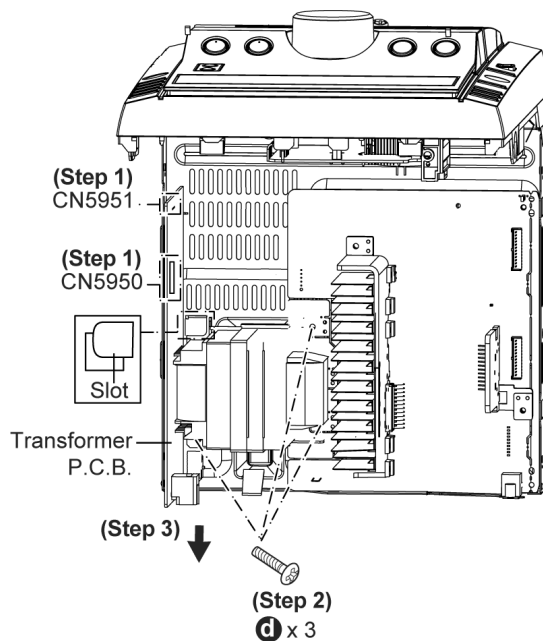


Step 3 Push the Transformer P.C.B. backwards to remove it.

10.9. Disassembly of Power P.C.B.

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 4) of Item 10.6
- Follow the (Step 1) - (Step 3) of Item 10.7

**CAUTION: HOT!!
DO NOT TOUCH THE
HEAT SINK**

Step 1 Remove the 4 screws on Power P.C.B..

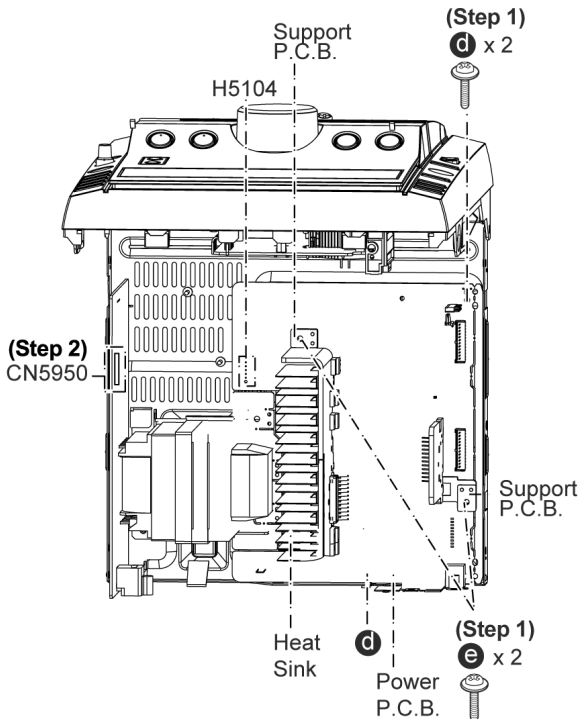

Step 2 Detach cable at connector (CN5950) on Transformer P.C.B..


Step 3 Remove Power P.C.B..

Note:


Insulate the Power P.C.B. with insulation material to avoid short circuit.

• **Replacement of Power Amp IC (IC5301).**

Step 1 Flip the Power P.C.B. over and desolder the pins.

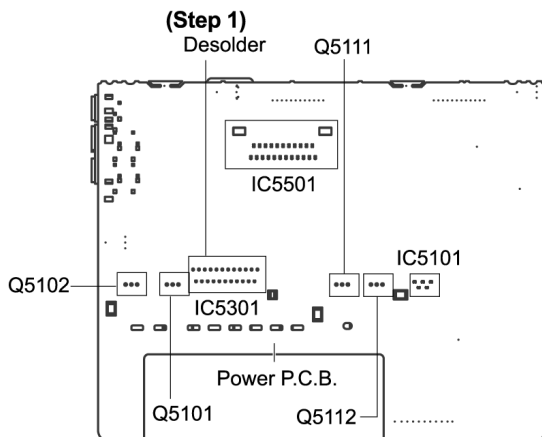

Step 2 Remove 1 screw and IC clip.

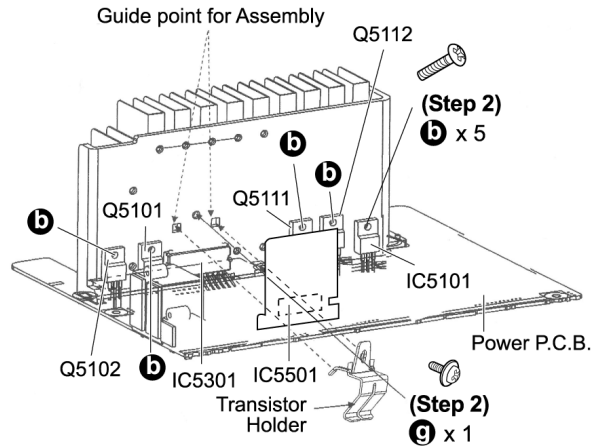


Step 3 Remove IC5301 from heat sink unit.


Note: For disassembly of IC5101, Q5101, Q5102, Q5111 and Q5112 repeat (Step 1) to (Step 2). (For information, IC5101, Q5101, Q5102, Q5111 and Q5112 does not have IC clip.)

• **Replacement of IC5501.**

Step 1 Flip the Power P.C.B. over and desolder the pins of IC5501.

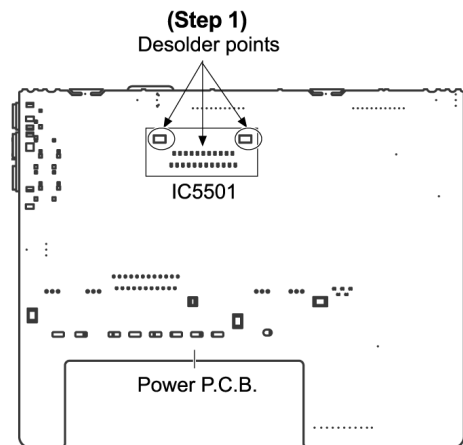


Step 2 Twist the heat sink leg at as arrow shown.

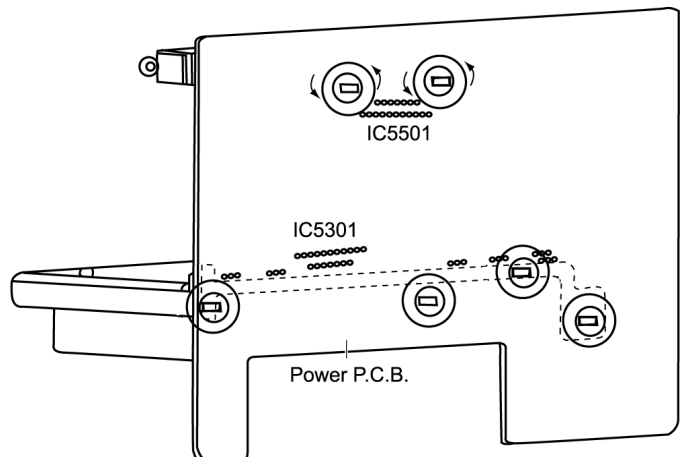

Step 3 Remove up the heat sink sub assembly (with IC5501).

Step 4 Remove screw and IC clip.

Step 5 Remove IC5501 from the sub assembly.

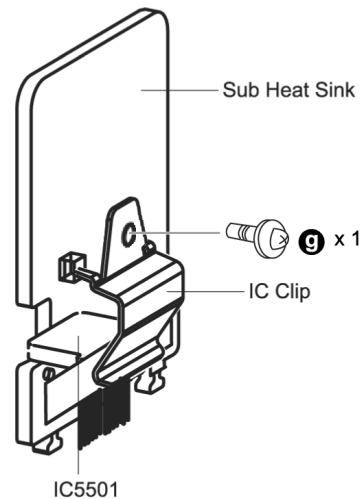


Caution: During assembly of the heat sink sub assembly (with IC5501) all soldering points is touch-up to avoid dry-joints.

10.10. Disassembly of Front Panel Unit


- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5

Step 1 Detach FFC cables at connectors (CN2803 & CN2806) on Main P.C.B..


Step 2 Detach cable at connector (CN5951) on Transformer P.C.B..

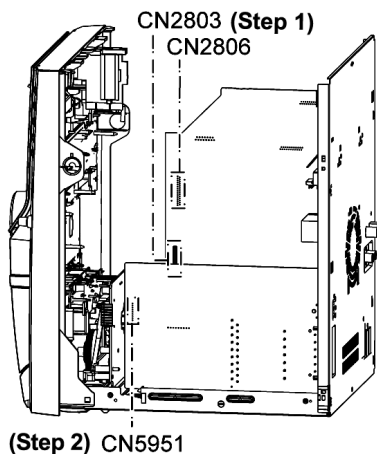

Step 3 Bent the front panel unit slightly forward as arrow shown.

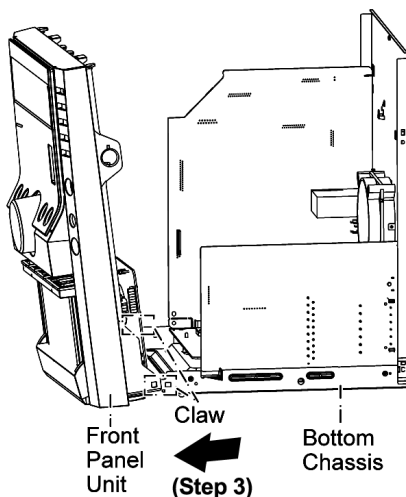

Step 4 Release 2 claws outwards.

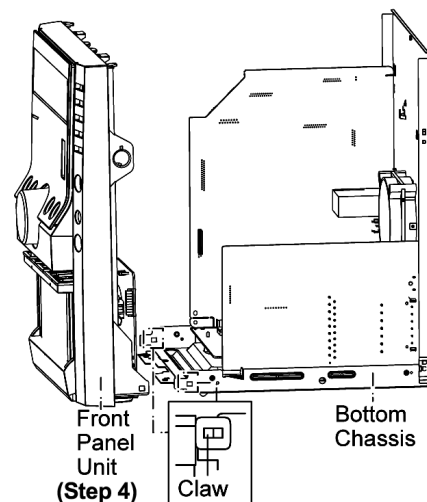


Step 5 Remove the front panel unit.

Note: Ensure 2 claws located at the bottom chassis is seated into the 2 slots at bottom of front panel at 2 catches (one on each side) of bottom chassis to be aligned to front panel's slot. Assembly is secured upon hearing clicking sound.

10.11. Disassembly for Panel P.C.B.


- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10

Step 1 Remove the volume knob.

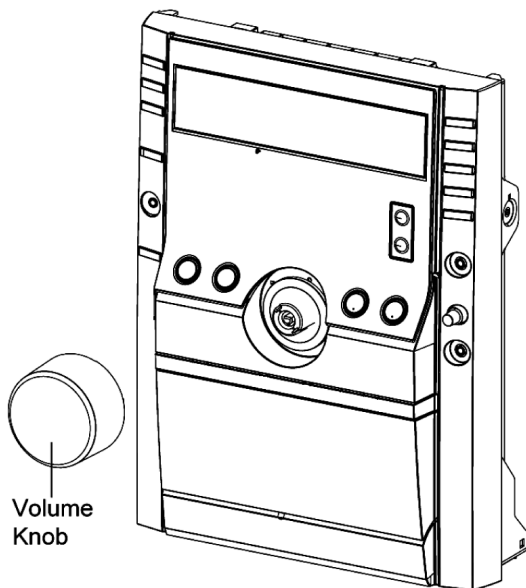

Step 2 Remove 6 screws at Panel P.C.B..


Step 3 Release 8 catches.

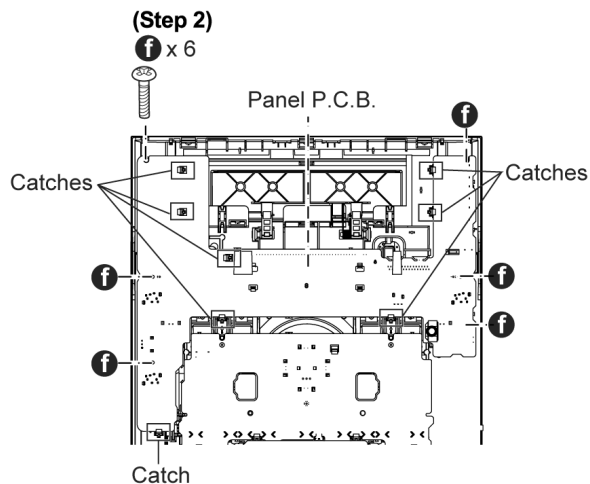

Step 4 Remove Panel P.C.B..

10.11.1. Disassembly of Lid

Step 1 Lift the spring sideward.

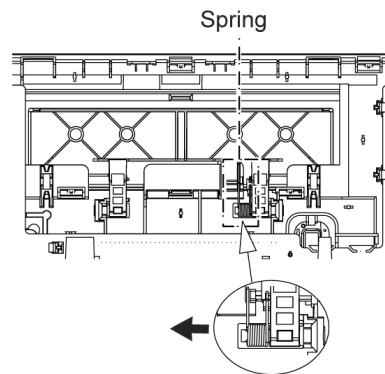

Step 2 Remove Lid.


Note: Do not misplace the spring.

10.12. Disassembly of Tact Switch P.C.B.

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10

Step 1 Remove 6 screws at Tact Switch P.C.B..


Step 2 Remove Tact Switch P.C.B..

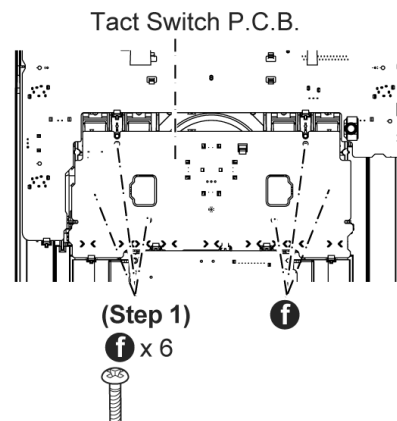


10.13. Disassembly of Deck mechanism unit

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10

Step 1 Remove the 4 screws.

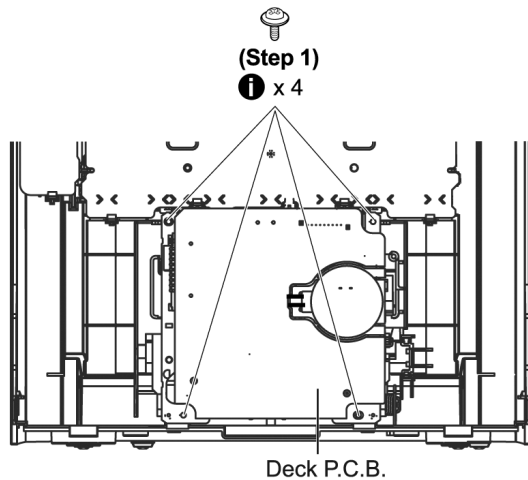

Step 2 Push the lever upward, and then open the cassette lid ass'y.

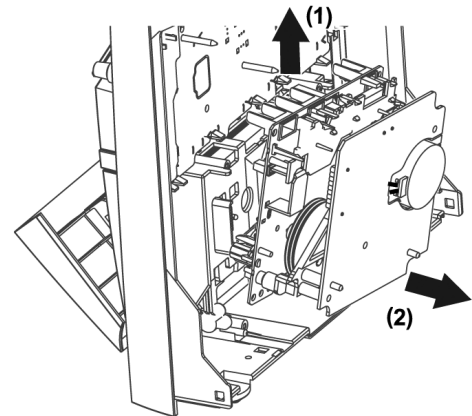


Step 3 Tilt the cassette mechanism unit in the direction of arrow (1), and then remove it in the direction of arrow (2).

Note: For disassembly of parts for deck mechanism unit, refer to Section 10.16.


10.14. Disassembly of Deck P.C.B.

- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10

Step 1 Remove 2 screws.

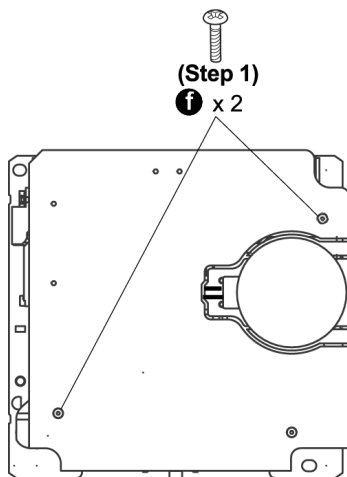

Step 2 Desolder wire at deck motor terminals.

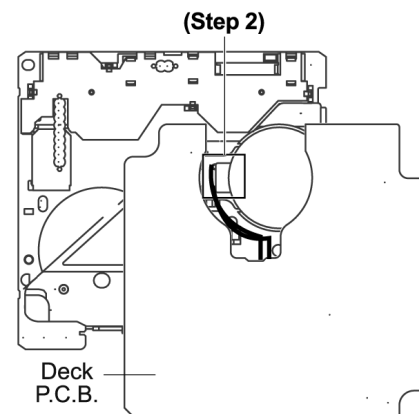


Step 3 Remove Deck P.C.B.

10.15. Disassembly of Traverse Unit


- Follow the (Step 1) - (Step 5) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5

Important notes: Ensure all the trays are in the "STOCK" position before proceeding to the disassemble of traverse unit. For procedures to set the trays in "STOCK" position, please refer to (5.3 Setting the Tray In "STOCK" position for CRS1 Service Manual order no. MD0509368C0)

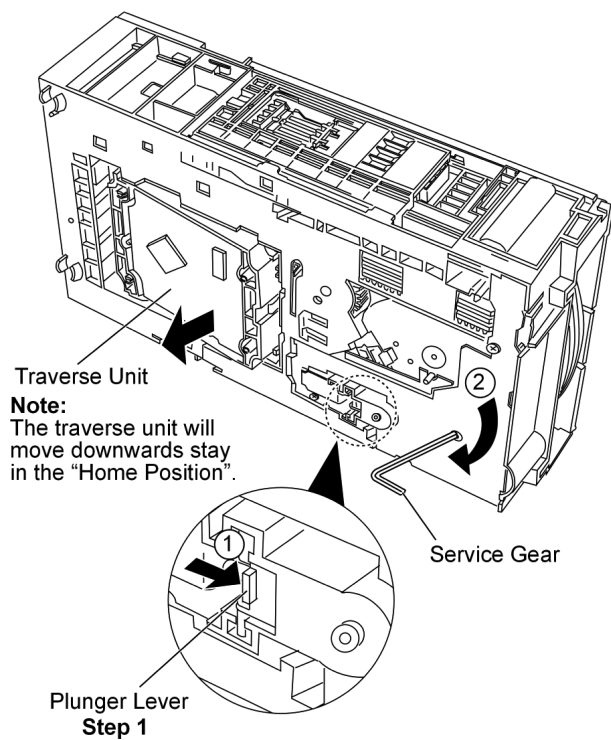


Step 1: Press and hold the plunger lever and rotate the gear as arrows shown until it stop.

Caution:
Do not damage the Play Gear 2 when pushing the Traverse Slide Plate.

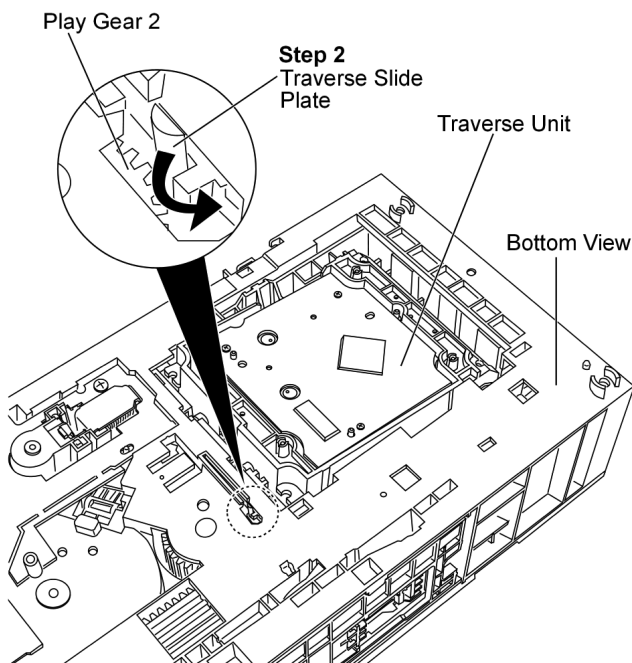


Step 2: Push the traverse slide plate as arrow shown to release the traverse unit.

Caution: Do not exert strong force on the traverse slide plate.

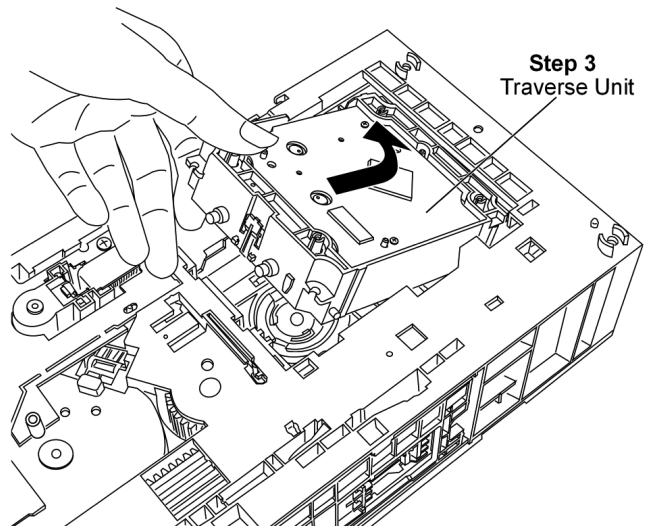


Step 3: Remove the traverse unit as arrow shown.

• Assembly of Traverse Unit

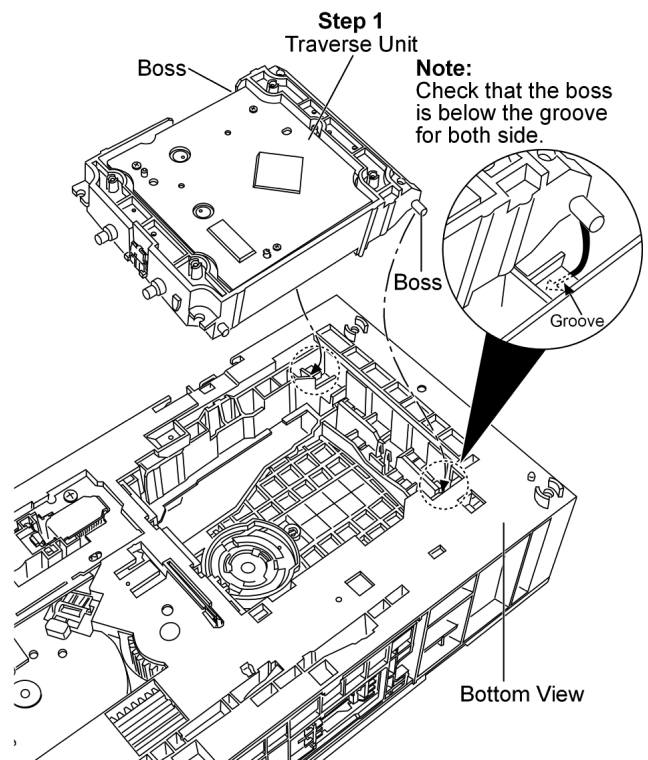

Step 1: Turn over the unit and install the traverse unit.

Caution:
Do not damage the Play Gear 2 when pushing the Traverse Slide Plate.

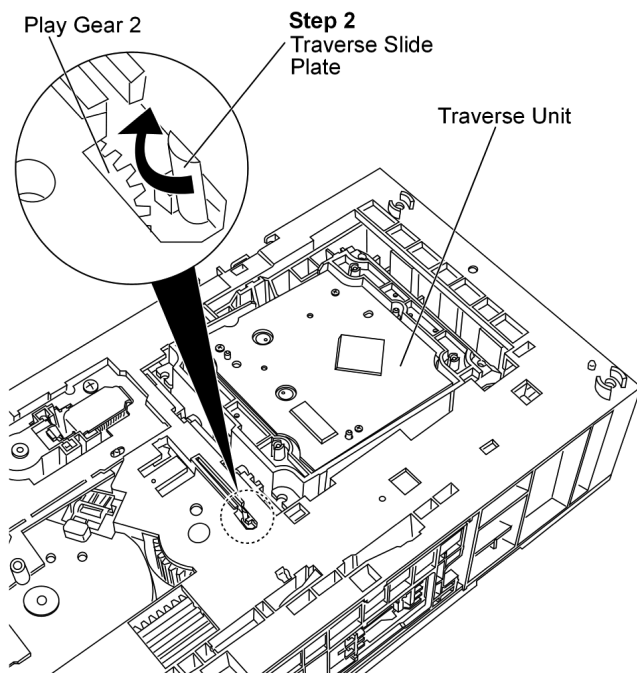

Step 2: Push the traverse slide plate as arrow shown to lock the traverse unit.



10.16. Disassembly for Deck Mechanism

- Follow the (Step 1) - (Step 4) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10
- Follow the (Step 1) - (Step 3) of Item 10.13
- Follow the (Step 1) - (Step 3) of Item 10.14

10.16.1. Replacement of Pinch Roller and Head Block

Step 1

Release catches to remove the pinch rollers (F).

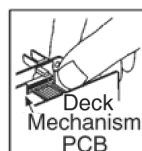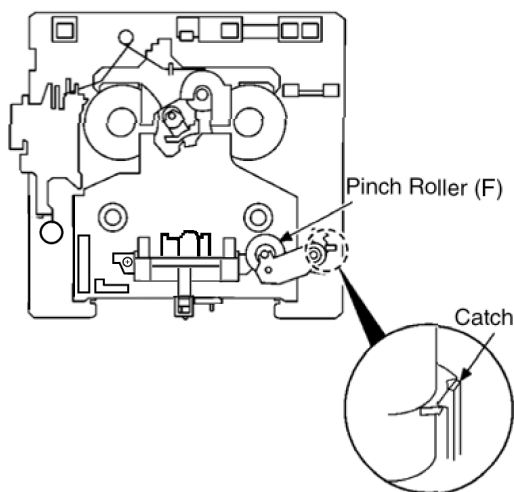

Note:
Support the Deck Mechanism PCB by hand to remove the Deck PCB.


Step 4

Remove the Deck PCB, keeping track of connectors

Step 2


f × 2

f Deck PCB

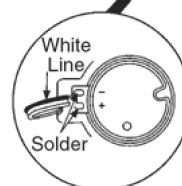


Step 3


Remove 2 solders of the motor terminal.

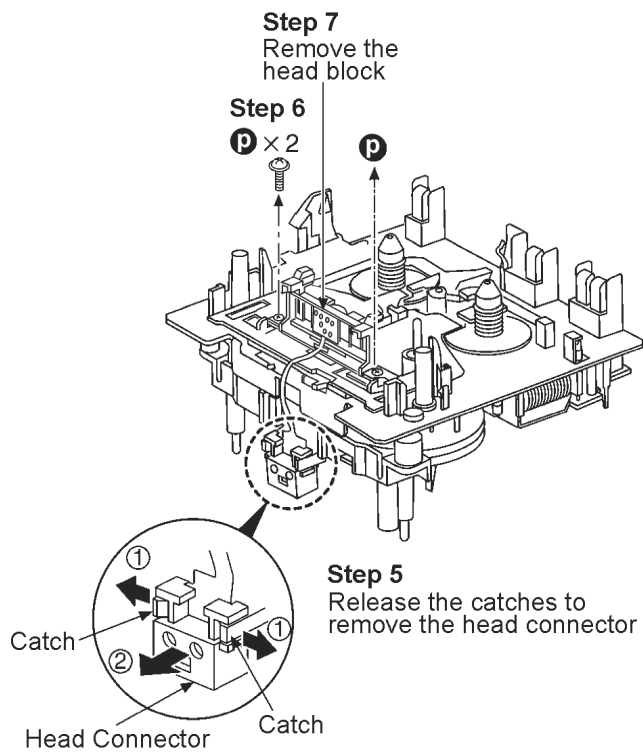

10.16.2. Replacement of Motor, Capstan Belt A, Capstan Belt B, and Winding Belt

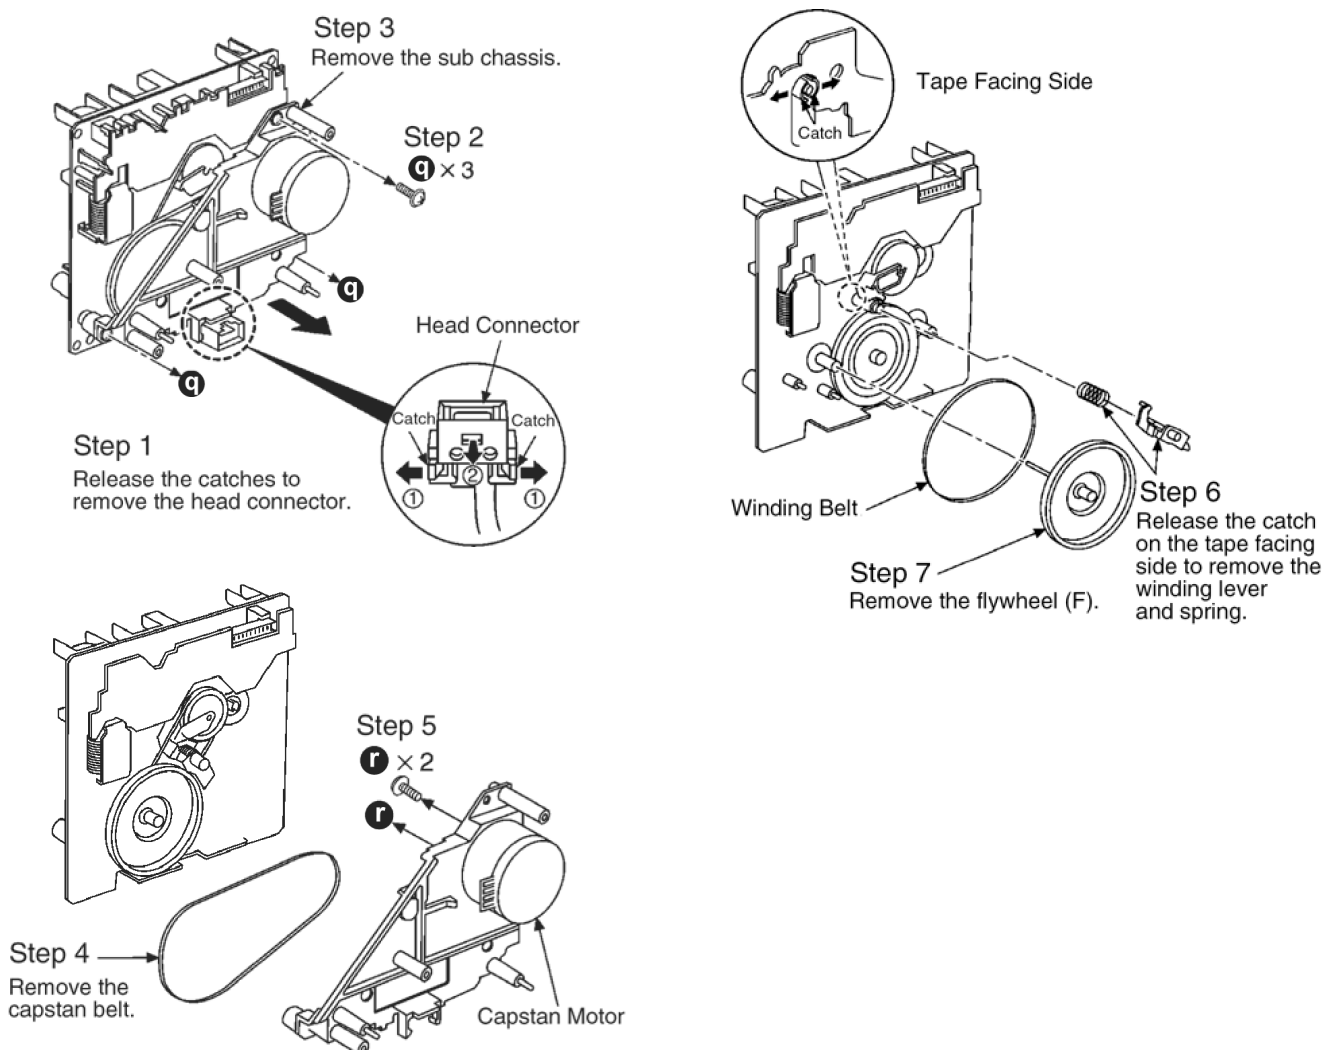

Installing Belt

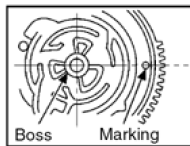

Step 1


The positions of boss and marking hole should be horizontal to each other.

Step 2

Install the winding belt temporarily as shown in the figure above.


Step 3

Attach the flywheel (F).

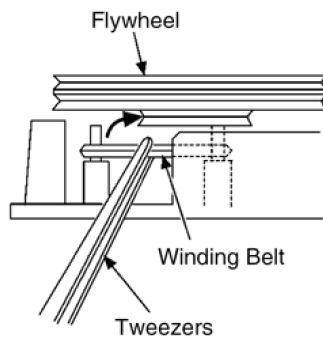

Step 4

Catch the winding belt on the flywheel (F).

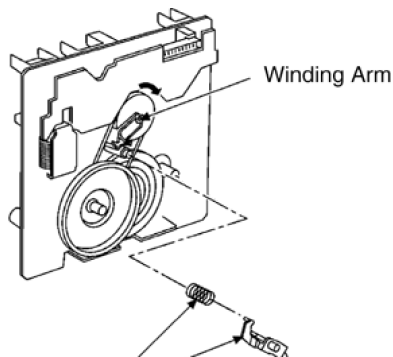


Step 5

Install the winding lever and spring while the winding arm is pressed to the arrow direction. (Be sure that the winding lever is firmly inserted and the catch is hooked.)


Note:

The winding lever should be positioned as shown in the right figure.

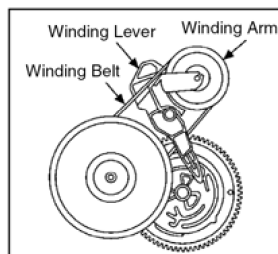

Step 6

Install the capstan belt temporarily as shown in the figure below.

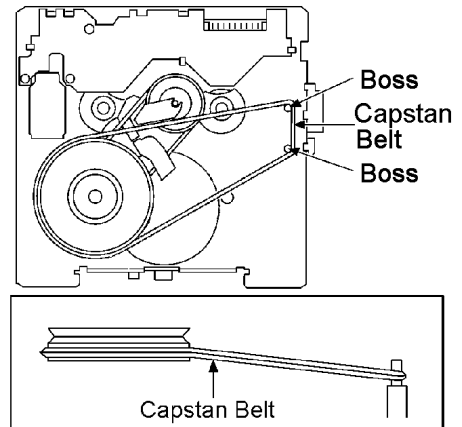

Side View

Note:

Keep the belt away from grease.

Step 8



q x 3

q

q


Step 7

Attach the sub chassis to the deck mechanism.

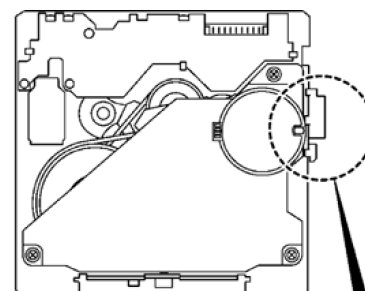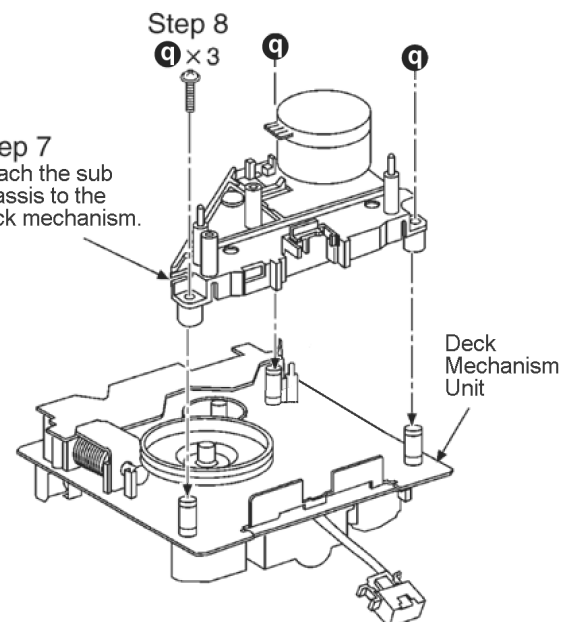

Step 9

Catch the capstan belt to the pulley of the capstan motor.

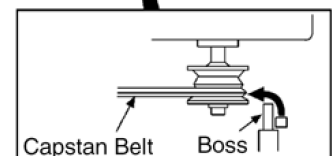

10.17. Disassembly of Deck Mechanism P.C.B.


- Follow the (Step 1) - (Step 4) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10
- Follow the (Step 1) - (Step 3) of Item 10.13

- Follow the (Step 1) - (Step 3) of Item 10.14

Step 1 Remove 1 screw.

Step 2 Desolder plunger terminals.

Step 3 Release catches.


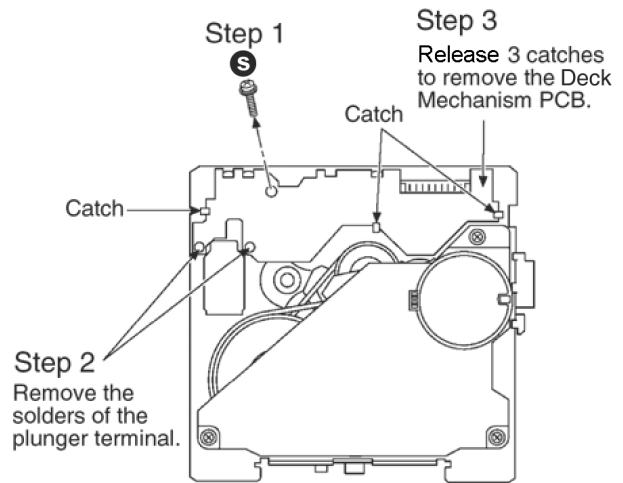


Step 4 Remove Deck Mechanism P.C.B..


10.18. Disassembly of cassette lid

- Follow the (Step 1) - (Step 4) of Item 10.4
- Follow the (Step 1) - (Step 4) of Item 10.5
- Follow the (Step 1) - (Step 5) of Item 10.10
- Follow the (Step 1) - (Step 3) of Item 10.13

Step 1 Open the cassette lid.

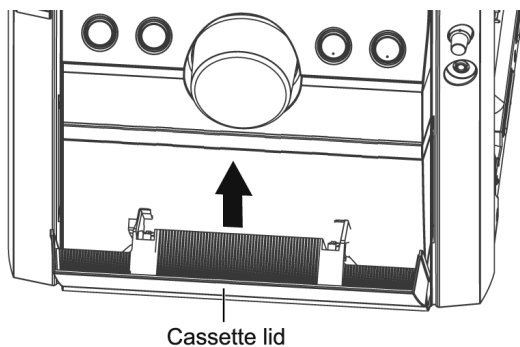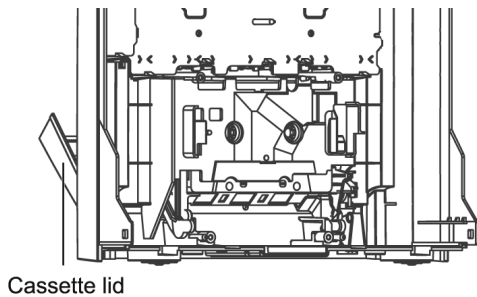


Step 2 Remove spring and push the cassette lid in the direction of arrows.

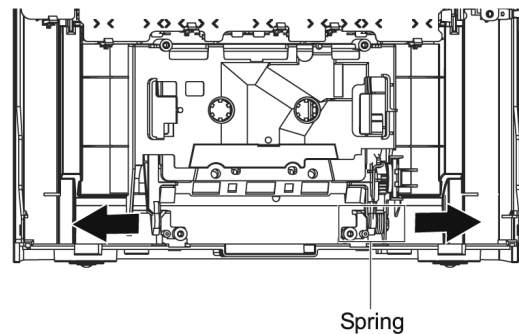

10.19. Rectification for tape jam problem

- Follow the (Step 1) - (Step 5) of Item 10.4

Step 1 If a cassette tape cannot be removed from the deck (the tape is caught by the capstan or pinch roller during playback or recording), rotate the flywheel F in the direction of the arrow to remove it.

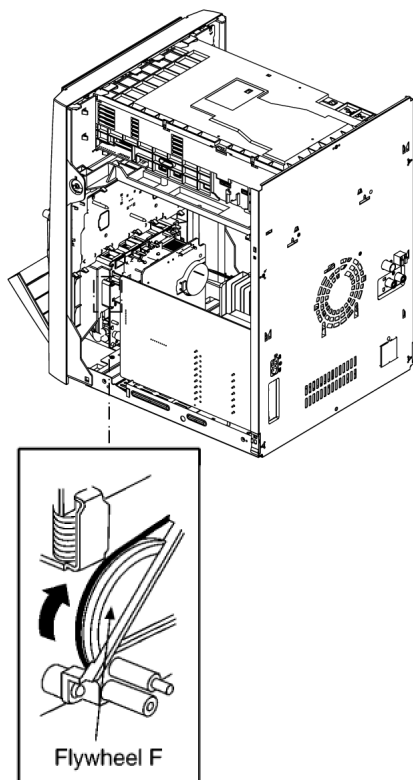

Step 2 Push the lever upward and open the cassette lid. Remove the cassette tape.

Note: Follow 10.18 Disassembly of cassette lid (**Step1**) to (**Step 3**). Remove the cassette tape.


11 Service Fixture and Tools

| Service Tools | |
|-------------------------------|--------------------|
| Extension FFC | |
| (A) Deck P.C.B. - Main P.C.B. | REEX0485 (14 Pins) |

12 Service Positions

Note: For description of the disassembly procedures, see the Section 10.

12.1. Checking and Repairing of Main P.C.B.

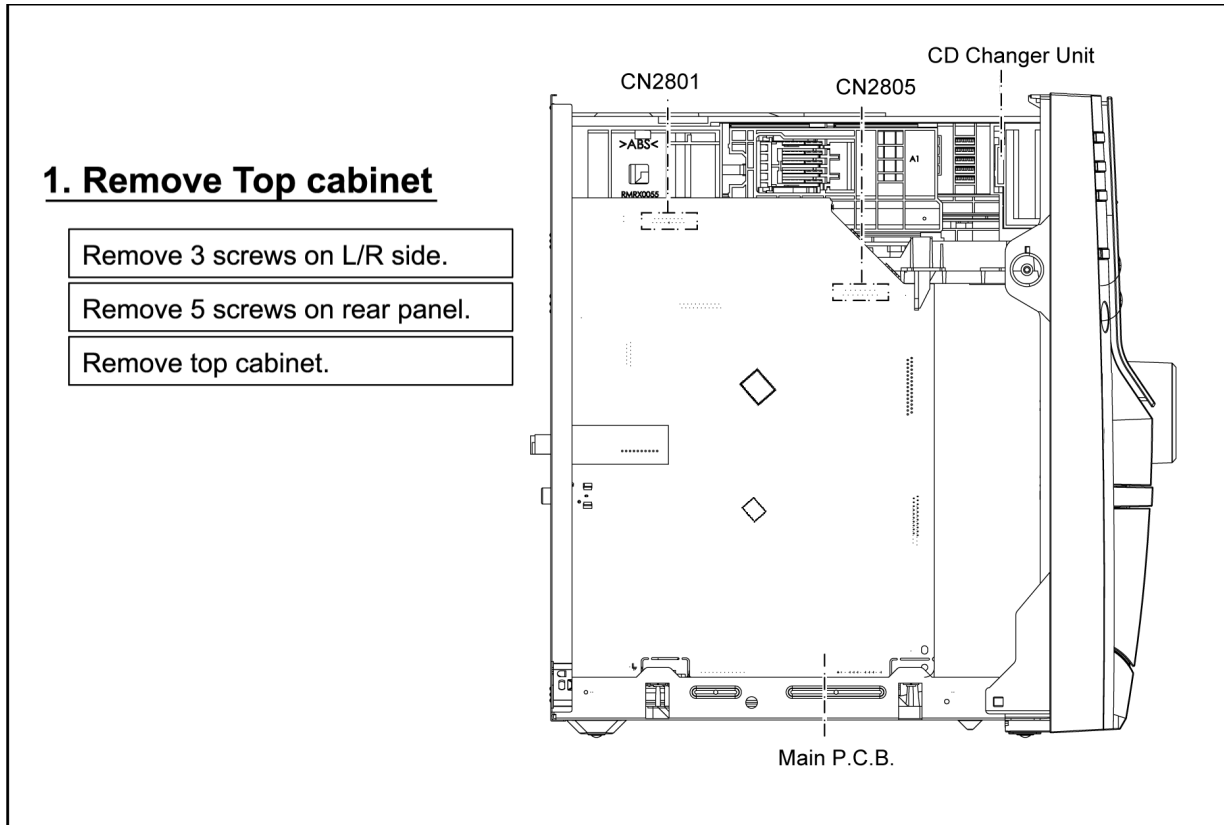


12.2. Checking and Repairing of Transformer P.C.B.

1. Remove Top cabinet

Remove 3 screws on L/R side.

Remove 5 screws on rear panel.

Remove top cabinet.

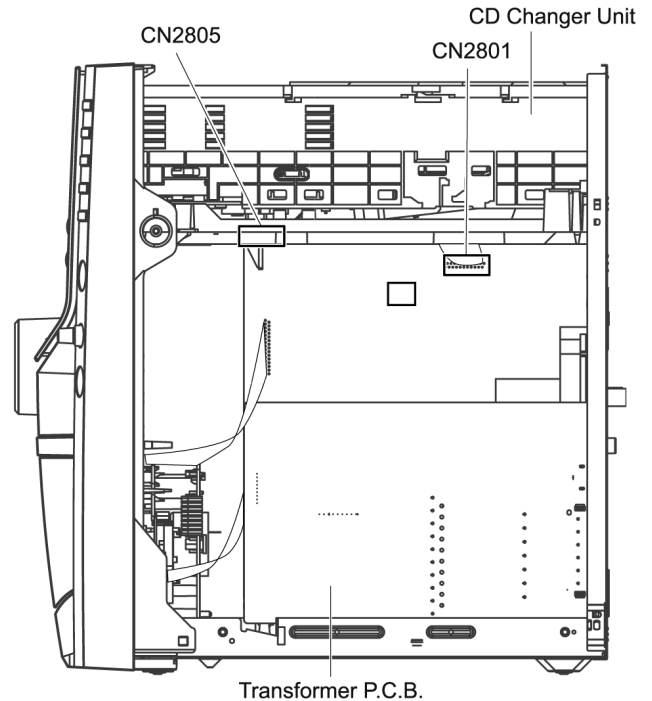

12.3. Checking and Repairing of Panel, Deck & Deck Mechanism P.C.B.

1. Remove Top cabinet

Remove 3 screws on L/R side.

Remove 5 screws on rear panel.

Remove top cabinet.

2. Disassemble CD unit

Remove 1 screw at rear panel.

Release 2 claws at (L) & (R).

3. Remove Rear Panel


Remove 6 screws at rear panel.

Detach cable at CN2810.

Remove rear panel.

4. Connect CRS1 & Fan

Connect 2P cable (fan) to CN2810.
Connect FFC cable to CN2801.
Connect FFC cable to CN2805.

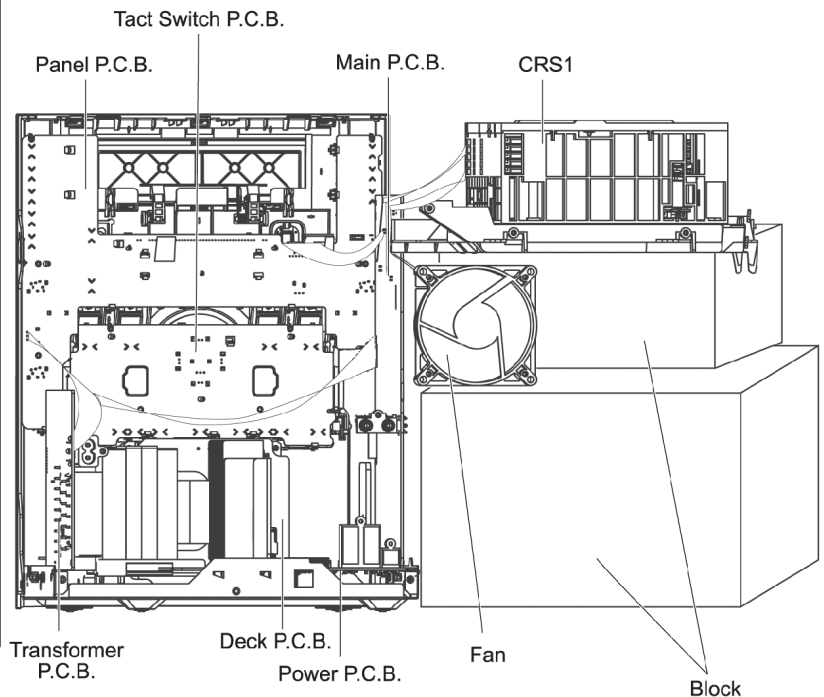

12.4. Checking and Repairing of Power P.C.B.

1. Remove Top cabinet

Remove 3 screws on L/R side.

Remove 5 screws on rear panel.

Remove top cabinet.

2. Remove Rear Panel

Remove 6 screws.

Detach cable at CN2810 (fan).

3. Disassemble CD changer unit

Remove 1 screw at rear panel.

Release 2 claws at (L) & (R).

4. Disassemble Main P.C.B.

Detach FFC cables (CN2803 & CN2806).

5. Disassemble Power P.C.B.

Remove 4 screws.

Detach cable at CN5950.


6. Connect Panel P.C.B., CRS1, Transformer P.C.B. & Fan

Connect 2P cable (fan) to CN2810.

Connect FFC cable to CN2801.

Connect FFC cable to CN2805.

Connect FFC cable to CN5950.

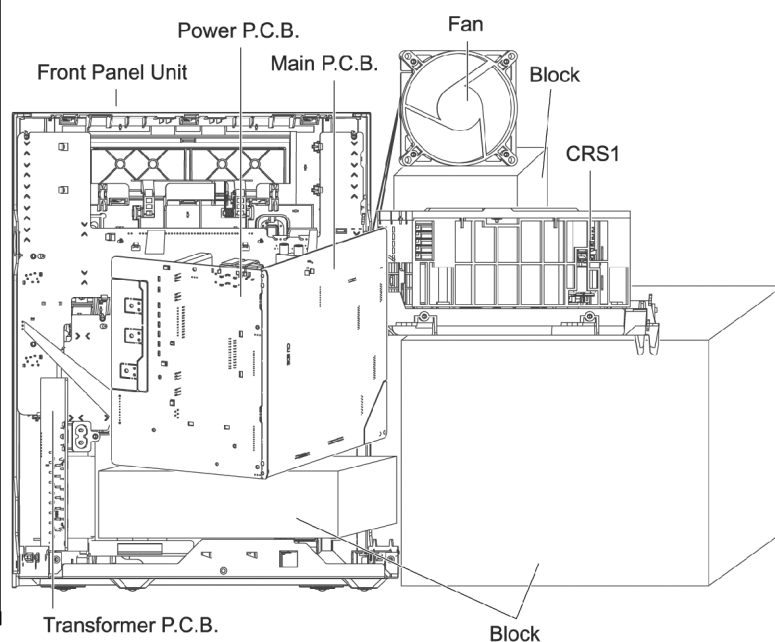

13 Procedure for Checking Operation of Individual Parts of Deck Mechanism Unit

13.1. Operation Check with Cassette Tape

1. Pull up the EJECT lever using a rubber band. (Fig. 6)
2. Supply DC5V to MOTOR. (→ MOTOR rotates.) (Fig. 5)
3. Insert a cassette tape to the unit.
4. Supply DC9V to the plunger, and turn the power ON and OFF. (→ Power +PL, -PL) (Fig. 5)
 - a. FWD PLAY: Supply the plunger power in a flash. (ON: approx. 5msec)
 - b. FWD FF: Supply the plunger power in a flash at PLAY mode. (ON: approx. 5msec)
 - c. STOP: Supply the plunger power in a flash at FWD FF mode. (ON: approx. 5msec)
 - d. REV PLAY: Supply the plunger power in a normal timing at STOP mode. (ON: approx. 200msec)
 - e. REV REW: Supply the plunger power in a flash at REV PLAY mode. (ON: approx. 50msec)
 - f. STOP: Supply the plunger power in a flash at FF mode. (ON: approx. 50msec)

Repeat the operation (→ FWD PLAY)

(Note) Other operation may start if a timing of supplying the plunger power is missed.

13.1.1. Connection Status between Mechanism and Power Supply (Motor, Plunger)

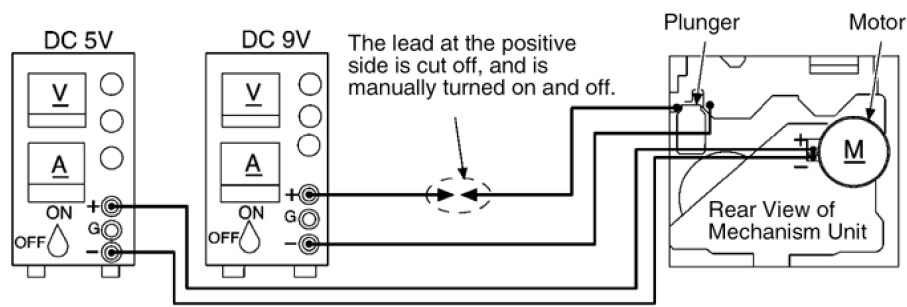


Fig. 5

13.1.2. Operative Parts of Deck Mechanism Unit (EJECT lever fitted with rubber band, Plunger/Rib operation)


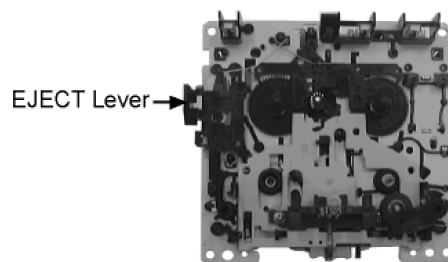


Fig. 6

13.2. Operation Check without Cassette Tape

1. Pull up the EJECT lever using a rubber band. (Fig. 6)
2. Supply DC5V to MOTOR. (→ MOTOR rotates.)
3. Lift up the mechanism unit's plunger/rib with the tip of a negative screwdriver, and operate the unit in the same timing as supplying the power. (Fig. 7)

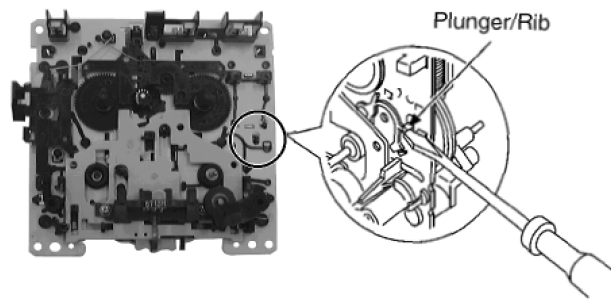

14 Measurement And Adjustments

14.1. Cassette Deck Section

14.1.1. Requirements

- Test tape (QZZCFM) (QZZCWAT)
- Normal blank cassette tape (QZZCRA)
- Digital frequency counter
- Oscilloscope
- Electrical voltmeter
- Headphone jack output jig (Fig 8)

14.1.2. Setting of Unit

- VOLUME: MAX

14.1.3. Preparations

1. Apply under [10. Assembling and Disassembling].
2. Remove 4 screws from the mechanism unit to disassemble. under [10.13 Disassembly of Deck Mechanism Unit].
3. Connect the headphone jack output jig (Fig 8) to headphone jack.

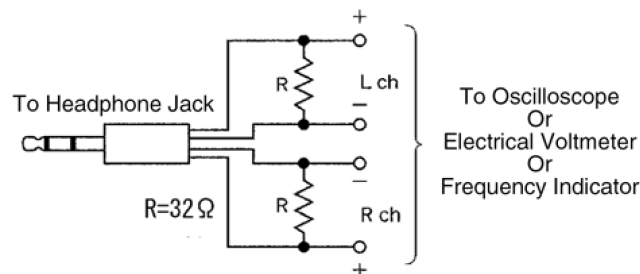


Fig. 8

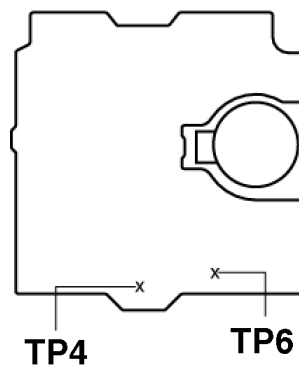


Fig. 9

14.1.4. Tape Speed Adjustment

- Normal speed adjustment (only during forward playback)
(Product reference value: $3,000 \pm 90\text{Hz}$)
1. Connect a frequency indicator. (Fig 10)
 2. Playback the middle portion of the test tape (QZZCWAT).
 3. Adjust the motor screw so that the following output level is produced. (Fig 11)
Adjustment Range: $3,000 \pm 90\text{Hz}$ (a constant speed)




Fig. 10




Fig. 11

14.1.5. Bias Voltage Check

1. Connect an electrical voltmeter. (Fig 12) (Fig 9 for location of test point)
2. Set the function to "TAPE" position.
3. Insert a normal blank cassette tape (QZZCRA).
4. While pressing and holding down [REC(● / ■)] button, press [TAPE(►)] button to pause the recording mode. (Repeat pressing the buttons till the recording pause mode is activated.)
5. Check that the output level is within the standard range.

Standard Range: $16 \pm 3\text{mV}$

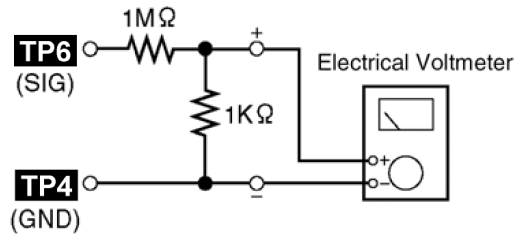


Fig. 12

14.1.6. Bias Frequency Check

1. Connect a digital frequency counter (Fig 13).
2. Set the function to "TAPE" position.
3. Insert a normal blank cassette tape (QZZCRA) and press "REC" mode on main unit.
4. Check that the output frequency is within the standard range.

Standard Value: $98 \pm 8\text{ kHz}$

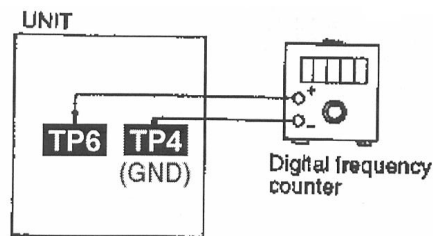


Fig. 13

15 Voltage and Waveform Chart

Note:

Circuit voltage and waveform described herein shall be regarded as reference information when probing defect point, because it may differ from an actual measuring value due to difference of Measuring instrument and its measuring condition and product itself.

15.1. CD Servo P.C.B.

| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 3.2 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 1.6 | 0 | 1.6 | 1.6 | 1.8 | 0 | 3.2 | 1.5 | 3.2 | 3.2 | 0 | 1.6 | 1.6 | 0 | 0 | 1.9 | 1.9 | 0 | 1.7 | 1.7 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| CD PLAY | 0.2 | 2.4 | 1.7 | 1.9 | 1 | 0 | 3.2 | 1.2 | 0 | 1.2 | 1.6 | 1.6 | 0.9 | 1.4 | 1.5 | 1.5 | 0 | 3.2 | 0 | 0 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |
| CD PLAY | 3.2 | 0 | 0 | 0 | 0 | 0 | 3 | 3 | 3 | 2.9 | 0 | 3.2 | 0 | 1.6 | 0 | 1.6 | 3.2 | 0 | 3.2 | 1.6 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7001 | | | | | | | | | | | | | | | | | | | |
| MODE | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
| CD PLAY | 1.6 | 1.6 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 3.2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7002 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 1.6 | 0 | 1.6 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1.7 | 3.2 | 3.2 | 3.2 | 2.8 | 3.8 | 3.2 | 3.2 | 0 | 7.1 |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Ref No. | IC7002 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | | | | | | | | | | |
| CD PLAY | 0 | 0 | 0 | 0 | 7.1 | 1.6 | 1.6 | 1.6 | 0 | 0 | | | | | | | | | | |
| STANDBY | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | |
| Ref No. | Q7601 | | | | | | | | | | | | | | | | | | | |
| MODE | E | C | B | | | | | | | | | | | | | | | | | |
| CD PLAY | 3.1 | 2 | 2.4 | | | | | | | | | | | | | | | | | |
| STANDBY | 0 | 0.1 | 0 | | | | | | | | | | | | | | | | | |

SA-AK350 CD SERVO P.C.BOARD

15.2. Deck P.C.B. & Deck Mechanism P.C.B.

| Ref No. | IC1000 | | | | | | | | | | | | | | | | | | | |
|---------|--------|-----|------|-----|-----|-------|-----|-----|-----|-----|-------|-----|----|----|----|-------|------|-----|-----|-----|
| MODE | 1 | 2 | 3 | 4 | 5 | | | | | | | | | | | | | | | |
| CD PLAY | 6.7 | 0 | 0 | 0 | 0 | | | | | | | | | | | | | | | |
| STANDBY | 0.1 | 0 | 0 | 0 | 0 | | | | | | | | | | | | | | | |
| Ref No. | IC1001 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 0.1 | 0.7 | 5.1 | 4.4 | 4.3 | 3.3 | 0 | 0 | 0.1 | 6.1 | 0 | 9.0 | 0 | 0 | 0 | 0 | 3.8 | 0.2 | 4.4 | 5.2 |
| STANDBY | 0 | 0.7 | 5.2 | 4.4 | 0 | 3.3 | 0 | 0 | 0 | 6.0 | 0 | 9.0 | 0 | 0 | 0 | 0 | 3.8 | 0.2 | 4.4 | 5.1 |
| Ref No. | IC1001 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | | | | | | | | | | | | | | | | | | |
| CD PLAY | 0.7 | 0 | | | | | | | | | | | | | | | | | | |
| STANDBY | 0.7 | 0 | | | | | | | | | | | | | | | | | | |
| Ref No. | Q1101 | | | | | Q1201 | | | | | Q1302 | | | | | Q1303 | | | | |
| MODE | E | C | B | | | E | C | B | | | E | C | B | | | E | C | B | | |
| CD PLAY | 0 | 0 | 0 | | | 0 | 0 | 0 | | | 0 | 0 | 0 | | | 0 | 6.1 | 0 | | |
| STANDBY | 0 | 0 | 0 | | | 0 | 0 | 0 | | | 0 | 0 | 0 | | | 0 | 6.1 | 0 | | |
| Ref No. | Q1309 | | | | | Q1310 | | | | | Q1312 | | | | | Q1314 | | | | |
| MODE | E | C | B | | | E | C | B | | | E | C | B | | | E | C | B | | |
| CD PLAY | 0 | 9.0 | 0.1 | | | 0 | 9.0 | 0.1 | | | 0 | 0.1 | 0 | | | 9.0 | -0.2 | 9.0 | | |
| STANDBY | 0 | 9.0 | 0 | | | 0 | 9.0 | 0 | | | 0 | 0 | 0 | | | 0.0 | - | 9.0 | | |
| Ref No. | Q1316 | | | | | Q1317 | | | | | | | | | | | | | | |
| MODE | E | C | B | | | E | C | B | | | | | | | | | | | | |
| CD PLAY | 0 | 7.4 | -0.3 | | | 0 | 0 | 0.1 | | | | | | | | | | | | |
| STANDBY | 0 | 7.4 | 0 | | | 0 | 0 | 0 | | | | | | | | | | | | |

SA-AK350 DECK P.C.BOARD

| Ref No. | IC971 | | | | | | | | | | | | | | | | | | | |
|---------|-------|-----|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE | 1 | 2 | 3 | 4 | | | | | | | | | | | | | | | | |
| CD PLAY | 0.3 | 3.3 | 2.2 | 3.3 | | | | | | | | | | | | | | | | |
| STANDBY | 0.3 | 3.3 | 2.2 | 3.3 | | | | | | | | | | | | | | | | |

SA-AK350 DECK MECHANISM P.C.BOARD

15.3. Main P.C.B.

| | | | | | | | | | | | | | | | | | | | | |
|---------|--------|------|------|-----|-------|-----|------|------|--------|------|------|-----|--------|-----|------|-----|-------|------|------|-----|
| Ref No. | IC2801 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 1.5 | 0 | 0 | - | 1.6 | 0 | 3.3 | 0 | 0 | 1.4 | 0.7 | 3.3 | 1.6 | 0 | - | 3.3 | 3.3 | 3.3 | 0 | 2.2 |
| STANDBY | 0 | -0.2 | - | 1.1 | 1.6 | 0 | 3.3 | 0 | 0 | 0.5 | 0.7 | 3.3 | 1.6 | 0 | 1.6 | 3.3 | 3.3 | 3.3 | 0 | 2.2 |
| Ref No. | IC2801 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 0 | 0 | 0 | 0 | 3.3 | 0 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| STANDBY | 0 | 0 | 3.3 | 0 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 3.1 | 3.2 |
| Ref No. | IC2801 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| CD PLAY | 0 | 0 | 1.6 | 0 | 0 | 3.3 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0.2 | 0 | 0.2 | 0 | 0 | 0 |
| STANDBY | 0 | 0 | 0.4 | 0 | 0 | 3.2 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 3.3 | 0.1 | 0 | 0.2 | 0 | 0 | 0 |
| Ref No. | IC2801 | | | | | | | | | | | | | | | | | | | |
| MODE | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |
| CD PLAY | 0 | 3.3 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 2.3 | 0.3 | 2.9 | 3.3 | 0 | 2.5 | 3.3 | 2.6 | 3.3 | 3.3 | 0 |
| STANDBY | 0 | 3.3 | 3.3 | 0 | 0 | 0 | 0 | 0 | 0 | 2.4 | 0.2 | 3.0 | 3.3 | 0 | 0.1 | - | 3.3 | 3.3 | 3.3 | 0 |
| Ref No. | IC2801 | | | | | | | | | | | | | | | | | | | |
| MODE | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
| CD PLAY | 3.3 | 0.2 | 3.3 | 0 | 0 | 3.3 | 0 | 0 | 1.3 | 2.3 | 0 | 3.3 | 2.8 | 2.8 | 3.3 | 0 | 3.3 | 3.3 | 3.3 | 3.3 |
| STANDBY | 3.3 | 0.2 | 3.3 | 0 | 0 | 3.3 | 0 | 0 | 1.3 | 2.3 | 0 | 3.3 | 2.8 | - | - | 0 | 3.3 | 3.3 | - | 3.3 |
| Ref No. | IC2803 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 |
| STANDBY | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0 | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 |
| Ref No. | IC2803 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | - | - | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 9.3 | 3.3 | 0 |
| STANDBY | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 | 4.7 | - | - | 4.7 | 4.7 | 4.7 | 4.6 | 4.7 | 4.7 | 4.6 | 4.7 | 9.3 | 0 | 0 |
| Ref No. | IC2803 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | | | | |
| CD PLAY | - | - | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 8.2 | 4.0 | | | | |
| STANDBY | - | 4.7 | 4.9 | 4.7 | 4.7 | 4.6 | 4.7 | 4.6 | 4.7 | 4.6 | 4.6 | 4.6 | 4.7 | 4.7 | 8.2 | 1.9 | | | | |
| Ref No. | IC2804 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | |
| CD PLAY | 7.6 | 7.6 | 7.5 | 0 | 7.5 | 7.7 | 7.7 | 15.3 | | | | | | | | | | | | |
| STANDBY | 7.6 | 7.6 | 7.5 | 0 | 7.5 | 7.7 | 7.6 | 15.3 | | | | | | | | | | | | |
| Ref No. | IC2809 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | |
| CD PLAY | 0.1 | - | 1.6 | 1.6 | 3.3 | 0 | 1.6 | 1.6 | 0 | 0 | 0 | 3.3 | 1.6 | 1.7 | 0 | 1.6 | | | | |
| STANDBY | 0.1 | - | 1/6 | 1/6 | 3.3 | 0 | 1.6 | 1.6 | 0 | 0 | 0 | 3.3 | - | 1.7 | 0 | 3.3 | | | | |
| Ref No. | IC2871 | | | | | | | | IC2872 | | | | IC4000 | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 1 | 2 | 3 | 1 | 2 | 3 | 4 | 5 | | | | |
| CD PLAY | - | 3.3 | 0 | 0 | 1.6 | 1.6 | 0 | - | 10.6 | 0 | 9.0 | 5.5 | 0 | 5.5 | - | 3.3 | | | | |
| STANDBY | - | 3.3 | 0 | 0 | 1.4 | 1.4 | 0 | - | 10.8 | 0 | 9.0 | 5.5 | 0 | 5.5 | - | 3.3 | | | | |
| Ref No. | Q2124 | | | | Q2242 | | | | Q2311 | | | | Q2317 | | | | Q2341 | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | 0 | 0 | | 0 | 0 | 0 | | 0 | 0 | -3.7 | | 0 | 0 | -3.5 | | 0 | 0 | -3.4 | |
| STANDBY | 0 | 0 | 0 | | 0 | 0 | 0 | | 0 | 0 | 0.6 | | 0 | 0 | 0.6 | | 0 | 0 | 0.6 | |
| Ref No. | Q2411 | | | | Q2417 | | | | Q2441 | | | | Q2501 | | | | Q2511 | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | 0 | -3.7 | | 0 | 0 | -3.5 | | 0 | 0 | -3.4 | | 0.5 | 1.6 | 1.1 | | 0 | -3.9 | 0 | |
| STANDBY | 0 | 0 | 0.6 | | 0 | 0 | 0.6 | | 0 | 0 | 0.6 | | 0.5 | 0.6 | 1.1 | | 1.6 | 1.5 | 0 | |
| Ref No. | Q2803 | | | | Q2936 | | | | Q2937 | | | | Q2942 | | | | Q2943 | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | 3.3 | 0 | | 12.2 | 0 | 12.2 | | 0 | 12.1 | 0 | | 12.1 | 0 | 12.2 | | 0 | 12.2 | 0 | |
| STANDBY | 0 | 3.3 | 0 | | 12.2 | 0 | 12.2 | | 0 | 12.2 | 0 | | 12.2 | 0 | 12.2 | | 0 | 12.2 | 0 | |
| Ref No. | Q2948 | | | | Q2949 | | | | QR3105 | | | | QR3106 | | | | | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 0 | 0 | 0.2 | | 0 | 3.3 | 0 | | 0 | 9.9 | 0 | | 0 | 9.0 | 0 | | | | | |
| STANDBY | 0 | 0 | 0.2 | | 0 | 3.3 | 0 | | 0 | 9.0 | 0 | | 0 | 9.0 | 0 | | | | | |

SA-AK350 MAIN P.C.BOARD

15.4. Panel P.C.B.

| Ref No. | IC6601 | | | | | | | | | | | | | | | | | | | |
|---------|--------|-------|-----|-------|-------|-------|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 0 | 0 | 0 | 0 | 1.9 | 1.4 | 0.3 | 2.9 | 2.3 | 0 | 0 | 0 | 3.3 | -16.4 | -22.6 | -24.7 | -22.6 | -18.4 | - | - |
| STANDBY | 0 | 0 | 0 | 0 | 1.9 | - | - | 3.0 | 2.5 | 0 | - | 0 | 3.3 | - | -24.6 | -24.7 | -24.7 | -20.5 | - | - |
| Ref No. | IC6601 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| CD PLAY | - | - | - | -24.6 | -24.7 | -24.7 | - | -22.6 | -14.3 | -25.2 | -22.8 | -23.0 | -22.8 | -22.8 | -22.8 | -22.8 | -22.8 | -22.8 | -22.8 | -22.8 |
| STANDBY | - | - | - | -22.4 | - | -24.7 | - | -24.7 | - | -25.2 | - | -23.1 | -22.8 | -22.8 | -22.8 | -22.8 | -22.9 | -22.9 | -22.9 | -22.9 |
| Ref No. | IC6601 | | | | | | | | | | | | | | | | | | | |
| MODE | 41 | 42 | 43 | 44 | | | | | | | | | | | | | | | | |
| CD PLAY | -22.9 | -22.9 | 3.3 | 0 | | | | | | | | | | | | | | | | |
| STANDBY | -22.9 | -23.0 | 3.3 | 0 | | | | | | | | | | | | | | | | |

SA-AK350 PANEL P.C.BOARD

15.5. Power P.C.B. & Transformer P.C.B.


| Ref No. | IC5101 | | | | | | | | | | | | | | | | | | | |
|---------|--------|-------|------|-------|------|-------|-------|-------|-------|-------|-------|-------|-------|------|-------|------|-------|-------|-------|------|
| MODE | 1 | 2 | 3 | 4 | 5 | | | | | | | | | | | | | | | |
| CD PLAY | 3.3 | 12.2 | 0 | 5.6 | 3.2 | | | | | | | | | | | | | | | |
| STANDBY | 3.3 | 12.2 | 0 | 5.6 | 3.2 | | | | | | | | | | | | | | | |
| Ref No. | IC5201 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | | | | | | |
| CD PLAY | 3.0 | 0.3 | 2.6 | 2.9 | 2.3 | 2.6 | 0 | 3.4 | 2.1 | 2.7 | 2.9 | 0.4 | 2.2 | 4.9 | | | | | | |
| STANDBY | 3.0 | 0.3 | 2.6 | 2.9 | 2.3 | 2.6 | 0 | 3.4 | 1.9 | 2.7 | 2.9 | 0.4 | 2.0 | 4.9 | | | | | | |
| Ref No. | IC5301 | | | | | | | | | | | | | | | | | | | |
| MODE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| CD PLAY | 2.7 | 0 | 0 | 28.9 | 0 | -30.0 | -21.5 | 29.3 | 107.1 | 95.0 | -30.2 | -18.0 | -30.2 | 93.1 | 105.1 | 29.4 | -29.4 | -29.9 | 0 | 29.0 |
| STANDBY | 2.7 | 0 | 0 | 29.0 | 0 | -30.0 | -21.5 | 29.3 | 112.4 | 100.5 | -30.2 | -18.0 | -30.2 | 90.0 | 110.4 | 29.4 | -29.9 | -29.9 | 0 | 29.0 |
| Ref No. | IC5301 | | | | | | | | | | | | | | | | | | | |
| MODE | 21 | 22 | 23 | | | | | | | | | | | | | | | | | |
| CD PLAY | 0 | 0 | 4.0 | | | | | | | | | | | | | | | | | |
| STANDBY | 0 | 0 | 2.6 | | | | | | | | | | | | | | | | | |
| Ref No. | | | | | | | | | | | | | | | | | | | | |
| MODE | | | | | | | | | | | | | | | | | | | | |
| CD PLAY | | | | | | | | | | | | | | | | | | | | |
| STANDBY | | | | | | | | | | | | | | | | | | | | |
| Ref No. | | | | | | | | | | | | | | | | | | | | |
| MODE | | | | | | | | | | | | | | | | | | | | |
| CD PLAY | | | | | | | | | | | | | | | | | | | | |
| STANDBY | | | | | | | | | | | | | | | | | | | | |
| Ref No. | Q5101 | | | | | Q5102 | | | Q5103 | | | Q5104 | | | Q5108 | | | | | |
| MODE | S | G | D | | | S | G | D | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 29.4 | 33.0 | 40.9 | | | -41.6 | -39.2 | -30.2 | 0 | 3.3 | 0 | | 0 | 3.3 | 0 | | -41.9 | -38.4 | -41.3 | |
| STANDBY | 29.3 | 32.9 | 40.8 | | | -41.5 | -38.0 | -30.2 | 0 | 3.3 | 0 | | 0 | 3.3 | 0 | | -41.8 | -38.3 | -41.0 | |
| Ref No. | Q5109 | | | Q5110 | | | Q5111 | | | Q5112 | | | Q5113 | | | | | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | -4.7 | -16.6 | -5.3 | | 28.7 | 32.9 | 29.4 | | 15.6 | 28.8 | 16.2 | | 17.2 | 12.2 | 16.6 | | 17.6 | 16.7 | 17.3 | |
| STANDBY | -4.7 | -16.4 | -5.3 | | 28.6 | 32.9 | 29.3 | | 15.6 | 28.8 | 16.2 | | 17.7 | 12.2 | 17.0 | | 17.7 | 17.1 | 17.7 | |
| Ref No. | Q5114 | | | Q5153 | | | Q5154 | | | Q5173 | | | Q5201 | | | | | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 11.5 | 16.7 | 12.1 | | 0 | 4.0 | 0 | | 3.9 | 0 | 3.3 | | 0 | 4.0 | 0 | | 2.3 | 2.6 | 0.3 | |
| STANDBY | 11.5 | 16.9 | 12.0 | | 0 | 0 | 0.7 | | 2.6 | 0 | 3.2 | | 0 | 2.6 | 0 | | 2.3 | 2.2 | 0.3 | |
| Ref No. | Q5202 | | | | | | | | | | | | | | | | | | | |
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B | | E | C | B | |
| CD PLAY | 2.3 | 2.6 | 2.4 | | | | | | | | | | | | | | | | | |
| STANDBY | 2.3 | 2.6 | 2.5 | | | | | | | | | | | | | | | | | |

SA-AK350 POWER P.C.BOARD


| Ref No. | Q5950 | | | Q5951 | | | Q5952 | | | Q5953 | | | | | |
|---------|-------|-----|------|-------|-------|-------|-------|--|---|-------|------|--|---|-----|-----|
| MODE | E | C | B | | E | C | B | | E | C | B | | E | C | B |
| CD PLAY | 6.3 | 6.8 | 13.8 | | 025.2 | -44.2 | -25.7 | | 0 | 2.2 | -0.3 | | 0 | 0.2 | 0.8 |
| STANDBY | 6.3 | 6.8 | 14.0 | | -25.3 | -45.5 | -25.8 | | 0 | 2.4 | -0.2 | | 0 | 0.2 | 0.8 |

SA-AK350 TRANSFORMER P.C.BOARD

15.6. Waveform Chart

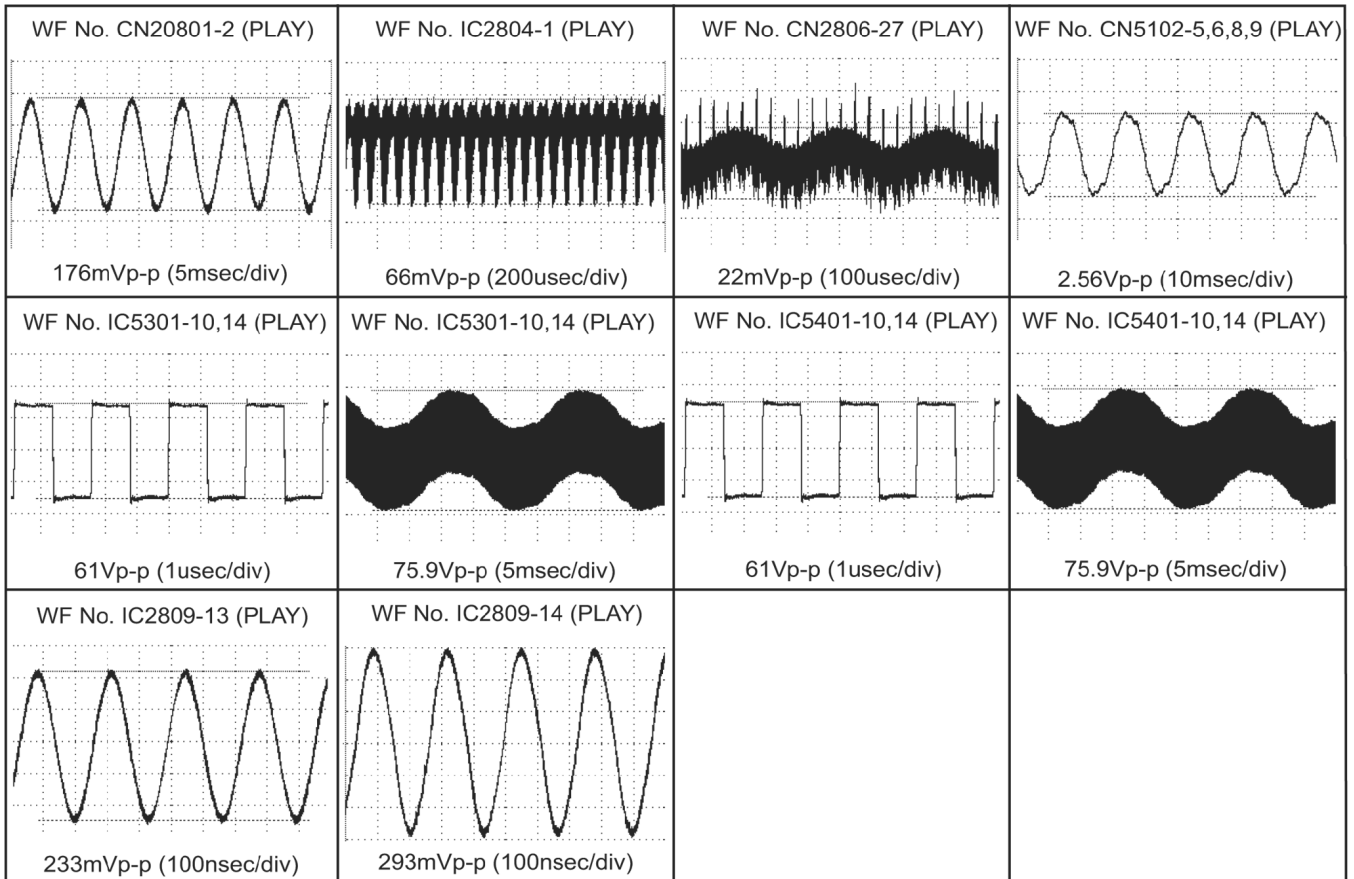


16 Wiring Connection Diagram

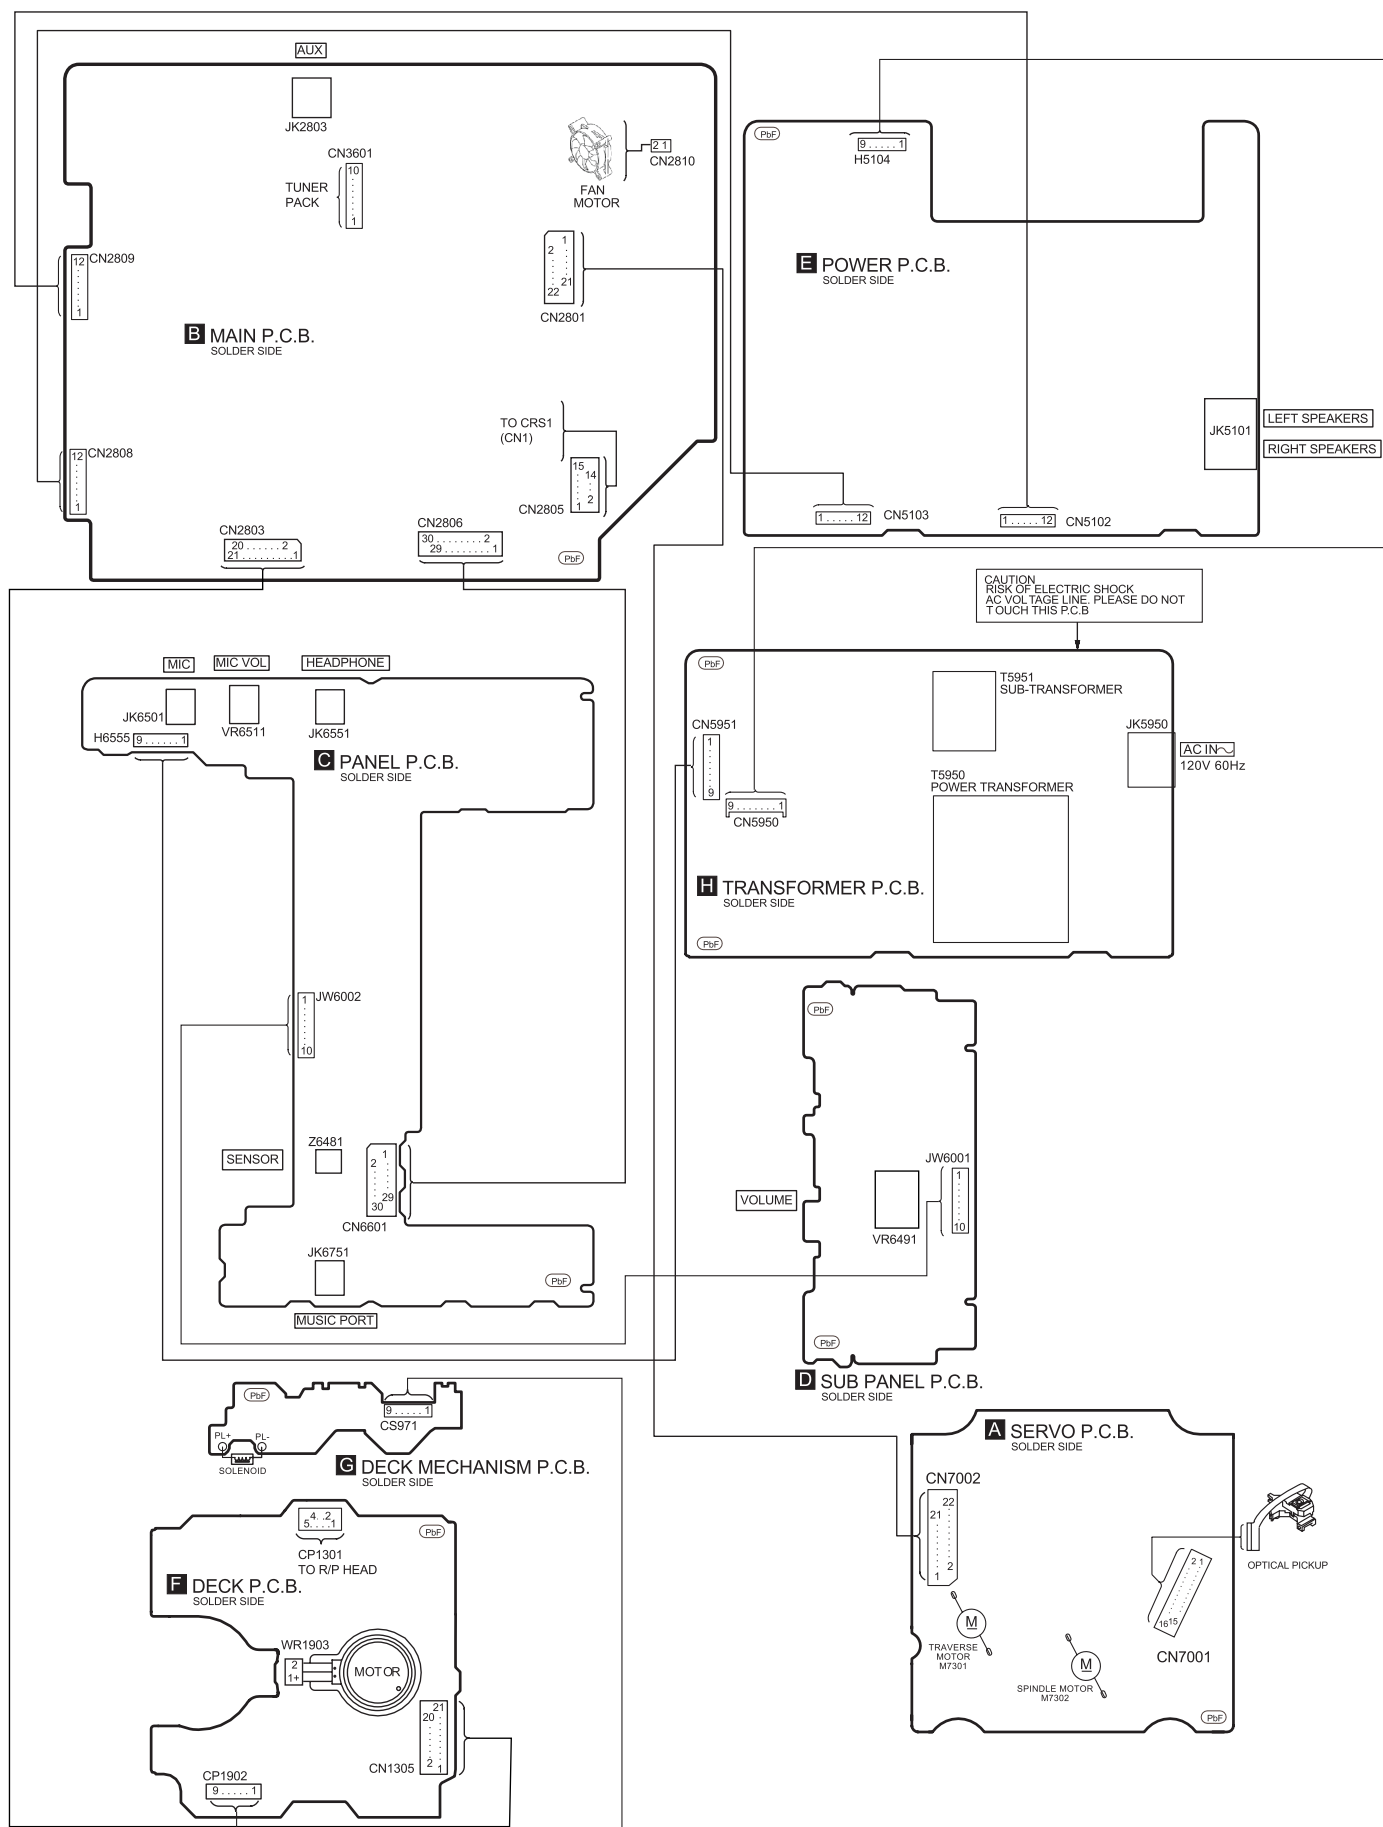




17.2. Deck/ Deck Mechanism Diagram

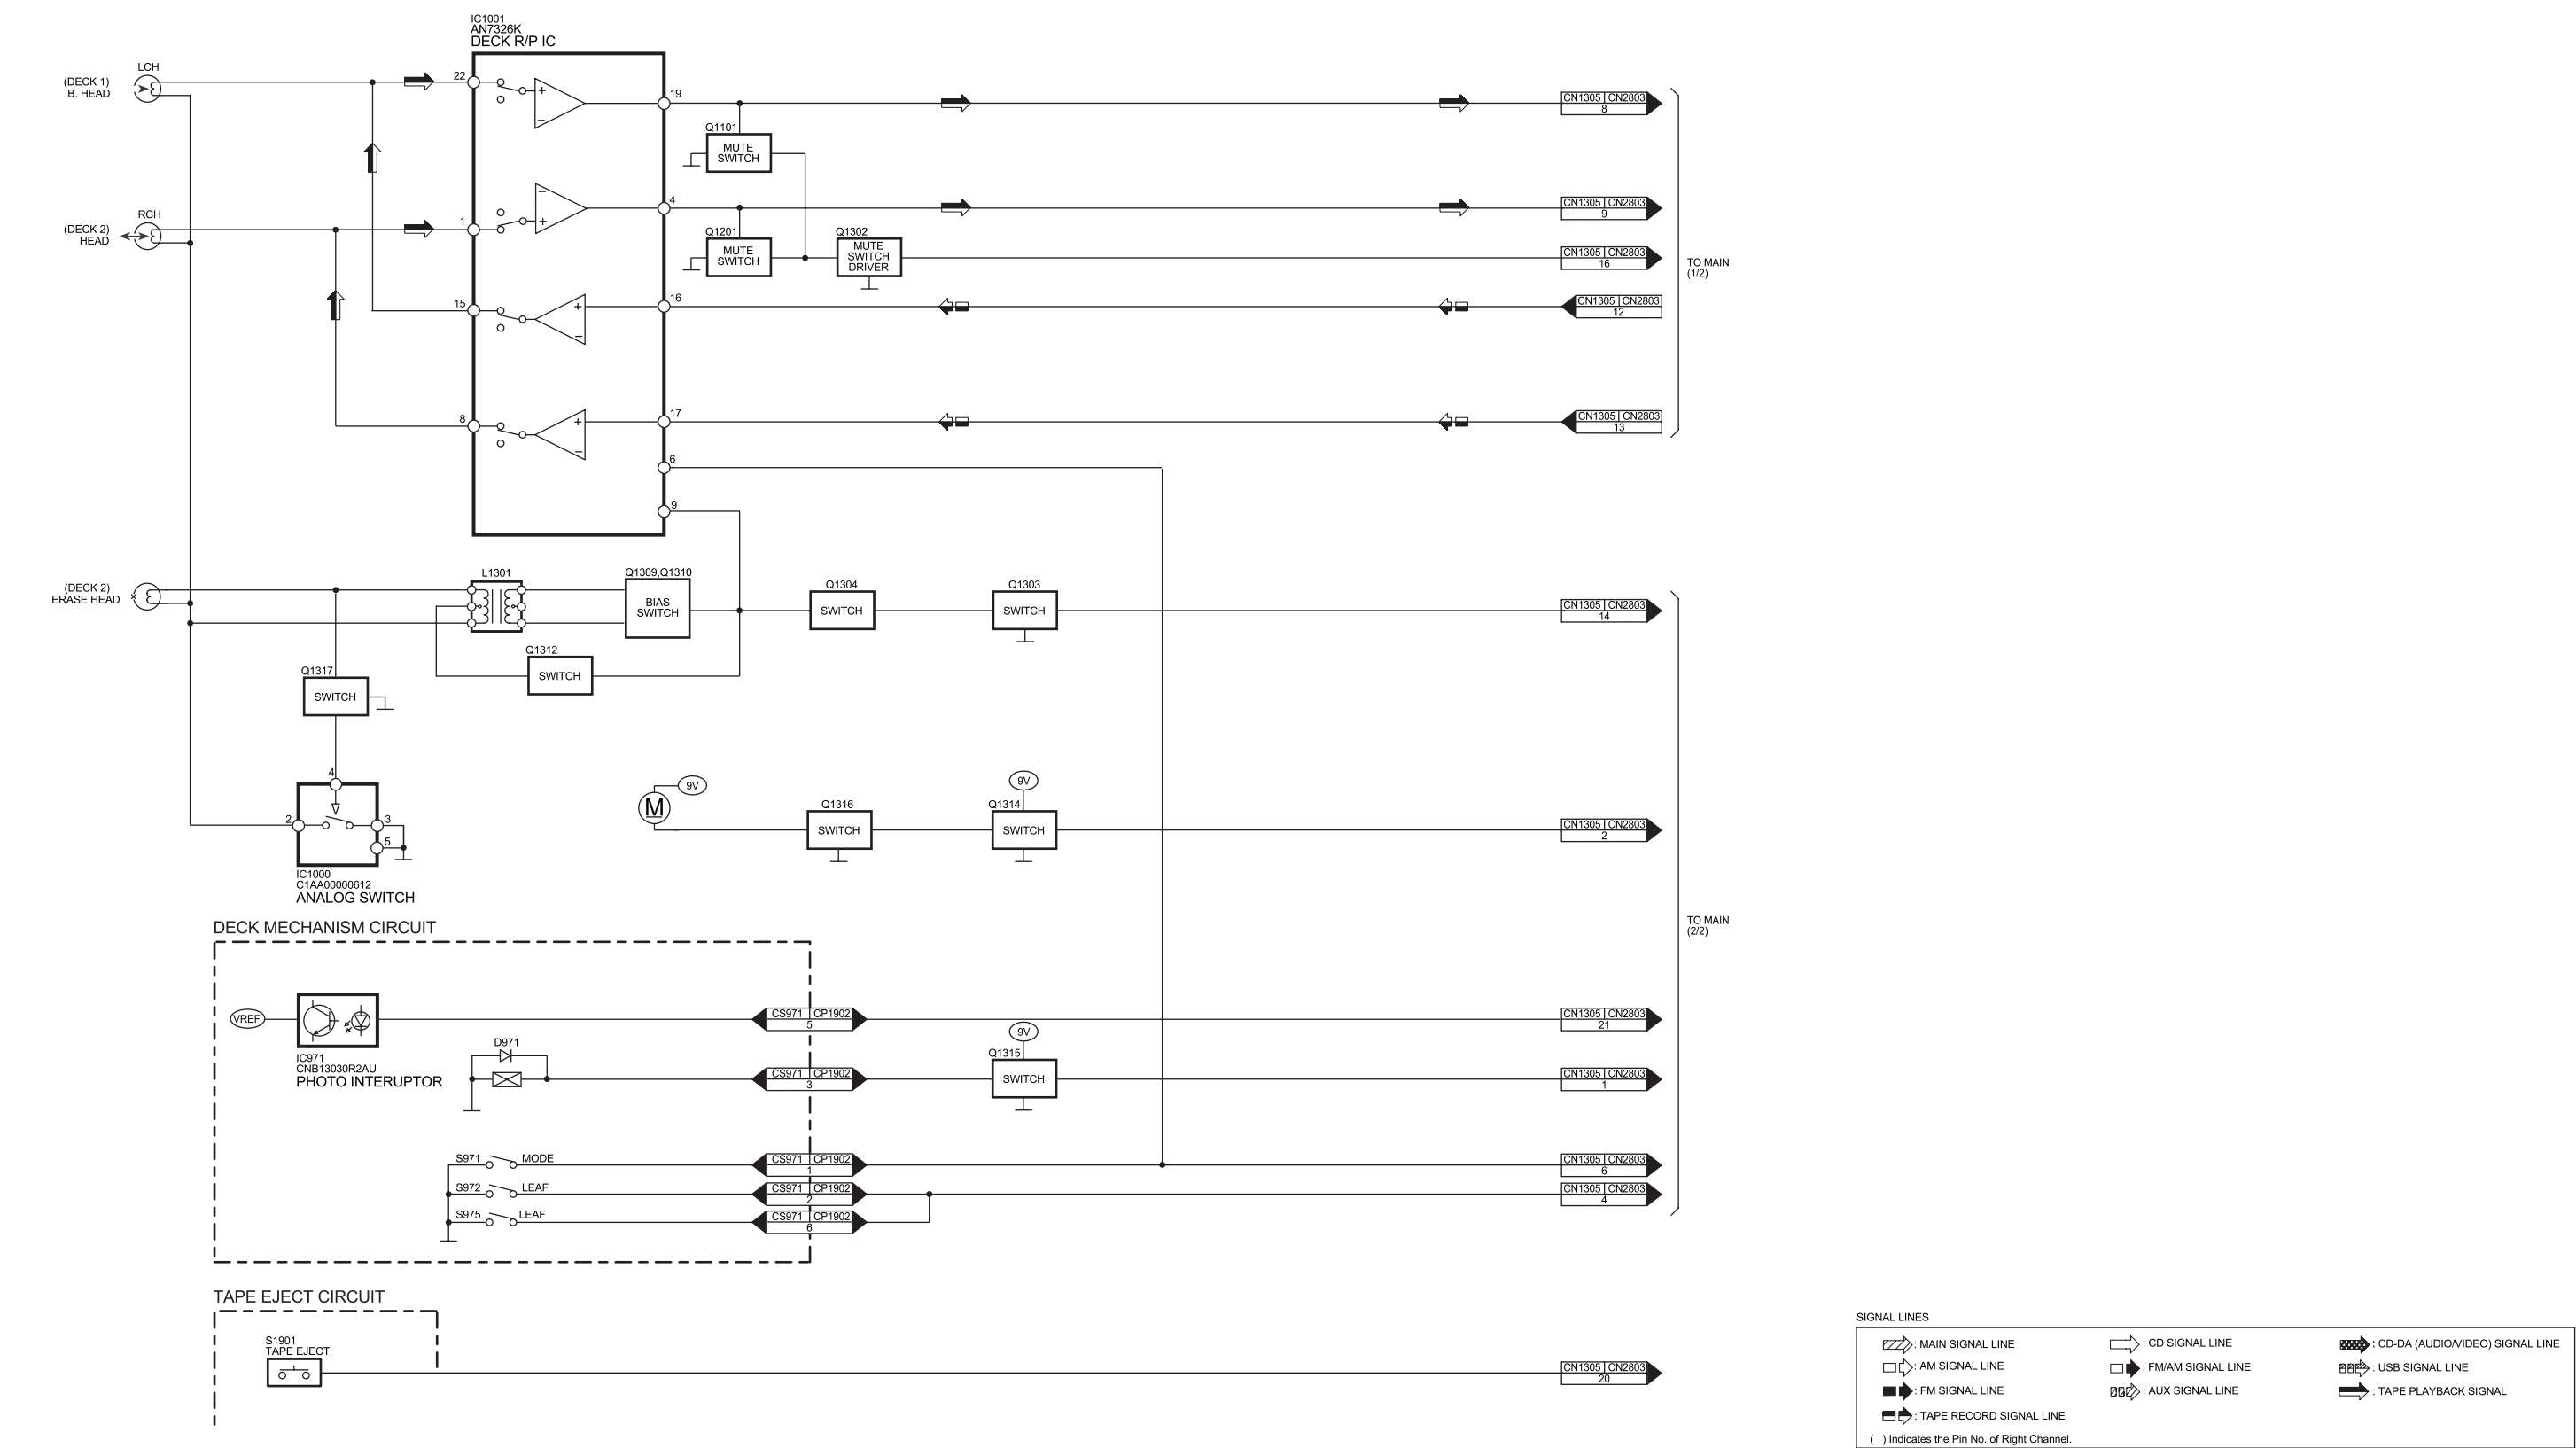


SA-AK350PL DECK/DECK MECHANISM BLOCK DIAGRAM

17.3. Main Diagram

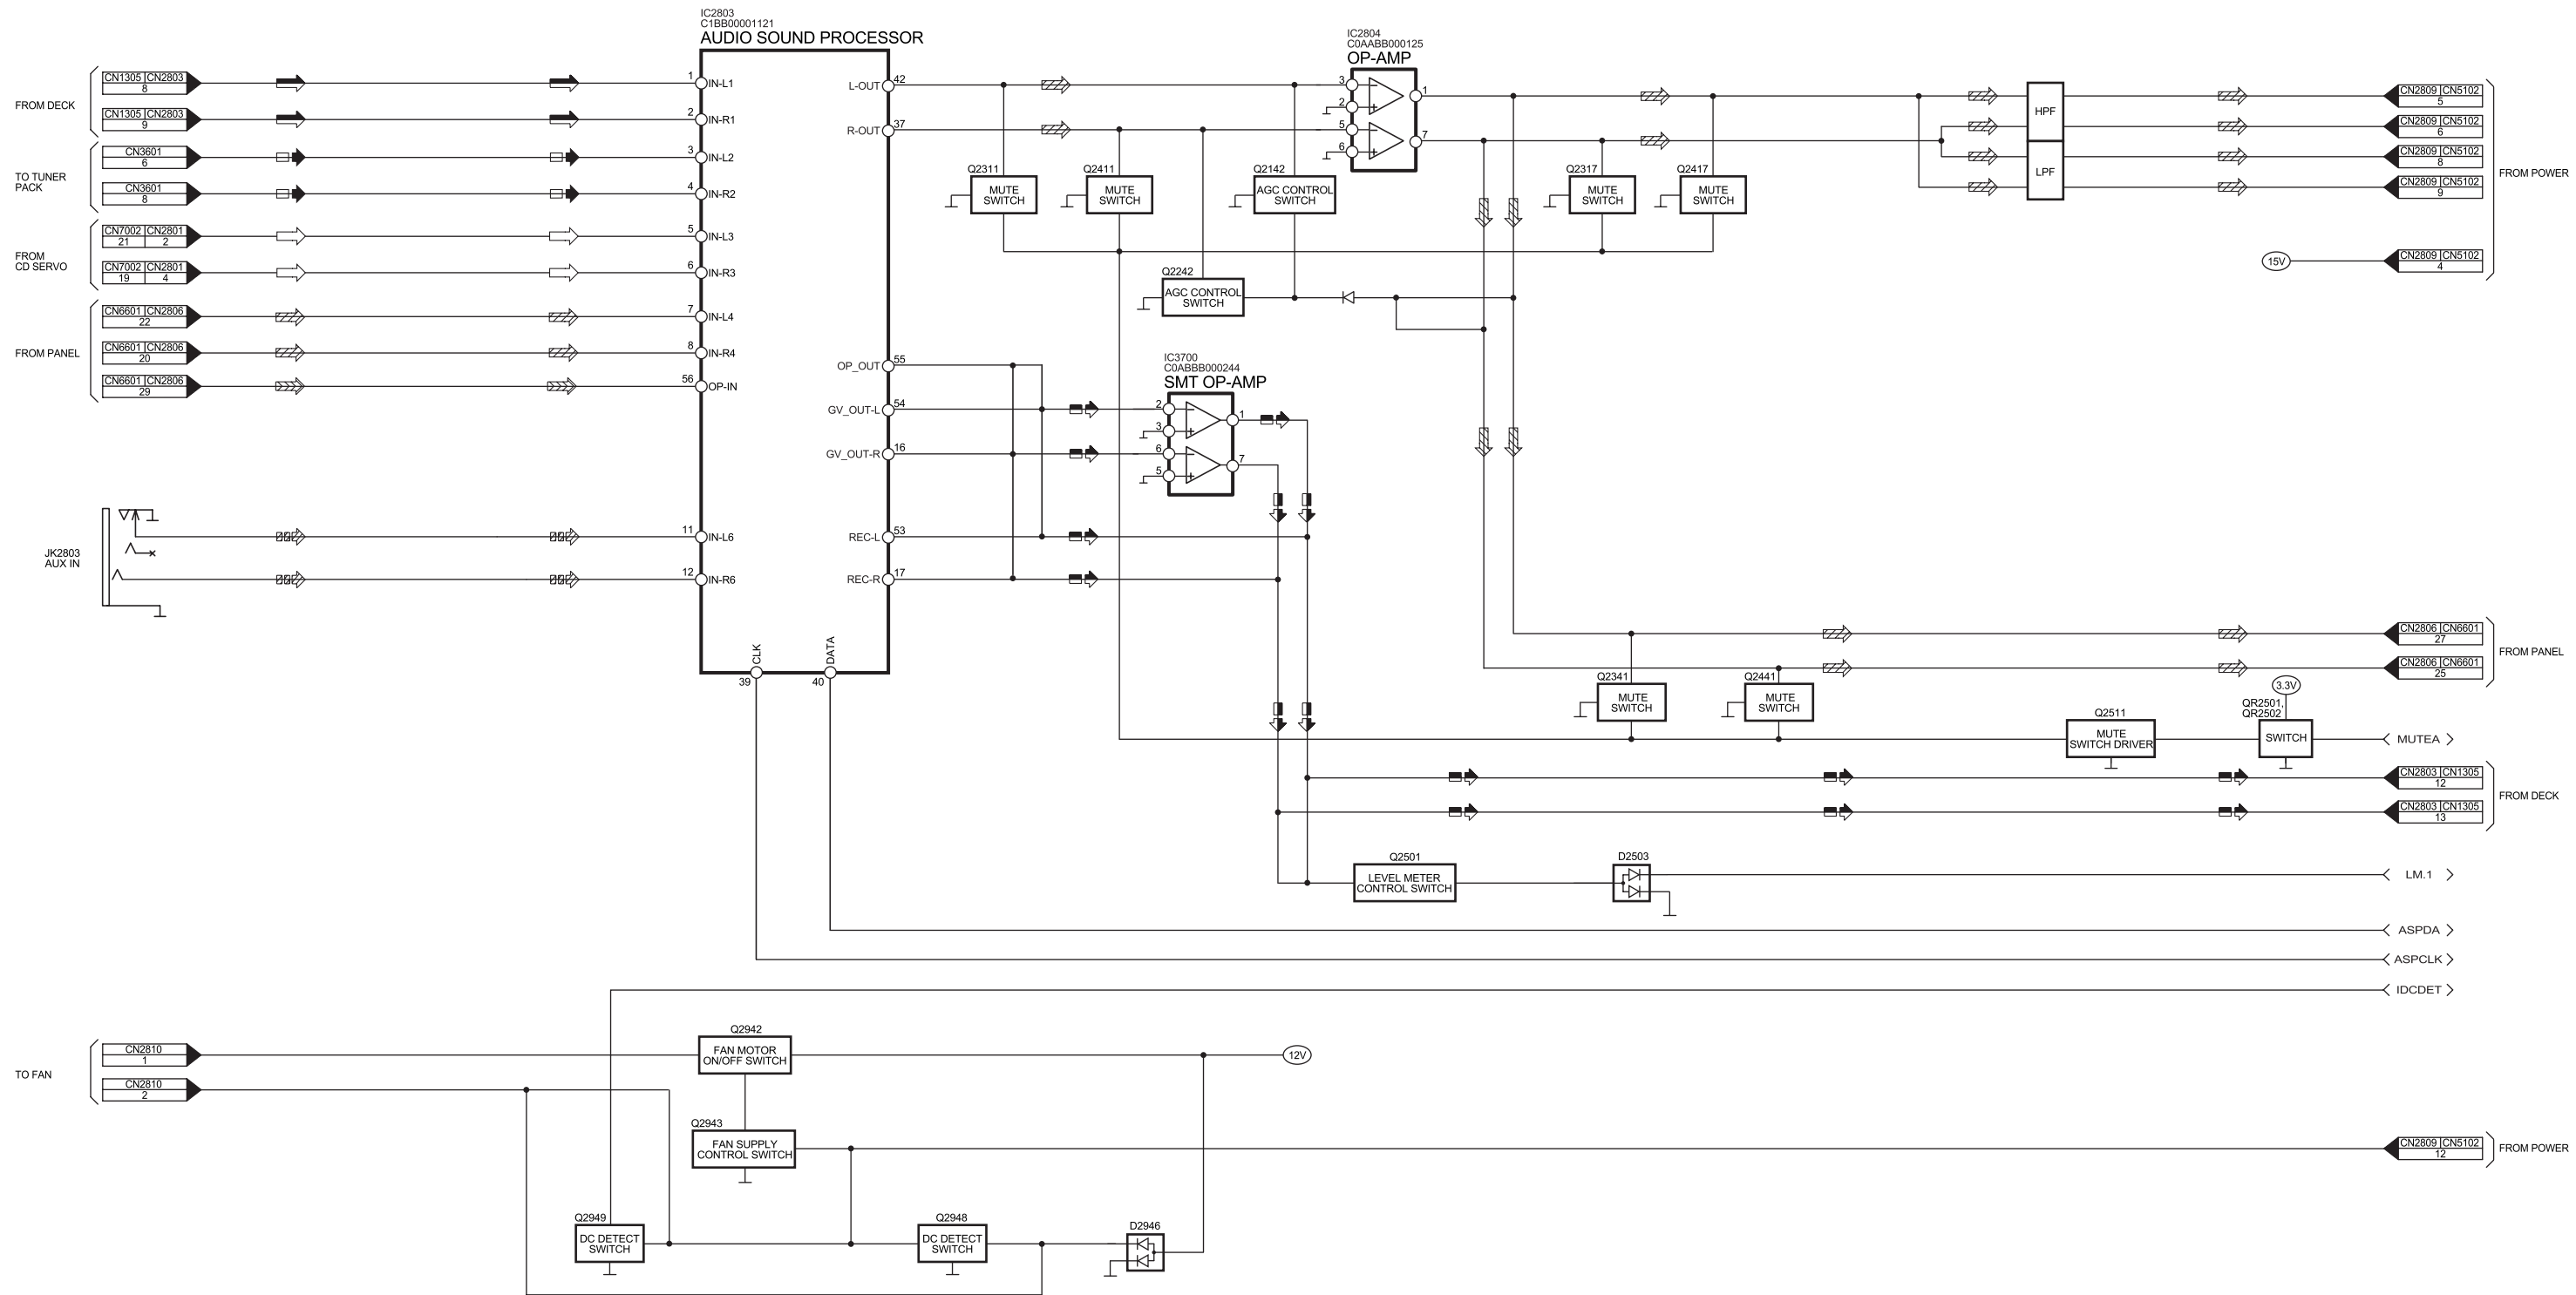


SA-AK350PL MAIN 1/2 DIAGRAM

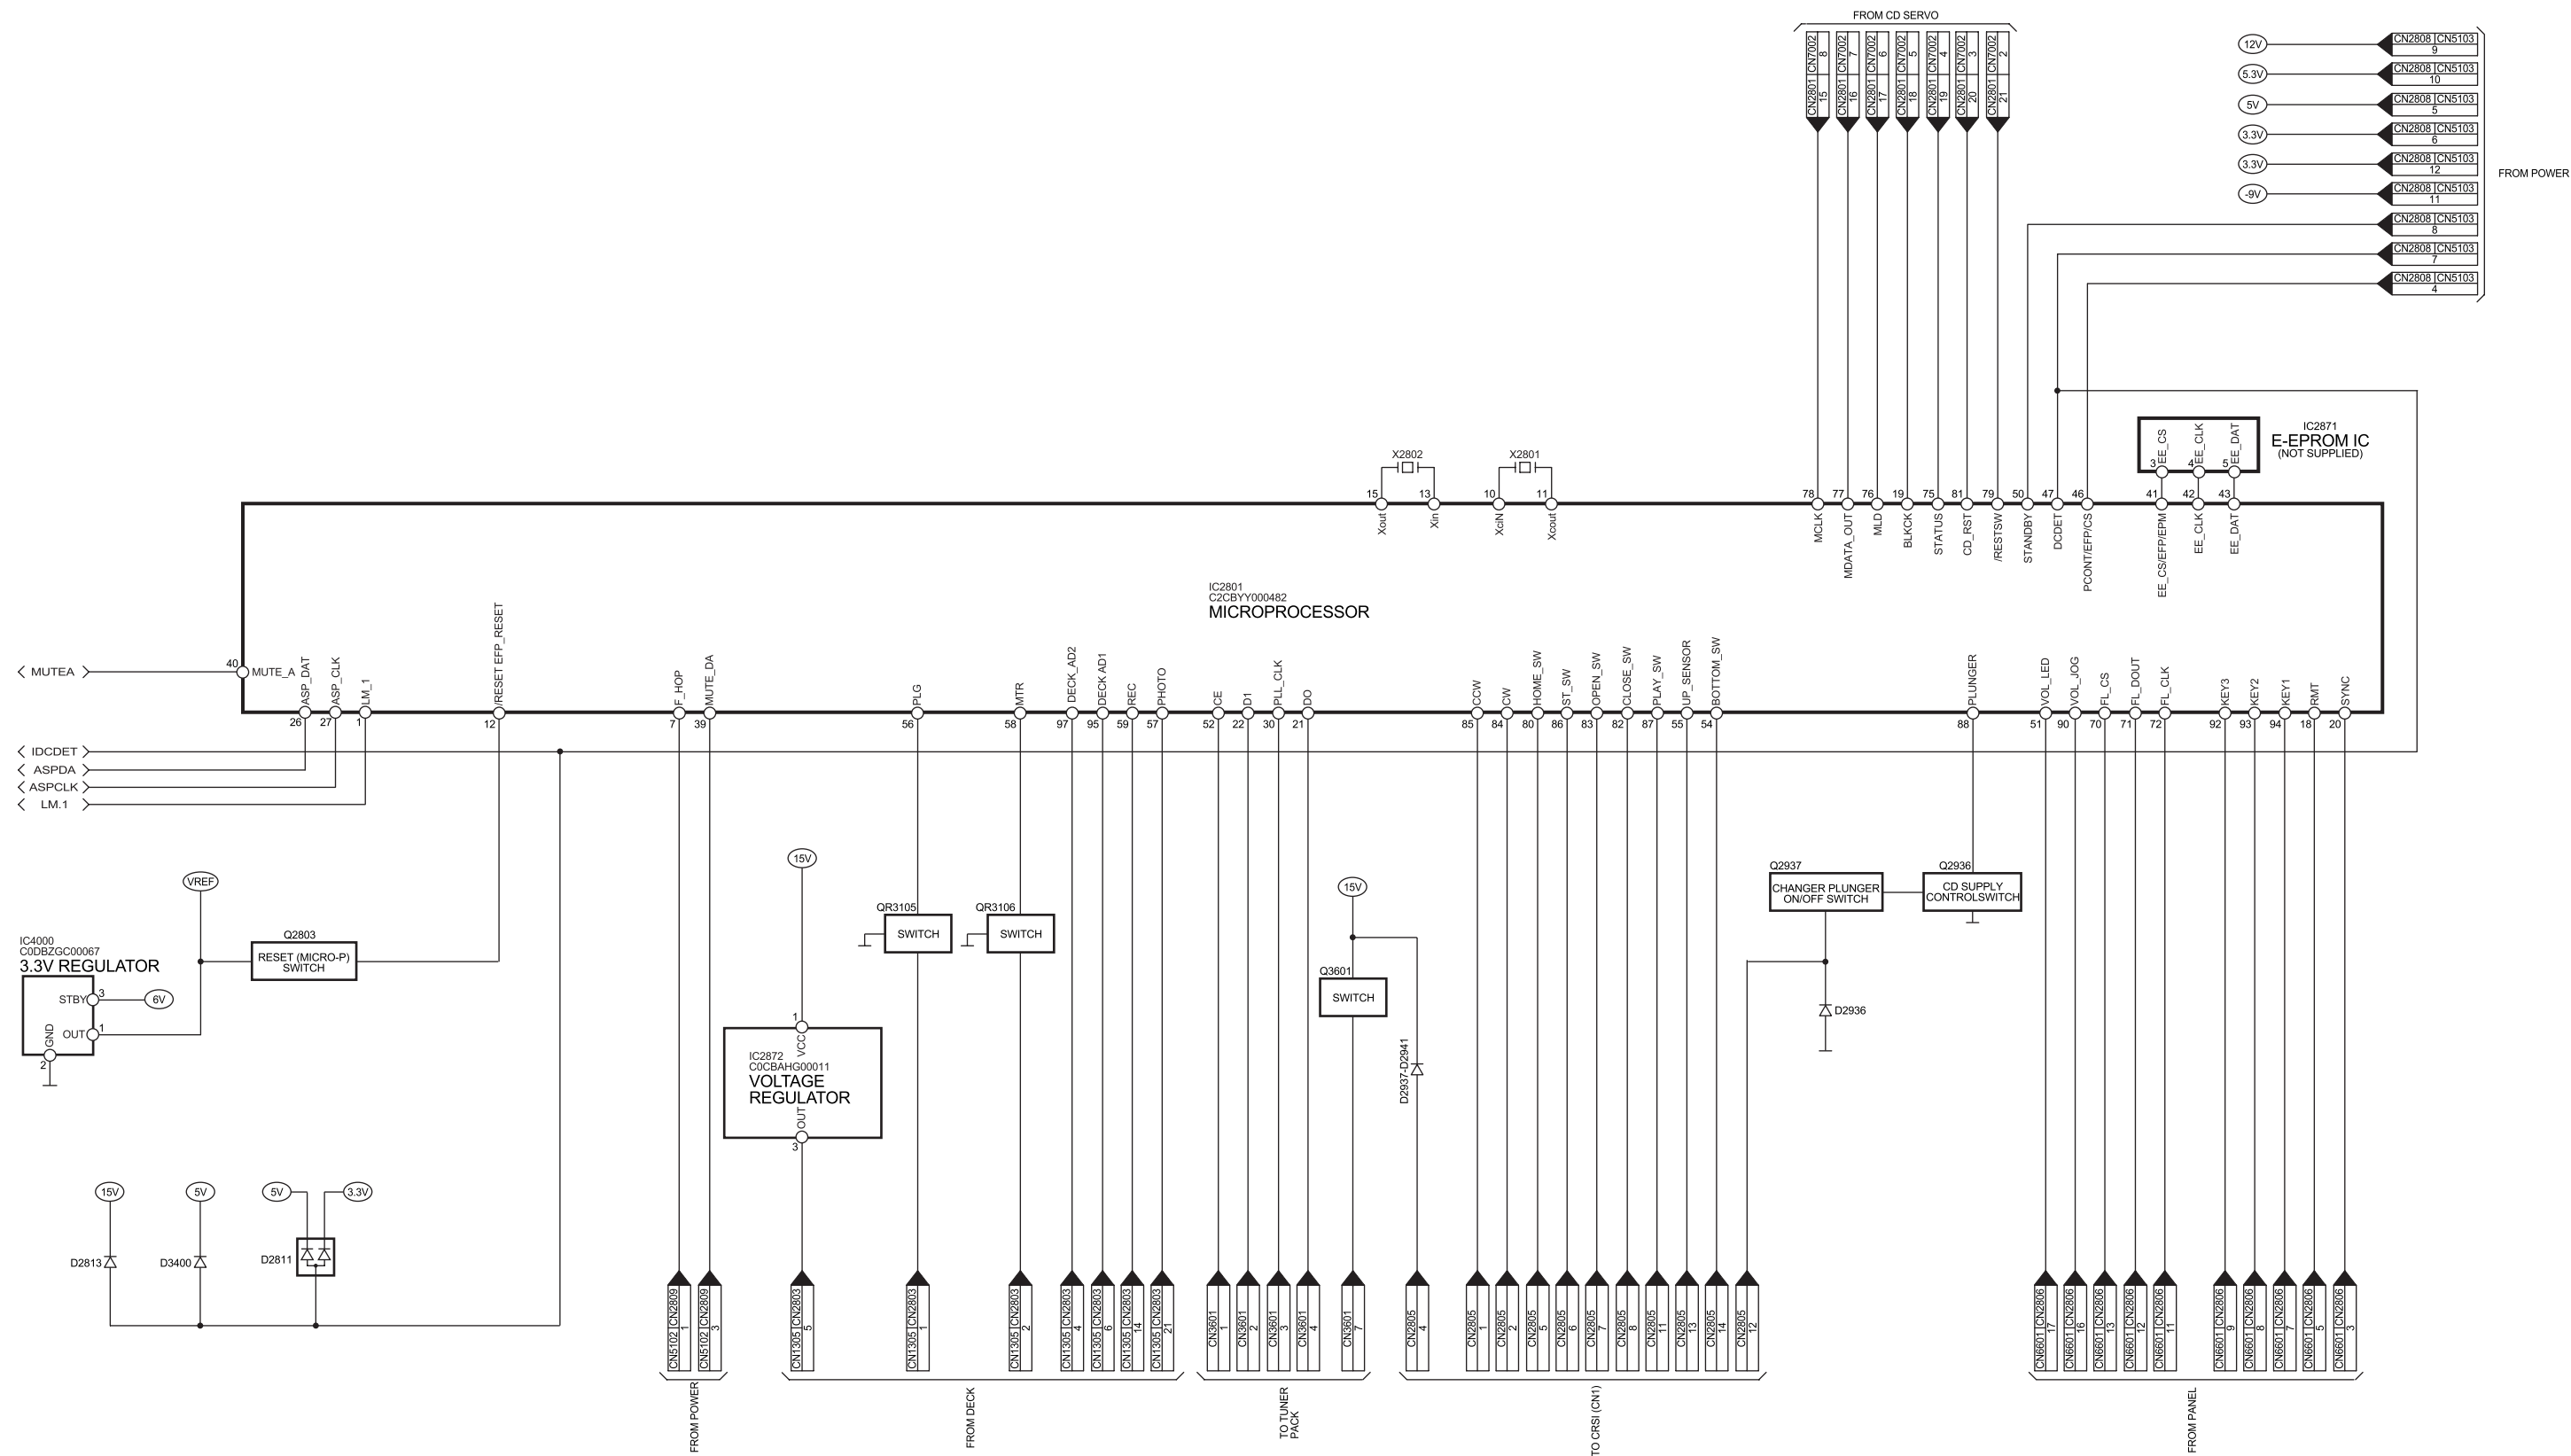


SA-AK350PL MAIN 2/2 DIAGRAM


17.4. Panel Diagram

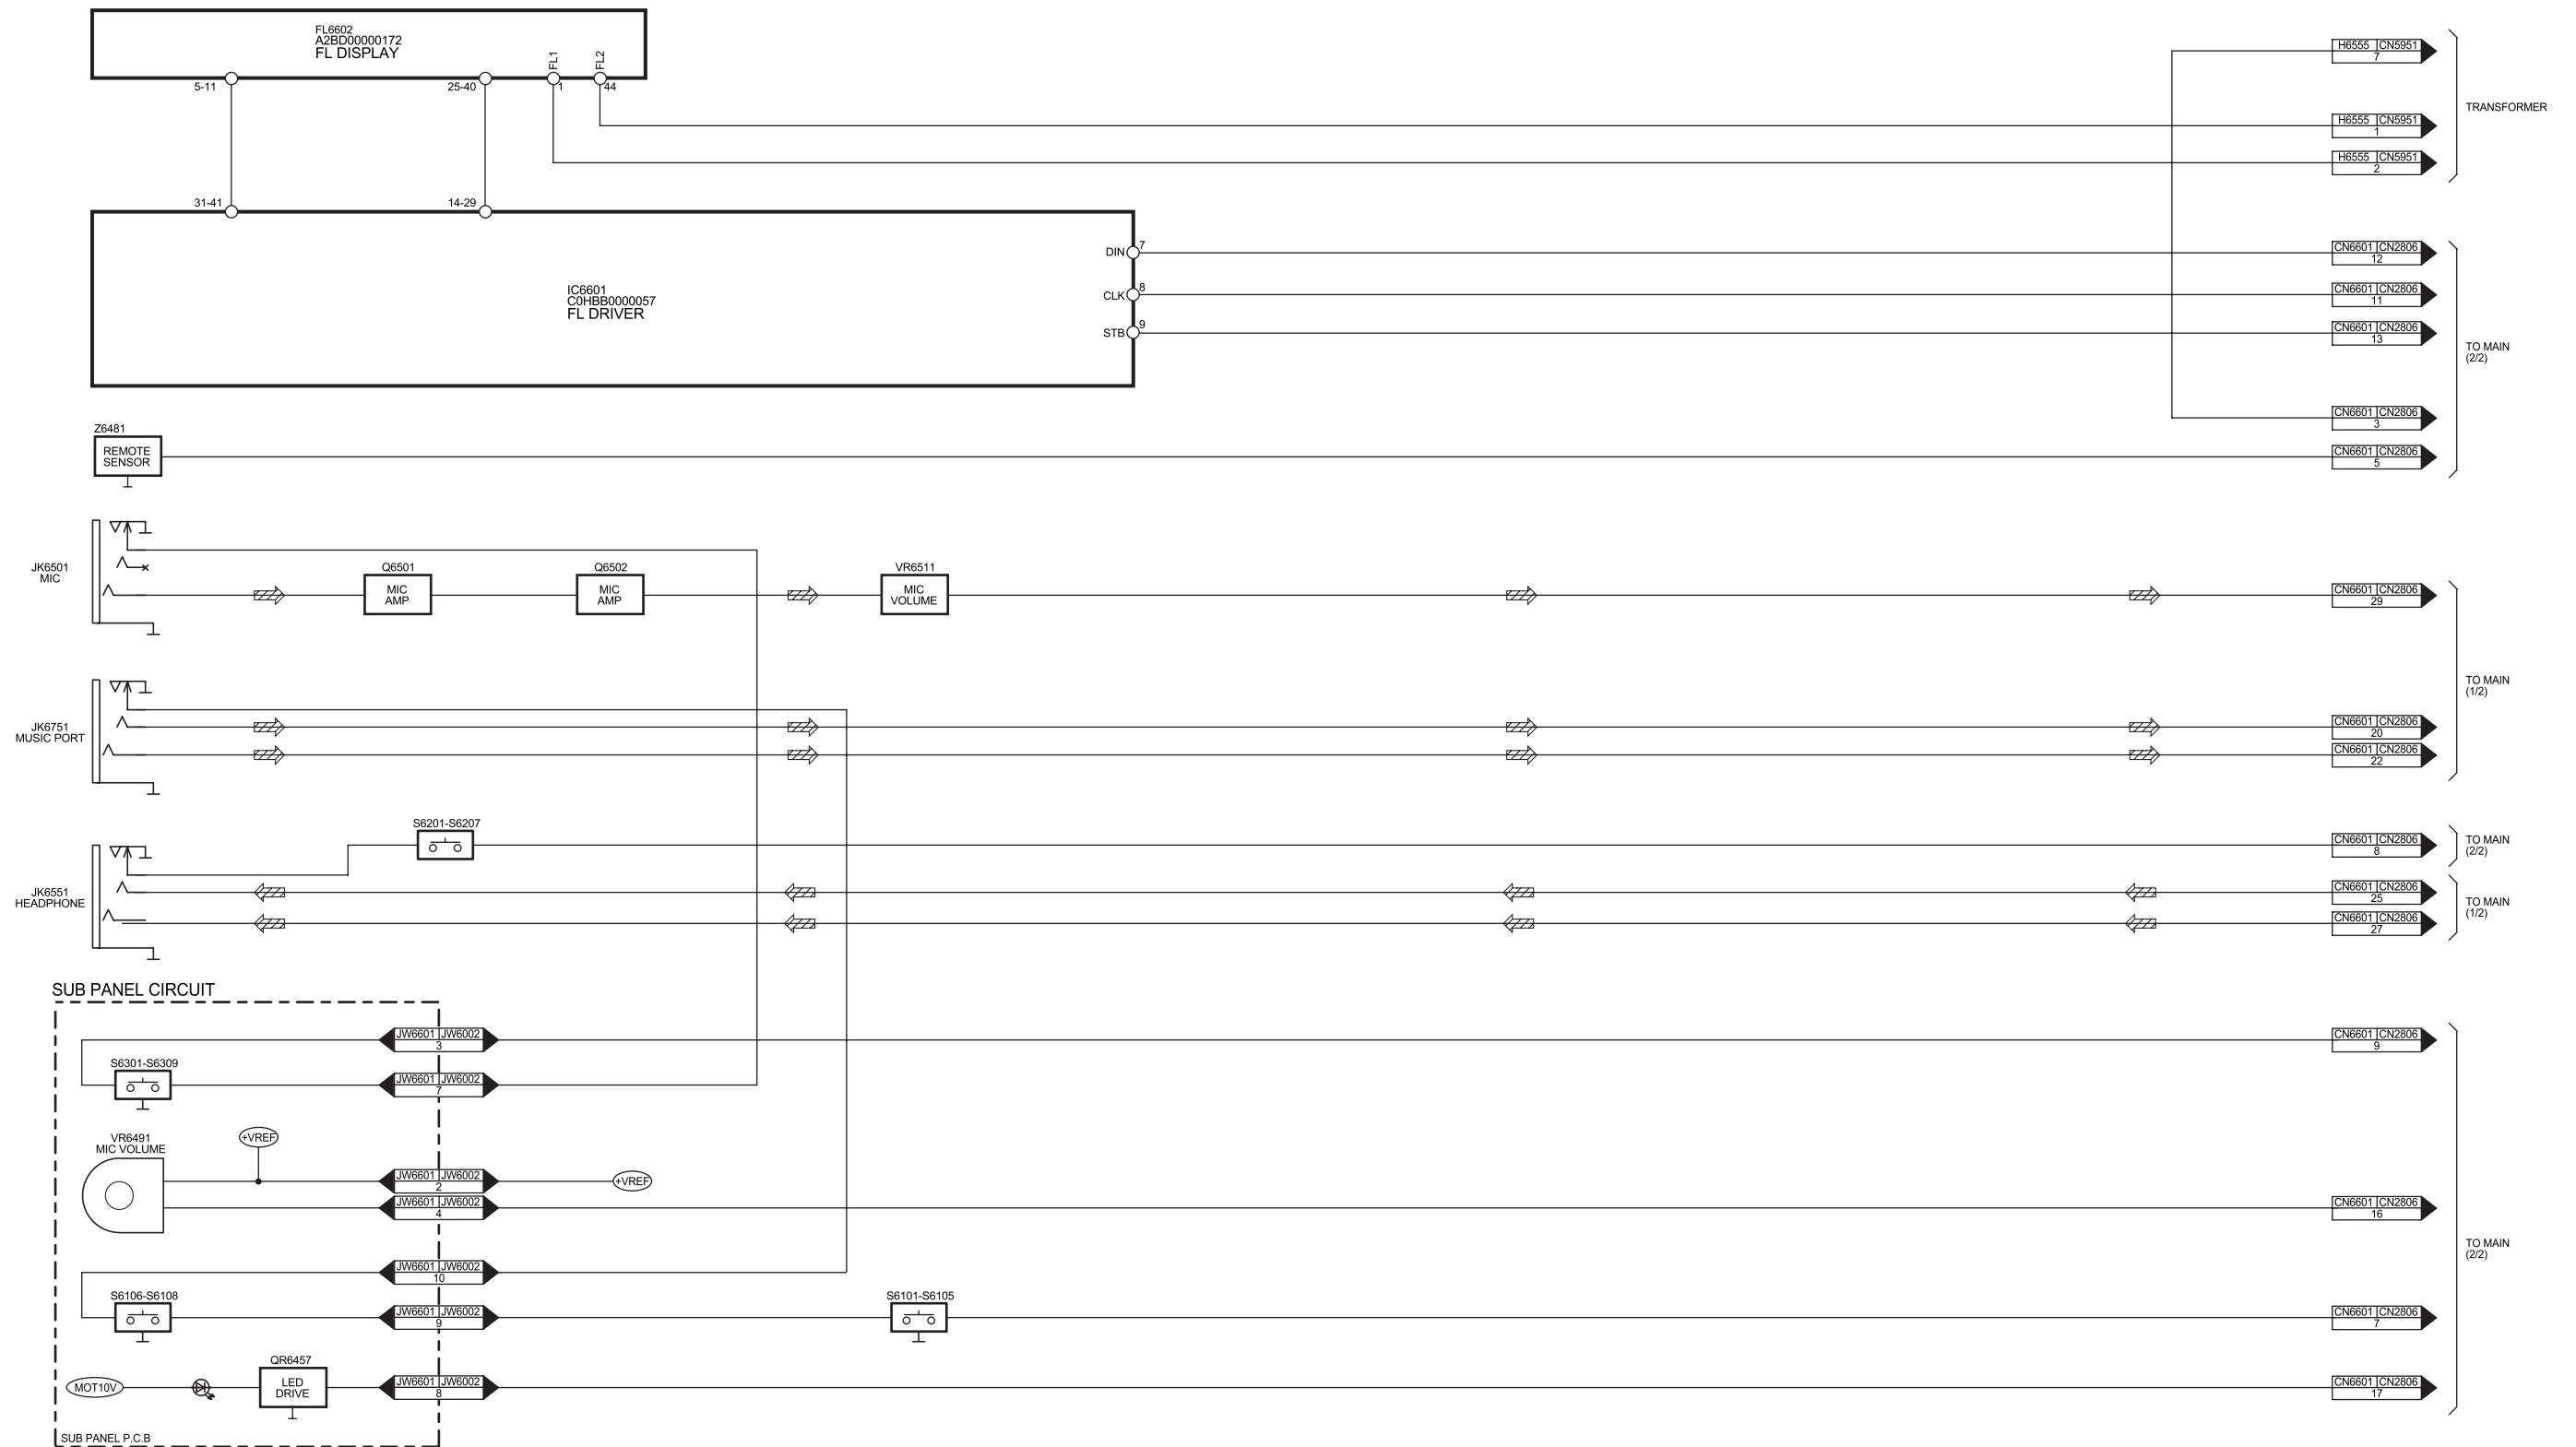

SA-AK350PL PANEL DIAGRAM
















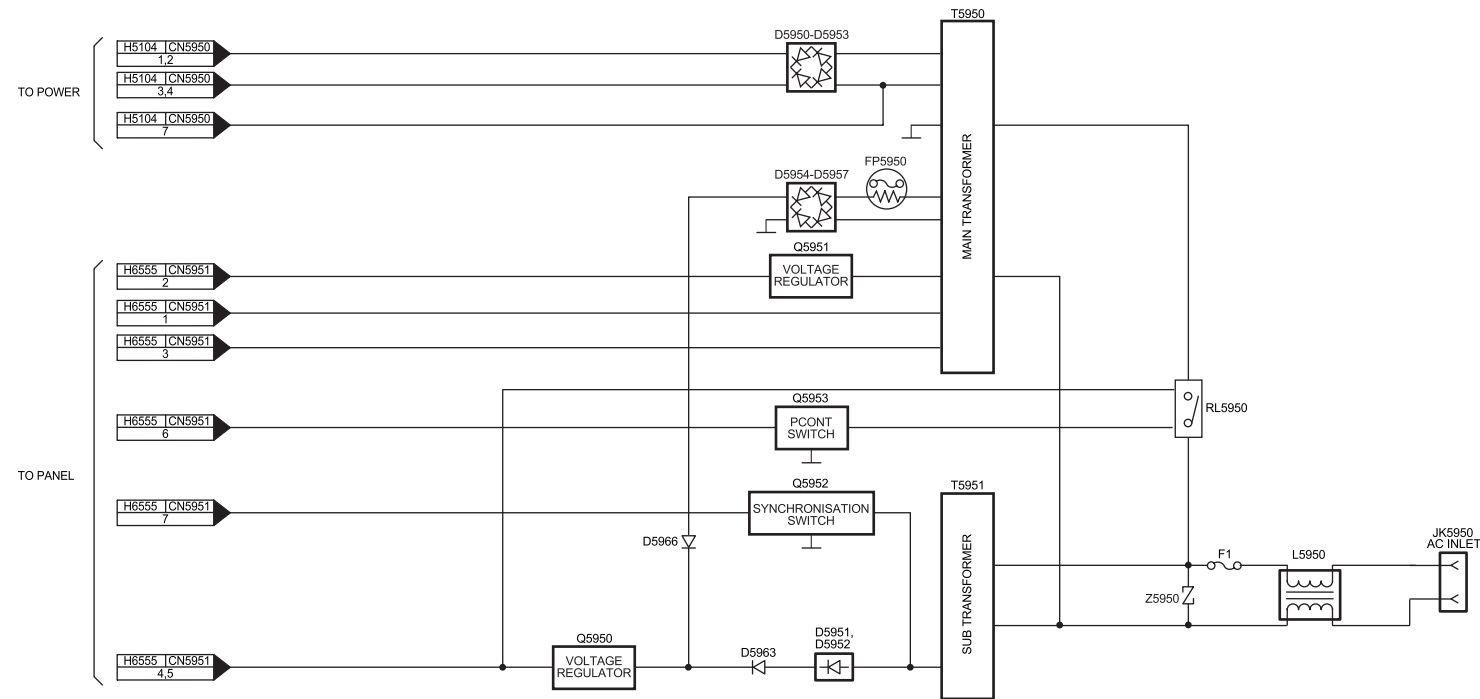



17.6. Transformer Diagram



18 Notes Of Schematic Diagram

(All schematic diagrams may be modified at any time with the development of new technology)

Notes:

| | |
|----------------|--|
| S971: | Mode switch. |
| S972: | Half switch. |
| S975: | Rec_Inh_F switch. |
| S6101: | Ac In ( /I) switch. |
| S6102: | Multi Change () switch. |
| S6103: | Open/ Close () switch. |
| S6104: | Single Change () switch. |
| S6105: | USB () switch. |
| S6106: | Stop/ -Demo (STOP, ) switch. |
| S6108: | Hard Bass switch. |
| S6201: | CD1 (1 ) switch. |
| S6202: | CD2 (2 ) switch. |
| S6203: | CD3 (3 ) switch. |
| S6204: | CD4 (4 ) switch. |
| S6205: | CD5 (5 ) switch. |
| S6206: | /FF/ (FF / ) switch. |
| S6207: | /REW/ (REW / ) switch. |
| S6301: | Open () switch. |
| S6302: | CD (CD,  /II) switch. |
| S6303: | Tape (TAPE, ) switch. |
| S6304: | Tuner/ FM/ AM switch. |
| S6305: | Ext In switch. |
| S6306: | Rec () switch. |
| S6307: | M.EQ+ switch. |
| S6308: | Manual EQ switch. |
| S6309: | M.EQ- switch. |
| S7201: | Rest switch. |
| VR6491: | VR Volume jog. |
| VR6511: | VR Mic Volume jog. |



: Main Signal line



: FM/AM Signal line



: Tape Record Signal line



: Tape Playback Signal line




: Aux Signal line



: MIC Signal line

• Importance safety notice :

Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

• Resistor

Unit of resistance is OHM [Ω] (K=1,000,000).

• Capacitor

Unit of resistance is μ F, unless otherwise noted. F=Farad, pF=Pico-Farad

• Coil

Unit of inductance is H, unless otherwise noted.

• Voltage and Signal lines:



: +B Signal line




: -B Signal line



: CD DA Signal line



: CD Signal line

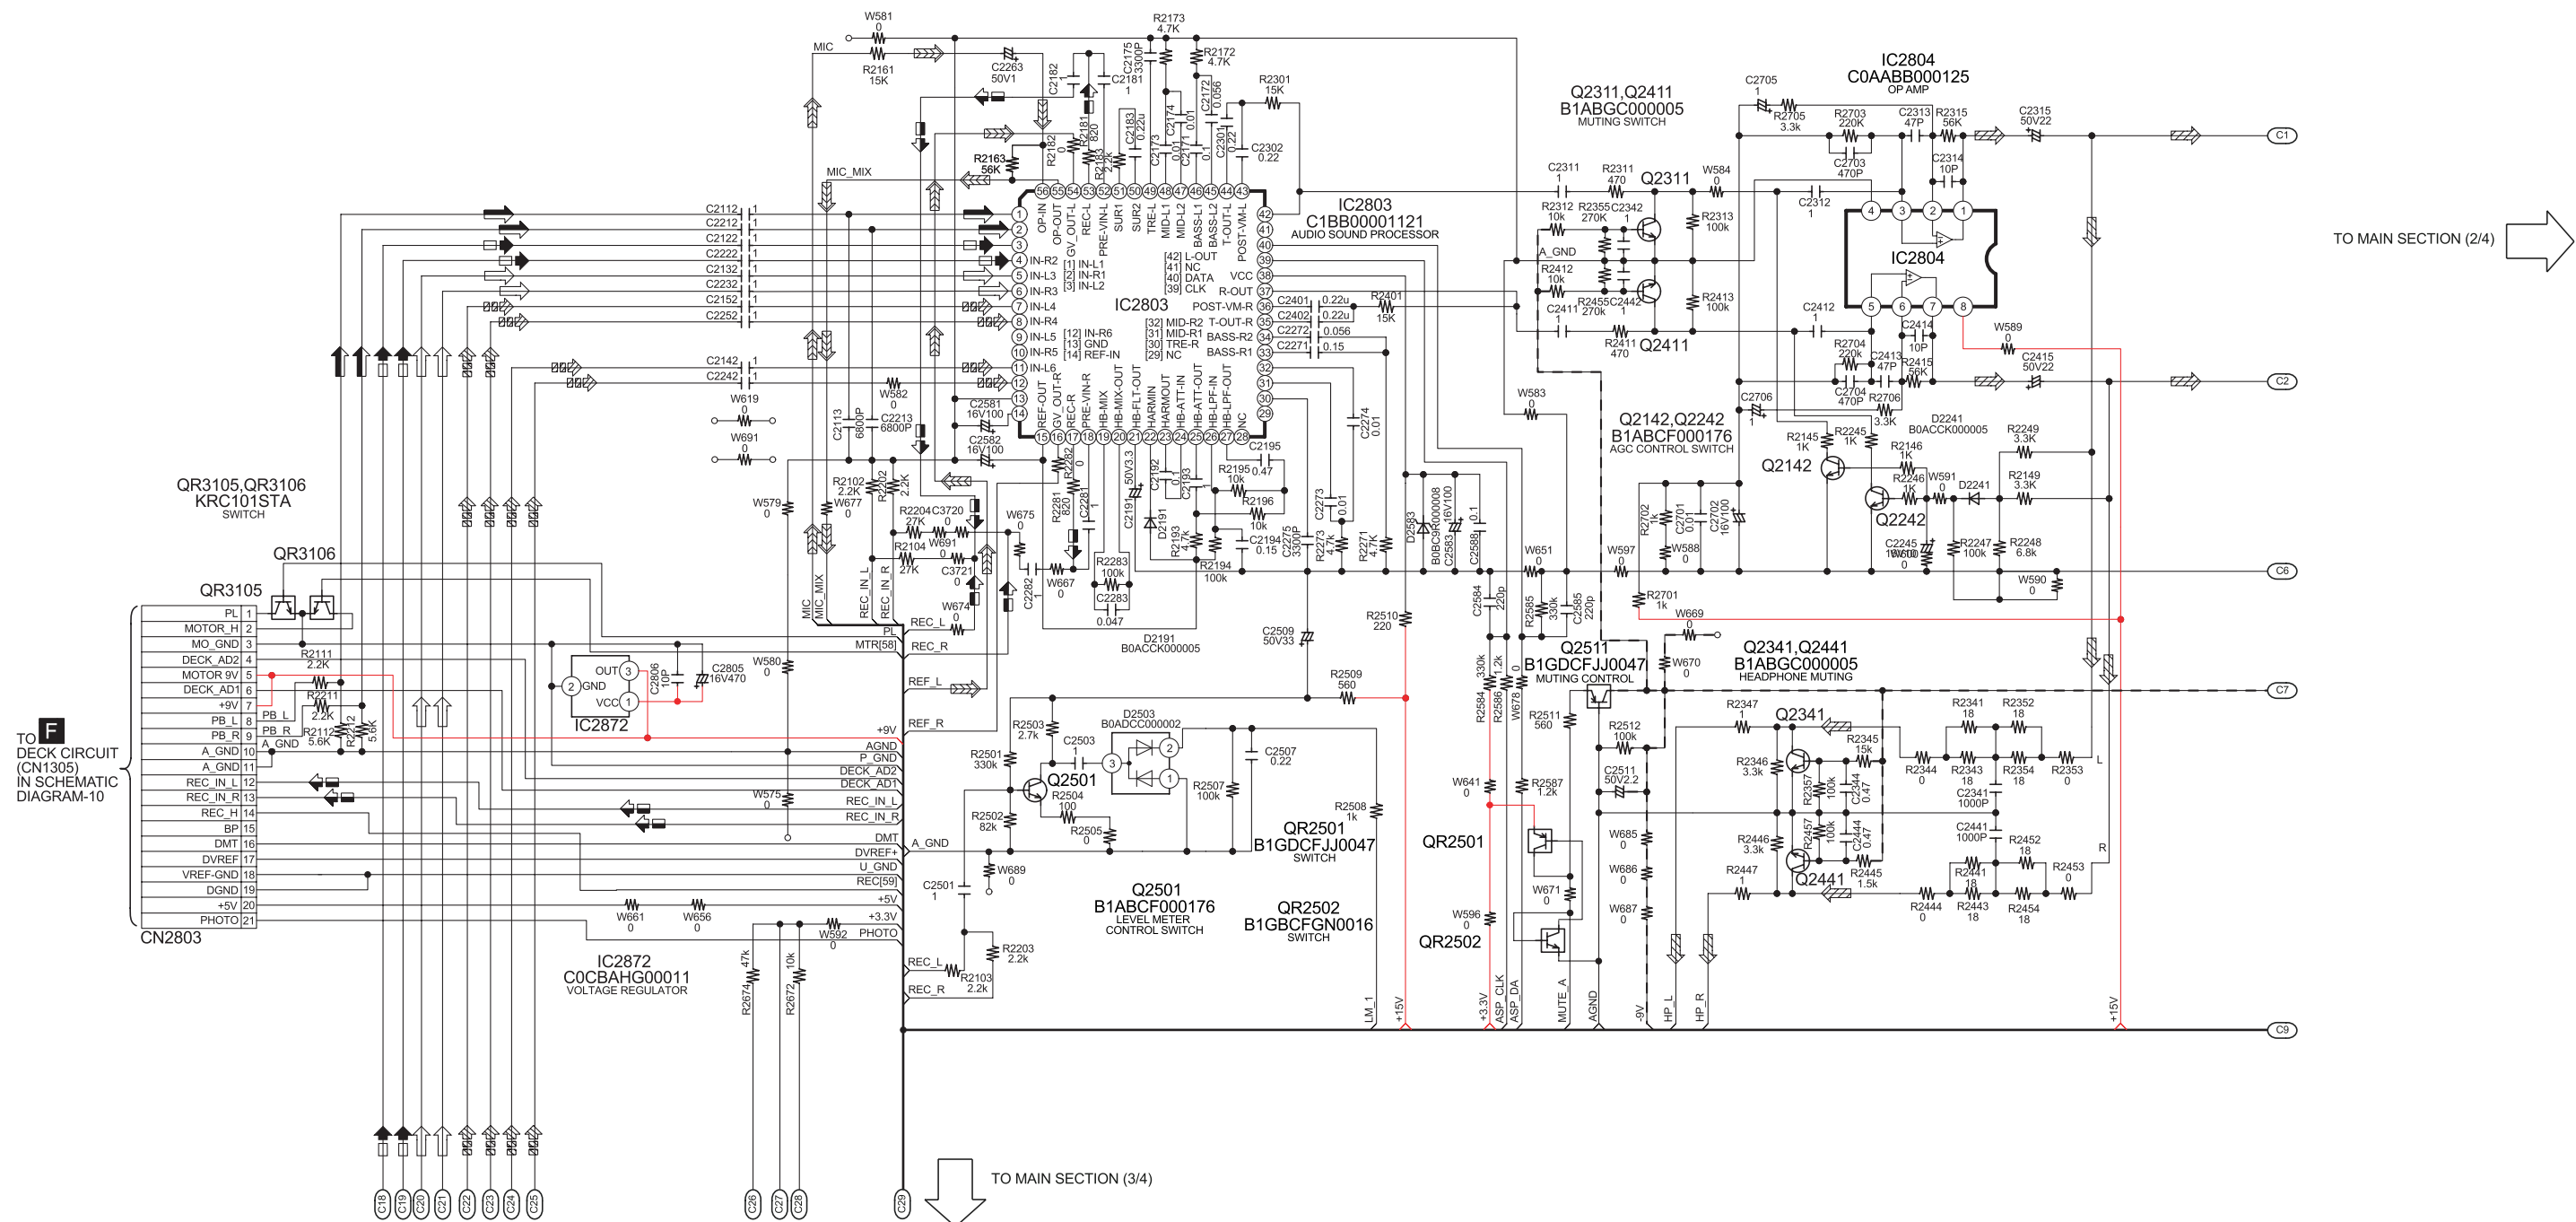


SCHEMATIC DIAGRAM - 3

B MAIN CIRCUIT

— : +B SIGNAL LINE  : TAPE RECORD SIGNAL LINE  : MAIN SIGNAL LINE  : MIC SIGNAL LINE

← TO MAIN SECTION (1/4)

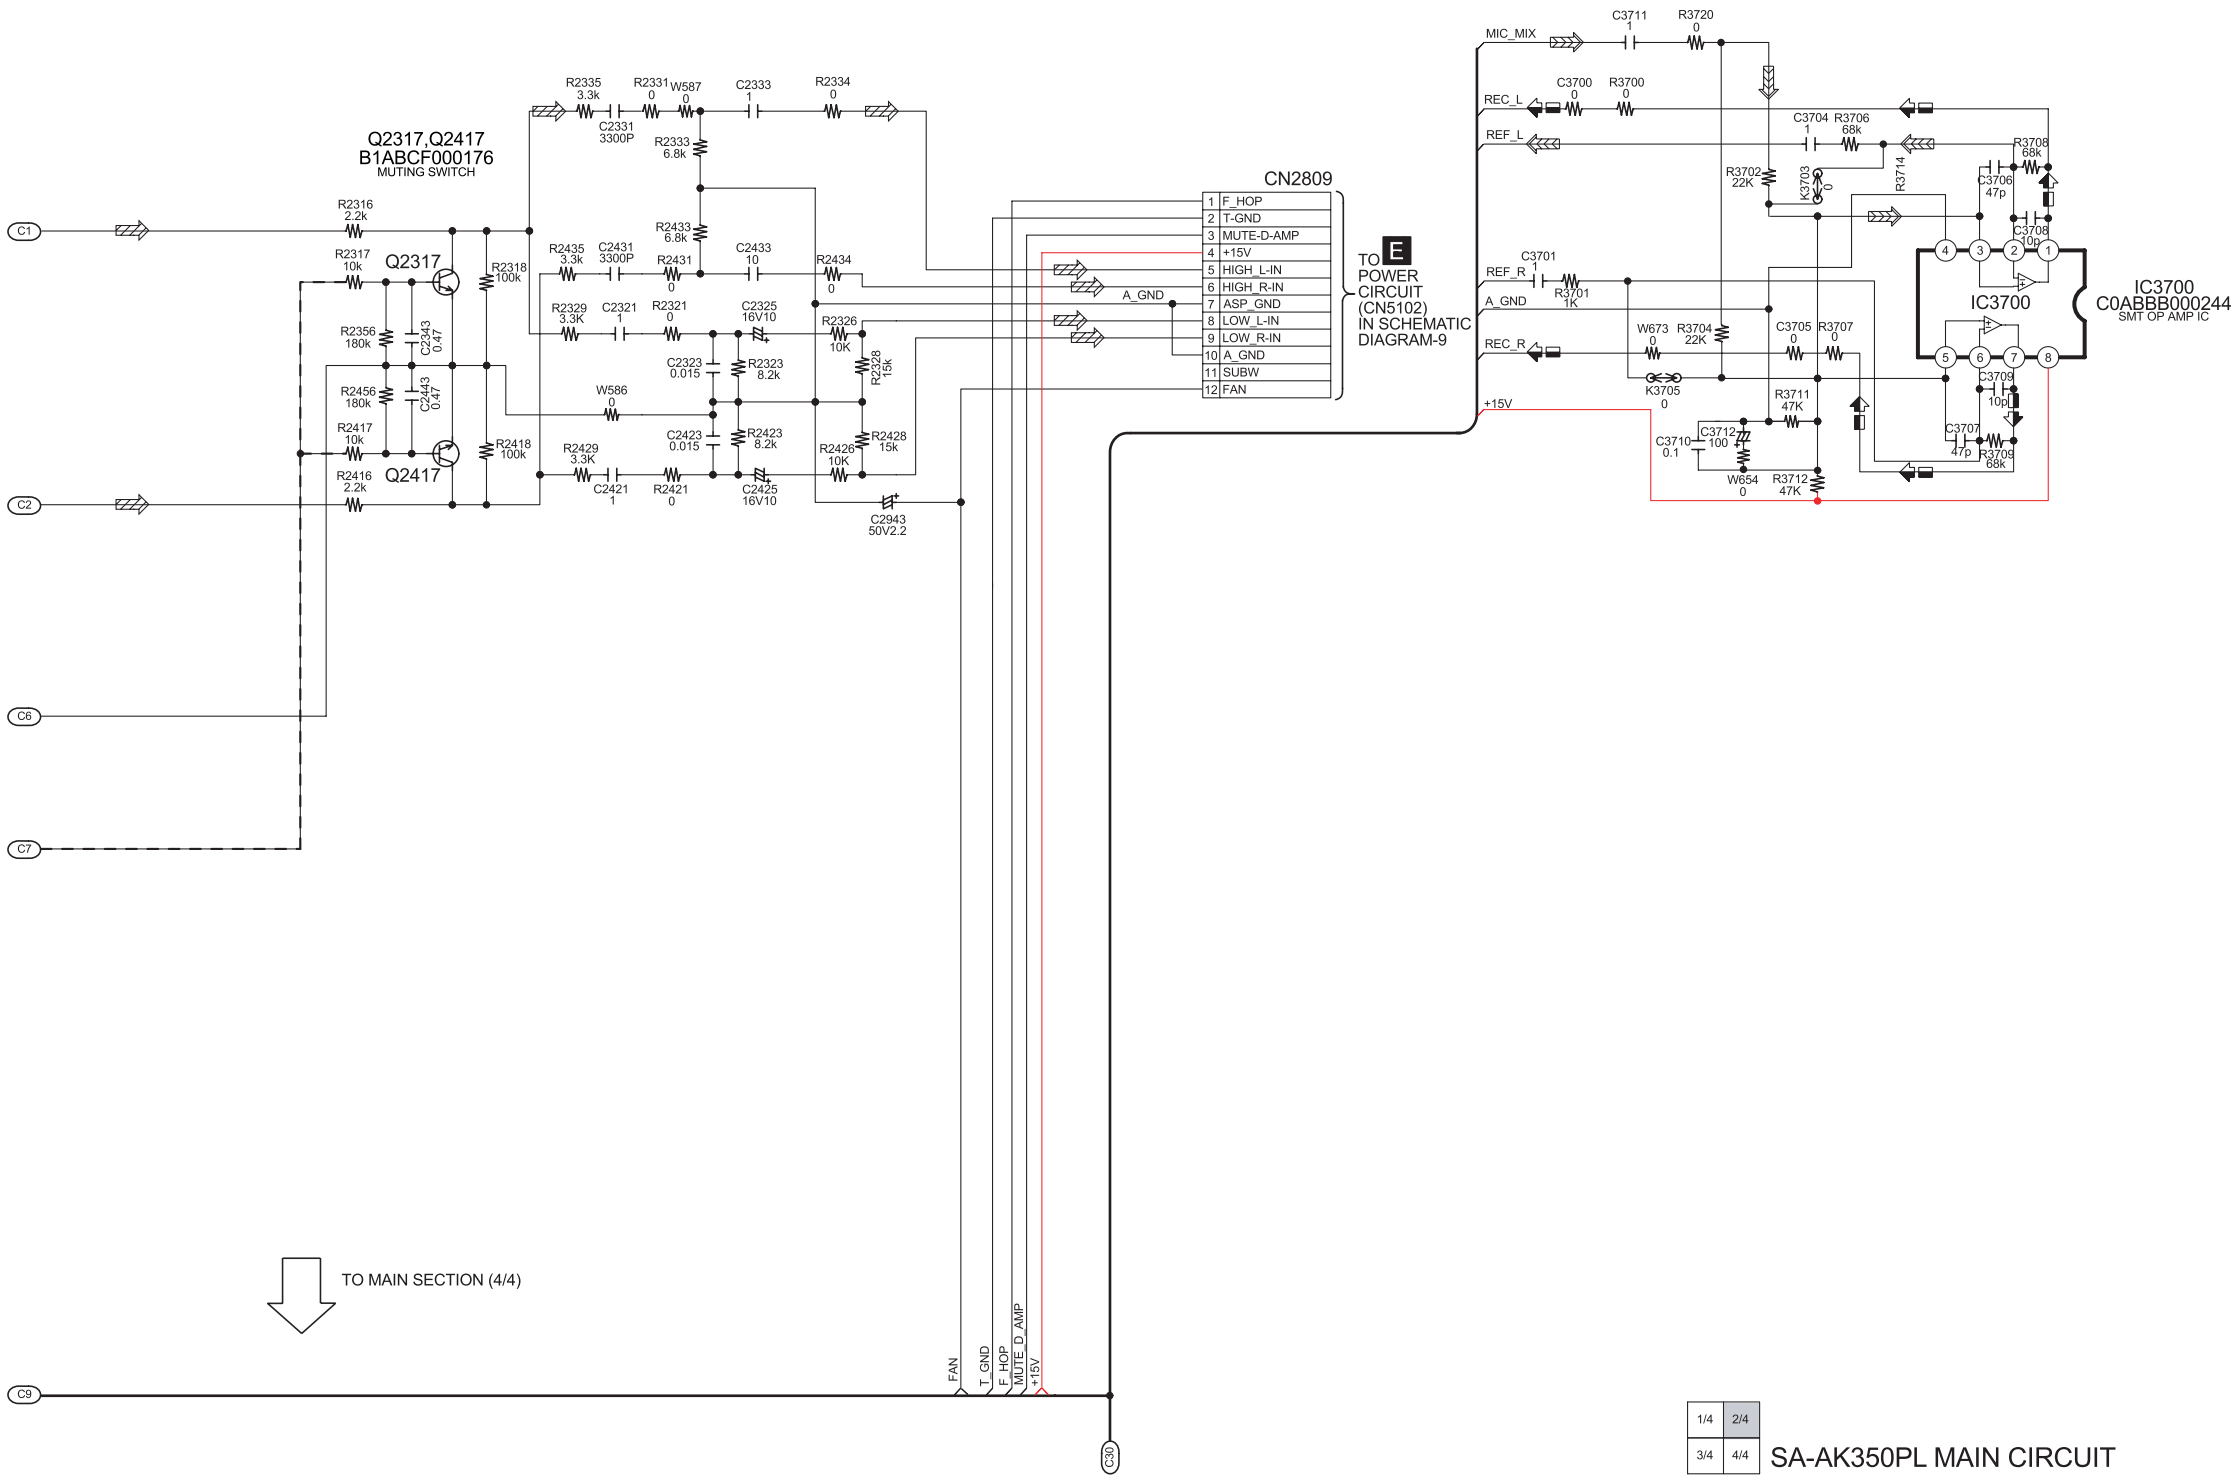

| | |
|-----|-----|
| 1/4 | 2/4 |
| 3/4 | 4/4 |

SA-AK350PL MAIN CIRCUIT



B MAIN CIRCUIT

↑ TO MAIN SECTION (2/4)




H

19.4. (D) Sub Panel Circuit & (G) Deck Mechanism Circuit

SCHEMATIC DIAGRAM - 7


D SUB PANEL CIRCUIT

-+B SIGNAL LINE

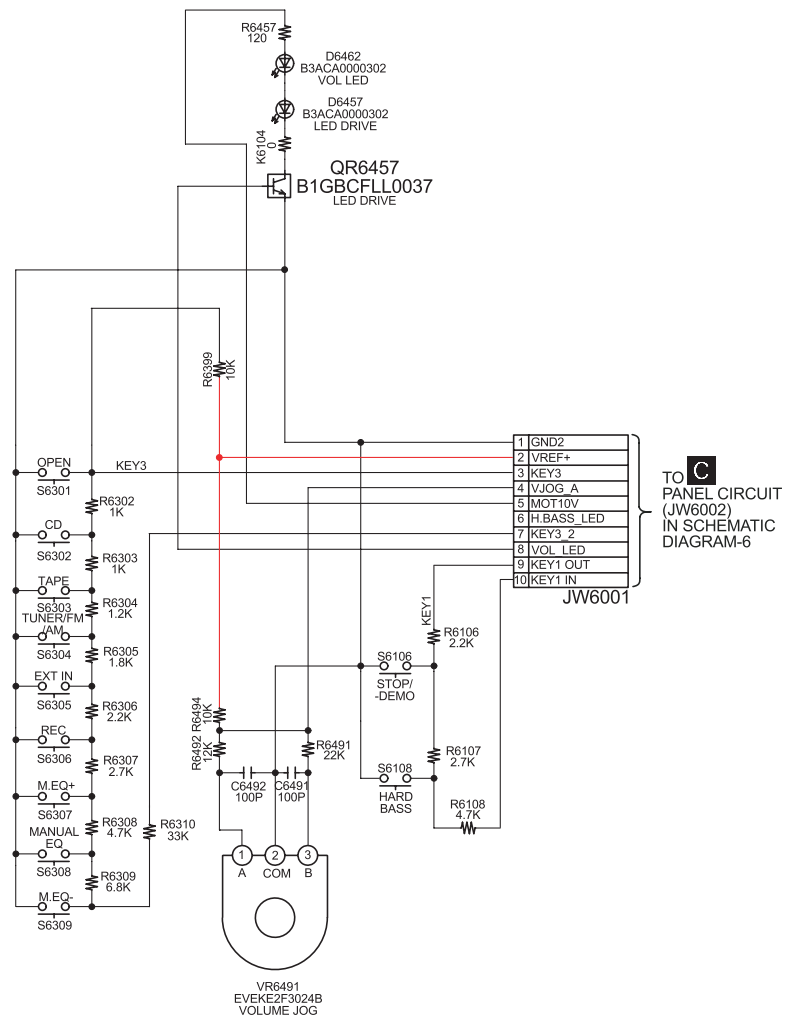


G DECK MECHANISM CIRCUIT

-+B SIGNAL LINE

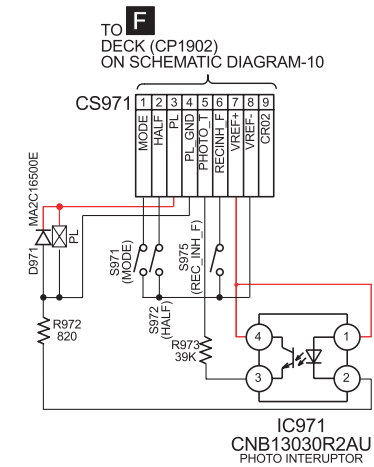

E POWER CIRCUIT




SA-AK350PL POWER CIRCUIT

SCHEMATIC DIAGRAM - 9

E POWER CIRCUIT


— : +B SIGNAL LINE — : -B SIGNAL LINE : MAIN SIGNAL LINE

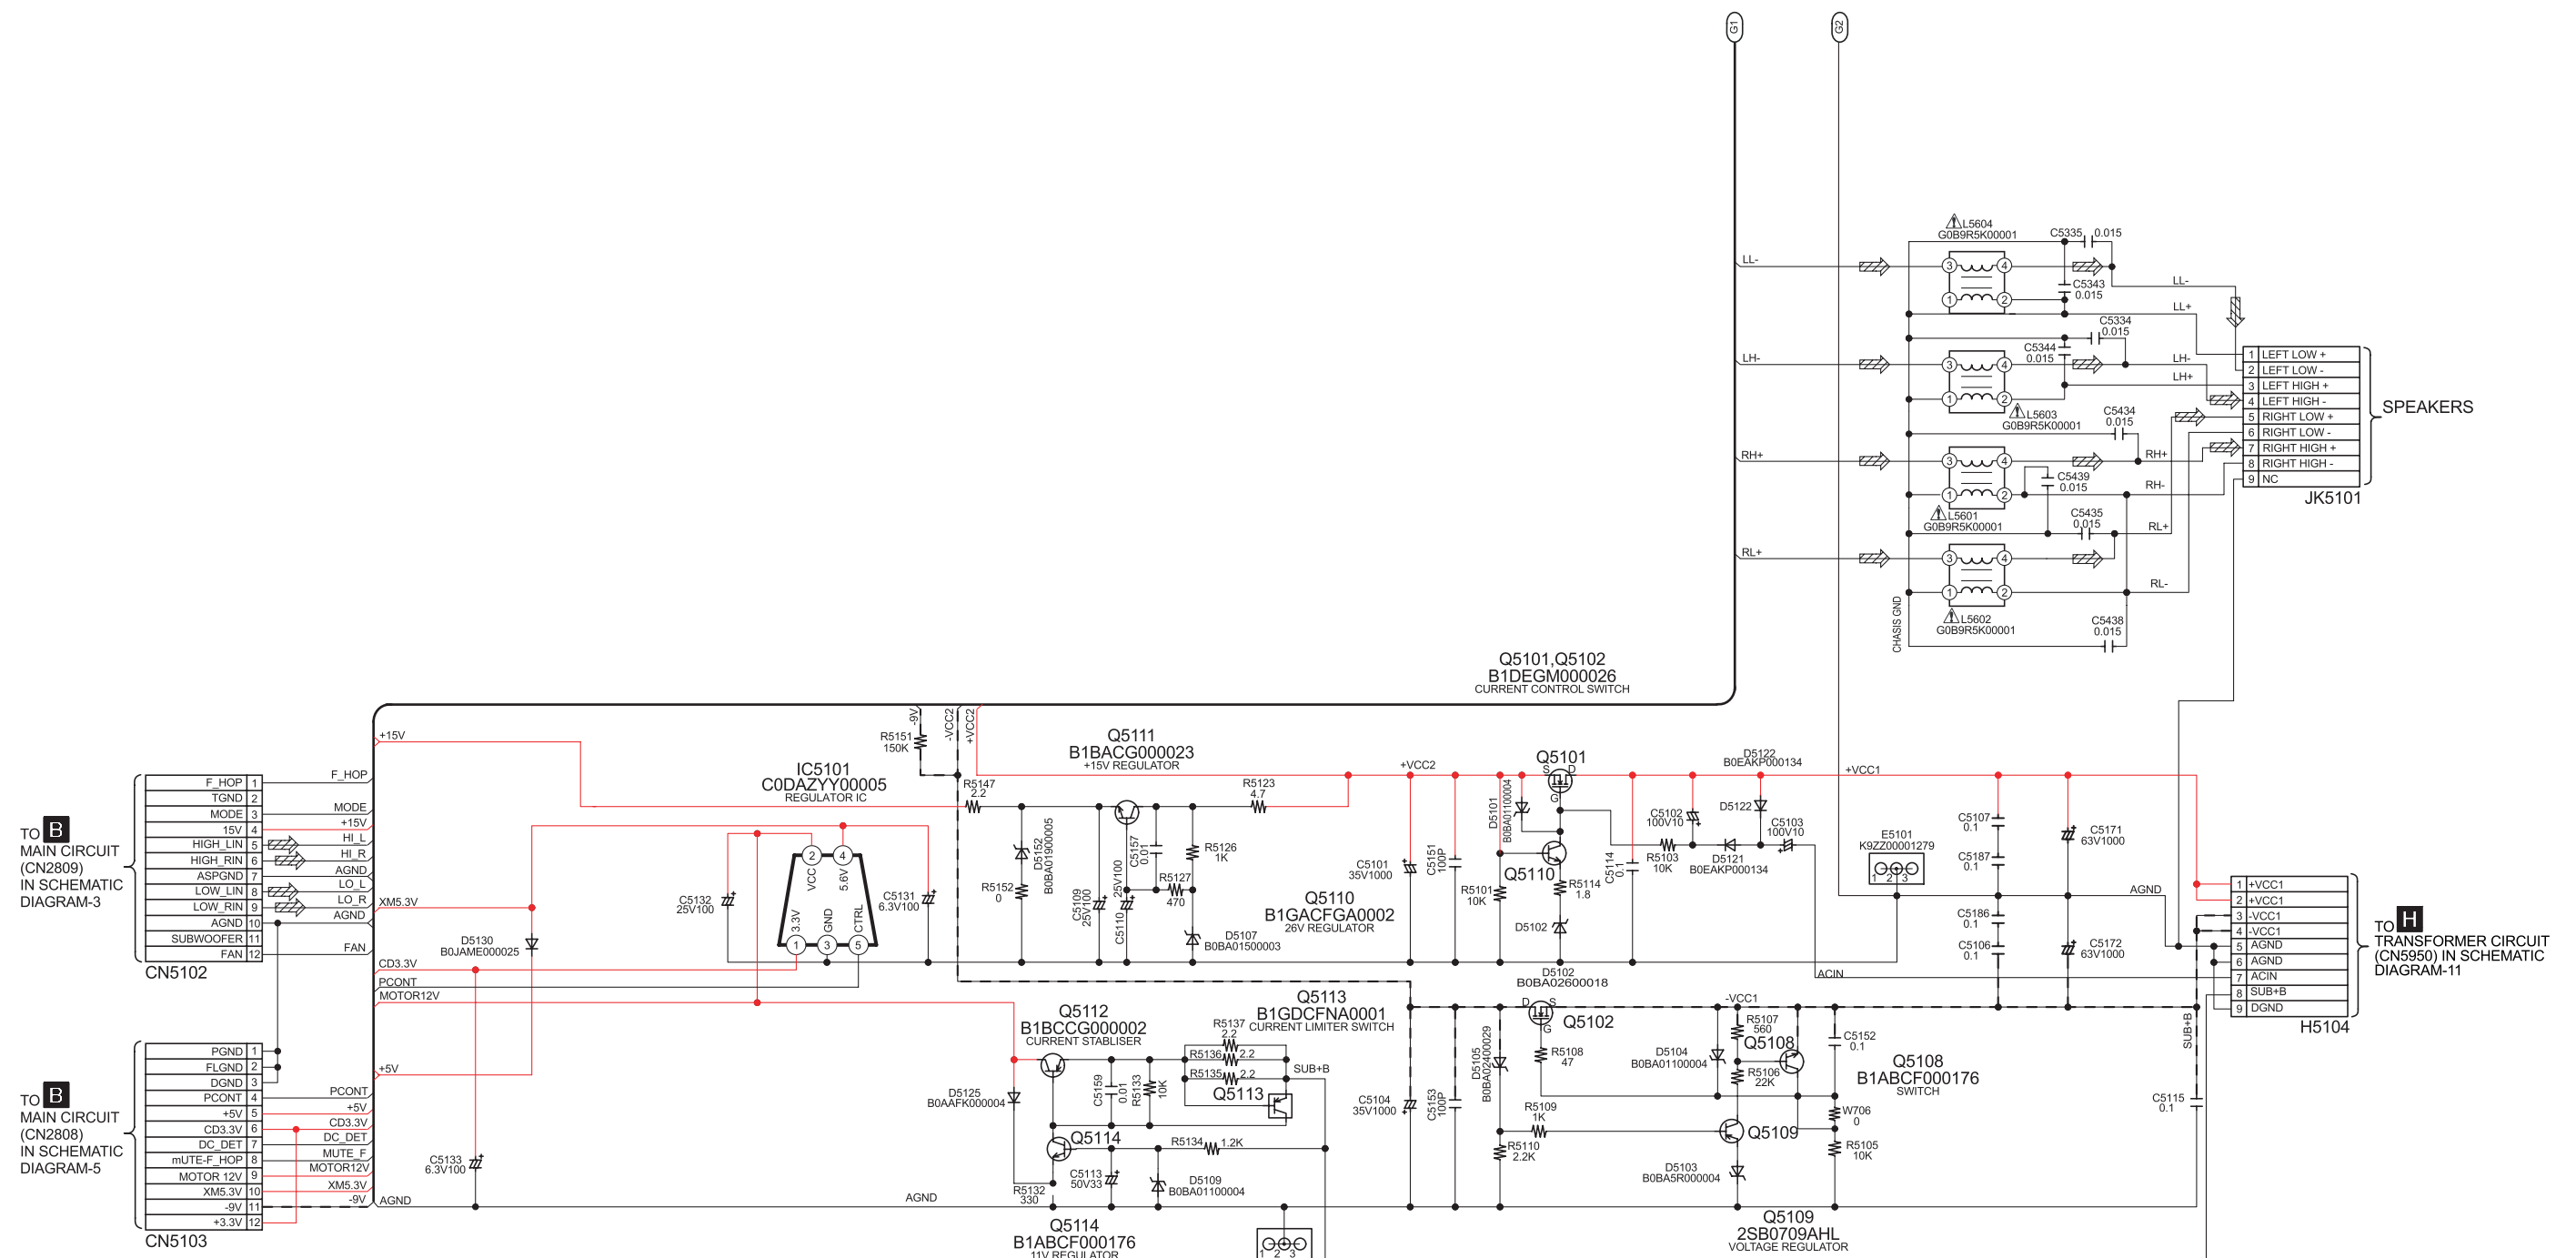

SA-AK350PL POWER CIRCUIT

19.6. (F) Deck Circuit

SCHEMATIC DIAGRAM - 10
F DECK CIRCUIT

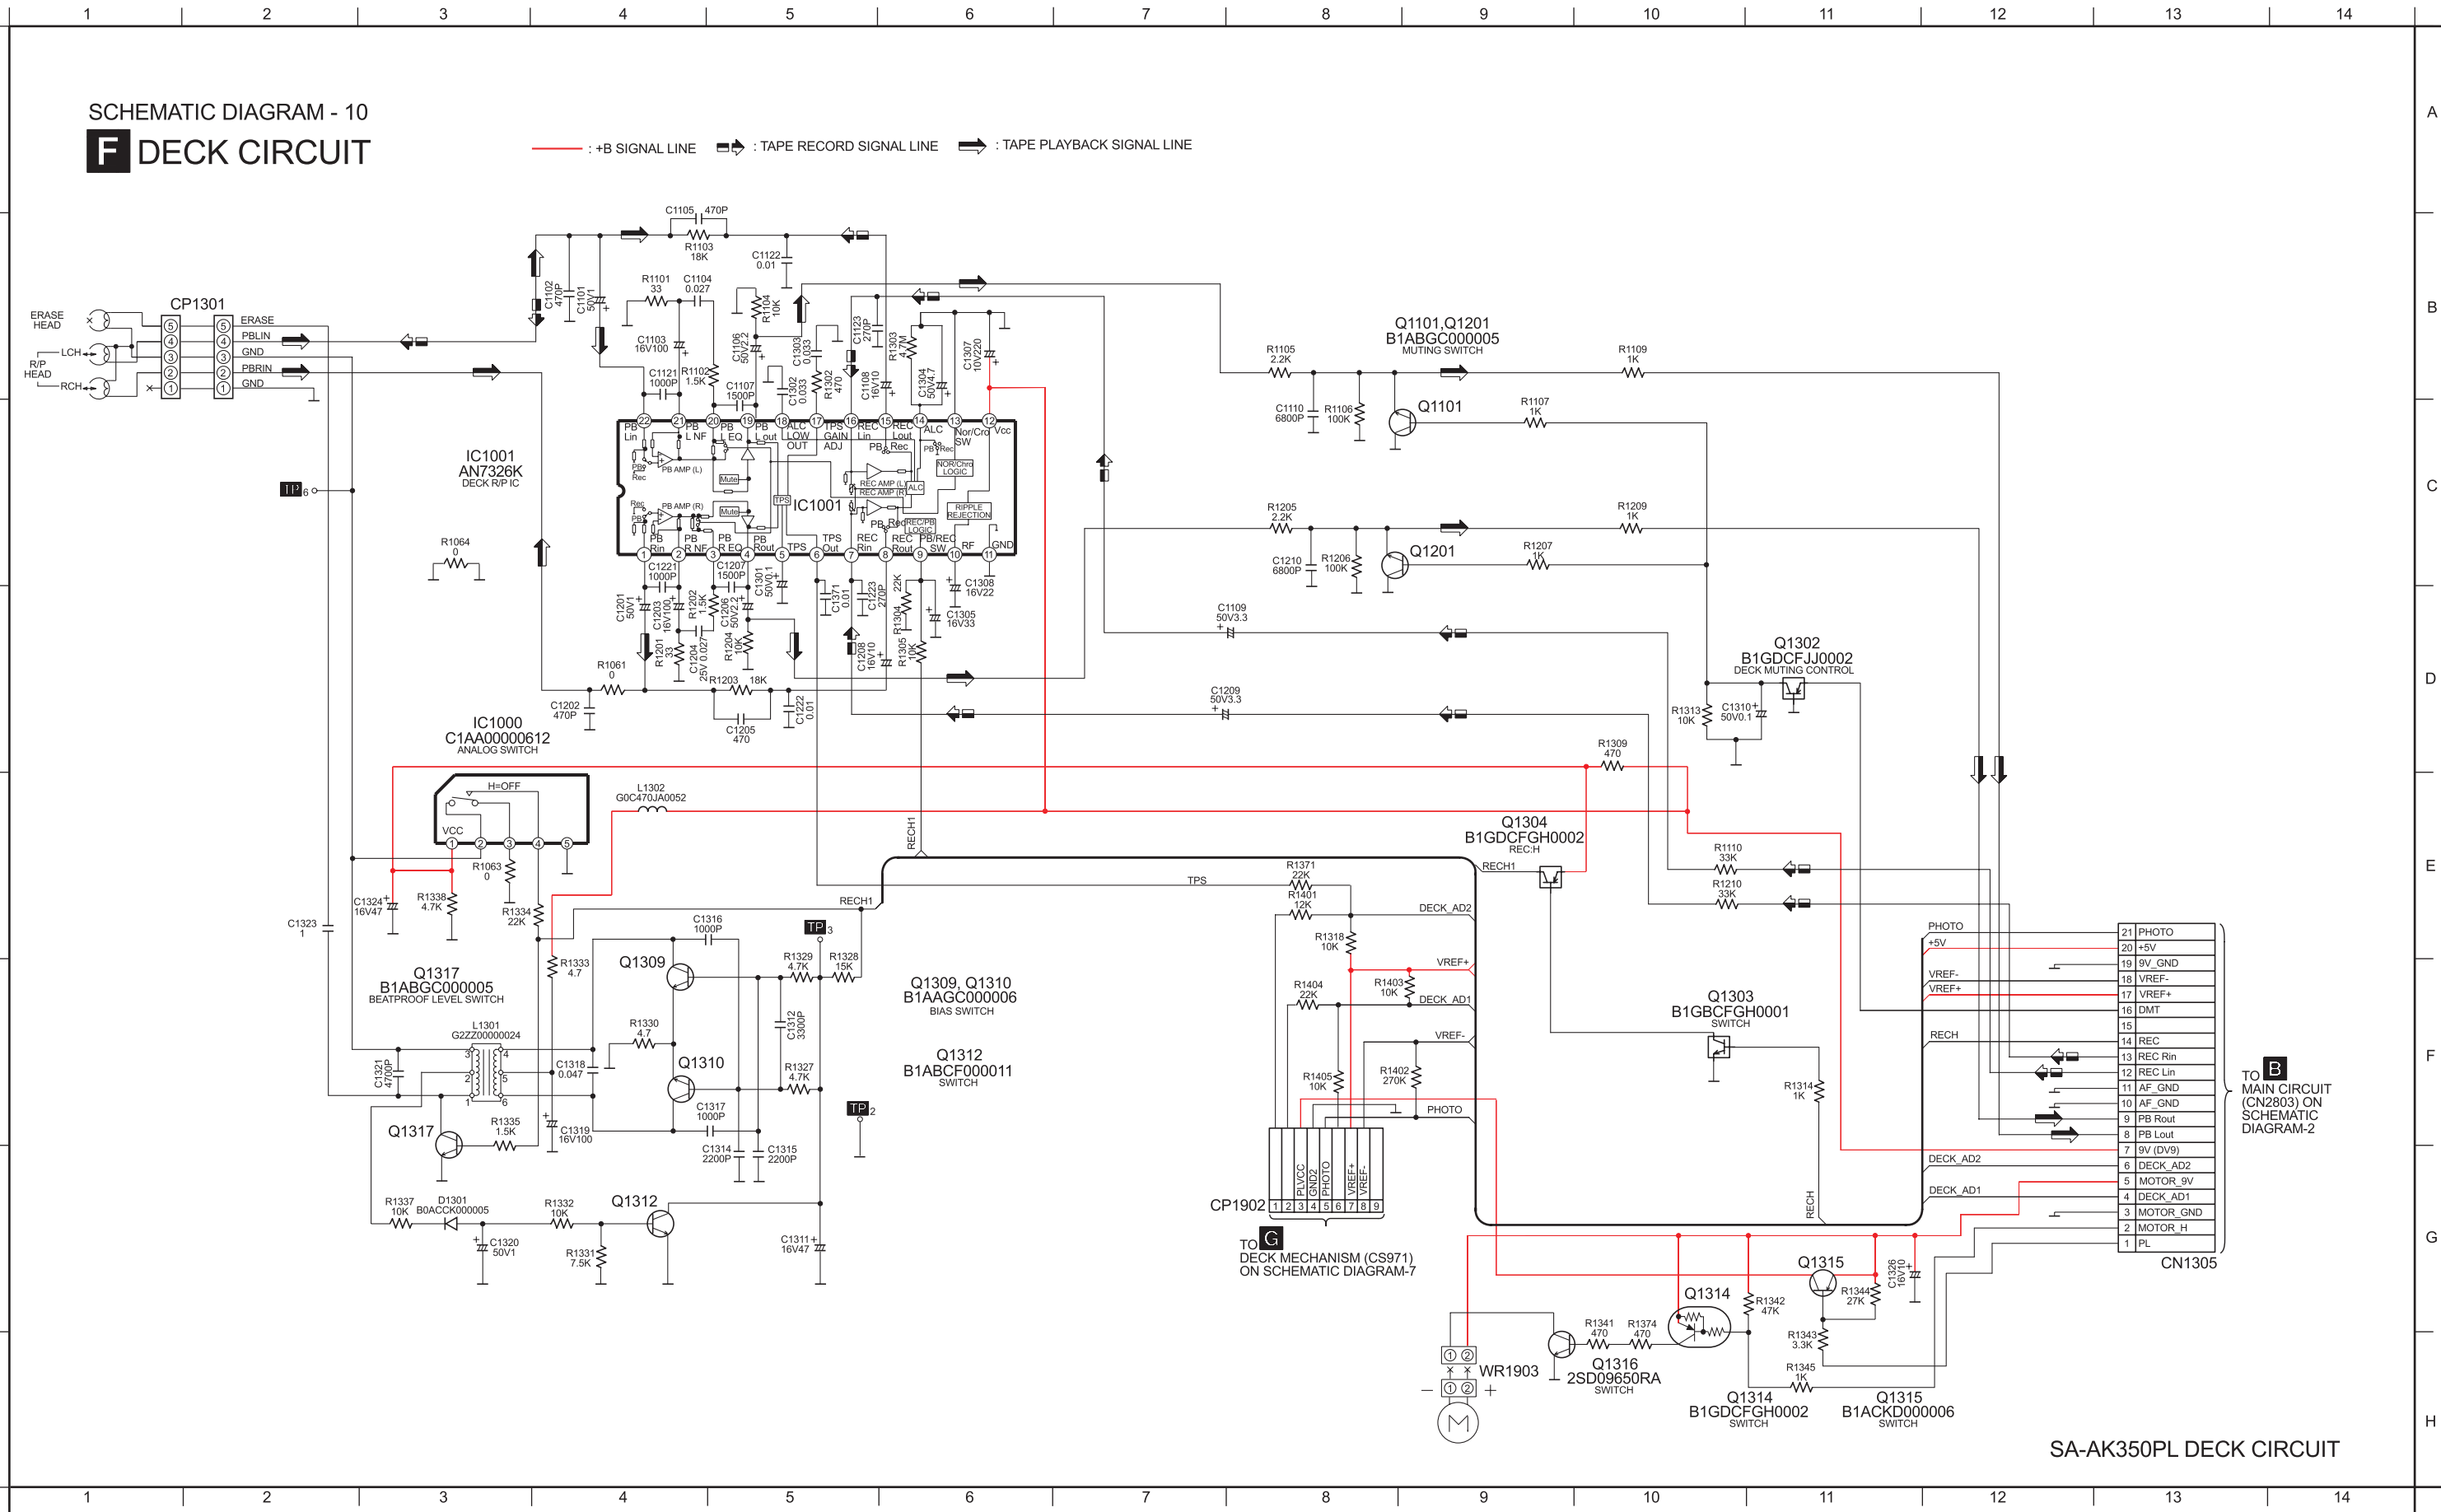




75

20 Printed Circuit Board


Note: Circuit board diagrams may be modified at any time with the development of new technology.

20.1. (A) CD Servo P.C.B., (F) Deck P.C.B. & (G) Deck Mechanism P.C.B.


A CD SERVO P.C.B (REPV0111A)

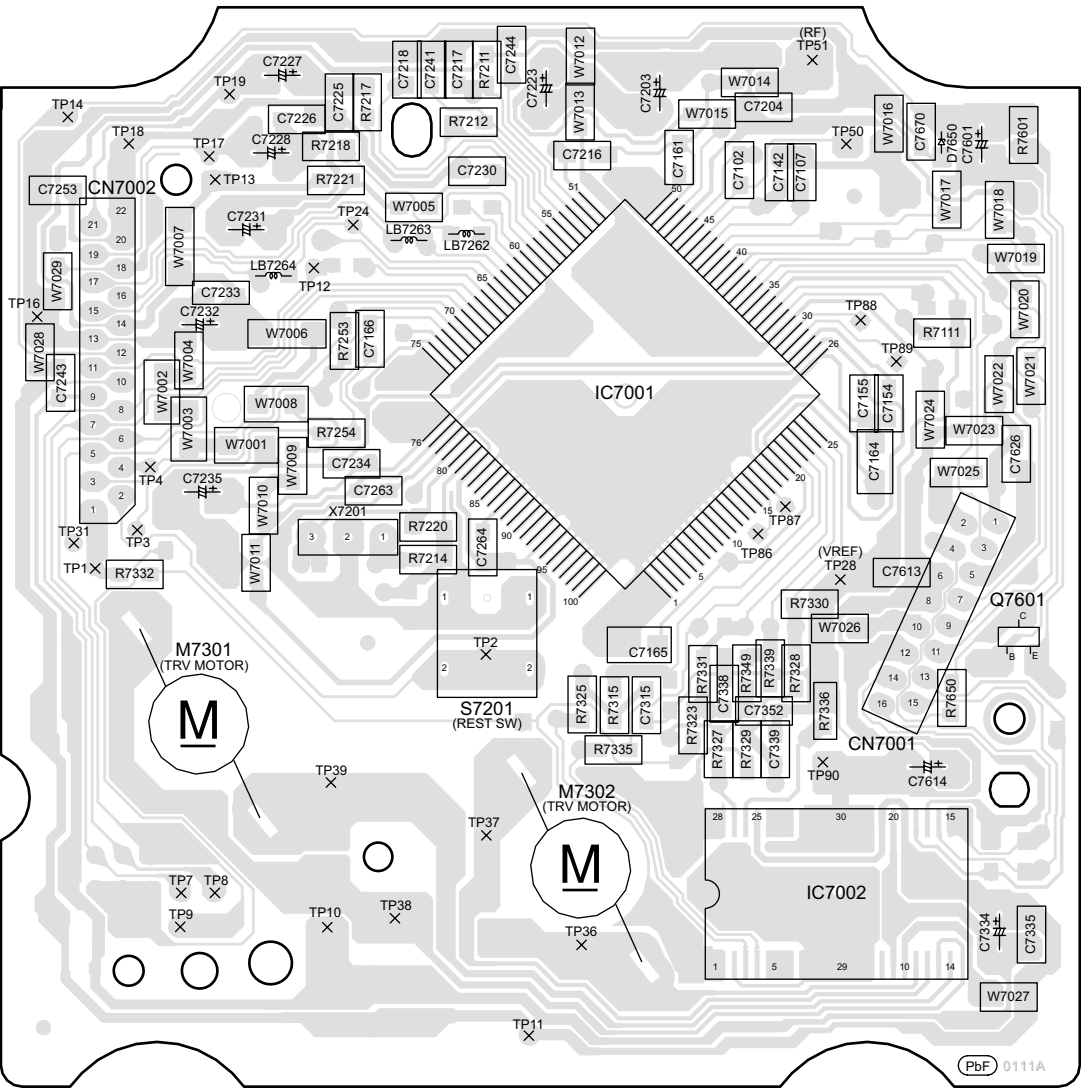


F DECK P.C.B (REPV0134B)

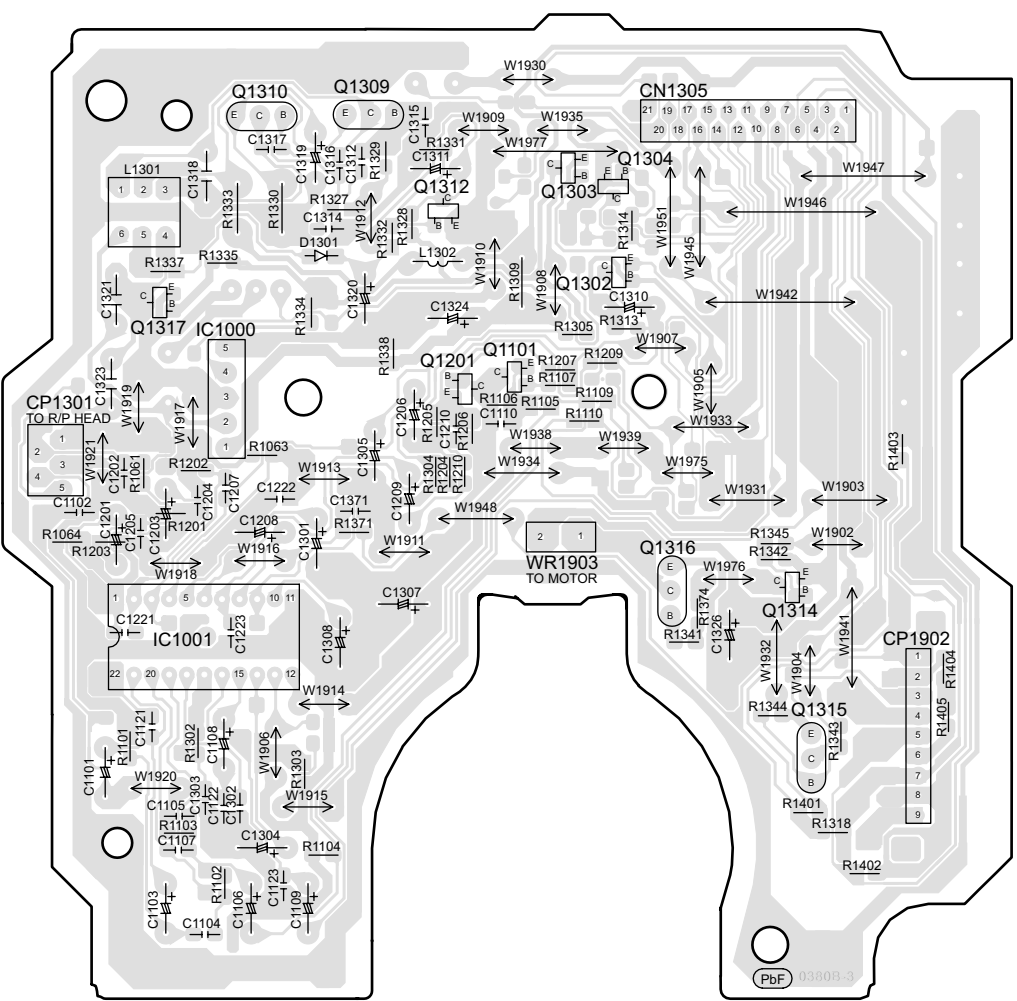

G DECK MECHANISM P.C.B (REPX0321F)

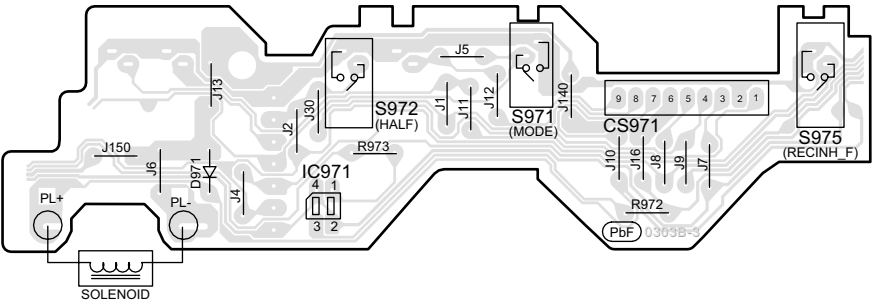


20.2. (B) Main P.C.B.

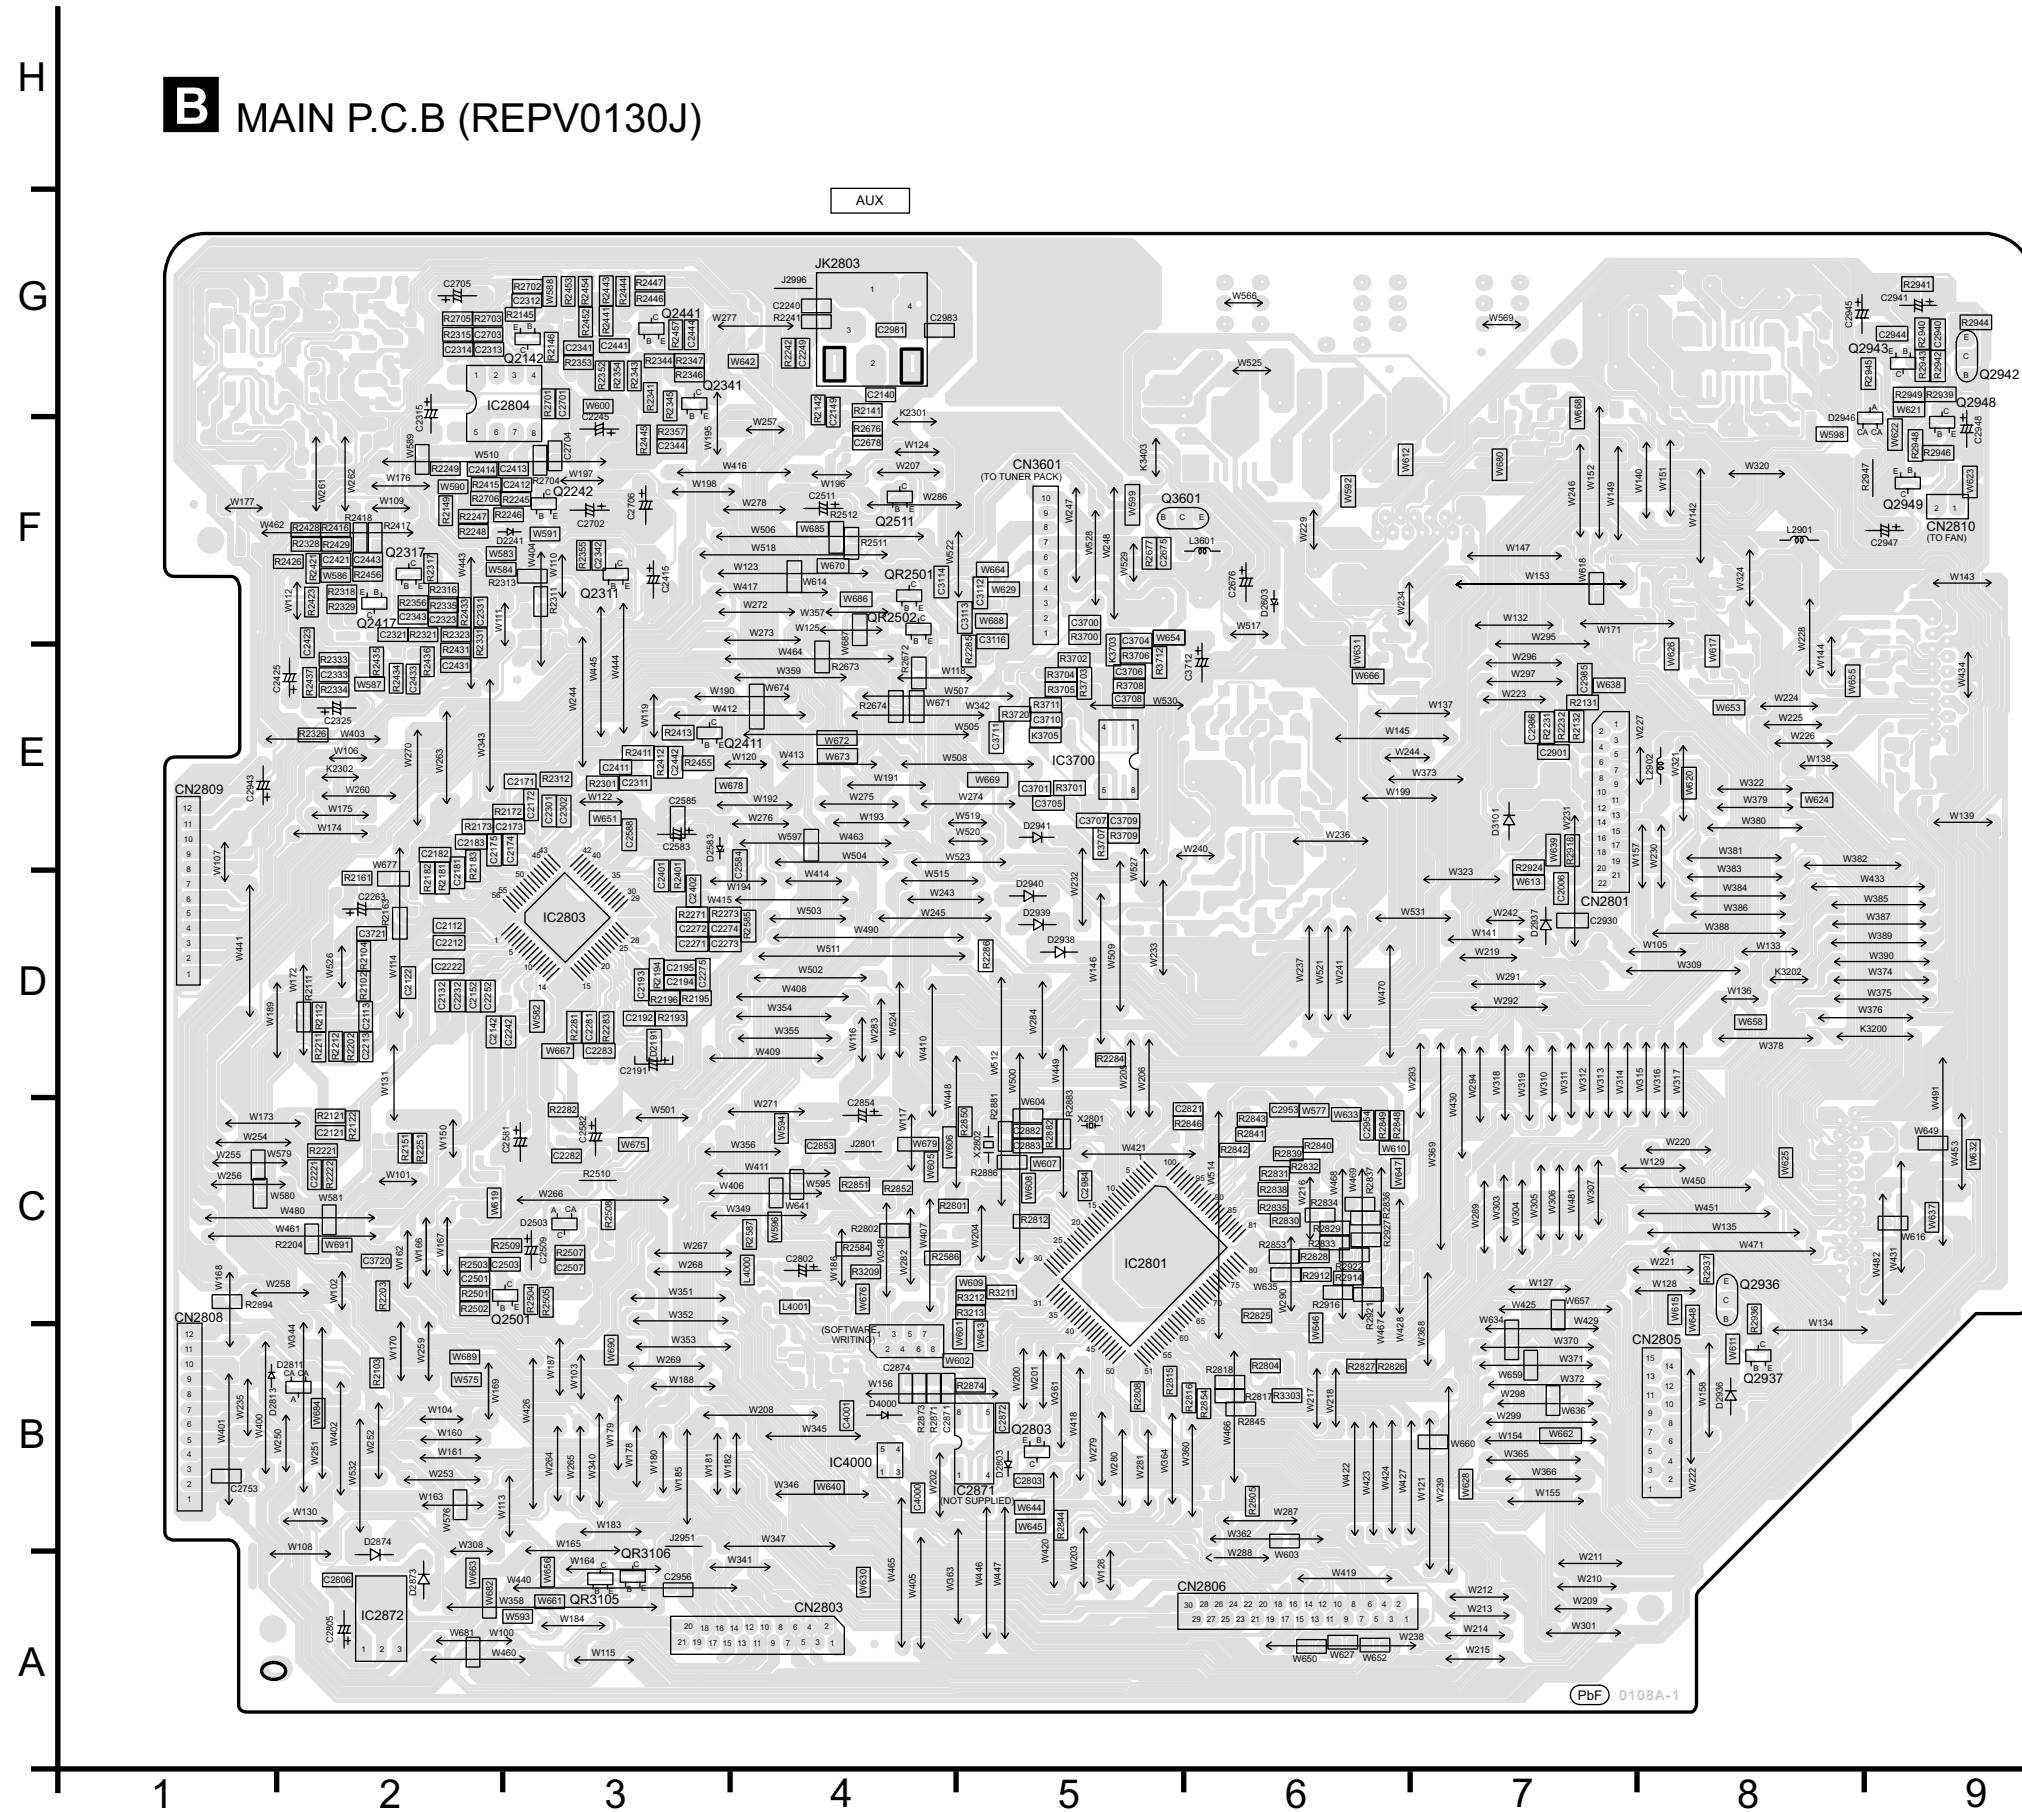B MAIN P.C.B (REPV0130J)


20.4. (D) Sub Panel P.C.B.

D SUB PANEL P.C.B (REPV0131F)

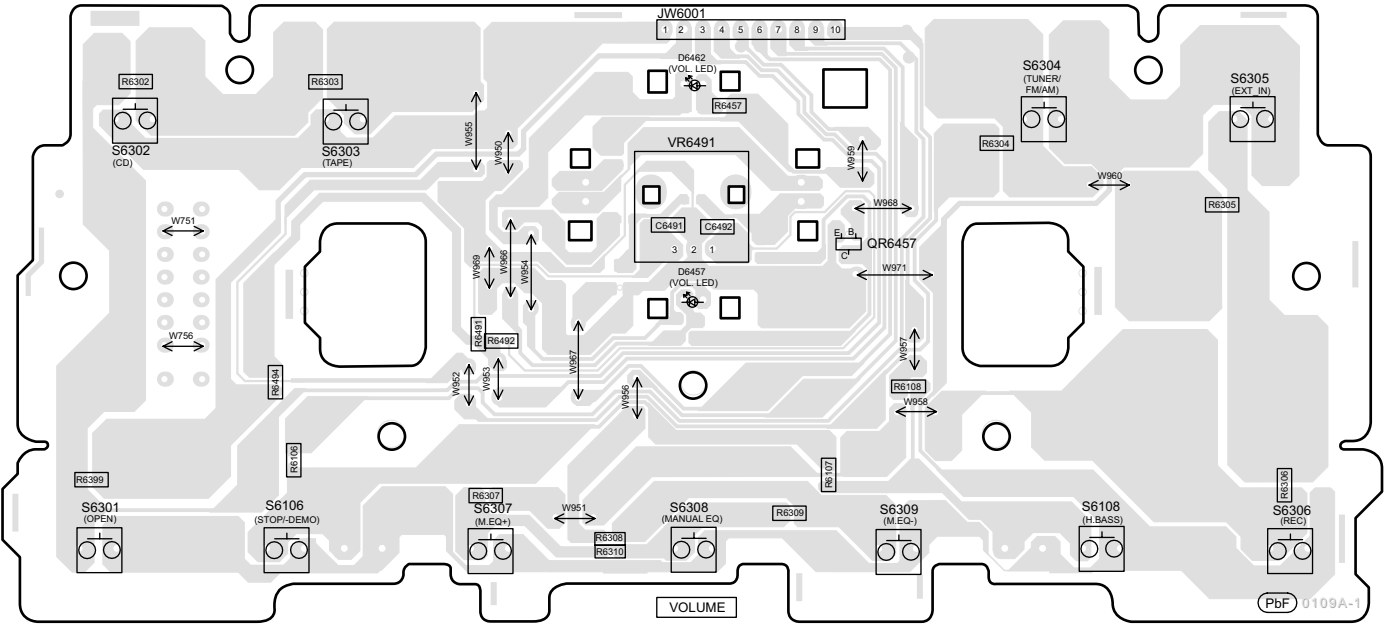

20.5. (E) Power P.C.B.

E POWER P.C.B (REPV0133C)

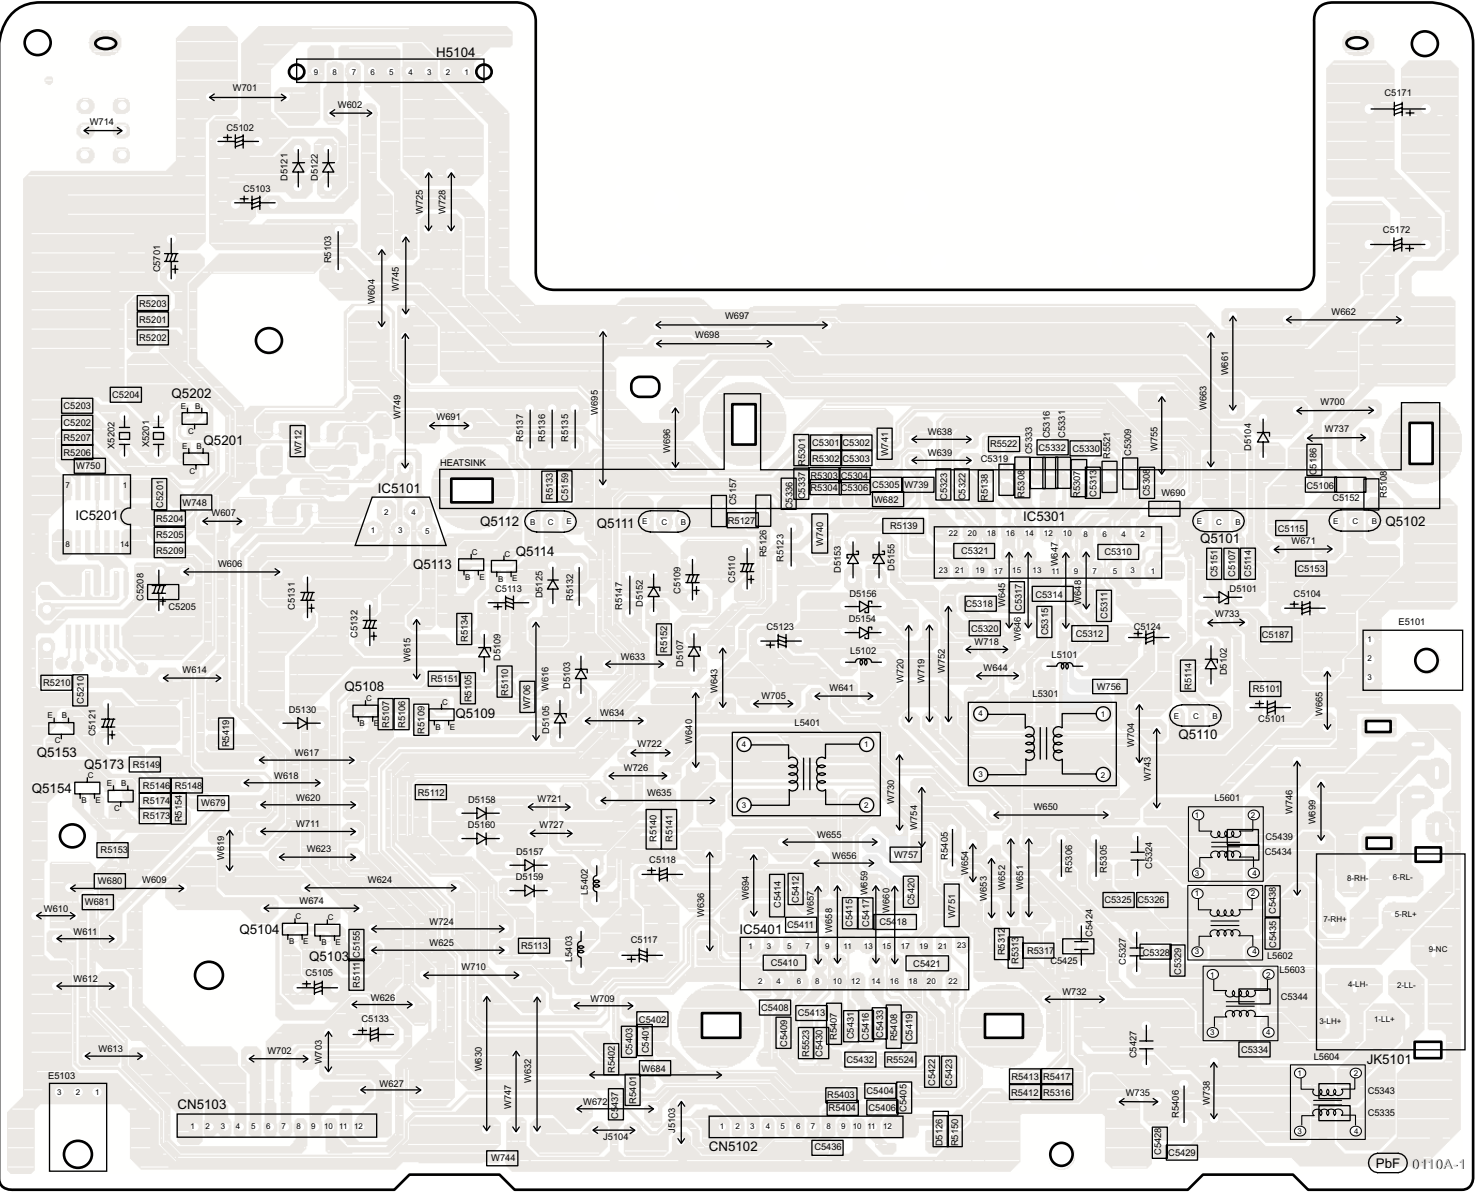


RIGHT SPEAKER







































LEFT SPEAKER

20.6. (H) Transformer P.C.B.

H TRANSFORMER P.C.B (REPV0132F)

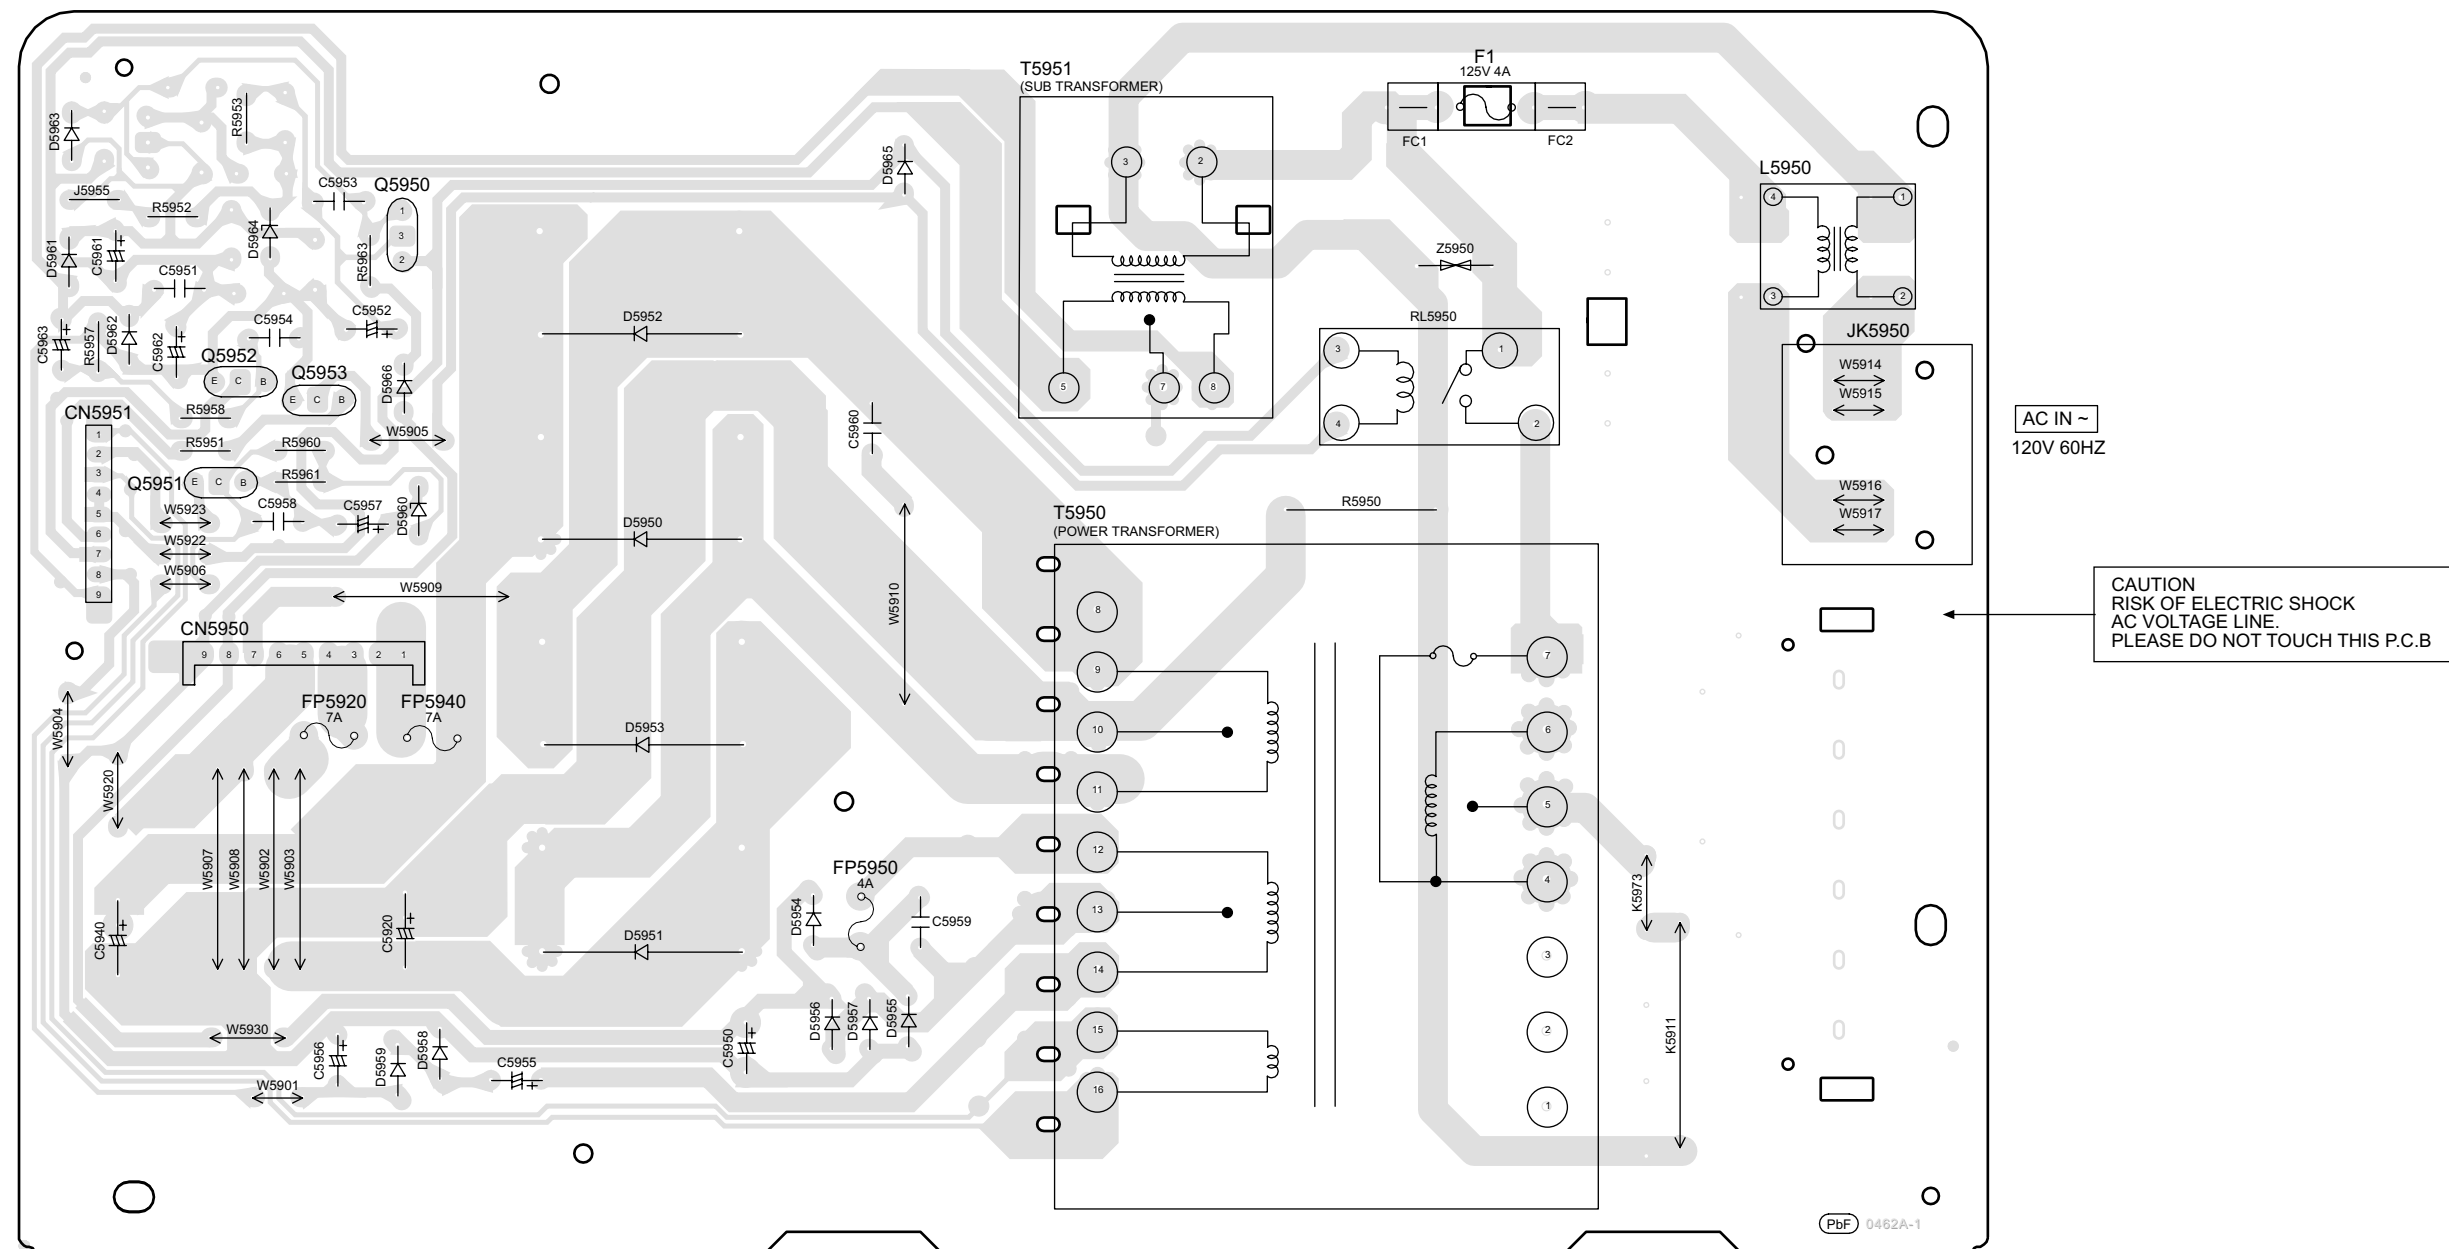

21 Illustration of ICs, Transistors and Diodes
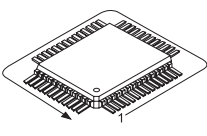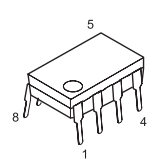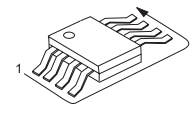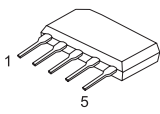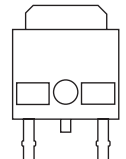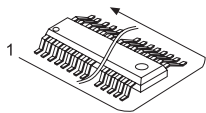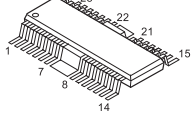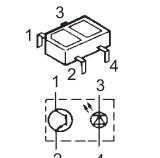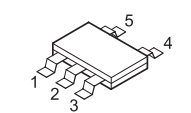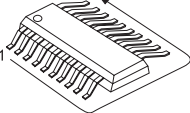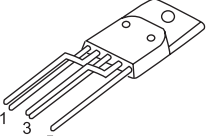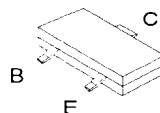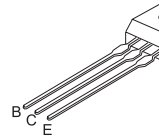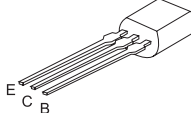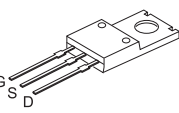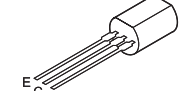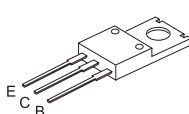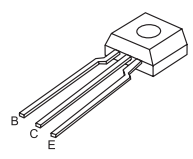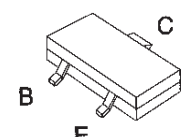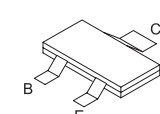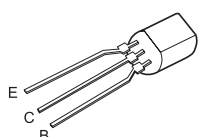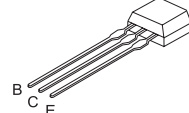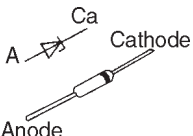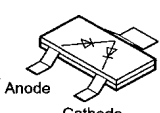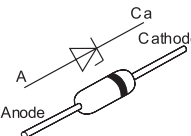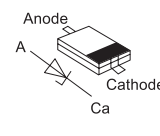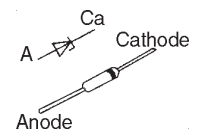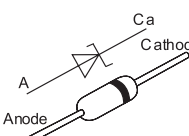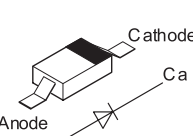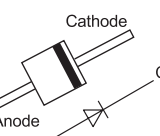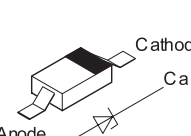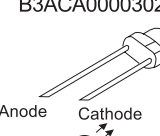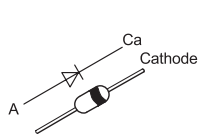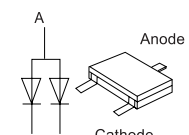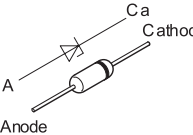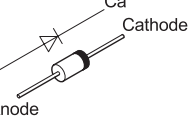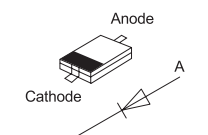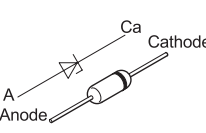
| | | | | | |
|--|---|---|--|--|---|
| C1BB00001121 (100P) MN6627954MA (100P) C0HBB0000057 (44P) C2CBYY000482 (100P) |  | C0AABB000125  | C0ABBB000244 (8P)  | C1AA00000612  | C0CBAHG00011  |
| AN7326K (26P)  | BA5948FPE2  | CNB13030R2AU  | C0DBZGC00067  | C0JBAB000011(14P) C1BA00000487 (24P)  | C0DAZYY00005  |
| 2SB0709AHL B1ABCF000176 B1ABGC000005 B1ADCF000063 B1GBCFJJ0051 B1GDCFNA0001 B1GBCFLL0037 B1GBCFGN0016 | B1ADCF000001 B1GDCFJJ0047  | B1GACFJJ0018  | 2SD09650RA  | B1DEGM000026  | B1AAKD000014 B1ACKD000006  |
| B1BACG000023 B1BCCG000002  | B1AACF000064 2SC3940A0A B1GACFGA0002  | B1GDCFGH0002 KRC101STA  | B1ABCF000011 B1GBCFGH0001 B1GDCFJJ0002  | 2SB0621AHA  | |
| B1AAGC000006  | B0BA01100004 B0BA01500003  | B0ADCC000002  | B0BA02600018  | B0BC5R600003  | B0BA5R000004  |
| B0JAME000119  | MAZ80560ML  | B0JAME000114  | B0BC9R000008  | B3AAA0000583 B3ACA0000302  | MA2C16500E  |
| B0ADCJ000020  | B0BA6R800008 B0BA02400029 B0BA02400030  | B0EAMM000055 B0EAKP000134 B0AAFK000004 B0JAME000025 B0EAKM000117  | | B0ACCK000005  | |
| B0BA01900005  | | | | | |

22 Terminal Function of IC's

22.1. IC7001 (MN6627954MA) Servo Processor,Digital Signal Processor/Digital filter and D/A Converter

| Pin No. | Mark | I/O | Function |
|---------|-----------|-----|---|
| 1 | A11 | O | DRAM address signal O/P 11 |
| 2 | A9 | O | DRAM address signal O/P 9 |
| 3 | A8 | O | DRAM address signal O/P 8 |
| 4 | A7 | O | DRAM address signal O/P 7 |
| 5 | A6 | O | DRAM address signal O/P 6 |
| 6 | A5 | O | DRAM address signal O/P 5 |
| 7 | A4 | O | DRAM address signal O/P 4 |
| 8 | NWE | O | Write Enable Signal (DRAM) |
| 9 | NCAS | O | DRAM CAS Control Signal |
| 10 | NRAS | O | DRAM ARS Control Signal |
| 11 | A3 | O | DRAM address Signal O/P 3 |
| 12 | A2 | O | DRAM address Signal O/P 2 |
| 13 | A1 | O | DRAM address Signal O/P 1 |
| 14 | A0 | O | DRAM address Signal O/P 0 |
| 15 | A10 | O | DRAM address Signal O/P 10 |
| 16 | BA0 | - | Motor O/P (0);/Serial I/P (No connection) |
| 17 | BA1 | - | Motor O/P (1);/Serial I/P (No connection) |
| 18 | PRAMVSS33 | - | GND (DRAM) |
| 19 | PRAMVDD33 | - | Power Supply Voltage (DRAM) |
| 20 | PRAMVDD15 | - | Power Supply Voltage (+1.6V) |
| 21 | SPOUT | O | Spindle Drive O/P |
| 22 | PC | I/O | Spindle motor drive O/P signal |
| 23 | TRVP | O | Traverse Drive O/P (+ve) |
| 24 | TRP | O | Tracking Drive O/P (+ve) |
| 25 | FOP | O | Focusing Drive O/P (+ve) |
| 26 | DVSS1 | - | GND |
| 27 | IOVDD2 | - | Digital Power Supply Voltage 2 (I/O) |
| 28 | DVDD1 | - | Digital Power Supply Voltage 1 (Built-In) |
| 29 | SRVMON0 | - | Servo Monitor (0) O/P (No connection) |
| 30 | SRVMON1 | - | Servo Monitor (1) O/P (No connection) |
| 31 | AVSS2 | - | GND |
| 32 | OSCIN | - | Oscillating Input |
| 33 | CTRCRS | - | Tracking Cross Comparator Terminal |
| 34 | VREF | - | +Vref Supply Voltage |
| 35 | E | I | Tracking Input Signal 1 |
| 36 | F | I | Tracking Input Signal 2 |
| 37 | D | I | Focusing Input Signal 4 |
| 38 | B | I | Focusing Input Signal 2 |
| 39 | C | I | Focusing Input Signal 3 |
| 40 | A | I | Focusing Input Signal 1 |
| 41 | PD | I | APC Amp I/P |
| 42 | LD | O | Laser Drive Current O/P |
| 43 | CENV | - | Detection Capacitance Connection terminal |
| 44 | RFENV | O | RF Envelope O/P |
| 45 | RFOUT | O | RF Summing Amp O/P |
| 46 | RFIN | I | SGC I/P |
| 47 | AVDD2 | - | Analog Power Supply voltage 2 (For DSL/PLL) |
| 48 | ARFDC | - | AGC Capacitive Connection Terminal |
| 49 | ARFOUT | O | AGC Output |
| 50 | ARFFB | I | ARF Feedback Signal I/P |
| 51 | ARFIN | I | Audio RF Signal I/P |
| 52 | DSLFL | - | Loop Filter Terminal (For DSL) |

| Pin No. | Mark | I/O | Function |
|---------|-----------|-----|---|
| 53 | IREF | I | Reference I/P |
| 54 | PLL | - | PLL Loop Filter Terminal (Phase Compare) |
| 55 | PLLFO | - | PLL Loop Filter Terminal (Speed Compare) |
| 56 | OUTL | O | Audio O/P (LCH) |
| 57 | AVSS1 | - | GND |
| 58 | AVDD1 | - | Analog Power Supply Voltage 1 |
| 59 | OUTR | O | Audio O/P (RCH) |
| 60 | DVSS3 | - | GND3 (Digital Circuit) |
| 61 | NSRVMONON | O | Servo Motor O/P Enabling |
| 62 | EXT0 | O | Expansion O/P Port 0 |
| 63 | EXT1 | O | Expansion O/P Port 1 |
| 64 | EXT2 | O | Expansion O/P Port 2 |
| 65 | FLAG | - | Flag Signal O/P (No connection) |
| 66 | TX | - | Digital Audio Interface O/P signal |
| 67 | MCLK | I | Micro-Computer Command Clock I/P |
| 68 | MDATA | I | Micro-Computer Data I/P |
| 69 | MLD | I | Micro-Computer Load I/P |
| 70 | STAT | O | Status Signal O/P |
| 71 | *BLKCK | O | Subcode Blk Clock |
| 72 | NRST | O | LSI Reset Signal |
| 73 | *DQSYTXT | - | Pack Signal O/P for CD-Text data (No connection) |
| 74 | *SMCK | - | Micro-Computer Clock O/P (No connection) |
| 75 | *PMCK | - | IOCNT Serial data O/P (Synchronous O/P) (No connection) |
| 76 | DVDD2 | - | Digital Power Supply Voltage 2 (+1.5V) |
| 77 | IOVDD1 | - | Digital Power Supply Voltage 1 (For I/O) |
| 78 | DVSS2 | - | GND2 (For Digital Circuit) |
| 79 | NTEST2 | I | Test Mode Setting (ON:H) |
| 80 | X2 | O | Crystal Oscillating Circuit O/P |
| 81 | X1 | I | Crystal Oscillating Circuit I/P |
| 82 | NTEST | I | Test Mode Setting I/P (ON:H) |
| 83 | D2 | I/O | Data Signal O/P 2 |
| 84 | D1 | I/O | Data Signal O/P 1 |
| 85 | D0 | I/O | Data Signal O/P 0 |
| 86 | D3 | I/O | Data Signal O/P 3 |
| 87 | D4 | I/O | Data Signal O/P 4 |
| 88 | D5 | I/O | Data Signal O/P 5 |
| 89 | D6 | I/O | Data Signal O/P 6 |
| 90 | D7 | I/O | Data Signal O/P 7 |
| 91 | D15 | I/O | Data Signal O/P 15 |
| 92 | D14 | I/O | Data Signal O/P 14 |
| 93 | DRVDD | - | I/O Power Supply Voltage (DRAM) |
| 94 | D13 | I/O | Data Signal O/P 13 |
| 95 | D12 | I/O | Data Signal O/P 12 |
| 96 | D11 | I/O | Data Signal O/P 11 |
| 97 | D10 | I/O | Data Signal O/P 10 |
| 98 | D9 | I/O | Data Signal O/P 9 |
| 99 | D8 | I/O | Data Signal O/P 8 |
| 100 | SDRCK | O | Clock Signal O/P |

22.2. IC7002 (BA5948FPE2) IC 4CH Drive

| Pin No. | Mark | I/O | Function |
|---------|-------|-----|---|
| 1 | IN2 | I | Motor Driver 92 Input |
| 2 | PC2 | I | Turntable Motor Drive Signal ("L":ON) |
| 3 | IN1 | I | Motor Drive (1) Input |
| 4 | PC1 | - | Traverse Motor Drive Signal ("L"): ON) |
| 5-8 | N.C. | - | No Connection |
| 9 | PGND1 | - | Ground Connection (1) for Drive |
| 10 | PVCC1 | - | Power Supply (1) for Drive |
| 11 | D1- | O | Motor Drive (1) reverse - action output |
| 12 | D1+ | O | Motor Drive (1) forward - action output |
| 13 | D2- | O | Motor Drive (2) reverse - action output |
| 14 | D2+ | O | Motor Drive (2) forward - action output |

| Pin No. | Mark | I/O | Function |
|---------|-------|-----|---|
| 15 | D3- | O | Motor Drive (3) reverse - action output |
| 16 | D3+ | O | Motor Drive (3) forward - action output |
| 17 | D4- | O | Motor Drive (4) reverse - action output |
| 18 | D4+ | O | Motor Drive (4) forward - action output |
| 19 | PVCC2 | - | Power Supply (2) for Driver |
| 20 | PGND2 | - | Ground Connection (2) for Driver |
| 21-24 | N.C. | - | No Connection |
| 25 | VCC | - | Power Supply terminal |
| 26 | VREF | - | Reference Voltage Input |
| 27 | IN4 | I | Motor Driver (4) Input |
| 28 | IN3 | I | Motor Driver (3) Input |

22.3. IC2801 (C2CBYY000482) System Microprocessor


| Pin No. | Mark | I/O | Function |
|---------|----------------|-----|--|
| 1 | LM_1 | I/O | Level Meter |
| 2 | D_PORT DET1 | I | D-Port DET 1 |
| 3 | D_PORT DET2 | I | D-Port DET 2 |
| 4 | RDS_DAT | - | No connection |
| 5 | RDS_CLK | - | No connection |
| 6 | IP_LINK | - | No connection |
| 7 | F_HOP | O | F_Hop for Digital Amp |
| 8 | BYTE | - | External Data Bus Width Select Input (Connect to Ground) |
| 9 | CNVSS | - | Flash Mode Terminal |
| 10 | Xcin | - | 32.768 kHz Sub Clock |
| 11 | Xcout | - | 32.768 kHz Sub Clock |
| 12 | /RESET | - | /RESET Input (ACTIVE L) |
| 13 | Xout | - | 10 MHz Main Clock |
| 14 | Vss | - | Ground (0V) |
| 15 | Xin | - | 10 MHz Main Clock |
| 16 | Vcc | - | Power Supply (+5V) |
| 17 | /NMI | - | Connect to Vcc (+5V) |
| 18 | RMT | I | Remote Control Input |
| 19 | BLKCK | I | CD Block Clock Input (Inverted) |
| 20 | SYNC | I | AC Failure Detect Input |
| 21 | D0 | O | Serial Output Data |
| 22 | DI | I | Serial Input Data |
| 23 | S/WOOFER CS | I | Subwoofer Chip Select |
| 24 | SW_LVL1 | - | No connection |
| 25 | SW_LVL2 | - | No connection |
| 26 | ASP DAT | O | ASP Data |
| 27 | ASP_CLK | O | ASP Clock |
| 28 | FL_CS | I | AK model Chip Select |
| 29 | PLL_DATA | - | No connection |
| 30 | PLL_CLK | I/O | Tuner PLL Clock |
| 31 | USB_SDA (TxD) | I/O | USB I2C data line (Flash Tx for On board writer) |
| 32 | USB_SCL (RxD) | I/O | USB I2C Clock line (Flash RxD for On board writer) |
| 33 | USB_RST | O | USB Reset Pin. |
| 34 | XM_MUTE (BUSY) | - | No connection |
| 35 | XM_TX_OUT | - | Verify Error for USB Version up Using CD |
| 36 | XM_RX_IN | - | No connection |
| 37 | XM_I2S_RATE | - | No connection |
| 38 | XM_LINK ACTIVE | - | No connection |
| 39 | MUTE_DA | O | D-Amp Muting Control |

| Pin No. | Mark | I/O | Function |
|---------|---------------|-----|---|
| 40 | MUTE_A | O | Audio Muting Control |
| 41 | EE_CS/EFP/EPM | O | EEPROM Chip Select (Flash EPM for On board writer) |
| 42 | EE_CLK | O | EEPROM CLOCK |
| 43 | EE_DAT | I/O | EEPROM DATA |
| 44 | XM_DAC_RESET | - | No connection |
| 45 | XM_ANT_REV | - | No connection |
| 46 | PCONT/EFP/CS | O | Power Control Output |
| 47 | DCDET | I | DC Detect Input |
| 48 | XM_RST | - | No connection |
| 49 | XM_PCONT | - | No connection |
| 50 | STANDBY | O | For Digital AMP 5->0v during FHOP |
| 51 | VOL_LED | O | Volume LED Drive |
| 52 | CE | I | TUNER CE |
| 53 | DMT | O | Deck mute at mecha transition. L=mute OFF, H=mute ON |
| 54 | BOTTOM_SW | I | Bottom switch for CRS1 |
| 55 | UP_SENSOR | I | Up/Down sensor for CRS1 |
| 56 | PLG | O | Plunger Control O/P |
| 57 | PHOTO | I | Photo (SG mechanism only) |
| 58 | MTR | I/O | Deck motor control ("L" for motor OFF) |
| 59 | REC | I/O | H when record circuit is operating |
| 60 | MMOD0 | I | Micon Mode Switching for USB Version Up using CD |
| 61 | PAM_CS | I | PAM Region Model Chip Select |
| 62 | VCC | - | Power Supply (+5V) |
| 63 | H_BASS_LED | O | Harmonic Bass LED Drive |
| 64 | Vss | - | Ground (0V) |
| 65 | D-PORT_R-SKIP | - | No connection |
| 66 | D-PORT_F-SKIP | - | No connection |
| 67 | D-PORT_STOP | - | No connection |
| 68 | D-PORT_RES2 | - | No connection |
| 69 | D-PORT_RES1 | - | No connection |
| 70 | FL_CS | O | FL Driver Chip Select |
| 71 | FL_DOUT | O | Serial Data To FL Driver |
| 72 | FL_CLK | O | Serial Clock To FL Driver |
| 73 | VOL_LED_CS | I | VOL LED Chip Select |
| 74 | USB_REQ | I | USB Request. |
| 75 | STATUS | I | CD Servo LSI Status Input |
| 76 | MLD | I/O | CD Command Load Output |


| Pin No. | Mark | I/O | Function |
|---------|--------------|-----|---|
| 77 | MDATA_OUT | I/O | CD Command Data Output |
| 78 | MCLK | I/O | CD Command Clock Output |
| 79 | /RESET_SW | I | CD Limit Switch Input for the most Inner Point (Active Low) |
| 80 | HOME_SW | I | Home Switch for CRS1 |
| 81 | CD_RST | I/O | CD Reset output |
| 82 | CLOSE_SW | I | CLOSE switch for CRS1 |
| 83 | OPEN_SW | I | Open switch for CRS1 |
| 84 | CW | O | CRS1 motor CW |
| 85 | CCW | O | CRS1 motor CCW |
| 86 | ST_SW | I | Stock switch for CRS1 |
| 87 | PLAY_SW | I | Play switch for CRS1 |
| 88 | PLUNGER | O | Plunger for CRS1 |
| 89 | REG | - | Region Setting |
| 90 | VOL_JOG | I | Volume jog |
| 91 | D-PORT_PCONT | - | No connection |
| 92 | KEY3 | I | Key 3 Input |
| 93 | KEY2 | I | Key 2 Input |
| 94 | KEY1 | I | Key 1 Input |
| 95 | DECK_AD1 | I | Deck AD input 1 |
| 96 | AVSS | - | Analog Power Supply Input (Connect to GND) |
| 97 | DECK_AD2 | I | Deck AD input 2 |
| 98 | VREF | - | Reference for A-D (5V) |
| 99 | AVCC | - | Analog Power Supply Input |
| 100 | DEMO_SET | I | (H= Default demo On, L= Default demo off) |

23 Exploded Views


23.1. Cabinet Parts Location

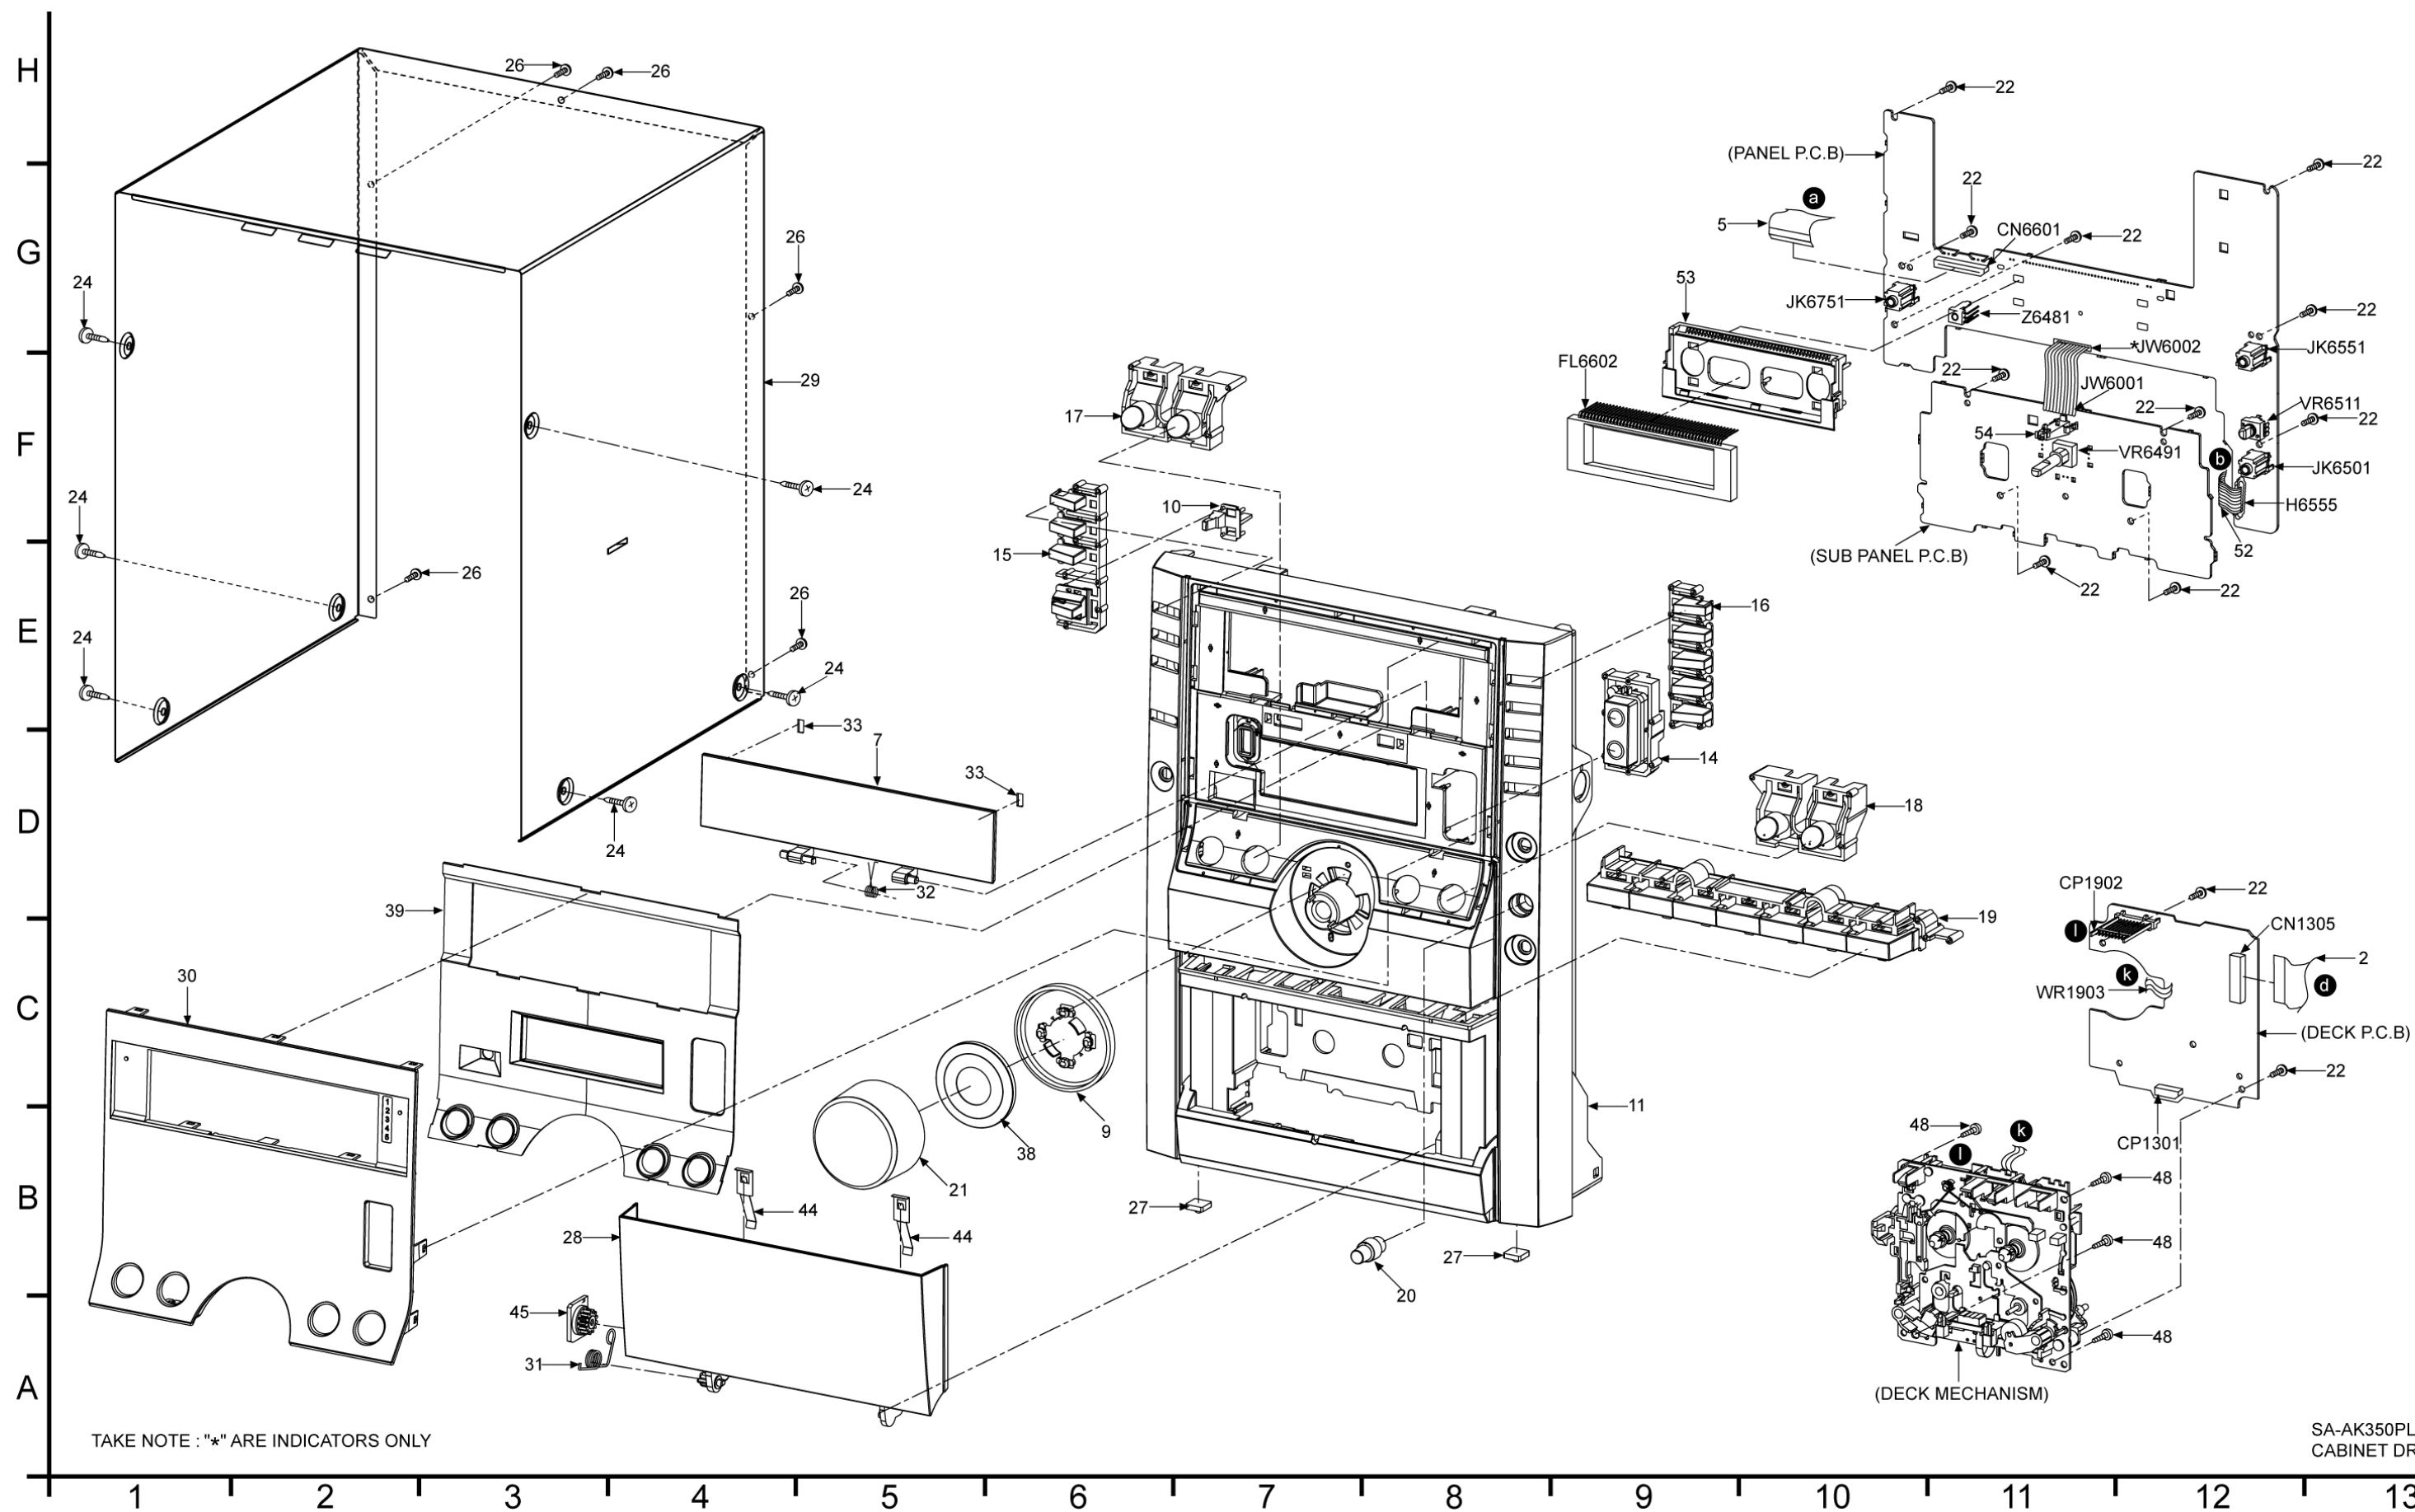


H
G
F
E
D
C
B
A

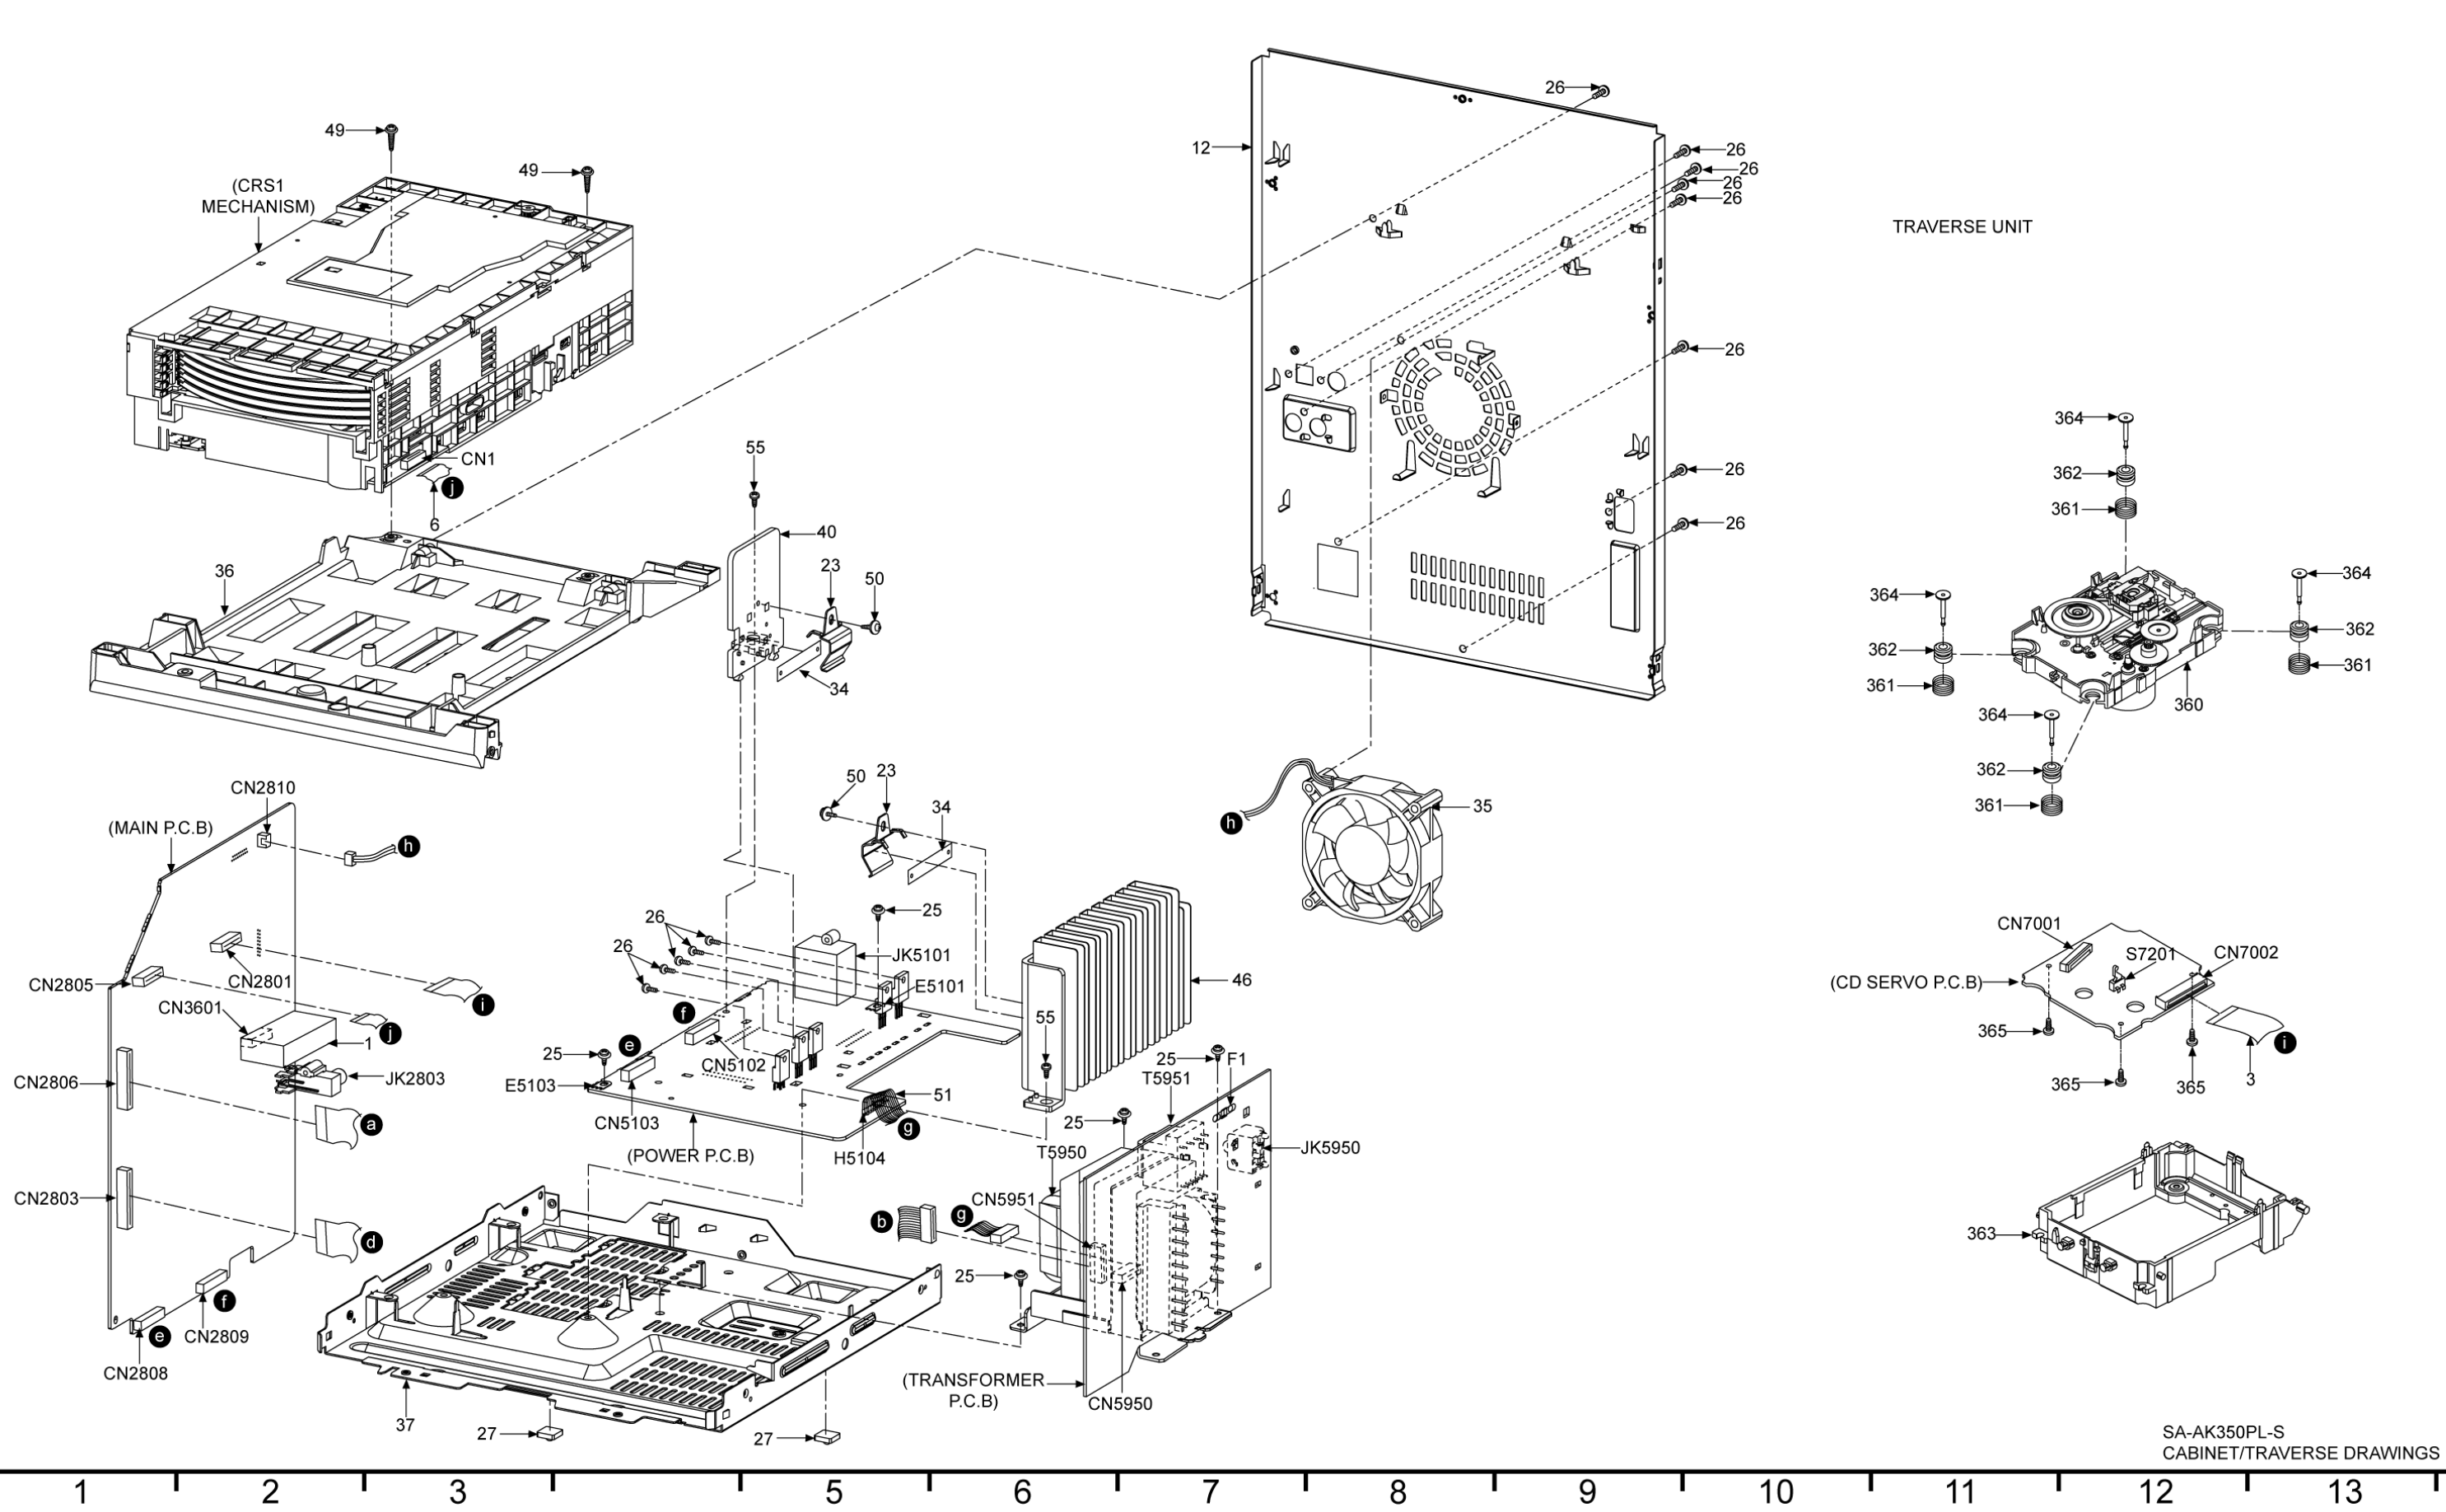


TRAVERSE UNIT

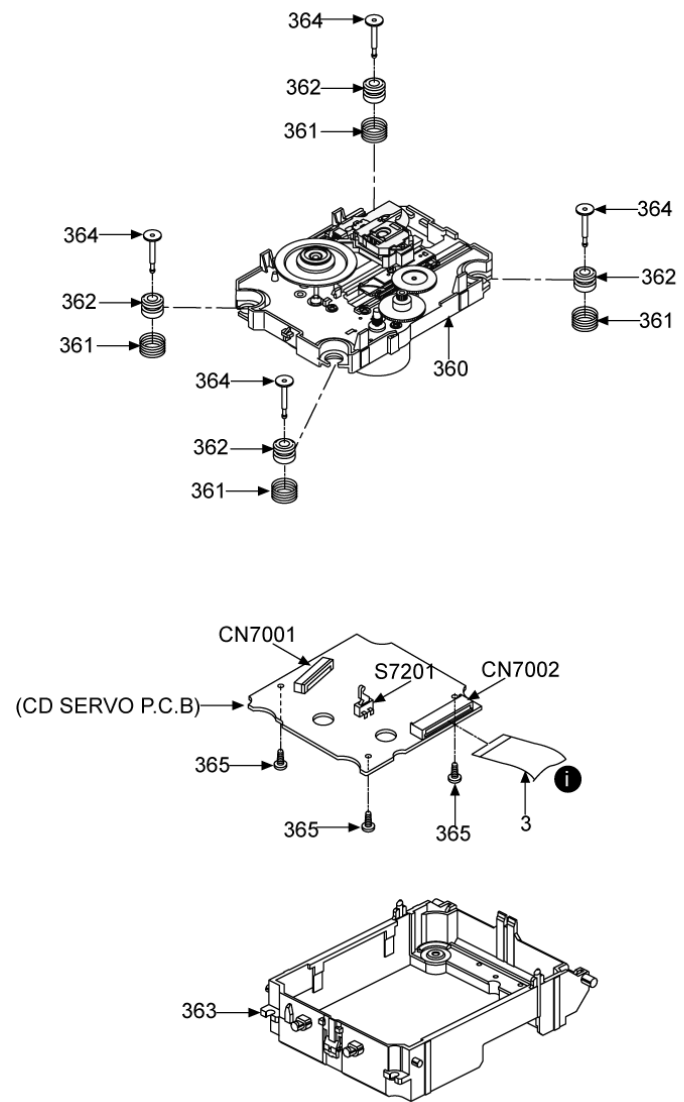

23.2. Deck Mechanism Parts Location (RAA4403-S)

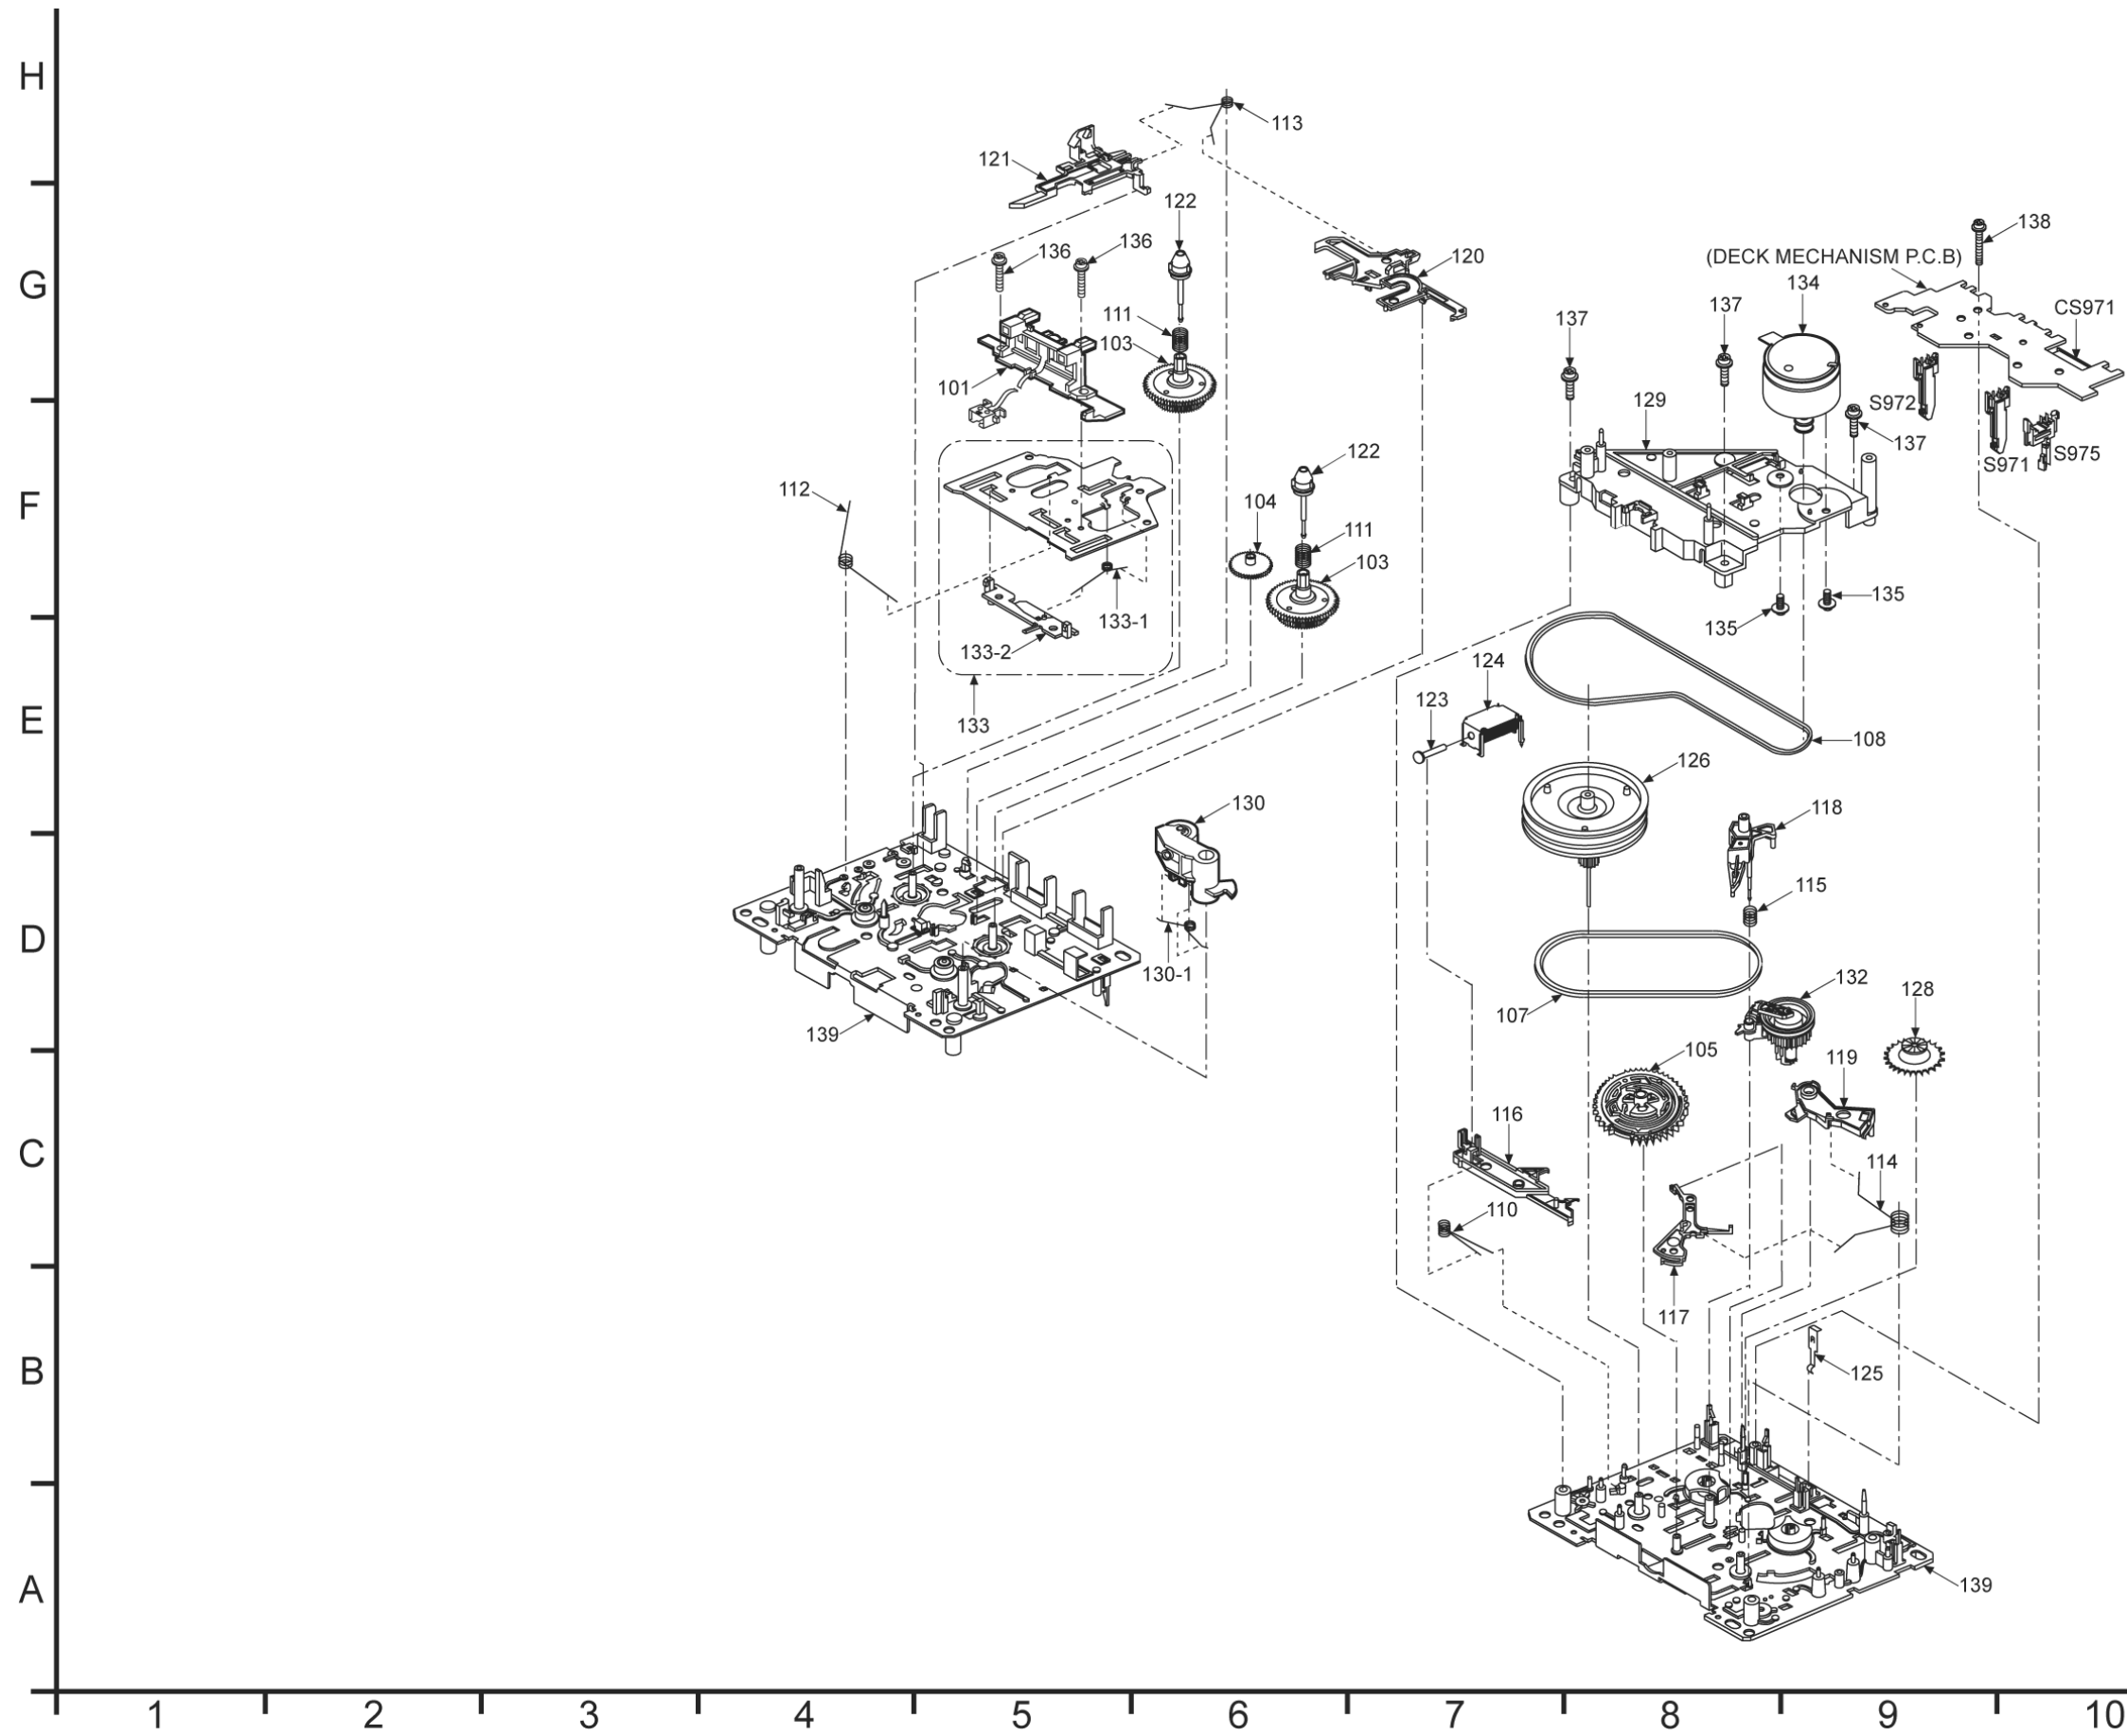

23.3. Packaging

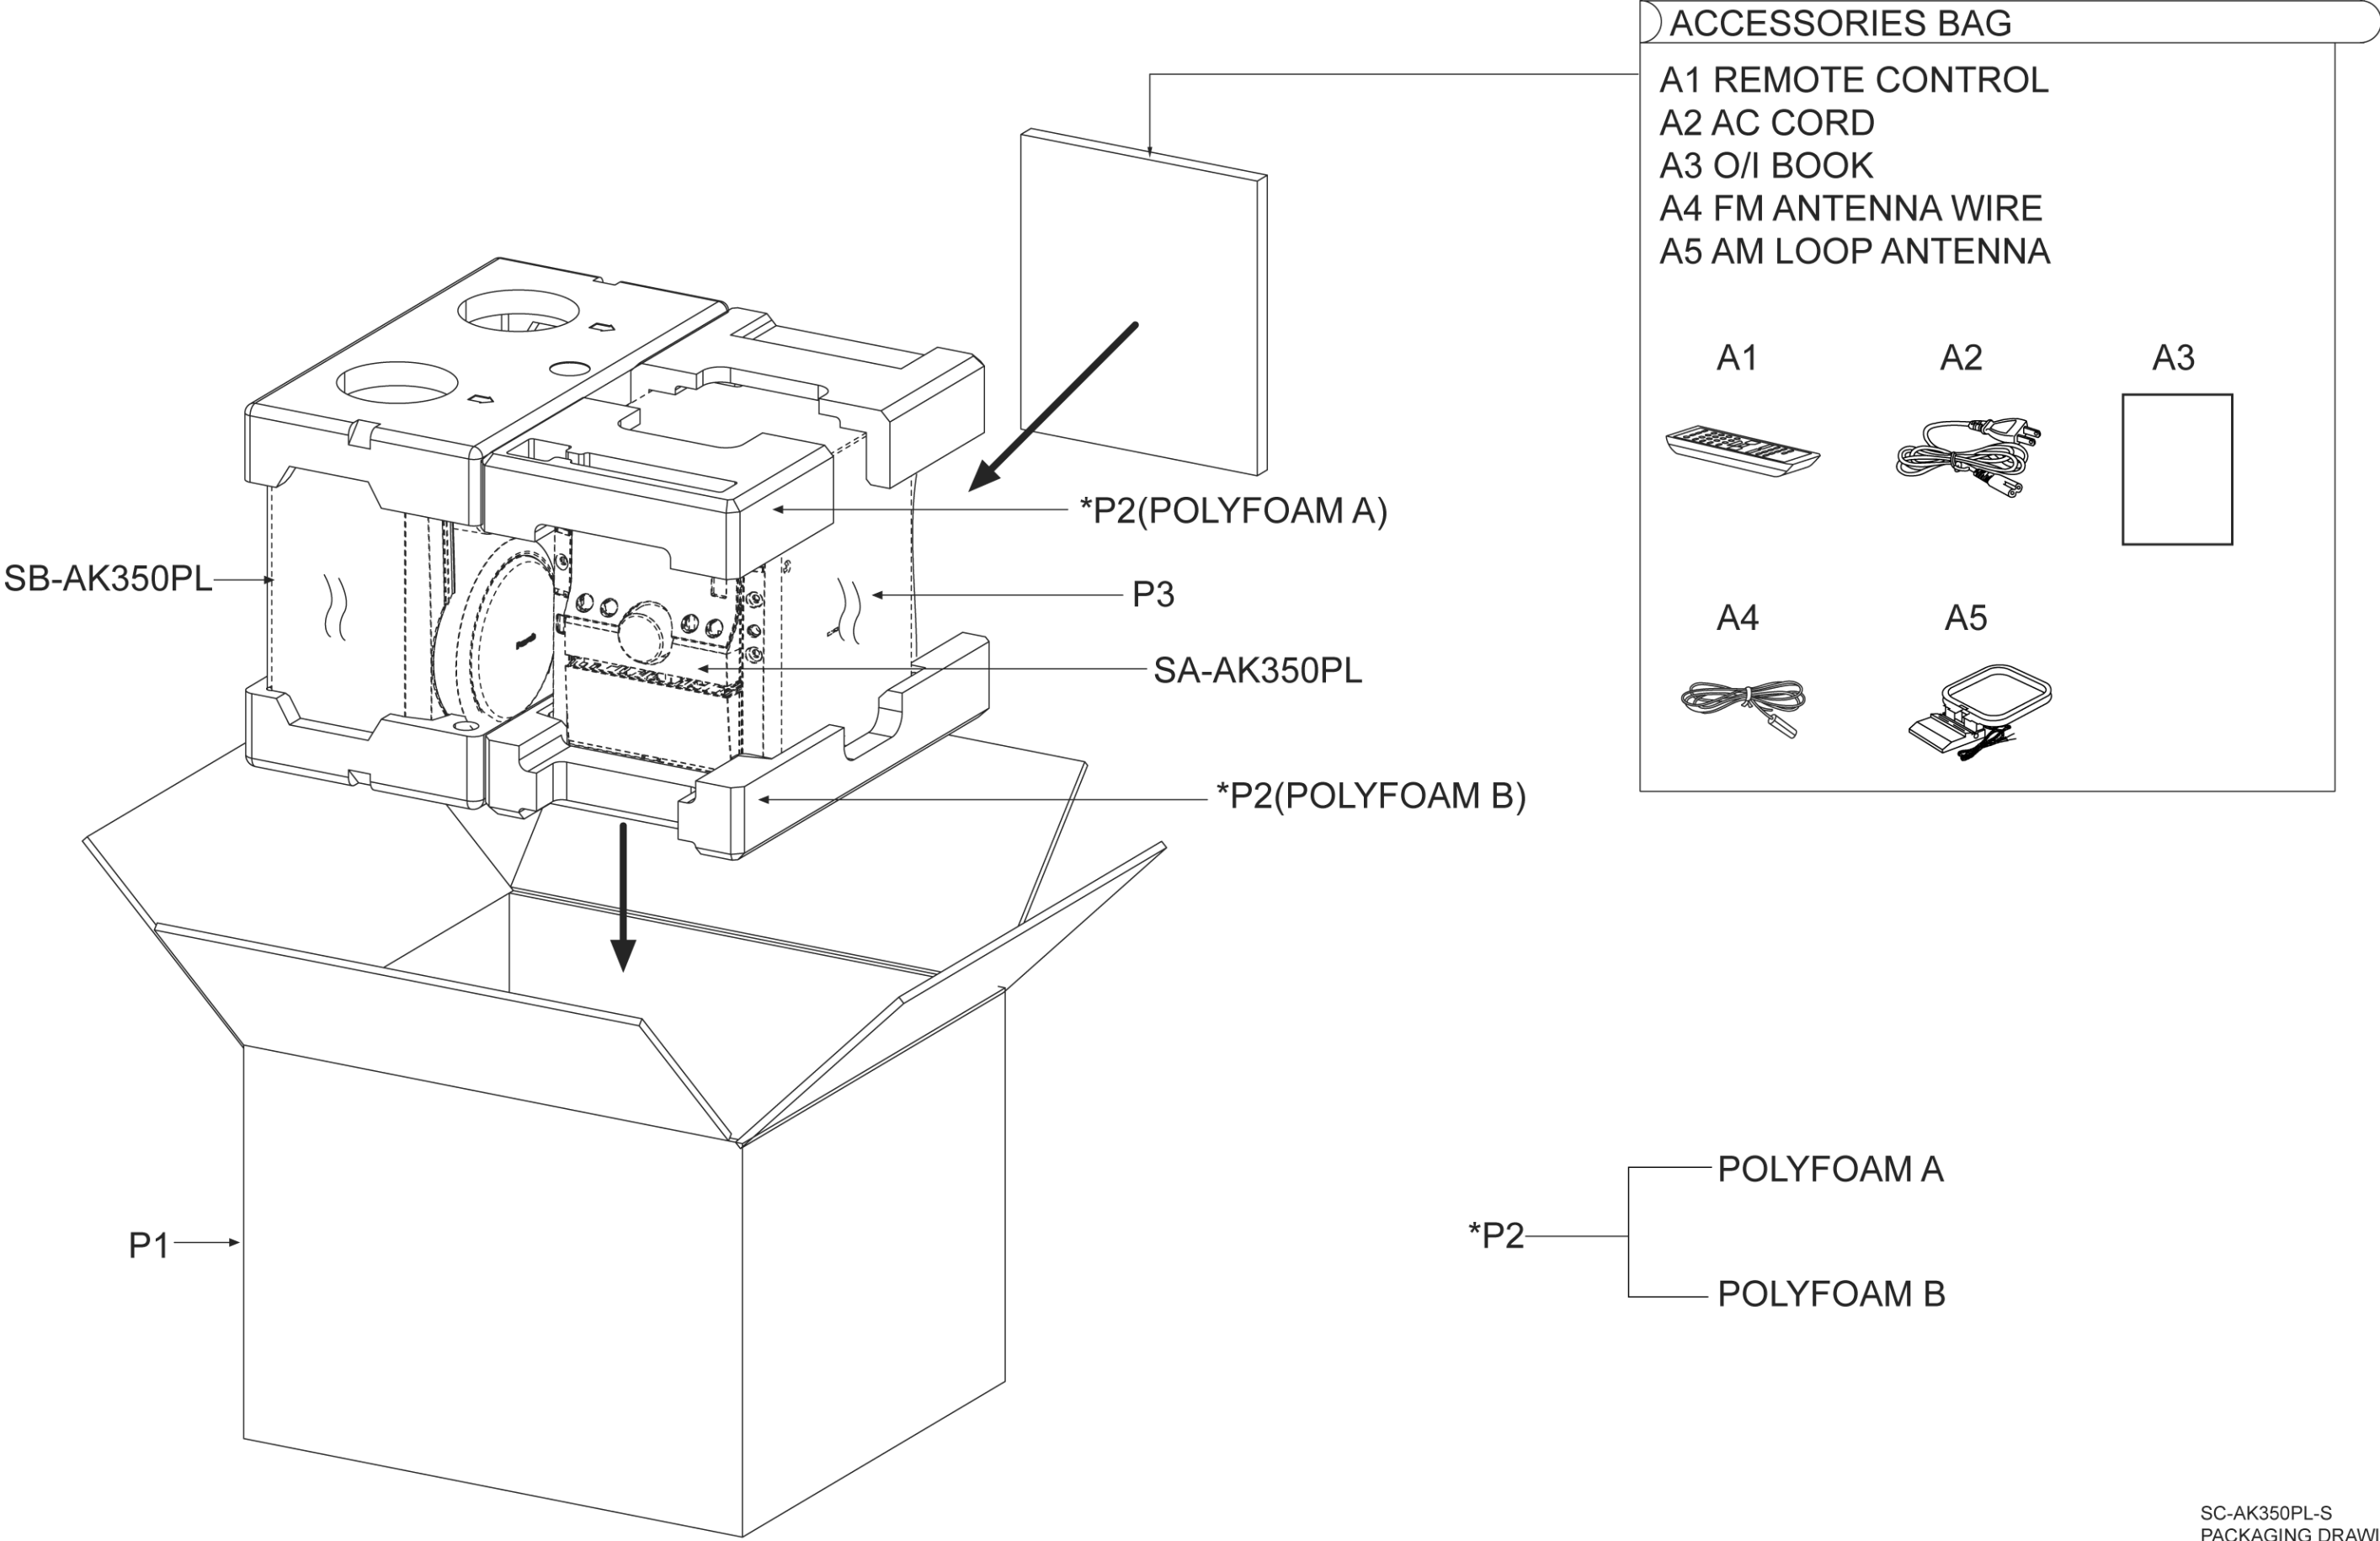

24 Replacement Parts List

Notes:

- Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardent (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour)

Parts without these indications can be used for all areas.

- Warning: This product uses a laser diode. Refer to caution statements on "Precaution of Laser Diode".

- Capacitor values are in microfarads (μ F) unless specified otherwise, P= Pico-farads (pF), F= Farads.

- Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM).

- The marking (RTL) indicates that the Retention Time is limited for this items. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of a availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

- [M] Indicates in the Remarks columns indicates parts supplied by **PAVCSG**.

- Reference for O/I book languages are as follows:

| | | | | | | | |
|-----|-----------------|-----|---------|-----|------------|-----|---------------------|
| Ar: | Arabic | Du: | Dutch | It: | Italian | Sp | Spanish |
| Cf: | Canadian French | En: | English | Ko: | Korean | Sw: | Swedish |
| Cz: | Czech | Fr: | French | Po: | Polish | Co: | Traditional Chinese |
| Da: | Danish | Ge: | German | Ru: | Russian | Cn: | Simplified Chinese |
| Pe: | Persian | Ur: | Ukraine | Pr: | Portuguese | | |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| | | CABINET AND CHASSIS | |
| 1 | J3CCBB000009 | TUNER PACK | [M] |
| 2 | REEV0139 | 21P FFC (DECK) | [M] |
| 3 | REEV0140 | 22P FFC (CD) | [M] |
| 5 | REEV0190 | 30P FFC | [M] |
| 6 | REEX0747 | 14P FFC WIRE | [M] |
| 7 | RGKV0158-K | CD LID | [M] |
| 9 | RGLV0069-Q | VOLUME KNOB LIGHT | [M] |
| 10 | RGLV0070-Q | POWER BUTTON LIGHT | [M] |
| 11 | RGPV0105-S | FRONT PANEL | [M] |
| 12 | RGRV0052B-B | REAR PANEL | [M] |
| 14 | RGUV0163-K | SELECTOR BUTTON | [M] |
| 15 | RGUV0164-S | CD CHANGER/POWER BTN | [M] |
| 16 | RGUV0165-S | 5CD CHANGE BUTTON | [M] |
| 17 | RGUV0166-K | FUNCTION BUTTON L | [M] |
| 18 | RGUV0167-K | FUNCTION BUTTON R | [M] |
| 19 | RGUV0177-1S | 7 CONTROL BUTTON | [M] |
| 20 | RGWX0056-3S | MIC VOL KNOB | [M] |
| 21 | RGWX0072-1S | VOL KNOB | [M] |
| 22 | RHD26046-L | SCREW | [M] |
| 23 | RMC0158-S2 | TRANSISTOR HOLDER | [M] |
| 24 | RHD30007-1SJ | SCREW | [M] |
| 25 | RHD30111-3 | SCREW | [M] |
| 26 | RHD30119-S | SCREW (SILVER) | [M] |
| 27 | RKA0072-KJ | LEG CUSHION | [M] |
| 28 | RKFV0062-1S | CASSETTE LID | [M] |
| 29 | RKMV0071-SJ | TOP PANEL | [M] |
| 30 | RKWV0068F-K | FL WINDOW | [M] |
| 31 | RMBV0042-2 | CASS LID SPRING | [M] |
| 32 | RMBV0052 | DVD LID SPRING | [M] |
| 33 | RMGX0033 | CUSHION RUBBER | [M] |
| 34 | RMGX0044-1 | D.AMP. INSULATOR | [M] |
| 35 | L6FALEFH0030 | FAN UNIT | [M] |
| 36 | RMKX0113-3 | CD CHASSIS | [M] |
| 37 | RMKX0118A | BOTTOM CHASSIS | [M] |
| 38 | RMQV0076-W | REFLECTOR | [M] |
| 39 | RMVV0073-K | FL WINDOW BACKGROUND | [M] |
| 40 | RMXX0131-1 | SUB HEAT SINK | [M] |
| 44 | RUS757ZAA | CASS HALF SPRING | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| 45 | RXGX0002 | DAMPER GEAR | [M] |
| 46 | RXXV0048 | HEATSINK UNIT | [M] |
| 48 | XTV3+10GFJ-M | SCREW | [M] |
| 49 | XTW3+12TFJ | SCREW | [M] |
| 50 | XTWS3+6TFJ | SCREW | [M] |
| 51 | REXX0325 | 9P FLAT WIRE | [M] |
| 52 | REXX0324-1 | 9P FLAT WIRE | [M] |
| 53 | RMNV0079 | FL HOLDER | [M] |
| 54 | RMNV0059 | LED HOLDER | [M] |
| 55 | XTW3+10TFC | SCREW | [M] |
| | | CASSETTE DECK | |
| 101 | RED0067-2 | P/B HEAD | [M] |
| 103 | RDG0300 | REEL BASE GEAR | [M] |
| 104 | RDG0301 | WINDING RELAY GEAR | [M] |
| 105 | RDK0026-4 | MAIN GEAR | [M] |
| 107 | RDV0033-4 | WINDING BELT | [M] |
| 108 | RDV0064-1 | CAPSTAN BELT | [M] |
| 110 | RMB0312 | TRIGGER LEVER SPRING | [M] |
| 111 | RMB0400 | REEL SPRING | [M] |
| 112 | RMB0403 | HEAB PANEL SPRING | [M] |
| 113 | RMB0404 | BRAKE ROD SPRING | [M] |
| 114 | RMB0406-5 | FR LEVER SPRING | [M] |
| 115 | RMB0408 | THRUST SPRING | [M] |
| 116 | RML0370-4 | TRIGGER LEVER | [M] |
| 117 | RML0371 | FR LEVER | [M] |
| 118 | RML0372-2 | WINDING LEVER | [M] |
| 119 | RML0374-2 | EJECT LEVER | [M] |
| 120 | RMM0131-1 | BRAKE ROD | [M] |
| 121 | RMM0133-1 | EJECT ROD | [M] |
| 122 | RMQ0519 | REEL HUB | [M] |
| 123 | RMS0398-1 | MOVING CORE | [M] |
| 124 | RXQ0470-2 | PLUNGER ASS'Y | [M] |
| 125 | RMC0061 | PACK SPRING | [M] |
| 126 | RXF0061-1 | FLYWHEEL F ASS'Y | [M] |
| 128 | RXG0040 | FF RELAY GEAR ASS'Y | [M] |
| 129 | RMK0283A-2 | SUB-CHASSIS | [M] |
| 130 | RXL0124 | PINCH ROLLER F ASS'Y | [M] |
| 130-1 | RMB0401 | PINCH ARM SPRING F | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|---|---------|
| 132 | RXL0126 | WINDING ARM ASS'Y | [M] |
| 133 | RXQ0412-3 | HEAD PANEL ASS'Y | [M] |
| 133-1 | RMB0405-1 | FR ROD SPRING | [M] |
| 133-2 | RMM0132-1 | FR ROD | [M] |
| 134 | REM0120 | CAP MOTOR ASS'Y | [M] |
| 135 | RHD26022-1 | MOTOR SCREW | [M] |
| 136 | XTW2+5LFJ | HEAD BLOCK UNIT SCREW | [M] |
| 137 | XTW26+10SFJ | SUB-CHASSIS SCREW | [M] |
| 138 | XYC2+JF17FJ | PCB EARTH SCREW | [M] |
| 139 | RFKJSTR280PP | CHASSIS ASS'Y | [M] |
| | | | |
| | | TRAVERSE DECK | |
| 360 | RAE0165A-V | TRV UNIT (WITHOUT CD SERVO P.C.B.) | [M] △ |
| 361 | RME0109-1 | FLOATING SPRING | [M] |
| 362 | RMG0703-R | FLOATING RUBBER | [M] |
| 363 | RMRX0064-1 | MIDDLE CHASSIS | [M] |
| 364 | RMS0757-1 | FIXED PIN | [M] |
| 365 | XTN2+6GFJ | SCREW | [M] |
| | | | |
| | | PRINTED CIRCUIT BOARD | |
| | | | |
| | REPV0111A | CD SERVO P.C.B. | [M] RTL |
| | REPV0134B | DECK P.C.B. | [M] RTL |
| | REPX0321F | DECK MECHANISM P.C.B. | [M] RTL |
| | REPV0130J | MAIN P.C.B. | [M] RTL |
| | REPV0131F | PANEL P.C.B. | [M] RTL |
| | REPV0131F | SUB PANEL P.C.B. | [M] RTL |
| | REPV0133C | POWER P.C.B. | [M] RTL |
| | REPV0132F | TRANSFORMER P.C.B. | [M] RTL |
| | | | |
| | | INTEGRATED CIRCUITS | |
| | | | |
| IC971 | CNB13030R2AU | PHOTO INTERRUPTOR | [M] |
| IC1000 | C1AA00000612 | IC ANALOG SWITCH | [M] |
| IC1001 | AN7326K | IC DECK R/P | [M] |
| IC2801 | C2CBYY000482 | IC MICROPROCESSOR | [M] |
| IC2803 | C1BB00001121 | IC AUDIO SOUND PROCESSOR | [M] |
| IC2804 | C0AABB000125 | IC OP AMP | [M] |
| IC2872 | C0CBAHG00011 | IC VOLTAGE REGULATOR | [M] |
| IC3700 | C0ABBB000244 | IC SMT OP AMP | [M] |
| IC4000 | C0DBZGC00067 | IC 3.3V REGULATOR | [M] |
| IC5101 | C0DAZYY00005 | IC REGULATOR | [M] |
| IC5201 | C0JBAB000011 | IC LOGIC | [M] |
| IC5301 | C1BA00000487 | IC 2-CH DIGITAL AMP | [M] |
| IC5401 | C1BA00000487 | IC 2-CH DIGITAL AMP | [M] |
| IC6601 | C0HBB0000057 | IC FL DRIVER | [M] |
| IC7001 | MN6627954MA | IC SERVO PROCESSOR/ DIGITAL SIGNAL PROCESSOR/ DIGITAL FILTER D/A CONVERTER | [M] |
| IC7002 | BA5948FPE2 | IC 4 CH DRIVE | [M] |
| | | | |
| | | TRANSISTORS | |
| | | | |
| Q1101 | B1ABGC000005 | TRANSISTOR | [M] |
| Q1201 | B1ABGC000005 | TRANSISTOR | [M] |
| Q1302 | B1GDCFJJ0002 | TRANSISTOR | [M] |
| Q1303 | B1GBCFGH0001 | TRANSISTOR | [M] |
| Q1304 | B1GDCFJH0002 | TRANSISTOR | [M] |
| Q1309 | B1AAGC000006 | TRANSISTOR | [M] |
| Q1310 | B1AAGC000006 | TRANSISTOR | [M] |
| Q1312 | B1ABCF000011 | TRANSISTOR | [M] |
| Q1314 | B1GDCFJH0002 | TRANSISTOR | [M] |
| Q1315 | B1ACKD000006 | TRANSISTOR | [M] |
| Q1316 | 2SD09650RA | TRANSISTOR | [M] |
| Q1317 | B1ABGC000005 | TRANSISTOR | [M] |
| Q2142 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2242 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2311 | B1ABGC000005 | TRANSISTOR | [M] |
| Q2317 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2341 | B1ABGC000005 | TRANSISTOR | [M] |
| Q2411 | B1ABGC000005 | TRANSISTOR | [M] |
| Q2417 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2441 | B1ABGC000005 | TRANSISTOR | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| Q2501 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2511 | B1GDCFJJ0047 | TRANSISTOR | [M] |
| Q2803 | B1GBCFJJ0051 | TRANSISTOR | [M] |
| Q2936 | B1ACKD000006 | TRANSISTOR | [M] |
| Q2937 | B1GBCFJJ0051 | TRANSISTOR | [M] |
| Q2942 | B1ACKD000006 | TRANSISTOR | [M] |
| Q2943 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2948 | B1ABCF000176 | TRANSISTOR | [M] |
| Q2949 | B1ABCF000176 | TRANSISTOR | [M] |
| Q3601 | 2SC3940A0A | TRANSISTOR | [M] |
| Q5101 | B1DEGM000026 | TRANSISTOR | [M] |
| Q5102 | B1DEGM000026 | TRANSISTOR | [M] |
| Q5103 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5104 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5108 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5109 | 2SB0709AHL | TRANSISTOR | [M] |
| Q5110 | B1GACFGA0002 | TRANSISTOR | [M] |
| Q5111 | B1BACG000023 | TRANSISTOR | [M] |
| Q5112 | B1BCCG000002 | TRANSISTOR | [M] |
| Q5113 | B1GDCFNA0001 | TRANSISTOR | [M] |
| Q5114 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5153 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5154 | 2SB0709AHL | TRANSISTOR | [M] |
| Q5173 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5201 | B1ABCF000176 | TRANSISTOR | [M] |
| Q5202 | B1ADCF000063 | TRANSISTOR | [M] |
| Q5950 | B1AAKD000014 | TRANSISTOR | [M] |
| Q5951 | 2SB0621AHA | TRANSISTOR | [M] |
| Q5952 | B1GACFJJ0018 | TRANSISTOR | [M] |
| Q5953 | B1AACF000064 | TRANSISTOR | [M] |
| Q6501 | B1AACF000064 | TRANSISTOR | [M] |
| Q6502 | B1AACF000064 | TRANSISTOR | [M] |
| Q7601 | B1ADCF000001 | TRANSISTOR | [M] |
| | | | |
| QR2501 | B1GDCFJJ0047 | CHIP TRANSISTOR | [M] |
| QR2502 | B1GBCFGN0016 | CHIP TRANSISTOR | [M] |
| QR3105 | KRC101STA | CHIP TRANSISTOR | [M] |
| QR3106 | KRC101STA | CHIP TRANSISTOR | [M] |
| QR6457 | B1GBCFLL0037 | CHIP TRANSISTOR | [M] |
| | | | |
| | | DIODES | |
| | | | |
| D971 | MA2C16500E | DIODE | [M] |
| D1301 | B0ACCK000005 | DIODE | [M] |
| D2191 | B0ACCK000005 | DIODE | [M] |
| D2241 | B0ACCK000005 | DIODE | [M] |
| D2503 | B0ADCC000002 | DIODE | [M] |
| D2583 | B0BC9R000008 | DIODE | [M] |
| D2603 | B0BC9R000008 | DIODE | [M] |
| D2803 | B0ACCK000005 | DIODE | [M] |
| D2811 | B0ADCJ000020 | DIODE | [M] |
| D2813 | B0ACCK000005 | DIODE | [M] |
| D2936 | B0EAKM000117 | DIODE | [M] |
| D2937 | B0EAKM000117 | DIODE | [M] |
| D2938 | B0EAKM000117 | DIODE | [M] |
| D2939 | B0EAKM000117 | DIODE | [M] |
| D2940 | B0EAKM000117 | DIODE | [M] |
| D2941 | B0EAKM000117 | DIODE | [M] |
| D2946 | B0ADCJ000020 | DIODE | [M] |
| D4000 | B0JAME000114 | DIODE | [M] |
| D5101 | B0BA01100004 | DIODE | [M] |
| D5102 | B0BA02600018 | DIODE | [M] |
| D5103 | B0BA5R000004 | DIODE | [M] |
| D5104 | B0BA01100004 | DIODE | [M] |
| D5105 | B0BA02400029 | DIODE | [M] |
| D5107 | B0BA01500003 | DIODE | [M] |
| D5109 | B0BA01100004 | DIODE | [M] |
| D5121 | B0EAKP000134 | DIODE | [M] |
| D5122 | B0EAKP000134 | DIODE | [M] |
| D5125 | B0AAFK000004 | DIODE | [M] |
| D5126 | B0ACCK000005 | DIODE | [M] |
| D5130 | B0JAME000025 | DIODE | [M] |
| D5152 | B0BA01900005 | DIODE | [M] |
| D5153 | B0JAME000119 | DIODE | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| D5154 | B0JAME000119 | DIODE | [M] |
| D5155 | B0JAME000119 | DIODE | [M] |
| D5156 | B0JAME000119 | DIODE | [M] |
| D5157 | B0JAME000119 | DIODE | [M] |
| D5158 | B0JAME000119 | DIODE | [M] |
| D5159 | B0JAME000119 | DIODE | [M] |
| D5160 | B0JAME000119 | DIODE | [M] |
| D5950 | B0EAMM000055 | DIODE | [M] |
| D5951 | B0EAMM000055 | DIODE | [M] |
| D5952 | B0EAMM000055 | DIODE | [M] |
| D5953 | B0EAMM000055 | DIODE | [M] |
| D5954 | B0EAKP000134 | DIODE | [M] |
| D5955 | B0EAKP000134 | DIODE | [M] |
| D5956 | B0EAKP000134 | DIODE | [M] |
| D5957 | B0EAKP000134 | DIODE | [M] |
| D5958 | B0EAKP000134 | DIODE | [M] |
| D5959 | B0EAKP000134 | DIODE | [M] |
| D5960 | B0BA02400030 | DIODE | [M] |
| D5961 | B0AAF0000004 | DIODE | [M] |
| D5962 | B0AAF0000004 | DIODE | [M] |
| D5963 | B0AAF0000004 | DIODE | [M] |
| D5964 | B0BA6R800008 | DIODE | [M] |
| D5965 | B0AAF0000004 | DIODE | [M] |
| D5966 | B0AAF0000004 | DIODE | [M] |
| D6301 | B0ACCK000005 | DIODE | [M] |
| D6457 | B3ACA0000302 | DIODE | [M] |
| D6458 | B3AAA0000583 | DIODE | [M] |
| D6462 | B3ACA0000302 | DIODE | [M] |
| D6635 | B0BC5R600003 | DIODE | [M] |
| D7650 | MAZ80560ML | DIODE | [M] |
| | | | |
| | | VARIABLE RESISTORS | |
| | | | |
| VR6491 | EVEKE2F3024B | VR VOLUME JOG | [M] |
| VR6511 | EVUF2AF15B14 | VR MIC VOLUME JOG | [M] |
| | | | |
| | | SWITCHES | |
| | | | |
| S971 | K0J1BB000017 | SW MODE | [M] |
| S972 | K0J1BB000021 | SW HALF | [M] |
| S975 | K0J1BB000021 | SW REC_INH_F | [M] |
| S6101 | EVQ21405RJ | SW AC IN | [M] |
| S6102 | EVQ21405RJ | SW MULTI CHANGE | [M] |
| S6103 | EVQ21405RJ | SW OPEN/ CLOSE | [M] |
| S6104 | EVQ21405RJ | SW SINGLE CHANGE | [M] |
| S6105 | EVQ21405RJ | SW USB | [M] |
| S6106 | EVQ21405RJ | SW STOP/ -DEMO | [M] |
| S6108 | EVQ21405RJ | SW HARD BASS | [M] |
| S6201 | EVQ21405RJ | SW CD1 | [M] |
| S6202 | EVQ21405RJ | SW CD2 | [M] |
| S6203 | EVQ21405RJ | SW CD3 | [M] |
| S6204 | EVQ21405RJ | SW CD4 | [M] |
| S6205 | EVQ21405RJ | SW CD5 | [M] |
| S6206 | EVQ21405RJ | SW /FF/ | [M] |
| S6207 | EVQ21405RJ | SW /REW/ | [M] |
| S6301 | EVQ21405RJ | SW TAPE EJECT | [M] |
| S6302 | EVQ21405RJ | SW CD | [M] |
| S6303 | EVQ21405RJ | SW TAPE | [M] |
| S6304 | EVQ21405RJ | SW TUNER/ FM/ AM | [M] |
| S6305 | EVQ21405RJ | SW EXT IN | [M] |
| S6306 | EVQ21405RJ | SW REC | [M] |
| S6307 | EVQ21405RJ | SW M.EQ+ | [M] |
| S6308 | EVQ21405RJ | SW MANUAL EQ | [M] |
| S6309 | EVQ21405RJ | SW M.EQ- | [M] |
| S7201 | RSH1A048-A | SW REST | [M] |
| | | | |
| | | CONNECTORS | |
| | | | |
| CN1305 | K1MN21B00010 | 21P FFC CONNECTOR | [M] |
| CN2801 | K1MN22AA0004 | 22P CONNECTOR | [M] |
| CN2803 | K1MN21A00005 | 21P CONNECTOR | [M] |
| CN2805 | K1MN14A00049 | 15P FFC CONNECTOR | [M] |
| CN2806 | K1MN30AA0004 | 30P CONNECTOR | [M] |
| CN2808 | K1KB12B00037 | 12P CONNECTOR | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| CN2809 | K1KB12B00037 | 12P CONNECTOR | [M] |
| CN2810 | K1KA02AA0186 | FAN CONNECTOR | [M] |
| CN3601 | K1KA10AA0031 | 10P CONNECTOR | [M] |
| CN5102 | K1KA12AA0031 | 12P CONNECTOR | [M] |
| CN5103 | K1KA12AA0031 | 12P CONNECTOR | [M] |
| CN5950 | K1KA09AA0319 | 9P CONNECTOR | [M] |
| CN5951 | K1KA09AA0193 | 9P CONNECTOR | [M] |
| CN6601 | K1MN30AA0004 | 30P CONNECTOR | [M] |
| CN7001 | K1MN16B00154 | 16P FFC CONNECTOR | [M] |
| CN7002 | K1MN22BA0005 | 22P CONNECTOR | [M] |
| | | | |
| CP1301 | K1MY05AA0043 | 5P CONNECTOR | [M] |
| CP1902 | K1KA09BA0153 | 9P CONNECTOR | [M] |
| | | | |
| CS971 | RJU071H09M1 | CONNECTOR | [M] |
| | | | |
| | | COILS & TRANSFORMERS | |
| | | | |
| L1301 | G2ZZ00000024 | BIAS OCS COIL | [M] |
| L1302 | G0C470JA0052 | RF CHOKE COIL | [M] |
| L2901 | G0C101JA0052 | INDUCTOR | [M] |
| L4000 | D0GBR00JA008 | CHIP JUMPER | [M] |
| L4001 | D0GBR00JA008 | CHIP JUMPER | [M] |
| L5101 | J0JKB0000037 | FILTER | [M] |
| L5102 | J0JKB0000037 | FILTER | [M] |
| L5301 | G0B185LA0002 | COIL | [M] |
| L5401 | G0B185LA0002 | COIL | [M] |
| L5402 | J0JKB0000037 | FILTER | [M] |
| L5403 | J0JKB0000037 | FILTER | [M] |
| L5601 | G0B9R5K00001 | CHOKE COIL | [M] △ |
| L5602 | G0B9R5K00001 | CHOKE COIL | [M] △ |
| L5603 | G0B9R5K00001 | CHOKE COIL | [M] △ |
| L5604 | G0B9R5K00001 | CHOKE COIL | [M] △ |
| L5950 | ELF15N035AN | LINE FILTER | [M] △ |
| L6501 | G0C100JA0052 | INDUCTOR | [M] |
| L6502 | G0C100JA0052 | INDUCTOR | [M] |
| | | | |
| LB7262 | D0GBR00JA008 | CHIP JUMPER | [M] |
| LB7263 | D0GBR00JA008 | CHIP JUMPER | [M] |
| LB7264 | D0GBR00JA008 | CHIP JUMPER | [M] |
| | | | |
| T5950 | G4CYAYY00134 | MAIN TRANSFORMER | [M] △ |
| T5951 | G4C2AAJ00005 | SUB TRANSFORMER | [M] △ |
| | | | |
| | | COMPONENT COMBINATIONS | |
| | | | |
| Z5950 | ERZV10V511CS | ZENER | [M] △ |
| Z6481 | B3RAD0000146 | OPTICAL TRANSMITTER | [M] |
| | | | |
| PH1 | B3NAA0000120 | PHOTO INTERRUPTERS | [M] |
| PH2 | B3NAA0000120 | PHOTO INTERRUPTERS | [M] |
| | | | |
| | | RELAY | |
| | | | |
| RL5950 | K6B1AEA00015 | POWER RELAY | [M] △ |
| | | | |
| | | OSCILLATORS | |
| | | | |
| X2801 | H0A327200097 | CRYSTAL | [M] |
| X2802 | H2B100500004 | CERAMIC RESONATOR | [M] |
| X5201 | H2A415300001 | CRYSTAL OSCILLATOR | [M] |
| X5202 | H2A375300003 | CRYSTAL OSCILLATOR | [M] |
| X7201 | H2B169500005 | CRYSTAL | [M] |
| | | | |
| | | DISPLAY TUBE | |
| | | | |
| FL6602 | A2BD00000172 | FL DISPLAY | [M] |
| | | | |
| | | FUSE | |
| | | | |
| F1 | K5D402APA008 | FUSE | [M] △ |
| | | | |
| | | FUSE HOLDERS | |
| | | | |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|---------------|-------------------------|---------|
| FC1 | EYF52BCY | FUSE CLIP | [M] |
| FC2 | EYF52BCY | FUSE CLIP | [M] |
| | | FSUE PROTECTORS | |
| FP5920 | K5G702A00009 | FUSE PROTECTOR | [M] △ |
| FP5940 | K5G702Z000004 | FUSE PROTECTOR | [M] △ |
| FP5950 | K5G402A000025 | FUSE PROTECTOR | [M] △ |
| | | HOLDERS | |
| H5104 | K1YF090000001 | 9P WIRE HOLDER | [M] |
| H6555 | K1YZ090000002 | CABLE HOLDER | [M] |
| | | JACKS | |
| JK2803 | K2HA204B0153 | JK CONNECTOR | [M] |
| JK5101 | K4AZ08B000005 | JK SPEAKER | [M] |
| JK5950 | K2AB2B000007 | JK AC INLET | [M] △ |
| JK6501 | K2HC103A0024 | JK HP | [M] |
| JK6551 | K2HC103A0024 | JK HP | [M] |
| JK6751 | K2HC11YA0002 | JK MUSIC PORT | [M] |
| | | EARTH TERMINALS | |
| E5101 | K9ZZ00001279 | EARTH PLATE | [M] |
| E5103 | K9ZZ00001279 | EARTH PLATE | [M] |
| | | CHIP JUMPERS | |
| W575 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W576 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W577 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W579 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W580 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W581 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W582 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W583 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W584 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W586 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W587 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W588 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W589 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W590 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W591 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W592 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W593 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W594 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W595 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W596 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W597 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W598 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W599 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W600 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W601 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W602 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W603 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W604 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W605 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W606 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W607 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W608 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W609 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W610 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W611 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W612 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W613 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W614 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W615 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W616 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W617 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W618 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W619 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W620 | ERJ3GEY0R00V | CHIP JUMPER | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| W621 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W622 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W623 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W624 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W625 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W626 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W627 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W628 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W629 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W630 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W631 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W632 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W633 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W634 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W635 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W636 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W637 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W638 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W639 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W640 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W641 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W642 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W643 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W644 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W645 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W646 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W647 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W648 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W649 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W650 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W651 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W652 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W653 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W654 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W655 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W656 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W657 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W658 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W659 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W660 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W661 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W662 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W663 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W664 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W666 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W667 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W668 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W669 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W670 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W671 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W672 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W673 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W674 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W675 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W676 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W677 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W678 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W679 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W679 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W680 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W681 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W682 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W684 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W690 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W690 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W706 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W712 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W744 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W748 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W750 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W751 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W901 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W903 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W904 | ERJ6GEY0R00V | CHIP JUMPER | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|----------------------------------|---------|
| W905 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W906 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W907 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W908 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W909 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W910 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W911 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W913 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W914 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W915 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W924 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W925 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W926 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W1000 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W1001 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W1002 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W1003 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W1004 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W1005 | ERJ3GEY0R00V | CHIP JUMPER | [M] |
| W1006 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W1011 | ERJ6GEY0R00V | CHIP JUMPER | [M] |
| W1012 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W7001 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W7002 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W7003 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W7004 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7005 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7006 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W7007 | ERJ8GEY0R00V | CHIP JUMPER | [M] |
| W7008 | D0GDR00JA017 | CHIP JUMPER | [M] |
| W7009 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7010 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7011 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7012 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7013 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7014 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7015 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7016 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7017 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7018 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7019 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7020 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7021 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7022 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7023 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7024 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7025 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7026 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7027 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7028 | D0GBR00JA008 | CHIP JUMPER | [M] |
| W7029 | D0GBR00JA008 | CHIP JUMPER | [M] |
| | | | |
| | | WIRES | |
| | | | |
| JW6001 | RWJ1810060SS | PANEL TO SUB PANEL WIRE (JW6002) | [M] |
| | | | |
| WR1903 | RWJ0102050KR | 2P (MOTOR WIRE) | [M] |
| | | | |
| | | PACKING MATERIALS | |
| | | | |
| P1 | RPGV0346 | PACKING CASE | [M] |
| P2 | RPNV0119 | POLYFOAM | [M] |
| P3 | RPF0198 | MIRAMAT SHEET | [M] |
| | | | |
| | | ACCESSORIES | |
| | | | |
| A1 | N2QAYB000142 | REMOTE CONTROL | [M] |
| A1-1 | RKK-HTR0283H | R/C BATTERY COVER | [M] |
| A2 | K2CB2CB00018 | AC CORD | [M] △ |
| A3 | RQTV0198-1M | O/I BOOK (Sp) | [M] |
| A4 | RSA0007-L1 | FM ANTENNA WIRE | [M] |
| A5 | N1DAAA00001 | AM LOOP ANTENNA | [M] |
| | | | |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| | | RESISTORS | |
| | | | |
| R1 | D0AE102JA048 | 1K 1/4W | [M] |
| R2 | D0AE101JA048 | 100 1/4W | [M] |
| R972 | ERDS2TJ821T | 820 1/4W | [M] |
| R973 | ERDS2TJ393T | 39K 1/4W | [M] |
| R1061 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R1063 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R1064 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R1101 | D0GB330JA008 | 33 1/16W | [M] |
| R1102 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R1103 | D0GB183JA008 | 18K 1/16W | [M] |
| R1104 | D0GB103JA008 | 10K 1/16W | [M] |
| R1105 | D0GB222JA007 | 2.2K 1/16W | [M] |
| R1106 | D0GB104JA008 | 100K 1/16W | [M] |
| R1107 | D0GB102JA008 | 1K 1/16W | [M] |
| R1109 | D0GB102JA008 | 1K 1/16W | [M] |
| R1110 | D0GB333JA008 | 33K 1/16W | [M] |
| R1201 | D0GB330JA008 | 33 1/16W | [M] |
| R1202 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R1203 | D0GB183JA008 | 18K 1/16W | [M] |
| R1204 | D0GB103JA008 | 10K 1/16W | [M] |
| R1205 | D0GB222JA007 | 2.2K 1/16W | [M] |
| R1206 | D0GB104JA008 | 100K 1/16W | [M] |
| R1207 | D0GB102JA008 | 1K 1/16W | [M] |
| R1209 | D0GB102JA008 | 1K 1/16W | [M] |
| R1210 | D0GB333JA008 | 33K 1/16W | [M] |
| R1302 | D0GB471JA007 | 470 1/16W | [M] |
| R1303 | D0GB475JA008 | 4.7M 1/16W | [M] |
| R1304 | D0GB223JA007 | 22K 1/16W | [M] |
| R1305 | D0GB103JA008 | 10K 1/16W | [M] |
| R1309 | D0AF471JA039 | 470 1/4W | [M] |
| R1313 | D0GB103JA008 | 10K 1/16W | [M] |
| R1314 | D0GB102JA008 | 1K 1/16W | [M] |
| R1318 | D0GB103JA008 | 10K 1/16W | [M] |
| R1327 | D0GB472JA007 | 4.7K 1/16W | [M] |
| R1328 | D0GB153JA008 | 15K 1/16W | [M] |
| R1329 | D0GB472JA007 | 4.7K 1/16W | [M] |
| R1330 | ERD2FCVJ4R7T | 4.7 1/4W | [M] |
| R1331 | D0GB752JA008 | 7.5K 1/16W | [M] |
| R1332 | D0GB103JA008 | 10K 1/16W | [M] |
| R1333 | ERD2FCVJ4R7T | 4.7 1/4W | [M] |
| R1334 | D0GB223JA007 | 22K 1/16W | [M] |
| R1335 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R1337 | D0GB103JA008 | 10K 1/16W | [M] |
| R1338 | D0GB472JA007 | 4.7K 1/16W | [M] |
| R1341 | D0GB471JA007 | 470 1/16W | [M] |
| R1342 | D0GB473JA007 | 47K 1/16W | [M] |
| R1343 | D0GB332JA008 | 3.3K 1/16W | [M] |
| R1344 | D0GB273JA008 | 27K 1/16W | [M] |
| R1345 | D0GB102JA008 | 1K 1/16W | [M] |
| R1371 | D0GB223JA007 | 22K 1/16W | [M] |
| R1374 | D0GB471JA007 | 470 1/16W | [M] |
| R1380 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R1401 | D0GB123JA008 | 12K 1/16W | [M] |
| R1402 | D0GB274JA008 | 270K 1/16W | [M] |
| R1403 | D0GB103JA008 | 10K 1/16W | [M] |
| R1404 | D0GB223JA007 | 22K 1/16W | [M] |
| R1405 | D0GB103JA008 | 10K 1/16W | [M] |
| R2102 | D0GB222JA007 | 2.2K 1/16W | [M] |
| R2103 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2104 | D0GB273JA007 | 27K 1/16W | [M] |
| R2111 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2112 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R2121 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2122 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2131 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2132 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2141 | D0GB123JA008 | 12K 1/16W | [M] |
| R2142 | D0GB272JA008 | 2.7K 1/16W | [M] |
| R2145 | D0GB102JA008 | 1K 1/16W | [M] |
| R2146 | D0GB102JA008 | 1K 1/16W | [M] |
| R2149 | D0GB332JA008 | 3.3K 1/16W | [M] |
| R2151 | D0GBR00JA008 | 0 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R2161 | D0GB153JA008 | 15K 1/16W | [M] |
| R2163 | D0GB563JA007 | 56K 1/16W | [M] |
| R2172 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R2173 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2181 | D0GB821JA007 | 820 1/16W | [M] |
| R2182 | D0GBR00JA008 | 0 1/16W | [M] |
| R2183 | D0GB222JA007 | 2.2K 1/16W | [M] |
| R2193 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2194 | D0GB104JA007 | 100K 1/16W | [M] |
| R2195 | D0GB103JA008 | 10K 1/16W | [M] |
| R2196 | D0GB103JA008 | 10K 1/16W | [M] |
| R2202 | D0GB222JA008 | 2.2K 1/16W | [M] |
| R2203 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2204 | D0GB273JA007 | 27K 1/16W | [M] |
| R2211 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2212 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R2221 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2222 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2231 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2232 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2241 | D0GB123JA008 | 12K 1/16W | [M] |
| R2242 | D0GB272JA008 | 2.7K 1/16W | [M] |
| R2245 | D0GB102JA008 | 1K 1/16W | [M] |
| R2246 | D0GB102JA008 | 1K 1/16W | [M] |
| R2247 | D0GB104JA007 | 100K 1/16W | [M] |
| R2248 | D0GB682JA008 | 6.8K 1/16W | [M] |
| R2249 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2251 | D0GBR00JA008 | 0 1/16W | [M] |
| R2271 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2273 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2281 | D0GB821JA007 | 820 1/16W | [M] |
| R2282 | D0GBR00JA008 | 0 1/16W | [M] |
| R2283 | D0GB104JA007 | 100K 1/16W | [M] |
| R2284 | D0GBR00JA008 | 0 1/16W | [M] |
| R2285 | D0GBR00JA008 | 0 1/16W | [M] |
| R2286 | D0GBR00JA008 | 0 1/16W | [M] |
| R2301 | D0GB153JA007 | 15K 1/16W | [M] |
| R2311 | D0GB471JA008 | 470 1/16W | [M] |
| R2312 | D0GB103JA007 | 10K 1/16W | [M] |
| R2313 | D0GB104JA007 | 100K 1/16W | [M] |
| R2315 | D0GB563JA007 | 56K 1/16W | [M] |
| R2316 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2317 | D0GB103JA007 | 10K 1/16W | [M] |
| R2318 | D0GB104JA007 | 100K 1/16W | [M] |
| R2321 | D0GBR00JA008 | 0 1/16W | [M] |
| R2323 | D0GB822JA008 | 8.2K 1/16W | [M] |
| R2326 | D0GB103JA008 | 10K 1/16W | [M] |
| R2328 | D0GB153JA007 | 15K 1/16W | [M] |
| R2329 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2331 | D0GBR00JA008 | 0 1/16W | [M] |
| R2333 | D0GB682JA007 | 6.8K 1/16W | [M] |
| R2334 | D0GBR00JA008 | 0 1/16W | [M] |
| R2335 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2341 | D0GB180JA008 | 18 1/16W | [M] |
| R2343 | D0GB180JA008 | 18 1/16W | [M] |
| R2344 | D0GBR00JA008 | 0 1/16W | [M] |
| R2345 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R2346 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2347 | D0GB1R0JA007 | 1 1/16W | [M] |
| R2352 | D0GB180JA008 | 18 1/16W | [M] |
| R2353 | D0GBR00JA008 | 0 1/16W | [M] |
| R2354 | D0GB180JA008 | 18 1/16W | [M] |
| R2355 | D0GB274JA007 | 270K 1/16W | [M] |
| R2356 | D0GB184JA007 | 180K 1/16W | [M] |
| R2357 | D0GB104JA007 | 100K 1/16W | [M] |
| R2401 | D0GB153JA007 | 15K 1/16W | [M] |
| R2411 | D0GB471JA008 | 470 1/16W | [M] |
| R2412 | D0GB103JA007 | 10K 1/16W | [M] |
| R2413 | D0GB104JA007 | 100K 1/16W | [M] |
| R2415 | D0GB563JA007 | 56K 1/16W | [M] |
| R2416 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2417 | D0GB103JA007 | 10K 1/16W | [M] |
| R2418 | D0GB104JA007 | 100K 1/16W | [M] |
| R2421 | D0GBR00JA008 | 0 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R2423 | D0GB822JA008 | 8.2K 1/16W | [M] |
| R2426 | D0GB103JA008 | 10K 1/16W | [M] |
| R2428 | D0GB153JA007 | 15K 1/16W | [M] |
| R2429 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2431 | D0GBR00JA008 | 0 1/16W | [M] |
| R2433 | D0GB682JA007 | 6.8K 1/16W | [M] |
| R2434 | D0GBR00JA008 | 0 1/16W | [M] |
| R2435 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2441 | D0GB180JA008 | 18 1/16W | [M] |
| R2443 | D0GB180JA008 | 18 1/16W | [M] |
| R2444 | D0GBR00JA008 | 0 1/16W | [M] |
| R2445 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R2446 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2447 | D0GB1R0JA007 | 1 1/16W | [M] |
| R2452 | D0GB180JA008 | 18 1/16W | [M] |
| R2453 | D0GBR00JA008 | 0 1/16W | [M] |
| R2454 | D0GB180JA008 | 18 1/16W | [M] |
| R2455 | D0GB274JA007 | 270K 1/16W | [M] |
| R2456 | D0GB184JA007 | 180K 1/16W | [M] |
| R2457 | D0GB104JA007 | 100K 1/16W | [M] |
| R2501 | D0GB334JA007 | 330K 1/16W | [M] |
| R2502 | D0GB823JA007 | 82K 1/16W | [M] |
| R2503 | D0GB272JA007 | 2.7K 1/16W | [M] |
| R2504 | D0GB101JA007 | 100 1/16W | [M] |
| R2505 | D0GBR00JA008 | 0 1/16W | [M] |
| R2507 | D0GB104JA007 | 100K 1/16W | [M] |
| R2508 | D0GB102JA008 | 1K 1/16W | [M] |
| R2509 | D0GB561JA007 | 560 1/16W | [M] |
| R2510 | D0AF221JA039 | 220 1/4W | [M] |
| R2511 | D0GB561JA007 | 560 1/16W | [M] |
| R2512 | D0GB104JA007 | 100K 1/16W | [M] |
| R2584 | D0GB334JA007 | 330K 1/16W | [M] |
| R2585 | D0GB334JA007 | 330K 1/16W | [M] |
| R2586 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R2587 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R2672 | D0GB103JA008 | 10K 1/16W | [M] |
| R2673 | D0GB682JA008 | 6.8K 1/16W | [M] |
| R2674 | D0GB473JA041 | 47K 1/16W | [M] |
| R2676 | D0GBR00JA008 | 0 1/16W | [M] |
| R2677 | ERJ6GEYJ271V | 270 1/10W | [M] |
| R2701 | D0GB102JA008 | 1K 1/16W | [M] |
| R2702 | D0GB102JA008 | 1K 1/16W | [M] |
| R2703 | D0GB224JA007 | 220K 1/16W | [M] |
| R2704 | D0GB224JA007 | 220K 1/16W | [M] |
| R2705 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2706 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R2801 | D0GB101JA007 | 100 1/16W | [M] |
| R2802 | D0GB103JA008 | 10K 1/16W | [M] |
| R2804 | D0GB101JA008 | 100 1/16W | [M] |
| R2805 | D0GB103JA008 | 10K 1/16W | [M] |
| R2808 | D0GB101JA008 | 100 1/16W | [M] |
| R2812 | D0GB104JA007 | 100K 1/16W | [M] |
| R2815 | D0GB101JA008 | 100 1/16W | [M] |
| R2816 | D0GB101JA008 | 100 1/16W | [M] |
| R2817 | D0GB103JA008 | 10K 1/16W | [M] |
| R2818 | D0GB103JA007 | 10K 1/16W | [M] |
| R2825 | D0GB101JA007 | 100 1/16W | [M] |
| R2826 | D0GB473JA041 | 47K 1/16W | [M] |
| R2827 | D0GB473JA041 | 47K 1/16W | [M] |
| R2828 | D0GB473JA041 | 47K 1/16W | [M] |
| R2829 | D0GB473JA041 | 47K 1/16W | [M] |
| R2830 | D0GB473JA041 | 47K 1/16W | [M] |
| R2831 | D0GB473JA041 | 47K 1/16W | [M] |
| R2832 | D0GB473JA041 | 47K 1/16W | [M] |
| R2833 | D0GB101JA007 | 100 1/16W | [M] |
| R2834 | D0GB101JA007 | 100 1/16W | [M] |
| R2835 | D0GB101JA007 | 100 1/16W | [M] |
| R2836 | D0GB101JA007 | 100 1/16W | [M] |
| R2837 | D0GB101JA007 | 100 1/16W | [M] |
| R2838 | D0GB101JA007 | 100 1/16W | [M] |
| R2839 | D0GB101JA007 | 100 1/16W | [M] |
| R2840 | D0GB101JA007 | 100 1/16W | [M] |
| R2841 | D0GB101JA007 | 100 1/16W | [M] |
| R2842 | D0GB101JA007 | 100 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R2843 | D0GB101JA007 | 100 1/16W | [M] |
| R2844 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R2845 | D0GB101JA007 | 100 1/16W | [M] |
| R2846 | D0GB104JA007 | 100K 1/16W | [M] |
| R2848 | D0GB103JA008 | 10K 1/16W | [M] |
| R2849 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R2850 | D0GB103JA008 | 10K 1/16W | [M] |
| R2851 | D0GB473JA041 | 47K 1/16W | [M] |
| R2852 | D0GB223JA041 | 22K 1/16W | [M] |
| R2853 | D0GB101JA007 | 100 1/16W | [M] |
| R2854 | D0GB101JA008 | 100 1/16W | [M] |
| R2871 | D0GB223JA041 | 22K 1/16W | [M] |
| R2873 | D0GB223JA041 | 22K 1/16W | [M] |
| R2874 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2881 | D0GB221JA041 | 220 1/16W | [M] |
| R2882 | D0GB106JA007 | 10M 1/16W | [M] |
| R2883 | D0GB334JA007 | 330K 1/16W | [M] |
| R2886 | D0GB105JA007 | 1M 1/16W | [M] |
| R2894 | D0GB473JA041 | 47K 1/16W | [M] |
| R2912 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R2914 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2916 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R2918 | D0GB102JA008 | 1K 1/16W | [M] |
| R2921 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2922 | D0GB103JA008 | 10K 1/16W | [M] |
| R2924 | D0GB102JA008 | 1K 1/16W | [M] |
| R2927 | D0GB102JA008 | 1K 1/16W | [M] |
| R2936 | D0GB102JA008 | 1K 1/16W | [M] |
| R2937 | D0GB103JA008 | 10K 1/16W | [M] |
| R2939 | D0GB473JA041 | 47K 1/16W | [M] |
| R2940 | D0GB824JA008 | 820K 1/16W | [M] |
| R2941 | D0GB103JA008 | 10K 1/16W | [M] |
| R2942 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R2943 | D0GB103JA008 | 10K 1/16W | [M] |
| R2944 | D0GB472JA041 | 4.7K 1/16W | [M] |
| R2945 | D0GB103JA008 | 10K 1/16W | [M] |
| R2946 | D0GB563JA007 | 56K 1/16W | [M] |
| R2947 | D0AF270JA039 | 27 1/4W | [M] |
| R2948 | D0GB101JA007 | 100 1/16W | [M] |
| R2949 | D0GB473JA041 | 47K 1/16W | [M] |
| R3209 | D0GB103JA008 | 10K 1/16W | [M] |
| R3211 | D0GB101JA007 | 100 1/16W | [M] |
| R3212 | D0GB101JA007 | 100 1/16W | [M] |
| R3213 | D0GB101JA007 | 100 1/16W | [M] |
| R3303 | D0GB103JA008 | 10K 1/16W | [M] |
| R3700 | D0GBR00JA008 | 0 1/16W | [M] |
| R3701 | D0GB683JA007 | 68K 1/16W | [M] |
| R3702 | D0GB223JA008 | 22K 1/16W | [M] |
| R3704 | D0GB223JA008 | 22K 1/16W | [M] |
| R3706 | D0GB683JA007 | 68K 1/16W | [M] |
| R3707 | D0GBR00JA008 | 0 1/16W | [M] |
| R3708 | D0GB683JA007 | 68K 1/16W | [M] |
| R3709 | D0GB683JA007 | 68K 1/16W | [M] |
| R3711 | D0GB473JA008 | 47K 1/16W | [M] |
| R3712 | D0GB473JA008 | 47K 1/16W | [M] |
| R3720 | D0GBR00JA008 | 0 1/16W | [M] |
| R5101 | D0GB103JA008 | 10K 1/16W | [M] |
| R5103 | D0C1103JA020 | 11 | [M] |
| R5105 | D0GB103JA008 | 10K 1/16W | [M] |
| R5106 | D0GB223JA041 | 22K 1/16W | [M] |
| R5107 | D0GB561JA007 | 560 1/16W | [M] |
| R5108 | D0GB470JA008 | 47 1/16W | [M] |
| R5109 | D0GB102JA008 | 1K 1/16W | [M] |
| R5110 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R5111 | D0GB104JA007 | 100K 1/16W | [M] |
| R5112 | ERJ3GEYJ394V | 390K 1/16W | [M] |
| R5113 | ERJ3GEYJ394V | 390K 1/16W | [M] |
| R5114 | ERJ3GEYJ1R8V | 1.8 1/16W | [M] |
| R5123 | D0C14R7JA020 | 4.7 1W | [M] |
| R5126 | D0GB102JA008 | 1K 1/16W | [M] |
| R5127 | D0GB471JA041 | 470 1/16W | [M] |
| R5132 | D0AF331JA039 | 330 1/4W | [M] |
| R5133 | D0GB103JA008 | 10K 1/16W | [M] |
| R5134 | D0GB122JA008 | 1.2K 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R5135 | D0AE2R2JA048 | 2.2 1/4W | [M] |
| R5136 | D0AE2R2JA048 | 2.2 1/4W | [M] |
| R5137 | D0AE2R2JA048 | 2.2 1/4W | [M] |
| R5138 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5139 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5140 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5141 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5146 | D0GB102JA008 | 1K 1/16W | [M] |
| R5147 | D0AF2R2JA039 | 2.2 1/4W | [M] |
| R5148 | D0GB102JA008 | 1K 1/16W | [M] |
| R5149 | D0GB102JA008 | 1K 1/16W | [M] |
| R5150 | D0GB224JA007 | 220K 1/16W | [M] |
| R5151 | D0GB154JA007 | 150K 1/16W | [M] |
| R5152 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R5153 | D0GB101JA007 | 100 1/16W | [M] |
| R5154 | D0GB101JA007 | 100 1/16W | [M] |
| R5173 | D0GB102JA008 | 1K 1/16W | [M] |
| R5174 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R5201 | D0GB102JA008 | 1K 1/16W | [M] |
| R5202 | D0GB104JA007 | 100K 1/16W | [M] |
| R5203 | D0GB103JA008 | 10K 1/16W | [M] |
| R5204 | D0GB104JA007 | 100K 1/16W | [M] |
| R5205 | D0GB104JA007 | 100K 1/16W | [M] |
| R5206 | D0GB105JA007 | 1M 1/16W | [M] |
| R5207 | D0GB682JA008 | 6.8K 1/16W | [M] |
| R5209 | D0GB100JA007 | 10 1/16W | [M] |
| R5210 | D0GB121JA007 | 120 1/16W | [M] |
| R5301 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5302 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5303 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5304 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5305 | ERG1SJ220E | 22 1W | [M] |
| R5306 | ERG1SJ220E | 22 1W | [M] |
| R5307 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5308 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5312 | D0GB563JA007 | 56K 1/16W | [M] |
| R5313 | D0GB154JA007 | 150K 1/16W | [M] |
| R5317 | D0GB103JA008 | 10K 1/16W | [M] |
| R5401 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5402 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5403 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5404 | D0GB562JA007 | 5.6K 1/16W | [M] |
| R5405 | ERG1SJ220E | 22 1W | [M] |
| R5406 | ERG1SJ220E | 22 1W | [M] |
| R5407 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5408 | ERJ8GEYJ100V | 10 1/8W | [M] |
| R5412 | D0GB224JA007 | 220K 1/16W | [M] |
| R5413 | D0GB104JA007 | 100K 1/16W | [M] |
| R5417 | D0GB103JA008 | 10K 1/16W | [M] |
| R5419 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R5514 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R5521 | ERJ6GEYJ105V | 1M 1/10W | [M] |
| R5522 | ERJ6GEYJ105V | 1M 1/10W | [M] |
| R5523 | ERJ6GEYJ105V | 1M 1/10W | [M] |
| R5524 | ERJ6GEYJ105V | 1M 1/10W | [M] |
| R5950 | ERC12UGK335D | 3.3M 1/2W | [M] △ |
| R5951 | D0AE332JA048 | 3.3K 1/4W | [M] |
| R5952 | D0AE472JA048 | 4.7K 1/4W | [M] |
| R5953 | D0AE151JA048 | 150 1/4W | [M] |
| R5957 | D0AE103JA048 | 10K 1/4W | [M] |
| R5958 | D0AE103JA048 | 10K 1/4W | [M] |
| R5960 | D0AE472JA048 | 4.7K 1/4W | [M] |
| R5961 | D0AE151JA048 | 150 1/4W | [M] |
| R5963 | D0AF820JA039 | 82 1/4W | [M] |
| R6102 | D0GB102JA008 | 1K 1/16W | [M] |
| R6103 | D0GB102JA008 | 1K 1/16W | [M] |
| R6104 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R6105 | D0GB182JA008 | 1.8K 1/16W | [M] |
| R6106 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R6107 | D0GB272JA007 | 2.7K 1/16W | [M] |
| R6108 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R6109 | D0GB393JA007 | 39K 1/16W | [M] |
| R6199 | D0GB103JA008 | 10K 1/16W | [M] |
| R6202 | D0GB102JA008 | 1K 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| R6203 | D0GB102JA008 | 1K 1/16W | [M] |
| R6204 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R6205 | D0GB182JA008 | 1.8K 1/16W | [M] |
| R6206 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R6207 | D0GB272JA007 | 2.7K 1/16W | [M] |
| R6208 | D0GB393JA007 | 39K 1/16W | [M] |
| R6209 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R6302 | D0GB102JA008 | 1K 1/16W | [M] |
| R6303 | D0GB102JA008 | 1K 1/16W | [M] |
| R6304 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R6305 | D0GB182JA008 | 1.8K 1/16W | [M] |
| R6306 | D0GB222JA041 | 2.2K 1/16W | [M] |
| R6307 | D0GB272JA007 | 2.7K 1/16W | [M] |
| R6308 | D0GB472JA008 | 4.7K 1/16W | [M] |
| R6309 | D0GB682JA008 | 6.8K 1/16W | [M] |
| R6310 | D0GB333JA008 | 33K 1/16W | [M] |
| R6399 | D0GB103JA008 | 10K 1/16W | [M] |
| R6457 | D0GB121JA007 | 120 1/16W | [M] |
| R6458 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R6481 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R6491 | D0GB223JA041 | 22K 1/16W | [M] |
| R6492 | D0GB123JA008 | 12K 1/16W | [M] |
| R6493 | D0GB103JA008 | 10K 1/16W | [M] |
| R6494 | D0GB103JA008 | 10K 1/16W | [M] |
| R6501 | D0GB561JA007 | 560 1/16W | [M] |
| R6502 | D0GB334JA007 | 330K 1/16W | [M] |
| R6503 | D0GB330JA007 | 33 1/16W | [M] |
| R6504 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R6505 | D0GB122JA008 | 1.2K 1/16W | [M] |
| R6506 | D0GB222JA007 | 2.2K 1/16W | [M] |
| R6507 | D0GB102JA008 | 1K 1/16W | [M] |
| R6509 | D0GB101JA008 | 100 1/16W | [M] |
| R6601 | D0GB471JA041 | 470 1/16W | [M] |
| R6602 | D0GB471JA041 | 470 1/16W | [M] |
| R6603 | D0GB221JA041 | 220 1/16W | [M] |
| R6604 | D0GB221JA041 | 220 1/16W | [M] |
| R6605 | D0GB823JA007 | 82K 1/16W | [M] |
| R6631 | ERD2FCVG470T | 47 1/4W | [M] |
| R6632 | ERD2FCVG470T | 47 1/4W | [M] |
| R6751 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R6752 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R6753 | D0GB332JA007 | 3.3K 1/16W | [M] |
| R6754 | D0GB152JA008 | 1.5K 1/16W | [M] |
| R6763 | ERJ3GEY0R00V | 0 1/16W | [M] |
| R7111 | D0GB103JA008 | 10K 1/16W | [M] |
| R7211 | ERJ3GEYJ823V | 82K 1/16W | [M] |
| R7212 | ERJ3GEYJ821V | 820 1/16W | [M] |
| R7214 | ERJ3GEYJ471V | 470 1/16W | [M] |
| R7217 | D0GB102JA008 | 1K 1/16W | [M] |
| R7218 | D0GB102JA008 | 1K 1/16W | [M] |
| R7220 | ERJ3GEYJ105V | 1M 1/16W | [M] |
| R7221 | ERJ3GEYJ101V | 100 1/16W | [M] |
| R7253 | ERJ3GEYJ100V | 10 1/16W | [M] |
| R7254 | D0GB102JA008 | 1K 1/16W | [M] |
| R7315 | ERJ3GEYJ332V | 3.3K 1/16W | [M] |
| R7323 | ERJ3GEYJ332V | 3.3K 1/16W | [M] |
| R7325 | ERJ3GEYJ331V | 330 1/16W | [M] |
| R7327 | D0GB102JA008 | 1K 1/16W | [M] |
| R7328 | D0GB103JA008 | 10K 1/16W | [M] |
| R7329 | D0GB102JA008 | 1K 1/16W | [M] |
| R7330 | ERJ3GEYJ562V | 5.6K 1/16W | [M] |
| R7331 | D0GB223JA008 | 22K 1/16W | [M] |
| R7332 | D0GB102JA008 | 1K 1/16W | [M] |
| R7335 | ERJ3GEYJ101V | 100 1/16W | [M] |
| R7336 | ERJ3GEYJ100V | 10 1/16W | [M] |
| R7339 | D0GB102JA008 | 1K 1/16W | [M] |
| R7349 | ERJ3GEYJ183V | 18K 1/16W | [M] |
| R7601 | ERJ3GEYJ4R7V | 4.7 1/16W | [M] |
| R7650 | ERJ3GEYJ5R6V | 5.6 1/16W | [M] |
| K3703 | D0GBR00JA008 | CHIP JUMPER | [M] |
| K3705 | D0GBR00JA008 | CHIP JUMPER | [M] |
| K6104 | ERJ6GEYJ271V | CHIP RESISTOR | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| | | CAPACITORS | |
| C1 | F2A1C101A147 | 100P 16V | [M] |
| C1101 | F2A1H1R0A145 | 1 50V | [M] |
| C1102 | F1H1H471A219 | 470P 50V | [M] |
| C1103 | F2A1C101A147 | 100 16V | [M] |
| C1104 | F1H1E273A002 | 0.027 25V | [M] |
| C1105 | F1H1H471A219 | 470P 50V | [M] |
| C1106 | F2A1H2R2A145 | 2.2 50V | [M] |
| C1107 | F1H1H152A219 | 1500P 50V | [M] |
| C1108 | F2A1C100A147 | 10 16V | [M] |
| C1109 | F2A1H3R3A145 | 3.3 50V | [M] |
| C1110 | ECJ1VB1H682K | 6800P 50V | [M] |
| C1121 | F1H1H102A219 | 1000P 50V | [M] |
| C1122 | F1H1E103A029 | 0.01 25V | [M] |
| C1123 | ECJ1VB1H271K | 270P 50V | [M] |
| C1201 | F2A1H1R0A145 | 1 50V | [M] |
| C1202 | F1H1H471A219 | 470P 50V | [M] |
| C1203 | F2A1C101A147 | 100 16V | [M] |
| C1204 | F1H1E273A002 | 0.027 25V | [M] |
| C1205 | F1H1H471A219 | 470P 50V | [M] |
| C1206 | F2A1H2R2A145 | 2.2 50V | [M] |
| C1207 | F1H1H152A219 | 1500P 50V | [M] |
| C1208 | F2A1C100A147 | 10 16V | [M] |
| C1209 | F2A1H3R3A145 | 3.3 50V | [M] |
| C1210 | ECJ1VB1H682K | 6800P 50V | [M] |
| C1221 | F1H1H102A219 | 1000P 50V | [M] |
| C1222 | F1H1E103A029 | 0.01 25V | [M] |
| C1223 | ECJ1VB1H271K | 270P 50V | [M] |
| C1301 | ECA1HAK0R1XB | 0.1 50V | [M] |
| C1302 | F1H1C333A071 | 0.033 16V | [M] |
| C1303 | F1H1C333A071 | 0.033 16V | [M] |
| C1304 | F2A1H4R7A014 | 4.7 50V | [M] |
| C1305 | F2A1C330A234 | 33 16V | [M] |
| C1307 | ECA1AAK221XQ | 220 10V | [M] |
| C1308 | F2A1C220A234 | 22 16V | [M] |
| C1310 | ECA1HAK0R1XB | 0.1 50V | [M] |
| C1311 | ECA1CAK470XB | 47 16V | [M] |
| C1312 | F1H1H332A013 | 3300P 50V | [M] |
| C1314 | F1H1H222A013 | 2200P 50V | [M] |
| C1315 | F1H1H222A013 | 2200P 50V | [M] |
| C1316 | F1H1H102A219 | 1000P 50V | [M] |
| C1317 | F1H1H102A219 | 1000P 50V | [M] |
| C1318 | ECQV1H473JL3 | 0.047 50V | [M] |
| C1319 | F2A1C101A147 | 100 16V | [M] |
| C1320 | F2A1H1R0A145 | 1 50V | [M] |
| C1321 | F0A2A472A019 | 4700P 100V | [M] |
| C1323 | ECEA1HKN010B | 1 50V | [M] |
| C1324 | ECA1CAK470XB | 47 16V | [M] |
| C1326 | F2A1C100A147 | 10 16V | [M] |
| C1371 | F1H1E103A029 | 0.01 25V | [M] |
| C2006 | F1H1H102A219 | 1000P 50V | [M] |
| C2112 | ECJ1VB1C105K | 1 16V | [M] |
| C2113 | F1H1H682A219 | 6800P 50V | [M] |
| C2121 | F1H1H332A013 | 3300P 50V | [M] |
| C2122 | ECJ1VB1C105K | 1 16V | [M] |
| C2132 | ECJ1VB1C105K | 1 16V | [M] |
| C2140 | F1H1H102A219 | 1000P 50V | [M] |
| C2142 | ECJ1VB1C105K | 1 16V | [M] |
| C2149 | ECJ1VC1H101K | 100P 50V | [M] |
| C2152 | ECJ1VB1C105K | 1 16V | [M] |
| C2171 | F1H1C104A041 | 0.1 16V | [M] |
| C2172 | ECJ1VB1C563K | 0.056 16V | [M] |
| C2173 | F1H1H103A219 | 0.01 50V | [M] |
| C2174 | F1H1H103A219 | 0.01 50V | [M] |
| C2175 | F1H1H332A219 | 3300P 50V | [M] |
| C2181 | F1H1A105A025 | 1 10V | [M] |
| C2182 | F1H1A105A025 | 1 10V | [M] |
| C2183 | ECJ1VB1C224K | 0.22 16V | [M] |
| C2191 | F2A1H3R3A234 | 3.3 50V | [M] |
| C2192 | F1H1C104A041 | 0.1 16V | [M] |
| C2193 | F1H1A105A025 | 1 10V | [M] |
| C2194 | F1H1A154A001 | 0.15 10V | [M] |
| C2195 | F1H1A474A025 | 0.47 10V | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C2212 | ECJ1VB1C105K | 1 16V | [M] |
| C2213 | F1H1H682A219 | 6800P 50V | [M] |
| C2221 | F1H1H332A013 | 3300P 50V | [M] |
| C2222 | ECJ1VB1C105K | 1 16V | [M] |
| C2232 | ECJ1VB1C105K | 1 16V | [M] |
| C2240 | F1H1H102A219 | 1000P 50V | [M] |
| C2242 | ECJ1VB1C105K | 1 16V | [M] |
| C2245 | F2A1C100A234 | 10 16V | [M] |
| C2249 | ECJ1VC1H101K | 100P 50V | [M] |
| C2252 | ECJ1VB1C105K | 1 16V | [M] |
| C2263 | F2A1H1R0A234 | 1 50V | [M] |
| C2271 | F1H1A154A001 | 0.15 10V | [M] |
| C2272 | ECJ1VB1C563K | 0.056 16V | [M] |
| C2273 | F1H1H103A219 | 0.01 50V | [M] |
| C2274 | F1H1H103A219 | 0.01 50V | [M] |
| C2275 | F1H1H332A219 | 3300P 50V | [M] |
| C2281 | F1H1A105A025 | 1 10V | [M] |
| C2282 | F1H1A105A025 | 1 10V | [M] |
| C2283 | F1H1H473A783 | 0.047 50V | [M] |
| C2301 | F1H1A224A007 | 0.22 10V | [M] |
| C2302 | F1H1A224A007 | 0.22 10V | [M] |
| C2311 | F1H1A105A025 | 1 10V | [M] |
| C2312 | F1H1A105A025 | 1 10V | [M] |
| C2313 | F1H1H470A230 | 47P 50V | [M] |
| C2314 | F1H1H100A230 | 10P 50V | [M] |
| C2315 | F2A1H220A216 | 22 50V | [M] |
| C2321 | F1H1A105A025 | 1 10V | [M] |
| C2323 | F1H1H153A219 | 0.015 50V | [M] |
| C2325 | F2A1C100A234 | 10 16V | [M] |
| C2331 | F1H1H332A219 | 3300P 50V | [M] |
| C2333 | F1H1A105A025 | 1 10V | [M] |
| C2341 | F1H1H102A219 | 1000P 50V | [M] |
| C2342 | F1H1A105A025 | 1 10V | [M] |
| C2343 | ECJ1VB1A474K | 0.47 10V | [M] |
| C2344 | ECJ1VB1A474K | 0.47 10V | [M] |
| C2401 | F1H1A224A007 | 0.22 10V | [M] |
| C2402 | F1H1A224A007 | 0.22 10V | [M] |
| C2411 | F1H1A105A025 | 1 10V | [M] |
| C2412 | F1H1A105A025 | 1 10V | [M] |
| C2413 | F1H1H470A230 | 47P 50V | [M] |
| C2414 | F1H1H100A230 | 10P 50V | [M] |
| C2415 | F2A1H220A216 | 22 50V | [M] |
| C2421 | F1H1A105A025 | 1 10V | [M] |
| C2423 | F1H1H153A219 | 0.015 50V | [M] |
| C2425 | F2A1C100A234 | 10 16V | [M] |
| C2431 | F1H1H332A219 | 3300P 50V | [M] |
| C2433 | F1H1A105A025 | 1 10V | [M] |
| C2441 | F1H1H102A219 | 1000P 50V | [M] |
| C2442 | F1H1A105A025 | 1 10V | [M] |
| C2443 | ECJ1VB1A474K | 0.47 10V | [M] |
| C2444 | ECJ1VB1A474K | 0.47 10V | [M] |
| C2501 | F1H1A105A025 | 1 10V | [M] |
| C2503 | F1H1A105A025 | 1 10V | [M] |
| C2507 | ECJ1VB1C224K | 0.22 16V | [M] |
| C2509 | F2A1H330A215 | 33 50V | [M] |
| C2511 | ECEA1HKN2R2B | 2.2 50V | [M] |
| C2581 | F2A1C101A234 | 100 16V | [M] |
| C2582 | F2A1C101A234 | 100 16V | [M] |
| C2583 | F2A1C101A234 | 100 16V | [M] |
| C2584 | F1H1H221A748 | 220P 50V | [M] |
| C2585 | F1H1H221A748 | 220P 50V | [M] |
| C2588 | F1H1C104A041 | 0.1 16V | [M] |
| C2673 | ECJ1VB1H561K | 560P 50V | [M] |
| C2674 | ECJ1VB1H561K | 560P 50V | [M] |
| C2675 | ECJ1VC1H101K | 100P 50V | [M] |
| C2676 | F2A1C221A236 | 220 16V | [M] |
| C2678 | F1H1H103A219 | 0.01 50V | [M] |
| C2701 | F1H1H103A219 | 0.01 50V | [M] |
| C2702 | F2A1C101A234 | 100 16V | [M] |
| C2703 | F1H1H471A219 | 470P 50V | [M] |
| C2704 | F1H1H471A219 | 470P 50V | [M] |
| C2705 | ECA1HAK010XB | 1 50V | [M] |
| C2706 | ECA1HAK010XB | 1 50V | [M] |
| C2753 | F1H1C104A042 | 0.1 16V | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C2802 | F2A1H3R3A234 | 3.3 50V | [M] |
| C2803 | F1H1A105A025 | 1 10V | [M] |
| C2805 | F2A1C471A236 | 470 16V | [M] |
| C2806 | F1H1H100A230 | 10P 50V | [M] |
| C2821 | ECJ1VC1H101K | 100P 50V | [M] |
| C2853 | F1H1C104A041 | 0.1 16V | [M] |
| C2854 | ECA0JAM471XB | 470 6.3V | [M] |
| C2871 | F1H1H331A013 | 330P 50V | [M] |
| C2872 | F1H1C223A001 | 0.022 16V | [M] |
| C2874 | F1H1H331A013 | 330P 50V | [M] |
| C2882 | F1H1H180A230 | 18P 50V | [M] |
| C2883 | F1H1H220A230 | 22P 50V | [M] |
| C2901 | F1H1C104A041 | 0.1 16V | [M] |
| C2930 | F1H1H100A230 | 10P 50V | [M] |
| C2940 | F1H1C104A041 | 0.1 16V | [M] |
| C2941 | F2A1H330A215 | 33 50V | [M] |
| C2943 | F2A1H2R2A234 | 2.2 50V | [M] |
| C2944 | ECJ1VC1H101K | 100P 50V | [M] |
| C2945 | F2A1C470A234 | 47 16V | [M] |
| C2947 | F2A0J101A208 | 100 6.3V | [M] |
| C2948 | ECA1AAK221XB | 220 10V | [M] |
| C2953 | ECJ1VB1H561K | 560P 50V | [M] |
| C2954 | ECJ1VB1H561K | 560P 50V | [M] |
| C2956 | ECJ1VC1H101K | 100P 50V | [M] |
| C2981 | F1H1H102A219 | 1000P 50V | [M] |
| C2983 | F1H1H102A219 | 1000P 50V | [M] |
| C2984 | ECJ1VC1H101K | 100P 50V | [M] |
| C2985 | F1H1H102A219 | 1000P 50V | [M] |
| C2986 | F1H1H102A219 | 1000P 50V | [M] |
| C3112 | ECJ1VB1H221K | 220P 50V | [M] |
| C3113 | ECJ1VB1H221K | 220P 50V | [M] |
| C3114 | ECJ1VB1H561K | 560P 50V | [M] |
| C3116 | ECJ1VB1H561K | 560P 50V | [M] |
| C3700 | D0GBR00JA008 | 0 1/16W | [M] |
| C3701 | F1H1A105A025 | 1 10V | [M] |
| C3704 | F1H1A105A025 | 1 10V | [M] |
| C3705 | D0GBR00JA008 | 0 1/16W | [M] |
| C3706 | F1H1H470A230 | 47P 50V | [M] |
| C3707 | F1H1H470A230 | 47P 50V | [M] |
| C3708 | F1H1H100A230 | 10P 50V | [M] |
| C3709 | F1H1H100A230 | 10P 50V | [M] |
| C3710 | F1H1H104A783 | 0.1 50V | [M] |
| C3711 | F1H1A105A025 | 1 10V | [M] |
| C3712 | F2A1C101A234 | 100 16V | [M] |
| C3720 | F1H1A105A025 | 1 10V | [M] |
| C3721 | F1H1A105A025 | 1 10V | [M] |
| C4000 | F1H1H104A783 | 0.1 50V | [M] |
| C4001 | F1H1H223A219 | 0.022 50V | [M] |
| C5101 | F2A1V102A154 | 1000 35V | [M] |
| C5102 | ECA2AM100B | 10 100V | [M] |
| C5103 | ECA2AM100B | 10 100V | [M] |
| C5104 | F2A1V102A154 | 1000 35V | [M] |
| C5105 | ECA1AAK221XB | 220 10V | [M] |
| C5106 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5107 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5109 | ECA1EAM101XB | 100 25V | [M] |
| C5110 | ECA1EAM101XB | 100 25V | [M] |
| C5113 | ECA1HM330B | 33 50V | [M] |
| C5114 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5115 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5117 | F2A1V471A141 | 470 35V | [M] |
| C5118 | F2A1V471A141 | 470 35V | [M] |
| C5121 | ECA1HAM470XB | 47 50V | [M] |
| C5123 | F2A1V471A141 | 470 35V | [M] |
| C5124 | F2A1V471A141 | 470 35V | [M] |
| C5131 | ECA0JAK101XB | 100 6.3V | [M] |
| C5132 | F2A1E1010056 | 100 25V | [M] |
| C5133 | ECA0JAK101XB | 100 6.3V | [M] |
| C5151 | F1H1H101A230 | 100P 50V | [M] |
| C5152 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5153 | F1H1H101A230 | 100P 50V | [M] |
| C5155 | F1H1H102A219 | 1000P 50V | [M] |
| C5157 | F1H1H103A219 | 0.01 50V | [M] |
| C5159 | F1H1H103A219 | 0.01 50V | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C5171 | ECA1JM102E | 1000 63V | [M] |
| C5172 | ECA1JM102E | 1000 63V | [M] |
| C5186 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5187 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5201 | F1H1H471A219 | 470P 50V | [M] |
| C5202 | ECJ1VC1H101K | 100P 50V | [M] |
| C5203 | ECJ1VC1H101K | 100P 50V | [M] |
| C5204 | ECJ1VC1H101K | 100P 50V | [M] |
| C5205 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5208 | ECA0JM221B | 220 6.3V | [M] |
| C5210 | F1H1H180A230 | 18P 50V | [M] |
| C5301 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5302 | F1H1H331A013 | 330P 50V | [M] |
| C5303 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5304 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5305 | F1H1H331A013 | 330P 50V | [M] |
| C5306 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5308 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5309 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5310 | F1K2A1040006 | 0.1 100V | [M] |
| C5311 | F1H1H221A748 | 220P 50V | [M] |
| C5312 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5313 | F1H1H153A219 | 0.015 50V | [M] |
| C5314 | F1K2A1040006 | 0.1 100V | [M] |
| C5315 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5316 | F1J1H474A757 | 0.47 50V | [M] |
| C5317 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5318 | F1K2A1040007 | 0.1 100V | [M] |
| C5319 | F1H1H153A219 | 0.015 50V | [M] |
| C5320 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5321 | F1K2A1040007 | 0.1 100V | [M] |
| C5322 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5323 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5324 | ECQV1H474JL3 | 0.47 50V | [M] |
| C5325 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5326 | ERJ3GEY0R00V | 0 1/16W | [M] |
| C5327 | ECQV1H474JL3 | 0.47 50V | [M] |
| C5328 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5329 | ERJ3GEY0R00V | 0 1/16W | [M] |
| C5330 | F1H2A221A009 | 220P 100V | [M] |
| C5331 | F1H2A221A009 | 220P 100V | [M] |
| C5332 | F1H2A221A009 | 220P 100V | [M] |
| C5333 | F1H2A221A009 | 220P 100V | [M] |
| C5334 | F1H1H153A219 | 0.015 50V | [M] |
| C5335 | F1H1H153A219 | 0.015 50V | [M] |
| C5336 | F1H1H102A219 | 1000P 50V | [M] |
| C5337 | F1H1H102A219 | 1000P 50V | [M] |
| C5343 | F1H1H153A219 | 0.015 50V | [M] |
| C5344 | F1H1H153A219 | 0.015 50V | [M] |
| C5401 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5402 | F1H1H331A013 | 330P 50V | [M] |
| C5403 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5404 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5405 | F1H1H331A013 | 330P 50V | [M] |
| C5406 | ECJ1VB1A474K | 0.47 10V | [M] |
| C5408 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5409 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5410 | F1K2A1040007 | 0.1 100V | [M] |
| C5411 | F1H1H221A748 | 220P 50V | [M] |
| C5412 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5413 | F1H1H153A219 | 0.015 50V | [M] |
| C5414 | F1K2A1040006 | 0.1 100V | [M] |
| C5415 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5416 | F1J1H474A757 | 0.47 50V | [M] |
| C5417 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5418 | F1K2A1040007 | 0.1 100V | [M] |
| C5419 | F1H1H153A219 | 0.015 50V | [M] |
| C5420 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5421 | F1K2A1040007 | 0.1 100V | [M] |
| C5422 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5423 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5424 | ECQV1H474JL3 | 0.47 50V | [M] |
| C5425 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5426 | ERJ3GEY0R00V | 0 1/16W | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C5427 | ECQV1H474JL3 | 0.47 50V | [M] |
| C5428 | ECJ1VB1H104K | 0.1 50V | [M] |
| C5429 | D0GBR00JA008 | 0 1/16W | [M] |
| C5430 | F1H2A221A009 | 220P 100V | [M] |
| C5431 | F1H2A221A009 | 220P 100V | [M] |
| C5432 | F1H2A221A009 | 220P 100V | [M] |
| C5433 | F1H2A221A009 | 220P 100V | [M] |
| C5434 | F1H1H153A219 | 0.015 50V | [M] |
| C5435 | F1H1H153A219 | 0.015 50V | [M] |
| C5436 | F1H1H102A219 | 1000P 50V | [M] |
| C5437 | F1H1H102A219 | 1000P 50V | [M] |
| C5438 | F1H1H153A219 | 0.015 50V | [M] |
| C5439 | F1H1H153A219 | 0.015 50V | [M] |
| C5701 | F2A0J101A181 | 100 6.3V | [M] |
| C5920 | ECA1HM102E | 1000 50V | [M] △ |
| C5940 | ECA1HM102E | 1000 50V | [M] |
| C5950 | F2B1E222A005 | 2200 25V | [M] |
| C5951 | F1B1H103A007 | 0.01 50V | [M] |
| C5952 | F2A1A470A204 | 47 10V | [M] |
| C5953 | F1B1H103A007 | 0.01 50V | [M] |
| C5954 | F1B1H103A007 | 0.01 50V | [M] |
| C5955 | ECA1HM220B | 22 50V | [M] |
| C5956 | F2A1H470A147 | 47 50V | [M] |
| C5957 | F2A1H100A234 | 10 50V | [M] |
| C5958 | F1B1H103A007 | 0.01 50V | [M] |
| C5959 | F1B1H103A007 | 0.01 50V | [M] |
| C5960 | ECQE2104KF3 | 0.1 250V | [M] |
| C5961 | F2A1A221A161 | 220 10V | [M] |
| C5962 | F2A1A221A161 | 220 10V | [M] |
| C5963 | F2A1H4R7A234 | 4.7 50V | [M] |
| C6481 | F2A1H220A216 | 22 50V | [M] |
| C6491 | ECJ1VC1H101K | 100P 50V | [M] |
| C6492 | ECJ1VC1H101K | 100P 50V | [M] |
| C6501 | F1H1H103A219 | 0.01 50V | [M] |
| C6502 | ECJ1VB1H104K | 0.1 50V | [M] |
| C6503 | ECJ1VB1H473K | 0.047 50V | [M] |
| C6504 | ECJ1VB1H104K | 0.1 50V | [M] |
| C6505 | ECJ1VF1C224Z | 0.22 50V | [M] |
| C6506 | F1H1H103A219 | 0.01 50V | [M] |
| C6507 | F1H1H103A219 | 0.01 50V | [M] |
| C6508 | F2A1E2210045 | 220 25V | [M] |
| C6509 | ECQV1H104JZ3 | 0.1 50V | [M] |
| C6510 | D0GBR00JA008 | 0 1/16W | [M] |
| C6521 | F1H1H103A219 | 0.01 50V | [M] |
| C6551 | F1H1H103A219 | 0.01 50V | [M] |
| C6552 | F1H1H103A219 | 0.01 50V | [M] |
| C6553 | F1H1H103A219 | 0.01 50V | [M] |
| C6601 | ECJ1VC1H101K | 100P 50V | [M] |
| C6602 | F1H1H102A219 | 1000P 50V | [M] |
| C6603 | ECJ1VC1H101K | 100P 50V | [M] |
| C6604 | ECJ1VC1H101K | 100P 50V | [M] |
| C6623 | F2A1H220A216 | 22 50V | [M] |
| C6631 | F2A1H220A216 | 22 50V | [M] |
| C6632 | F2A1H220A216 | 22 50V | [M] |
| C6635 | F2A1H2R2A145 | 2.2 50V | [M] |
| C6636 | ECJ1VC1H101K | 100P 50V | [M] |
| C6751 | F1H1H103A219 | 0.01 50V | [M] |
| C6752 | F1H1H103A219 | 0.01 50V | [M] |
| C6753 | F1H1H103A219 | 0.01 50V | [M] |
| C7102 | F1H1A474A025 | 0.47 10V | [M] |
| C7107 | ECJ1VB1H223K | 0.022 50V | [M] |
| C7142 | ECJ1VB1H332K | 3300P 50V | [M] |
| C7154 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7155 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7161 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7164 | ECJ2FF1A106Z | 10 10V | [M] |
| C7165 | ECJ2FF1A106Z | 10 10V | [M] |
| C7166 | F1H1H103A219 | 0.01 50V | [M] |
| C7203 | F2A0J221A200 | 220 6.3V | [M] |
| C7204 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7216 | ECJ1VB1H681K | 680P 50V | [M] |
| C7217 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7218 | ECJ1VB1C823K | 0.082 16V | [M] |
| C7223 | F2A1H4R70037 | 4.7 50V | [M] |

| Ref. No. | Part No. | Part Name & Description | Remarks |
|----------|--------------|-------------------------|---------|
| C7225 | F1H1H102A219 | 1000P 50V | [M] |
| C7226 | F1H1H102A219 | 1000P 50V | [M] |
| C7227 | ECA1HAK010XI | 1 50V | [M] |
| C7228 | ECA1HAK010XI | 1 50V | [M] |
| C7230 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7231 | F2A0J221A200 | 220 6.3V | [M] |
| C7232 | F2A0J221A200 | 220 6.3V | [M] |
| C7233 | F1H1C104A008 | 0.1 16V | [M] |
| C7234 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7235 | F2A1C100A133 | 10 16V | [M] |
| C7241 | F1H1H102A219 | 1000P 50V | [M] |
| C7243 | F1H1C104A008 | 0.1 16V | [M] |
| C7244 | ECJ1VB1C153K | 0.015 16V | [M] |
| C7253 | F1H1H471A219 | 470P 50V | [M] |
| C7263 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7264 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7315 | F1H1A474A025 | 0.47 10V | [M] |
| C7334 | ECEA1AKA221I | 220 10V | [M] |
| C7335 | F1H1C104A008 | 0.1 16V | [M] |
| C7338 | ECJ1VB1C563K | 0.056 16V | [M] |
| C7339 | ECJ1VB1C183K | 0.018 16V | [M] |
| C7352 | ECJ1VB1C183K | 0.018 16V | [M] |
| C7601 | ECEA0JKA330I | 33 6.3V | [M] |
| C7613 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7614 | F2A0J101A198 | 100 6.3V | [M] |
| C7626 | ECJ1VB1C104K | 0.1 16V | [M] |
| C7670 | ECJ1VB1C104K | 0.1 16V | [M] |