

HCD-H7/H1500

SERVICE MANUAL

HCD-H7 and HCD-H1500 are the tuner, deck, CD and amplifier section in FH-B7CD and MHC-1500 respectively.


Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.



photo : HCD-H7

US Model
Canadian Model
AEP Model
UK Model
HCD-H1500

AEP Model
E Model
HCD-H7

SPECIFICATIONS

Tuner Section

System	FM stereo, FM/AM superheterodyne tuner
FM tuner section	
Tuning range	87.5 - 108 MHz
Antenna	Telescopic antenna
Antenna terminals	75 ohms unbalanced
Intermediate frequency	10.7 MHz
AM tuner section	
Tuning range	For US, Canadian MW: 530 - 1,710 kHz For AEP, WG and UK MW: 531 - 1,602 kHz LW: 153 - 279 kHz For IT MW: 522 - 1,611 kHz LW: 144 - 288 kHz For other countries MW: 531 - 1,602 kHz SW: 5.95 - 17.9 MHz
Antenna	AM loop antenna, External antenna terminals
Intermediate frequency	450 kHz

Amplifier Section

Audio Power Specification (US model) POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6-ohm load, both channels driven,
form 80-20,000Hz, rated 18 watts per
channel minimum RMS power, with no more
than 1% total harmonic distortion from 250
milliwatts to rated output.

CD Section	Model Name Using Similar Mechanism		CDP-S37/S207
	CD Mechanism Name		CDM13A-5BD3
	Base Unit Name		BU-5BD3
DECK Section	Model Name Using Similar Mechanism		HST-616
	Tape Transport Mechanism Type	DECK A	TCM-170RA1
		DECK B	TCM-170RB7

Other specifications

Continuous RMS power output	25 + 25 watts (6 ohms at 1 kHz, 5% THD)	
	Peak music power output (for the models other than AEP, WG, IT and UK) 240 watts (6 ohms)	
Inputs	MIX MIC (minijack): sensitivity 1 mV, impedance 600 ohms	
	For AEP, WG, IT and UK PHONO (phono jacks): sensitivity 5 mV, impedance 47 kilohms	
Outputs	For other countries AUX/VIDEO (phono jacks): sensitivity 450 mV, impedance 50 kilohms	
	HEADPHONES (stereo minijack): accepts headphones of 8 ohms or more.	
	SPEAKER: accepts speakers of 6 to 16 ohms.	

— continued on next page —



COMPACT DISC DECK RECEIVER
SONY

Cassette Deck Section

Recording system	4-track 2-channel stereo
Frequency response (DOLBY NR OFF)	40 – 13,000 Hz (± 3 dB), using TYPE I cassette (Sony HF-S)
	40 – 14,000 Hz (± 3 dB), using TYPE II cassette
Wow and flutter	0.1% WRMS $\pm 0.3\%$ (DIN)

General

Power requirements	US, Canadian model: 120V AC, 60Hz AEP, WG, IT model: 220V, 50/60Hz UK model: 240V, 50Hz E, EA, AUS model: 110–120V or 220–240V AC adjustable, 50/60Hz
Power consumption	US model: 80 watts Canadian model: 110 watts AEP, WG, IT model: 90 watts UK model: 160watts E, EA, AUS model: 90 watts
Dimensions	Approx. 225×285×260mm (w/h/d) incl. projecting parts and controls
Weight	Approx. 5.8kg



Design and specifications subject to change
without notice.

- WG: West Germany model
- IT : Italian model
- EA : Saudi Arabia model
- AUS: Australian model


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. SERVICING NOTES		3
2. GENERAL		
2-1.	Parts Identifications	6
3. DISASSEMBLY		
3-1.	Case	9
3-2.	Power Block	9
3-3.	Main Board	9
3-4.	CD Mechanism Block	10
3-5.	TC Mechanism Block	10
3-6.	Display, SW, Jack, VR Board	10
4. MECHANICAL ADJUSTMENTS		11
5. ELECTRICAL ADJUSTMENTS		11
6. DIAGRAMS		
6-1.	Semiconductor Lead Layouts	17
6-2.	Circuit Boards Location	18
6-3.	Printed Wiring Boards	
	—Tuner/Deck/CD Section—	20
6-4.	Schematic Diagram—Tuner/Deck Section—	25
6-5.	Schematic Diagram	
	—Power/Amplifier/Display Section—	29
6-6.	Printed Wiring Boards	
	—Power/Amplifier/Display Section—	33
6-7.	Schematic Diagram—CD Section—	36
6-8.	Pin Functions	43
7. EXPLODED VIEWS		
7-1.	Case, Power Section	49
7-2.	Front Panel, Main Board Section	50
7-3.	MD Chassis Section	51
7-4.	Mechanism Deck Section (1)	52
7-5.	Mechanism Deck Section (2)	53
7-6.	CD Section (1)	54
7-7.	CD Section (2)	55
8. ELECTRICAL PARTS LIST		56

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 SERVICING NOTES

MODEL IDENTIFICATION

— Specification Labels —

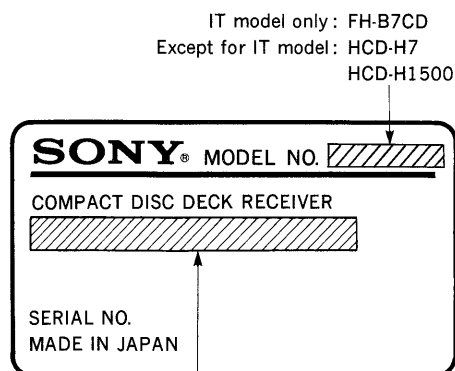

US model: AC: 120V~60Hz 80W
 Canadian model: AC: 120V~60Hz 110W
 AEP, WG model: AC: 220V~50/60Hz 90W
 IT model: AC: 220V~50Hz 90W
 UK model: AC: 240V~50Hz 160W
 E, EA, AUS model: AC: 110-120/220-240V~50/60Hz 90W

On operating voltage


Before operating the stereo system, check that the operating voltage of your system is identical with the voltage of your local power supply. **A**

US, Canadian model	120V AC, 60Hz
AEP, WG, IT model	220V AC, 50/60Hz
UK model	240V AC, 50Hz
E, EA, AUS model	110-120, 220-240V AC adjustable, 50/60Hz

On operation

- If the system do not operate due to power noise, press the system reset button at the rear. The system will resume operation. **B**

At this time, the system returns to the factory-set mode. Please set the clock, timer, or store stations again.

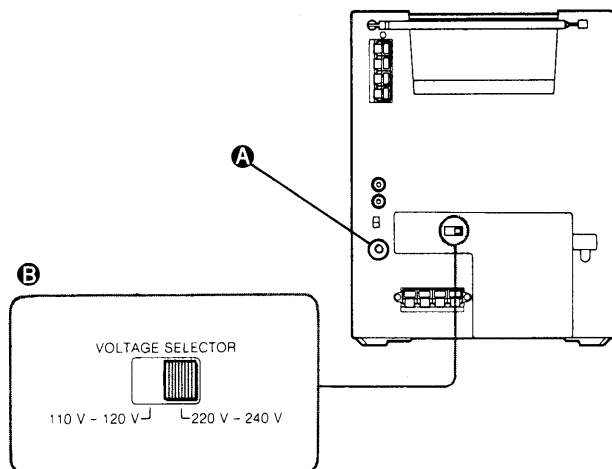

SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST


The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

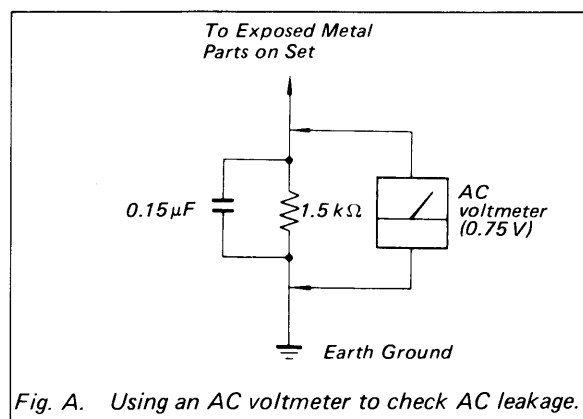

LASER DIODE AND FOCUS SERCH OPERATION CHECK

1. Make POWER switch on with no disc inserted and disc table closed.
2. Confirm that the following operation is performed while observing the objective lens.

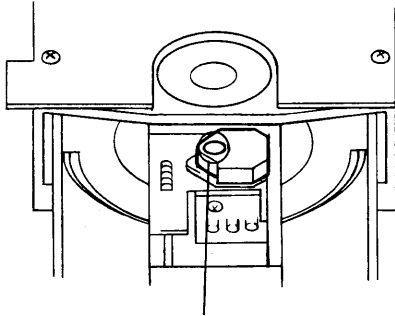

- ① Confirm that laser beam is spread.
- ② Up and down motion of the objective lens. (3 times)

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.



During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

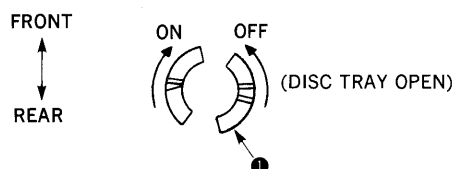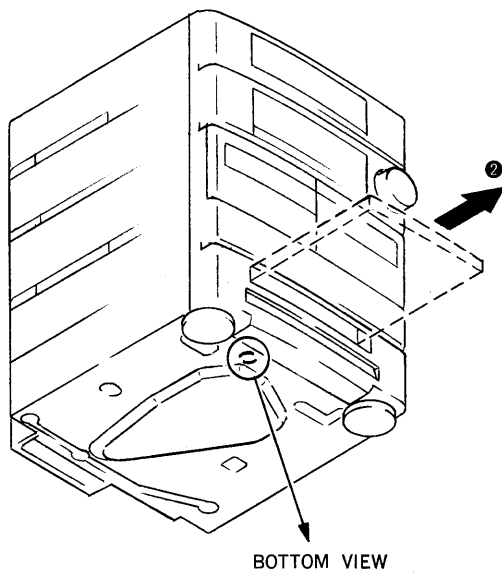

- (1) Insert to ① for tapering driver, etc., and turn in the direction of arrow OFF. (Disc tray open)
- (2) Tray as come out little of front panel, pull out in the direction of arrow ② by hand.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

1. Laser Diode Properties

- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output Power: less than 44.6 μW *

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

2. During service, do not take the Optical Pick-up Block apart, and do not adjust the APC circuit. If there is a breakdown in the APC circuit (including laser diode), replace the entire Optical Pick-up Block (including APC board).

BESKYTTELSE AF ØJNE MOD LASERSTRÅLING UNDER SERVICE

I dette apparat anvendes laserlys. Derfor skal nedenstående instruktioner nøje følges under service.

Følg iøvrigt instruktionerne i servicemanualen.

ADVARSEL!!

Under service må øjnene ikke komme nær objektiv-linsen på den optiske pick-up enhed. I tilfælde af at det er nødvendigt at kontrollere udsendelsen af laserlys, skal det ske i en afstand af mere end 25 cm fra den optiske pick-up.

1. Laser-dioe data


- Materiale: GaAlAs
- Bølgelængde: 780 nm
- Udstråling: Kontinuerlig
- Laseroutput: Max. 0,4 mW*
- * Målt i 1,6 mm afstand fra overfladen af objektiv-linsen på den optiske pick-up enhed.
- Klassifikation: Klasse IIIb.

2. Adskil aldrig den optiske pick-up enhed under service, og juster ikke APC kredsløbet (Automatic Power Control). Hvis APC kredsløbet (incl. laser-dioden) bryder ned, skal hele den optiske pick-up enhed (incl. APC printkortet) udskiftes.

LASER ADVARSEL MÆRKNING

Følgende mærkning findes indvendig i apparatet:

1. Advarsel Mærkning

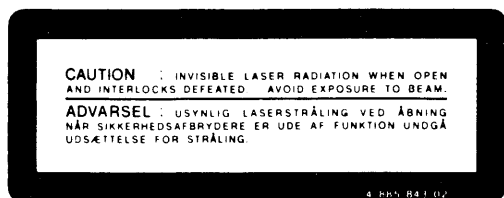


VAROITUS: Laite sisältää, laserdiodin, joka lähettää (näkömätöntä) silmille vaarallista lasersäteilyä.

SECTION 2 GENERAL

2-1. PARTS IDENTIFICATIONS


Tuner Section A

- 1 TIMER CONTROL button
- 2 SLEEP timer button
- 3 Display window
- 4 Telescopic antenna
- 5 AUTO tuning button
- 6 BAND selector
- 7 TUNING +/- buttons
- 8 MEMORY button
- 9 NEXT/ENTER button
- 10 TIMER SET button
- 11 CLOCK DISPLAY button
- 12 CLOCK SET button
- 13 ST/MUTE (stereo/muting) button
- 14 PRESET/TIMER +/- (preset station scan/time set) buttons
- 15 SHIFT (memory page select) button

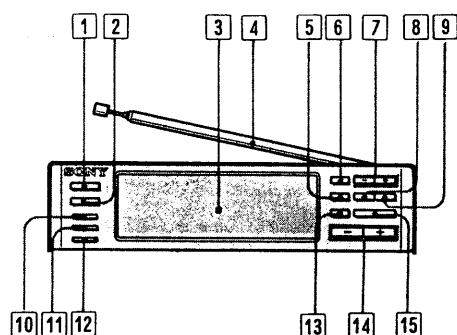


Amplifier Section B

- 16 POWER switch
- 17 STANDBY indicator
It is lit as long as the AC power cord is connected to a wall outlet.
- 18 5-band stereo graphic equalizer and spectrum analyzer
- 19 VOLUME control
- 20 SURROUND effect button
- 21 DBFB (Dynamic Bass Feedback) button (for AEP, WG, IT and UK model)
SAT (Super Acoustic Turbo) button (for the model for other countries)
- 22 Function selectors

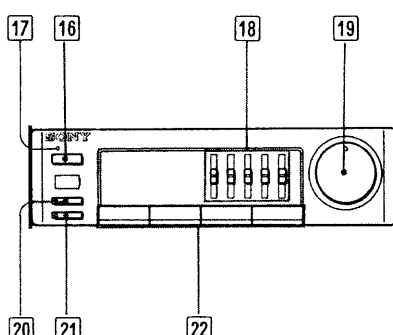


Cassette Deck Section C

- 23 EJECT button
- 24 Cassette holders
- 25 DIRECTION MODE selector
- 26 AMS/BLK SKIP (Automatic Music Sensor/blank skip) button
- 27 TAPE DUBBING HIGH SPEED button
- 28 CD SYNCHRO (CD synchronized recording) button
- 29 DOLBY NR (Dolby Noise Reduction) switch
- 30 Tape operation buttons
◀▶: Fast winding
▶: Forward play
◀: Reverse play
■: Stop
REC (recording)
PAUSE

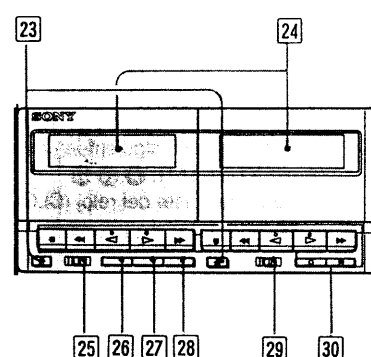


CD Player Section D

- 31 HEADPHONES jack (stereo minijack)
- 32 MIX MIC (mixing microphone) jack (minijack)
- 33 Disc compartment
- 34 ▲ OPEN/CLOSE button
- 35 ■ (stop) button
- 36 ▷◁ (play/pause) button and indicator
- 37 EDIT button
- 38 TIME display selector
- 39 REPEAT button
- 40 PLAY MODE selectors
CONTINUE play button
SHUFFLE play button
PROGRAM play button
- 41 ◀▶ (manual search) buttons
- 42 ◁▷ (Automatic Music Sensor) buttons

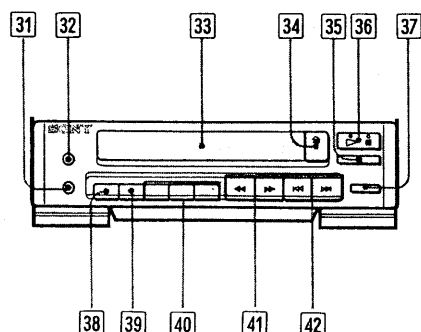

Remote Commander E

- 43 CD player operation buttons
- 44 Cassette deck operation buttons
- 45 Tuner operation buttons
- 46 PHONO select button
- 47 VIDEO/AUX select button
- 48 SLEEP timer button
- 49 POWER switch
- 50 VOL (volume) +/- control buttons

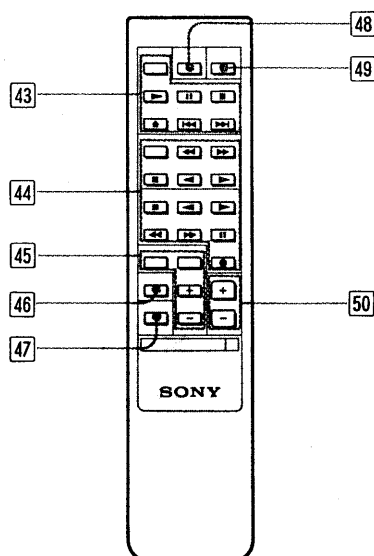

Setting the Clock

Example: Set to 9:25 in the morning.
When the AC power cord is connected, the display shows:
0:00 for AEP, WG, IT and UK model
AM 0:00 for the model for other countries.

- 1 Press **CLOCK SET**.
- 2 Set the hour with **PRESET/TIMER +/-** buttons
- 3 Press **NEXT/ENTER**.
- 4 Set the minute with **PRESET/TIMER +/-** buttons.
- 5 Press **NEXT/ENTER**.
The clock starts operating.

Information on the time

AEP, WG, IT and UK model shows the

time in 24-hour cycle.

The model for other countries shows the

time in 12-hour cycle.

AM 0:00 = midnight


PM 0:00 = noon

When a power interruption occurs

The power is backed up for approximately 5 minutes. If the power is recovered within 5 minutes, there is no need to reset the clock and timer. If it is longer than 5 minutes, both the clock and timer settings are erased, and "0:00" will flash on the display.

To check the present time while using the system

Press **CLOCK DISPLAY**.
The time display disappears after a few seconds.

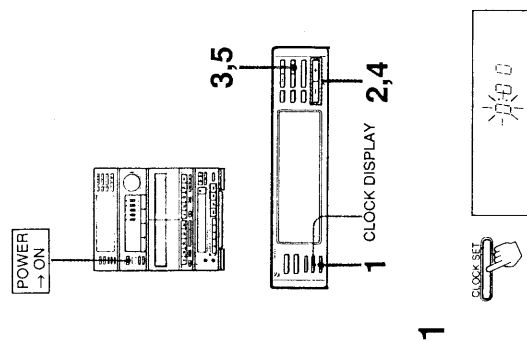

1

2


3

4

5

Tuning in Automatically

- 1 Press **TUNER**.
- 2 Press **BAND** repeatedly until the desired band appears.
As you press **BAND**, the band changes as follows:
AEP, WG, IT and UK model:
FM → MW → LW
US, Canadian model:
FM → SW → AM
E, EA, AUS model:
FM → SW → MW
- 3 Press **AUTO**.
Make sure that **AUTO** appears in the display.
- 4 Select the station with **TUNING +** or **-**.
- 5 For receiving FM stations with the stereo effect, press **ST/MUTE** so that **MUTING** appears.

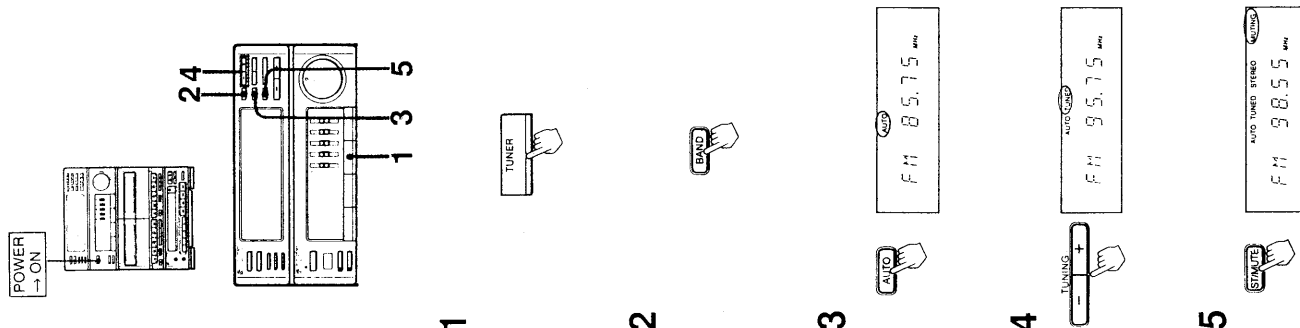

1

2

3

4

5

Tuning in Manually

- 1 Press **TUNER**.
- 2 Select band by pressing **BAND**.
- 3 Press **AUTO** so that **AUTO** disappears from the display.
- 4 Select the station with **TUNING +** or **-**.

Storing Stations

- 1 Tune in the desired station.
- 2 Press **MEMORY**. **MEMORY** appears for several seconds.
- 3 While **MEMORY** is on, press **SHIFT** to select the memory page (A, B or C).
The memory pages (A, B or C) can be classified according to the music category, station band, etc.
- 4 While **MEMORY** is on, press **PRESET/TIMER + or -** to select the number (1 to 10).
- 5 Press **NEXT/ENTER**. **MEMORY** disappears, and the station is stored.
- 6 Repeat 1 to 5 for each stations to be stored.

If you cannot store a station successfully
Press **MEMORY** again so that **MEMORY** appears, and then proceed with the steps 3 to 5 above.
Be sure to operate while **MEMORY** is on (approx. 4 seconds.)

When you have selected the wrong page and number
Press **MEMORY** and then proceed with the above steps.

To Tune in a Preset Station

- 1 Press **SHIFT** to select the memory page.
- 2 Press **PRESET/TIMER + or -** to select the desired number.

Indicator on the display

TUNED: Appears when a station of sufficient signal strength is tuned in.

STEREO: Appears when an FM stereo program of sufficient signal strength is received.

When an FM stereo program is noisy or hard to receive

Press **ST/MUTE** so that **MUTING** disappears from the display.
There will be no stereo effect, but the reception will be improved.
Press again to restore the stereo effect.

Antenna adjustment

For FM reception, adjust the length and direction of the telescopic antenna.
For MW, LW, and SW reception, find the best location of the AM loop antenna.

Can a previously stored station be erased?

No. Erasing only is not possible, but storing a new station erases the previous one.

Important

The stored stations remain for approximately 1 week even if no power is supplied (e.g. the power cord is disconnected, etc.). If they are erased, store the stations again.

Changing the MW tuning interval (except for AEP, WG, IT and UK model)

The MW tuning interval is preset at the factory to 9 kHz.


If you use a system where the frequency allocation system is difference from the preset interval, change the interval as follows.

- 1 Turn on the power.
- 2 Tune in any MW station.
- 3 Turn off the power.
- 4 Turn the power back on while pressing **TUNING +**.

To reset the interval, follow the same procedure.

Important


When the interval is changed, stored stations will be erased from the memory.

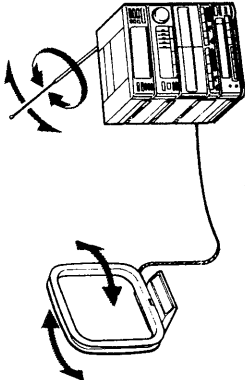


SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


3-1. CASE

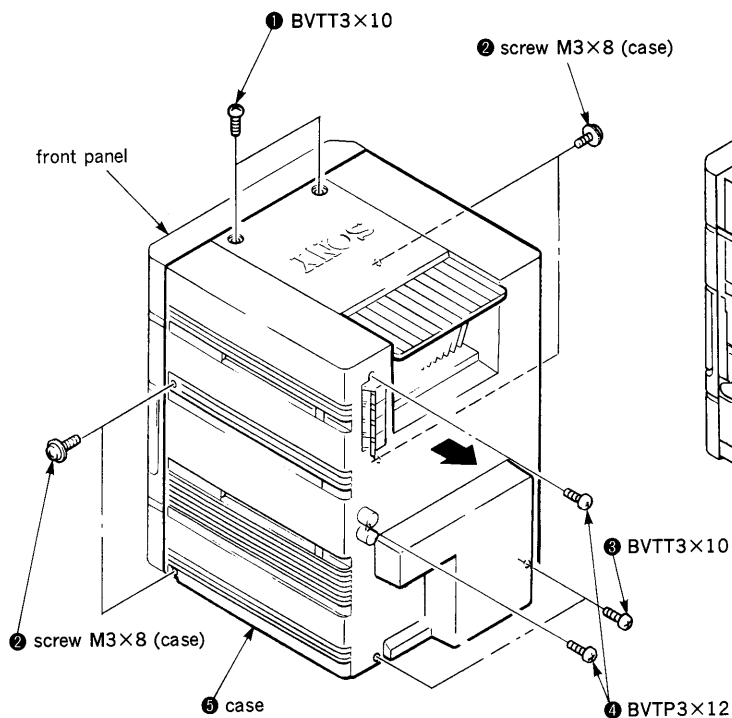


3-2. POWER BLOCK

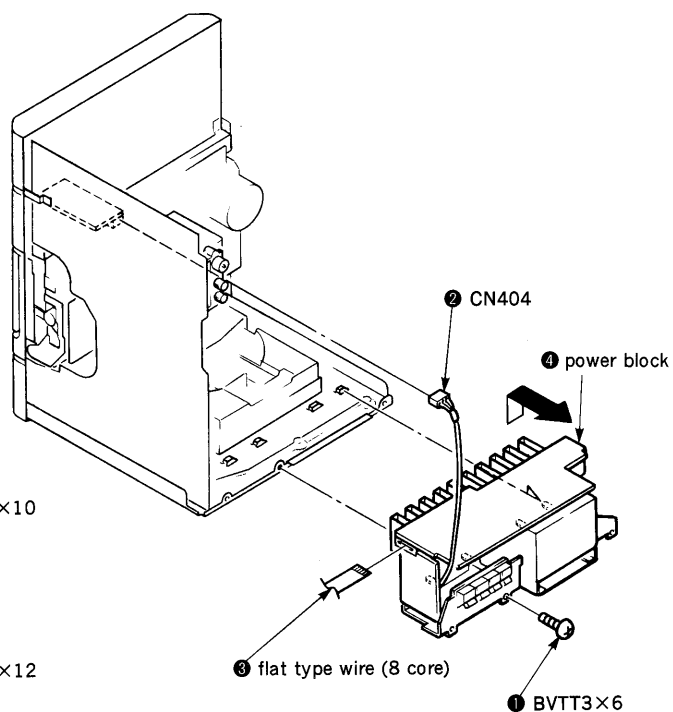


3-3. MAIN BOARD

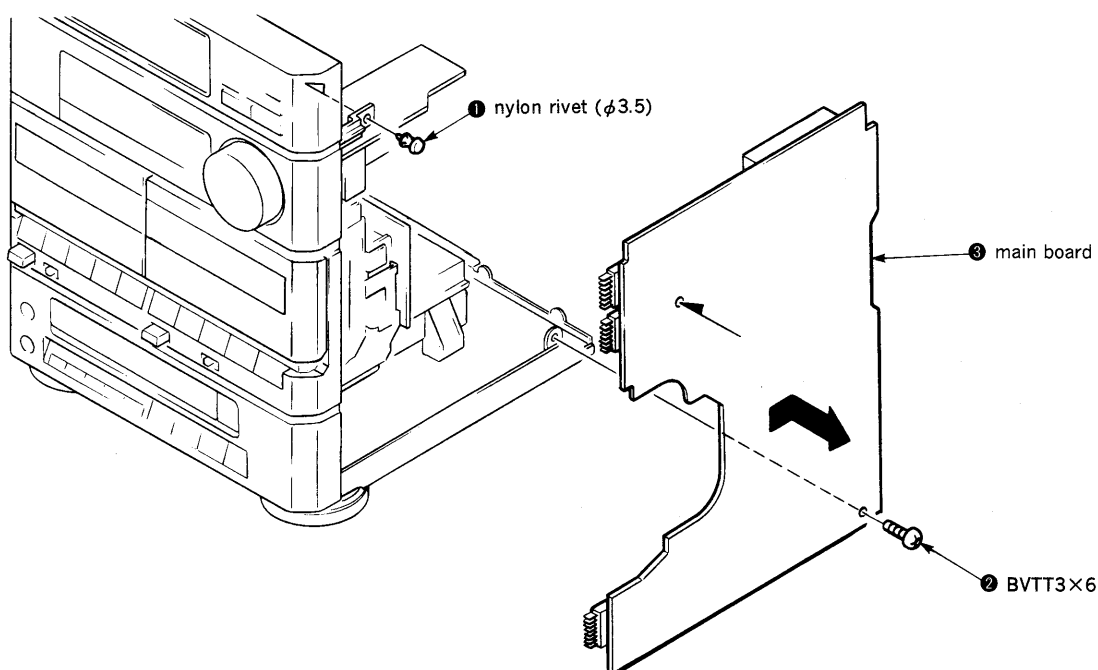


3-4. CD MECHANISM BLOCK

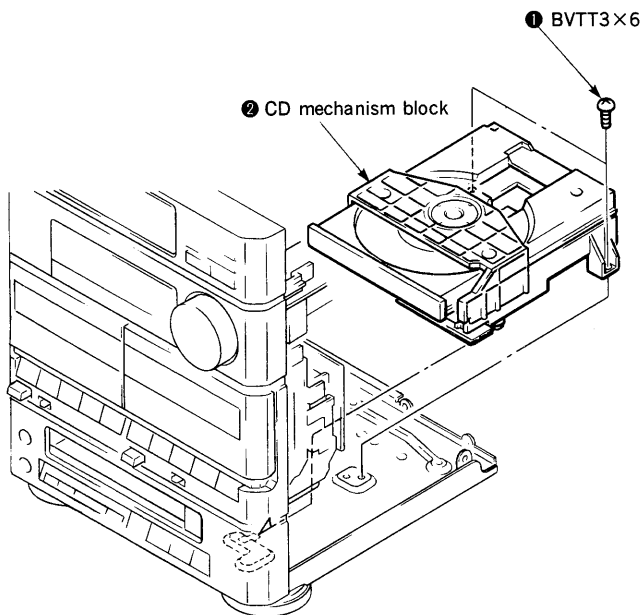

3-5. TC MECHANISM BLOCK

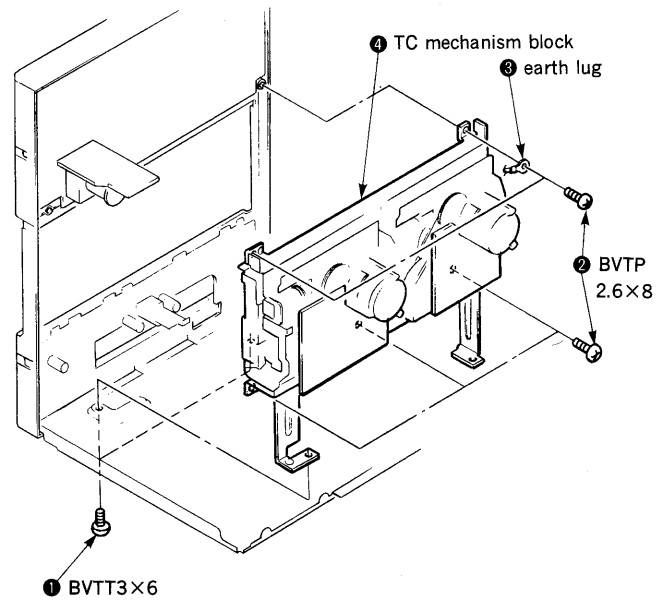

3-6. DISPLAY, SW, JACK, VR BOARD

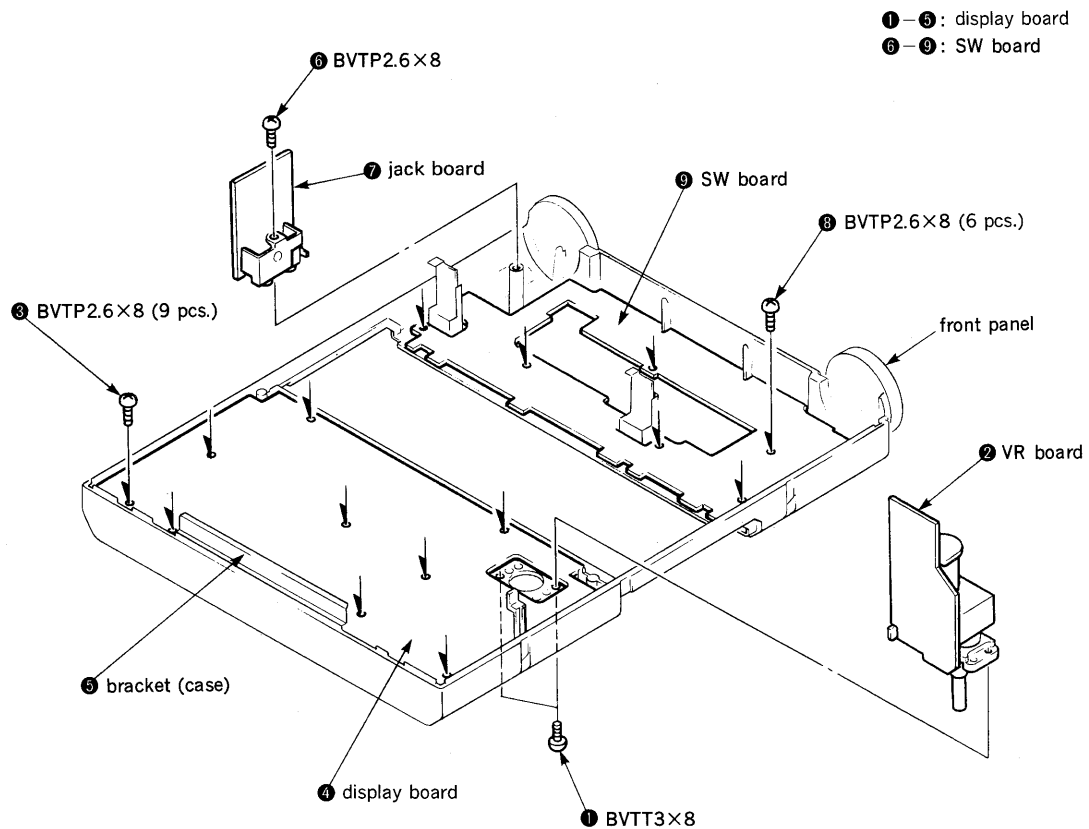

SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

- Clean the following parts with a denatured alcohol-moistened swab :

record/playback head	pinch roller
erase head	rubber belt
capstan	idler
- Demagnetize the record/playback head with a head demagnetizer.
(Head demagnetizer do not approach for the erase head.)
- Do not use a magnetized screwdriver for the adjustment.
- After the adjustments, apply suitable locking compound to the parts adjusted.
- The adjustment should be performed with the rated power supply voltage unless otherwise noted.

•Torque Measurement

Torque	Torque meter	Meter reading
Forward	CQ-102C	30 to 60g•cm (0.42 to 0.83oz•inch)
Forward back tension	CQ-102C	1 to 5g•cm (0.014 to 0.069oz•inch)
Reverse	CQ-102RB	30 to 60g•cm (0.42 to 0.83oz•inch)
Reverse back tension	CQ-102RB	1 to 5g•cm (0.014 to 0.069oz•inch)
Forward, Reverse	CQ-201B	100 to 170g•cm (1.39 to 2.36oz•inch)

•Timer Test Mode

When BAND, SHIFT and PRESET/TIMER+ buttons are pressed at the same time the following time test operation is performed. After the operation, it becomes in the system reset mode. Take care that the frequency preset to the tuner is initialized.

- POWER OFF
- Timer set

Clock	AM10 : 23
Timer ON	AM10 : 24
Timer OFF	AM10 : 31
Function	TUNER
- FL tube display (FLT501)

All light	
↓	for 2 seconds
"AM 10 : 23"	
↓	for 0.5 second
"AM 10 : 24"	
↓	for 0.5 second
"TUNER"	← POWER ON
↓	for 2 seconds
Last channel	
↓	for 1 second
"AM 00 : 00" flashing	← POWER ON
- Finish

SECTION 5 ELECTRICAL ADJUSTMENTS

DECK SECTION

- The adjustment should be performed in the publication.
(Be sure to make playback adjustment at first.)
- The adjustment and measurement should be performed for both L-CH and R-CH.
 - Switch position
DOLBY NR switch : OFF

•Test Tape


Tape	Contents	Use
P-4-A100	10kHz, -10dB	Head Azimuth Adjustment
P-4-L300	315Hz, 0dB	Level Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment

Record/Playback Head Azimuth Adjustment

DECK A DECK B

Procedure :

- Forward Playback Mode

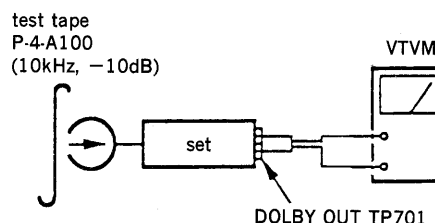


•Preset Frequency in Restting

When pressing the system reset button (S702) of the rear side of the unit, the following frequency is preset to the tuner part. When the system reset is performed in repairing, be sure to return to the frequency set by the user.

FM	US, Canadian model MW tuning interval : 10k (9k)		AEP, UK, WG, IT model () : Italian model	
	AM	MW	MW	LW
A1 87.5MHz	A6 530(531)kHz	A6 531(522)kHz	B1 153(144)kHz	
A2 88.0MHz	A7 620(621)kHz	A7 603kHz	B2 162kHz	
A3 98.0MHz	A8 1050(1053)kHz	A8 999kHz	B3 216kHz	
A4 106.0MHz	A9 1490(1485)kHz	A9 1404kHz	B4 270kHz	
A5 108.0MHz	A0 1710kHz	A0 1602(1611)kHz	B5 279(288)kHz	



FM	E, EA, AUS model MW tuning interval : 9k (10k)	
	MW	SW
A1 87.5MHz	A6 531(530)kHz	B1 5.95MHz
A2 88.0MHz	A7 603(620)kHz	B2 7.00MHz
A3 98.0MHz	A8 999(1050)kHz	B3 12.00MHz
A4 106.0MHz	A9 1404(1490)kHz	B4 17.00MHz
A5 108.0MHz	A0 1602(1710)kHz	B5 17.90MHz

- Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

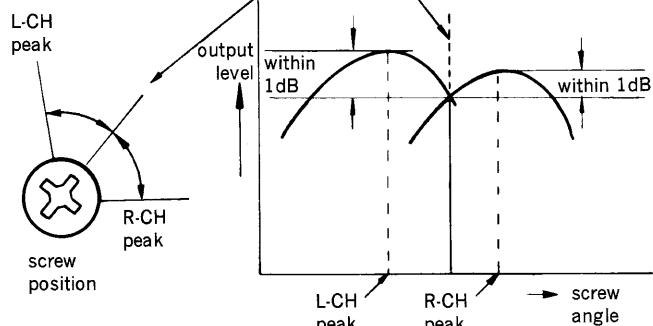

3. Playback Mode


test tape
P-4-A100
(10kHz, -10dB)

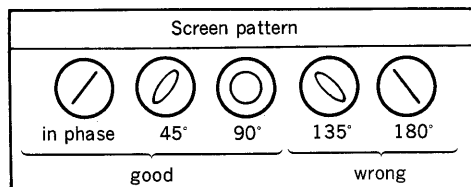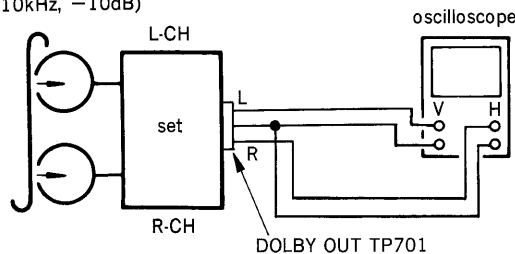

- Change the review playback mode and repeat the steps 1 to 3.
- After the adjustment, lock the adjustment screw with suitable locking compound.

Adjustment Location :

—record/playback head (deck A and B)

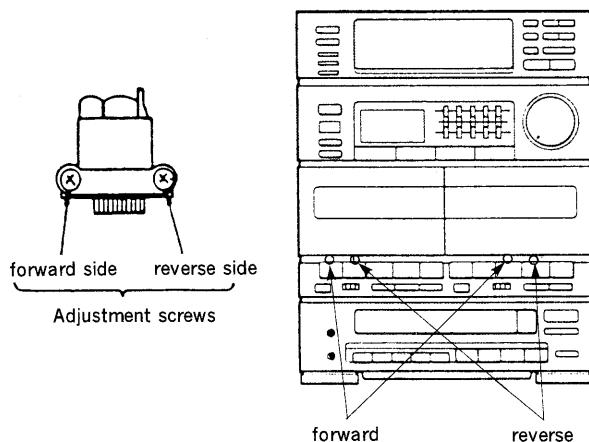


Tape Speed Adjustment **DECK A** **DECK B**

Procedure :

- Perform high speed adjustment before normal speed adjustment.

Mode : playback

test tape
WS-48A
(3kHz, 0dB)

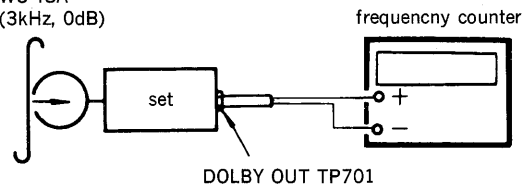

Speed	Test pin (TP601)	Deck	Adjustment	Frequency counter
※High	short	A	M1 (H)	5,960 to 6,040Hz
		B	M2 (H)	
Normal	open	A	M1 (L)	2,980 to 3,020Hz
		B	M2 (L)	

※ Continue to press HIGH SPEED DUBBING switch (S312) in playback mode: High speed playback.

Frequency difference between the beginning and the end of the tape should be within $\pm 1.5\%$.


Adjustment Location : motors (M1 (deck A), M2 (deck B))

Playback Level Adjustment **DECK A** **DECK B**

Procedure :

Mode : playback

test tape
P-4-L300
(315kHz, 0dB)

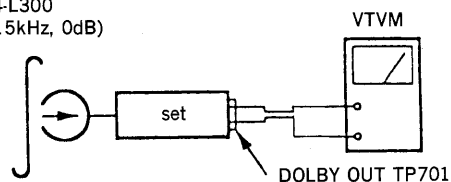

Deck A is RV41A (L-CH) and RV61A (R-CH), deck B is RV41B (L-CH) and RV61B (R-CH) so that adjustment within adjustment level as follows.

Adjustment Level :

LINE OUT level : $-6 \pm 0.5\text{dBm}$ (0.37 to 0.41V)


Level Difference between Channels : within 1dB

Confirm the DOLBY OUT level does not change in playback mode while changing the mode from playback to stop several times.


Adjustment Location : MD-A and MD-B boards

Record Bias Adjustment **DECK B****Procedure :**

1. record mode

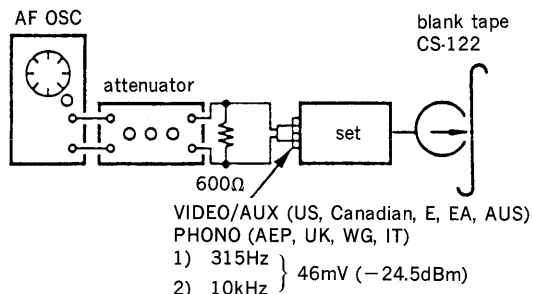

2. playback mode

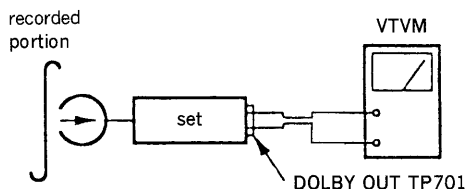

Confirm playback the signal recorded in step 1 become adjustment level as follows.


If these levels do not adjustment level, adjustment the RV42B (deck A) and RV62B (deck B) to repeat step 1 and 2.

Adjustment level : Playback output of 315Hz to playback output of 10kHz : -0.5dB to 0.5dB


Adjustment Location : MD-B board

Record Level Adjustment **DECK B****Procedure :**

1. record mode

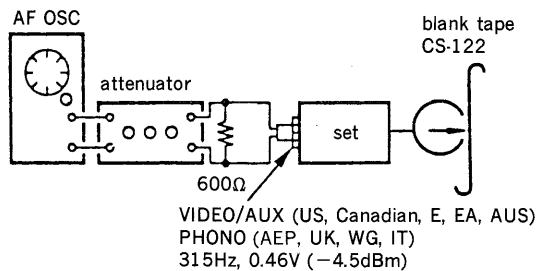

2. playback mode

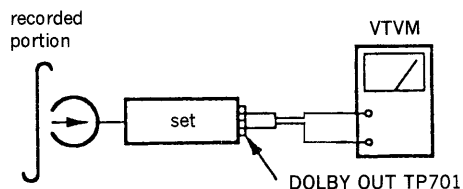

Confirm playback the signal recorded in step become adjustment level as follows.

If these levels do not adjustment level, adjustment the RV701 (deck A) and RV751 (deck B) to repeat step 1 and 2.


Adjustment Level :

LINE OUT level : $-6 \pm 0.5\text{dBm}$ (0.37 to 0.41V)


Adjustment Location : main board

Adjustment Location :

mechanism deck—rear side—

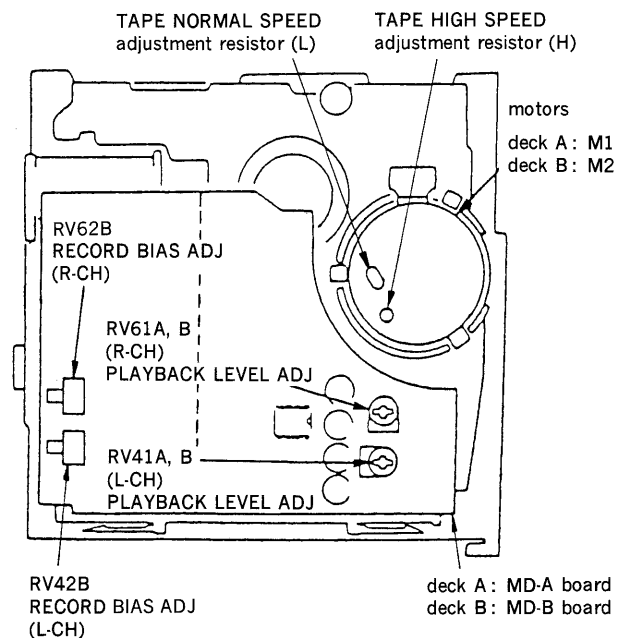


main board —component side—

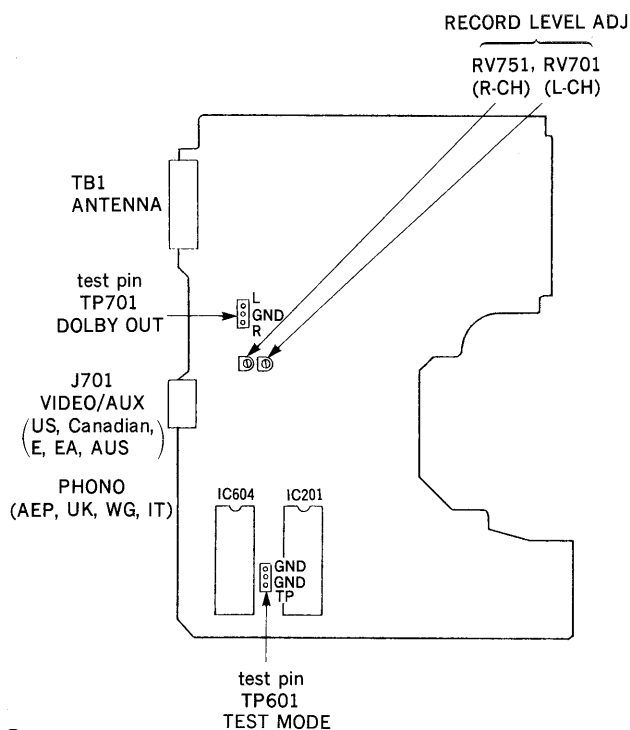


TUNER SECTION

FM SECTION ADJUSTMENTS

Setting :

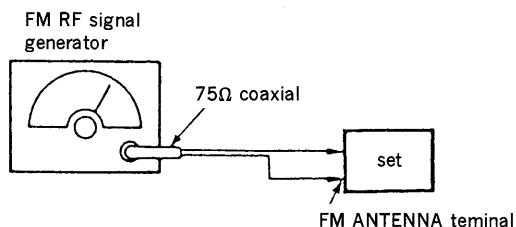

Carrier frequency : 98MHz
Modulation : 1kHz, 75kHz deviation (US, Canadian, E, EA, AUS)
1kHz, 40kHz deviation (AEP, UK, WG, IT)

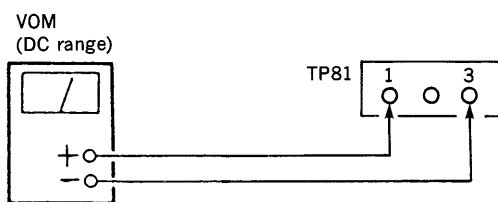

FM Discriminator Alignment (NULL Check)

Band : FM

Procedure :

1. Supply a 1mV (60dB μ) 98MHz signal from the ANTENNA terminal.
2. Tune the set to 98MHz.
3. Adjust IFT82 for 0V reading on the VOM.

Note : FM tuned indication lighting level adjustment should be made after FM discriminator alignment.

FM Tuned Indication Lighting Level Adjustment

Band : FM


Procedure :

1. Supply a 32 μ V (30dB μ) 98 MHz signal from the ANTENNA terminal.
2. Tune the set to 98MHz.
3. Adjust RV81 so that the **TUNED** light up.

Adjustment Location : main board

AM SECTION ADJUSTMENTS

Setting :

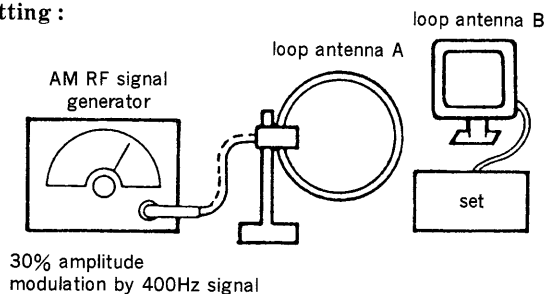

MW (AM) Tuned Indication Lighting Level Adjustment

Band : MW or AM

Procedure :

1. Set loop antenna A so that the loop antenna B input level becomes 0.45mV (53dB μ).
2. Tune the set to 1,490kHz (US, Canadian) or 1,404kHz (AEP, UK, WG, IT, E, EA, AUS).
3. Adjust the RV82 so that the **TUNED** light up.

SW OSC Voltage Adjustment (E, EA, AUS model)

Band : SW

Procedure :

1. Connect the VOM to TP (OSC).
2. Tune the set to 5.95MHz.
3. Adjust T2 for 0.9 to 1.1V reading on the VOM.
4. Tune the set to 17.90MHz.
5. Adjust CT22 for 8.3 to 8.7V reading on the VOM.

SW Tracking Adjustment (E, EA, AUS model)


Band : SW

Procedure :

1. Connect the VOM to speaker terminal.
2. Adjust for a maximum reading on VTVM.

Signal generator and set frequency	Adjustment part
7.0MHz	T1
17.0MHz	CT21

Adjustment Location : main board —component side—

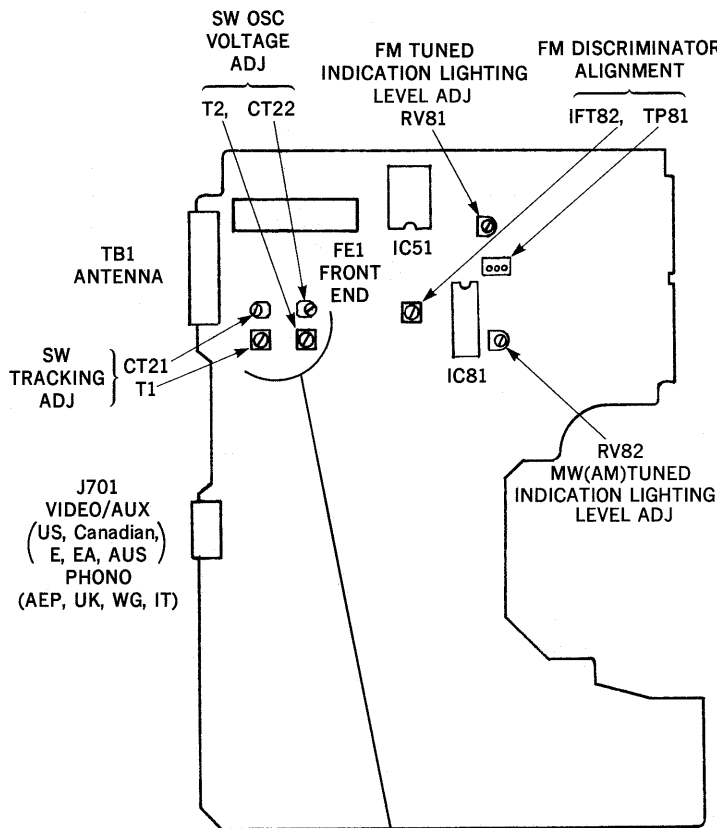


CD SECTION

1. Perform adjustments in the order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than 10MΩ impedance.


RF Level Check

Procedure :

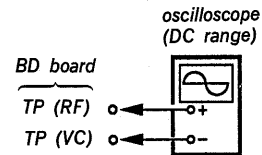

1. Connect oscilloscope to test point TP (RF) and TP (VC) on BD board.
2. Confirm that RF level and eye pattern is optimum. Optimum eye pattern means that shape "◇" can be clearly distinguished at the center of the wave form.


RF signal Reference Waveform (eye pattern)

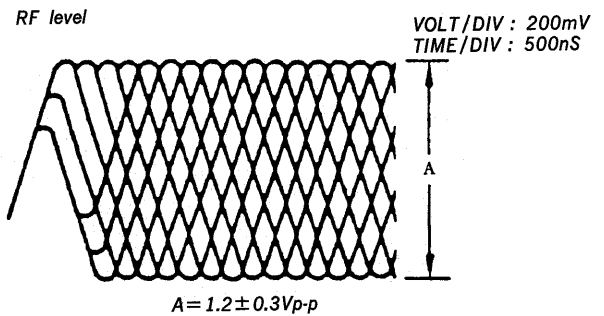

REFERENCE



E-F Balance Check

Procedure :

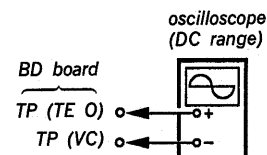


1. Connect test point TP (ADJ) and TP (TES) to ground with lead wire.
2. Connect oscilloscope to test point TP (TE O) and TP (VC) on BD board.
3. Turn POWER switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0V.
6. After check, remove the lead wire connected in step 1.

Note : Take sweep time as long as possible to obtain best waveform.

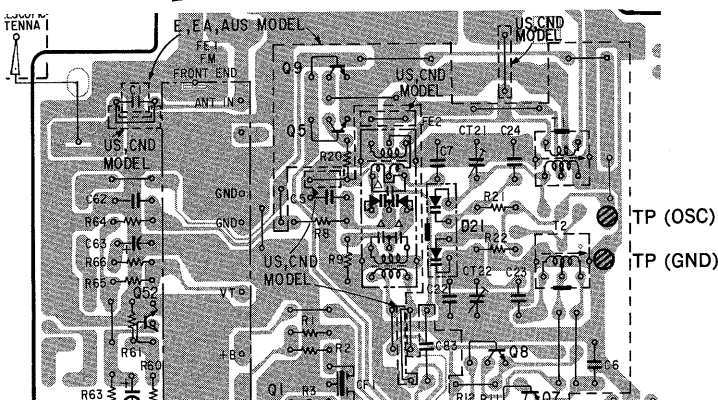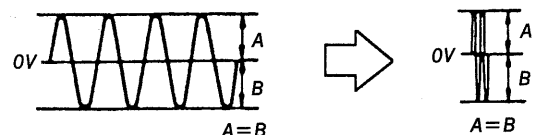

RF PLL Free-run Frequency Check

Procedure :

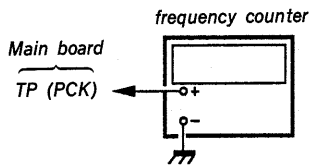

- 1. Turn POWER switch on.
- 2. Put disc (YEDS-18) in and playback.
- 3. Confirm that reading on frequency counter is 4.3218MHz.

Focus/Tracking Gain Adjustment

A frequency response analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operate.

However, as these reciprocate, the adjustment is the point where both are satisfied.

- When gain is raised, the noise when the 2-axis device operates increases.
- When gain is lowered, mechanical shock and skipping occurs more easily.
- When gain adjustment is off, the symptoms below appear.


Symptoms	Gain	
	Focus	Tracking
• The time until music starts becomes longer for STOP →▷ PLAY or automatic selection. (◀◀, ▶▶ buttons pressed.) (Normally takes about 1 seconds.)	low	low or high
• Music does not start and disc continues to rotate for STOP →▷ PLAY or automatic selection. (◀◀, ▶▶ buttons pressed.)	—	low
• Sound is interrupted during PLAY. Or time counter display stops progressing.	—	low
• More noise during 2-axis device operation.	high	high

The following is a simple adjustment method.

—Primary Adjustment—

Note : Since exact adjustment cannot be performed, remember the positions of the controls before performing the adjustment.


If the positions after the primary adjustment are only a little different, return the controls to the original position.

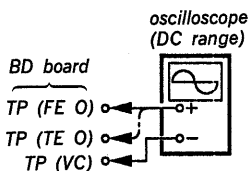

Procedure :


- 1. Keep the set horizontal.
If the set is not horizontal, this adjustment cannot be performed due to the gravity against the 2-axis device.
- 2. Insert disc (YEDS-18) and press ▷ PLAY button.
- 3. Connect oscilloscope to TP (FEO) and TP (VC) on BD board.
- 4. Adjustment RV101 on digital board so that the waveform is as shown in the figure below. (focus gain adjustment)

VOLT/DIV : 100mV
TIME/DIV : 2mS

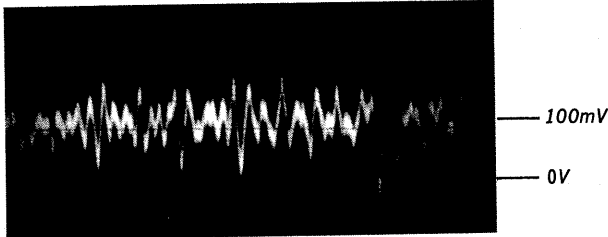


- Incorrect Examples (DC level changes more than on adjusted waveform)

low focus gain
VOLT/DIV : 100mV
TIME/DIV : 2mS

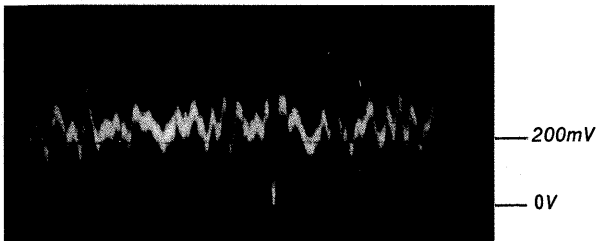


high focus gain
VOLT/DIV : 100mV
TIME/DIV : 2mS

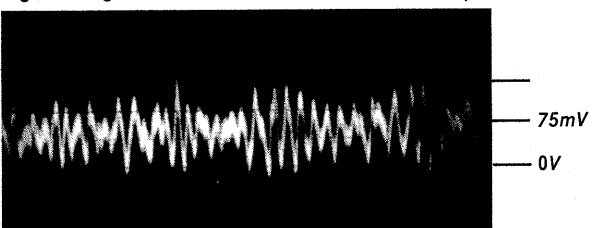


- 5. Connect oscilloscope to TP (TEO) and TP (VC) on BD board.
- 6. Adjusted MV102 on digital board so that the waveform is as shown the figure below. (tracking gain adjustment)

VOLT/DIV : 1V
TIME/DIV : 2mS

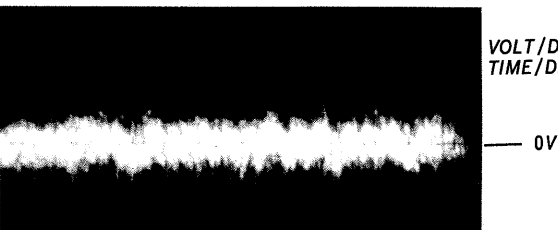


- Incorrect Examples (fundamental wave appears)

low tracking gain
VOLT/DIV : 1V
TIME/DIV : 2mS

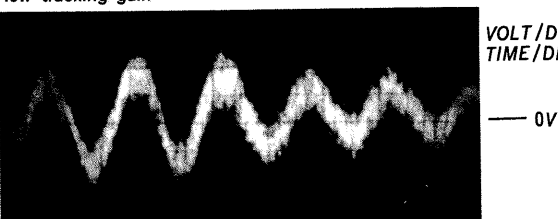


SECTION 6 DIAGRAMS


high tracking gain
(high fundamental wave)
than for low gain

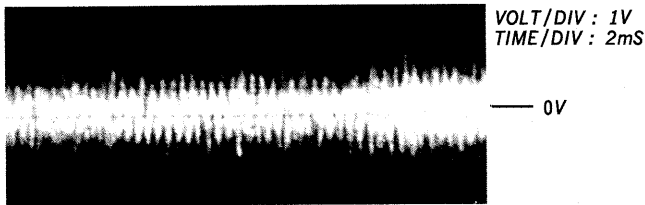

Adjustment Locations:
[BD board]

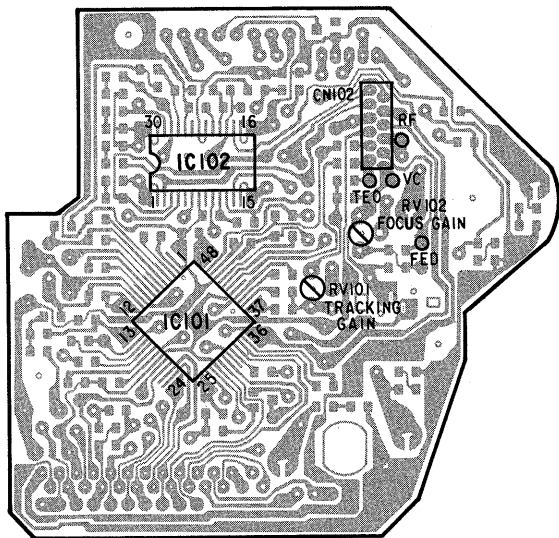


[Main board]

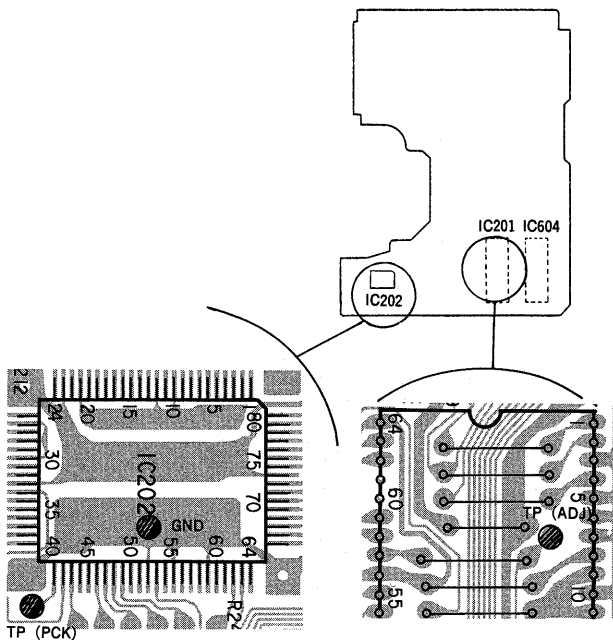


6-1. SEMICONDUCTOR LEAD LAYOUTS


CXA1372Q
CXD2500Q

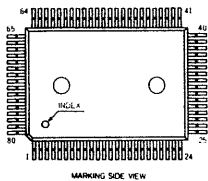


GP-2S09-C



HZS6B1L
UZ-3.0BS
UZ-4.7BSC
UZL-7M3
UZL-9H1
1SS120
1SS202-1
11ES2




STK-4122MK2

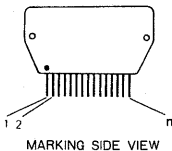

2SB1013-4
2SC3112-B
2SD1616A-K




KV1236-D

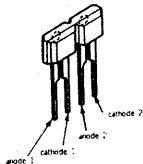


DTA114ES
DTA144ES
DTC114ES
DTC144ES
2SC2603-EF
2SC2724-CD
2SC3622A-LK




2SB1187-EF
2SC2001-LK
2SD1761-EF




UZP-5.1BC



DTC114TS
2SA1175-HFE



RBA-402




DTC144EK




GL-1EG112-CD
GL-1HD112-DE
GL-1HY112-CD



SEL4214R-LC05
SEL4914R-LC05

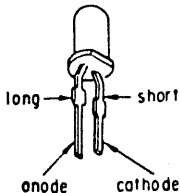

6-2. CIRCUIT BOARDS LOCATION

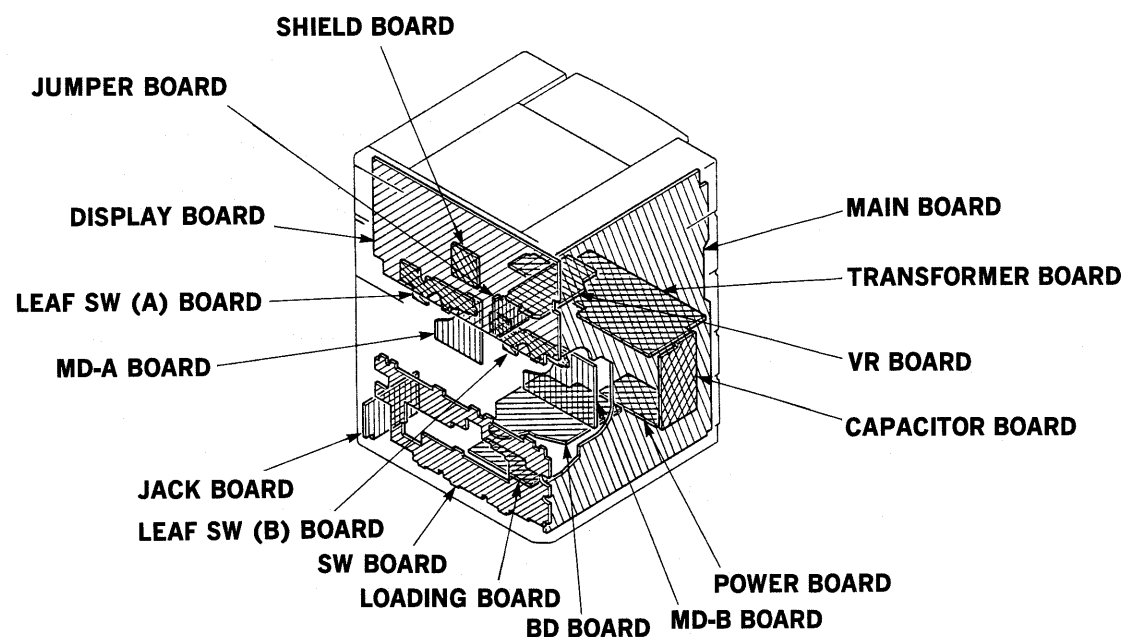

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D11A	I-13	IC253	E-29	Q103(*2)	G-24
D11B	I-7	IC601	D-27	Q104(*1)	F-17
D21(*4)	C-24	IC602	C-27	Q104(*2)	F-23
D81(*1)	F-17	IC603	E-27	Q201	E-29
D81(*2)	F-23	IC604	C-31	Q231	F-31
D81B	G-2	IC701(*1)	C-20	Q232	E-31
D201	F-30	IC701(*2)	C-26	Q233	F-30
D205	D-29	IC702(*1)	D-20	Q234	E-31
D206	C-13	IC702(*2)	D-26	Q252	E-30
D207	C-13	IC703(*1)	E-20	Q253	E-30
D301	E-8	IC703(*2)	E-26	Q351	D-6
D302	E-8	IC704(*1)	B-20	Q352	C-7
D303	E-12	IC705(*1)	F-20	Q353	C-6
D304	E-12	IC705(*2)	F-26	Q354	D-11
D305	D-7	IC706(*1)	I-18	Q601	E-28
D306	D-8	IC706(*2)	I-24	Q602	B-28
D307	D-9	IC999	H-30	Q603	E-28
D308	D-12			Q604	B-29
D309	D-13	Q1(*1)	D-17	Q605	C-29
D601	E-28	Q1(*2)	D-23	Q606	B-29
D602	C-28	Q2(*3)	D-17	Q607	B-31
D603	D-29	Q3(*1)	E-18	Q608	D-28
D604	B-31	Q3(*2)	E-24	Q609	D-28
D605	D-29	Q4(*1)	D-18	Q610	D-28
D606	C-29	Q4(*2)	D-24	Q611	D-28
D701	B-27	Q5(*1)	B-17	Q612	D-29
D702	B-27	Q5(*4)	B-23	Q613	E-27
D703(*1)	H-19	Q6(*4)	E-24	Q614	E-27
D703(*2)	H-25	Q7(*1)	D-18	Q615	F-28
D741(*1)	F-20	Q7(*4)	D-24	Q616	E-28
D741(*2)	F-26	Q8(*1)	D-18	Q617	C-31
D742(*1)	G-20	Q8(*4)	D-24	Q701(*1)	E-20
D742(*2)	G-26	Q9(*1)	B-17	Q701(*2)	E-26
D743(*1)	G-20	Q9(*4)	B-23	Q741(*1)	G-20
D743(*2)	G-26	Q11A	I-9	Q741(*2)	G-26
D744(*1)	G-20	Q11B	I-3	Q742(*1)	G-20
D744(*2)	G-26	Q12A	H-12	Q742(*2)	G-26
D745	E-28	Q12B	H-5	Q751(*1)	E-20
D746	E-28	Q51(*1)	D-16	Q751(*2)	E-26
		Q51(*2)	D-22	Q781(*1)	E-20
IC51(*1)	E-16	Q52(*1)	D-16	Q781(*2)	E-26
IC51(*2)	E-22	Q52(*2)	D-22	Q782(*1)	E-20
IC81(*1)	F-18	Q53(*1)	D-15	Q782(*2)	E-26
IC81(*2)	F-24	Q54(*1)	D-15	Q791(*1)	H-19
IC81A	G-9	Q81B	I-2	Q791(*2)	H-25
IC81B	G-3	Q82B	H-2	Q792(*1)	G-19
IC101(BD)	E-34	Q83B	H-2	Q792(*2)	G-25
IC102(BD)	D-34	Q101(*1)	H-16	Q794(*1)	H-18
IC201	D-31	Q101(*2)	H-22	Q794(*2)	H-24
IC202	H-31	Q101(BD)	F-35	Q795(*1)	I-18
IC221	G-31	Q102(*1)	H-16	Q795(*2)	I-24
IC222	F-32	Q102(*2)	H-22	Q999	G-29
IC223	F-31	Q103(*1)	G-18		

*1: Used on AEP, UK, WG, IT model.


*2: Used on US, CND, E, EA, AUS model.









*3: Used on WG, IT model.


*4: Used on E, EA, AUS model.

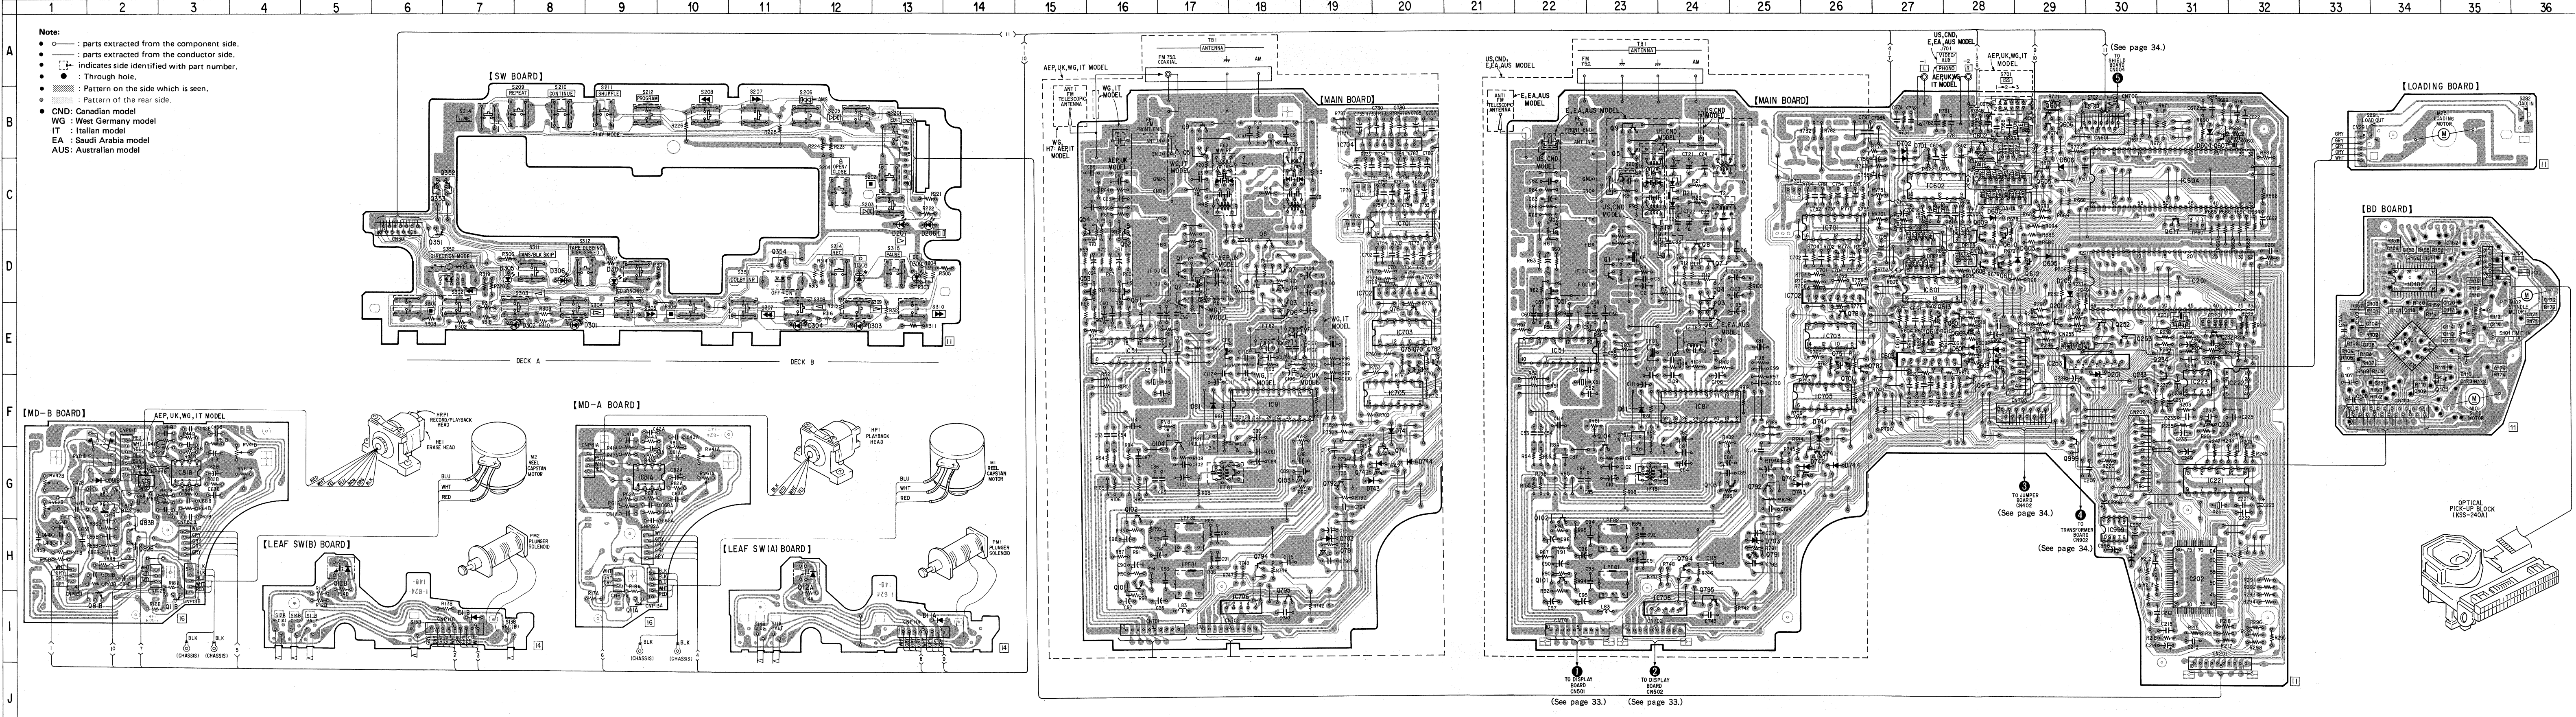BD: Used on BD board.


6-3. PRINTED WIRING BOARDS —Tuner/Deck/CD Section— ●Refer to page 17 for Semiconductor Lead Layouts.
●Refer to page 19 for Semiconductor Location.



-  : B+ Line
-  : B- Line
-  : adjustment for repair.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
 - no mark : FM
 - () : Playback
 - < > : MW
 - [] : LW
- Voltages are taken with a VOM (input Impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- **Signal path.**
 -  : FM
 -  : PB (DECK A)
 -  : CD
 -  : PB (DECK B)
 -  : REC
- **CND:** Canadian model
 WG : West Germany model
 IT : Italian model
 EA : Saudi Arabia model
 AUS: Australian model

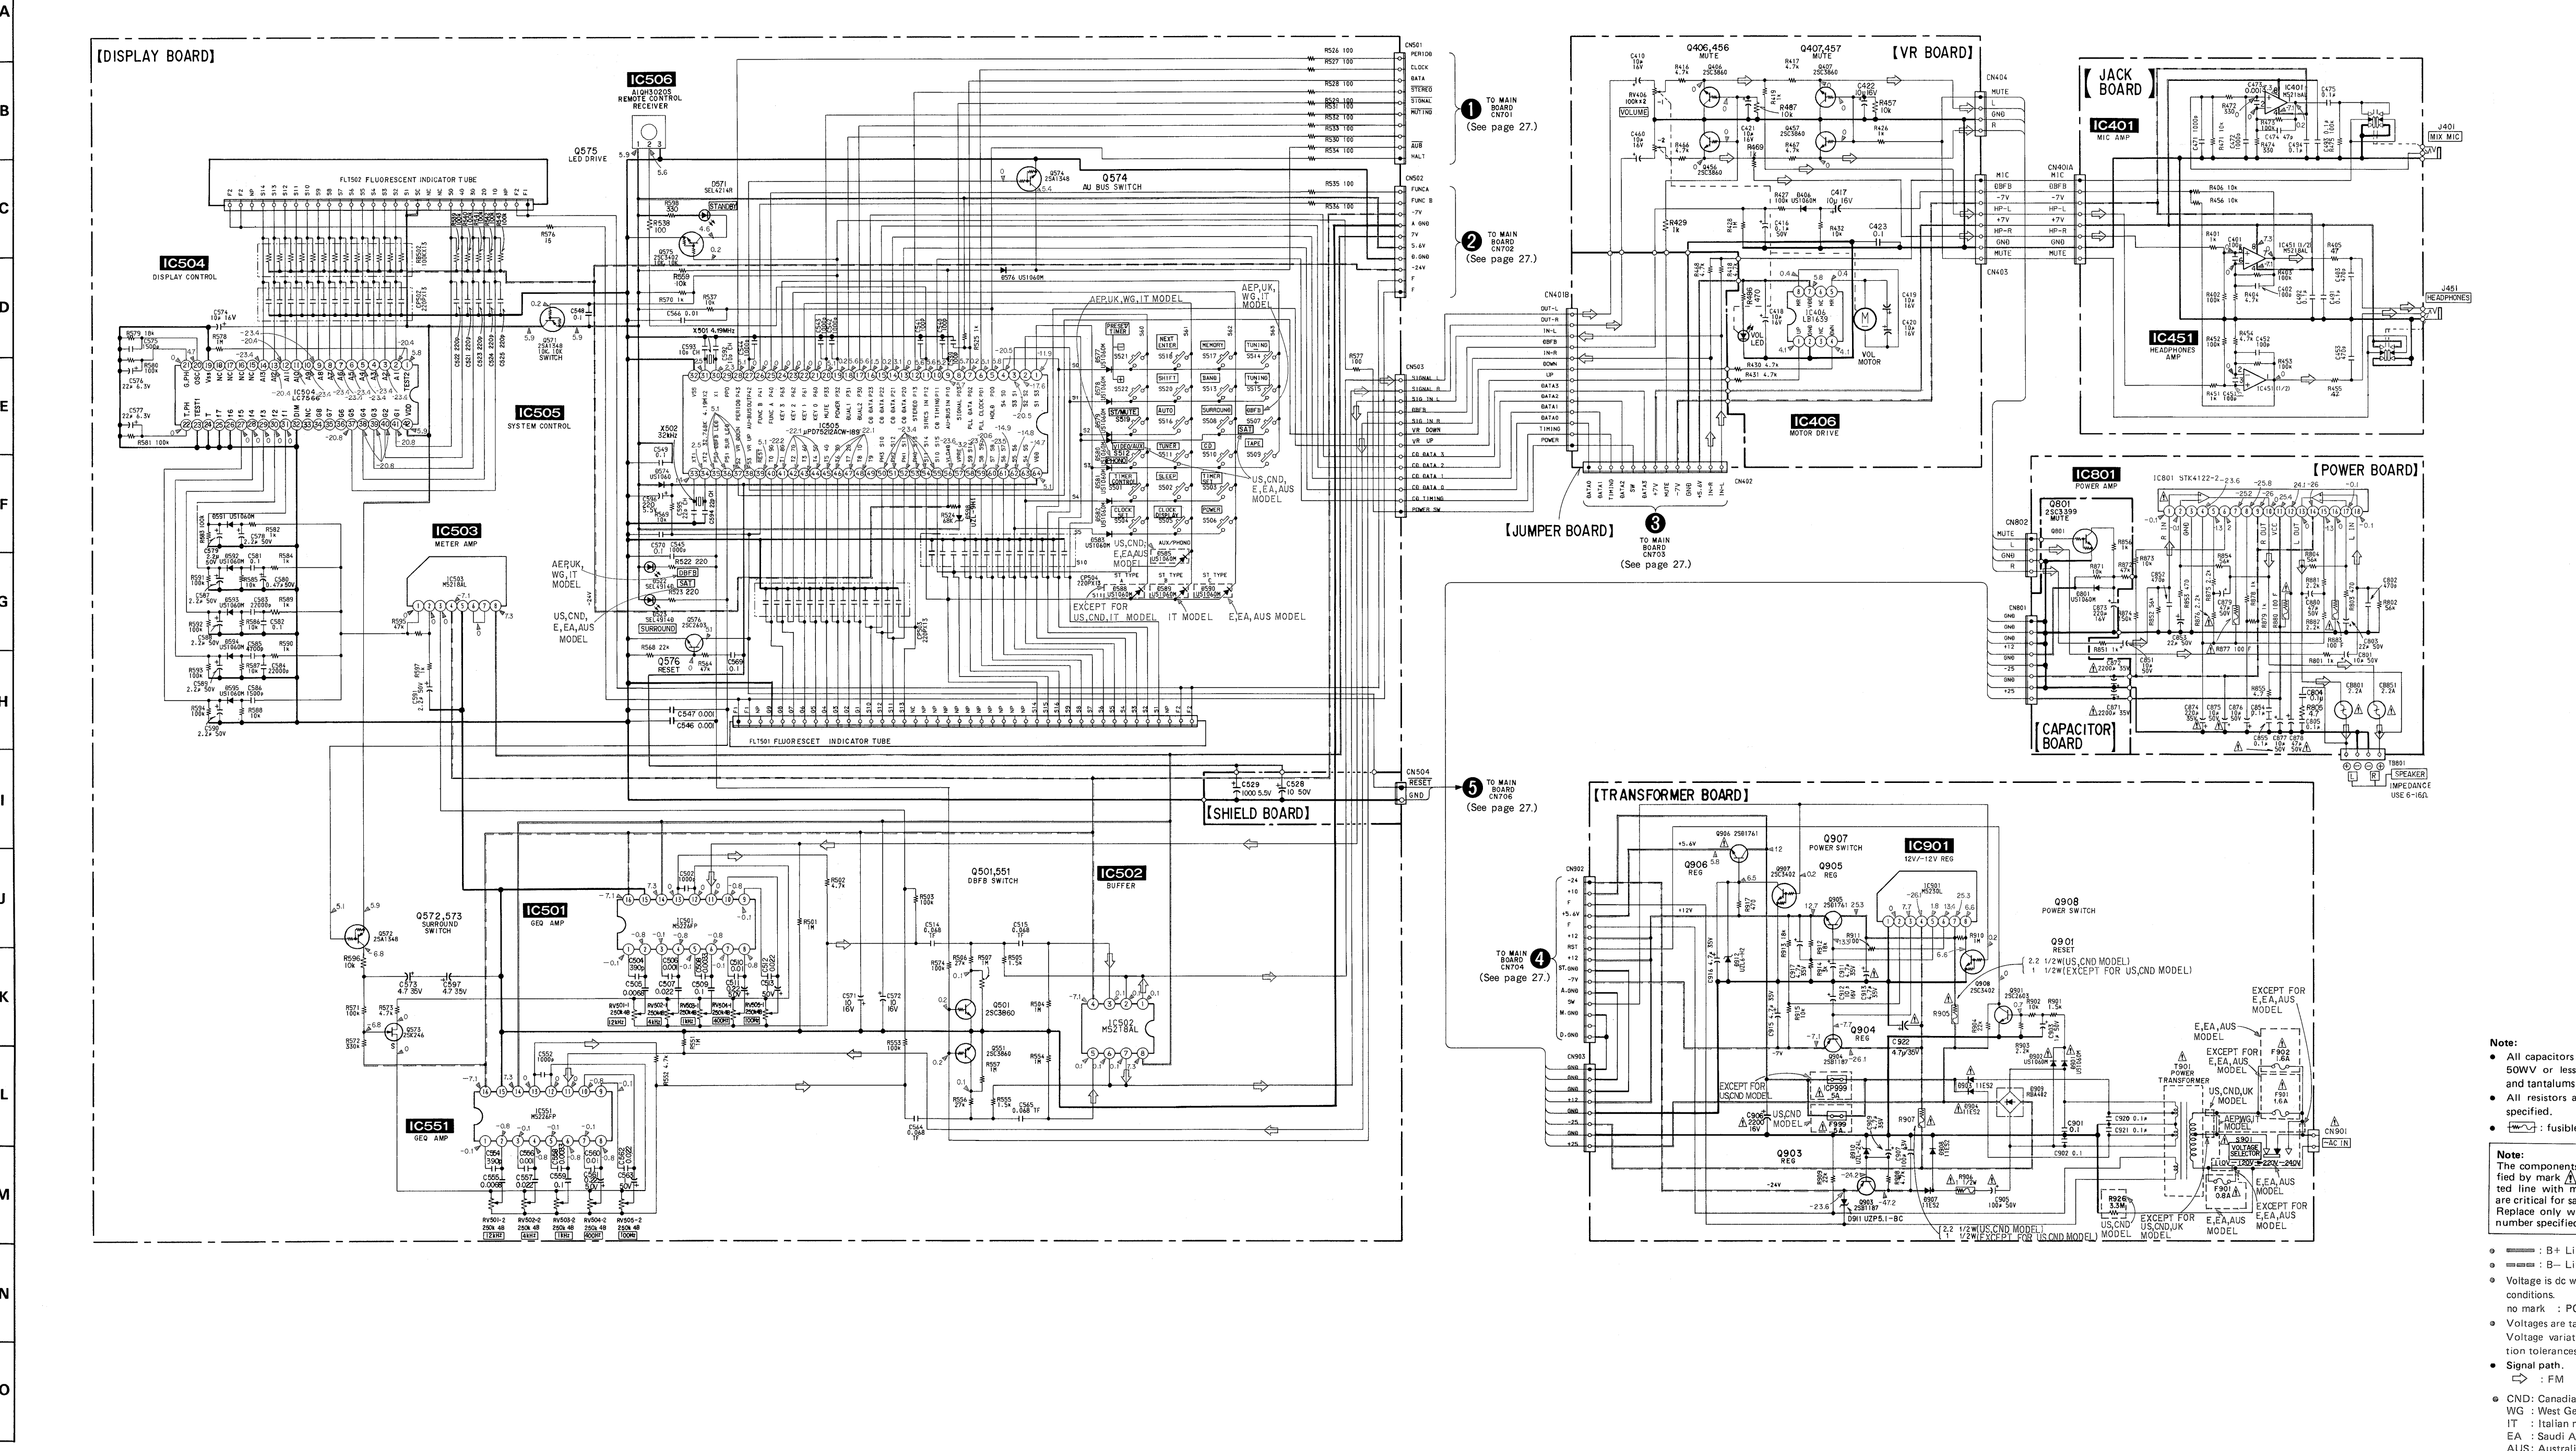


6-6. PRINTED WIRING BOARDS—Power/Amplifier/Display Section— ● Refer to page 17 for Semiconductor Lead Layouts.

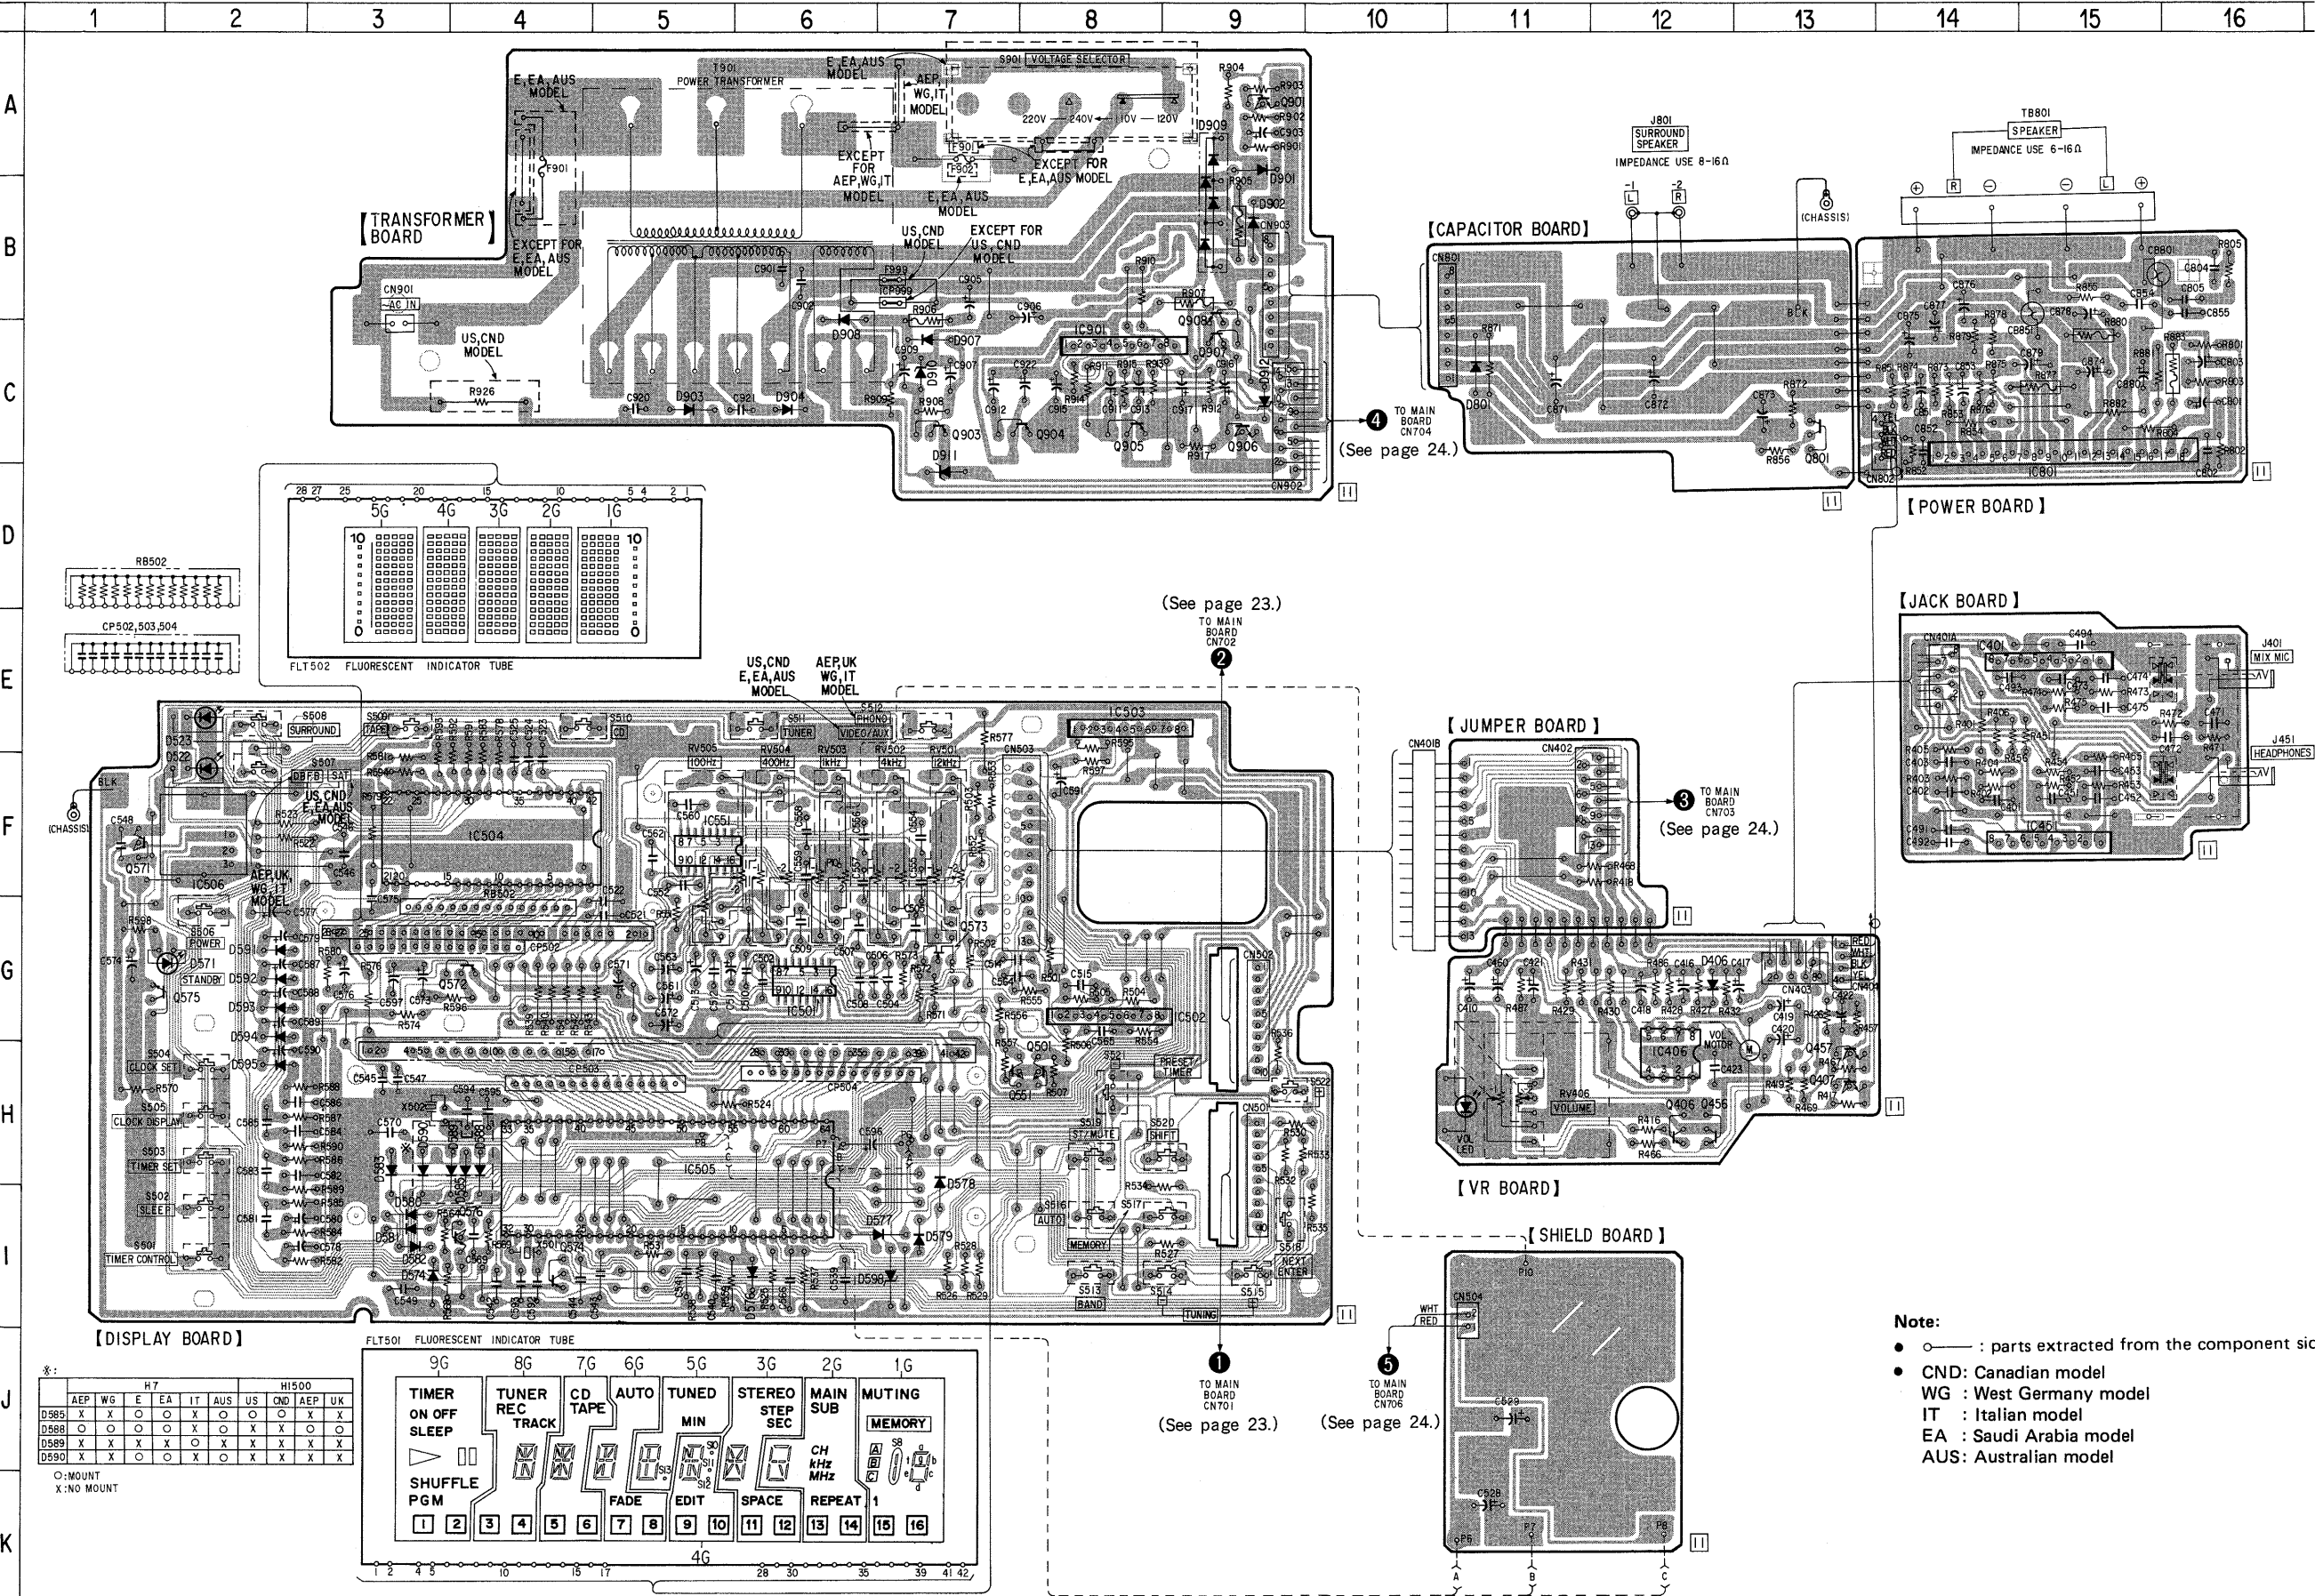

● Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D406	G-12	IC451	F-14
D522	F-2	IC501	G-6
D523	E-2	IC502	G-8
D571	G-2	IC503	E-8
D574	I-3	IC504	F-4
D576	I-6	IC505	H-5
D577	I-6	IC506	F-2
D578	I-7	IC551	F-5
D579	I-7	IC801	C-15
D580	I-3	IC901	C-8
D581	I-3		
D582	I-3	Q406	H-12
D583	H-3	Q407	H-13
D585	H-4	Q456	H-12
D588	H-4	Q457	H-13
D589	H-3	Q501	H-8
D590	H-3	Q551	H-7
D591	G-2	Q571	F-1
D592	G-2	Q572	G-3
D593	G-2	Q573	G-7
D594	G-2	Q574	I-4
D595	H-2	Q575	G-1
D598	I-6	Q576	I-4
D801	C-11	Q801	C-13
D901	A-9	Q901	A-9
D902	B-9	Q903	C-7
D903	C-5	Q904	C-7
D904	C-6	Q905	C-8
D907	C-7	Q906	C-9
D908	C-6	Q907	C-9
D909	A-9	Q908	C-9
D910	C-7		
D911	D-7		
D912	C-9		
IC401	E-14		
IC406	H-12		

● Waveforms





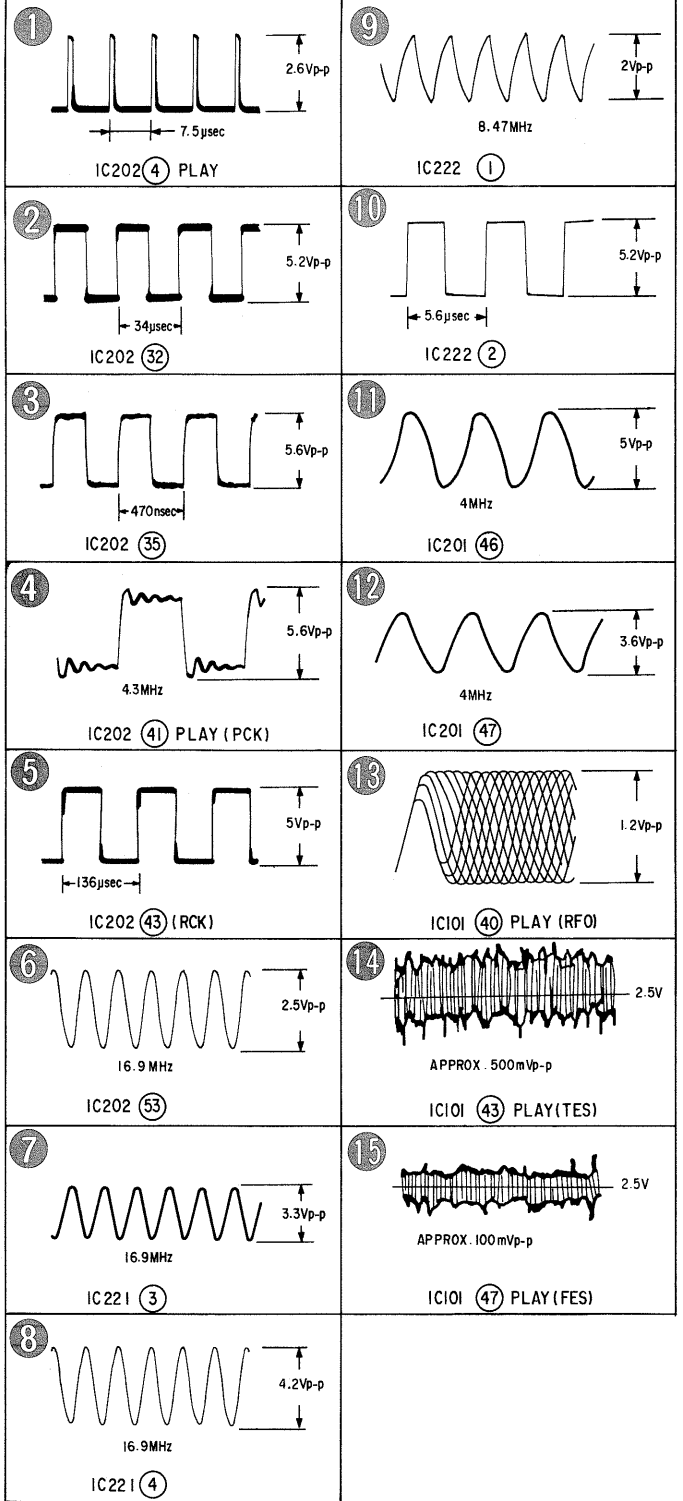


Note:
● — : parts extracted from the component side.
● CND: Canadian model
WG : West Germany model
IT : Italian model
EA : Saudi Arabia model
AUS: Australian model

6-7. SCHEMATIC DIAGRAM—CD Section— Refer to page 35 for Waveforms.

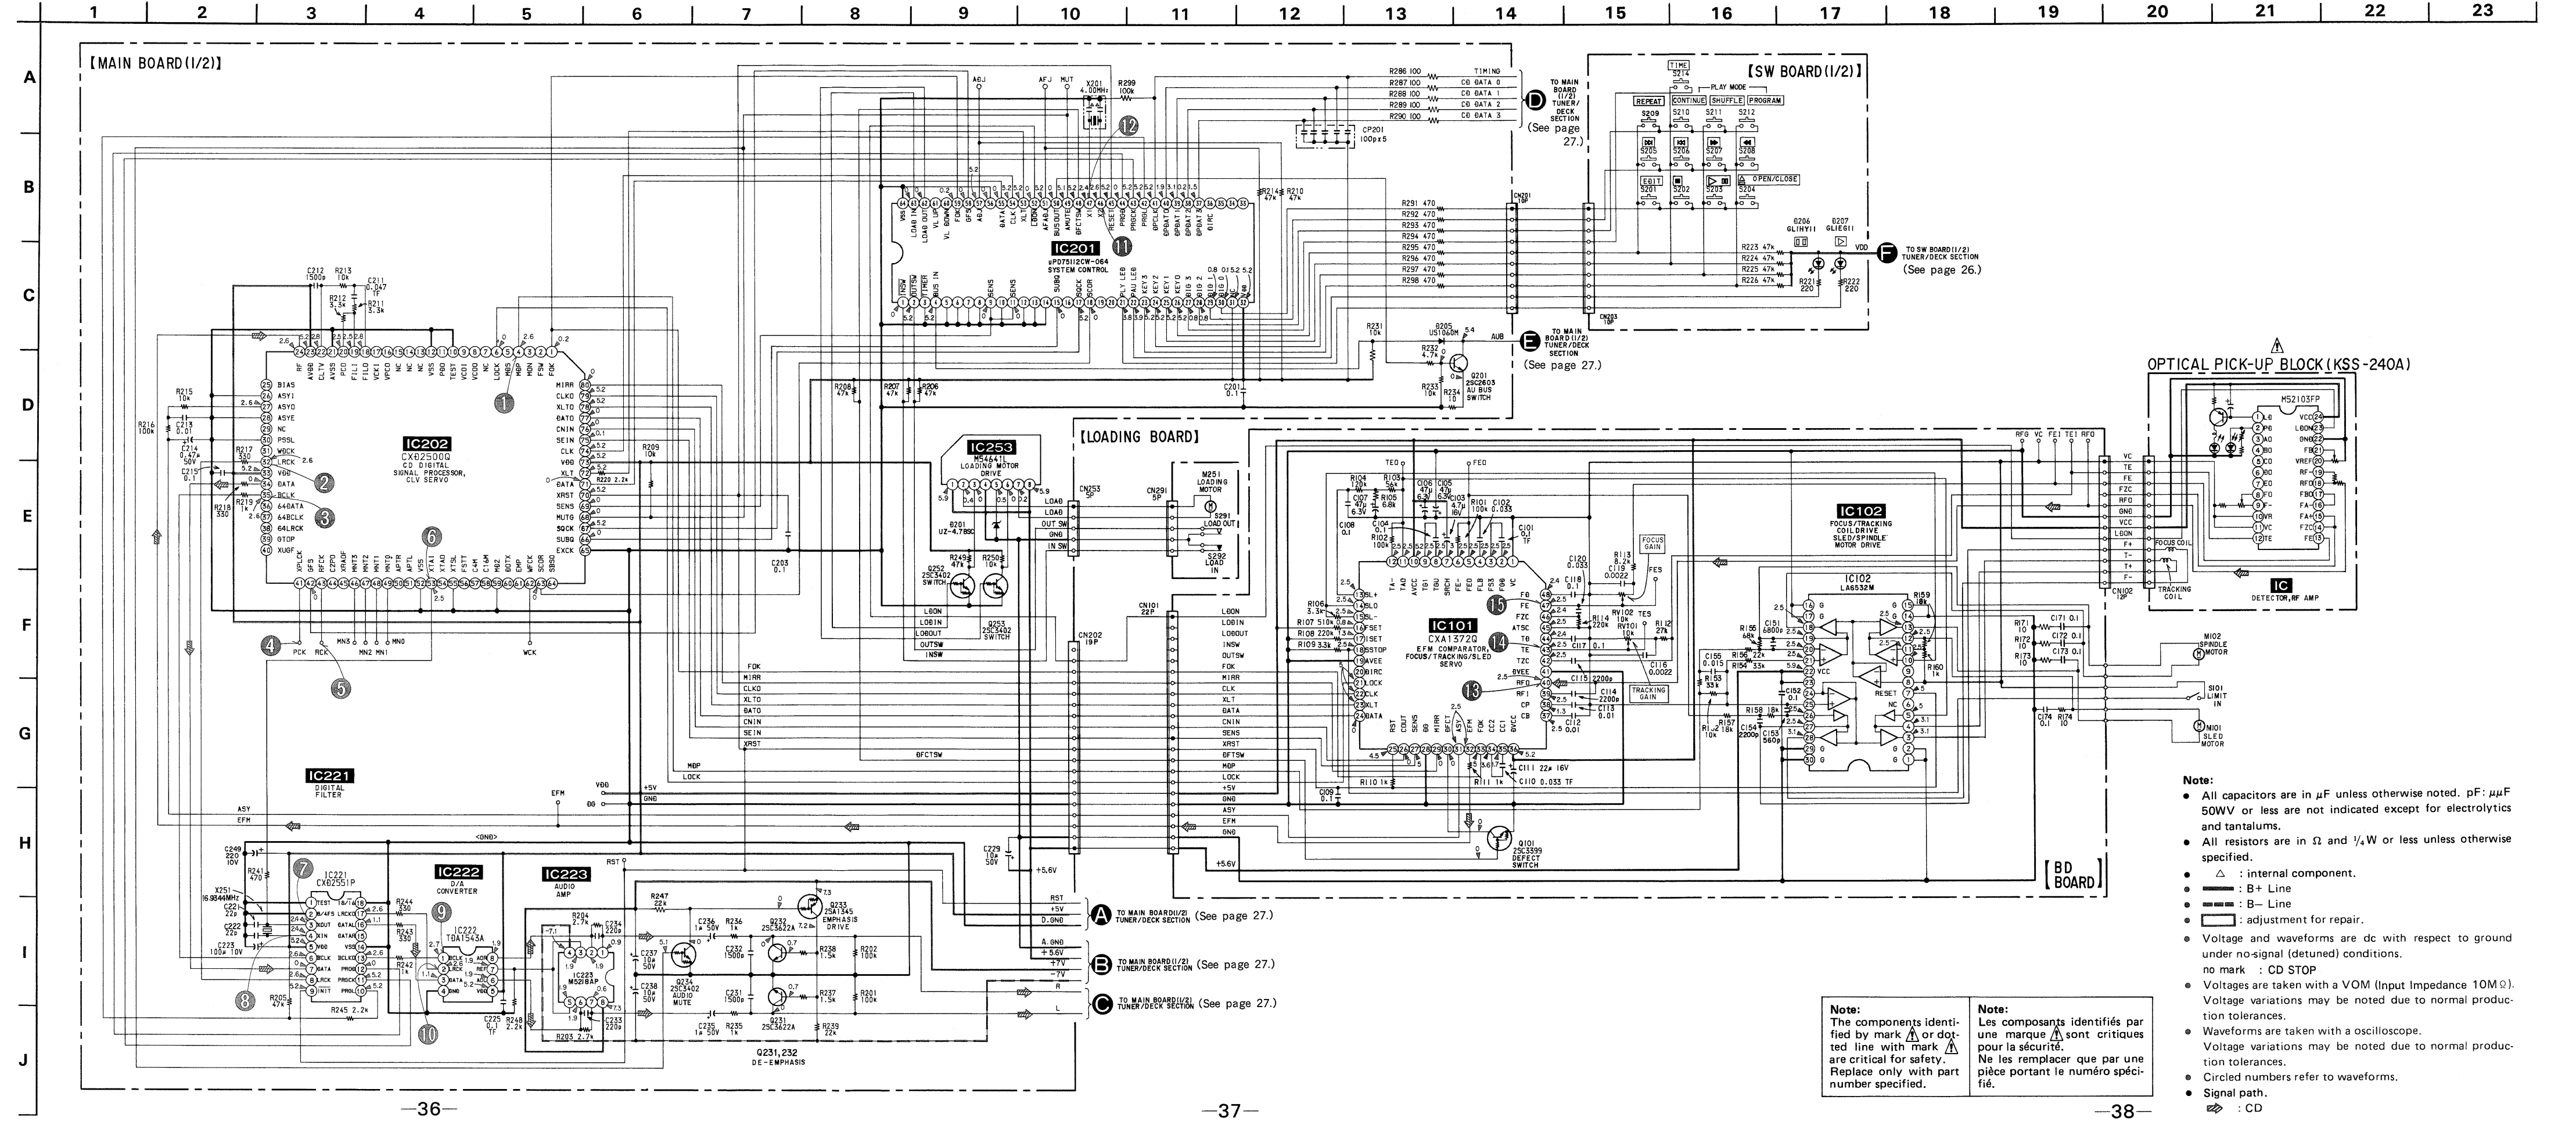

• IC51 TC9217P



6-8. PIN FUNCTIONS

● IC604 Deck Controller (M50964-212SP)

Pin No.	Pin Name	I/O	Symbol	Description																																																
1	V _{cc}	—	V _{cc}	POWER 5±0.5V																																																
2	AV _{ss}	—	AV _{ss}	Analogue system GND																																																
3	VREF	I	VREF	Analogue system reference voltage input																																																
4	D•A	O	D•A	D/A conversion output (Not used : open)																																																
5	PWM	O	PWM	PWM output (Not used : GND)																																																
6	P63	O	$\overline{\text{AMS}}$	AMS LED indication output																																																
7	P62	O	$\overline{\text{A FWD}}$	Deck A FWD LED output																																																
8	P61	O	$\overline{\text{BIAS IV}}$	TYPE IV bias oscillation output																																																
9	P60	O	$\overline{\text{BIAS II}}$	TYPE II bias oscillation output																																																
10	P47	O	$\overline{\text{A REV}}$	Deck A RVS LED output																																																
11	P46	O	$\overline{\text{A REV}}$	Deck A RVS LED output																																																
12	AN5	I	B HALF	Beck B record prevention claw A, B detection input (Analogue) <table><tr><td>Voltage (V)</td><td>1V</td><td>1.9V</td><td>2.8V</td><td>3.9V</td><td>5V</td></tr><tr><td>Half</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>OFF</td></tr><tr><td>Claw A</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td>Claw B</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td></tr></table>	Voltage (V)	1V	1.9V	2.8V	3.9V	5V	Half	ON	ON	ON	ON	OFF	Claw A	OFF	ON	OFF	ON	OFF	Claw B	ON	ON	OFF	OFF	OFF																								
Voltage (V)	1V	1.9V	2.8V	3.9V	5V																																															
Half	ON	ON	ON	ON	OFF																																															
Claw A	OFF	ON	OFF	ON	OFF																																															
Claw B	ON	ON	OFF	OFF	OFF																																															
13	AN4	I	KEY3	KEY input <table><tr><td>Voltage (V)</td><td>0</td><td>0.3</td><td>0.7</td><td>1.2</td><td>1.7</td><td>2.3</td><td>2.8</td><td>3.4</td><td>4.0</td><td>4.5</td><td>5.0</td></tr><tr><td>KEY 1</td><td>B ■</td><td>B ▮</td><td>B ►</td><td>B ◀</td><td>B ○</td><td>A ◀◀</td><td>A ►►</td><td></td><td>◻ B</td><td>◻ C</td><td>OFF</td></tr><tr><td>KEY 2</td><td>A ■</td><td>A ▮</td><td>A ►</td><td>A ◀</td><td></td><td>B ◀◀</td><td>B ►►</td><td>B ●</td><td>◻</td><td>RELAY</td><td>OFF</td></tr><tr><td>KEY 3</td><td>AMS</td><td></td><td>H DUB</td><td>N DUB</td><td>CD SYNC</td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>	Voltage (V)	0	0.3	0.7	1.2	1.7	2.3	2.8	3.4	4.0	4.5	5.0	KEY 1	B ■	B ▮	B ►	B ◀	B ○	A ◀◀	A ►►		◻ B	◻ C	OFF	KEY 2	A ■	A ▮	A ►	A ◀		B ◀◀	B ►►	B ●	◻	RELAY	OFF	KEY 3	AMS		H DUB	N DUB	CD SYNC						
Voltage (V)	0	0.3	0.7		1.2	1.7	2.3	2.8	3.4	4.0	4.5	5.0																																								
KEY 1	B ■	B ▮	B ►		B ◀	B ○	A ◀◀	A ►►		◻ B	◻ C	OFF																																								
KEY 2	A ■	A ▮	A ►	A ◀		B ◀◀	B ►►	B ●	◻	RELAY	OFF																																									
KEY 3	AMS		H DUB	N DUB	CD SYNC																																															
14	AN3	I	KEY2																																																	
15	AN2	I	KEY1																																																	
16	P41	O	$\overline{\text{B FWD}}$	Deck B FWD LED output																																																
17	P40	O	$\overline{\text{B REV}}$	Deck B REV LED output																																																
18	P37	O	$\overline{\text{A FWD}}$	Deck A FWD LED output																																																
19	P36	O	$\overline{\text{B PAUSE}}$	Deck B PAUSE LED output																																																
20	P35	O	$\overline{\text{B REC}}$	Deck B REC LED output																																																
21	P34	O	DOLBY $\overline{\text{B/C}}$	Dolby $\overline{\text{B/C}}$ output																																																
22	P33	O	DOLBY $\overline{\text{ON/OFF}}$	Dolby $\overline{\text{ON/OFF}}$ output																																																
23	P32	I	SIRCS	SIRCS input or AUDIO BUS reverse input																																																
24	P31	O	$\overline{70}/120$	Playback EQ output for playing deck																																																
25	P30	O	AUB OUT	AUDIO BUS output																																																
26	INT1	I	AUB IN	AUDIO BUS normal input																																																
27	CNVSS	—	CNVSS	GND																																																
28	$\overline{\text{RESET}}$	I	$\overline{\text{RESET}}$	Microcomputer reset input																																																
29	XIN	I	XIN	Clock input (4MHz)																																																
30	X _o	O	X _o	Clock output (4MHz)																																																
31	Φ	O	Φ	Not used (open)																																																

Pin No.	Pin Name	I/O	Symbol	Description
32	V _{SS}	—	V _{SS}	GND
33	P57	I	$\overline{\text{TEST}}$	Electrical adjustment test mode setting
34	P56	I	TYPE IV	TYPE IV switch input
35	P55	I	B70/ $\overline{\text{I20}}$	Deck B TYPE II switch input
36	P54	I	B SHUT	Deck B Reel table signal input
37	P53	I	A70/ $\overline{\text{I20}}$	Deck A TYPE II switch input
38	P52	I	A SHUT	Deck B Reel table signal input
39	P51	I	$\overline{\text{A HALF}}$	Deck A Half switch input
40	P50	I	AMS IN	AMS signal input
41	P17	O	$\overline{\text{M MUTE}}$	Meter mute output
42	P16	O	$\overline{\text{L MUTE}}$	Line mute output
43	P15	O	$\overline{\text{PASS}}$	PASS AMP change output
44	P14	O	$\overline{\text{REC/PB}}$	Dolby IC $\overline{\text{REC}}$ /PB select output
45	P13	O	$\overline{\text{AMS/BS}}$	AMS AMP characteristics change ouptut
46	P12	O	AMS A/ $\overline{\text{B}}$	AMS AMP input Deck A/ $\overline{\text{B}}$ select output
47	P11	O	SEL A/ $\overline{\text{B}}$	Dolby IC PB input Deck A/ $\overline{\text{B}}$ select output
48	P10	O	$\overline{\text{BIAS I}}$	TYPE I bias oscillation output
49	P07	O	$\overline{\text{RELAY}}$	REC/PB change relay output
50	P06	O	$\overline{\text{PMB}}$	Deck B plunger hold output
51	P05	O	$\overline{\text{KICK B}}$	Deck B plunger kick output
52	P04	O	$\overline{\text{PMA}}$	Deck A plunger hold output
53	P03	O	$\overline{\text{KICK A}}$	Deck A plunger kick output
54	P02	O	B H/ $\overline{\text{L}}$	Deck B capstan motor speed select
55	P01	O	A H/ $\overline{\text{L}}$	Deck A capstan motor speed select
56	P00	O	M $\overline{\text{ON/OFF}}$	Capstan motor $\overline{\text{ON/OFF}}$
57	P27	O	REC MUTE	REC MUTE output
58	P26	O	B SCHMITT	Deck B reel table schmitt output
59	P25	O	A SCHMITT	Deck A reel table schmitt output
60	P24	O	$\overline{\text{H DUB}}$	High Speed Dubbing LED output
61	P23	O	$\overline{\text{N DUB}}$	Normal Speed Dubbing LED output
62	P22	O	$\overline{\text{CD DUB}}$	Auto CD Synchro LED output
63	P21	I	$\overline{\text{AMS AVIRABLE}}$	Deck A PAUSE LED output
64	P20	O	$\overline{\text{SIRCS/AUB}}$	$\overline{\text{SIRCS}}$ /AUDIO BUS mode select

[TEST MODE]

When making pin ㉓ low (connect TP601 to ground with jumper wire), following function operates.

1. Source monitor
- Release the line mute while recording.

2. High speed playback
On playing, while pressing HIGH SPEED (DUBBING) button, high speed playback operates.
3. Record memory stop
Using DIRECTION MODE switch ⇌, returns to the recording start point and stops or plays.

● IC505 Display Control (μPD75212)

Pin No.	Pin Name	I/O	ACTIVE	Description	Hold
1	S3	O	H	Segment, keyscan output terminals	Low
2	S2				
3	S1				
4	S0				
5	INT4	I	L	HOLD input	input
6	SCK	O	—	CLOCK (TC9217P T-BUS)	
7	SO	I/O	—	DATA (TC9217P T-BUS)	
8	PO3	I	L	SIGNAL input	
9	INT0	I	L	AUDIO-BUS input	input
10	INT1	I	Down	CD display data, timing	
11	P12	I	L	Remote control input	
12	P13	I	L	STEREO input	
13	P20	I	—	CD display data	input
14	P21				
15	P22				
16	P23				
17	P30	I	L	DUAL 2 input	input
18	P31	I	L	DUAL 1 input	
19	P32	O	L	POWER port	
20	P33	O	L	MUTING	Low
21	P60	I	H	Keyscan input	input
22	P61				
23	P62				
24	P63				
25	P40	O	—	FUNCTION A output	Low
26	P41	O	—	FUNCTION B output	
27	P42	O	H	AUDIO-BUS output	
28	P43	O	L	PERIOD (TC9217P T-BUS)	
29	PP0	—	—	Not used (open)	—
30	X1	—	—	Main system clock 4.19MHz	—
31	X2				
32	V _{ss}	—	—	GND terminal (0V)	—
33	XT1	—	—	Sub system clock 32.768kHz	—
34	XT2				
35	P50	O	L	DBFB	Low
36	P51	O	L	SURROUND	
37	P52	O	L	Volume DOWN	
38	P53	O	L	Volume UP	
39	RESET	I	L	System reset input terminal	—
40	T0	O	H	Digit output	Low
41	T1				

Pin No.	Pin Name	I/O	ACTIVE	Description	Hold
42	T2	O	H	Digit output	Low
43	T3				
44	T4				
45	T5				
46	T6				
47	T7				
48	T8				
49	T9	O	—	Not used (open)	Low
50	S15	O	H	Segment output	Low
51	S14				
52	S13				
53	S12				
54	S11	O	H	Segment output, specification distinction diode output	Low
55	S10				
56	V _{LOAD}	—	—	Pull-down resistor connect terminal of FIP driver	—
57	V _{PRE}	—	—	Power supply terminal of FIP driver output buffer	—
58	S9	O	H	Segment output	Low
59	S8				
60	S7				
61	S6				
62	S5	O	H	Segment, keyscan output teminal	Low
63	S4				
64	V _{DD}	—	—	Power supply terminal (5V)	—

[KEY, DIODE MATRIX]

	Key						Diode	
	S5	S4	S3	S2	S1	S0	S10	S11
P60	CLOCK	TIMER CONTROL	VIDEO	DUAL	STATION UP	STATION DOWN	TIMER FUNCTION	A
P61	DISPLAY	SLEEP	TUNER	AUTO/MANUAL	SHIFT	ENTER	VIDEO/PHONO	B
P62	POWER	TIMER SET	CD	SURROUND	BAND	MERORY	IF+50kHz	C
P63	—	—	TAPE	DBFB	TUNING UP	TUNING DOWN	IF-50kHz	—

- 1) Pressing the key twice is not allowed. (First pressing is preceded)
- 2) The remote control precedes the input with the key.
- 3) Input the diode in resetting and in releasing HOLD.

● IC201 CD Controller (μ PD75112CW)

Pin No.	Pin Name	I/O	Description
1	INSW	I	Disk tray clamp-end input
2	OUTSW	I	Disk tray open-end input
3	(TIMER)	I	Timer start input
4	BSIN	I	Audio bus input
5	Not Used	I	GND
6	Not Used	I	GND
7	Not Used	I	GND
8	Not Used	I	GND
9	SENS	I	SENS input, and the state input of every kind from CXD2500Q and CXA1372Q
10	Not Used	I	GND
11	SENS	I	SENS input, and the state input of every kind from CXD2500Q and CXA1372Q
12	Not Used	I	GND
13	Not Used	I	GND
14	Not Used	I	GND
15	SUBQ	I	Q data serial input from CXD2500Q
16	Not Used	O	OPEN
17	SQCLK	O	Sub-code Q data read-in clock output for CXD2500Q
18	SCOR	I	Sub-code synchro S0 and S1 detect input
19	Not Used	O	OPEN
20	Not Used	O	OPEN
21	PLAYL	O	Play LED ON/OFF output
22	PAUSL	O	Pause LED ON/OFF output
23	KEY3	I	Key data input
24	KEY2	I	Key data input
25	KEY1	I	Key data input
26	KEY0	I	Key data input
27	DG3	O	Key-scan digit output
28	DG2	O	Key-scan digit output
29	DG1	O	Key-scan digit output
30	DG0	O	Key-scan digit output
31	Not Used	I	+5V
32	VDD	I	+5V
33	Not Used	O	OPEN
34	Not Used	O	OPEN
35	Not Used	O	OPEN
36	Not Used	O	On time 1 track jump, tracking drive is inversed output for CXA1372Q
37	DPDAT3	O	Display data output for tuner amp micon
38	DPDAT2	O	Display data output for tuner amp micon
39	DPDAT1	O	Display data output for tuner amp micon
40	DPDAT0	O	Display data output for tuner amp micon
41	DPCLK	O	Display data transmission clock output for tuner amp micon
42	PRGL	O	Serial data latch pulse output for digital filter CXD2551P
43	PRGCK	O	Serial clock output for digital filter CXD2551P
44	PRGD	O	Serial data output for digital filter CXD2551P

Pin No.	Pin Name	I/O	Description
45	RESET	I	System reset input terminal (LOW ACTIVE)
46	X2	I	System clock input 4.19MHz
47	X1	I	System clock input 4.19MHz
48	DFCTSW	O	From focus in till spindle kick is ON except then is OFF.
49	AMUTE	O	Muting ON/OFF output
50	BSOUT	O	Audio bus output
51	AFADJ	I	Test mode input, and on time POWER "L" is test movement of every kind
52	LDON	O	Laser diode ON/OFF output
53	XLT	O	Serial data latch pulse output for CXD2500Q
54	CLK	O	Serial clock output for CXD2500Q
55	DATA	O	Serial data output for CXD2500Q
56	Not Used	I	GND
57	ADJ	I	Test mode input, "L" is GFS no check.
58	GFS	I	GFS OK/No Good input
59	FOK	I	Focus OK/No Good input
60	Not Used	O	OPEN
61	Not Used	O	OPEN
62	LODOUT	O	Disc tray loading-out output
63	LODIN	O	Disc tray loading-in output
64	VSS	I	GND



SECTION 7 EXPLODED VIEWS


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.

- Color Indication of Appearance Parts
Example:
(RED) ... KNOB, BALANCE (WHITE)
↑ Cabinet's Color ↑ Parts' Color

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CASE, POWER SECTION

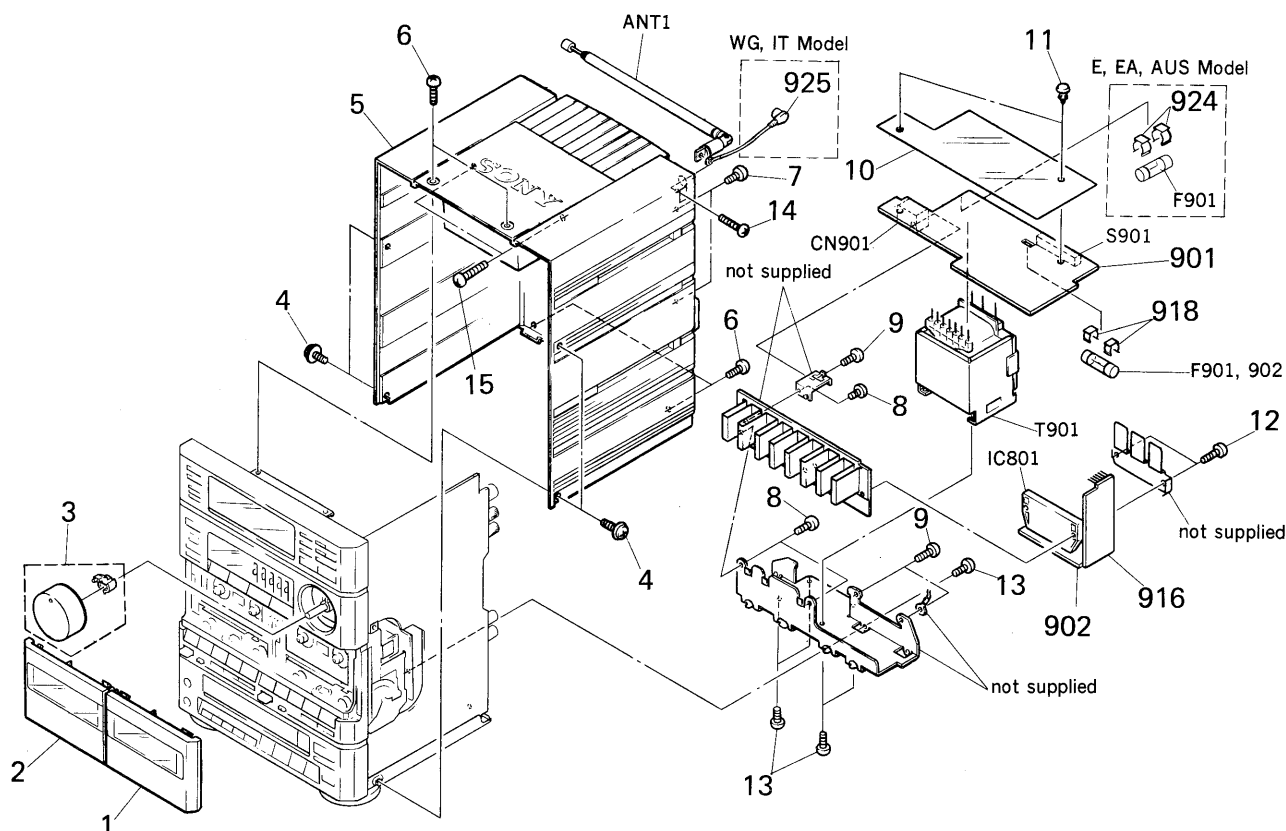


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	X-4936-809-1	LID (B) ASSY, CASSETTE		901	*1-634-474-11	PC BOARD, TRANSFORMER	
2	X-4936-808-1	LID (A) ASSY, CASSETTE		902	*1-634-479-11	PC BOARD, POWER	
3	X-4936-803-1	KNOB (VOLUME) ASSY		916	*1-634-480-11	PC BOARD, CAPACITOR	
4	3-704-366-01	SCREW (CASE) (M3X8)		918	1-533-213-31	HOLDER, FUSE	
5	X-4936-802-1	(H7:AEP,WG,IT)...CASE ASSY		924	*1-533-213-31	(E,EA,AUS)...HOLDER, FUSE	
	X-4936-804-1	(E,EA,AUS).....CASE ASSY		925	*1-562-908-11	(WG,IT)...CONNECTOR, FEMALE (NO SHIELD)	
	4-936-804-11	(H1500).....CASE		ANT1	1-501-270-00	(H7)...ANTENNA, TELESCOPIC	
6	7-682-549-04	(AEP,EA)...SCREW +BVTT 3X10 (S)		CN901	1-526-931-11	(AEP,UK,WG,IT)...INLET, AC (~AC IN)	
	7-685-873-09	(EXCEPT FOR AEP,EA)..SCREW +BVTT 3X10(S)		CN901	1-526-930-11	(US,Canadian,E,EA,AUS)...INLET, AC (~AC IN)	
7	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S		F901	1-532-215-00	(E,EA,AUS)...FUSE, TIME-LAG (0.8A)	
8	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3		F901	1-532-555-11	(US,Canadian)...FUSE, GLASS TUBE (1.6A)	
9	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		F902	1-532-259-11	(EXCEPT FOR US,Canadian)...FUSE, GLASS TUBE (1.6A)	
10	*4-936-816-01	COVER (INSULATING)		IC801	8-749-900-95	IC STK-4122MK2	
11	4-812-134-31	RIVET NYLON, 3.5		S901	1-571-722-11	(E,EA,AUS)...SWITCH, VOLTAGE SELECTION (VOLTAGE SELECTOR)	
12	7-685-650-79	SCREW +BVTP 3X16 TYPE2 IT-3		T901	1-449-898-11	(E,EA,AUS).....TRANSFORMER, POWER	
13	7-682-547-04	SCREW +BVTT 3X6 (S)		T901	1-449-899-11	(AEP,UK,WG,IT)...TRANSFORMER, POWER	
14	7-682-549-04	(H7)....SCREW +BVTT 3X10 (S)		T901	1-449-900-11	(US,Canadian)....TRANSFORMER, POWER	
15	7-685-649-79	(H7)...SCREW +BVTP 3X14 TYPE2 N-S					

7-2. FRONT PANEL, MAIN BOARD SECTION

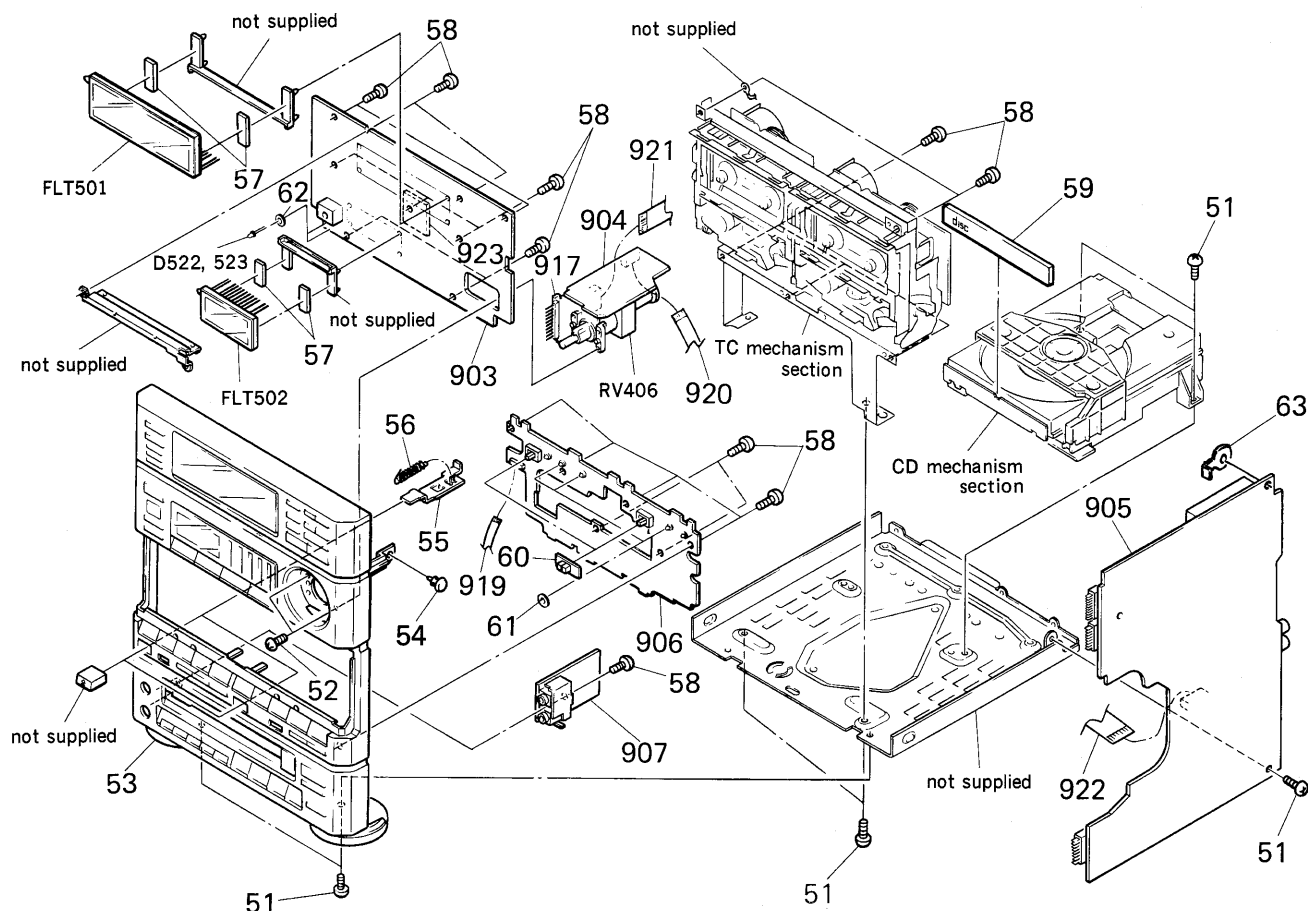

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	7-682-547-04	SCREW +BVTT 3X6 (S)		904	*1-634-476-11	PC BOARD, VR	
52	7-682-548-04	SCREW +BVTT 3X8 (S)		905	*A-4334-160-A	(E,EA,AUS).....MOUNTED PCB, MAIN	
53	X-4936-810-1	(E,EA,AUS).....PANEL ASSY, FRONT			*A-4334-161-A	(AEP,UK).....MOUNTED PCB, MAIN	
	X-4936-811-1	(H7:AEP,WG,IT).....PANEL ASSY, FRONT			*A-4334-162-A	(WG,IT).....MOUNTED PCB, MAIN	
	X-4936-812-1	(H1500:AEP,UK,IT)...PANEL ASSY, FRONT			*A-4334-164-A	(US,Canadian)...MOUNTED PCB, MAIN	
	X-4936-813-1	(US,Canadian).....PANEL ASSY, FRONT		906	*1-634-477-11	PC BOARD, SW	
54	4-812-134-31	RIVET NYLON, 3.5		907	*1-634-481-11	PC BOARD, JACK	
55	*4-936-807-01	(DECK B)...SLIDER (EJECT) (B)		917	*1-634-475-11	PC BOARD, JUMPER	
	*4-936-808-01	(DECK A)...SLIDER (EJECT) (A)		919	1-575-675-11	WIRE, FLAT TYPE (14 CORE)	
56	3-489-099-11	SPRING, TENSION		920	1-575-674-11	WIRE, FLAT TYPE (8 CORE)	
57	*4-932-810-01	CUSHION (FL)		921	1-575-672-11	WIRE, FLAT TYPE (13 CORE)	
58	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		922	1-575-673-11	WIRE, FLAT TYPE (15 CORE)	
59	4-936-833-01	PANEL, LOADING		923	*1-634-870-11	PC BOARD, SHIELD	
60	3-349-054-01	KNOB (SLIDE)		D522	8-719-312-81	DIODE SEL4914R-LC05	
61	3-831-441-XX	CUSHION, BLIND		D523	8-719-312-81	DIODE SEL4914R-LC05	
62	3-350-679-11	WASHER, FIBER		FLT501	1-519-577-11	INDICATOR TUBE, FLUORESCENT	
63	*4-925-530-01	(EXCEPT FOR US,Canadian)...PLATE, GROUND		FLT502	1-519-578-11	INDICATOR TUBE, FLUORESCENT	
903	*A-4334-168-A	(AUS).....MOUNTED PCB, DISPLAY		RV406	1-238-865-11	RES, VAR, CARBON (MOTOR) 100KX2	
	*A-4334-169-A	(US,Canadian)...MOUNTED PCB, DISPLAY				(VOLUME)(INCLUDING VOL LED)	
	*A-4334-170-A	(AEP,UK).....MOUNTED PCB, DISPLAY					
	*A-4334-171-A	(IT).....MOUNTED PCB, DISPLAY					
	*A-4334-172-A	(WG).....MOUNTED PCB, DISPLAY					
	*A-4334-178-A	(E,EA).....MOUNTED PCB, DISPLAY					

7-3. MD CHASSIS SECTION

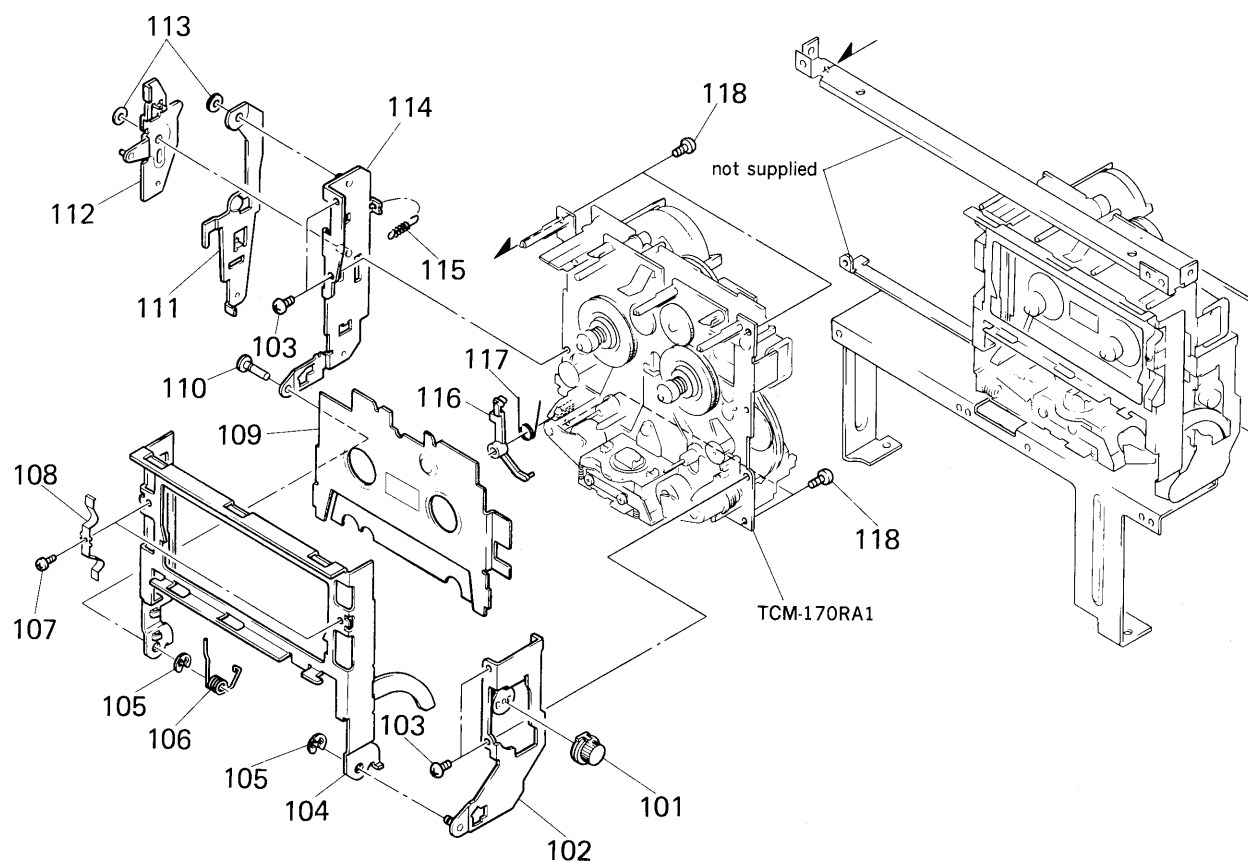


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
101	X-3340-185-1	GEAR (DAMPER) ASSY		110	*3-346-334-01	SHAFT (HOLDER FITTING LEFT)	
102	*X-3332-494-1	BRACKET (R) ASSY		111	*3-340-142-01	LEVER (EJECT)	
103	7-621-773-86	SCREW +BVTT 2.6X4 (S)		112	*X-3332-465-1	LEVER (LOCK) ASSY	
104	*3-340-150-01	HOLDER, CASSETTE		113	3-558-708-21	WASHER, STOPPER	
105	7-624-105-04	RETAINING, RING E-2.3		114	*X-3332-466-1	BRACKET (LEFT) ASSY	
106	3-346-364-01	SPRING (LOADING), TORSION		115	3-343-474-01	SPRING, TENSION	
107	7-621-255-15	SCREW +PTT 2X3 (S)		116	3-343-476-01	LEVER (EJECT SAFETY LEVER)	
108	3-354-908-01	SPRING (CASSETTE RETAINER)		117	3-343-477-01	SPRING, TORSION (EJECT SAFETY)	
109	*3-340-123-01	RETAINER, CASSETTE		118	7-621-770-67	SCREW +PTT 2.6X6 (S)	

7-4. MECHANISM DECK SECTION (1)

(DECK A: TCM-170RA1)


DECK B: TCM-170RB7

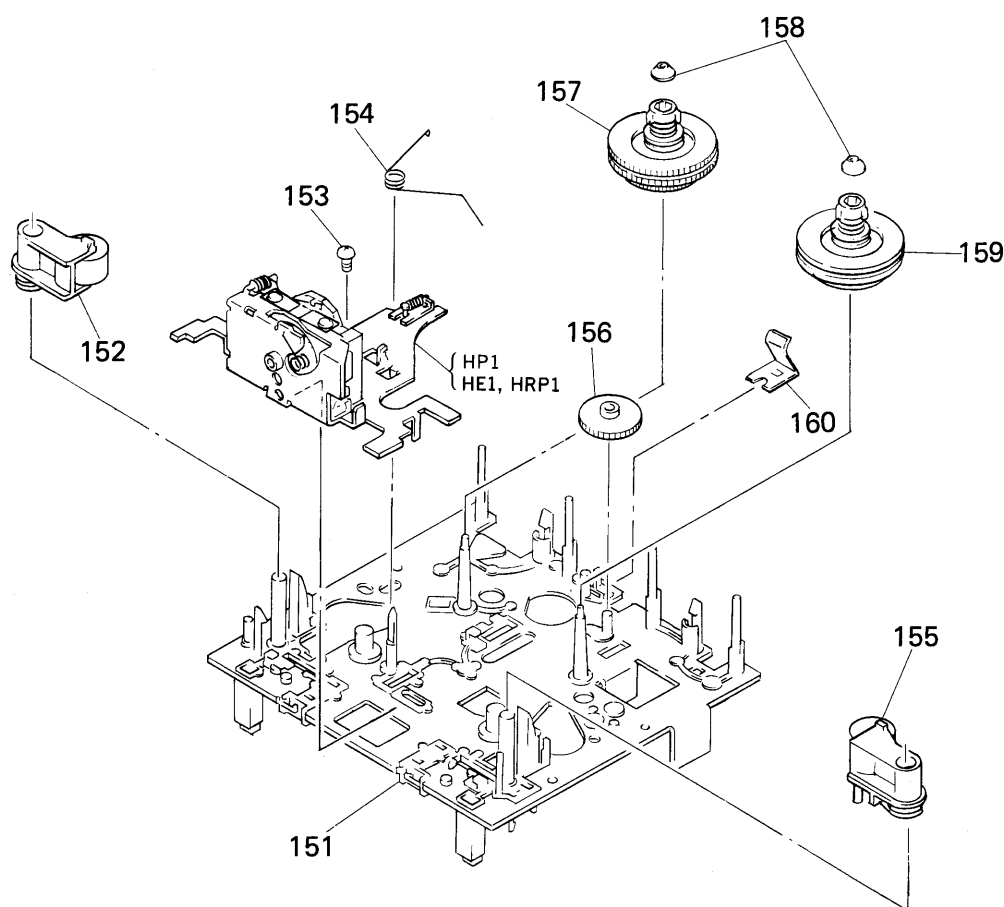

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	X-3343-439-1	CHASSIS ASSY, MECHANICAL		158	3-343-439-01	CAP (REEL TABLE)	
152	X-3343-456-1	LEVER (PINCH R) ASSY		159	X-3343-401-1	TABEL ASSY, REEL	
153	7-621-773-86	SCREW +BVT 2.6X4 (S)		160	3-343-420-01	SPRING, LEAF	
154	3-343-401-01	SPRING, TORSION		HP1	A-2003-503-A	(DECK A)...PC BOARD ASSY, HEAD (PB)	
155	X-3343-455-1	LEVER (PINCH F) ASSY		HRP1	A-2003-504-A	(DECK B)...CHASSIS ASSY, HEAD (PB/REC/ERASE)	
156	3-343-411-01	GEAR (FF GEAR)		HE1			
157	X-3343-415-1	TABEL (REV) ASSY, REEL					


7-5. MECHANISM DECK SECTION (2)

(DECK A: TCM-170RA1)
(DECK B: TCM-170RB7)

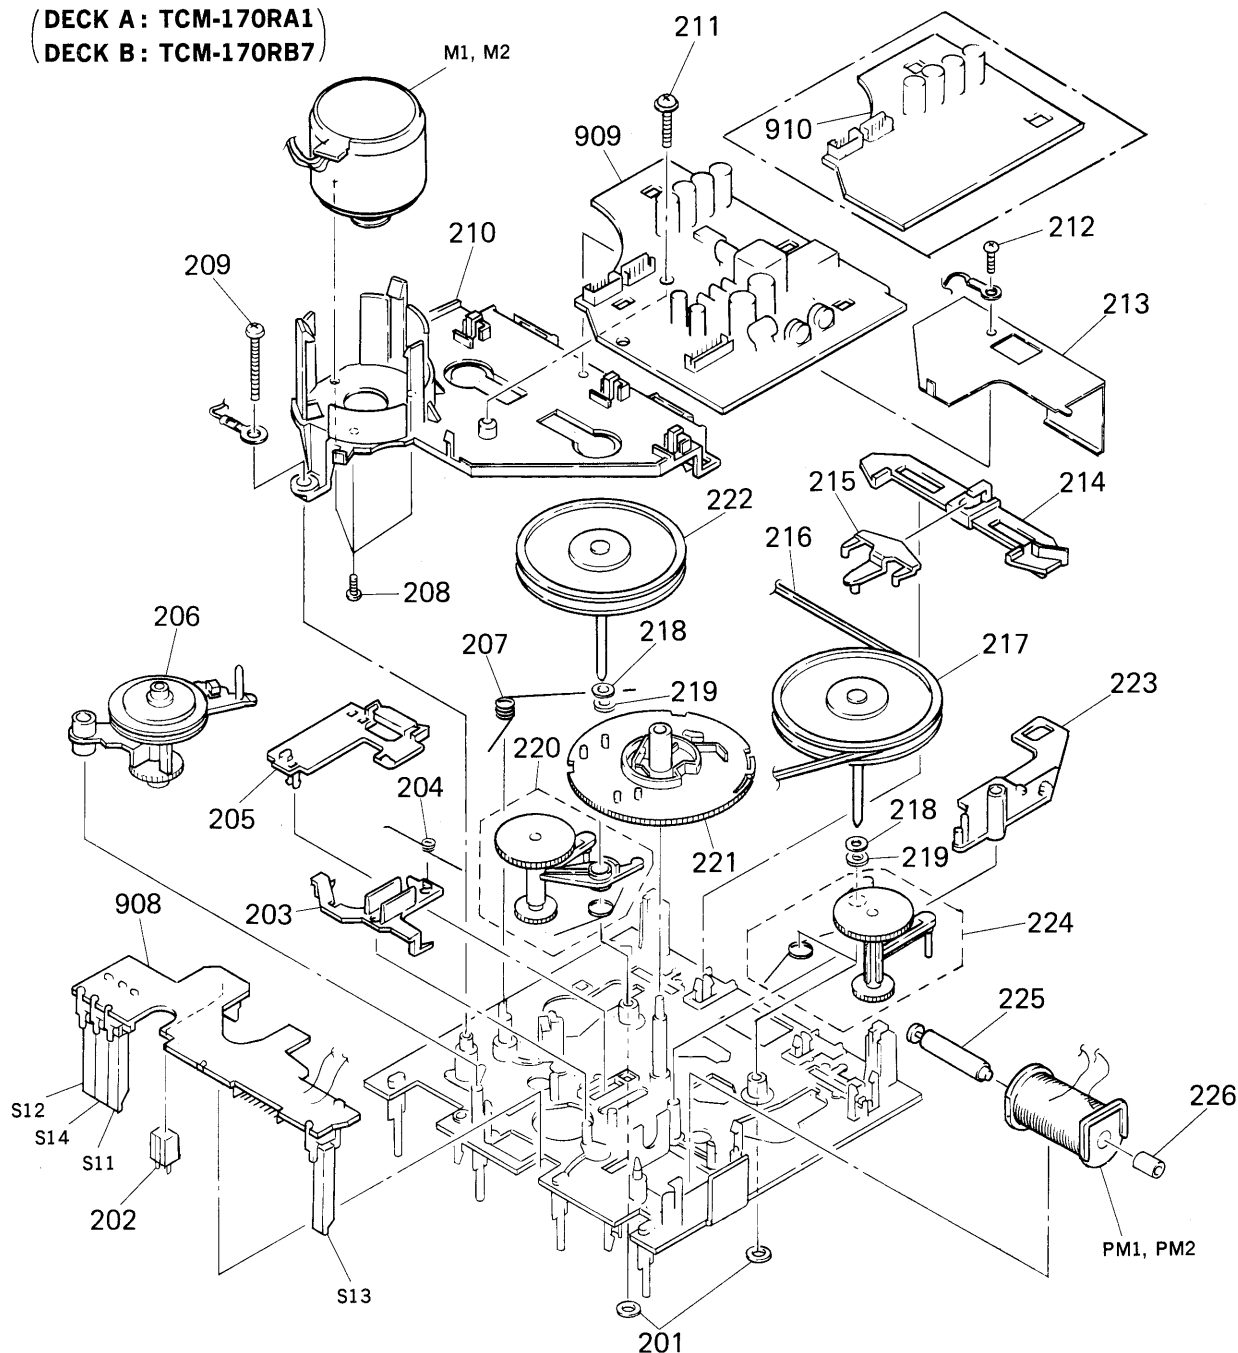


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
201	3-343-473-01	WASHER, NYLON		220	X-3343-454-1	LEVER (TU-R) ASSY	
202	3-343-419-01	HOLDER (S SENSOR A)		221	3-343-470-01	GEAR (CAM GEAR)	
203	3-343-453-01	SLIDER (BRAKE PLATE)		222	X-3343-416-7	FLYWHEEL (REV) COMPLETE ASSY	
204	3-343-429-01	SPRING, TORSION		223	3-343-493-01	LEVER (PM LEVER)	
205	3-343-461-01	SLIDER					
206	X-3343-414-1	LAVER (FR ARM) ASSY		224	X-3343-453-1	LEVER (TU-F) ASSY	
207	3-343-430-01	SPRING, TORSION		225	*3-343-425-01	ARBOR (MOVABLE IRON ARBOR), IRON	
208	7-627-556-28	SCREW +P 2.6X3.5		226	*3-343-424-01	ARBOR (FIXED IRON ARBOR), IRON	
209	3-355-801-01	SCREW (BTP 2X18)					
210	*X-3343-407-1	BASE (THRUST RETAINER) ASSY		908	*1-624-148-11	(DECK A)...PC BOARD, LEAF SW (A)	
					*1-624-148-11	(DECK B)...PC BOARD, LEAF SW (B)	
211	3-343-404-01	SCREW (PTPHW 2X12)		909	*1-624-146-11	(DECK B)...PC BOARD, MD-B	
212	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT		910	*1-624-147-11	(DECK A)...PC BOARD, MD-A	
213	3-343-480-01	PLATE, SHIELD					
214	3-343-457-01	SLIDER (REVERSE SLIDER)		M1	X-3343-447-1	(DECK A)...MOTOR ASSY	
215	3-343-462-01	LEVER		M2	X-3343-447-1	(DECK B)...MOTOR ASSY	
				PM1	1-454-456-11	(DECK A)...SOLENOID, PLUNGER	
216	3-313-816-00	BELT (CAPSTAN BELT SQUARE)		PM2	1-454-456-11	(DECK B)...SOLENOID, PLUNGER	
217	X-3343-411-6	FLYWHEEL COMPLETE ASSY					
218	4-605-835-11	WASHER (2.6), POLYSLIDER					
219	3-307-482-00	WASHER, LUMILER					




7-6. CD SECTION (1)
(CDM13A-5BD3)

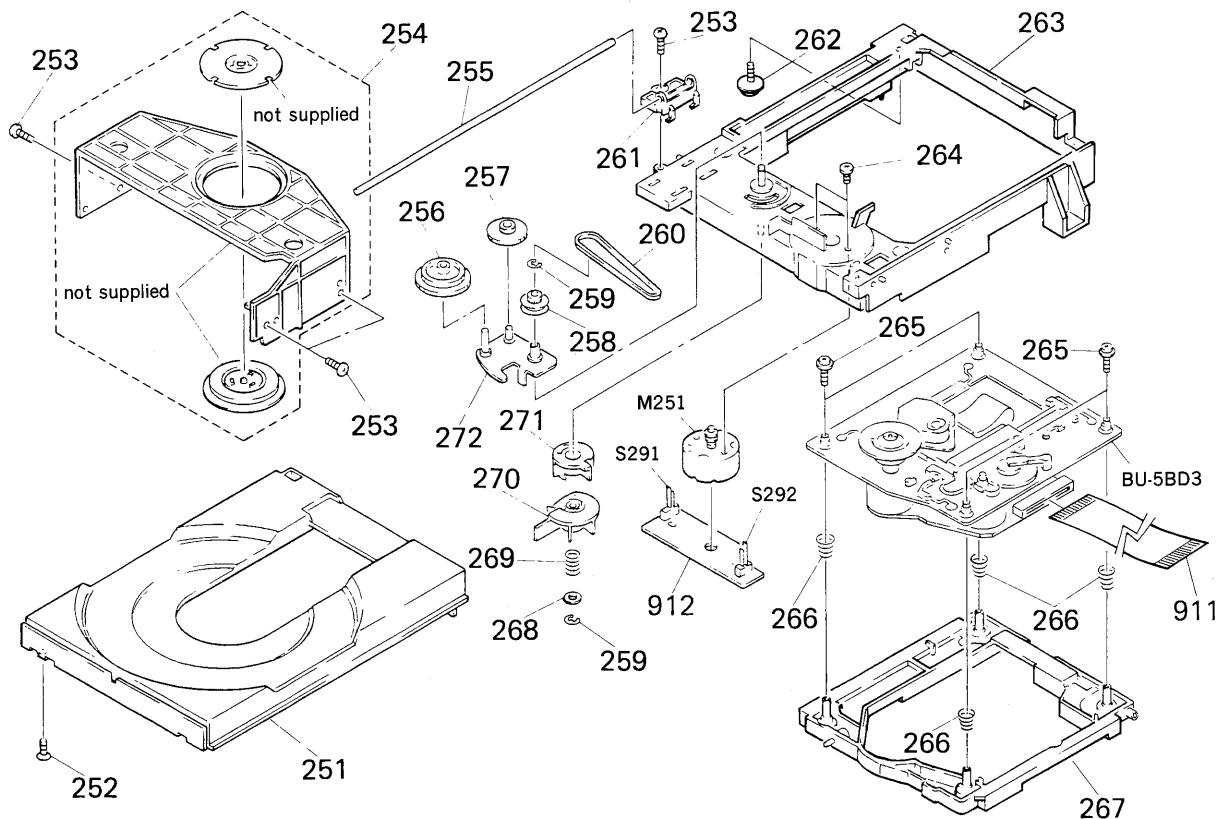


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
251	4-929-732-01	TABLE, DISK		265	4-933-134-01	SCREW (+PTPWH M2.6X6)	
252	7-685-234-19	SCREW +KTP 2.6X8 TYPE2NON-SLIT		266	4-917-541-01	SPRING (B)	
253	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S		267	4-929-747-01	HOLDER (BU)	
254	A-4604-219-A	HOLDER (MG) ASSY		268	4-927-654-01	WASHER (LIMITER)	
255	4-929-721-01	SHAFT		269	3-659-338-00	SPRING, COMPRESSION	
256	4-927-620-01	GEAR (P)		270	4-929-729-01	CAM (B)	
257	4-927-628-01	GEAR (C)		271	4-929-727-01	CAM (A)	
258	4-929-724-01	PULLEY (B)		272	X-4929-703-1	ARM ASSY, SWING	
259	7-624-105-04	STOP RING 2.3, TYPE -E		911	1-535-832-11	(EXCEPT FOR AUS)...JUMPER, FILM (WITH TERMINAL)	
260	4-927-649-01	BELT					
261	4-929-723-01	GUIDE (T)		912	1-634-461-11	PC BOARD, LOADING	
262	*4-917-583-21	BRACKET, YOKE		M251	A-4608-362-A	MOTOR (L) ASSY (LOADING)	
263	X-4929-709-1	SHASSIS (MD) ASSY		S291	1-571-924-11	SWITCH, LEAF (LOAD OUT)	
264	7-621-775-10	SCREW +B 2.6X4		S292	1-571-924-11	SWITCH, LEAF (LOAD IN)	

7-7. CD SECTION (2)
(BU-5BD3)

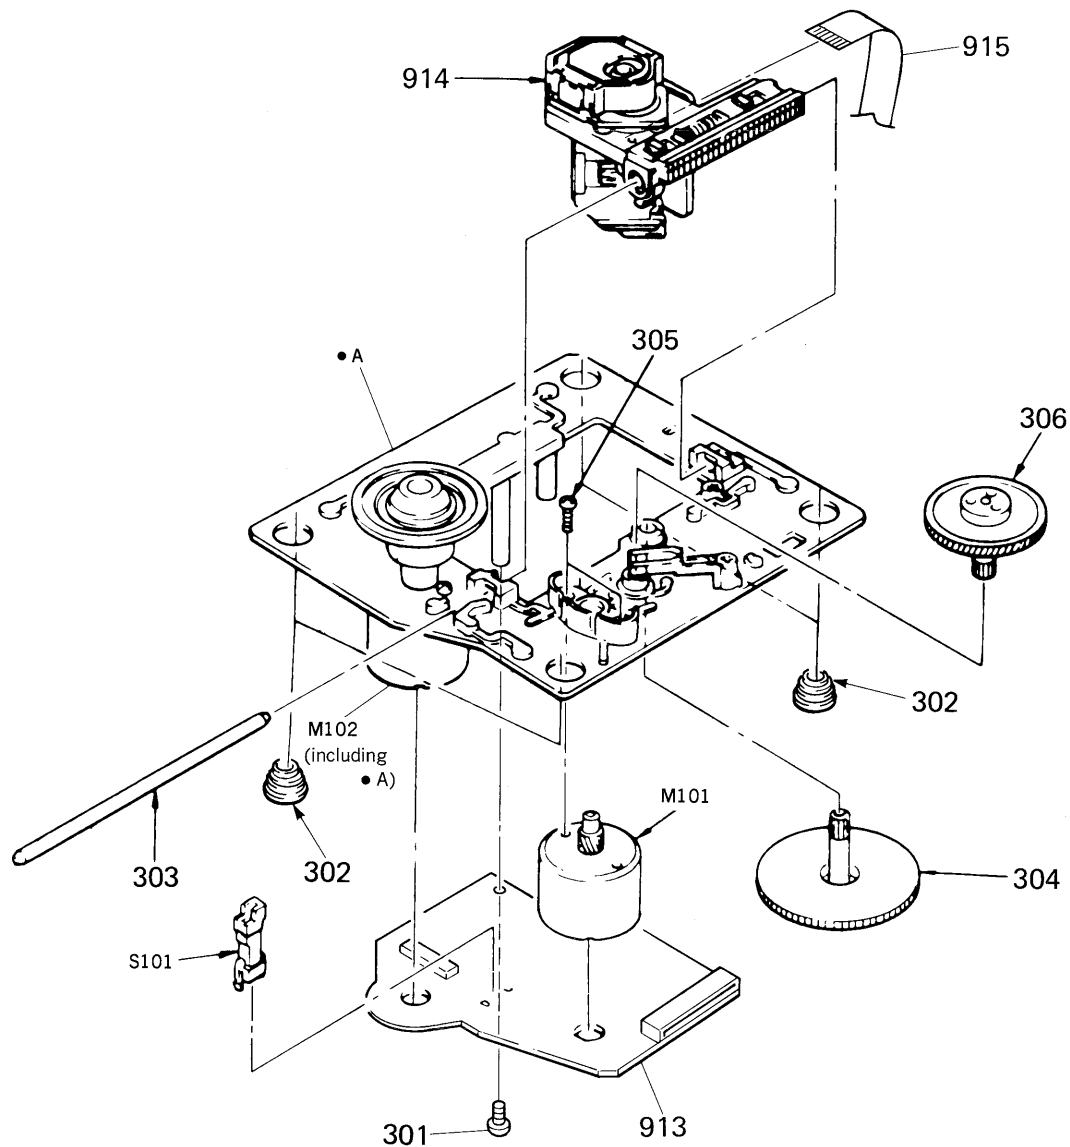

<p>Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p>	<p>Note: Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
301	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		913	*A-4617-371-A	MOUNTED PCB, BD	
302	4-933-126-01	INSULATOR (A)		914	 A-8-848-144-11	DEVICE, OPTICAL KSS-240A	
303	4-917-565-01	SHAFT, SLED		915	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
304	4-917-564-01	GEAR (P), FLATNESS		M101	X-4917-504-1	MOTOR ASSY (SLED)	
305	7-621-255-15	SCREW +P 2X3		M102	X-4917-523-3	MOTOR ASSY (SPINDLE)	
306	4-917-567-01	GEAR (M)		S101	1-572-085-11	(BD)...SWITCH, LEAF (LIMIT IN)	

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:MF: μ F, PF: μ F.**RESISTORS**

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORSIn each case, U: μ , for example:
 UA...: μ A..., UPA...: μ PA...,
 UPC...: μ PC, UPD...: μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
901	*1-634-474-11	PC BOARD, TRANSFORMER
902	*1-634-479-11	PC BOARD, POWER
903	*A-4334-168-A	(AUS).....MOUNTED PCB, DISPLAY
	*A-4334-169-A	(US,Canadian)...MOUNTED PCB, DISPLAY
	*A-4334-170-A	(AEP,UK).....MOUNTED PCB, DISPLAY
	*A-4334-171-A	(IT).....MOUNTED PCB, DISPLAY
	*A-4334-172-A	(WG).....MOUNTED PCB, DISPLAY
	*A-4334-178-A	(E,EA).....MOUNTED PCB, DISPLAY
904	*1-634-476-11	PC BOARD, VR
905	*A-4334-160-A	(E,EA,AUS).....MOUNTED PCB, MAIN
	*A-4334-161-A	(AEP,UK).....MOUNTED PCB, MAIN
	*A-4334-162-A	(WG,IT).....MOUNTED PCB, MAIN
	*A-4334-164-A	(US,Canadian)...MOUNTED PCB, MAIN
906	*1-634-477-11	PC BOARD, SW
907	*1-634-481-11	PC BOARD, JACK
908	*1-624-148-11	(DECK A)...PC BOARD, LEAF SW (A)
	*1-624-148-11	(DECK B)...PC BOARD, LEAF SW (B)
909	*1-624-146-11	(DECK B)...PC BOARD, MD-B
910	*1-624-147-11	(DECK A)...PC BOARD, MD-A
911	1-535-832-11	(EXCEPT FOR AUS)...JUMPER, FILM (WITH TERMINAL)
912	1-634-461-11	PC BOARD, LOADING
913	*A-4617-371-A	MOUNTED PCB, BD
914	Δ 8-848-144-11	DEVICE, OPTICAL KSS-240A
915	1-575-001-11	WIRE, FLAT TYPE (12 CORE)
916	*1-634-480-11	PC BOARD, CAPACITOR
917	*1-634-475-11	PC BOARD, JUMPER
918	1-533-213-31	HOLDER, FUSE
919	1-575-675-11	WIRE, FLAT TYPE (14 CORE)
920	1-575-674-11	WIRE, FLAT TYPE (8 CORE)
921	1-575-672-11	WIRE, FLAT TYPE (13 CORE)
922	1-575-673-11	WIRE, FLAT TYPE (15 CORE)
923	*1-634-870-11	PC BOARD, SHIELD
924	*1-533-213-31	(E,EA,AUS)...HOLDER, FUSE
925	*1-562-908-11	(WG,IT)...CONNECTOR, FEMALE(NO SHIELD)
ANT1	1-501-270-00	(H7)...ANTENNA, TELESCOPIC
C1	1-162-195-31	(H7:AEP,E,EA,AUS) ...CERAMIC 4.7PF 10% 50V
C2	1-123-875-11	ELECT 10MF 20% 50V
C3	1-161-379-00	CERAMIC 0.01MF 30% 16V
C4	1-162-294-31	CERAMIC 0.001MF 10% 50V
C5	1-161-379-00	CERAMIC 0.01MF 30% 16V
C6	1-164-159-11	(E,EA,AUS)...CERAMIC 0.1MF 50V
C7	1-164-159-11	(EXCEPT FOR US,Canadian) ...CERAMIC 0.1MF 50V

Ref.No.	Part No.	Description
C8	1-161-379-00	(AEP,UK,WG,IT) ...CERAMIC 0.01MF 30% 16V
C9	1-102-120-00	(AEP,UK,WG,IT) ...CERAMIC 0.0018MF 10% 50V
C10	1-161-374-11	(AEP,UK,WG,IT) ...CERAMIC 0.0015MF 30% 16V
C22	1-102-947-00	(E,EA,AUS)...CERAMIC 10PF 0.5PF 50V
C23	1-136-162-00	(E,EA,AUS)...FILM 0.056PF 5% 50V
C24	1-136-161-00	(E,EA,AUS)...FILM 0.047PF 5% 50V
C41A	1-162-289-31	CERAMIC 390PF 10% 50V
C41B	1-162-289-31	CERAMIC 390PF 10% 50V
C42A	1-136-157-00	FILM 0.022MF 5% 50V
C42B	1-136-157-00	FILM 0.022MF 5% 50V
C43A	1-124-282-00	ELECT 22MF 20% 25V
C43B	1-124-282-00	ELECT 22MF 20% 25V
C44B	1-162-288-31	CERAMIC 330PF 10% 50V
C45B	Δ 1-136-273-91	FILM 75PF 5% 630V
C47B	1-162-209-31	CERAMIC 27PF 5% 50V
C48A	1-162-217-31	CERAMIC 56PF 5% 50V
C48B	1-162-217-31	CERAMIC 56PF 5% 50V
C51	1-164-056-11	CERAMIC 27PF 5% 50V
C52	1-164-056-11	CERAMIC 27PF 5% 50V
C53	1-161-379-00	CERAMIC 0.01MF 30% 16V
C54	1-161-379-00	CERAMIC 0.01MF 30% 16V
C55	1-161-379-00	CERAMIC 0.01MF 30% 16V
C56	1-161-379-00	CERAMIC 0.01MF 30% 16V
C57	1-161-379-00	CERAMIC 0.01MF 30% 16V
C58	1-123-875-11	ELECT 10MF 20% 50V
C59	1-161-379-00	CERAMIC 0.01MF 30% 16V
C60	1-124-477-11	ELECT 47MF 20% 25V
C61	1-124-925-11	ELECT 2.2MF 20% 50V
C61A	1-162-289-31	CERAMIC 390PF 10% 50V
C61B	1-162-289-31	CERAMIC 390PF 10% 50V
C62	1-136-153-00	FILM 0.01MF 5% 50V
C62A	1-136-157-00	FILM 0.022MF 5% 50V
C62B	1-136-157-00	FILM 0.022MF 5% 50V
C63	1-124-463-00	ELECT 0.1MF 20% 50V
C63A	1-124-282-00	ELECT 22MF 20% 25V
C63B	1-124-282-00	ELECT 22MF 20% 25V
C64	1-124-902-00	(AEP,UK,WG,IT) ...ELECT 0.47MF 20% 50V
C64B	1-162-288-31	CERAMIC 330PF 10% 50V
C65	1-136-157-00	(AEP,UK,WG,IT) ...FILM 0.022MF 5% 50V
C65B	1-136-273-91	FILM 75PF 5% 630V

Ref.No.	Part No.	Description				
C66	1-136-157-00	(AEP,UK,WG,IT)				
		...FILM	0.022MF	5%	50V	
C67B	1-162-209-31	CERAMIC	27PF	5%	50V	
C68A	1-162-217-31	CERAMIC	56PF	5%	50V	
C68B	1-162-217-31	CERAMIC	56PF	5%	50V	
C81	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C81A	1-126-101-11	ELECT	100MF	20%	16V	
C81B	1-126-101-11	ELECT	100MF	20%	16V	
C82	1-124-472-11	ELECT	470MF	20%	10V	
C82A	1-126-101-11	ELECT	100MF	20%	16V	
C82B	1-126-101-11	ELECT	100MF	20%	16V	
C83	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C83B	1-124-791-11	ELECT	1MF	20%	50V	
C84	1-123-875-11	ELECT	10MF	20%	50V	
C84B	1-124-925-11	ELECT	2.2MF	20%	50V	
C85	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C85B	1-130-480-00	MYLAR	0.0056MF	5%	50V	
C86	1-162-282-31	CERAMIC	100PF	10%	50V	
C86B	1-130-476-00	MYLAR	0.0027MF	5%	50V	
C87	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C87B	1-130-476-00	MYLAR	0.0027MF	5%	50V	
C88	1-123-875-11	ELECT	10MF	20%	50V	
C88B	1-136-562-11	FILM	0.0082MF	5%	630V	
C89	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C89B	1-161-494-00	CERAMIC	0.022MF		25V	
C90	1-124-477-11	ELECT	47MF	20%	25V	
C91	1-162-294-31	CERAMIC	0.001MF	10%	50V	
C92	1-162-294-31	CERAMIC	0.001MF	10%	50V	
C93	1-161-375-00	CERAMIC	0.0022MF	30%	16V	
C94	1-161-375-00	CERAMIC	0.0022MF	30%	16V	
C95	1-124-791-11	ELECT	1MF	20%	50V	
C96	1-124-791-11	ELECT	1MF	20%	50V	
C97	1-124-791-11	ELECT	1MF	20%	50V	
C98	1-124-791-11	ELECT	1MF	20%	50V	
C99	1-136-154-00	(EXCEPT FOR US,Canadian)				
		...FILM	0.012MF	5%	50V	
C99	1-136-155-00	(US,Canadian)				
		...CERAMIC	0.015MF	5%	50V	
C100	1-136-154-00	(EXCEPT FOR US,Canadian)				
		...FILM	0.012MF	5%	50V	
C100	1-136-155-00	(US,Canadian)				
		...CERAMIC	0.015MF	5%	50V	
C101	1-123-875-11	ELECT	10MF	20%	50V	
C101	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C102	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C102	1-163-989-11	(BD)...CERAMIC CHIP	0.033MF	10%	25V	
C103	1-124-463-00	ELECT	0.1MF	20%	50V	
C103	1-126-094-11	(BD)...ELECT	4.7MF	20%	16V	
C104	1-124-791-11	ELECT	1MF	20%	50V	
C104	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C105	1-124-791-11	ELECT	1MF	20%	50V	
C105	1-126-154-11	(BD)...ELECT	47MF	20%	6.3V	
C106	1-124-791-11	ELECT	1MF		20%	50V
C106	1-126-154-11	(BD)...ELECT		47MF	20%	6.3V
C107	1-126-154-11	(BD)...ELECT		47MF	20%	6.3V
C107	1-162-282-31	(WG,IT)...CERAMIC	100PF	10%	50V	
C108	1-162-211-31	(EXCEPT FOR WG,IT)				
		...CERAMIC	33PF	5%	50V	
C108	1-162-291-31	(WG,IT)...CERAMIC	560PF	10%	50V	
C108	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C109	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C109	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C110	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C110	1-163-989-11	(BD)...CERAMIC CHIP	0.033MF	10%	25V	
C111	1-124-925-11	ELECT	2.2MF	20%	50V	
C111	1-131-367-00	(BD)...TANTALUM	22MF	20%	16V	
C112	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C112	1-164-232-11	(BD)...CERAMIC CHIP	0.01MF	10%	50V	
C113	1-161-379-00	(WG,IT)...CERAMIC	0.01MF	30%	16V	
C113	1-164-232-11	(BD)...CERAMIC CHIP	0.01MF	10%	50V	
C114	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C114	1-164-161-11	(BD)...CERAMIC CHIP	0.0022MF	10%	50V	
C115	1-164-159-11	CERAMIC	0.1MF		50V	
C115	1-164-161-11	(BD)...CERAMIC CHIP	0.0022MF	10%	50V	
C116	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C116	1-164-161-11	(BD)...CERAMIC CHIP	0.0022MF	10%	50V	
C117	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C118	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C119	1-164-161-11	(BD)...CERAMIC CHIP	0.0022MF	10%	50V	
C120	1-163-989-11	(BD)...CERAMIC CHIP	0.033MF	10%	25V	
C151	1-163-019-00	(BD)...CERAMIC CHIP	0.0068MF	10%	50V	
C152	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C153	1-163-006-11	(BD)...CERAMIC CHIP	560PF	10%	50V	
C154	1-164-161-11	(BD)...CERAMIC CHIP	0.0022MF	10%	50V	
C155	1-163-023-00	(BD)...CERAMIC CHIP	0.015MF	10%	50V	
C171	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C172	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C173	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C174	1-163-038-00	(BD)...CERAMIC CHIP	0.1MF		25V	
C201	1-164-159-11	CERAMIC	0.1MF		50V	
C203	1-164-159-11	CERAMIC	0.1MF		50V	
C211	1-136-161-00	FILM	0.047MF	5%	50V	
C212	1-161-374-11	CERAMIC	0.0015MF	30%	16V	
C213	1-161-379-00	CERAMIC	0.01MF	30%	16V	
C214	1-124-902-00	ELECT	0.47MF	20%	50V	
C215	1-164-159-11	CERAMIC	0.1MF		50V	
C221	1-162-207-31	CERAMIC	22PF	5%	50V	
C222	1-162-207-31	CERAMIC	22PF	5%	50V	
C223	1-124-443-00	ELECT	100MF	20%	10V	
C225	1-136-165-00	FILM	0.1MF	5%	50V	
C229	1-123-875-11	ELECT	10MF	20%	50V	
C231	1-161-374-11	CERAMIC	0.0015MF	30%	16V	
C232	1-161-374-11	CERAMIC	0.0015MF	30%	16V	
C233	1-162-286-31	CERAMIC	220PF	10%	50V	
C234	1-162-286-31	CERAMIC	220PF	10%	50V	
C235	1-124-791-11	ELECT	1MF	20%	50V	

Ref.No.	Part No.	Description					Ref.No.	Part No.	Description				
C236	1-124-791-11	ELECT	1MF	20%	50V		C548	1-164-159-11	CERAMIC	0.1MF		50V	
C237	1-123-875-11	ELECT	10MF	20%	50V		C549	1-164-159-11	CERAMIC	0.1MF		50V	
C238	1-123-875-11	ELECT	10MF	20%	50V		C552	1-162-294-31	CERAMIC	0.001MF	10%	50V	
C249	1-126-176-11	ELECT	220MF	20%	10V		C554	1-162-289-31	CERAMIC	390PF	10%	50V	
C401	1-162-282-31	CERAMIC	100PF	10%	50V		C555	1-161-329-00	CERAMIC	0.0068MF	30%	16V	
C402	1-162-282-31	CERAMIC	100PF	10%	50V		C556	1-162-294-31	CERAMIC	0.001MF	10%	50V	
C403	1-162-290-31	CERAMIC	470PF	10%	50V		C557	1-161-494-00	CERAMIC	0.022MF		25V	
C410	1-126-157-11	ELECT	10MF	20%	16V		C558	1-161-327-00	CERAMIC	0.0033MF	30%	16V	
C416	1-124-463-00	ELECT	0.1MF	20%	50V		C559	1-164-159-11	CERAMIC	0.1MF		50V	
C417	1-126-157-11	ELECT	10MF	20%	16V		C560	1-162-306-11	CERAMIC	0.01MF	20%	16V	
C418	1-126-157-11	ELECT	10MF	20%	16V		C561	1-124-464-11	ELECT	0.22MF	20%	50V	
C419	1-126-157-11	ELECT	10MF	20%	16V		C562	1-161-494-00	CERAMIC	0.022MF		25V	
C420	1-126-157-11	ELECT	10MF	20%	16V		C563	1-126-160-11	ELECT	1MF	20%	50V	
C421	1-126-157-11	ELECT	10MF	20%	16V		C564	1-136-163-00	FILM	0.068MF	5%	50V	
C422	1-126-157-11	ELECT	10MF	20%	16V		C565	1-136-163-00	FILM	0.068MF	5%	50V	
C423	1-164-159-11	CERAMIC	0.1MF		50V		C566	1-162-306-11	CERAMIC	0.01MF	20%	16V	
C451	1-162-282-31	CERAMIC	100PF	10%	50V		C569	1-164-159-11	CERAMIC	0.1MF		50V	
C452	1-162-282-31	CERAMIC	100PF	10%	50V		C570	1-164-159-11	CERAMIC	0.1MF		50V	
C453	1-162-290-31	CERAMIC	470PF	10%	50V		C571	1-126-157-11	ELECT	10MF	20%	16V	
C460	1-126-157-11	ELECT	10MF	20%	16V		C572	1-126-157-11	ELECT	10MF	20%	16V	
C471	1-162-294-31	CERAMIC	0.001MF	10%	50V		C573	1-126-094-11	ELECT	4.7MF	20%	35V	
C472	1-162-294-31	CERAMIC	0.001MF	10%	50V		C574	1-126-157-11	ELECT	10MF	20%	16V	
C473	1-162-294-31	CERAMIC	0.001MF	10%	50V		C575	1-161-374-11	CERAMIC	0.0015MF	30%	16V	
C474	1-162-215-31	CERAMIC	47PF	5%	50V		C576	1-126-153-11	ELECT	22MF	20%	6.3V	
C475	1-164-159-11	CERAMIC	0.1MF		50V		C577	1-126-153-11	ELECT	22MF	20%	6.3V	
C491	1-164-159-11	CERAMIC	0.1MF		50V		C578	1-124-257-00	ELECT	2.2MF	20%	50V	
C492	1-164-159-11	CERAMIC	0.1MF		50V		C579	1-124-257-00	ELECT	2.2MF	20%	50V	
C493	1-164-159-11	CERAMIC	0.1MF		50V		C580	1-124-465-00	ELECT	0.47MF	20%	50V	
C494	1-164-159-11	CERAMIC	0.1MF		50V		C581	1-164-159-11	CERAMIC	0.1MF		50V	
C502	1-162-294-31	CERAMIC	0.001MF	10%	50V		C582	1-164-159-11	CERAMIC	0.1MF		50V	
C504	1-162-289-31	CERAMIC	390PF	10%	50V		C583	1-161-494-00	CERAMIC	0.022MF		25V	
C505	1-161-329-00	CERAMIC	0.0068MF	30%	16V		C584	1-161-494-00	CERAMIC	0.022MF		25V	
C506	1-162-294-31	CERAMIC	0.001MF	10%	50V		C585	1-161-377-00	CERAMIC	0.0047MF	30%	16V	
C507	1-161-494-00	CERAMIC	0.022MF		25V		C586	1-161-374-11	CERAMIC	0.0015MF	30%	16V	
C508	1-161-327-00	CERAMIC	0.0033MF	30%	16V		C587	1-124-257-00	ELECT	2.2MF	20%	50V	
C509	1-164-159-11	CERAMIC	0.1MF		50V		C588	1-124-257-00	ELECT	2.2MF	20%	50V	
C510	1-162-306-11	CERAMIC	0.01MF	20%	16V		C589	1-124-257-00	ELECT	2.2MF	20%	50V	
C511	1-124-464-11	ELECT	0.22MF	20%	50V		C590	1-124-257-00	ELECT	2.2MF	20%	50V	
C512	1-161-494-00	CERAMIC	0.022MF		25V		C591	1-124-257-00	ELECT	2.2MF	20%	50V	
C513	1-126-160-11	ELECT	1MF	20%	50V		C592	1-162-199-31	CERAMIC	10PF	5%	50V	
C514	1-136-163-00	FILM	0.068MF	5%	50V		C593	1-162-199-31	CERAMIC	10PF	5%	50V	
C515	1-136-163-00	FILM	0.068MF	5%	50V		C594	1-102-959-00	CERAMIC	22PF	5%	50V	
C521	1-162-286-31	CERAMIC	220PF	10%	50V		C595	1-102-959-00	CERAMIC	22PF	5%	50V	
C522	1-162-286-31	CERAMIC	220PF	10%	50V		C596	1-125-486-11	ELECT	0.22F		5.5V	
C523	1-162-286-31	CERAMIC	220PF	10%	50V		C597	1-126-094-11	ELECT	4.7MF	20%	35V	
C524	1-162-286-31	CERAMIC	220PF	10%	50V		C601	1-136-161-00	FILM	0.047MF	5%	50V	
C525	1-162-286-31	CERAMIC	220PF	10%	50V		C602	1-124-925-11	ELECT	2.2MF	20%	50V	
C528	1-123-875-11	ELECT	10MF	20%	50V		C603	1-124-925-11	ELECT	2.2MF	20%	50V	
C529	1-125-447-11	CAP,DOUBLE LAYERS	1.0F		5.5V		C604	1-162-294-31	CERAMIC	0.001MF	10%	50V	
C539	1-162-282-31	CERAMIC	100PF	10%	50V		C611	1-162-217-31	CERAMIC	56PF	5%	50V	
C540	1-162-282-31	CERAMIC	100PF	10%	50V		C612	1-136-157-00	FILM	0.022MF	5%	50V	
C541	1-162-282-31	CERAMIC	100PF	10%	50V		C613	1-124-925-11	ELECT	2.2MF	20%	50V	
C542	1-162-294-31	CERAMIC	0.001MF	10%	50V		C614	1-124-925-11	ELECT	2.2MF	20%	50V	
C543	1-162-294-31	CERAMIC	0.001MF	10%	50V		C615	1-124-443-00	ELECT	100MF	20%	10V	
C544	1-162-294-31	CERAMIC	0.001MF	10%	50V		C622	1-164-159-11	CERAMIC	0.1MF		50V	
C545	1-162-294-31	CERAMIC	0.001MF	10%	50V		C651	1-136-161-00	FILM	0.047MF	5%	50V	
C546	1-162-294-31	CERAMIC	0.001MF	10%	50V		C652	1-124-925-11	ELECT	2.2MF	20%	50V	
C547	1-162-294-31	CERAMIC	0.001MF	10%	50V		C653	1-124-925-11	ELECT	2.2MF	20%	50V	



Ref.No.	Part No.	Description							
C654	1-162-294-31	CERAMIC	0.001MF	10%	50V				
C656	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C662	1-126-153-11	ELECT	22MF	20%	6.3V				
C663	1-124-925-11	ELECT	2.2MF	20%	50V				
C671	1-164-159-11	CERAMIC	0.1MF		50V				
C672	1-136-745-11	FILM	0.47MF	5%	50V				
C673	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C674	1-164-159-11	CERAMIC	0.1MF		50V				
C675	1-164-159-11	CERAMIC	0.1MF		50V				
C677	1-164-159-11	CERAMIC	0.1MF		50V				
C701	1-162-290-31	CERAMIC	470PF	10%	50V				
C702	1-162-290-31	CERAMIC	470PF	10%	50V				
C703	1-124-254-00	ELECT	0.68MF	20%	50V				
C704	1-123-875-11	ELECT	10MF	20%	50V				
C705	1-123-875-11	ELECT	10MF	20%	50V				
C706	1-124-902-00	ELECT	0.47MF	20%	50V				
C731	1-162-282-31	CERAMIC	100PF	10%	50V				
C732	1-162-282-31	CERAMIC	100PF	10%	50V				
C733	1-130-474-00	(AEP,UK,WG,IT) ...MYLAR	0.0018MF	5%	50V				
C734	1-130-480-00	(AEP,UK,WG,IT) ...MYLAR	0.0056MF	5%	50V				
C735	1-123-875-11	(AEP,UK,WG,IT) ...ELECT	10MF	20%	50V				
C736	1-124-791-11	(AEP,UK,WG,IT) ...ELECT	1MF	20%	50V				
C743	1-164-159-11	CERAMIC	0.1MF		50V				
C751	1-162-290-31	CERAMIC	470PF	10%	50V				
C752	1-162-290-31	CERAMIC	470PF	10%	50V				
C753	1-124-254-00	ELECT	0.68MF	20%	50V				
C754	1-123-875-11	ELECT	10MF	20%	50V				
C755	1-123-875-11	ELECT	10MF	20%	50V				
C756	1-124-902-00	ELECT	0.47MF	20%	50V				
C781	1-162-282-31	CERAMIC	100PF	10%	50V				
C782	1-162-282-31	CERAMIC	100PF	10%	50V				
C783	1-130-474-00	(AEP,UK,WG,IT) ...MYLAR	0.0018MF	5%	50V				
C784	1-130-480-00	(AEP,UK,WG,IT) ...MYLAR	0.0056MF	5%	50V				
C785	1-123-875-11	(AEP,UK,WG,IT) ...ELECT	10MF	20%	50V				
C786	1-124-791-11	(AEP,UK,WG,IT) ...ELECT	1MF	20%	50V				
C791	1-123-875-11	ELECT	10MF	20%	50V				
C792	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C793	1-123-875-11	ELECT	10MF	20%	50V				
C794	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C797	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C798A	1-161-379-00	CERAMIC	0.01MF	30%	16V				
C798B	1-130-475-00	(AEP,UK,WG,IT) ...MYLAR	0.0022MF	5%	50V				
C799	1-130-471-00	(AEP,UK,WG,IT) ...MYLAR	0.001MF	5%	50V				
C801	1-123-875-11	ELECT	10MF	20%	50V				
C802	1-162-290-31	CERAMIC	470PF	10%	50V				
C803	1-126-233-11	ELECT	22MF	20%	50V				
C804	1-164-159-11	CERAMIC	0.1MF		50V				
C805	1-164-159-11	CERAMIC	0.1MF		50V				
C851	1-123-875-11	ELECT	10MF	20%	50V				
C852	1-162-290-31	CERAMIC	470PF	10%	50V				
C853	1-126-233-11	ELECT	22MF	20%	50V				
C854	1-164-159-11	CERAMIC	0.1MF		50V				
C855	1-164-159-11	CERAMIC	0.1MF		50V				
C871	△ 1-124-618-11	ELECT	2200MF	20%	35V				
C872	△ 1-124-618-11	ELECT	2200MF	20%	35V				
C873	1-124-120-11	ELECT	220MF	20%	16V				
C874	△ 1-124-484-11	ELECT	220MF	20%	35V				
C875	△ 1-123-875-11	ELECT	10MF	20%	50V				
C876	1-123-875-11	ELECT	10MF	20%	50V				
C877	△ 1-123-875-11	ELECT	10MF	20%	50V				
C878	△ 1-124-910-11	ELECT	47MF	20%	50V				
C879	△ 1-124-910-11	ELECT	47MF	20%	50V				
C880	1-124-910-11	ELECT	47MF	20%	50V				
C901	1-164-159-11	CERAMIC	0.1MF		50V				
C902	1-164-159-11	CERAMIC	0.1MF		50V				
C903	1-126-160-11	ELECT	1MF	20%	50V				
C905	△ 1-124-122-11	ELECT	100MF	20%	50V				
C906	△ 1-124-556-11	ELECT	2200MF	20%	16V				
C907	1-124-572-11	ELECT	100MF	20%	63V				
C909	1-126-094-11	ELECT	4.7MF	20%	35V				
C911	1-126-094-11	ELECT	4.7MF	20%	35V				
C912	1-126-157-11	ELECT	10MF	20%	16V				
C913	△ 1-126-094-11	ELECT	4.7MF	20%	35V				
C915	1-126-094-11	ELECT	4.7MF	20%	35V				
C916	1-126-094-11	ELECT	4.7MF	20%	35V				
C917	1-126-094-11	ELECT	4.7MF	20%	35V				
C920	1-164-159-11	CERAMIC	0.1MF		50V				
C921	1-164-159-11	CERAMIC	0.1MF		50V				
C922	△ 1-126-094-11	ELECT	4.7MF	20%	35V				
C996	1-126-094-11	ELECT	4.7MF	20%	35V				
C997	1-124-791-11	ELECT	1MF	20%	50V				
C998	1-126-154-11	ELECT	47MF	20%	6.3V				
C999	1-123-875-11	ELECT	10MF	20%	50V				
CB801	△ 1-532-564-00	BREAKER, CIRCUIT (2.2A)							
CB851	△ 1-532-564-00	BREAKER, CIRCUIT (2.2A)							
CF1	1-567-389-11	FILTER, CERAMIC 10.7MHz							
CF2	1-567-389-11	(WG,IT)...FILTER, CERAMIC 10.7MHz							
CF81	1-567-389-11	FILTER, CERAMIC 10.7MHz							
CN101	1-568-796-11	(BD)...SOCKET, CONNECTOR 22P							
CN102	1-568-795-11	(BD)...SOCKET, CONNECTOR 12P							
CN201	*1-569-155-11	PLUG, CONNECTOR 10P							
CN202	1-568-802-11	SOCKET, CONNECTOR 19P							
CN203	*1-569-156-11	SOCKET, CONNECTOR 10P							
CN253	*1-564-339-71	PIN, CONNECTOR 5P							
CN291	*1-564-498-11	PIN, CONNECTOR 5P							
CN301	1-569-225-11	SOCKET, CONNECTOR 14P							
CN401A	*1-568-851-11	SOCKET, CONNECTOR 8P							
CN401B	*1-569-418-11	PIN, CONNECTOR 13P							
CN402	*1-568-856-11	SOCKET, CONNECTOR 13P							
CN403	*1-568-827-11	SOCKET, CONNECTOR 8P							
CN404	*1-564-720-11	PIN, CONNECTOR 4P							
CN501	*1-569-156-11	SOCKET, CONNECTOR 10P							
CN502	*1-569-156-11	SOCKET, CONNECTOR 10P							
CN503	*1-509-931-11	SOCKET, CONNECTOR 13P							


Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
CN504	1-564-336-11	PIN, CONNECTOR 2P
CN601	1-569-511-11	SOCKET, CONNECTOR 14P
CN701	*1-569-155-11	PLUG, CONNECTOR 10P
CN702	*1-569-155-11	PLUG, CONNECTOR 10P
CN703	*1-568-832-11	SOCKET, CONNECTOR 13P
CN704	*1-568-834-11	SOCKET, CONNECTOR 15P
CN705A	1-564-336-00	PIN, CONNECTOR 2P
CN705B	1-564-704-11	(AEP,UK,WG,IT)...PIN, CONNECTOR 2P
CN801	*1-508-694-00	PIN, CONNECTOR 8P
CN802	*1-564-706-11	PIN, CONNECTOR 4P
CN901A	*1-526-931-11	(AEP,UK,WG,IT)...INLET, AC (~AC IN)
CN901A	*1-526-930-11	(US,Canadian,E,EA,AUS)...INLET, AC (~AC IN)
CN902	*1-568-858-11	SOCKET, CONNECTOR 15P
CN903	*1-565-484-11	CONNECTOR, BOARD TO BOARD 8P
CNP11A	1-564-501-11	PIN, CONNECTOR 8P
CNP11B	1-506-615-11	PIN, CONNECTOR 9P
CNP12A	*1-564-337-00	PIN, CONNECTOR 3P
CNP12B	*1-564-337-61	PIN, CONNECTOR 3P
CNP13A	*1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P
CNP13B	*1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P
CNP81A	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P
CNP81B	*1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P
CNP82A	*1-564-339-00	PIN, CONNECTOR 5P
CNP82B	*1-564-339-61	PIN, CONNECTOR 5P
CNP83B	*1-564-338-61	PIN, CONNECTOR 4P
CNP84B	*1-564-704-11	(AEP,UK,WG,IT)...PIN, CONNECTOR (SMALL TYPE) 2P
CP201	1-233-217-11	COMPOSITION CIRCUIT BLOCK (100PX5)
CP502	1-233-207-11	COMPOSITION CIRCUIT BLOCK (220PX13)
CP503	1-233-207-11	COMPOSITION CIRCUIT BLOCK (220PX13)
CP504	1-233-207-11	COMPOSITION CIRCUIT BLOCK (220PX13)
CT21	1-141-227-00	(E,EA,AUS)...CAP, TRIMMER
CT22	1-141-227-00	(E,EA,AUS)...CAP, TRIMMER
D11A	8-719-107-94	DIODE 1SS202-1
D11B	8-719-107-94	DIODE 1SS202-1
D21	8-719-923-64	DIODE (E,EA,AUS)...DIODE KV1236-D
D81	8-719-912-20	DIODE 1SS120
D81B	8-719-107-94	DIODE 1SS202-1
D201	8-719-010-34	ZENER DIODE UZ-4.7BSC
D205	8-719-912-20	DIODE 1SS120
D206	8-719-984-16	LED GL-1HY112-CD
D207	8-719-984-17	LED GL-1EG112-CD
D301	8-719-984-17	LED GL-1EG112-CD
D302	8-719-984-17	LED GL-1EG112-CD
D303	8-719-984-17	LED GL-1EG112-CD
D304	8-719-984-17	LED GL-1EG112-CD
D305	8-719-984-17	LED GL-1EG112-CD
D306	8-719-984-15	LED GL-1HD112-DE
D307	8-719-984-15	LED GL-1HD112-DE
D308	8-719-984-15	LED GL-1HD112-DE
D309	8-719-984-16	LED GL-1HY112-CD
D406	8-719-912-20	DIODE 1SS120
D522	8-719-312-81	LED SEL4914R-LC05

Ref.No.	Part No.	Description
D523	8-719-312-81	LED SEL4914R-LC05
D571	8-719-312-80	LED SEL4214R-LC05
D574	8-719-912-20	DIODE 1SS120
D576	8-719-912-20	DIODE 1SS120
D577	8-719-912-20	DIODE 1SS120
D578	8-719-912-20	DIODE 1SS120
D579	8-719-912-20	DIODE 1SS120
D580	8-719-912-20	DIODE 1SS120
D581	8-719-912-20	DIODE 1SS120
D582	8-719-912-20	DIODE 1SS120
D583	8-719-912-20	DIODE 1SS120
D585	8-719-912-20	(US,Canadian,E,EA,AUS)...DIODE 1SS120
D588	8-719-912-20	(EXCEPT FOR US,Canadian,IT) ...DIODE 1SS120
D589	8-719-912-20	(IT)...DIODE 1SS120
D590	8-719-912-20	(E,EA,AUS)...DIODE 1SS120
D591	8-719-912-20	DIODE 1SS120
D592	8-719-912-20	DIODE 1SS120
D593	8-719-912-20	DIODE 1SS120
D594	8-719-912-20	DIODE 1SS120
D595	8-719-912-20	DIODE 1SS120
D598	8-719-001-21	ZENER DIODE UZL-9H1
D601	8-719-912-20	DIODE 1SS120
D602	8-719-200-82	DIODE 11ES2
D603	8-719-200-82	DIODE 11ES2
D604	8-719-912-20	DIODE 1SS120
D605	8-719-200-82	DIODE 11ES2
D606	8-719-010-15	ZENER DIODE UZ-3.0BS
D701	8-719-000-90	ZENER DIODE UZL-7M3
D702	8-719-000-90	ZENER DIODE UZL-7M3
D703	8-719-933-36	ZENER DIODE HZS6B1L
D741	8-719-912-20	DIODE 1SS120
D742	8-719-912-20	DIODE 1SS120
D743	8-719-912-20	DIODE 1SS120
D744	8-719-912-20	DIODE 1SS120
D745	8-719-912-20	DIODE 1SS120
D746	8-719-912-20	DIODE 1SS120
D801	8-719-912-20	DIODE 1SS120
D901	8-719-912-20	DIODE 1SS120
D902	8-719-912-20	DIODE 1SS120
D903	8-719-200-82	DIODE 11ES2
D904	8-719-200-82	DIODE 11ES2
D907	8-719-200-82	DIODE 11ES2
D908	8-719-200-82	DIODE 11ES2
D909	8-719-312-09	DIODE RBA-402
D910	8-719-002-33	ZENER DIODE UZL-24L
D911	8-719-014-64	ZENER DIODE UZP-5.1BC
D912	8-719-933-36	ZENER DIODE HZS6B1L
DR11A	*1-564-342-11	PIN, CONNECTOR 8P
DR11B	*1-506-503-61	PIN, CONNECTOR 9P
DR12A	*1-564-337-00	PIN, CONNECTOR 3P
DR12B	*1-564-337-61	PIN, CONNECTOR 3P
DR82A	1-564-339-00	PIN, CONNECTOR 5P
DR82B	*1-564-339-61	PIN, CONNECTOR 5P
DR83B	*1-564-338-61	PIN, CONNECTOR 4P

Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
F901	△.1-532-215-00	(E,EA,AUS)...FUSE, TIME-LAG (0.8A)
F901	△.1-532-555-11	(US,Canadian)...FUSE, GLASS TUBE(1.6A)
F902	△.1-532-259-11	(EXCEPT FOR US,Canadian) ...FUSE, GLASS TUBE(1.6A)
F999	△.1-532-783-21	(US,Canadian)...FUSE, MICRO (5A)
FE1	1-465-007-11	(WG,IT)...FRONT END (FM)(4 GANG)
FE1	1-465-283-11	(EXCEPT FOR WG,IT)...FRONT END(2 GANG)
FE2	1-236-461-11	(US,Canadian)...ENCAPSULATED COMPONENT
FE2	1-236-462-11	(AEP,UK,WG,IT)...ENCAPSULATED COMPONENT
FE2	1-236-777-11	(E,EA,AUS)...ENCAPSULATED COMPONENT
FE3	1-236-463-11	(AEP,UK,WG,IT)...ENCAPSULATED COMPONENT
FL81	1-236-465-11	(WG,IT)...ENCAPSULATED COMPONENT
FLT501	1-519-577-11	INDICATOR TUBE, FLUORESCENT
FLT502	1-519-578-11	INDICATOR TUBE, FLUORESCENT
HE1	A-2003-504-A	(DECK B)...CHASSIS ASSY, HEAD (PB/REC/ERASE)
HP1	A-2003-503-A	(DECK A)...PC BOARD ASSY, HEAD (PB)
HRP1	A-2003-504-A	(DECK B)...CHASSIS ASSY, HEAD (PB/REC/ERASE)
IC51	8-759-239-29	IC TC9217P
IC81	8-759-821-45	IC LA1851N
IC81A	8-759-111-44	IC UPC4570C-1
IC81B	8-759-111-44	IC UPC4570C-1
IC101	8-752-037-33	(BD)...IC CXA1372Q
IC102	8-759-821-94	(BD)...IC LA6532M
IC201	8-759-150-19	IC UPD75112CW-064
IC202	8-752-333-31	IC CXD2500Q
IC221	8-752-334-06	IC CXD2551P
IC222	8-759-990-13	IC TDA1543A-S1
IC223	8-759-634-51	IC M5218AP
IC253	8-759-633-65	IC M54641L
IC401	8-759-634-50	IC M5218AL
IC406	8-759-820-62	IC LB1639
IC451	8-759-634-50	IC M5218AL
IC501	8-759-630-99	IC M5226FP
IC502	8-759-634-50	IC M5218AL
IC503	8-759-634-50	IC M5218AL
IC504	8-759-820-07	IC LC7566
IC505	8-759-148-52	IC UPD75212ACW-189
IC506	8-749-920-59	IC A1QH3020S
IC551	8-759-630-99	IC M5226FP
IC601	8-759-040-53	IC MC14053BCP
IC602	8-752-036-57	IC CXA1298AP
IC603	8-759-634-50	IC M5218AL
IC604	8-759-632-54	IC M50964-212SP
IC701	8-752-034-26	IC CXA1101P
IC702	8-759-634-50	IC M5218AL
IC703	8-759-000-49	IC MC14066BCP
IC704	8-759-634-50	(AEP,UK,WG,IT)...IC M5218AL
IC705	8-759-208-08	IC TC4052BPHB
IC706	8-759-605-16	IC M51953BL
IC801	△.8-749-900-95	IC STK-4122MK2
IC901	8-759-602-66	IC M5230L-A
IC999	8-759-821-93	IC LA5601
△ICP999.1-532-783-21	(E,EA,AUS).....FUSE, MICRO (5A)	
△ICP999.1-532-846-21	(AEP,UK,WG,IT)...FUSE, MICRO (5A)	

Ref.No.	Part No.	Description
IFT81	1-404-853-11	TRANSFORMER, IF (CERAMIC FILTER)
IFT82	1-404-807-11	TRANSFORMER, DISCRIMINATOR
J101	1-216-295-00	(BD)...METAL GLAZE 0 5% 1/10W
J102	1-216-295-00	(BD)...METAL GLAZE 0 5% 1/10W
J401	1-562-837-21	JACK (MIX MIC)
J451	1-562-837-21	JACK (HEADPHONES)
J701	1-569-181-11	JACK, PIN 2P (AUX/PHONO)
L1	1-408-425-00	(AEP,UK,WG,IT)...INDUCTOR 220UH
L41B	1-410-780-11	INDUCTOR 27MMH
L61B	1-410-780-11	INDUCTOR 27MMH
L81	1-410-496-11	INDUCTOR 1.5MMH
L83	1-410-489-11	INDUCTOR 390UH
LPF81	1-235-164-00	FILTER, LOW PASS
LPF82	1-235-164-00	FILTER, LOW PASS
M1	X-3343-447-1	(DECK A)...MOTOR ASSY
M2	X-3343-447-1	(DECK B)...MOTOR ASSY
M101	X-4917-504-1	MOTOR ASSY (SLED)
M102	X-4917-523-3	MOTOR ASSY (SPINDLE)
M251	A-4608-362-A	MOTOR (L) ASSY (LOADING)
PM1	1-454-456-11	(DECK A)...SOLENOID, PLUNGER
PM2	1-454-456-11	(DECK B)...SOLENOID, PLUNGER
Q1	8-729-620-19	TRANSISTOR 2SC2724-CD
Q2	8-729-620-19	(WG,IT)...TRANSISTOR 2SC2724-CD
Q3	8-729-900-80	TRANSISTOR DTC114ES
Q4	8-729-900-61	TRANSISTOR DTA114ES
Q5	8-729-900-80	(EXCEPT FOR US,Canadian) ...TRANSISTOR DTC114ES
Q6	8-729-900-80	(EXCEPT FOR US,Canadian) ...TRANSISTOR DTC114ES
Q7	8-729-119-76	(EXCEPT FOR US,Canadian) ...TRANSISTOR 2SA1175-HFE
Q8	8-729-620-05	(EXCEPT FOR US,Canadian) ...TRANSISTOR 2SC2603-EF
Q9	8-729-900-80	(EXCEPT FOR US,Canadian) ...TRANSISTOR DTC114ES
Q11A	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q11B	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q12A	8-719-939-23	PHOTO SENSOR GP-2S09-C
Q12B	8-719-939-23	PHOTO SENCOR GP-2S09-C
Q51	8-729-202-67	TRANSISTOR 2SK246-GR3
Q52	8-729-201-84	TRANSISTOR 2SC3112-B
Q53	8-729-202-67	(AEP,UK,WG,IT)...TRANSISTOR 2SK246-GR3
Q54	8-729-201-84	(AEP,UK,WG,IT)...TRANSISTOR 2SC3112-B
Q81B	8-729-111-29	TRANSISTOR 2SD1616A-K
Q82B	8-729-142-46	TRANSISTOR 2SC2001-LK
Q83B	8-729-142-46	TRANSISTOR 2SC2001-LK
Q101	8-729-620-05	TRANSISTOR 2SC2603-EF
Q101	8-729-901-01	(BD)...TRANSISTOR DTC144EK
Q102	8-729-620-05	TRANSISTOR 2SC2603-EF
Q103	8-729-900-80	TRANSISTOR DTC114ES
Q104	8-729-900-80	TRANSISTOR DTC114ES
Q201	8-729-620-05	TRANSISTOR 2SC2603-EF
Q231	8-729-141-26	TRANSISTOR 2SC3622A-LK
Q232	8-729-141-26	TRANSISTOR 2SC3622A-LK
Q233	8-729-900-65	TRANSISTOR DTA144ES
Q234	8-729-900-80	TRANSISTOR DTC114ES
Q252	8-729-900-80	TRANSISTOR DTC114ES

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description			
Q253	8-729-900-80	TRANSISTOR DTC114ES			
Q351	8-729-900-61	TRANSISTOR DTA114ES			
Q352	8-729-900-61	TRANSISTOR DTA114ES			
Q353	8-729-900-61	TRANSISTOR DTA114ES			
Q354	8-729-900-61	TRANSISTOR DTA114ES			
Q406	8-729-904-39	TRANSISTOR DTC114TS			
Q407	8-729-904-39	TRANSISTOR DTC114TS			
Q456	8-729-904-39	TRANSISTOR DTC114TS			
Q457	8-729-904-39	TRANSISTOR DTC114TS			
Q501	8-729-904-39	TRANSISTOR DTC114TS			
Q551	8-729-904-39	TRANSISTOR DTC114TS			
Q571	8-729-900-61	TRANSISTOR DTA114ES			
Q572	8-729-900-61	TRANSISTOR DTA114ES			
Q573	8-729-224-61	TRANSISTOR 2SK246-Y			
Q574	8-729-900-61	TRANSISTOR DTA114ES			
Q575	8-729-900-80	TRANSISTOR DTC114ES			
Q576	8-729-620-05	TRANSISTOR 2SC2603-EF			
Q601	8-729-900-61	TRANSISTOR DTA114ES			
Q602	8-729-900-61	TRANSISTOR DTA114ES			
Q603	8-729-900-61	TRANSISTOR DTA114ES			
Q604	8-729-900-61	TRANSISTOR DTA114ES			
Q605	8-729-900-61	TRANSISTOR DTA114ES			
Q606	8-729-900-61	TRANSISTOR DTA114ES			
Q607	8-729-900-61	TRANSISTOR DTA114ES			
Q608	8-729-801-84	TRANSISTOR 2SB1013-4			
Q609	8-729-801-84	TRANSISTOR 2SB1013-4			
Q610	8-729-801-48	TRANSISTOR 2SB1013-4			
Q611	8-729-801-48	TRANSISTOR 2SB1013-4			
Q612	8-729-801-48	TRANSISTOR 2SB1013-4			
Q613	8-729-900-80	TRANSISTOR DTC114ES			
Q614	8-729-900-80	TRANSISTOR DTC114ES			
Q615	8-729-904-39	TRANSISTOR DTC114TS			
Q616	8-729-119-76	TRANSISTOR 2SA1175-HFE			
Q617	8-729-900-80	TRANSISTOR DTC114ES			
Q701	8-729-904-39	TRANSISTOR DTC114TS			
Q741	8-729-900-89	TRANSISTOR DTC144ES			
Q742	8-729-900-89	TRANSISTOR DTC144ES			
Q751	8-729-904-39	TRANSISTOR DTC114TS			
Q781	8-729-900-61	TRANSISTOR DTA114ES			
Q782	8-729-900-61	TRANSISTOR DTA114ES			
Q791	8-729-111-29	TRANSISTOR 2SD1616A-K			
Q792	8-729-920-98	TRANSISTOR 2SD1761-EF			
Q794	8-729-900-65	TRANSISTOR DTA144ES			
Q795	8-729-900-89	TRANSISTOR DTC144ES			
Q801	8-729-900-89	TRANSISTOR DTC144ES			
Q901	8-729-620-05	TRANSISTOR 2SC2603-EF			
Q903	8-729-920-97	TRANSISTOR 2SB1187-EF			
Q904	8-729-920-97	TRANSISTOR 2SB1187-EF			
Q905	8-729-920-98	TRANSISTOR 2SD1761-EF			
Q906	8-729-920-98	TRANSISTOR 2SD1761-EF			
Q907	8-729-900-80	TRANSISTOR DTC114ES			
Q908	8-729-900-80	TRANSISTOR DTC114ES			
Q999	8-729-900-80	TRANSISTOR DTC114ES			
R1	1-249-411-11	CARBON	330	5%	1/4W
R2	1-249-411-11	CARBON	330	5%	1/4W
R3	1-247-891-00	CARBON	330K	5%	1/4W

Ref.No.	Part No.	Description			
R4	1-249-411-11	CARBON	330	5%	1/4W
R5	1-247-891-00	(WG,IT)...CARBON	330K	5%	1/4W
R6	1-249-411-11	(WG,IT)...CARBON	330	5%	1/4W
R7	1-249-405-11	CARBON	100	5%	1/4W
R8	1-249-441-11	CARBON	100K	5%	1/4W
R9	1-249-437-11	CARBON	47K	5%	1/4W
R10	1-249-421-11	(E,EA,AUS)...CARBON	2.2K	5%	1/4W
R10	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W
R11B	1-247-834-11	CARBON	1.3K	5%	1/4W
R11	1-249-421-11	(AEP,UK,WG,IT) ...CARBON	2.2K	5%	1/4W
R11	1-249-429-11	(E,EA,AUS)...CARBON	10K	5%	1/4W
R12B	1-249-414-11	CARBON	560	5%	1/4W
R12	1-249-421-11	(AEP,UK,WG,IT) ...CARBON	2.2K	5%	1/4W
R12	1-249-429-11	(E,EA,AUS)...CARBON	10K	5%	1/4W
R13B	1-247-818-11	CARBON	300	5%	1/4W
R13	1-249-433-11	(AEP,UK,WG,IT) ...CARBON	22K	5%	1/4W
R14A	1-249-408-11	CARBON	180	5%	1/4W
R14B	1-249-408-11	CARBON	180	5%	1/4W
R14	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W
R15	1-247-903-00	(AEP,UK,WG,IT) ...CARBON	1M	5%	1/4W
R17A	1-249-437-11	CARBON	47K	5%	1/4W
R17B	1-249-437-11	CARBON	47K	5%	1/4W
R18A	1-249-437-11	CARBON	47K	5%	1/4W
R18B	1-249-437-11	CARBON	47K	5%	1/4W
R20	1-249-425-11	(EXCEPT FOR US,Canadian) ...CARBON	4.7K	5%	1/4W
R21	1-249-429-11	(E,EA,AUS)...CARBON	10K	5%	1/4W
R22	1-249-429-11	(E,EA,AUS)...CARBON	10K	5%	1/4W
R41A	1-247-881-00	CARBON	120K	5%	1/4W
R41B	1-247-881-00	CARBON	120K	5%	1/4W
R42A	1-249-405-11	CARBON	100	5%	1/4W
R42B	1-249-405-11	CARBON	100	5%	1/4W
R43A	1-247-882-11	CARBON	130K	5%	1/4W
R43B	1-247-882-11	CARBON	130K	5%	1/4W
R44A	1-249-426-11	CARBON	5.6K	5%	1/4W
R44B	1-249-426-11	CARBON	5.6K	5%	1/4W
R45B	1-249-430-11	CARBON	12K	5%	1/4W
R51	1-249-417-11	CARBON	1K	5%	1/4W
R52	1-249-417-11	CARBON	1K	5%	1/4W
R54	1-249-417-11	CARBON	1K	5%	1/4W
R55	1-249-425-11	CARBON	4.7K	5%	1/4W
R56	1-249-405-11	CARBON	100	5%	1/4W
R57	1-249-401-11	CARBON	47	5%	1/4W
R58	1-249-423-11	CARBON	3.3K	5%	1/4W
R59	1-249-414-11	CARBON	560	5%	1/4W
R60	1-249-417-11	CARBON	1K	5%	1/4W
R61	1-249-410-11	CARBON	270	5%	1/4W
R61A	1-247-881-00	CARBON	120K	5%	1/4W
R61B	1-247-881-00	CARBON	120K	5%	1/4W

Ref.No.	Part No.	Description				
R62	1-249-418-11	CARBON	1.2K	5%	1/4W	
R62A	1-249-405-11	CARBON	100	5%	1/4W	
R62B	1-249-405-11	CARBON	100	5%	1/4W	
R63	1-249-421-11	CARBON	2.2K	5%	1/4W	
R63A	1-247-882-11	CARBON	130K	5%	1/4W	
R63B	1-247-882-11	CARBON	130K	5%	1/4W	
R64	1-249-425-11	CARBON	4.7K	5%	1/4W	
R64A	1-249-426-11	CARBON	5.6K	5%	1/4W	
R64B	1-249-426-11	CARBON	5.6K	5%	1/4W	
R65B	1-249-430-11	CARBON	12K	5%	1/4W	
R65	1-249-425-11	CARBON	4.7K	5%	1/4W	
R66	1-249-405-11	CARBON	100	5%	1/4W	
R67	1-249-423-11	(AEP,UK,WG,IT) ...CARBON	3.3K	5%	1/4W	
R68	1-249-414-11	(AEP,UK,WG,IT) ...CARBON	560	5%	1/4W	
R69	1-249-417-11	(AEP,UK,WG,IT) ...CARBON	1K	5%	1/4W	
R70	1-249-410-11	(AEP,UK,WG,IT) ...CARBON	270	5%	1/4W	
R71	1-249-433-11	(AEP,UK,WG,IT) ...CARBON	22K	5%	1/4W	
R72	1-249-421-11	(AEP,UK,WG,IT) ...CARBON	2.2K	5%	1/4W	
R73	1-249-425-11	(AEP,UK,WG,IT) ...CARBON	4.7K	5%	1/4W	
R74	1-249-425-11	(AEP,UK,WG,IT) ...CARBON	4.7K	5%	1/4W	
R81	1-249-433-11	CARBON	22K	5%	1/4W	
R81A	1-249-409-11	CARBON	220	5%	1/4W	
R81B	1-249-409-11	CARBON	220	5%	1/4W	
R82	1-249-417-11	CARBON	1K	5%	1/4W	
R82A	1-249-409-11	CARBON	220	5%	1/4W	
R82B	1-249-409-11	CARBON	220	5%	1/4W	
R83	1-249-399-11	CARBON	33	5%	1/4W	
R83B	1-249-429-11	CARBON	10K	5%	1/4W	
R84	1-249-429-11	CARBON	10K	5%	1/4W	
R84B	△. 1-212-849-00	FUSIBLE	4.7	5%	1/4W	F
R85	1-249-429-11	CARBON	10K	5%	1/4W	
R85B	1-249-435-11	CARBON	33K	5%	1/4W	
R86	1-249-437-11	CARBON	47K	5%	1/4W	
R86B	1-249-435-11	CARBON	33K	5%	1/4W	
R87	1-249-409-11	CARBON	220	5%	1/4W	
R88	1-249-429-11	CARBON	10K	5%	1/4W	
R89	1-249-429-11	CARBON	10K	5%	1/4W	
R90	1-249-421-11	CARBON	2.2K	5%	1/4W	
R91	1-249-421-11	CARBON	2.2K	5%	1/4W	
R92	1-247-891-00	CARBON	330K	5%	1/4W	
R93	1-247-891-00	CARBON	330K	5%	1/4W	
R94	1-249-417-11	CARBON	1K	5%	1/4W	
R95	1-249-417-11	CARBON	1K	5%	1/4W	
R96	1-249-425-11	CARBON	4.7K	5%	1/4W	
R97	1-249-425-11	CARBON	4.7K	5%	1/4W	
R98	1-249-404-00	CARBON	82	5%	1/4W	
R99	1-249-417-11	(EXCEPT FOR WG,IT) ...CARBON	1K	5%	1/4W	
R99	1-249-420-11	(WG,IT)...CARBON	1.8K	5%	1/4W	

Ref.No.	Part No.	Description				
R100	1-247-848-11	CARBON	5.1K	5%	1/4W	
R101	1-216-097-00	(BD)...METAL GLAZE	100K	5%	1/10W	
R102	1-216-097-00	(BD)...METAL GLAZE	100K	5%	1/10W	
R102	1-249-430-11	(EXCEPT FOR WG,IT) ...CARBON	12K	5%	1/4W	
R103	1-216-091-00	(BD)...METAL GLAZE	56K	5%	1/10W	
R103	1-249-428-11	CARBON	8.2K	5%	1/4W	
R104	1-216-099-00	(BD)...METAL GLAZE	120K	5%	1/10W	
R104	1-249-435-11	CARBON	33K	5%	1/4W	
R105	1-216-069-00	(BD)...METAL GLAZE	6.8K	5%	1/10W	
R105	1-249-431-11	CARBON	15K	5%	1/4W	
R106	1-216-061-00	(BD)...METAL GLAZE	3.3K	5%	1/10W	
R106	1-249-417-11	CARBON	1K	5%	1/4W	
R107	1-216-114-00	(BD)...METAL GLAZE	510K	5%	1/10W	
R107	1-249-430-11	(WG,IT)...CARBON	12K	5%	1/4W	
R108	1-216-105-00	(BD)...METAL GLAZE	220K	5%	1/10W	
R108	1-249-417-11	CARBON	1K	5%	1/4W	
R109	1-216-061-00	(BD)...METAL GLAZE	3.3K	5%	1/10W	
R110	1-216-049-00	(BD)...METAL GLAZE	1K	5%	1/10W	
R111	1-216-049-00	(BD)...METAL GLAZE	1K	5%	1/10W	
R112	1-216-083-00	(BD)...METAL GLAZE	27K	5%	1/10W	
R113	1-216-071-00	(BD)...METAL GLAZE	8.2K	5%	1/10W	
R114	1-216-105-00	(BD)...METAL GLAZE	220K	5%	1/10W	
R152	1-216-073-00	(BD)...METAL GLAZE	10K	5%	1/10W	
R153	1-216-085-00	(BD)...METAL GLAZE	33K	5%	1/10W	
R154	1-216-085-00	(BD)...METAL GLAZE	33K	5%	1/10W	
R155	1-216-093-00	(BD)...METAL GLAZE	68K	5%	1/10W	
R156	1-216-081-00	(BD)...METAL GLAZE	22K	5%	1/10W	
R157	1-216-079-00	(BD)...METAL GLAZE	18K	5%	1/10W	
R158	1-216-079-00	(BD)...METAL GLAZE	18K	5%	1/10W	
R159	1-216-079-00	(BD)...METAL GLAZE	18K	5%	1/10W	
R160	1-216-049-00	(BD)...METAL GLAZE	1K	5%	1/10W	
R171	1-216-001-00	(BD)...METAL GLAZE	10	5%	1/10W	
R172	1-216-001-00	(BD)...METAL GLAZE	10	5%	1/10W	
R173	1-216-001-00	(BD)...METAL GLAZE	10	5%	1/10W	
R174	1-216-001-00	(BD)...METAL GLAZE	10	5%	1/10W	
R201	1-249-441-11	CARBON	100K	5%	1/4W	
R202	1-249-441-11	CARBON	100K	5%	1/4W	
R203	1-249-422-11	CARBON	2.7K	5%	1/4W	
R204	1-249-422-11	CARBON	2.7K	5%	1/4W	
R205	1-249-437-11	CARBON	47K	5%	1/4W	
R206	1-249-437-11	CARBON	47K	5%	1/4W	
R207	1-249-437-11	CARBON	47K	5%	1/4W	
R208	1-249-437-11	CARBON	47K	5%	1/4W	
R209	1-249-429-11	CARBON	10K	5%	1/4W	
R210	1-249-437-11	CARBON	47K	5%	1/4W	
R211	1-249-423-11	CARBON	3.3K	5%	1/4W	
R212	1-249-423-11	CARBON	3.3K	5%	1/4W	
R213	1-249-429-11	CARBON	10K	5%	1/4W	
R214	1-249-437-11	CARBON	47K	5%	1/4W	
R215	1-249-429-11	CARBON	10K	5%	1/4W	
R216	1-249-441-11	CARBON	100K	5%	1/4W	
R217	1-249-411-11	CARBON	330	5%	1/4W	
R218	1-249-411-11	CARBON	330	5%	1/4W	
R219	1-249-417-11	CARBON	1K	5%	1/4W	
R220	1-249-421-11	CARBON	2.2K	5%	1/4W	

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description			
R221	1-249-409-11	CARBON	220	5%	1/4W
R222	1-249-409-11	CARBON	220	5%	1/4W
R223	1-249-437-11	CARBON	47K	5%	1/4W
R224	1-249-437-11	CARBON	47K	5%	1/4W
R225	1-249-437-11	CARBON	47K	5%	1/4W
R226	1-249-437-11	CARBON	47K	5%	1/4W
R231	1-249-429-11	CARBON	10K	5%	1/4W
R232	1-249-425-11	CARBON	4.7K	5%	1/4W
R233	1-249-429-11	CARBON	10K	5%	1/4W
R234	1-249-393-11	CARBON	10	5%	1/4W
R235	1-249-417-11	CARBON	1K	5%	1/4W
R236	1-249-417-11	CARBON	1K	5%	1/4W
R237	1-249-419-11	CARBON	1.5K	5%	1/4W
R238	1-249-419-11	CARBON	1.5K	5%	1/4W
R239	1-249-433-11	CARBON	22K	5%	1/4W
R241	1-249-413-11	CARBON	470	5%	1/4W
R242	1-249-417-11	CARBON	1K	5%	1/4W
R243	1-249-411-11	CARBON	330	5%	1/4W
R244	1-249-411-11	CARBON	330	5%	1/4W
R245	1-249-421-11	CARBON	2.2K	5%	1/4W
R247	1-249-433-11	CARBON	22K	5%	1/4W
R248	1-249-421-11	CARBON	2.2K	5%	1/4W
R249	1-249-437-11	CARBON	47K	5%	1/4W
R250	1-249-429-11	CARBON	10K	5%	1/4W
R286	1-249-405-11	CARBON	100	5%	1/4W
R287	1-249-405-11	CARBON	100	5%	1/4W
R288	1-249-405-11	CARBON	100	5%	1/4W
R289	1-249-405-11	CARBON	100	5%	1/4W
R290	1-249-405-11	CARBON	100	5%	1/4W
R291	1-249-413-11	CARBON	470	5%	1/4W
R292	1-249-413-11	CARBON	470	5%	1/4W
R293	1-249-413-11	CARBON	470	5%	1/4W
R294	1-249-413-11	CARBON	470	5%	1/4W
R295	1-249-413-11	CARBON	470	5%	1/4W
R296	1-249-413-11	CARBON	470	5%	1/4W
R297	1-249-413-11	CARBON	470	5%	1/4W
R298	1-249-413-11	CARBON	470	5%	1/4W
R299	1-249-441-11	CARBON	100K	5%	1/4W
R301	1-249-407-11	CARBON	150	5%	1/4W
R302	1-249-411-11	CARBON	330	5%	1/4W
R303	1-249-411-11	CARBON	330	5%	1/4W
R304	1-249-407-11	CARBON	150	5%	1/4W
R305	1-249-411-11	CARBON	330	5%	1/4W
R306	1-249-412-11	CARBON	390	5%	1/4W
R307	1-249-416-11	CARBON	820	5%	1/4W
R308	1-249-412-11	CARBON	390	5%	1/4W
R309	1-249-411-11	CARBON	330	5%	1/4W
R310	1-247-832-11	CARBON	1.1K	5%	1/4W
R311	1-249-417-11	CARBON	1K	5%	1/4W
R312	1-249-420-11	CARBON	1.8K	5%	1/4W
R313	1-249-424-11	CARBON	3.9K	5%	1/4W
R314	1-249-407-11	CARBON	150	5%	1/4W
R315	1-249-409-11	CARBON	220	5%	1/4W
R316	1-249-411-11	CARBON	330	5%	1/4W
R317	1-247-832-11	CARBON	1.1K	5%	1/4W
R318	1-249-417-11	CARBON	1K	5%	1/4W
R319	1-249-426-11	CARBON	5.6K	5%	1/4W

Ref.No.	Part No.	Description			
R320	1-249-430-11	CARBON	12K	5%	1/4W
R401	1-249-417-11	CARBON	1K	5%	1/4W
R402	1-249-441-11	CARBON	100K	5%	1/4W
R403	1-249-441-11	CARBON	100K	5%	1/4W
R404	1-249-425-11	CARBON	4.7K	5%	1/4W
R405	1-249-400-11	CARBON	47	5%	1/4W
R406	1-249-429-11	CARBON	10K	5%	1/4W
R416	1-249-425-11	CARBON	4.7K	5%	1/4W
R417	1-249-425-11	CARBON	4.7K	5%	1/4W
R418	1-249-425-11	CARBON	4.7K	5%	1/4W
R419	1-249-417-11	CARBON	1K	5%	1/4W
R426	1-249-417-11	CARBON	1K	5%	1/4W
R427	1-249-441-11	CARBON	100K	5%	1/4W
R428	1-247-903-00	CARBON	1M	5%	1/4W
R429	1-249-417-11	CARBON	1K	5%	1/4W
R430	1-249-425-11	CARBON	4.7K	5%	1/4W
R431	1-249-425-11	CARBON	4.7K	5%	1/4W
R432	1-249-429-11	CARBON	10K	5%	1/4W
R451	1-249-417-11	CARBON	1K	5%	1/4W
R452	1-249-441-11	CARBON	100K	5%	1/4W
R453	1-249-441-11	CARBON	100K	5%	1/4W
R454	1-249-425-11	CARBON	4.7K	5%	1/4W
R455	1-249-400-11	CARBON	47	5%	1/4W
R456	1-249-429-11	CARBON	10K	5%	1/4W
R457	1-249-429-11	CARBON	10K	5%	1/4W
R466	1-249-425-11	CARBON	4.7K	5%	1/4W
R467	1-249-425-11	CARBON	4.7K	5%	1/4W
R468	1-249-425-11	CARBON	4.7K	5%	1/4W
R469	1-249-417-11	CARBON	1K	5%	1/4W
R471	1-249-429-11	CARBON	10K	5%	1/4W
R472	1-249-411-11	CARBON	330	5%	1/4W
R473	1-249-441-11	CARBON	100K	5%	1/4W
R474	1-249-411-11	CARBON	330	5%	1/4W
R475	1-249-441-11	CARBON	100K	5%	1/4W
R486	1-249-413-11	CARBON	470	5%	1/4W
R487	1-249-429-11	CARBON	10K	5%	1/4W
R501	1-247-903-00	CARBON	1M	5%	1/4W
R502	1-249-425-11	CARBON	4.7K	5%	1/4W
R503	1-249-441-11	CARBON	100K	5%	1/4W
R504	1-247-903-00	CARBON	1M	5%	1/4W
R505	1-249-419-11	CARBON	1.5K	5%	1/4W
R506	1-249-434-11	CARBON	27K	5%	1/4W
R507	1-247-903-00	CARBON	1M	5%	1/4W
R522	1-249-409-11	CARBON	220	5%	1/4W
R523	1-249-409-11	CARBON	220	5%	1/4W
R524	1-249-439-11	CARBON	68K	5%	1/4W
R525	1-249-417-11	CARBON	1K	5%	1/4W
R526	1-249-405-11	CARBON	100	5%	1/4W
R527	1-249-405-11	CARBON	100	5%	1/4W
R528	1-249-405-11	CARBON	100	5%	1/4W
R529	1-249-405-11	CARBON	100	5%	1/4W
R531	1-249-405-11	CARBON	100	5%	1/4W
R530	1-249-405-11	CARBON	100	5%	1/4W
R532	1-249-405-11	CARBON	100	5%	1/4W
R533	1-249-405-11	CARBON	100	5%	1/4W
R534	1-249-405-11	CARBON	100	5%	1/4W
R535	1-249-405-11	CARBON	100	5%	1/4W

Ref.No.	Part No.	Description							
R536	1-249-405-11	CARBON	100	5%	1/4W				
R537	1-249-429-11	CARBON	10K	5%	1/4W				
R538	1-249-405-11	CARBON	100	5%	1/4W				
R539	1-249-441-11	CARBON	100K	5%	1/4W				
R540	1-249-441-11	CARBON	100K	5%	1/4W				
R541	1-249-441-11	CARBON	100K	5%	1/4W				
R542	1-249-441-11	CARBON	100K	5%	1/4W				
R543	1-249-441-11	CARBON	100K	5%	1/4W				
R551	1-247-903-00	CARBON	1M	5%	1/4W				
R552	1-249-425-11	CARBON	4.7K	5%	1/4W				
R553	1-249-441-11	CARBON	100K	5%	1/4W				
R554	1-247-903-00	CARBON	1M	5%	1/4W				
R555	1-249-419-11	CARBON	1.5K	5%	1/4W				
R556	1-249-434-11	CARBON	27K	5%	1/4W				
R557	1-247-903-00	CARBON	1M	5%	1/4W				
R559	1-249-429-11	CARBON	10K	5%	1/4W				
R564	1-249-437-11	CARBON	47K	5%	1/4W				
R568	1-249-433-11	CARBON	22K	5%	1/4W				
R569	1-249-429-11	CARBON	10K	5%	1/4W				
R570	1-249-417-11	CARBON	1K	5%	1/4W				
R571	1-249-441-11	CARBON	100K	5%	1/4W				
R572	1-247-891-00	CARBON	330K	5%	1/4W				
R573	1-249-425-11	CARBON	4.7K	5%	1/4W				
R574	1-249-441-11	CARBON	100K	5%	1/4W				
R576	1-249-395-11	CARBON	15	5%	1/4W				
R577	1-249-405-11	CARBON	100	5%	1/4W				
R578	1-247-903-00	CARBON	1M	5%	1/4W				
R579	1-249-432-11	CARBON	18K	5%	1/4W				
R580	1-249-441-11	CARBON	100K	5%	1/4W				
R581	1-249-441-11	CARBON	100K	5%	1/4W				
R582	1-249-417-11	CARBON	1K	5%	1/4W				
R583	1-249-441-11	CARBON	100K	5%	1/4W				
R584	1-249-417-11	CARBON	1K	5%	1/4W				
R585	1-249-429-11	CARBON	10K	5%	1/4W				
R586	1-249-429-11	CARBON	10K	5%	1/4W				
R587	1-249-429-11	CARBON	10K	5%	1/4W				
R588	1-249-429-11	CARBON	10K	5%	1/4W				
R589	1-249-417-11	CARBON	1K	5%	1/4W				
R590	1-249-417-11	CARBON	1K	5%	1/4W				
R591	1-249-441-11	CARBON	100K	5%	1/4W				
R592	1-249-441-11	CARBON	100K	5%	1/4W				
R593	1-249-441-11	CARBON	100K	5%	1/4W				
R594	1-249-441-11	CARBON	100K	5%	1/4W				
R595	1-249-437-11	CARBON	47K	5%	1/4W				
R596	1-249-429-11	CARBON	10K	5%	1/4W				
R597	1-249-417-11	CARBON	1K	5%	1/4W				
R598	1-249-411-11	CARBON	330	5%	1/4W				
R601	1-249-420-11	CARBON	1.8K	5%	1/4W				
R602	1-247-887-00	CARBON	220K	5%	1/4W				
R604	1-249-418-11	CARBON	1.2K	5%	1/4W				
R605	1-249-441-11	CARBON	100K	5%	1/4W				
R606	1-249-441-11	CARBON	100K	5%	1/4W				
R609	1-249-441-11	CARBON	100K	5%	1/4W				
R610	1-249-441-11	CARBON	100K	5%	1/4W				
R611	1-249-441-11	CARBON	100K	5%	1/4W				
R612	1-249-441-11	CARBON	100K	5%	1/4W				
R613	1-249-441-11	CARBON	100K	5%	1/4W				
R614	1-249-441-11	CARBON	100K	5%	1/4W				
R615	1-249-441-11	CARBON	100K	5%	1/4W				
R616	1-249-429-11	CARBON	10K	5%	1/4W				
R617	1-249-429-11	CARBON	10K	5%	1/4W				
R618	1-249-428-11	CARBON	8.2K	5%	1/4W				
R619	1-249-423-11	CARBON	3.3K	5%	1/4W				
R620	1-249-417-11	CARBON	1K	5%	1/4W				
R621	1-249-417-11	CARBON	1K	5%	1/4W				
R622	1-249-429-11	CARBON	10K	5%	1/4W				
R623	1-249-429-11	CARBON	10K	5%	1/4W				
R624	1-247-864-11	CARBON	24K	5%	1/4W				
R651	1-249-420-11	CARBON	1.8K	5%	1/4W				
R652	1-247-887-00	CARBON	220K	5%	1/4W				
R654	1-249-418-11	CARBON	1.2K	5%	1/4W				
R655	1-249-441-11	CARBON	100K	5%	1/4W				
R656	1-249-441-11	CARBON	100K	5%	1/4W				
R661	1-249-425-11	CARBON	4.7K	5%	1/4W				
R662	1-249-425-11	CARBON	4.7K	5%	1/4W				
R663	1-249-425-11	CARBON	4.7K	5%	1/4W				
R664	1-249-425-11	CARBON	4.7K	5%	1/4W				
R665	1-249-437-11	CARBON	47K	5%	1/4W				
R666	1-249-437-11	CARBON	47K	5%	1/4W				
R667	1-249-437-11	CARBON	47K	5%	1/4W				
R668	1-247-895-00	CARBON	470K	5%	1/4W				
R669	1-247-895-00	CARBON	470K	5%	1/4W				
R670	1-249-421-11	CARBON	2.2K	5%	1/4W				
R671	1-249-421-11	CARBON	2.2K	5%	1/4W				
R672	1-249-421-11	CARBON	2.2K	5%	1/4W				
R673	1-249-417-11	CARBON	1K	5%	1/4W				
R674	1-249-423-11	CARBON	3.3K	5%	1/4W				
R675	1-249-426-11	CARBON	5.6K	5%	1/4W				
R676	1-249-429-11	CARBON	10K	5%	1/4W				
R677	1-249-429-11	CARBON	10K	5%	1/4W				
R678	1-249-429-11	CARBON	10K	5%	1/4W				
R679	1-249-429-11	CARBON	10K	5%	1/4W				
R680	1-249-429-11	CARBON	10K	5%	1/4W				
R681	1-249-421-11	CARBON	2.2K	5%	1/4W				
R682	1-249-421-11	CARBON	2.2K	5%	1/4W				
R683	1-249-421-11	CARBON	2.2K	5%	1/4W				
R684	1-249-421-11	CARBON	2.2K	5%	1/4W				
R685	1-249-421-11	CARBON	2.2K	5%	1/4W				
R686	1-249-405-11	CARBON	100	5%	1/4W				
R687	1-249-429-11	CARBON	10K	5%	1/4W				
R688	1-247-903-00	CARBON	1M	5%	1/4W				
R689	1-249-429-11	CARBON	10K	5%	1/4W				
R690	1-249-429-11	CARBON	10K	5%	1/4W				
R702	1-249-431-11	CARBON	15K	5%	1/4W				
R703	1-249-437-11	CARBON	47K	5%	1/4W				
R704	1-249-422-11	(US,Canadian)							
		...CARBON	2.7K	5%	1/4W				
R704	1-249-426-11	(EXCEPT FOR US,Canadian)							
		...CARBON	5.6K	5%	1/4W				
R705	1-249-429-11	CARBON	10K	5%	1/4W				
R707	1-249-437-11	CARBON	47K	5%	1/4W				
R708	1-249-437-11	CARBON	47K	5%	1/4W				

Ref.No.	Part No.	Description				
R709	1-249-421-11	CARBON	2.2K	5%	1/4W	
R710	1-249-421-11	CARBON	2.2K	5%	1/4W	
R712	1-249-425-11	CARBON	4.7K	5%	1/4W	
R713	1-249-426-11	CARBON	5.6K	5%	1/4W	
R731	1-249-417-11	(AEP,UK,WG,IT) ...CARBON	1K	5%	1/4W	
R731	1-249-425-11	(US,Canadian,E,EA,AUS) ...CARBON	4.7K	5%	1/4W	
R732	1-249-437-11	CARBON	47K	5%	1/4W	
R733	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W	
R734	1-247-897-11	(AEP,UK,WG,IT) ...CARBON	560K	5%	1/4W	
R735	1-249-417-11	(AEP,UK,WG,IT) ...CARBON	1K	5%	1/4W	
R737	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W	
R738	1-249-425-11	CARBON	4.7K	5%	1/4W	
R740	1-249-425-11	CARBON	4.7K	5%	1/4W	
R742	1-249-405-11	CARBON	100	5%	1/4W	
R744	1-249-429-11	CARBON	10K	5%	1/4W	
R745	1-249-429-11	CARBON	10K	5%	1/4W	
R746	1-249-429-11	CARBON	10K	5%	1/4W	
R747	1-249-405-11	CARBON	100	5%	1/4W	
R748	1-249-405-11	CARBON	100	5%	1/4W	
R752	1-249-431-11	CARBON	15K	5%	1/4W	
R753	1-249-437-11	CARBON	47K	5%	1/4W	
R754	1-249-422-11	(US,Canadian) ...CARBON	2.7K	5%	1/4W	
R754	1-249-426-11	(EXCEPT FOR US,Canadian) ...CARBON	5.6K	5%	1/4W	
R755	1-249-429-11	CARBON	10K	5%	1/4W	
R757	1-249-437-11	CARBON	47K	5%	1/4W	
R758	1-249-437-11	CARBON	47K	5%	1/4W	
R759	1-249-421-11	CARBON	2.2K	5%	1/4W	
R760	1-249-421-11	CARBON	2.2K	5%	1/4W	
R762	1-249-425-11	CARBON	4.7K	5%	1/4W	
R763	1-249-426-11	CARBON	5.6K	5%	1/4W	
R771	1-249-429-11	CARBON	10K	5%	1/4W	
R772	1-249-429-11	CARBON	10K	5%	1/4W	
R773	1-247-870-11	CARBON	43K	5%	1/4W	
R774	1-249-437-11	CARBON	47K	5%	1/4W	
R775	1-249-437-11	CARBON	47K	5%	1/4W	
R776	1-249-437-11	CARBON	47K	5%	1/4W	
R781	1-249-417-11	(AEP,UK,WG,IT) ...CARBON	1K	5%	1/4W	
R781	1-249-425-11	(US,Canadian,E,EA,AUS) ...CARBON	4.7K	5%	1/4W	
R782	1-249-437-11	CARBON	47K	5%	1/4W	
R783	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W	
R784	1-247-897-11	(AEP,UK,WG,IT) ...CARBON	560K	5%	1/4W	
R785	1-249-417-11	(AEP,UK,WG,IT) ...CARBON	1K	5%	1/4W	
R787	1-249-437-11	(AEP,UK,WG,IT) ...CARBON	47K	5%	1/4W	
R788	1-249-425-11	CARBON	4.7K	5%	1/4W	
R790	1-249-425-11	CARBON	4.7K	5%	1/4W	
R791	1-249-417-11	CARBON	1K	5%	1/4W	
R792	1-249-411-11	CARBON	330	5%	1/4W	

Ref.No.	Part No.	Description				
R794A	1-249-414-11	CARBON	560	5%	1/4W	
R794B	1-249-433-11	(AEP,UK,WG,IT) ...CARBON	22K	5%	1/4W	
R795	1-249-435-11	(AEP,UK,WG,IT) ...CARBON	33K	5%	1/4W	
R801	1-249-417-11	CARBON	1K	5%	1/4W	
R802	1-249-438-11	CARBON	56K	5%	1/4W	
R803	1-249-413-11	CARBON	470	5%	1/4W	
R804	1-249-438-11	CARBON	56K	5%	1/4W	
R805	1-249-389-11	CARBON	4.7	5%	1/4W	
R851	1-249-417-11	CARBON	1K	5%	1/4W	
R852	1-249-438-11	CARBON	56K	5%	1/4W	
R853	1-249-413-11	CARBON	470	5%	1/4W	
R854	1-249-438-11	CARBON	56K	5%	1/4W	
R855	1-249-389-11	CARBON	4.7	5%	1/4W	
R856	1-249-417-11	CARBON	1K	5%	1/4W	
R871	1-249-429-11	CARBON	10K	5%	1/4W	
R872	1-249-437-11	CARBON	47K	5%	1/4W	
R873	1-249-429-11	CARBON	10K	5%	1/4W	
R874	1-247-883-00	CARBON	150K	5%	1/4W	
R875	1-249-421-11	CARBON	2.2K	5%	1/4W	
R876	1-249-421-11	CARBON	2.2K	5%	1/4W	
R877	△ 1-212-881-11	FUSIBLE	100	5%	1/4W	F
R878	1-249-417-11	CARBON	1K	5%	1/4W	
R879	1-249-417-11	CARBON	1K	5%	1/4W	
R880	△ 1-212-881-11	FUSIBLE	100	5%	1/4W	F
R881	1-249-421-11	CARBON	2.2K	5%	1/4W	
R882	1-249-421-11	CARBON	2.2K	5%	1/4W	
R883	△ 1-212-881-11	FUSIBLE	100	5%	1/4W	F
R901	1-249-419-11	CARBON	1.5K	5%	1/4W	
R902	1-249-429-11	CARBON	10K	5%	1/4W	
R903	1-249-421-11	CARBON	2.2K	5%	1/4W	
R904	1-249-433-11	CARBON	22K	5%	1/4W	
R905	△ 1-212-934-00	(Except for US, Canadian) ...FUSIBLE	1	5%	1/2W	F
R905	△ 1-212-942-00	(US,Canadian) ...FUSIBLE	2.2	5%	1/2W	F
R906	△ 1-212-934-00	FUSIBLE	1	5%	1/2W	F
R907	△ 1-212-934-00	(Except for US, Canadian) ...FUSIBLE	1	5%	1/2W	F
R907	△ 1-212-942-00	(US,Canadian) ...FUSIBLE	2.2	5%	1/2W	F
R908	1-249-425-11	CARBON	4.7K	5%	1/4W	
R909	1-249-433-11	CARBON	22K	5%	1/4W	
R910	1-247-903-00	CARBON	1M	5%	1/4W	
R911	1-249-405-11	CARBON	100	5%	1/4W	
R912	1-249-432-11	CARBON	18K	5%	1/4W	
R913	1-249-432-11	CARBON	18K	5%	1/4W	
R914	1-247-842-11	CARBON	3K	5%	1/4W	
R915	1-249-429-11	CARBON	10K	5%	1/4W	
R917	1-249-413-11	CARBON	470	5%	1/4W	
R926	1-202-725-00	(US,Canadian) ...SOLID	3.3M	10%	1/2W	
RB502	1-233-206-11	COMPOSITION CIRCUIT BLOCK	(100KX13)			
RV41A	1-228-989-00	RES, ADJ, CARBON	470			
RV41B	1-228-989-00	RES, ADJ, CARBON	470			
RV42B	1-230-500-11	RES, ADJ, CARBON	220K			
RV61A	1-228-989-00	RES, ADJ, CARBON	470			
RV61B	1-228-989-00	RES, ADJ, CARBON	470			
RV62B	1-230-500-11	RES, ADJ, CARBON	220K			

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
RV81	1-238-017-11	RES, ADJ, CARBON 22K
RV82	1-238-017-11	RES, ADJ, CARBON 22K
RV101	1-238-016-11	(BD)...RES, ADJ, CARBON 10K
RV102	1-238-016-11	(BD)...RES, ADJ, CARBON 10K
RV406	1-238-865-11	RES, VAR, CARBON (MOTOR)100KX2 (VOLUME)(INCLUDING VOL LED)
RV501	1-238-866-11	RES, VAR, SLIDE 250KX2 (12kHz)
RV502	1-238-866-11	RES, VAR, SLIDE 250KX2 (4kHz)
RV503	1-238-866-11	RES, VAR, SLIDE 250KX2 (1kHz)
RV504	1-238-866-11	RES, VAR, SLIDE 250KX2 (400Hz)
RV505	1-238-866-11	RES, VAR, SLIDE 250KX2 (100Hz)
RV701	1-238-017-11	RES, ADJ, CARBON 22K
RV751	1-238-017-11	RES, ADJ, CARBON 22K
RY81B	1-515-614-11	RELAY
S11A	1-571-281-21	SWITCH, LEAF (HELF)
S11B	1-571-281-21	SWITCH, LEAF (HELF)
S12B	1-571-281-21	SWITCH, LEAF (REC(A))
S13B	1-571-281-21	SWITCH, LEAF (REC(B))
S14A	1-571-281-21	SWITCH, LEAF (CrO2)
S14B	1-571-281-21	SWITCH, LEAF (CrO2)
S15B	1-571-281-21	SWITCH, LEAF
S101	1-572-085-11	(BD)...SWITCH, LEAF (LIMIT IN)
S201	1-572-184-11	SWITCH, KEYBOARD (EDIT)
S202	1-572-184-11	SWITCH, KEYBOARD (■)
S203	1-572-184-11	SWITCH, KEYBOARD (▶▶)
S204	1-572-184-11	SWITCH, KEYBOARD (▲OPEN/CLOSE)
S205	1-572-184-11	SWITCH, KEYBOARD (▶▶)
S206	1-572-184-11	SWITCH, KEYBOARD (◀◀)
S207	1-572-184-11	SWITCH, KEYBOARD (▶▶)
S208	1-572-184-11	SWITCH, KEYBOARD (◀◀)
S209	1-572-184-11	SWITCH, KEYBOARD (REPEAT)
S210	1-572-184-11	SWITCH, KEYBOARD (CONTINUE)
S211	1-572-184-11	SWITCH, KEYBOARD (SHUFFLE)
S212	1-572-184-11	SWITCH, KEYBOARD (PROGRAM)
S214	1-572-184-11	SWITCH, KEYBOARD (TIME)
S291	1-571-924-11	SWITCH, LEAF (LOAD OUT)
S292	1-571-924-11	SWITCH, LEAF (LOAD IN)
S301	1-572-184-11	(DECK A)...SWITCH, KEYBOARD (■)
S302	1-572-184-11	(DECK A)...SWITCH, KEYBOARD (◀◀)
S303	1-572-184-11	(DECK A)...SWITCH, KEYBOARD (◀)
S304	1-572-184-11	(DECK A)...SWITCH, KEYBOARD (▶)
S305	1-572-184-11	(DECK A)...SWITCH, KEYBOARD (▶▶)
S306	1-572-184-11	(DECK B)...SWITCH, KEYBOARD (■)
S307	1-572-184-11	(DECK B)...SWITCH, KEYBOARD (◀◀)
S308	1-572-184-11	(DECK B)...SWITCH, KEYBOARD (◀)
S309	1-572-184-11	(DECK B)...SWITCH, KEYBOARD (▶)
S310	1-572-184-11	(DECK B)...SWITCH, KEYBOARD (▶▶)
S311	1-572-184-11	SWITCH, KEYBOARD (AMS/BLK SKIP)
S312	1-572-184-11	SWITCH, KEYBOARD (TAPE DUBBING HIGH SPEED)
S313	1-572-184-11	SWITCH, KEYBOARD (CD SYNCHRO)
S314	1-572-184-11	SWITCH, KEYBOARD (REC)
S315	1-572-184-11	SWITCH, KEYBOARD (PAUSE)
S351	1-570-849-11	SWITCH, SLIDE (DOLBY NR)
S352	1-570-837-11	SWITCH, SLIDE (DIRECTION MODE)
S501	1-572-184-11	SWITCH, KEYBOARD (TIMER CONTROL)

Ref.No.	Part No.	Description
S502	1-572-184-11	SWITCH, KEYBOARD (SLEEP)
S503	1-572-184-11	SWITCH, KEYBOARD (TIMER SET)
S504	1-572-184-11	SWITCH, KEYBOARD (CLOCK SET)
S505	1-572-184-11	SWITCH, KEYBOARD (CLOCK DISPLAY)
S506	1-572-184-11	SWITCH, KEYBOARD (POWER)
S507	1-572-184-11	(US,Canadian,E,EA,AUS) ...SWITCH, KEYBOARD (SAT)
S507	1-572-184-11	(AEP,UK,WG,IT) ...SWITCH, KEYBOARD (DBFB)
S508	1-572-184-11	SWITCH, KEYBOARD (SURROUND)
S509	1-572-184-11	SWITCH, KEYBOARD (TAPE)
S510	1-572-184-11	SWITCH, KEYBOARD (CD)
S511	1-572-184-11	SWITCH, KEYBOARD (TUNER)
S512	1-572-184-11	(US,Canadian,E,EA,AUS) ...SWITCH, KEYBOARD (VIDEO/AUX)
S512	1-572-184-11	(AEP,UK,WG,IT) ...SWITCH, KEYBOARD (PHONO)
S513	1-572-184-11	SWITCH, KEYBOARD (BAND)
S514	1-572-184-11	SWITCH, KEYBOARD (TUNING -)
S515	1-572-184-11	SWITCH, KEYBOARD (TUNING +)
S516	1-572-184-11	SWITCH, KEYBOARD (AUTO)
S517	1-572-184-11	SWITCH, KEYBOARD (MEMORY)
S518	1-572-184-11	SWITCH, KEYBOARD (NEXT ENTER)
S519	1-572-184-11	(US,Canadian,E,EA,AUS) ...SWITCH, KEYBOARD (ST/MUTE)
S519	1-572-184-11	(AEP,UK,WG,IT) ...SWITCH, KEYBOARD (DUAL)
S520	1-572-184-11	SWITCH, KEYBOARD (SHIFT)
S521	1-572-184-11	SWITCH, KEYBOARD (PRESET/TIMER -)
S522	1-572-184-11	SWITCH, KEYBOARD (PRESET/TIMER +)
S701	1-572-185-11	(AEP,UK,WG,IT)...SWITCH, SLIDE (ISS)
S702	1-554-088-00	SWITCH, KEY BOARD
S901	▲.1-571-722-11	(E,EA,AUS)...SWITCH, VOLTAGE SELECTION (VOLTAGE SELECTOR)
T1	1-402-424-11	(E,EA,AUS)...COIL (ANT,SW3)
T2	1-406-346-11	(E,EA,AUS)...COIL (OSC,SW3)
T81B	1-433-337-11	TRANSFORMER, BIAS OSCILLATION
T901	▲.1-449-898-11	(E,EA,AUS).....TRANSFORMER, POWER
T901	▲.1-449-899-11	(AEP,UK,WG,IT)...TRANSFORMER, POWER
T901	▲.1-449-900-11	(US,Canadian)....TRANSFORMER, POWER
T81	*1-537-138-31	(WG,IT)...TERMINAL BOARD (ANTENNA)
T81	*1-537-238-21	(EXCEPT FOR WG,IT)...TERMINAL BOARD (ANTENNA)
TB801	1-537-238-11	TERMINAL BOARD (SPEAKER)
TP81	*1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P
TP601	*1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P
TP701	*1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P
TP702	*1-568-449-11	(AEP,UK,WG,IT)...HOUSING, CONNECTOR (PC BOARD) 3P
X51	1-577-126-11	VIBRATOR, CRYSTAL
X81	1-577-075-11	OSCILLATOR, CERAMIC (456kHz)
X201	1-577-358-21	VIBRATOR, CERAMIC (4MHz)
X251	1-567-908-11	VIBRATOR, CRYSTAL (16.9344MHz)
X501	1-567-821-21	VIBRATOR, CRYSTAL (4.19MHz)
X502	1-527-997-31	VIBRATOR, CRYSTAL (32kHz)
X601	1-577-358-21	VIBRATOR, CERAMIC (4MHz)

Note:
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ACCESSORY & PACKING MATERIAL

1-465-342-11	REMOTE COMMANDER (RM-S100)
2-181-754-01	COVER, BATTERY
1-501-369-11	(1500:AEP,UK,IT)...ANTENNA (FM)
1-501-374-11	ANTENNA, LOOP
△1-506-401-31	(EA).....ADAPTOR, CONVERSION
△1-526-565-00	(E)...AC PLUG ADAPTOR
△1-555-074-00	(AUS).....CORD, POWER
△1-555-234-00	(AEP,WG,IT,EA)...CORD, POWER
△1-556-280-00	(E).....CORD, POWER
△1-558-032-11	(UK).....CORD, POWER
△1-575-706-00	(US,Canadian)...CORD, POWER
3-751-615-11	(AEP,UK,E,EA,AUS)...MANUAL, INSTRUCTION
3-751-615-21	(US,Canadian).....MANUAL, INSTRUCTION
3-751-615-41	(AEP,WG,IT).....MANUAL, INSTRUCTION
*4-936-852-01	CUSHION (LOWER)(HCD)
*4-936-853-01	CUSHION (UPPER)(HCD)
*4-936-862-01	(H7:AEP,WG,IT)...INDIVIDUAL CARTON (FH)
*4-936-863-01	(H7:E,EA).....INDIVIDUAL CARTON (FH)
*4-936-864-01	(H1500:EXCEPT UK) ...INDIVIDUAL CARTON (MHC)
*4-936-865-01	(H1500:UK).....INDIVIDUAL CARTON

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

HCD-H7/H1500

SONY[®] SERVICE MANUAL







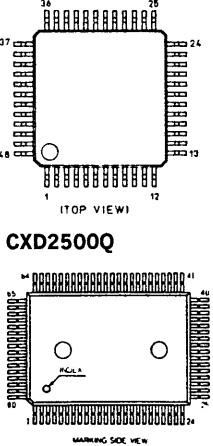
US Model
Canadian Model
AEP Model
UK Model
HCD-H1500

CORRECTION-1

Correct your service manual as shown below.

AEP Model
E Model
HCD-H7

 : indicates corrected portion.

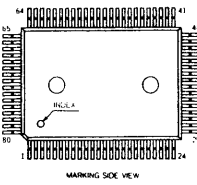Page	INCORRECT	CORRECT
5	<p>1. Laser Diode Properties</p> <ul style="list-style-type: none">• Material: GaAlAs• Wavelength: 780 mm• Emission Duration: continuous	<p>1. Laser Diode Properties</p> <ul style="list-style-type: none">• Material: GaAlAs • Wavelength: 780 <u>nm</u>• Emission Duration: continuous
15	<p>E-F Balance Check Procedure :</p> <p>1. Connect test point TP (ADJ) and TP (TES) to ground with lead wire.</p>	<p>E-F Balance Check Procedure :</p> <p>1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire. </p>
16	<p>Focus/Tracking Gain Adjustment Procedure :</p> <p>1.</p> <p>4. Adjustment RV101 on digital board so that the waveform is as shown in the figure below. (focus gain adjustment)</p> <p>6. Adjusted MV102 on digital board so that the waveform is as shown the figure below. (tracking gain adjustment)</p>	<p>Focus/Tracking Gain Adjustment Procedure :</p> <p>1.</p> <p>4. Adjustment <u>RV102</u> on digital board so that the waveform is as shown in the figure below. (focus gain adjustment) </p> <p>6. Adjusted <u>RV101</u> on digital board so that the waveform is as shown the figure below. (tracking gain adjustment) </p>
17	<p>6-1. SEMICONDUCTOR LEAD LAYOUTS CXA1372Q CXD2500Q</p> 	<p>6-1. SEMICONDUCTOR LEAD LAYOUTS CXA1372Q</p>  <p>CXD2500Q</p> 

Page	INCORRECT				CORRECT			
	No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
50	903	*A-4334-168-A	(AUS).....MOUNTED PCB, DISPLAY		903	*A-4334-168-A	(AUS).....MOUNTED PCB, DISPLAY	
		*A-4334-169-A	(US,Canadian)...MOUNTED PCB, DISPLAY			*A-4334-169-A	(US,Canadian)...MOUNTED PCB, DISPLAY	
		*A-4334-170-A	(AEP,UK).....MOUNTED PCB, DISPLAY			*A-4334-170-A	(AEP,UK).....MOUNTED PCB, DISPLAY	
		*A-4334-171-A	(IT).....MOUNTED PCB, DISPLAY			*A-4334-171-A	(IT).....MOUNTED PCB, DISPLAY	
		*A-4334-172-A	(WG).....MOUNTED PCB, DISPLAY			*A-4334-172-A	(WG).....MOUNTED PCB, DISPLAY	
		*A-4334-178-A	(E,EA).....MOUNTED PCB, DISPLAY			*A-4334-168-A	(E,EA).....MOUNTED PCB, DISPLAY	

HCD-H7/H1500

SONY SERVICE MANUAL


*US Model
Canadian Model
AEP Model
UK Model
HCD-H1500*

*AEP Model
E Model
HCD-H7*

CORRECTION- 2

Correct your service manual as shown below.

 : indicates corrected portion.

Page	INCORRECT			CORRECT	
	<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Description</u>
62	Q610	8-729-801-48	TRANSISTOR 2SB1013-4	8-729-801-84 	TRANSISTOR 2SB1013-4

HCD-H7/H1500


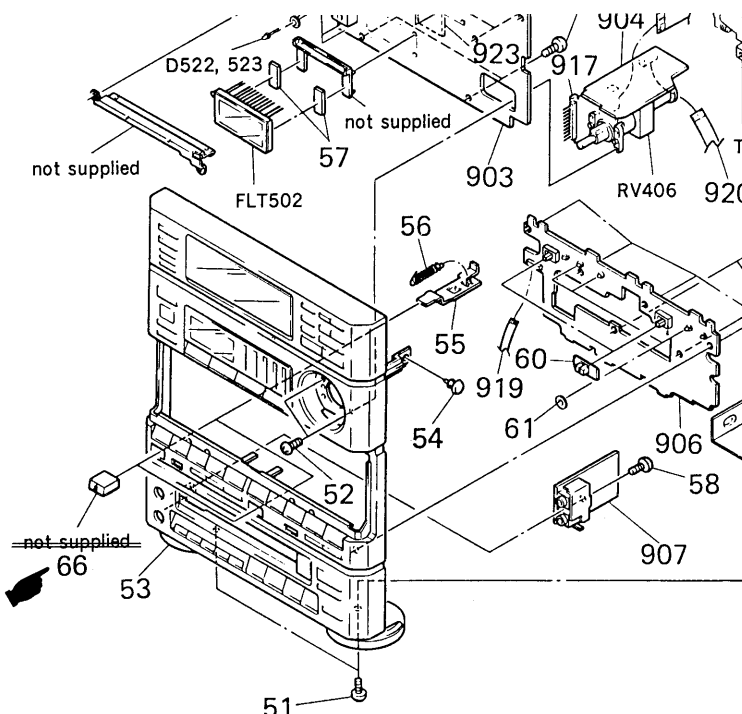
SONY[®] SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
HCD-H1500
AEP Model
E Model
HCD-H7

CORRECTION-3

Correct your service manual as shown below.

 : indicates corrected portion.

Page	INCORRECT			CORRECT		
50	No.	Part No.	Description	No.	Part No.	Description
				66	3-349-055-01	BUTTON (EJECT) 
						
50	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
	903	*A-4334-168-A	(AUS) ...MOUNTED PCB, DISPLAY	903	*A-4334-168-A	(E, EA, AUS).....MOUNTED PCB, DISPLAY
56		*A-4334-178-A	(E, EA) ...MOUNTED PCB, DISPLAY	