

# SERVICE MANUAL

# BA-4C CHASSIS

*Self Diagnosis*  
Supported model

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST</u>	<u>CHASSIS NO.</u>
<b>KV-20FV10</b>	RM-Y168	US	SCC-S22B-A
<b>KV-20FV10</b>	RM-Y168	CND	SCC-S24B-A
<b>KV-21FV10</b>	RM-Y168	E	SCC-S23E-A
<b>KV-21FV10C</b>	RM-Y168	E	SCC-S23F-A
<b>KV-25FV10A</b>	RM-Y168	E	SCC-S23B-A



KV-20FV10



RM-Y168



TRINITRON® COLOR TV  
**SONY®**

SPECIFICATIONS

	KV-20FV10	KV-21FV10/21FV10C	KV-25FV10A
Power Requirements	120V, 60 Hz	120-220V, 50-60Hz	120-220V, 50-60Hz
Number of inputs/outputs			
Video Input <sup>(1)</sup>	2	2	2
S Video Input <sup>(2)</sup>	1	1	1
Audio Input <sup>(3)</sup>	2	2	2
Audio Output <sup>(4)</sup>	1	1	1
Speaker Output (W)	5W x 2	5W x 2	10W x 2
Power Consumption (W)			
In Use (Max)	125W	125W	150W
In Standby	1W	1W	1W
Dimensions (W/H/D)			
(mm)	562 x 466 X 503 mm	562 x 466 X 503 mm	652 x 524.3 x 467.3 mm
(in)	22 <sup>1</sup> / <sub>8</sub> x 18 <sup>3</sup> / <sub>8</sub> x 18 <sup>3</sup> / <sub>4</sub> in	22 <sup>1</sup> / <sub>8</sub> x 18 <sup>3</sup> / <sub>8</sub> x 18 <sup>3</sup> / <sub>4</sub> in	25 <sup>3</sup> / <sub>4</sub> x 20 <sup>11</sup> / <sub>16</sub> x 18 <sup>7</sup> / <sub>16</sub> in
Mass			
(kg)	27 kg	27 kg	40 kg
(lbs)	59 lbs	59 lbs	88 lbs 3 oz

Television system

American TV standard/NTSC  
PAL M, N (KV-25FV10A ONLY)

- <sup>1)</sup> 1 Vp-p 75 ohms unbalanced, sync negative  
<sup>2)</sup> Y: 1 Vp-p 75 ohms unbalanced, sync negative  
C: 0 286 Vp-p (Burst signal), 75 ohms  
<sup>3)</sup> 500 mVrms (100% modulation), impedance: 47 kilohms  
<sup>4)</sup> More than 408 mVrms at the maximum volume setting (variable)  
More than 408 mVrms (fix)

Channel coverage

VHF:2-13/UHF:14-69/CATV:1-125

Visible screen size

20" picture measured diagonally  
24" picture measured diagonally (KV-25FV10A ONLY)

Actual screen size

21" picture measured diagonally  
25" picture measured diagonally (KV-25FV10A ONLY)

Antenna

75 ohm external terminal for VHF/UHF

Supplied accessories

Remote Commander RM-Y168 (all models)  
Size AA (R6) batteries (2)

Optional accessories

Dipole antenna  
Connecting cables VMC-810S/820S, VMC-720M,  
YC-15V/30V, RK74A  
U/V mixer EAC-66

(●)SRS (SOUND RETRIEVAL SYSTEM)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.  
The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.  
BBE and BBE symbol are trademarks of BBE Sound, Inc. and are licensed by BBE Sound, Inc. under U.S. Patent No. 4,638,258 and 4,482,866.

Design and specifications are subject to change without notice.

<b>TABLE OF CONTENTS</b>
--------------------------

<i>Section</i>	<i>Title</i>	<i>Page</i>
	Warnings and Cautions .....	4
	Self-Diagnostic Function .....	4
	Safety Check-Out Instructions .....	7
<b>1. GENERAL</b> .....		<b>8</b>
<b>2. DISASSEMBLY</b>		
2-1.	Rear Cover Removal .....	14
2-2.	A Board Removal .....	14
2-3.	Service Position .....	14
2-4.	Picture Tube Removal .....	15
<b>3. SET-UP ADJUSTMENTS</b>		
3-1.	Beam Landing .....	16
3-2.	Convergence .....	17
3-3.	Focus .....	18
3-4.	Screen (G2) .....	18
3-5.	Method of Setting the Service Adjustment Mode .....	19
3-6.	White Balance Adjustments .....	19
<b>4. SAFETY RELATED ADJUSTMENTS</b>		
4-1.	☒ R582 and R584 Confirmation Method (HV Hold-Down Confirmation and Readjustments) .....	20
4-2.	B+ Voltage Confirmation and Adjustment .....	20
<b>5. CIRCUIT ADJUSTMENTS</b>		
5-1.	Setting the Service Adjustment Mode .....	22
5-2.	Memory Write Confirmation Method .....	22
5-3.	Adjustment Buttons and Indicators .....	22
5-4.	A Board Adjustments .....	24
<b>6. DIAGRAMS</b>		
6-1.	Block Diagram .....	27
6-2.	Circuit Board Location .....	30
6-3.	Printed Wiring Boards and Schematic Diagrams .....	30
	• A Board .....	31
	• C Board .....	38
	• G Board .....	39
	• HZ Board .....	42
	• V Board .....	43
6-4.	Semiconductors .....	49
<b>7. EXPLODED VIEW</b>		
7-1.	Chassis (KV-20FV10/21FV10/21FV10C) .....	50
7-2.	Chassis (KV-25FV10A ONLY) .....	51
<b>8. ELECTRICAL PARTS LIST</b> .....		<b>52</b>

## WARNINGS AND CAUTIONS

### CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

### WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS, AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

### ATTENTION!!

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

### ATTENTION!!

AFIN D'EVITER TOUT RESQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

### ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MARQUE  $\triangle$  SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT SUSPECTE.

## SELF-DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER LED will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the Remote Commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

### Diagnostic Test Indicators

When an error occurs, the STANDBY/TIMER LED will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas.

Results for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".



Diagnostic Item Description	No. of Times STANDBY/TIMER LED Flashes	Self-diagnostic Display/ Diagnostic Result	Probable Cause Location	Detected Symptoms
Power does not turn on	Does not light	_____	<ul style="list-style-type: none"> <li>Power cord is not plugged in.</li> <li>Fuse is burned out. (F600) (G Board)</li> </ul>	<ul style="list-style-type: none"> <li>Power does not come on.</li> <li>No power is supplied to the TV.</li> <li>AC power supply is faulty.</li> </ul>
+B overcurrent (OCP)*	2 times	2:0 or 2:1	<ul style="list-style-type: none"> <li>H.OUT (Q502) is shorted. (A Board)</li> <li>IC1751 is shorted. (C Board)</li> </ul>	<ul style="list-style-type: none"> <li>Power does not come on.</li> <li>Load on power line is shorted.</li> </ul>
Vertical deflection stopped*	4 times	4:0 or 4:1	<ul style="list-style-type: none"> <li>+13V is not supplied. (A Board)</li> <li>IC541 is faulty. (A Board)</li> </ul>	<ul style="list-style-type: none"> <li>Has entered standby state after horizontal raster.</li> <li>Vertical deflection pulse is stopped.</li> <li>Power line is shorted or power supply is stopped.</li> </ul>
White balance failure (not balanced)	5 times	5:0 or 5:1	<ul style="list-style-type: none"> <li>Video OUT (IC541) is faulty. (A Board)</li> <li>IC301 is faulty. (A Board)</li> <li>Screen (G2) is improperly adjusted.**</li> </ul>	<ul style="list-style-type: none"> <li>No raster is generated.</li> <li>CRT cathode current detection reference pulse output is small.</li> </ul>

\* If a +B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.

The symptom that is diagnosed first by the microcontroller is displayed on the screen.

\*\* Refer to Screen (G2) Adjustments in Section 3-4 of this manual.

## Display of Standby/Timer LED Flash Count

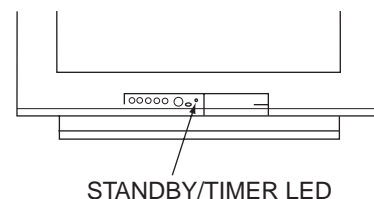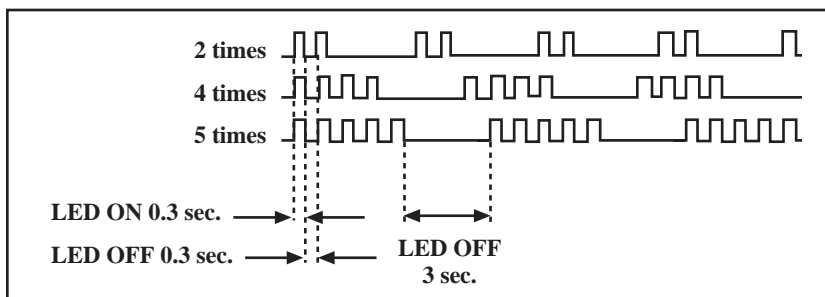

<u>Diagnostic Item</u>	<u>Flash Count*</u>
+B overcurrent	2 times
Vertical deflection stopped	4 times
White balance failure	5 times

\*One flash count is not used for self-diagnostic.

## Stopping the Standby/Timer LED Flash

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER LAMP from flashing.

## Self-Diagnostic Screen Display

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of failure on the screen for confirmation.

### To Bring Up Screen Test

In standby mode, press buttons on the Remote Commander sequentially, in rapid succession, as shown below:

Display → Channel **5** → Sound volume **[-]** → Power ON

↑

Note that this differs from entering the service mode (sound volume **[+]**).

### Self-Diagnostic Screen Display

SELF DIAGNOSTIC		
2:		0
3:	N/A	0
4:		0
5:		1
101:	N/A	0

Numeral “0” means that no fault was detected.

Numeral “1” means a fault was detected one time only.

Handling of Self-Diagnostic Screen Display

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

Clearing the Result Display


To clear the result display to “0”, press buttons on the Remote Commander sequentially when the diagnostic screen is displayed, as shown below:

Channel **8** ➡ **ENTER**

Quitting the Self-Diagnostic Screen

To quit the entire self-diagnostic screen, turn off the power switch on the Remote Commander or the main unit.

Self-Diagnostic Circuit

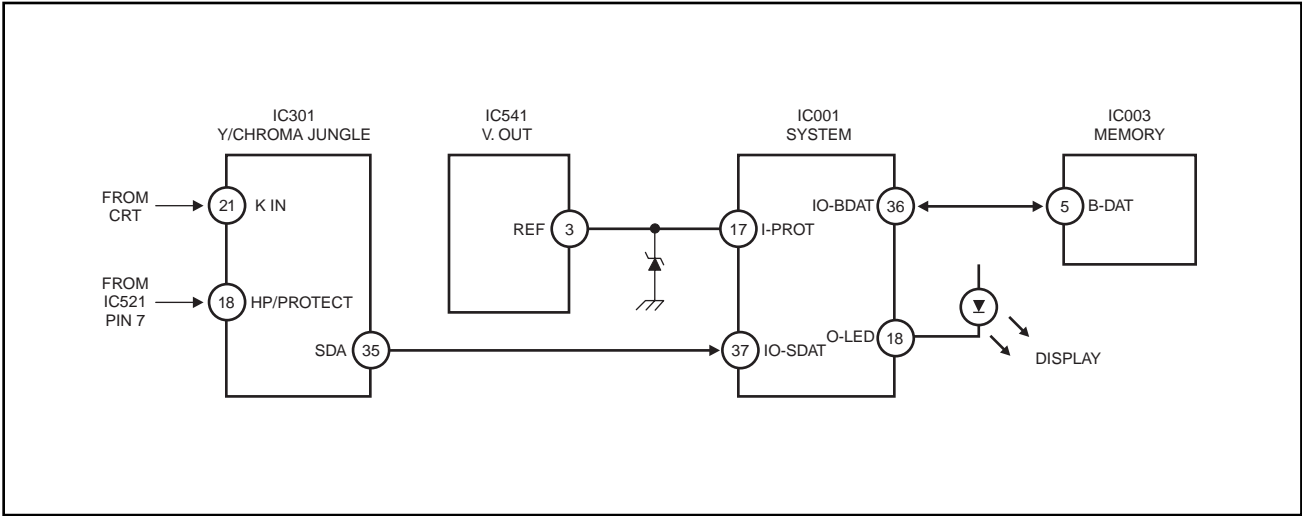

- +B overcurrent (OCP)**

Occurs when an overcurrent on the +B (115V) line is detected by pin 18 of IC301. If the voltage of pin 18 of IC 301 is less than 1V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
- Vertical deflection stopped**

Occurs when an absence of the vertical deflection pulse is detected by pin 17 of IC001. Power supply will shut down when waveform interval exceeds 2 seconds.
- White balance failure**

If the RGB levels\* do not balance within 2 seconds after the power is turned on, this error will be detected by IC301. TV will stay on, but there will be no picture.

\*(Refers to the RGB levels of the AKB detection Ref pulse that detects 1K.)

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### Leakage Test

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63Trd are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

### How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

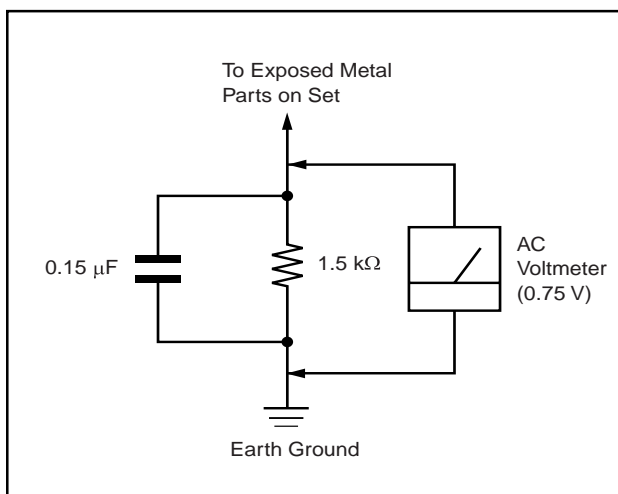


Figure A. Using an AC voltmeter to check AC leakage.

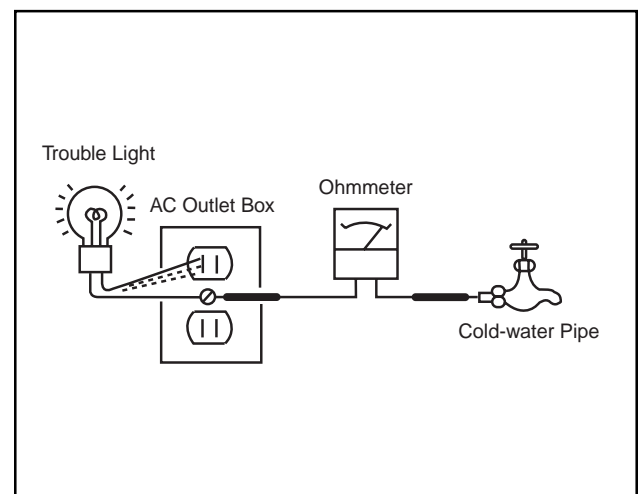


Figure B. Checking for earth ground.

## SECTION 1 GENERAL

The instructions mentioned here are partial abstracts from the Operating Instruction Manual.  
The page numbers shown reflect those of the Operating Instruction Manual.



## Connecting Your TV

Read this chapter before setting up your TV for the first time. This section covers basic connections in addition to any optional equipment you may be connecting.

### Basic Connections

#### TV with indoor or outdoor antenna, or CATV cable

Depending on the cable available in your home, choose one of the connections below:

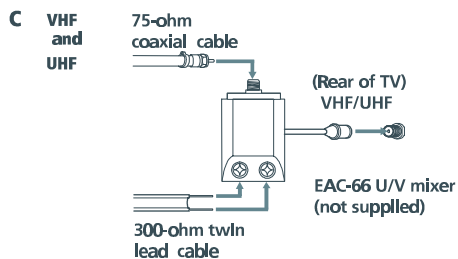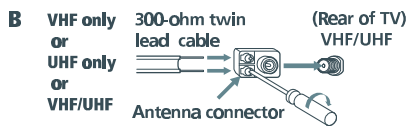


If you are connecting to an indoor or outdoor antenna, it will be necessary to adjust the orientation of the antenna for best reception.

3

## Connecting Additional Equipment

### TV and VCR

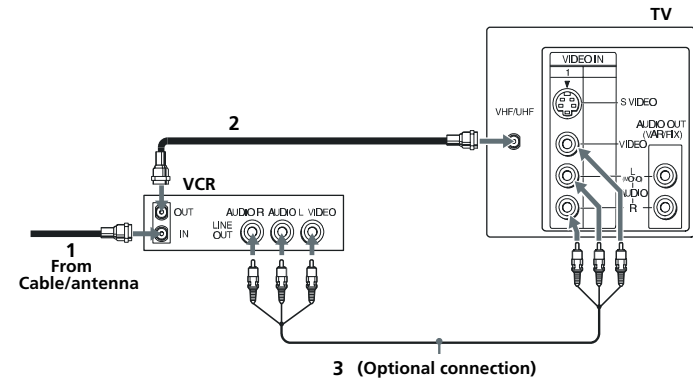

- 1 Connect the coaxial cable from your TV antenna or cable TV to the IN jack on your VCR.
- 2 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF IN jack on the TV.

To watch video programs from your VCR, tune your TV to channel 3 or 4 (as set on the rear of your VCR).

#### (Optional connection)


- 3 If your VCR is equipped with video inputs, for better picture quality you should connect A/V cables from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV. You can use the TV/VIDEO button to switch between the TV and VCR inputs.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

4




## TV and Cable Box

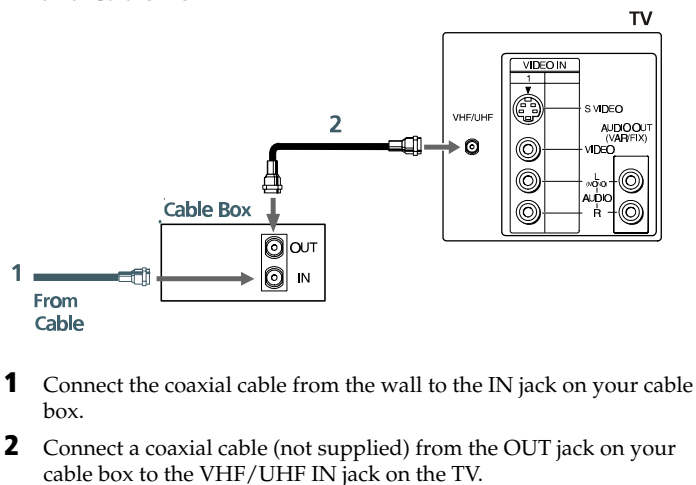

To view channels from your cable box, tune your TV to channel 3 or 4 (as set on the rear panel of your cable box).

If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature on page 20.

## TV, VCR, and Cable box

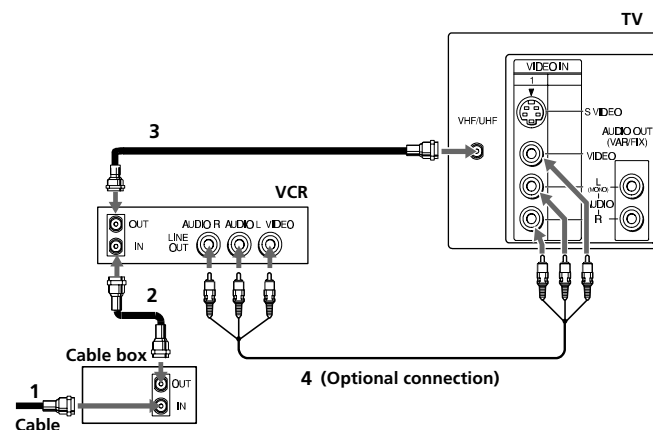


If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature on page 20.

### (Optional connection)

- 4 If your VCR is equipped with video inputs, for better picture quality you should connect A/V cables from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV. You can use the button to switch between the TV and VCR inputs.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

## TV and Digital Satellite Receiver

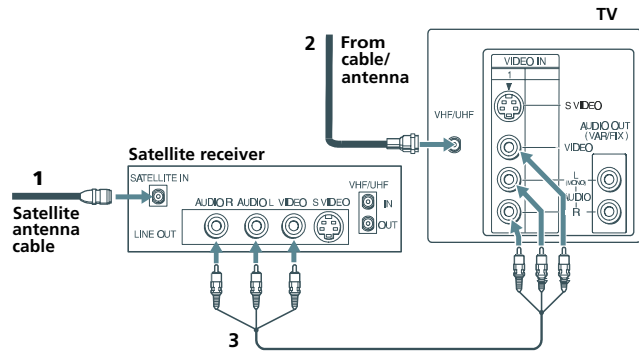


- 1** Connect the cable from your satellite antenna to SATELLITE IN on the satellite receiver.
- 2** Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3** Using A/V connectors, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your TV.

You can use the button to switch between the satellite receiver and TV.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, your audio connectors must still be connected.

## TV, Digital Satellite Receiver and VCR

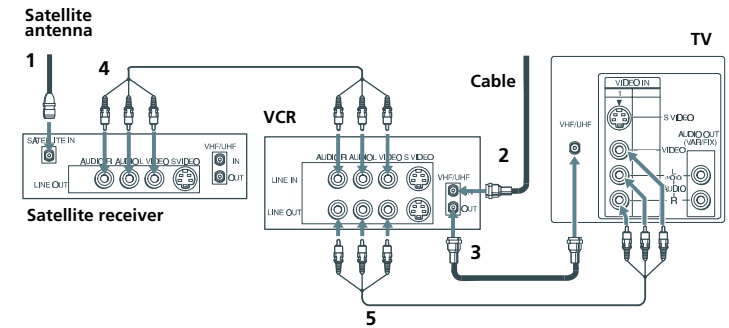


- 1** Connect the cable from your satellite antenna to SATELLITE IN on the satellite receiver.
- 2** Attach the coaxial connector from your cable or antenna to VHF/UHF IN on your VCR.
- 3** Using a coaxial cable, connect VHF/UHF OUT on your VCR to VHF/UHF on your TV.
- 4** Using A/V connectors, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your VCR.
- 5** Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

To view from the satellite or VCR, select the video input to which your satellite receiver or VCR is connected by pressing on the remote control.


## Connecting a Camcorder

Using A/V cables, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

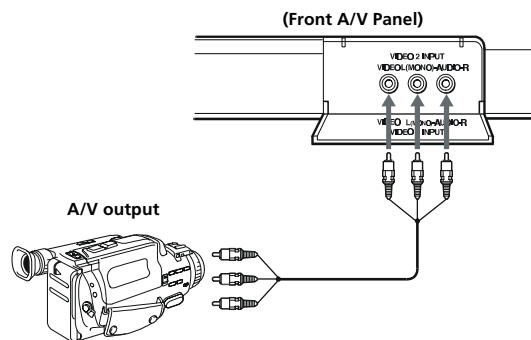

## Connecting a DVD Player


Using A/V connectors, connect LINE OUT on your DVD to VIDEO IN on your TV.

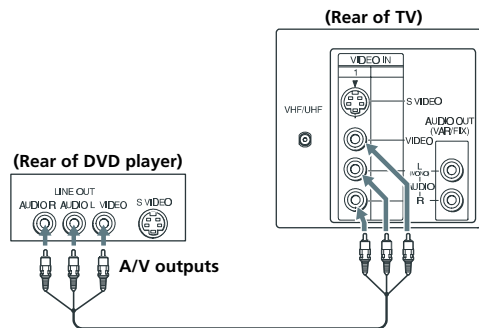

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, your audio connectors must still be connected.

## Connecting an audio system


Using audio connectors, connect AUDIO OUT on your TV to one of the unused line inputs (e.g. TV, AUX, TAPE 2) on your stereo.

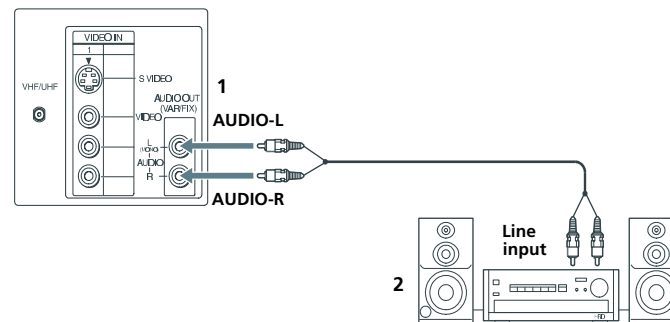






Set your stereo to the chosen line input. See page 16 for additional audio setup instructions.

# Using the Remote Control and Basic Functions

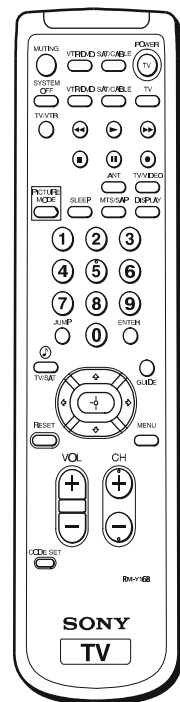This section shows you how to use more advanced buttons on the remote control and how to use the on-screen menus.




Button	Description
POWER	Press when you want to turn connected equipment on and off.
FUNCTION	Press when you want to control connected equipment with your remote control.
MUTING	Instantly turns off the sound. Press again or press  to restore sound.
SYSTEM OFF	Powers off all Sony equipment at once.
TV/VIDEO	Cycles through available video inputs.
	Moves the cursor in the on-screen menus. Press the arrow buttons to move the cursor, press the center button to select or access an option.
PICTURE MODE	Cycles through the available VIDEO MODE settings.
SLEEP	Turns the TV off automatically in approximately 30, 60 or 90 minutes. Cancel by pressing until SLEEP OFF appears.
MTS/SAP	Cycles through the Multi-channel TV Sound (MTS) options: STEREO, SAP (Second Audio Programming), MONO.
DISPLAY	Press once to show current time, (if set) and channel number. Press again to activate CAPTION VISION settings, if available. To cancel, press again until DISPLAY OFF appears.

 TV/SAT	Cycles through available AUTO VOLUME settings (see page 16).
JUMP	Alternates back and forth between the last two channels selected with the   buttons.
GUIDE	Brings up the custom guide of your satellite receiver.
MENU	Displays the on-screen menu. Press again to exit the menu at any time.
RESET	Press to return to factory settings while in the on-screen menu.
CODE SET	Use to program your remote control to operate connected video equipment, (see page 29).

# Troubleshooting

If you are having a problem with your TV, try the suggestions below. If the problem persists, contact your nearest Sony dealer.

<b>No picture, no sound</b>	<ul style="list-style-type: none"> <li>❑ Make sure the power cord is plugged in.</li> <li>❑ If a red light is flashing on the front of your TV for more than a few minutes, call your local service center.</li> <li>❑ Check your PARENTAL CONTROL settings, (pages 25-26).</li> <li>❑ Check the TV / VIDEO settings: when watching TV, set to TV; when watching video equipment, set to VIDEO (page 15).</li> <li>❑ Make sure the batteries have been inserted correctly into the remote control.</li> <li>❑ Try another channel, it could be station trouble.</li> </ul>
<b>Poor or no picture, good sound</b>	<ul style="list-style-type: none"> <li>❑ Adjust PICTURE in the VIDEO menu (page 15).</li> <li>❑ Adjust BRIGHTNESS in the VIDEO menu (page 15).</li> <li>❑ Check the antenna and/or cable connections (page 3).</li> </ul>
<b>Good picture, no sound</b>	<ul style="list-style-type: none"> <li>❑ Press  so that MUTING disappears from the screen (page 11).</li> <li>❑ Check your AUDIO settings. Your TV may be set to SAP (page 16).</li> </ul>
<b>No color</b>	<ul style="list-style-type: none"> <li>❑ Adjust COLOR in the VIDEO menu (page 15).</li> </ul>
<b>Only snow appears on the screen</b>	<ul style="list-style-type: none"> <li>❑ Check the CABLE setting in the SET UP menu (page 20).</li> <li>❑ Check the antenna and/or cable connections (page 3).</li> <li>❑ Make sure the channel selected is currently broadcasting.</li> </ul>
<b>Dotted lines or stripes</b>	<ul style="list-style-type: none"> <li>❑ Adjust the antenna.</li> <li>❑ Move the TV away from other electronic equipment. Some electronic equipment can create electrical noise, which can interfere with TV reception.</li> </ul>
<b>Double images or ghosts</b>	<ul style="list-style-type: none"> <li>❑ Check your outdoor antenna or call your cable service.</li> </ul>
<b>Cannot receive higher number channels (UHF) when using an antenna</b>	<ul style="list-style-type: none"> <li>❑ Make sure CABLE is set to OFF in the SET UP menu (page 20).</li> <li>❑ Use AUTO PROGRAM to add channels that are not presently in the memory (page 20).</li> </ul>


<b>Cable stations don't seem to work</b>	<ul style="list-style-type: none"> <li>❑ Make sure CABLE is set to ON in the SET UP menu (page 20).</li> <li>❑ Use AUTO PROGRAM to add channels that are not presently in the memory (page 20).</li> </ul>
<b>Remote Control does not operate</b>	<ul style="list-style-type: none"> <li>❑ Batteries could be weak. Replace them (page 2).</li> <li>❑ Move the TV 3-4 feet away from fluorescent lights.</li> </ul>
<b>The TV needs to be cleaned</b>	<ul style="list-style-type: none"> <li>❑ Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.</li> </ul>
<b>Lost password for PARENTAL CONTROL</b>	<ul style="list-style-type: none"> <li>❑ In the password screen, enter the following master password: 4357. After using the master password, you must create a new password.</li> </ul>

*If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669) (U.S. residents only). (416) 499-SONY (7669) (Canadian residents only).*


**SECTION 2  
DISASSEMBLY**

**2-1. REAR COVER REMOVAL**


**KV-25FV10A**

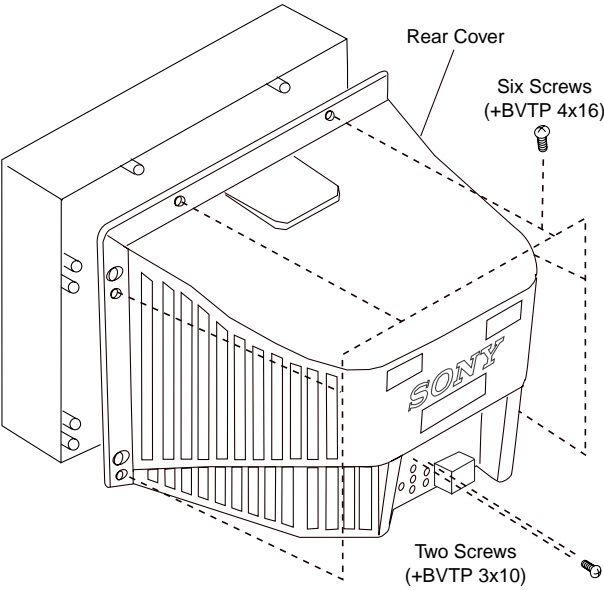


**KV-20FV10/21FV10/21FV10C**

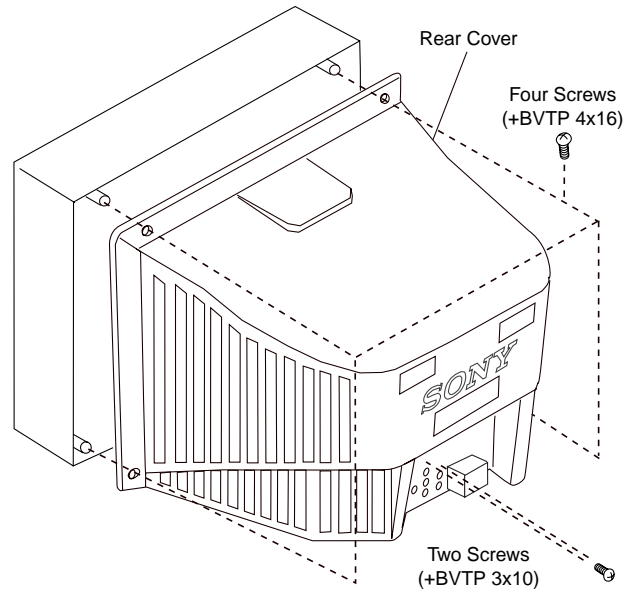

**2-2. A BOARD REMOVAL**

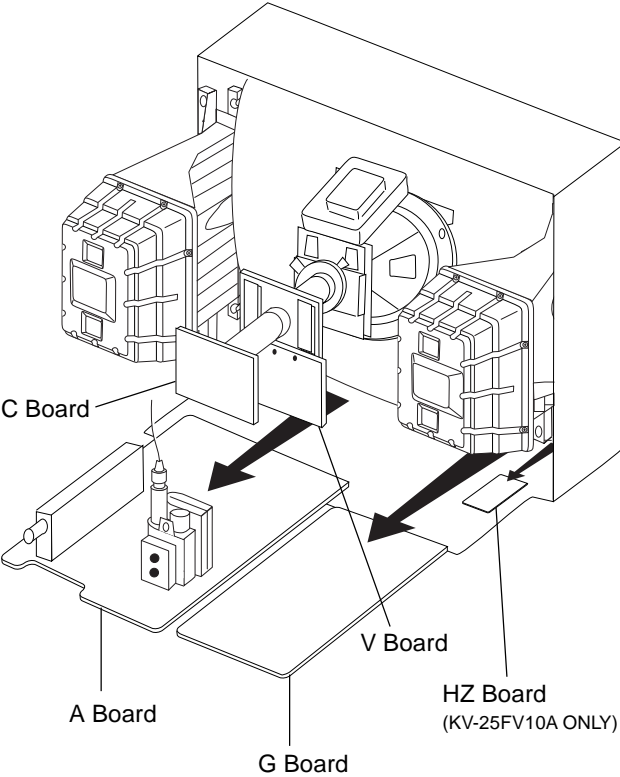



**2-3. SERVICE POSITION**

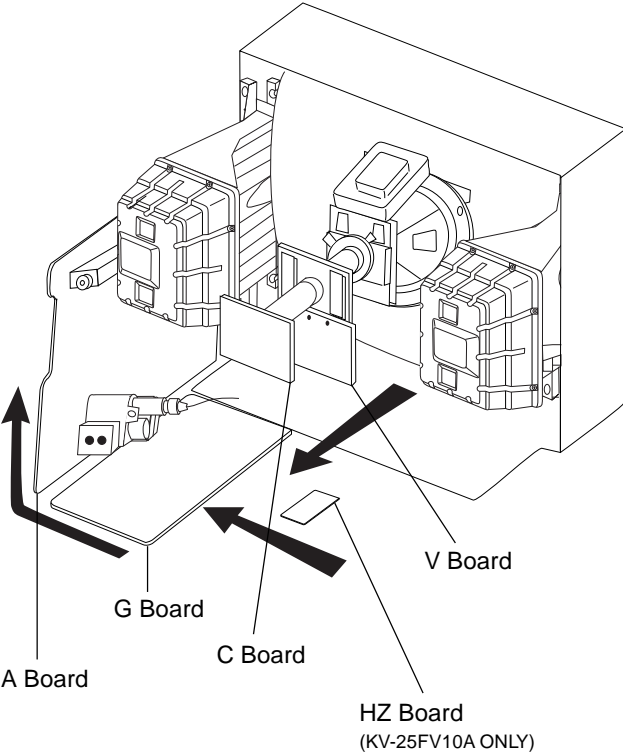

## 2-4. PICTURE TUBE REMOVAL

### WARNING: BEFORE REMOVING THE ANODE CAP

High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT **before** attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

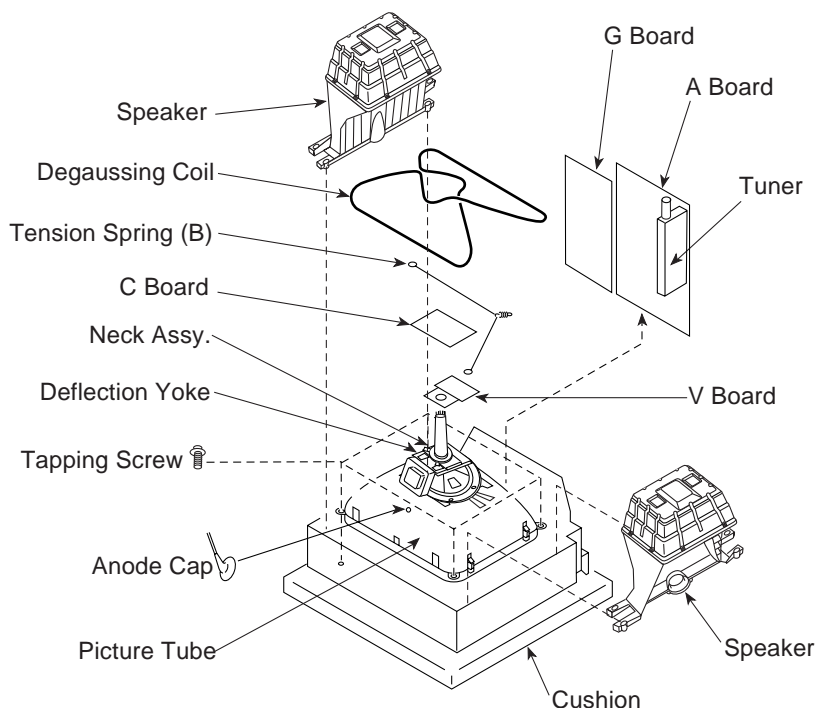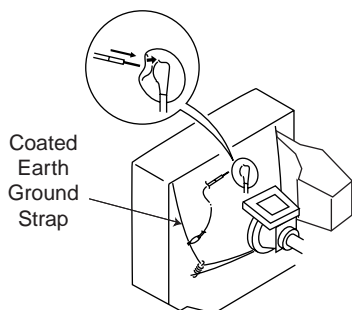

## ANODE CAP REMOVAL

**WARNING:** High voltage remains in the CRT even after the power is disconnected. To avoid electrical shock, discharge the CRT **before** attempting to remove the anode cap. Short between anode and coated earth ground strap of CRT.


**NOTE:** After removing the anode, short circuit the anode of the picture tube and the anode cap to either the metal chassis, CRT shield, or carbon painted on the CRT.

### REMOVAL PROCEDURES

- 
- ① Turn up one side of the rubber cap in the direction indicated by arrow ①.
  - ② Use your thumb to pull the rubber cap firmly in the direction indicated by arrow ②.
  - ③ When one side of the rubber cap separates from the anode button, the anode cap can be removed by turning the rubber cap and pulling it in the direction of arrow ③.

### HOW TO HANDLE AN ANODE CAP

- ① Do not use sharp objects which may cause damage to the surface of the anode cap.
- ② To avoid damaging the anode cap, do not squeeze the rubber covering too hard. A material fitting called a shatter-hook terminal is built into the rubber.
- ③ Do not force turn the foot of the rubber cover. This may cause the shatter-hook terminal to protrude and damage the rubber.

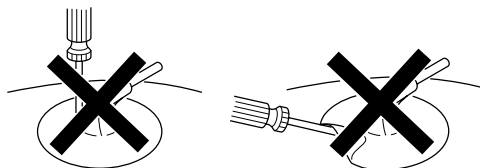

SECTION 3  
SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or when a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

Set the controls as follows unless otherwise noted:

VIDEO MODE: STANDARD

PICTURE control ..... Normal

BRIGHTNESS control ..... Normal

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G2)
5. White Balance

**Note:** Test equipment required:

- Color bar pattern generator
- Degausser
- DC power supply
- Digital multimeter


3-1. BEAM LANDING

Before beginning adjustment procedure:


1. Degauss the entire screen.
2. Feed in the white pattern signal.

Adjustment Procedure


1. Input a raster signal with the pattern generator.
2. Loosen the deflection yoke mounting screw and set the purity control to the center as shown below.

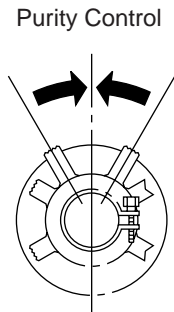


3. Turn the raster signal of the pattern generator to green.
4. Move the deflection yoke backward and adjust the purity control so that green is in the center and red and blue are at the sides evenly.

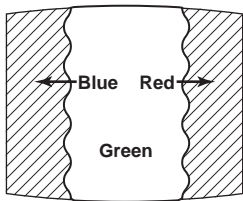

5. Move the deflection yoke forward and adjust so that the entire screen becomes green.

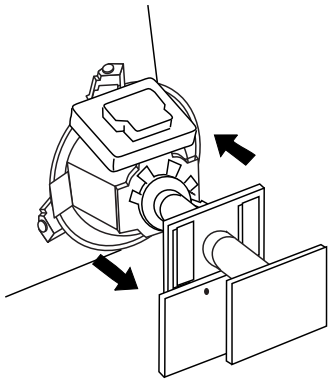

6. Switch over the raster signal to red and blue and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw.
8. If landing at the corner is not right, adjust by using the disk magnets.

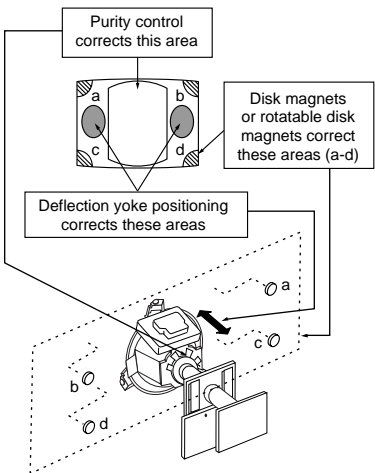




### 3-2. CONVERGENCE

Before starting convergence adjustments:


1. Perform FOCUS, V.LIN AND V.SIZE adjustments.
2. Set BRIGHTNESS control to minimum.
3. Feed in dot pattern.

#### Vertical Static Convergence


1. Adjust V.STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement adjust V.STAT RV to converge.)

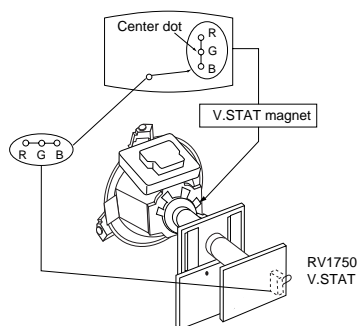

2. Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

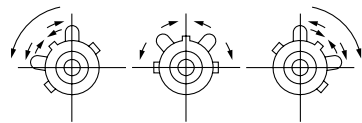


When the V.STAT magnet is moved in the direction of arrows a and b, red, green, and blue dots move as shown below:

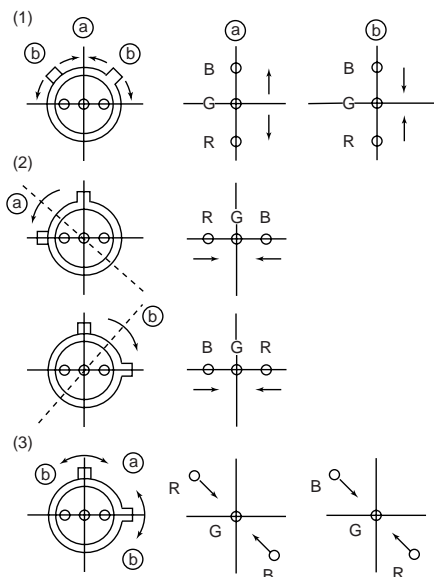

#### Horizontal Static Convergence

If the blue dot does not converge with the red and green dots, perform the following:


1. Move BMC magnet (a) to correct insufficient H. Static convergence.
2. Rotate BMC magnet (b) to correct insufficient V. Static convergence.
3. After adjusting the BMC magnet, repeat Beam Landing Adjustment.

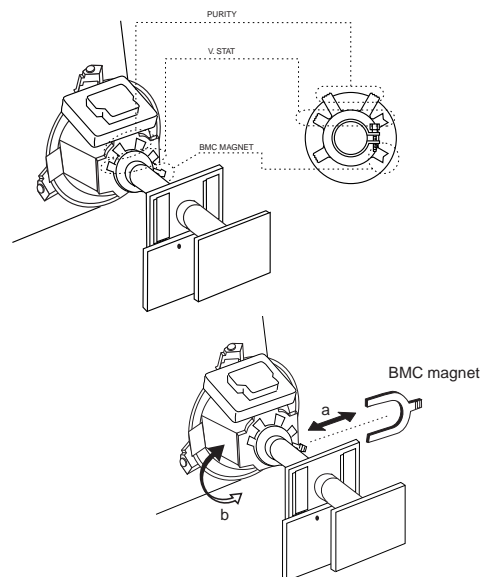

#### Dynamic Convergence Adjustment

Before performing this adjustment, perform Horizontal and Vertical Static Convergence Adjustment.



1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.
3. Move the deflection yoke for best convergence, as shown below:

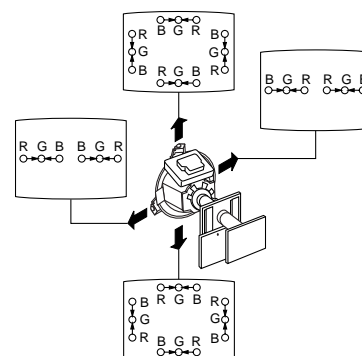

4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

## TLH Plate Adjustment

- Input crosshatch pattern.
- Adjust PICTURE QUALITY to standard, PICTURE and BRIGHTNESS to 50%, and OTHER to standard.
- Adjust the Horizontal Convergence of red and blue dots by tilting the TLH plate on the deflection yoke.

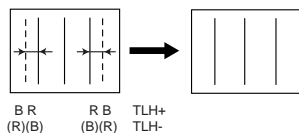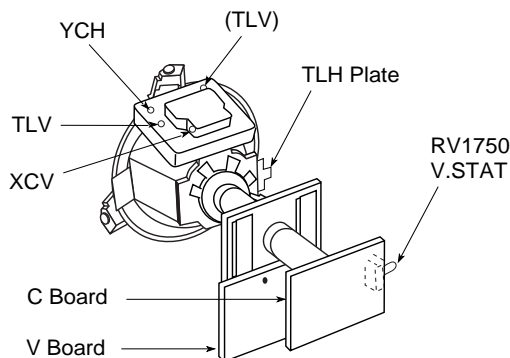


1. Adjust XCV core to balance X axis.
2. Adjust YCH VR to balance Y axis.
3. Adjust vertical red and blue convergence with V.TILT (TLV VR).

Perform adjustments while tracking items 1 and 2.


## Screen-Corner Convergence

1. Affix a permalloy assembly corresponding to the misconverged areas.

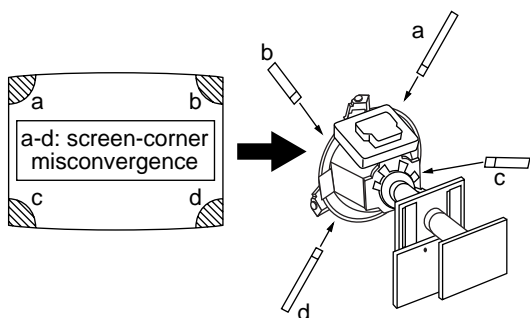


## 3-3. FOCUS

1. Adjust FOCUS control for best picture.

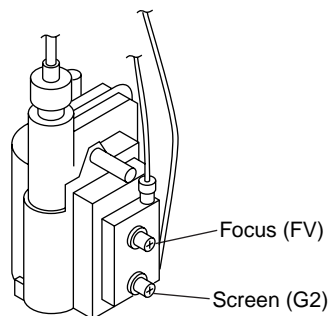

## 3-4. SCREEN (G2)

1. Input a dots pattern.
2. Set the PICTURE and BRIGHTNESS controls at minimum and COLOR control at normal.
3. Adjust SBRT, GCUT, BCUT in service mode with an oscilloscope as shown below so that voltages on the red, green, and blue cathodes are 170 VDC.

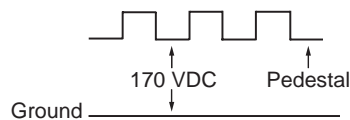

4. Observe the screen and adjust SCREEN (G2) VR in FBT to obtain the faintly visible background of dot signal.


### 3-5. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

#### Service Mode Procedure

1. Standby mode (power off).
2. **Display** → Channel **5** → Sound volume **+** → Power on the Remote Commander (press each button within a second).

#### Service Adjustment Mode In


1. The CRT displays the item being adjusted.

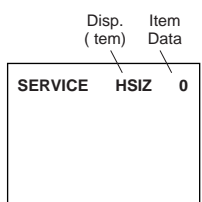

2. Press **1** or **4** on the Remote Commander to select the item.
3. Press **3** or **6** on the Remote Commander to change the data.
4. Press **MUTING** then **ENTER** to save into the memory.

#### Service Adjustment Mode Memory

Turn set off then on to exit service adjustment mode.

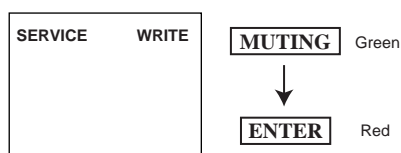

### 3-6. WHITE BALANCE ADJUSTMENTS

1. Input an entire white signal with burst.
2. Set to Service Adjustment Mode.
3. Set DCOL to "0".
4. Set the PICTURE and BRIGHTNESS to minimum.
5. Adjust with SBRT if necessary.
6. Select GCUT and BCUT with **1** and **4**.
7. Adjust with **3** and **6** for the best white balance.
8. Set PICTURE and BRIGHTNESS to maximum.
9. Select GDRV and BDRV with **1** and **4**.
10. Adjust with **3** and **6** for the best white balance.
11. Reset DCOL to "1".
12. To write into memory, press **MUTING** then **ENTER**.

SECTION 4  
SAFETY RELATED ADJUSTMENTS

4-1. **☒ R582 AND R584 (R584 for KV-25FV10A ONLY)CONFIRMATION METHOD (HV HOLD-DOWN CONFIRMATION) AND READJUSTMENTS**

The following adjustments should always be performed when replacing the following components which are marked with **☐** on the schematic diagram:

Part Replaced ( <b>☐</b> )	Adjustment ( <b>☒</b> )
DY, CRT, C507, C520, C573, C574, C575, D572, D573, D574, IC521, IC301, R578, R579, R582, R583, R585, R586, R587, T504, T505.....A Board	HV HOLD-DOWN (R582, R584)

Preparation Before Confirmation


- 1. Using a Variac, apply AC input voltage:  $120 \pm 2$  VAC (or  $120-220 \pm 2$  VAC for KV-21FV10/21FV10C/25FV10A only).
- 2. Turn the POWER switch ON.
- 3. Input a white signal and set the PICTURE and BRIGHTNESS controls to maximum.
- 4. Confirm that the voltage between C574 (+) or TP503 and ground is more than 105 VDC.

Hold-down Operation Confirmation

- 1. Connect the current meter between Pin 11 of the FBT (T505) and the PWB land where Pin 11 would normally attach. (See Figure 1 on the next page.)
- 2. Input a dot signal and set PICTURE and BRIGHTNESS to minimum:  $IABL = 100 \pm 100 \mu A$ .
- 3. Confirm the voltage of A Board TP-600 is  $135 \pm 3$  VDC.
- 4. Connect the digital voltmeter and the DC power supply via diode 1SS119 to C574 (+) and ground. (See Figure 1 on the next page.)
- 5. Increase the DC power voltage gradually until the picture blanks out.
- 6. Turn DC power source off immediately.
- 7. Read the digital voltmeter indication (standard:  $115.7 \pm .3$  VDC) (standard:  $138.0 \pm .3$  VDC KV-25FV10A ONLY).
- 8. Input a white signal and set PICTURE and BRIGHTNESS to maximum:  $IABL = 1350 \pm 100 \mu A$   $IABL = 1650 \pm 100 \mu A$  (KV-25FV10A ONLY)
- 9. Repeat steps 4 to 7.

Hold-down Readjustment

If the setting indicated in step 2 of Hold-down Operation Confirmation cannot be met, readjustment should be performed by altering the resistance value of R582 and/or R584 components marked with **☒**.

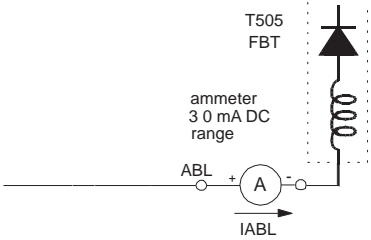

4-2. B+ VOLTAGE CONFIRMATION AND ADJUSTMENT

Note: The following adjustments should always be performed when replacing the following components, which are marked with **☐** on the schematic diagram on the G Board.

**G BOARD:** IC601, PH600

- 1. Using a Variac, apply AC input voltage:  $130 \pm 2$  VAC (or  $120-220 \pm 2$  VAC for KV-21FV10/21FV10C/25FV10A only).
- 2. Input a dot signal.
- 3. Set the PICTURE and BRIGHTNESS controls to minimum.
- 4. Confirm that the voltage of A Board TP-600 is  $135 \pm 3$  VAC.
- 5. If step 3 is not satisfied, replace the components listed above, then repeat steps 1–3.

SECTION 5  
CIRCUIT ADJUSTMENTS

ELECTRICAL ADJUSTMENTS BY REMOTE COMMANDER

Use the Remote Commander (RM-Y168) to perform the circuit adjustments in this section.

NOTE: Test Equipment Required:


- Pattern generator
- Frequency counter
- Digital multimeter
- Audio oscillator

5-1. Setting the Service Adjustment Mode

1. Standby mode (power off).
2. **Display** → Channel **5** → Sound volume **+** → Power on the Remote Commander (press each button within a second).


Service Adjustment Mode On

1. The CRT displays the item being adjusted.

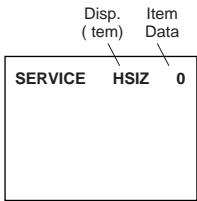


2. Press **1** or **4** on the Remote Commander to select an item.
3. Press **3** or **6** on the Remote Commander to change the data.
4. Press **MUTING** then **ENTER** to save into the memory.

Service Adjustment Mode Memory

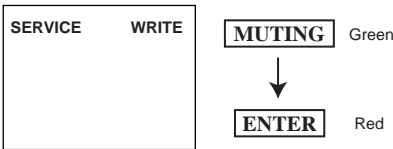

1. Press **8** then **ENTER** on the Remote Commander to initialize.

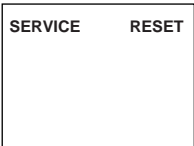


Carry out step 1 when adjusting IDs 0–4 and when replacing and adjusting IC003.

2. Turn set off then on to exit service adjustment mode.

5-2. Memory Write Confirmation Method

1. After adjustment, remove the power plug from the AC outlet, then plug it in again.
2. Turn the power switch ON and set to service mode.
3. Call the adjusted items again to confirm they were adjusted.

5-3. Adjustment Buttons and Indicators

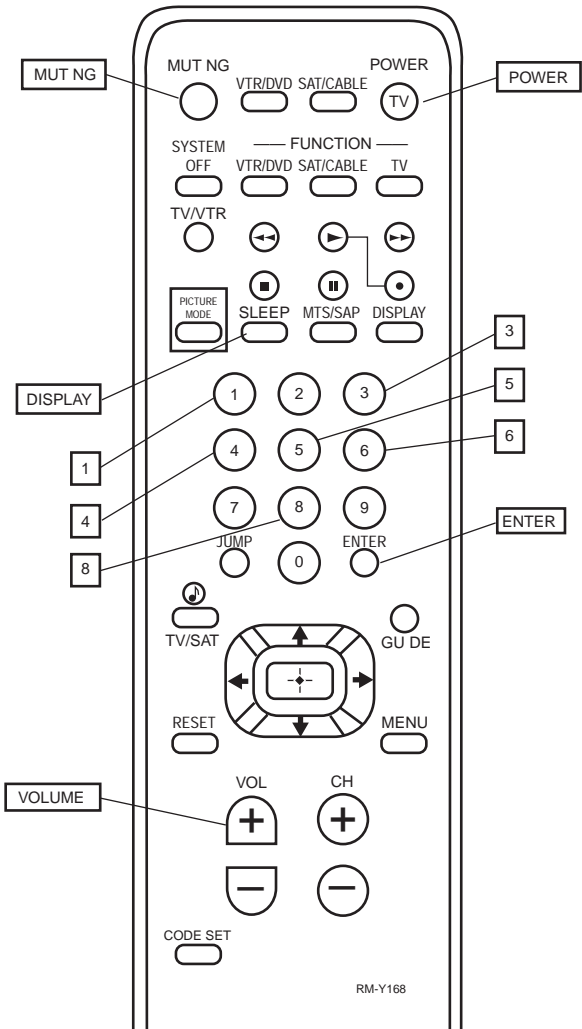

## Adjustment Items

NO.	ITEM	FUNCTION	DATA RANGE	INITIAL DATA					AVERAGE DATA
				NTSC		PALM/ PALN	VIDEO		
				20"	25"		20"	25"	
1	HSIZ	HORIZONTAL SIZE ADJ.	0-63	35		35			38
2	HPOS	HORIZONTAL POS. ADJ.	0-63	33		33			21
3	VBOW	VRT LINE BOWING ADJ.	0-15	5		5			9
4	VANG	VRT LINE BOW SLANT ADJ.	0-15	7		7			5
5	TRAP	HORIZ. TRAPEZOID ADJ.	0-15	7		7			7
6	PAMP	HORIZ. PIN DISTORTION ADJ.	0-63	7		7			32
7	UPIN	UPPER PIN DISTORTION ADJ.	0-63	36		36			39
8	LPIN	LOWER PIN DISTORTION ADJ.	0-63	36		36			39
9	VM	VELOCITY MODULATION ON/OFF	0,1	0					0
10	BLK	VERTICAL BLANKING ON/OFF	0, 1	0					0
11	VMLV	VELOCITY MODULATION LEVEL	0-3	2	Palette mode controls this register				2
12	AGN2	AGING 2	0, 1	0					0
13	REFP	REFERENCE PULSE POSITION	0, 1	0					0
14	VBLK	VERTICAL BLANKING ON/OFF	0, 1	0					0
15	JPSW		0, 1	0					0
16	VSIZ	VERTICAL SIZE ADJ.	0-63	47		47			49
17	VPOS	VERTICAL POSITION ADJ.	0-63	32		32			32
18	VLIN	VERTICAL LINEARITY ADJ.	0-15	6					6
19	SCOR	VERTICAL "S" CORRECTION ADJ.	0-15	8					8
20	VZOM	16:9 CRT Z MODE ON/OFF	0, 1	0					0
21	EHT	VRT HI-VOLT. CORRECTION	0-15	6					6
22	ASP	ASPECT RATIO CONTROL	0-63	47					47
23	SCRL	16:9 CRT Z MODE TRANS SCROLL	0-63	31					31
24	HBLK	HORIZONTAL BLANKING ON/OFF	0, 1	1					1
25	LBLK	LEFT BLANKING ADJ.	0-15	12					12
26	RBLK	RIGHT BLANKING ADJ.	0-15	5					5
27	VUSN	V SAW WAVEFORM COMPRESS	0, 1	0					0
28	HDW	H. DRIVE PULSE WIDTH	0, 1	1					1
29	EWDC	"PARABOLA" EW/DC ADJ.	0, 1	0					0
30	LVLN	LOWER SCREEN BTM VRT LIN ADJ.	0-15	0					0
31	UVLN	UPPER SCREEN BTM VRT LIN ADJ.	0-15	0					0
32	RDRV	R OUTPUT DRIVE CONTROL	0-63	31					36
33	GDRV	G OUTPUT DRIVE CONTROL	0-63	25	21				26
34	BDRV	B OUTPUT DRIVE CONTROL	0-63	25	21				25
35	RCUT	R OUTPUT CUTOFF CONTROL	0-15	10					8
36	GCUT	G OUTPUT CUTOFF CONTROL	0-15	7	6				6
37	BCUT	B OUTPUT CUTOFF CONTROL	0-15	6					7
38	DCOL	DYNAMIC COLOR ON/OFF	0, 1	0					1
39	SHUE	SUB HUE	0-31	14	12				15
40	SCOL	SUB COLOR	0-31	14					15
41	SBRT	SUB BRIGHTNESS	0-31	15	13				15
42	RON	R OUTPUT ON/OFF	0, 1	1					1
43	GON	G OUTPUT ON/OFF	0, 1	1					1
44	BON	B OUTPUT ON/OFF	0, 1	1					1
45	AXPL	AXIS PAL	0, 1	0					0
46	AXNT	AXIS NTSC	0, 1	0					0
47	CBPF	CHROMA BPF ON/OFF	0, 1	0					1
48	CTRP	Y TRAP FILTER ON/OFF	0, 1	1					1
49	COFF	COLOR ON/OFF	0, 1	0					0
50	KOFF	SET COLOR KILLER	0, 1	0					0
51	SSHP	SUB SHARPNESS	0-15	6	7				7
52	SHPF	SHARPNESS CIRCUIT F0	0, 1	1					1
53	PREL	PRE/OVR SHOOT SWITCHING	0, 1	1					1
54	Y-DC	DC TRANS RATIO SWITCHING	0, 1	1					1
55	GAMM	GAMMA CORRECTION AMNT	0-3	1	Palette mode controls this register				1
56	ABLM	ABL MODE SWITCHING	0, 1	1					1
57	VTH	ABL CD VHT SWITCHING	0, 1	1					1
58	YDEL	Y DELAY TIME CONTROL	0-15	7					7
59	NCOL	NO COLOR ID	0, 1	1					1
60	FSC	FSC OUT ON/OFF	0, 1	1					1
61	K-ID	KILLER ID CONTROL SW	0, 1	0					0

NO.	ITEM	FUNCTION	DATA RANGE	INITIAL DATA					AVERAGE DATA
				NTSC		PALM/ PALN	VIDEO		
				20"	25"		20"	25"	
62	HOSC	H VCO OSCILLATION FREQ	0-15	7					7
63	VSS	V SYNC SLICE LEVEL	0, 1	1	0				0
64	HSS	H SYNC SLICE LEVEL	0, 1	0					0
65	HMSK		0, 1	0					0
66	VTMS	SELECT SIGNAL VTIM PIN	0-3	0					0
67	CDMD	V CNT DWN MODE SWITCHING	0-3	0			3		0
68	AFC	AFC LOOP GAIN SWITCHING	0-3	0			0		0
69	FIFR	FIELD FREQUENCY	0-3	3		1			3
70	SBAL	SUB BALANCE	0-15	7					7
71	SBAS	SUB BASS	0-15	9					9
72	STRE	SUB TREBLE	0-15	9					9
73	BBEL	BBE LOW	0-15	12					12
74	BBEH	BBE HIGH	0-15	9					9
75	SRND	SURROUND	0-63	13					13
76	BBE	BBE ON/OFF	0, 1	1					1
77	DISP	O.S.D DISPLAY POSITION	0-63	22	5				15
78	TROT	TILT CORRECTION	0-63	31					31
79	HCLW	HORIZONTAL COUNT LOWER LIMIT	0-127	16			16		16
80	HCHG	HORIZONTAL COUNT HIGH LIMIT	0-127	64			64		64
81	ABL0		0, 1	0					1
82	ABL1		0-7	0					7
83	SYSC	COLOR SYSTEM	0-7	6					6
84	VENH	VERTICAL ENHANCEMENT	0-7	4	Palette mode controls this register				4
85	CBPC		0, 1	0					0
86	BYCF		0, 1	0					0
87	KILC		0, 1	0					0
88	LDOT		0, 1	0					0
89	CORE		0, 1	0					0
90	ID0		0-255	201					See ID Map
91	ID1		0-255	19					See ID Map
92	ID2		0-255	173					See ID Map
93	ID3		0-255	43					See ID Map
94	ID4		0-255	251					See ID Map
95	ID5		0-255	0					See ID Map
96	ID6		0-255	64					See ID Map

Notes:

No. 1–96 show the order that each adjustment mode may be selected while in service mode.

Data Range shows the range of possible settings for each adjustment mode.

Initial Data shows the standard settings for each adjustment mode.

SERVICE	ID0	25
---------	-----	----

Feature ID Map

MODEL	DEST.	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6
KV-20FV10	US	89	19	141	11	219	0	64
KV-20FV10	CND	89	19	141	43	219	0	64
KV-21FV10	E	17	19	141	83	251	0	64
KV-21FV10C	E	17	19	141	83	251	0	64
KV-25FV10A	E	151	19	173	67	251	0	64

5-4. A BOARD ADJUSTMENTS

H. Frequency (Free Run) Check

- 1. Input a TV mode (RF) with no signal.
- 2. Connect a frequency counter to base of Q501 (TP-500 H. DRIVE).

- 3. Check H. Frequency for 15735 ± 200 Hz.  
15650 ± 200Hz (KV-25FV10A ONLY).


V. Frequency (Free Run) Check

- 1. Select video 1 with no signal input.
- 2. Set the conditions for a standard setting.
- 3. Connect the frequency counter on the A board to TP-508 (V OUT) or CN 501 pin ⑥ (V DY+) and ground.
- 4. Check that V. Frequency shows 60 ± 4 Hz.  
50 ± 4Hz (KV-25FV10A ONLY).

Sub Contrast Adjustment (RDRV)


- 1. Input a color-bar signal and set the level to 75%.
- 2. In Standard mode, set PICTURE to maximum, COLOR to minimum, and BRIGHTNESS to center.

3. Activate the Service Adjustment Mode.
4. Set both GON and BON items. Using [3] and [6]; set each to the following values. Leave RON set to 1.

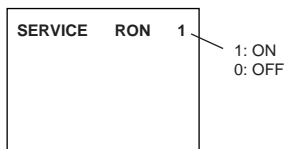

R ON: ON (1)  
G ON: OFF (0)  
B ON: OFF (0)


5. Select the DCOL item and set it to 0.
6. Connect an oscilloscope probe to C board, CN1752 pin ③ TP47R (RED OUT).
7. Select RDRV with [1] and [4].
8. Adjust the value of RDRV with [3] and [6] for  
 $1.73 \pm 0.05$  Vp-p.  
 $1.85 \pm 0.05$  Vp-p (KV-25FV10A ONLY).

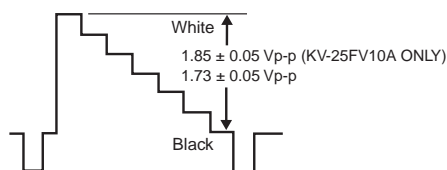

9. Reset the item DCOL to 1.
10. Reset GON and BON values to 1.  
R ON: ON (1)  
G ON: ON (1)  
B ON: ON (1)
11. Reset Picture, Color, and Bright to normal values:  
PICTURE: MAX  
COLOR: CENTER  
BRIGHT: CENTER
12. Press [MUTING] then [ENTER] to save into the memory.

### Display Position Adjustment (DISP)

1. Input a color-bar signal.
2. Set to Service Adjustment Mode.
3. Select DISP with [1] and [4].
4. Adjust values of DISP with [3] and [6] to adjust characters to the center.
5. Write to memory by pressing [MUTING] then [ENTER].
6. Check to see if the text is displayed on the screen.

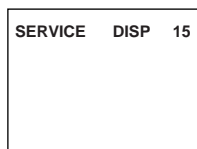


### Sub Bright Adjustment (SBRT)

1. Input a monoscope signal.
2. Activate the Service Adjustment Mode.
3. Set the PICTURE and BRIGHTNESS to minimum.

4. Select the SBRT item with [1] and [4].
5. Adjust the values of SBRT with [3] and [6] to obtain a faintly visible crosshatch.
6. Press [MUTING] then [ENTER] to save into the memory.

### Sub Hue, Sub Color Adjustment (SHUE, SCOL)


1. Input a color-bar signal.
2. Activate the Service Adjustment Mode.
3. Select the DCOL item and set the value to 0.
4. Connect an oscilloscope probe to C Board, CN1752 Pin ⑤ or TP47b (BLUE OUT).
5. Select the SHUE and SCOL item with [1] and [4].
6. While showing the SHUE item, adjust the waveform with [3] and [6] until the second and third bars show the same level ( $V2 = V3 \pm 0.15$  Vp-p).
7. While showing the SCOL item, adjust the waveform with [3] and [6] until the first and fourth bars show the same level ( $V1 = V4 \pm 0.15$  Vp-p).
8. KV-25FV10A ONLY - Input RF PAL-M color bar and repeat steps 1-7.

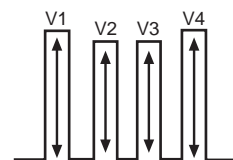

8. Select the DCOL item and reset to 1.
9. Press [MUTING] then [ENTER] to save into the memory.

### V. Size Adjustment (VSIZ)


1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the VSIZ item with [1] and [4].
4. Adjust value of VPOS with [3] and [6] for the best vertical center.
5. Press [MUTING] then [ENTER] to save into the memory.



### V. Center Adjustment (VPOS)

Perform this adjustment after performing H. Frequency (Free Run) check.

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the VPOS item with [1] and [4].
4. Adjust value of VPOS with [3] and [6] for the best vertical center.
5. Press [MUTING] then [ENTER] to save into the memory.






## H. Center Adjustment (HPOS)


Perform this adjustment after performing H. Frequency (Free Run) check.

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select the HPOS item with [1] and [4].
4. Adjust the value of HPOS with [3] and [6] for the best horizontal center.
5. Press [MUTING] then [ENTER] to save into the memory.



## H. Size Adjustment (HSIZ)


1. Input a monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select HSIZ with [1] and [4].
4. Adjust with [3] and [6] for the best Horizontal size.
5. Press [MUTING] then [ENTER] to save into the memory.




## V. Linearity (VLIN), V. Correction (VSCO), Pin Amp (PAMP) and Horizontal Trapezoid (TRAP) Adjustments

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select VLIN, VSCO, PAMP, and PPHA with [1] and [4].
4. Adjust with [3] and [6] for the best Horizontal size.
5. Press [MUTING] then [ENTER] to save into the memory.


V LINEARITY (VLIN)




V CORRECTION (VSCO)



PIN AMP (PAMP)




HORIZONTAL TRAPEZOID (TRAP)




## V. Angle (VANG), V. Bow (VBOW), Upper pin (UPIN) and Low Pin (LPIN) Adjustments

1. Input a crosshatch signal.
2. Activate the Service Adjustment Mode.
3. Select VANG, VBOW, UPIN, and LPIN with [1] and [4].
4. Adjust with [3] and [6] for the best picture.
5. Press [MUTING] then [ENTER] to save into the memory.


V ANGLE (VANG)




V BOW (VBOW)



UPPER PIN (UPIN)




LOW PIN (LPIN)



## Service Adjustment Mode Memory


1. Change the value of the DCOL item to 1.
2. After completing all adjustments, press [0] then [ENTER].

### Read From Memory

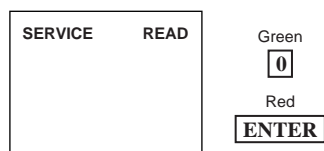


SECTION 6  
DIAGRAMS

6.1 BLOCK DIAGRAM

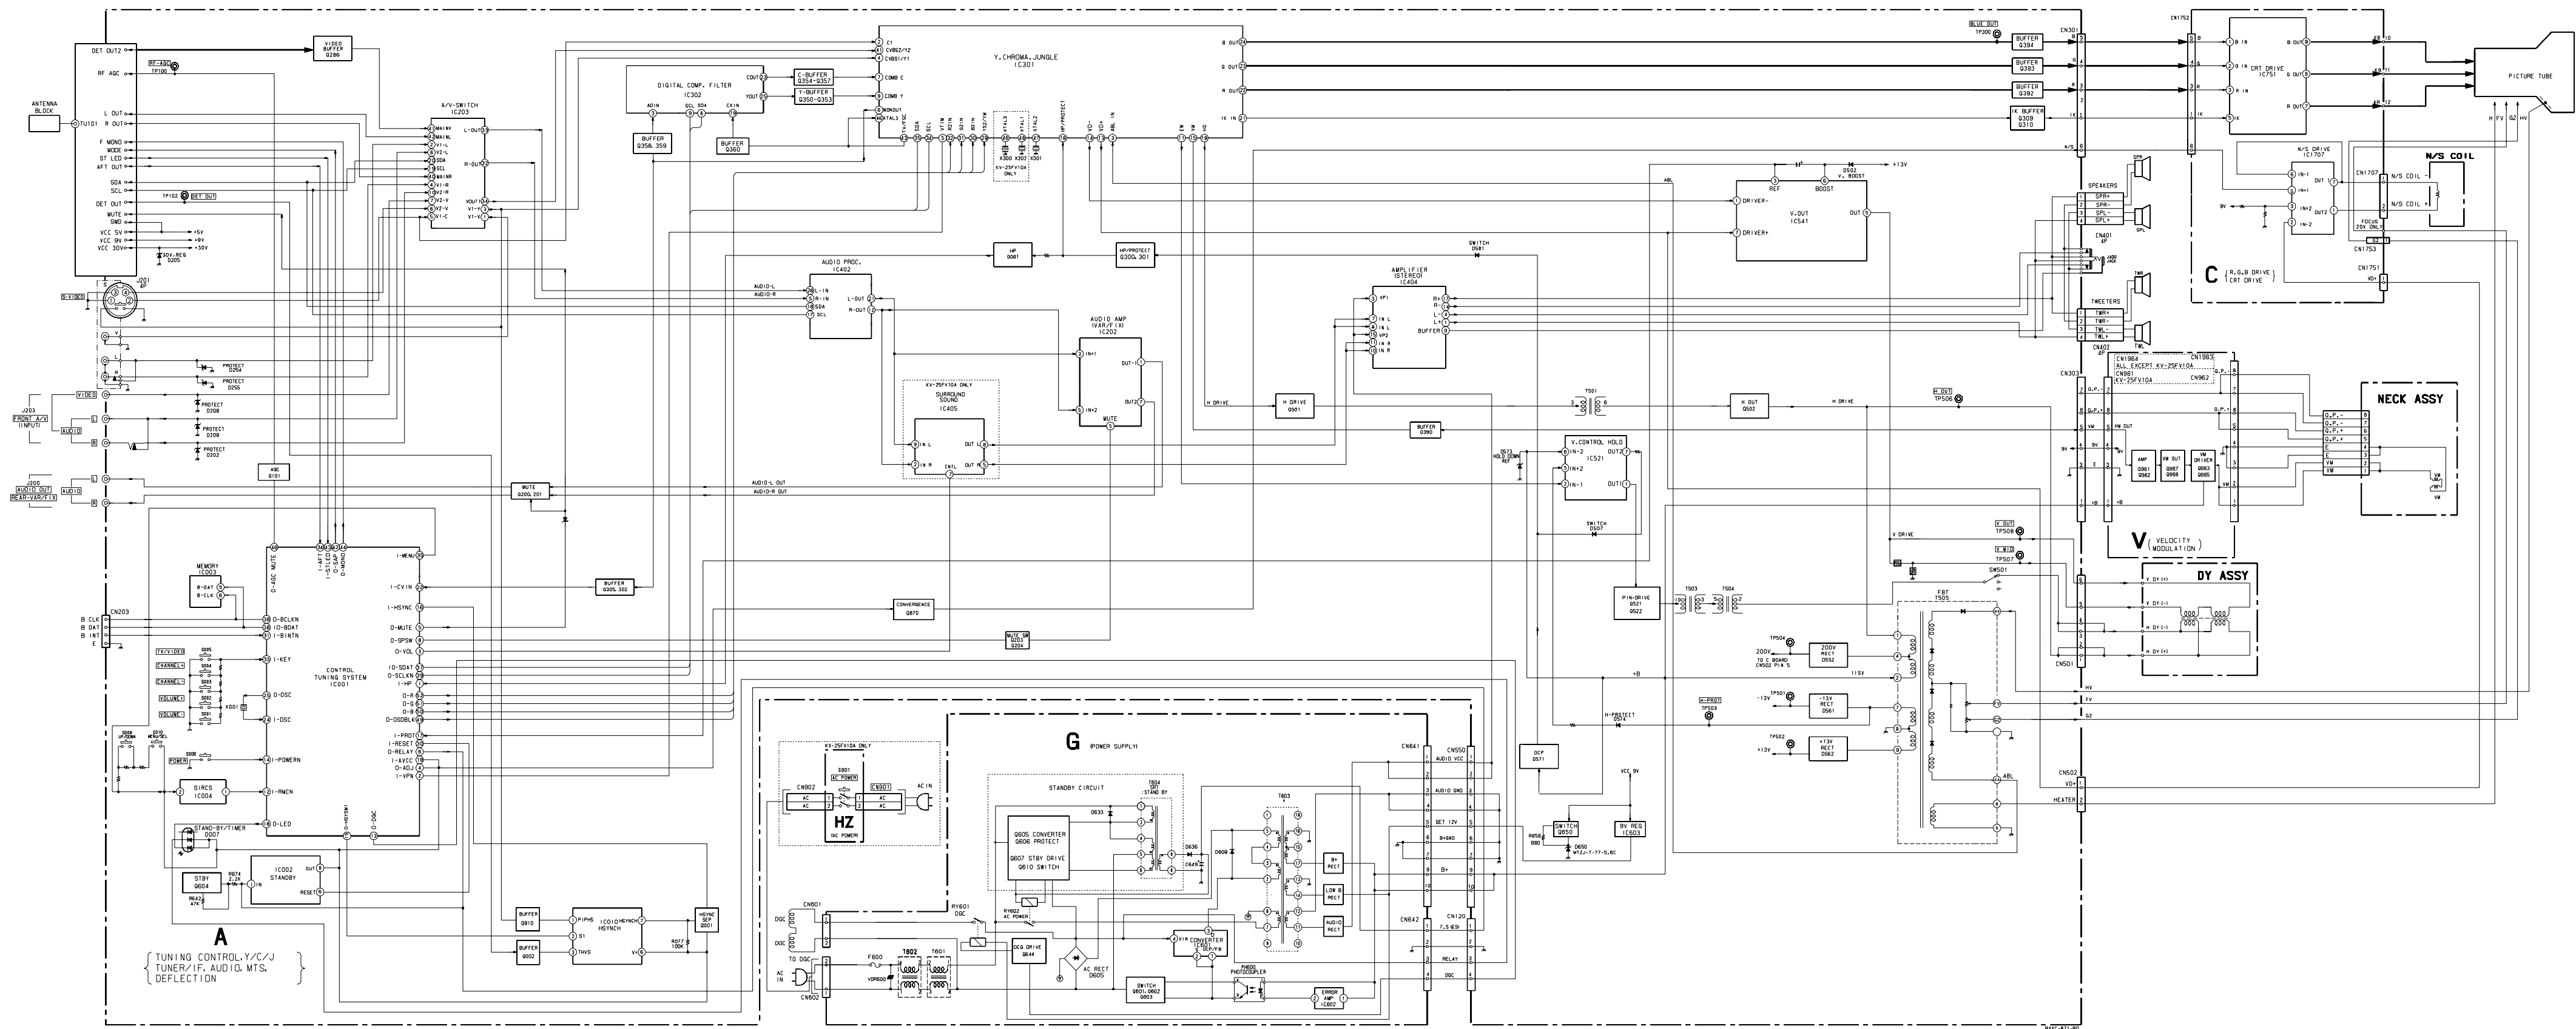

6.2 CIRCUIT BOARD LOCATIONS

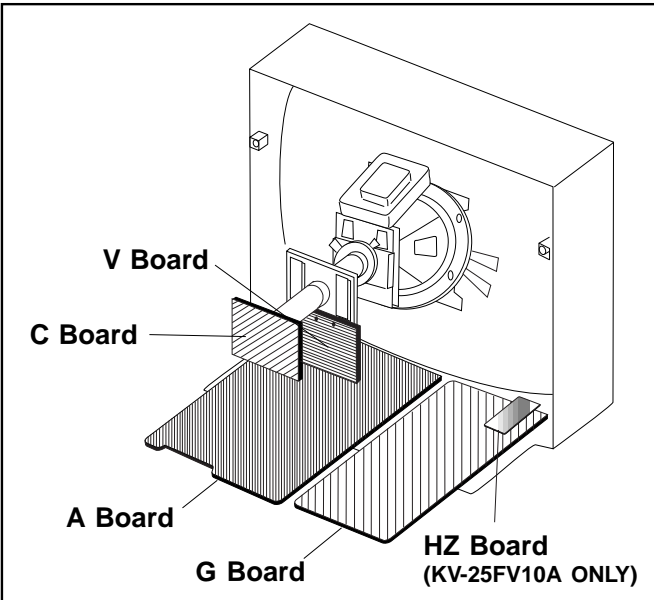

6-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50 WV or less are not indicated except for electrolytic and tantalums.
- All electrolytics are 50V unless otherwise specified.
- Indication of resistance, which does not have one for rating electrical power, is as follows:  
Pitch: 5mm  
Rating electrical power 1/4W (CHIP: 1/10W)
- All resistors are in ohms.  
 $\text{K}\Omega = 1000\Omega$   $\text{M}\Omega = 1000\text{K}\Omega$
- : nonflammable resistor
- : fusible resistor
- $\triangle$  : internal component
- : panel designation and adjustment for repair
- $\perp$  : earth-ground
- $\text{ch}$  : earth-chassis
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved (refer to Safety Related Adjustments on page 20)

- When replacing parts shown in the table below, be sure to perform the related adjustments.

Part Replaced (■)	Adjustment (■)
DY, CRT, C507, C520, C573, C574, C575, D572, D573, D574, IC521, IC501, R578, R579, R582, R583, R586, R587, T504, T505.....A Board	HV HOLD-DOWN (R582, R584)
IC601, PH600.....G Board	B+ VOLTAGE CONFIRMATION

- All voltages are in Volts
- Voltage is DC with respect to ground unless otherwise noted.
- Readings are taken with a 10M $\Omega$  digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- Circled numbers are waveform references.
- \* : cannot be measured
- : B+ Line
- : B- Line
- : Signal path

Reference Information


RESISTOR	: RN METAL FILM
	: RC SOLID
	: FPRD NON FLAMMABLE CARBON
	: FUSE NON FLAMMABLE FUSIBLE
	: RW NON FLAMMABLE WIREWOUND
	: RS NON FLAMMABLE METAL OXIDE
	: RB NON FLAMMABLE CEMENT
	:  ADJUSTMENT RESISTOR
COIL	: LF-SL MICRO INDUCTOR
CAPACITOR	: TA TANTALUM
	: PS STYROL
	: PP POLYPROPYLENE
	: PT MYLAR
	: MPS METALIZED POLYESTER
	: MPP METALIZED POLYPROPYLENE
	: ALB BIPOLAR
	: ALT HIGH TEMPERATURE
	: ALR HIGH RIPPLE

Note:


The components identified by shading and  $\triangle$  mark are critical for safety. Replace only with the part number specified.  
The symbol (displayed on component side of the circuit board) indicates fast operating fuse. Replace only with fuse of the same rating as marked.

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.  
Le symbole indique une fusible à action rapide. Doit être remplacée par une fusible de même valeur, comme marqué.



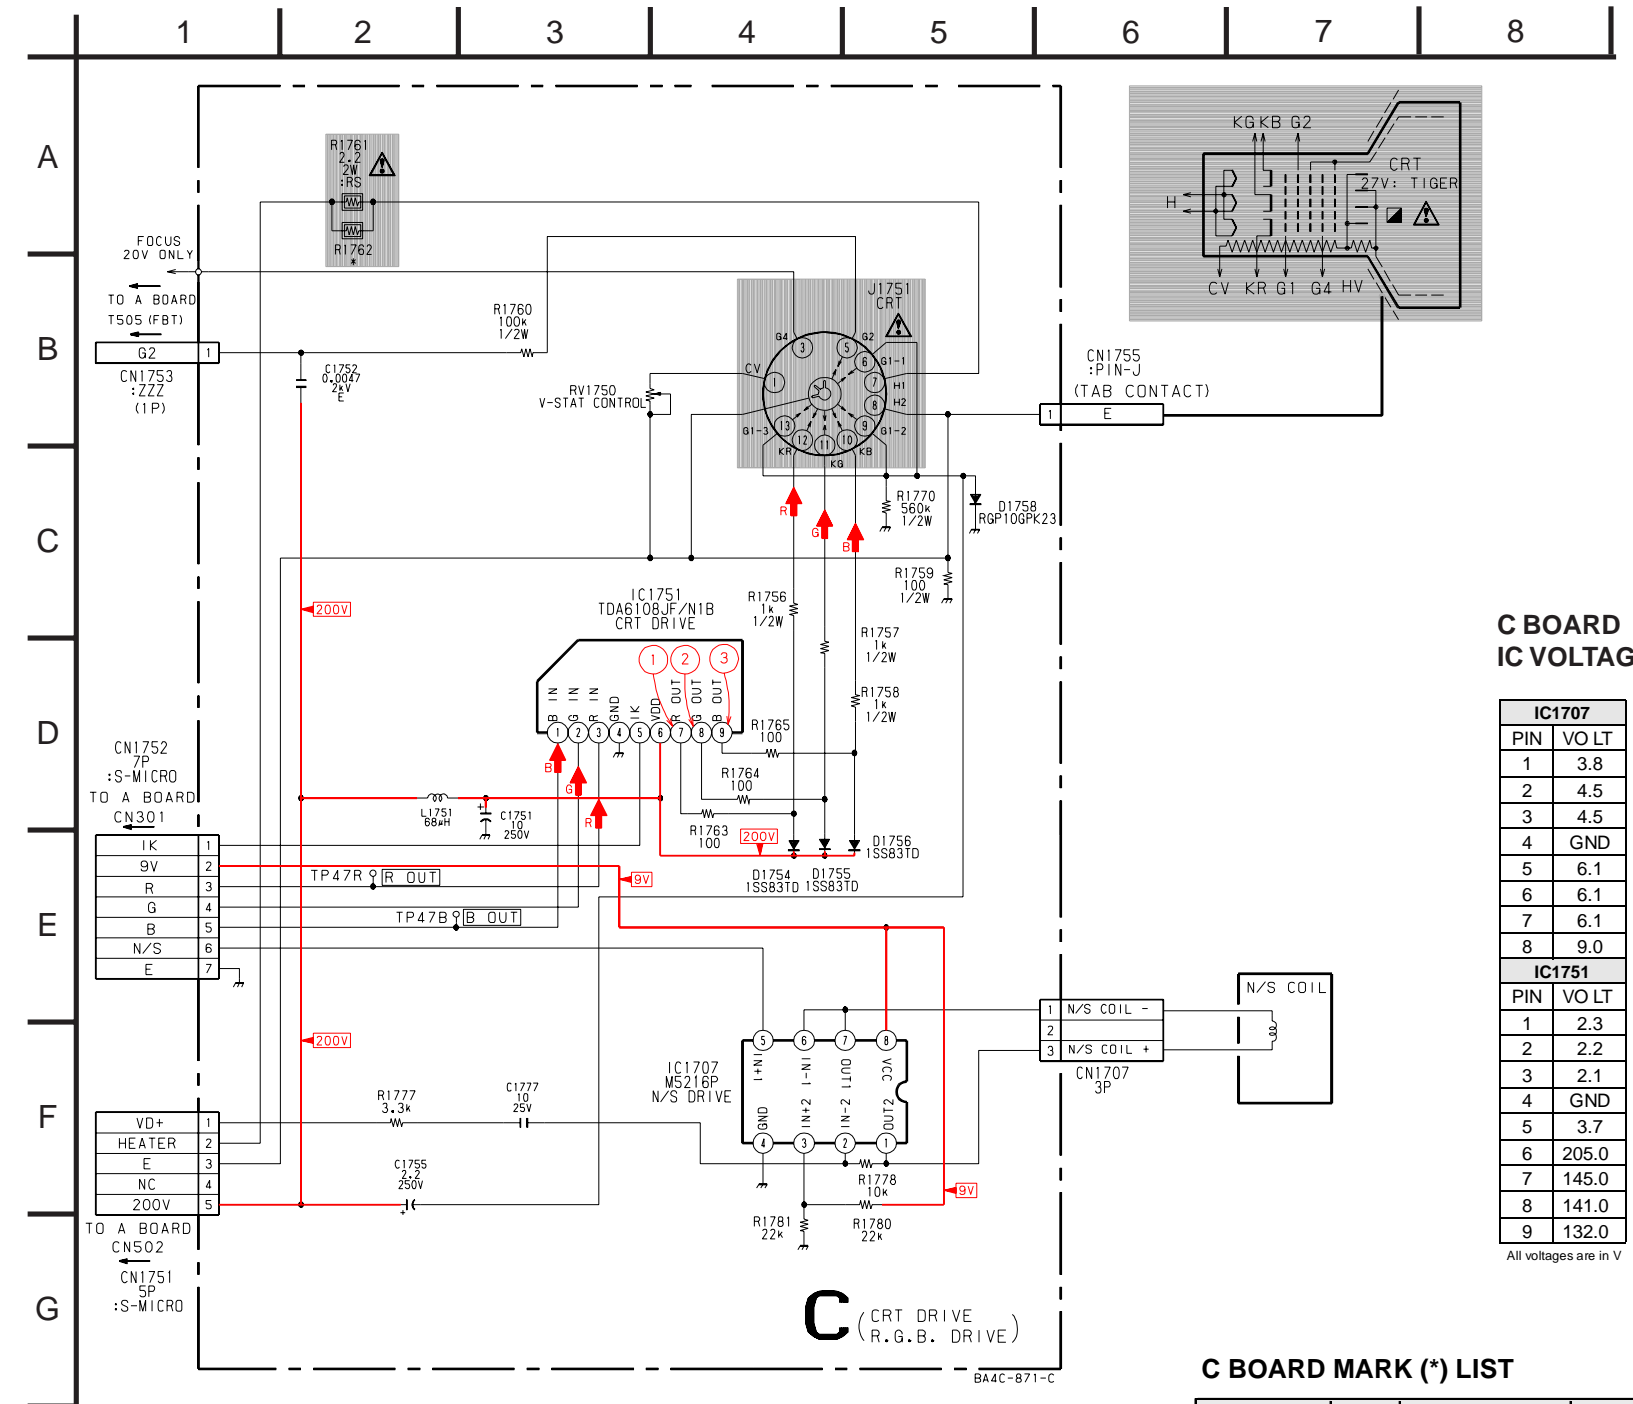


**C** [CRT DRIVE, RGB DRIVE]

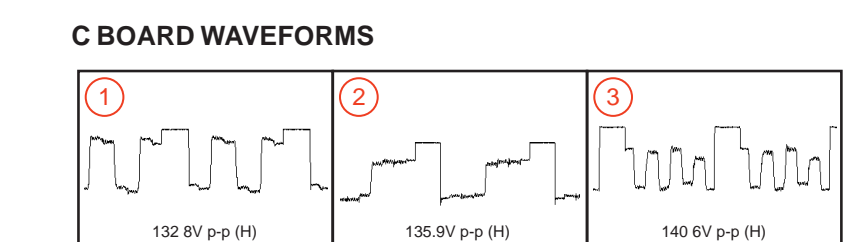

← **A** & **C** Boards



## G BOARD SCHEMATIC DIAGRAM

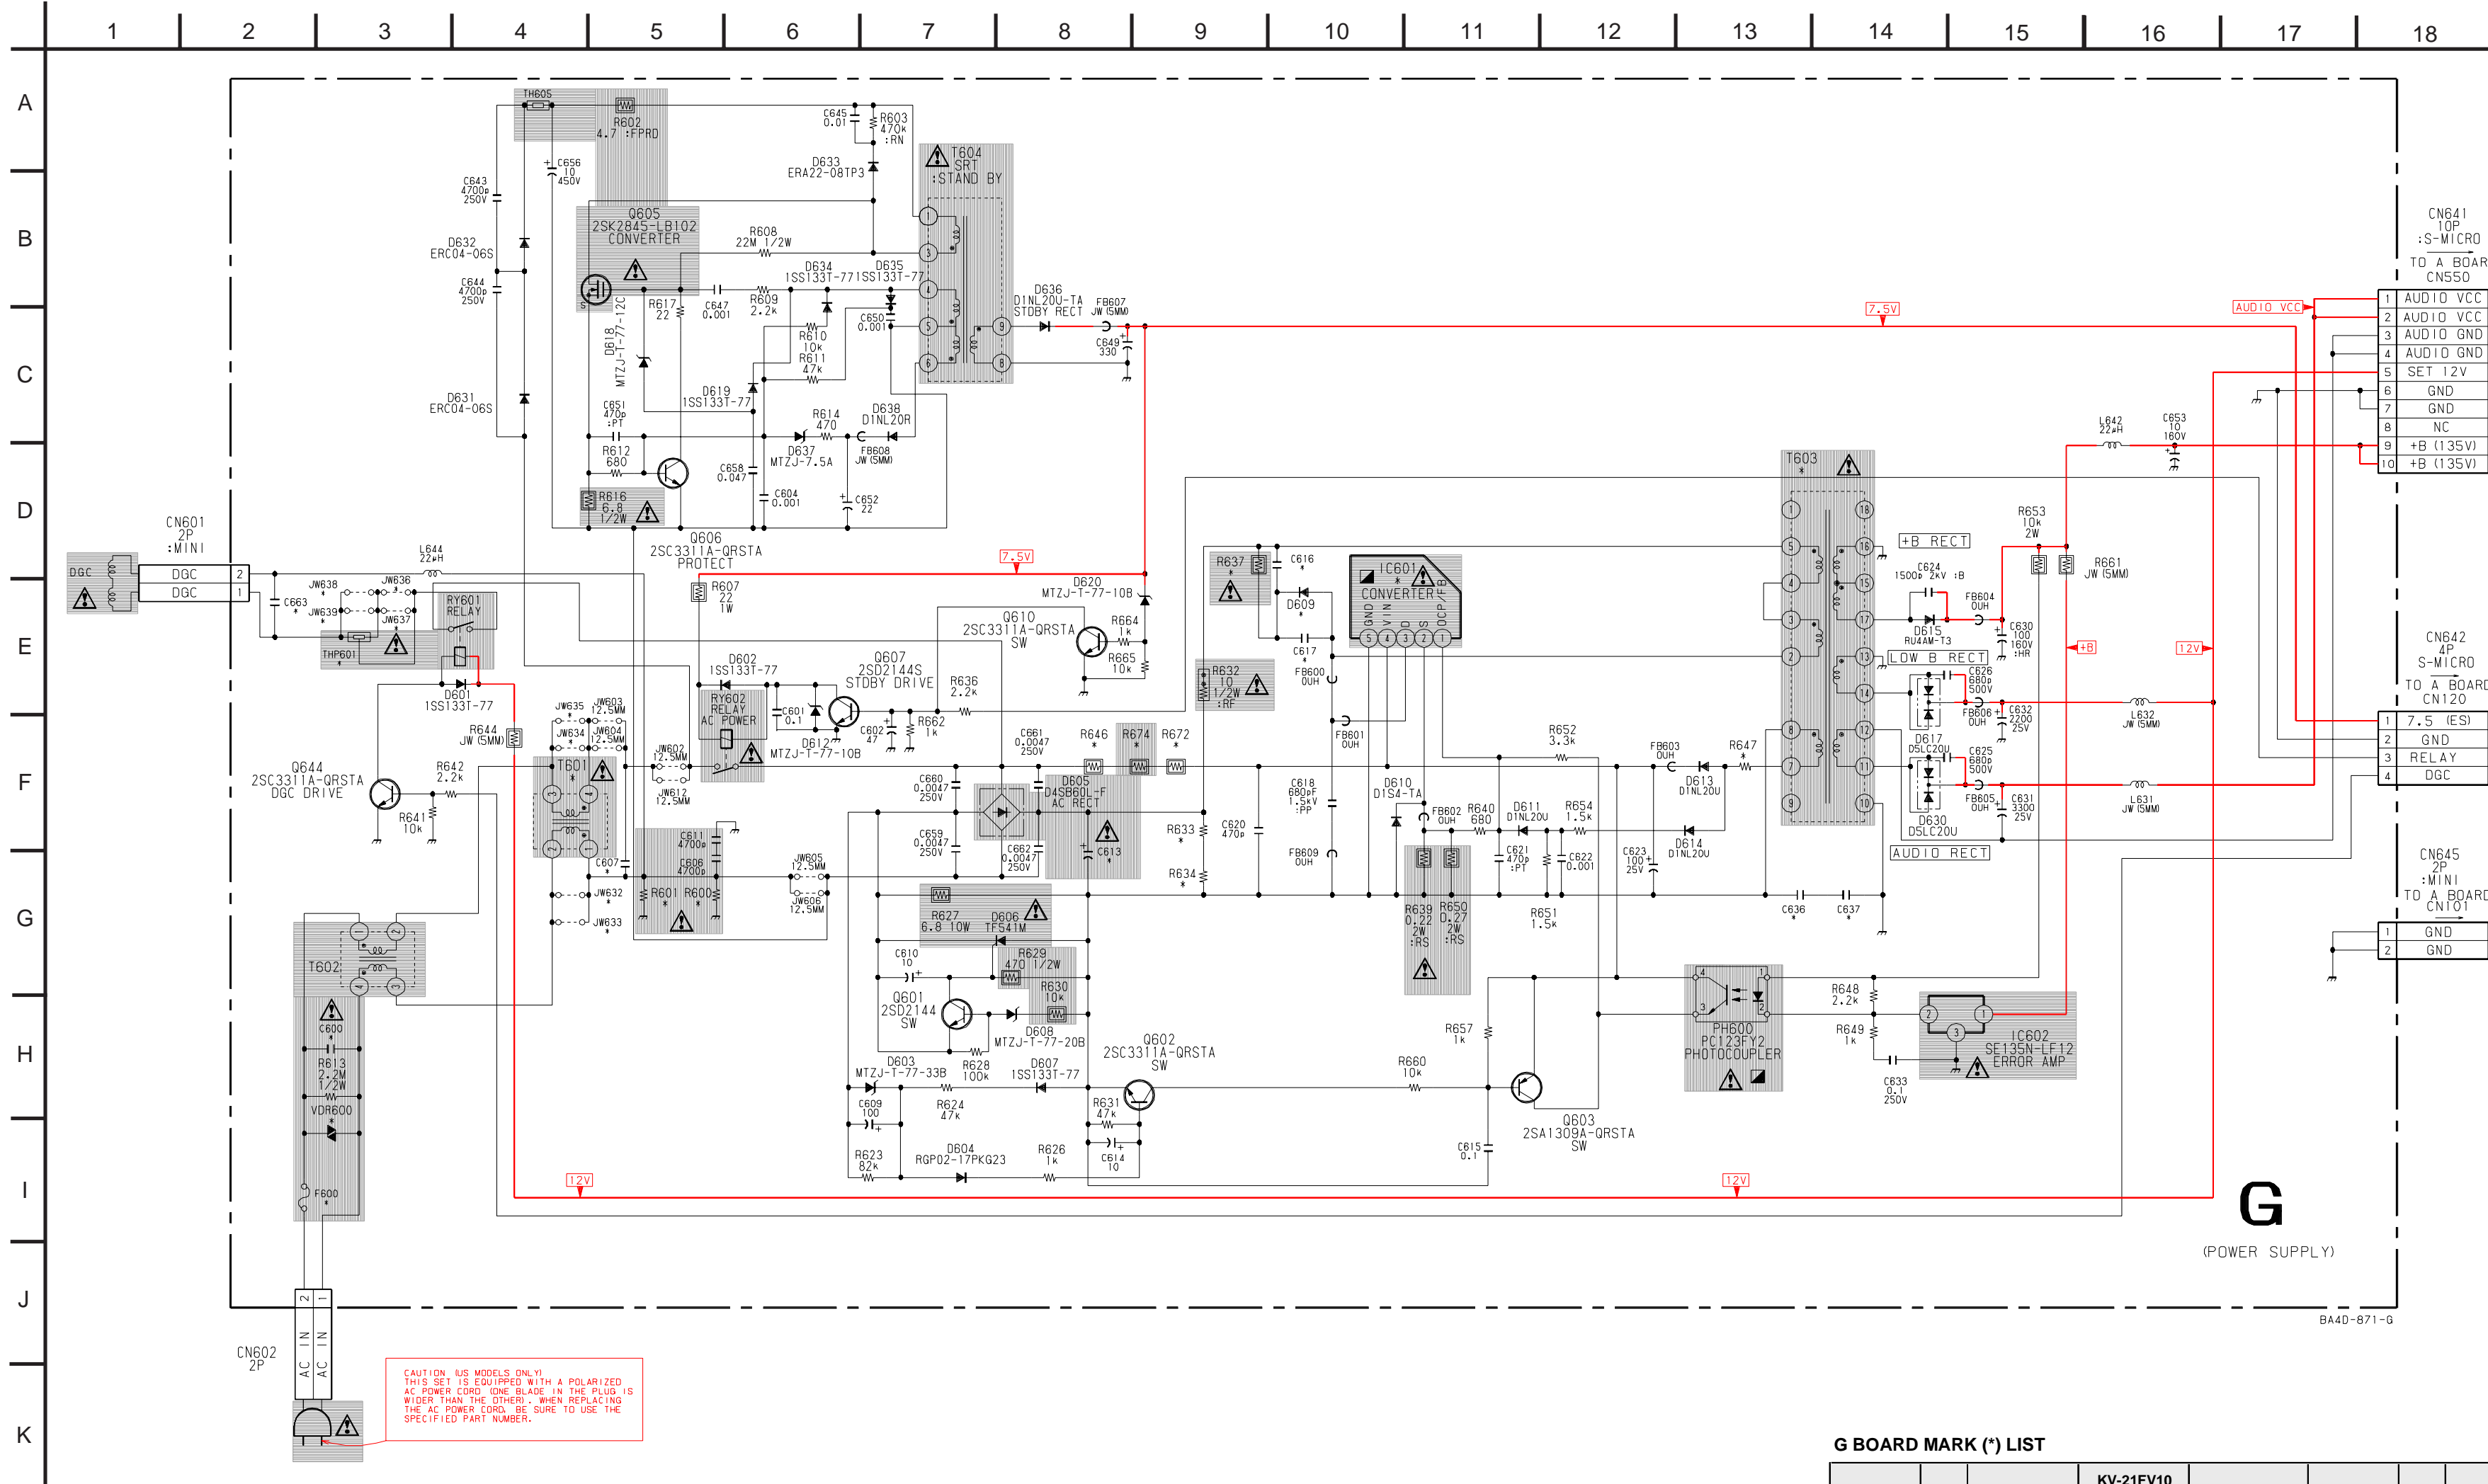


## G BOARD MARK (\*) LIST


REF. NO.	LOC.	KV-25FV10A	KV-21FV10	KV-21FV10C	KV-20FV10	REF. NO.	LOC.	KV-25FV10A	KV-21FV10	KV-21FV10C	KV-20FV10
C600	H-3	0.47µF 300V	0.47µF 300V	0.47µF 125V	JW637	E-3	#	#	#	7.5mm	
C607	G-5	0.47µF 300V	0.47µF 300V	0.47µF 125V	JW638	E-3	5.0mm	5.0mm	#	#	
C613	F-8	560µF 400V	560µF 400V	680µF 250V	JW639	E-3	5.0mm	5.0mm	#	#	
C616	D-10	0.022µF 400V	0.022µF 400V	#	R600	G-5	8.2M	8.2M	#	#	
C617	E-10	220PF 1KV	220PF 1KV	#	R601	G-5	#	#	#	4.7M	
C636	G-13	#	#	0.0047µF 125V	R633	F-9	270K	270K	390K	#	
C637	G-14	#	#	0.0047µF 125V	R634	G-9	270K	270K	#	#	
C663	E-2	0.22µF 300V	0.22µF 300V	0.22µF 125V	R637	D-9	100K	100K	#	#	
D609	E-10	RU-1P	RU-1P	#	R646	F-8	5.6K	5.6K	#	#	
F600	I-2	6.3A/250V	6.3A/250V	6.3A/125V	R647	F-13	56	56	33	#	
IC601	E-10	STR-F6656	STR-F6656	STR-F6626	R672	F-9	5.6K	5.6K	#	#	
JW632	G-4	10.0mm	10.0mm	#	R674	F-8	5.6K	5.6K	15K	#	
JW633	G-4	10.0mm	10.0mm	#	T601	F-4	#	#	1-426-717-11	#	
JW634	F-4	10.0mm	10.0mm	#	T603	E-14	1-433-807-11	1-433-807-11	1-433-806-11	#	
JW635	F-4	10.0mm	10.0mm	#	THP601	E-3	1-803-540-11	1-803-540-11	1-809-539-11	#	
JW636	E-3	#	#	7.5mm	VDR600	I-2	1-803-587-11	1-803-587-11	1-803-585-11	#	Not Mounted

NOTE:  
Portions of the circuit marked as shown are high voltage areas. Use care to prevent electric shocks during inspection or repair.


## G [POWER SUPPLY]

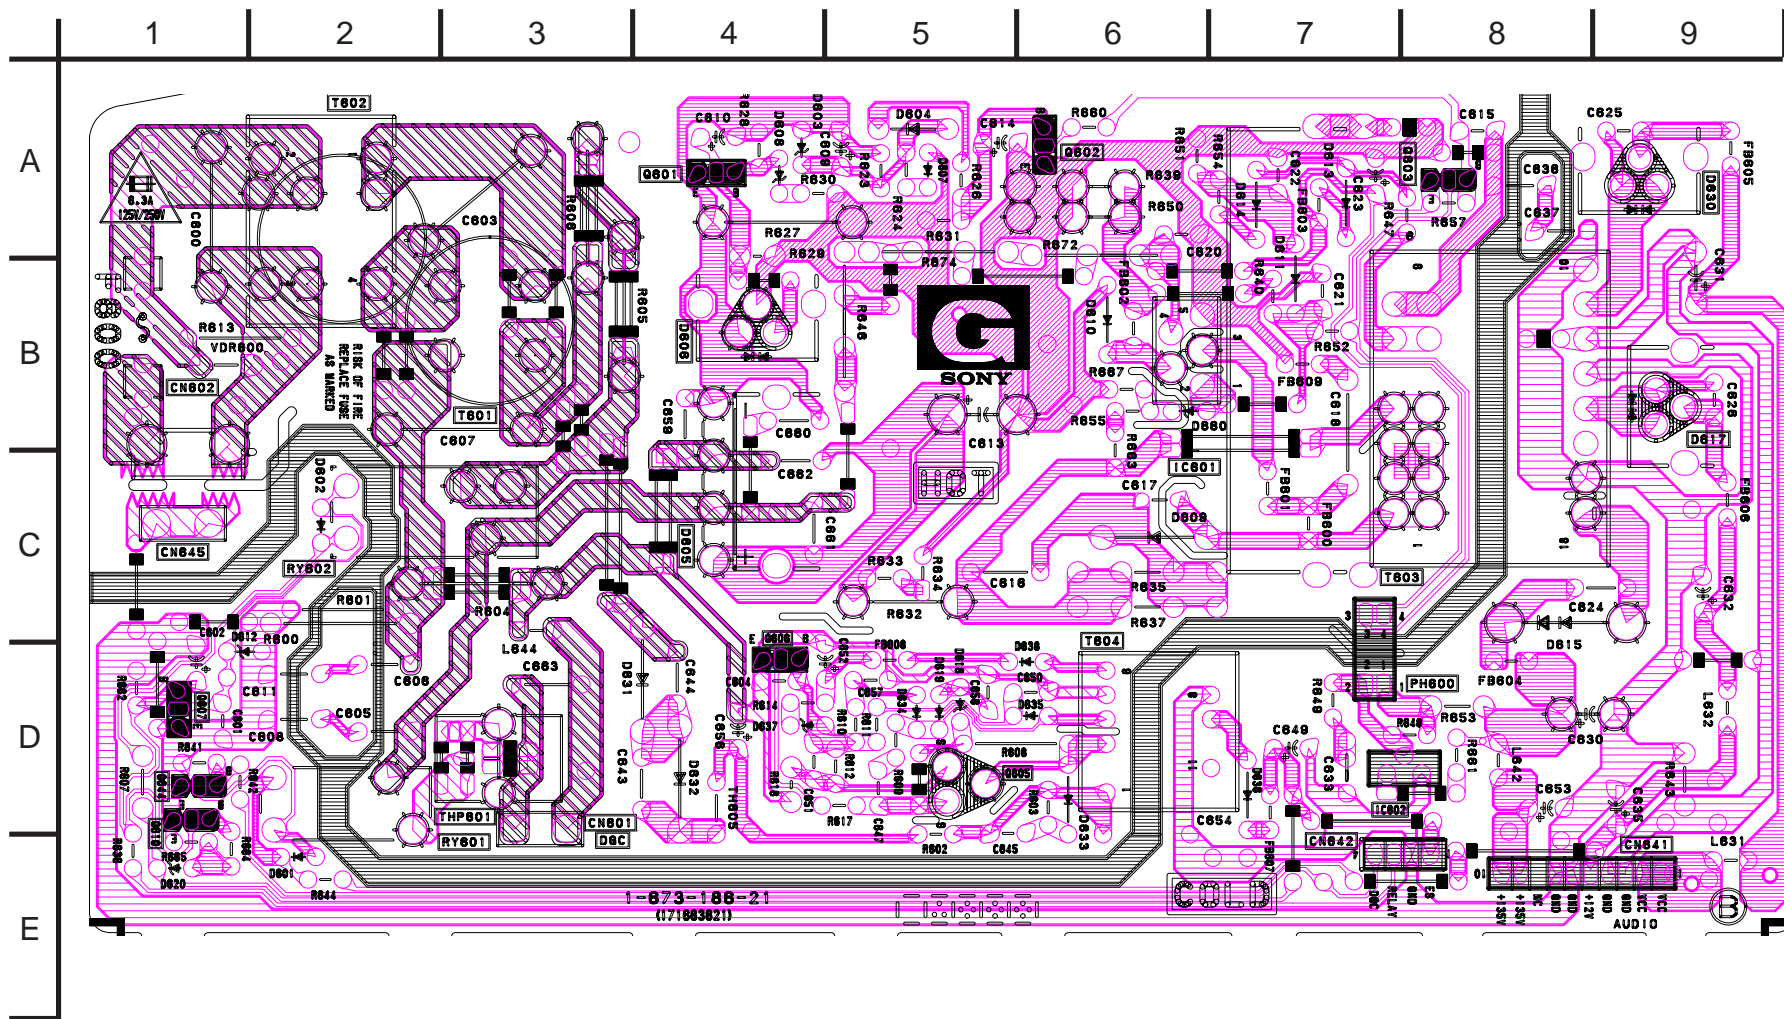

## HZ BOARD SCHEMATIC DIAGRAM (KV-25FV10A ONLY)

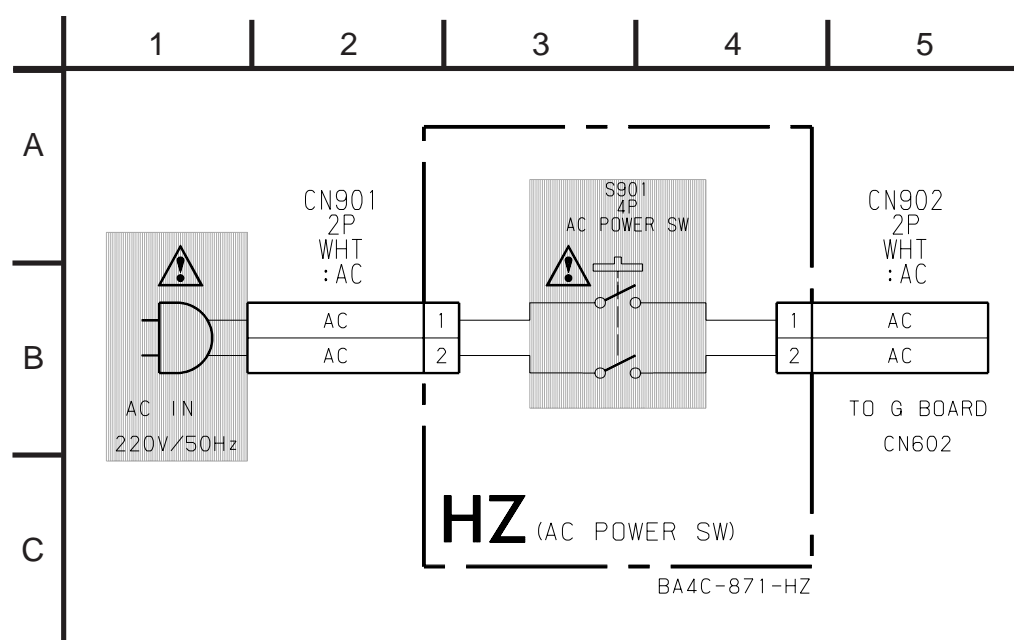








## HZ [AC POWER SWITCH] (KV-25FV10A ONLY)

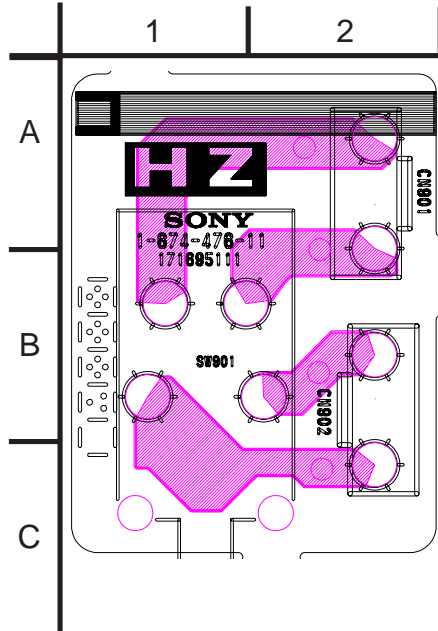






## A BOARD IC BLOCK DIAGRAMS

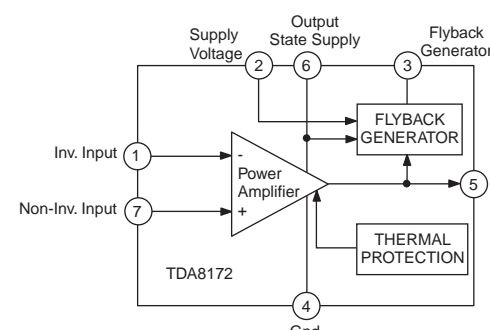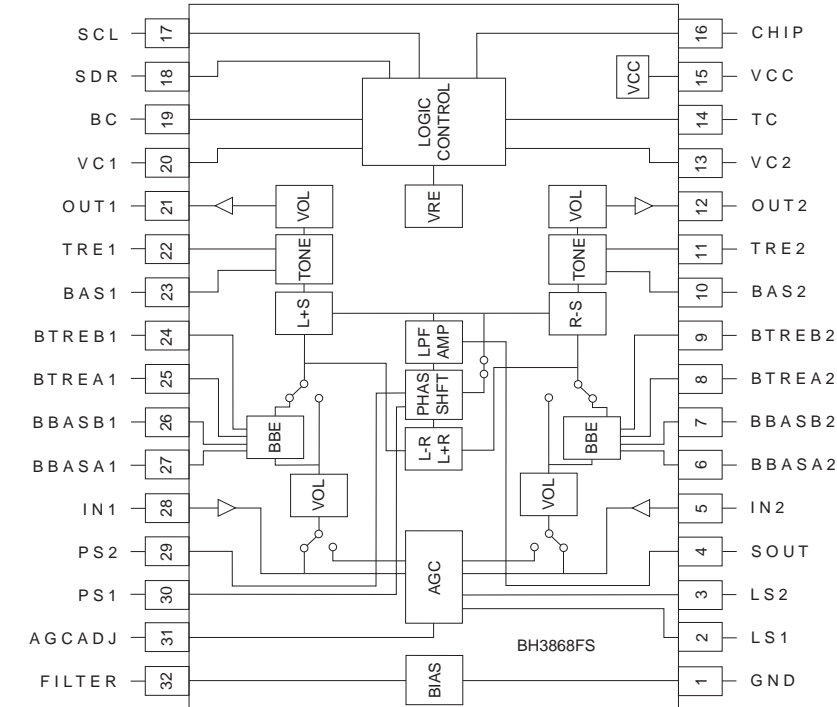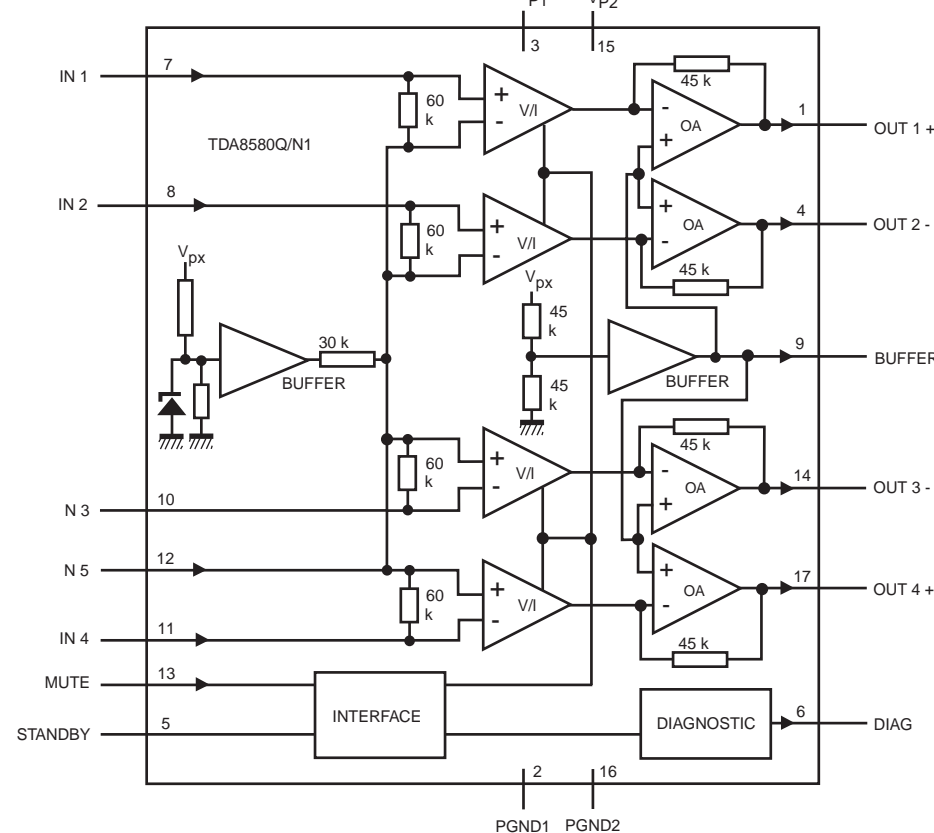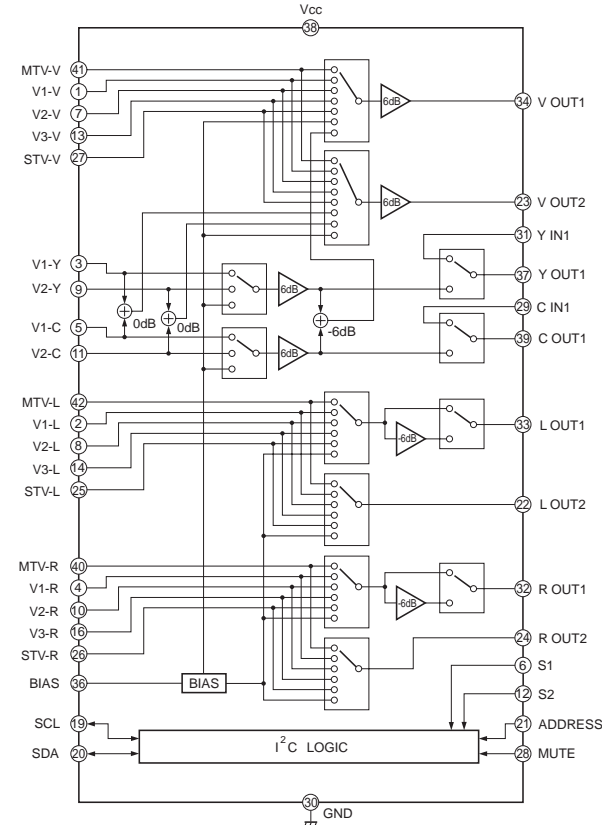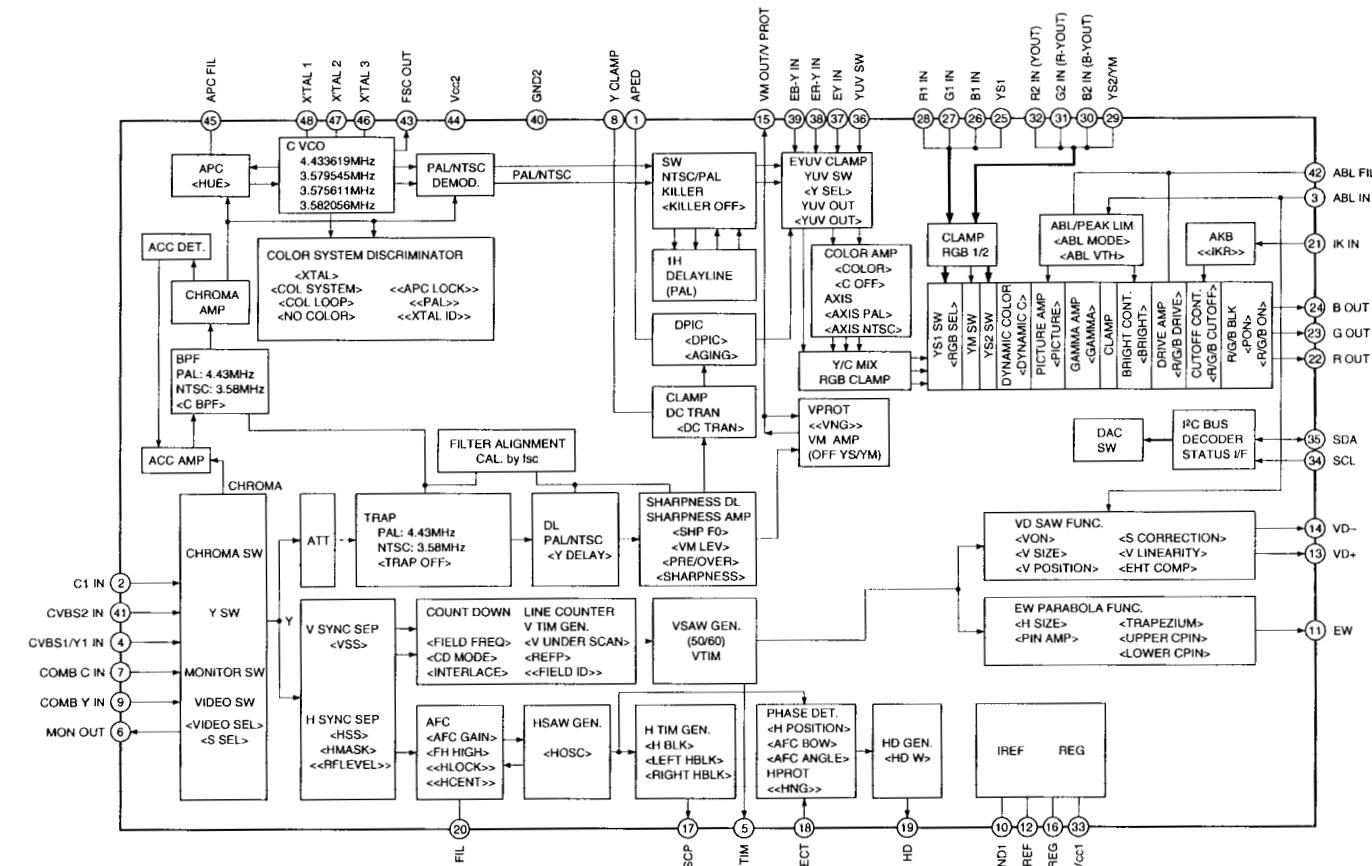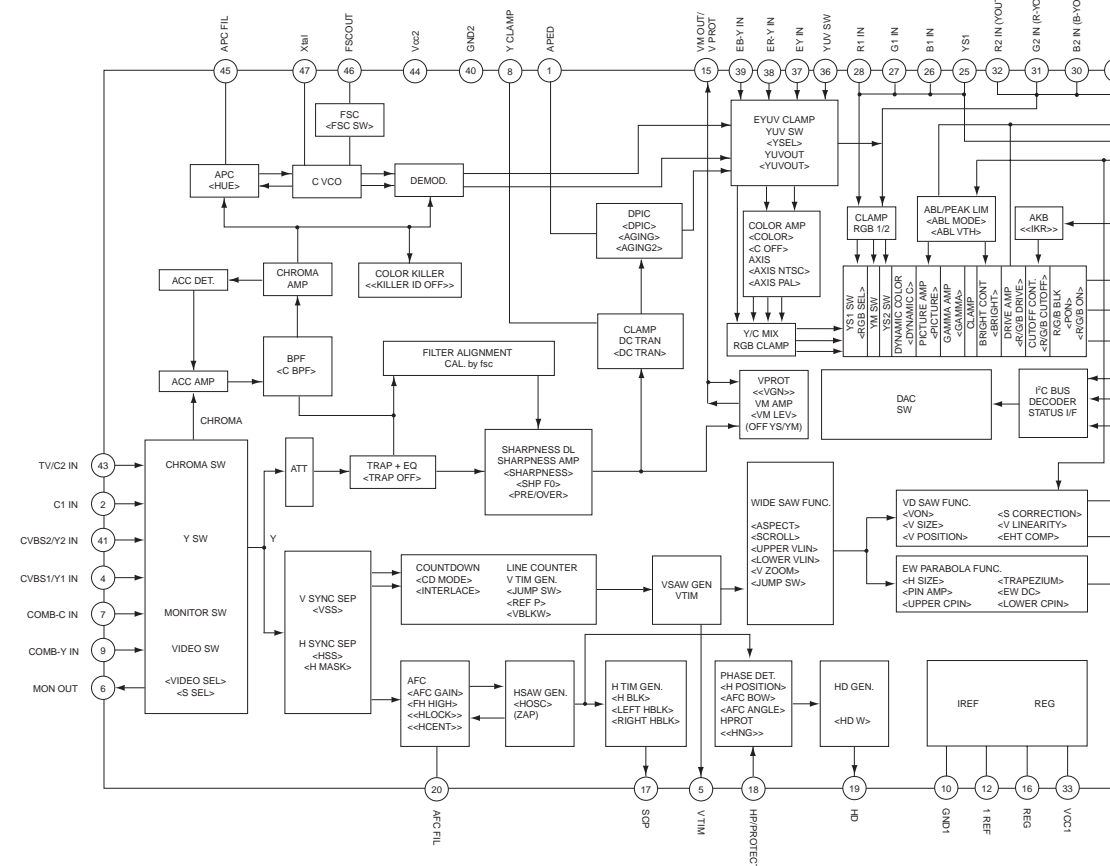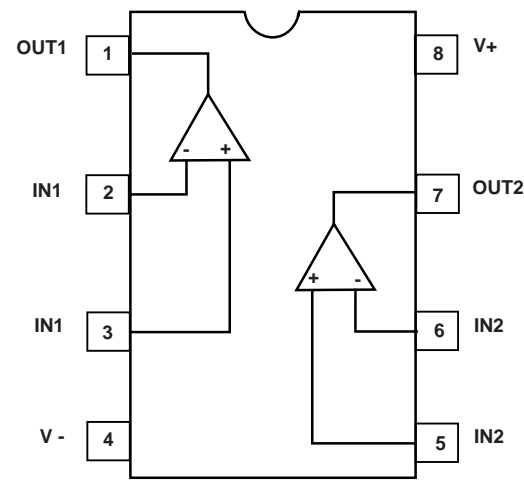


## 6-4. SEMICONDUCTORS

2SB709A  
2SD601A

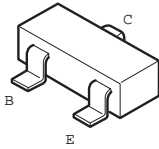


2SC5426-01

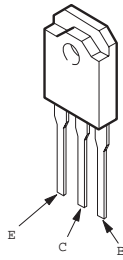


2SC3209LK-TP




2SA1309A  
2SC3311A  
2SD2144S

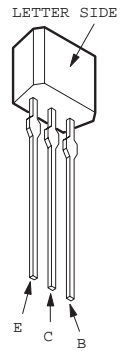


2SA1837  
2SC4159-E




2SA10910-TPE2  
2SD1292




2SK2845




1SS133T-77  
D1N20R-TA  
D1NS4-TA  
MTZJ-T-7712C  
MTZJ-T-77-20B  
MTZJ-T-77-33B  
MTZJ-T-77-39  
RD3.3ES-T1B

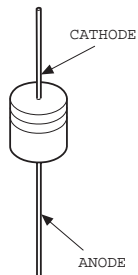


ERC04-06S  
ERC06-15S  
MTZJ-T-77-2.2A  
MTZJ-T-77-5.1C  
MTZJ-T-775.6C  
MTZJ-T-77-7.5A  
MTZJ-T-77-8.2B  
MTZJ-T-77-10B  
MTZJ-T-7730D  
RU-1P

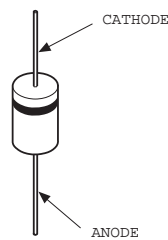


1SS83TD  
D1NL20U-TA  
EL1Z-V1  
ERA22-08TP3  
GP08DPKG23  
RGP02-17PKG23  
RGP10GPKG3  
RGP10GPKG23  
RGP15GPKG23

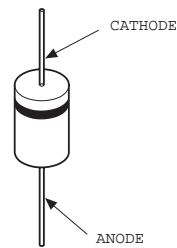


RD9.1EW-T1

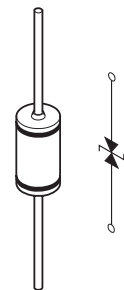


RU4AM-T3

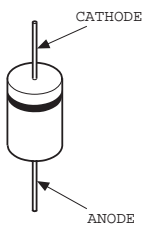


DAP202K-T-146

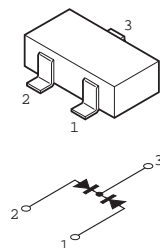

D4SB60L-F

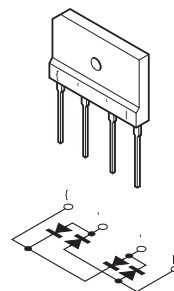

D5LC20U

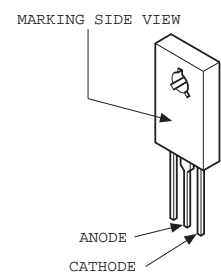


## SECTION 7 EXPLODED VIEW

- Items with no part number and no description are not stocked because they are seldom required for routine service.


- The component parts of an assembly are indicated by the reference numbers in the remarks column.

- Items marked \* are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**Note:**


The components identified by shading and mark  are critical for safety. Replace only with part number specified.











**Note:**

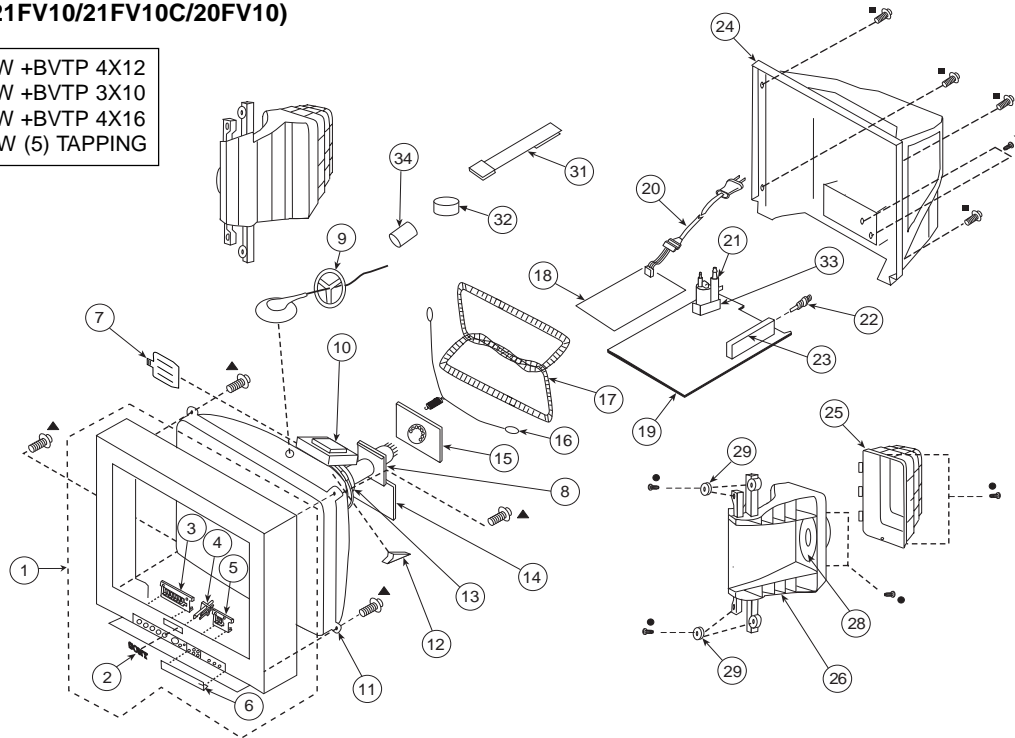Les composants identifiés par un triangle et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

### 7-1. CHASSIS (KV-21FV10/21FV10C/20FV10)

- 7-685-661-71 SCREW +BVTP 4X12
- ★ 7-685-647-79 SCREW +BVTP 3X10
- 7-685-647-71 SCREW +BVTP 4X16
- ▲ 4-365-808-01 SCREW (5) TAPPING




REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4036-880-1	BEZNET ASSY	2-6	18	* A-1311-807-A	G (VAR) MOUNTED PC (21FV10/21FV10C ONLY)	
2	4-046-161-01	EMBLEM (NO.8), SONY		19	* A-1298-960-A	A COMPLETE PC BOARD (20FV10/21FV10 ONLY)	
3	4-068-307-01	BUTTON, MULTI		19	* A-1298-998-A	A COMPLETE PC BOARD (21FV10C ONLY)	
4	4-068-308-01	GUIDE, LED		20	 1-769-796-71	CORD, POWER (WITH CONNECTOR) (21FV10C ONLY)	
5	4-068-309-01	BUTTON, FUNCTION		20	 1-790-001-21	CORD, AC POWER (WITH CONNECTOR) (21FV10 ONLY)	
6	4-068-306-01	DOOR		20	 1-791-229-11	CORD, NOISE F LTER WITH POWER (20FV10 ONLY)	
7	4-057-714-01	PIECE ASSY, TLH CORRECTION		21	 1-453-316-11	FBT ASSY NX-1748//X4A4	
8	1-416-864-11	COIL, VM		22	1-766-374-11	PLUG, F-PIN	
9	3-704-372-31	HOLDER, HV CABLE		23	 8-598-431-00	TUNER, FSS BTF-WA411	
10	1-452-728-51	COIL, NA ROTATION (RT-154)		24	4-071-348-01	COVER, REAR	
11	 8-738-822-05	CRT 21RSN (FOR NORTH AMERICA) (20FV10/21FV10)		25	X-4036-935-1	SPEAKER BOX ASSY	
11	 8-738-823-05	CRT 21RSN (FOR EQUATORIAL AREA) (21FV10C ONLY)		26	X-4036-947-1	SPEAKER DUCT ASSY	29
12	4-053-005-01	SPACER, DY		28	1-529-483-11	SPEAKER (8CM)	
13	 8-451-505-11	DY Y21RSA-S		29	4-374-745-31	CUSHION (A)	
14	A-1342-497-A	V MOUNTED PC BOARD		31	4-062-047-01	PIECE A (110), CONV CORRECTION	
15	* A-1331-965-A	C MOUNTED PC BOARD		32	1-452-032-00	MAGNET, DISC	
16	4-036-329-01	SPRING (B), TENSION		33	4-071-497-01	HOLDER, FBT	
17	 1-419-287-11	COIL, DEGAUSS NG (20FV10 ONLY)		34	1-500-586-11	F LTER, CLAMP (FERRITE CORE) (20FV10 ONLY)	
17	 1-419-288-11	COIL, DEGAUSSING (21FV10/21FV10C ONLY)					
18	* A-1311-782-A	G (VAR) MOUNTED PC (20FV10 ONLY)					



**Note:**


The components identified by shading and mark  are critical for safety. Replace only with part number specified.






**Note:**

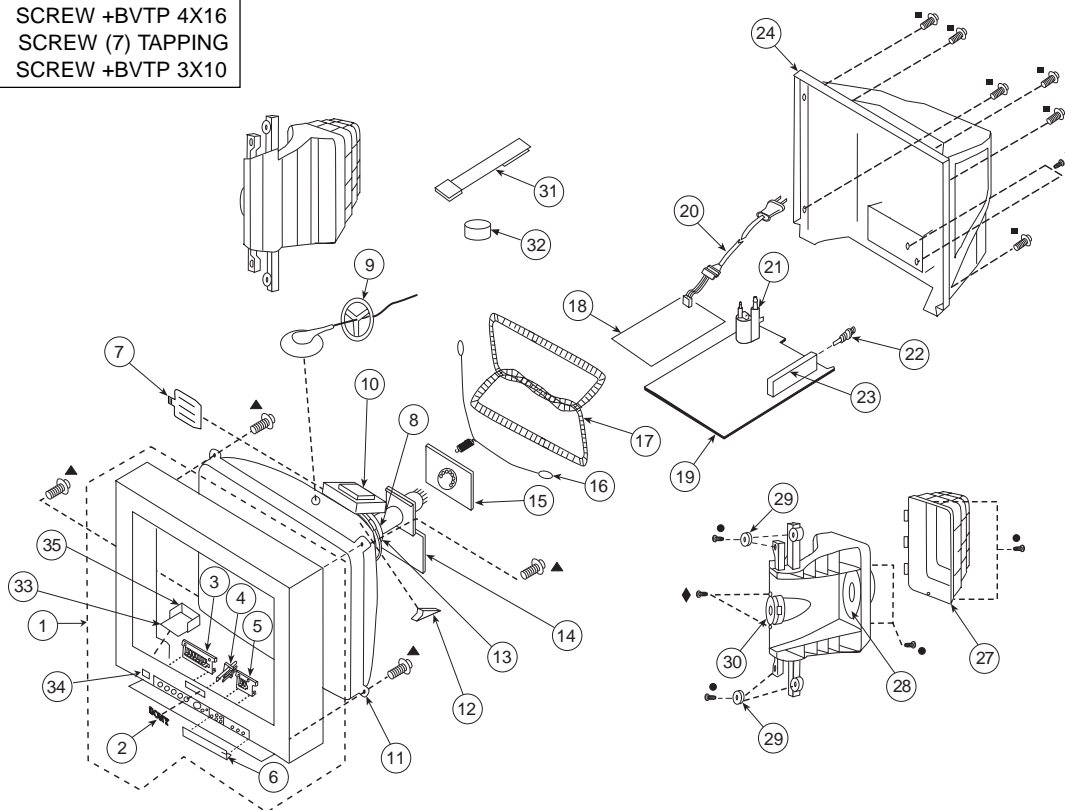

Les composants identifiés par un triangle et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**7-1. CHASSIS (KV-25FV10A ONLY)**

- 7-685-661-71 SCREW +BVTP 4X12
- ★ 7-685-647-71 SCREW +BVTP 3X10
- 7-685-663-71 SCREW +BVTP 4X16
- ▲ 4-041-268-01 SCREW (7) TAPPING
- ◆ 7-685-647-91 SCREW +BVTP 3X10



REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4036-359-1	BEZNET ASSY	2-6
2	4-046-160-11	EMBLEM (NO.9), SONY	
3	4-068-307-01	BUTTON, MULTI	
4	4-068-308-11	GU DE, LED	
5	4-068-309-01	BUTTON, FUNCTION	
6	4-068-306-01	DOOR	
7	4-057-714-01	PIECE ASSY, TLH CORRECTION	
8	 8-453-011-21	NECK ASSEMBLY NA299-S	
9	3-704-372-31	HOLDER, HV CABLE	
10	1-452-896-11	CO L, NA ROTATION (RT200)	
11	 8-733-250-05	CRT 25RSN	
12	4-053-005-01	SPACER, DY	
13	 1-451-475-11	DEFLECTION YOKE (Y25RSA)	
14	* A-1342-465-A	V MOUNTED PC BOARD	
15	* A-1331-898-A	C MOUNTED PC BOARD	
16	4-036-329-01	SPRING (B), TENSION	
17	 1-419-104-11	CO L, ALUMINIUM DEMAGNETIZATION	
18	* A-1311-754-A	G (VAR) MOUNTED PC	
19	* A-1298-794-A	A COMPLETE PC BOARD	
20	 1-783-838-31	CORD, POWER (WITH CONNECTOR)	

REF. NO.	PART NO.	DESCRIPTION	REMARK
21	 1-453-306-11	FBT ASSY NX-4011//X4J4	
22	1-766-374-11	PLUG, F-PIN	
23	 8-598-431-00	TUNER, FSS BTF-WA411	
24	4-068-303-01	COVER, REAR	
27	4-068-305-01	BOX, SPEAKER	
28	1-529-334-11	SPEAKER (13X8CM)	
29	4-374-745-31	CUSHION (A)	
30	1-529-333-11	SPEAKER (4CM)	
31	4-062-047-01	PIECE A(110), CONV CORRECT	
32	1-452-032-00	MAGNET, DISC	
33	* A-1372-117-A	MOUNTED PWB, HZ	
34	4-069-764-01	BUTTON, MA N POWER	
35	4-052-635-01	MA N POWER BRACKET	

## SECTION 8 ELECTRICAL PARTS LIST

**Note:**

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- The components identified by **A** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

A

- Items marked \* are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**RESISTORS**

- All resistors are in ohms
- F : nonflammable

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK		
<div><div>A</div><div></div></div>					
* A-1298-794-A	A COMPLETE PC BOARD (KV-25FV10A ONLY)				
* A-1298-998-A	A COMPLETE PC BOARD (KV-21FV10C ONLY)				
* A-1298-960-A	A COMPLETE PC BOARD (KV-21FV10/20FV10 ONLY)				
7-682-949-01	SCREW +PSW 3X10				
CAPACITOR					
C001	1-163-259-91	CERAMIC CH P	220PF	5%	50V
C002	1-126-960-11	ELECT	1μF	20%	50V
C003	1-126-960-11	ELECT	1μF	20%	50V
C004	1-106-343-00	MYLAR	0 001μF	10%	200V
C005	1-126-960-11	ELECT	1μF	20%	50V
C006	1-163-035-00	CERAMIC CHIP	0 047μF		50V
C007	1-163-259-91	CERAMIC CH P	220PF	5%	50V
C008	1-163-009-11	CERAMIC CHIP	0 001μF	10%	50V
C009	1-104-664-11	ELECT	47μF	20%	25V
C011	1-163-009-11	CERAMIC CHIP	0 001μF	10%	50V
C012	1-163-009-11	CERAMIC CHIP	0 001μF	10%	50V
C014	1-164-004-11	CERAMIC CH P	0.1μF	10%	25V
C017	1-126-960-11	ELECT	1μF	20%	50V
C019	1-163-135-00	CERAMIC CH P	560PF	5%	50V
C020	1-130-495-00	FILM	0.1μF	5%	50V
C021	1-163-259-91	CERAMIC CH P	220PF	5%	50V
C022	1-163-259-91	CERAMIC CH P	220PF	5%	50V
C028	1-163-005-11	CERAMIC CH P	470PF	10%	50V
C030	1-163-259-91	CERAMIC CH P	220PF	5%	50V
C034	1-163-037-11	CERAMIC CHIP	0 022μF	10%	50V
C035	1-163-017-00	CERAMIC CH P	0 0047μF	10%	50V
C036	1-163-009-11	CERAMIC CHIP	0 001μF	10%	50V
C037	1-164-161-11	CERAMIC CH P	0 0022μF	10%	50V
C038	1-126-935-11	ELECT	470μF	20%	16V
C039	1-126-964-11	ELECT	10μF	20%	50V

REF. NO.	PART NO.	DESCRIPTION	REMARK		
C040	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
		(KV-20FV10/21FV10/21FV10C)			
C041	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
		(KV-20FV10/21FV10/21FV10C)			
C045	1-164-161-11	CERAMIC CHIP	0.0022μF	10%	50V
C046	1-104-664-11	ELECT	47μF	20%	25V
C047	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C048	1-163-009-11	CERAMIC CHIP	0.001μF	10%	50V
C054	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C060	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C062	1-164-161-11	CERAMIC CHIP	0.0022μF	10%	50V
C063	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
		(KV-20FV10/21FV10/21FV10C)			
C064	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C065	1-163-009-11	CERAMIC CHIP	0.001μF	10%	50V
C070	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C071	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C073	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C076	1-163-009-11	CERAMIC CHIP	0.001μF	10%	50V
C078	1-163-259-91	CERAMIC CHIP	220PF	5%	50V
C080	1-107-698-11	ELECT	10μF	20%	25V
C081	1-126-964-11	ELECT	10μF	20%	50V
C091	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C092	1-163-231-11	CERAMIC CHIP	15PF	5%	50V
C101	1-126-963-11	ELECT	4.7μF	20%	50V
C102	1-126-933-11	ELECT	100μF	20%	16V
C150	1-126-935-11	ELECT	470μF	20%	16V
C151	1-104-664-11	ELECT	47μF	20%	25V
C203	1-163-021-91	CERAMIC CHIP	0 01μF	10%	50V
C207	1-126-959-11	ELECT	0.47μF	20%	50V
C208	1-126-959-11	ELECT	0.47μF	20%	50V
C209	1-126-963-11	ELECT	4.7μF	20%	50V
C211	1-126-964-11	ELECT	10μF	20%	50V
C212	1-126-963-11	ELECT	4.7μF	20%	50V
C213	1-126-964-11	ELECT	10μF	20%	50V
C222	1-126-964-11	ELECT	10μF	20%	50V
C223	1-104-664-11	ELECT	47μF	20%	25V
C225	1-163-017-00	CERAMIC CHIP	0.0047μF	10%	50V
C226	1-126-963-11	ELECT	4.7μF	20%	50V
C255	1-104-760-11	CERAMIC CHIP	0.047μF	10%	50V

**Note:**

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF.NO.	PART NO.	DESCRIPTION	REMARK			REF.NO.	PART NO.	DESCRIPTION	REMARK		
C256	1-126-960-11	ELECT	1 $\mu$ F	20%	50V	C355	1-126-933-11	ELECT	100 $\mu$ F	20%	16V
C257	1-126-960-11	ELECT	1 $\mu$ F	20%	50V	C356	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C258	1-126-959-11	ELECT	0.47 $\mu$ F	20%	50V	C357	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C259	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C358	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
C284	1-104-664-11	ELECT	47 $\mu$ F	20%	25V	C359	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
C285	1-126-933-11	ELECT	100 $\mu$ F	20%	16V	C360	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C287	1-126-959-11	ELECT	0.47 $\mu$ F	20%	50V	C361	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C288	1-126-960-11	ELECT	1 $\mu$ F	20%	50V	C362	1-126-960-11	ELECT	1 $\mu$ F	20%	50V
C289	1-126-960-11	ELECT	1 $\mu$ F	20%	50V	C364	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C290	1-164-005-11	CERAMIC CH P	0.47 $\mu$ F		25V	C365	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C300	1-163-233-11	CERAMIC CH P (KV-25FV10A ONLY)	18PF	5%	50V	C366	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C301	1-163-233-11	CERAMIC CH P	18PF	5%	50V	C367	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C302	1-163-233-11	CERAMIC CH P (KV-25FV10A ONLY)	18PF	5%	50V	C368	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C303	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V	C369	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
C304	1-163-038-91	CERAMIC CH P	0.1 $\mu$ F		25V	C373	1-163-038-91	CERAMIC CHIP	0.1 $\mu$ F		25V
C305	1-164-004-11	CERAMIC CH P	0.1 $\mu$ F	10%	25V	C374	1-126-935-11	ELECT	470 $\mu$ F	20%	16V
C306	1-164-004-11	CERAMIC CH P	0.1 $\mu$ F	10%	25V	C375	1-163-038-91	CERAMIC CHIP	0.1 $\mu$ F		25V
C307	1-126-964-11	ELECT	10 $\mu$ F	20%	50V	C376	1-104-664-11	ELECT	47 $\mu$ F	20%	25V
C308	1-126-964-11	ELECT	10 $\mu$ F	20%	50V	C377	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
C309	1-163-017-00	CERAMIC CH P (KV-25FV10A ONLY)	0 0047 $\mu$ F	10%	50V	C380	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C309	1-163-021-91	CERAMIC CH P (KV-20FV10/21FV10/21FV10C)	0.01 $\mu$ F	10%	50V	C381	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C310	1-126-960-11	ELECT	1 $\mu$ F	20%	50V	C382	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C311	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C390	1-126-959-11	ELECT	0.47 $\mu$ F	20%	50V
C312	1-126-767-11	ELECT	1000 $\mu$ F	20%	16V	C396	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C313	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C397	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C314	1-163-231-11	CERAMIC CH P	15PF	5%	50V	C398	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F	10%	50V
C316	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C399	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
C317	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C400	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V
C318	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C401	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V
C319	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V	C402	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V
C320	1-126-957-11	ELECT (KV-25FV10A ONLY)	0.22 $\mu$ F	20%	50V	C403	1-163-009-11	CERAMIC CHIP	0.001 $\mu$ F	10%	50V
C320	1-126-959-11	ELECT (KV-20FV10/21FV10/21FV10C)	0.47 $\mu$ F	20%	50V	C404	1-163-034-00	CERAMIC CHIP	0.033 $\mu$ F		50V
C321	1-163-259-91	CERAMIC CH P (KV-25FV10A ONLY)	220PF	5%	50V	C405	1-164-182-11	CERAMIC CHIP	0.0033 $\mu$ F	10%	50V
C321	1-163-133-00	CERAMIC CH P (KV-20FV10/21FV10/21FV10C)	470PF	5%	50V	C406	1-163-034-00	CERAMIC CHIP	0.033 $\mu$ F		50V
C324	1-163-243-11	CERAMIC CH P	47PF	5%	50V	C407	1-163-038-91	CERAMIC CHIP	0.1 $\mu$ F		25V
C330	1-163-003-11	CERAMIC CH P	330PF	10%	50V	C410	1-163-038-91	CERAMIC CHIP	0.1 $\mu$ F		25V
C332	1-163-251-11	CERAMIC CH P	100PF	5%	50V	C411	1-126-933-11	ELECT	100 $\mu$ F	20%	16V
C334	1-126-933-11	ELECT	100 $\mu$ F	20%	16V	C412	1-126-960-11	ELECT	1 $\mu$ F	20%	50V
C350	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C413	1-126-960-11	ELECT	1 $\mu$ F	20%	50V
C351	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C414	1-163-017-00	CERAMIC CHIP	0.0047 $\mu$ F	10%	50V
C352	1-126-964-11	ELECT	10 $\mu$ F	20%	50V	C415	1-163-034-00	CERAMIC CHIP	0.033 $\mu$ F		50V
C353	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C416	1-126-963-11	ELECT	4.7 $\mu$ F	20%	50V
C354	1-163-021-91	CERAMIC CH P	0.01 $\mu$ F	10%	50V	C417	1-126-933-11	ELECT	100 $\mu$ F	20%	16V
						C418	1-126-964-11	ELECT	10 $\mu$ F	20%	50V
						C419	1-126-961-11	ELECT	2 2 $\mu$ F	20%	50V
						C420	1-126-960-11	ELECT	1 $\mu$ F	20%	50V
						C421	1-126-940-11	ELECT	330 $\mu$ F	20%	25V
						C422	1-126-943-11	ELECT	2200 $\mu$ F	20%	25V
						C425	1-126-943-11	ELECT	2200 $\mu$ F	20%	25V

**Note:**

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C426	1-126-940-11	ELECT	330 $\mu$ F 20% 25V	C521	1-164-645-11	CERAMIC CHIP	1000PF 10% 500V
C427	1-126-961-11	ELECT	2.2 $\mu$ F 20% 50V	C522	1-117-661-11	F L M	0.15 $\mu$ F 5% 250V
C428	1-136-169-00	FILM	0.22 $\mu$ F 5% 50V			(KV-25FV10A ONLY)	
C430	1-164-182-11	CERAMIC CH P	0 0033 $\mu$ F 10% 50V	C524	1-102-244-00	CERAMIC CHIP	220PF 10% 500V
C431	1-163-034-00	CERAMIC CH P	0 0033 $\mu$ F 50V	C525	1-162-815-11	CERAMIC CHIP	47PF 5% 500V
				C526	1-126-960-11	ELECT	1 $\mu$ F 20% 50V
C432	1-163-009-11	CERAMIC CH P	1000PF 10% 50V	C527	1-126-965-11	ELECT	22 $\mu$ F 20% 50V
C433	1-126-963-11	ELECT	4.7 $\mu$ F 20% 50V	C528	1-164-690-91	CERAMIC CHIP	0.0022 $\mu$ F 5% 50V
C434	1-126-963-11	ELECT	4.7 $\mu$ F 20% 50V	C529	1-164-161-11	CERAMIC CHIP	0.0022 $\mu$ F 10% 50V
C435	1-136-169-00	FILM	0.22 $\mu$ F 5% 50V	C530	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C440	1-137-194-81	FILM	0.47 $\mu$ F 5% 50V			(KV-25FV10A ONLY)	
		(KV-25FV10A ONLY)		C530	1-164-161-11	CERAMIC CHIP	0.0022 $\mu$ F 10% 50V
						(KV-20FV10/21FV10/21FV10C)	
C441	1-137-194-81	FILM	0.47 $\mu$ F 5% 50V	C531	1-106-387-00	MYLAR	0.068 $\mu$ F 10% 200V
		(KV-25FV10A ONLY)		C539	1-107-635-11	ELECT	4.7 $\mu$ F 20% 160V
C442	1-162-114-00	CERAMIC CH P	0 0047 $\mu$ F 2KV	C540	1-107-635-11	ELECT	4.7 $\mu$ F 20% 160V
		(KV-25FV10A ONLY)		C541	1-126-969-11	ELECT	220 $\mu$ F 20% 50V
C443	1-126-961-11	ELECT	2.2 $\mu$ F 20% 50V	C542	1-126-967-11	ELECT	47 $\mu$ F 20% 50V
		(KV-25FV10A ONLY)					
C444	1-126-961-11	ELECT	2.2 $\mu$ F 20% 50V	C543	1-137-194-81	F L M	0.47 $\mu$ F 5% 50V
		(KV-25FV10A ONLY)		C550	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C445	1-126-965-11	ELECT	22 $\mu$ F 20% 50V	C553	1-107-662-11	ELECT	22 $\mu$ F 20% 250V
		(KV-25FV10A ONLY)		C555	1-115-185-11	CERAMIC CHIP	0.033 $\mu$ F 10% 50V
						(KV-25FV10A ONLY)	
C501	1-102-112-00	CERAMIC CH P	330PF 10% 50V	C555	1-164-004-11	CERAMIC CHIP	0.1 $\mu$ F 10% 25V
C502	1-106-383-00	MYLAR	0 047 $\mu$ F 10% 200V			(KV-20FV10/21FV10/21FV10C)	
C503	1-102-212-00	CERAMIC CH P	820PF 10% 500V				
C504	1-102-002-00	CERAMIC CH P	680PF 10% 500V	C562	1-126-935-11	ELECT	470 $\mu$ F 20% 16V
C505	1-162-129-00	CERAMIC CH P	150PF 10% 2KV	C564	1-126-935-11	ELECT	470 $\mu$ F 20% 16V
		(KV-25FV10A ONLY)		C571	$\triangle$ 1-126-964-11	ELECT	10 $\mu$ F 20% 50V
C505	1-162-134-11	CERAMIC	470PF 10% 2KV	C573	$\triangle$ 1-126-963-11	ELECT	4.7 $\mu$ F 20% 50V
		(KV-20FV10/21FV10/21FV10C)		C574	$\triangle$ 1-107-635-11	ELECT	4.7 $\mu$ F 20% 160V
C507	$\triangle$ 1-136-617-11	FILM	0.019 $\mu$ F 3% 2KV				
		(KV-25FV10A ONLY)		C575	$\triangle$ 1-163-021-91	CERAMIC CH P	0 01 $\mu$ F 10% 50V
C507	1-117-642-11	FILM	8200PF 3% 1.2KV	C576	1-123-024-21	ELECT	33 $\mu$ F 160V
		(KV-20FV10/21FV10/21FV10C)		C590	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C508	1-107-364-11	MYLAR	0.01 $\mu$ F 10% 200V	C591	1-137-417-11	MYLAR	0.0047 $\mu$ F 10% 200V
C509	1-162-116-00	CERAMIC CH P	680PF 10% 2KV	C592	1-163-017-00	CERAMIC CHIP	0.0047 $\mu$ F 10% 50V
						(KV-25FV10A ONLY)	
C510	1-107-651-11	ELECT	4.7 $\mu$ F 20% 250V	C592	1-163-034-00	CERAMIC CHIP	0.033 $\mu$ F 50V
C511	1-115-521-11	FILM	0.82 $\mu$ F 5% 250V			(KV-20FV10/21FV10/21FV10C)	
		(KV-25FV10A ONLY)		C629	1-104-665-11	ELECT	100 $\mu$ F 20% 25V
C511	1-115-519-11	FILM	0.56 $\mu$ F 5% 250V	C634	1-104-665-11	ELECT	100 $\mu$ F 20% 25V
		(KV-20FV10/21FV10/21FV10C)		C665	1-126-933-11	ELECT	100 $\mu$ F 20% 16V
C512	$\triangle$ 1-106-383-00	MYLAR	0 047 $\mu$ F 10% 200V	C690	1-126-959-11	ELECT	0.47 $\mu$ F 20% 50V
C513	1-102-002-00	CERAMIC CH P	680PF 10% 500V				
C514	1-117-813-11	FILM	0.75 $\mu$ F 5% 250V	C691	1-126-935-11	ELECT	470 $\mu$ F 20% 16V
		(KV-25FV10A ONLY)		C692	1-104-664-11	ELECT	47 $\mu$ F 20% 25V
				C693	1-137-194-81	F L M	0.47 $\mu$ F 5% 50V
C514	1-115-521-11	FILM	0.82 $\mu$ F 5% 250V	C870	1-107-906-11	ELECT	10 $\mu$ F 20% 50V
		(KV-20FV10/21FV10/21FV10C)		C900	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C515	1-162-116-00	CERAMIC CH P	680PF 10% 2KV				
C516	1-117-214-11	CERAMIC CHIP	0 001 $\mu$ F 10% 2KV	C904	1-104-664-11	ELECT	47 $\mu$ F 20% 25V
C520	$\triangle$ 1-130-895-00	FILM	0.056 $\mu$ F 10% 400V	C907	1-163-021-91	CERAMIC CHIP	0 01 $\mu$ F 10% 50V
		(KV-25FV10A ONLY)					
C520	1-129-722-00	FILM	0.047 $\mu$ F 5% 630V				
		(KV-20FV10/21FV10/21FV10C)					

## Note:

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

## Note:

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<b>CONNECTOR</b>							
CN101 *	1-508-786-00	P N, CONNECTOR (5MM PITCH) 2P		D541	8-719-908-03	DIODE GP08D	
CN120 *	1-564-507-11	PLUG, CONNECTOR 4P		D552	8-719-302-43	DIODE EL1Z	
CN203 *	1-560-124-00	PLUG, CONNECTOR (2.5MM) 4P		D561	8-719-979-85	DIODE EGP20G	
CN301 *	1-564-510-11	PLUG, CONNECTOR 7P		D562	8-719-979-85	DIODE EGP20G	
CN303 *	1-564-510-11	PLUG, CONNECTOR 7P (KV-25FV10A ONLY)		D571 $\triangle$	8-719-991-33	DIODE 1SS133T-77	
CN303 *	1-564-508-11	PLUG, CONNECTOR 5P (KV-20FV10/21FV10/21FV10C)		D572 $\triangle$	8-719-991-33	DIODE 1SS133T-77	
CN401 *	1-564-507-11	PLUG, CONNECTOR 4P		D573 $\triangle$	8-719-110-08	DIODE RD8.2ESB2	
CN402 *	1-564-507-11	PLUG, CONNECTOR 4P (KV-25FV10A ONLY)		D574 $\triangle$	8-719-302-43	DIODE EL1Z	
CN501 *	1-580-798-11	CONNECTOR P N (DY) 6P		D581 $\triangle$	8-719-991-33	DIODE 1SS133T-77	
CN502 *	1-564-508-11	PLUG, CONNECTOR 5P		D650	8-719-109-89	DIODE RD5.6ESB2	
CN550 *	1-564-513-11	PLUG, CONNECTOR 10P		D800	8-719-921-44	DIODE MTZJ-5.1C	
				D871	8-719-914-44	DIODE DAP202K	
<b>DIODE</b>				<b>FERRITE BEAD</b>			
D001	8-719-921-44	DIODE MTZJ-5.1C		FB501	1-410-397-21	FERRITE	1.1 $\mu$ H
D002	8-719-110-17	DIODE RD10ESB2		FB521	1-410-397-21	FERRITE	1.1 $\mu$ H
D003	8-719-991-33	DIODE 1SS133T-77		FB522	1-410-397-21	FERRITE	1.1 $\mu$ H
D004	8-719-991-33	DIODE 1SS133T-77					
D005	8-719-109-89	DIODE RD5.6ESB2		<b>FILTER</b>			
D006	8-719-110-17	DIODE RD10ESB2		FL301	1-239-847-11	FILTER, LOW PASS	
D007	8-719-070-79	DIODE LNK0220022G1 (KV-25FV10A ONLY)		FL302	1-239-847-11	FILTER, LOW PASS	
D007	8-719-074-84	DIODE LNK0120022G1 (KV-20FV10/21FV10/21FV10C)		FL303	1-239-847-11	FILTER, LOW PASS	
D008	8-719-108-12	DIODE RD9.1EW		<b>IC</b>			
D009	8-719-110-17	DIODE RD10ESB2		IC001	8-759-594-76	IC M37273MF-2545SP	
D010	8-719-976-99	DIODE DTZ5.1B		IC002	8-759-575-47	IC NJM78LR05BM-TE2	
D011	8-719-976-99	DIODE DTZ5.1B		IC003	8-759-527-76	IC M24C08-MN6T	
D205	8-719-982-22	DIODE MTZJ-30D		IC004	8-742-134-00	HYB IC SBX1981-51P	
D207	8-719-109-66	DIODE RD3.3ESB2		IC010	8-759-710-85	IC NJM2233BD	
D208	8-719-110-08	DIODE RD8.2ESB2		IC202	8-759-100-96	IC NJM4558M-TE2	
D250	8-719-108-12	DIODE RD9.1EW		IC203	8-759-534-81	IC MM1313AD/	
D251	8-719-108-12	DIODE RD9.1EW		IC301 $\triangle$	8-752-090-40	IC CXA2135S (KV-25FV10A ONLY)	
D252	8-719-110-17	DIODE RD10ESB2		IC301	8-752-088-86	IC CXA2135S (KV-20FV10/21FV10/21FV10C)	
D253	8-719-110-17	DIODE RD10ESB2		IC302	8-759-433-10	IC TC9090AN	
D254	8-719-110-17	DIODE RD10ESB2		IC402	8-759-578-88	IC BH3868FS-E2	
D255	8-719-110-17	DIODE RD10ESB2		IC404	8-759-573-40	IC TDA8580Q/N1	
D302	8-719-976-99	DIODE DTZ5.1B		IC405	8-759-577-91	IC M62438FP-600C (KV-25FV10A ONLY)	
D501 $\triangle$	8-719-945-80	DIODE ERC06-15S (KV-25FV10A ONLY)		IC521 $\triangle$	8-759-700-07	IC NJM2903M-TE2	
D502	8-719-908-03	DIODE GP08D		IC541	8-759-980-58	IC TDA8172	
D503	8-719-908-03	DIODE GP08D		IC603	8-759-198-03	IC PQ09RF21	
D504 $\triangle$	8-719-945-80	DIODE ERC06-15S		<b>JACK</b>			
D520 $\triangle$	8-719-067-63	DIODE MDV04-600RL		J200	1-774-750-21	JACK BLOCK, PIN 2P	
D521	8-719-302-43	DIODE EL1Z		J201	1-774-751-11	TERMINAL BLOCK, S	
D522	8-719-991-33	DIODE 1SS133T-77					
D523	8-719-991-33	DIODE 1SS133T-77					





**Note:**


The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

**Note:**


Les composants identifiés par un trame et une marque **△** sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
J203	1-691-110-11	JACK, PIN 3P		Q081	8-729-422-27	TRANSISTOR 2SD601A-Q	
J400	1-568-267-21	JACK		Q082	8-729-422-27	TRANSISTOR 2SD601A-Q	
CHIP CONDUCTOR				Q101	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR001	1-216-295-91	SHORT		Q200	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR003	1-216-295-91	SHORT		Q201	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR004	1-216-295-91	SHORT		Q203	8-729-026-39	TRANSISTOR 2SA933AS-QT (KV-25FV10A/21FV10C)	
JR005	1-216-295-91	SHORT		Q203	8-729-119-76	TRANSISTOR2SA1175-HFE (KV-20FV10/21FV10)	
JR006	1-216-295-91	SHORT		Q204	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR007	1-216-295-91	SHORT		Q286	8-729-216-22	TRANSISTOR 2SA1162-G	
JR008	1-216-295-91	SHORT		Q287	8-729-216-22	TRANSISTOR 2SA1162-G	
JR010	1-216-295-91	SHORT		Q288	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR011	1-216-295-91	SHORT		Q300	8-729-422-27	TRANSISTOR 2SD601A-Q	
JR012	1-216-295-91	SHORT		Q301	8-729-422-27	TRANSISTOR 2SD601A-Q	
COIL				Q302	8-729-422-27	TRANSISTOR 2SD601A-Q	
L001	1-414-267-11	INDUCTOR	10μH	Q305	8-729-216-22	TRANSISTOR 2SA1162-G	
L002	1-414-273-11	INDUCTOR	100μH	Q306	8-729-216-22	TRANSISTOR 2SA1162-G	
L003	1-414-273-11	INDUCTOR	100μH	Q307	8-729-216-22	TRANSISTOR 2SA1162-G	
L040	1-410-463-11	INDUCTOR	2.7μH (KV-20FV10/21FV10/21FV10C)	Q308	8-729-216-22	TRANSISTOR 2SA1162-G	
L101	1-414-267-11	INDUCTOR	10μH	Q309	8-729-216-22	TRANSISTOR 2SA1162-G	
L150	1-414-273-11	INDUCTOR	100μH	Q310	8-729-216-22	TRANSISTOR 2SA1162-G	
L151	1-414-267-11	INDUCTOR	10μH	Q350	8-729-216-22	TRANSISTOR 2SA1162-G	
L301	1-414-271-11	INDUCTOR	47μH	Q351	8-729-422-27	TRANSISTOR 2SD601A-Q	
L302	1-414-267-11	INDUCTOR	10μH	Q352	8-729-216-22	TRANSISTOR 2SA1162-G	
L303	1-414-273-11	INDUCTOR	100μH	Q353	8-729-216-22	TRANSISTOR 2SA1162-G	
L304	1-414-273-11	INDUCTOR	100μH	Q354	8-729-216-22	TRANSISTOR 2SA1162-G	
L350	1-414-273-11	INDUCTOR	100μH	Q355	8-729-422-27	TRANSISTOR 2SD601A-Q	
L351	1-414-273-11	INDUCTOR	100μH	Q356	8-729-216-22	TRANSISTOR 2SA1162-G	
L502	1-412-552-11	INDUCTOR	2.2μH	Q357	8-729-216-22	TRANSISTOR 2SA1162-G	
L503	△ 1-406-677-11	INDUCTOR	10μH	Q358	8-729-422-27	TRANSISTOR 2SD601A-Q	
L504	1-412-533-21	INDUCTOR	47μH	Q359	8-729-216-22	TRANSISTOR 2SA1162-G	
L505	1-406-978-11	INDUCTOR	150μH (KV-25FV10A ONLY)	Q360	8-729-216-22	TRANSISTOR 2SA1162-G	
L506	1-406-981-21	INDUCTOR	470μH (KV-20FV10/21FV10/21FV10C)	Q390	8-729-422-27	TRANSISTOR 2SD601A-Q	
L520	1-409-955-11	INDUCTOR	8μH	Q401	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L591	1-412-528-61	INDUCTOR	18μH	Q501	△ 8-729-140-50	TRANSISTOR 2SC3209LK	
L643	1-412-525-31	INDUCTOR	10μH	Q502	△ 8-729-046-07	TRANSISTOR 2SD2578-YD	
IC LINK				Q521	△ 8-729-422-27	TRANSISTOR 2SD601A-Q	
PS403	△ 1-532-984-11	L NK, IC	2A/90V	Q522	△ 8-729-809-29	TRANSISTOR 2SC4159-E	
TRANSISTOR				Q555	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q001	8-729-216-22	TRANSISTOR 2SA1162-G		Q571	△ 8-729-200-17	TRANSISTOR 2SA1091-O	
Q002	8-729-422-27	TRANSISTOR 2SD601A-Q		Q604	8-729-119-78	TRANSISTOR 2SC2785-HFE	
				Q650	8-729-111-55	TRANSISTOR 2SD1312-K	
				Q870	8-729-422-27	TRANSISTOR 2SD601A-Q	
				RESISTOR			
				R001	1-216-033-00	RES,CHIP 220 5% 1/10W	
				R002	1-216-073-00	RES,CHIP 10K 5% 1/10W	

**Note:**

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF.NO.	PART NO.	DESCRIPTION	REMARK			REF.NO.	PART NO.	DESCRIPTION	REMARK		
R003	1-216-033-00	RES,CHIP	220	5%	1/10W	R052	1-216-049-91	RES,CHIP	1K	5%	1/10W
R004	1-216-073-00	RES,CHIP	10K	5%	1/10W	R054	1-249-425-11	CARBON	4.7K	5%	1/4W
R005	1-216-025-91	RES,CHIP	100	5%	1/10W	R055	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R006	1-216-049-91	RES,CHIP	1K	5%	1/10W	R056	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R007	1-216-025-91	RES,CHIP	100	5%	1/10W	R057	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R008	1-216-033-00	RES,CHIP	220	5%	1/10W	R058	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R009	1-216-057-00	RES,CHIP	2.2K	5%	1/10W	R060	1-216-295-91	SHORT			
R010	1-216-033-00	RES,CHIP	220	5%	1/10W	R064	1-216-295-91	SHORT			
R011	1-216-033-00	RES,CHIP	220	5%	1/10W	R066	1-216-033-00	RES,CHIP	220	5%	1/10W
R012	1-216-053-00	RES,CHIP	1.5K	5%	1/10W	R067	1-216-033-00	RES,CHIP	220	5%	1/10W
R013	1-216-081-00	RES,CHIP	22K	5%	1/10W	R068	1-249-429-11	CARBON	10K	5%	1/4W
R014	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	R070	1-249-425-11	CARBON	4.7K	5%	1/4W
R015	1-216-089-91	RES,CHIP	47K	5%	1/10W	R071	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R016	1-216-041-00	RES,CHIP	470	5%	1/10W	R073	1-249-425-11	CARBON	4.7K	5%	1/4W
R017	1-216-113-00	RES,CHIP	470K	5%	1/10W	R074	1-216-073-00	RES,CHIP	10K	5%	1/10W
R018	1-216-049-91	RES,CHIP	1K	5%	1/10W	R075	1-216-073-00	RES,CHIP	10K	5%	1/10W
R019	1-208-798-11	RES,CHIP	4.7K	0.50%	1/10W	R076	1-216-121-91	RES,CHIP	1M	5%	1/10W
R020	1-249-415-11	CARBON	680	5%	1/4W	R077	1-216-097-91	RES,CHIP	100K	5%	1/10W
R021	1-249-416-11	CARBON	820	5%	1/4W	R078	1-247-815-91	CARBON	220	5%	1/4W
R022	1-249-421-11	CARBON	2.2K	5%	1/4W	R081	1-249-413-11	CARBON	470	5%	1/4W
R023	1-249-427-11	CARBON	6.8K	5%	1/4W	(KV-25FV10A ONLY)					
R024	1-216-069-00	RES,CHIP	6.8K	5%	1/10W	R085	1-216-049-91	RES,CHIP	1K	5%	1/10W
R025	1-249-426-11	CARBON	5.6K	5%	1/4W	R086	1-216-045-00	RES,CHIP	680	5%	1/10W
R026	1-249-426-11	CARBON	5.6K	5%	1/4W	R087	1-216-045-00	RES,CHIP	680	5%	1/10W
R027	1-249-426-11	CARBON	5.6K	5%	1/4W	R088	1-216-045-00	RES,CHIP	680	5%	1/10W
R028	1-216-049-91	RES,CHIP	1K	5%	1/10W	R089	1-216-049-91	RES,CHIP	1K	5%	1/10W
R029	1-216-295-91	SHORT				R091	1-216-073-00	RES,CHIP	10K	5%	1/10W
R030	1-216-295-91	SHORT				R092	1-216-073-00	RES,CHIP	10K	5%	1/10W
R031	1-216-045-00	RES,CHIP	680	5%	1/10W	R094	1-216-073-00	RES,CHIP	10K	5%	1/10W
R032	1-247-815-91	CARBON	220	5%	1/4W	R095	1-216-033-00	RES,CHIP	220	5%	1/10W
R033	1-247-815-91	CARBON	220	5%	1/4W	R096	1-216-045-00	RES,CHIP	680	5%	1/10W
R034	1-216-033-00	RES,CHIP	220	5%	1/10W	R097	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R035	1-216-033-00	RES,CHIP	220	5%	1/10W	R099	1-216-073-00	RES,CHIP	10K	5%	1/10W
R037	1-216-033-00	RES,CHIP	220	5%	1/10W	R101	1-216-073-00	RES,CHIP	10K	5%	1/10W
R038	1-216-049-91	RES,CHIP	1K	5%	1/10W	R120	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R039	1-216-089-91	RES,CHIP	47K	5%	1/10W	R150	1-216-025-91	RES,CHIP	100	5%	1/10W
R040	1-249-413-11	CARBON	470	5%	1/4W	R151	1-216-025-91	RES,CHIP	100	5%	1/10W
R041	1-216-033-00	RES,CHIP	220	5%	1/10W	R203	1-216-025-91	RES,CHIP	100	5%	1/10W
		(KV-20FV10/21FV10/21FV10C)				R204	1-216-043-91	RES,CHIP	560	5%	1/10W
R042	1-216-033-00	RES,CHIP	220	5%	1/10W	R205	1-216-043-91	RES,CHIP	560	5%	1/10W
R043	1-249-417-11	CARBON	1K	5%	1/4W	R207	1-216-025-91	RES,CHIP	100	5%	1/10W
R044	1-247-815-91	CARBON	220	5%	1/4W	R209	1-216-025-91	RES,CHIP	100	5%	1/10W
R045	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	R210	1-216-073-00	RES,CHIP	10K	5%	1/10W
R046	1-247-815-91	CARBON	220	5%	1/4W	R211	1-247-807-31	CARBON	100	5%	1/4W
R047	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	R213	1-216-057-00	RES,CHIP	2.2K	5%	1/10W
R048	1-216-025-91	RES,CHIP	100	5%	1/10W	R214	1-216-113-00	RES,CHIP	470K	5%	1/10W
R049	1-216-089-91	RES,CHIP	47K	5%	1/10W	R215	1-216-033-00	RES,CHIP	220	5%	1/10W
R050	1-216-073-00	RES,CHIP	10K	5%	1/10W	R216	1-216-113-00	RES,CHIP	470K	5%	1/10W
R051	1-216-033-00	RES,CHIP	220	5%	1/10W	R217	1-216-033-00	RES,CHIP	220	5%	1/10W

**Note:**

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK				REF.NO.	PART NO.	DESCRIPTION	REMARK			
R218	1-216-071-00	RES,CHIP	8.2K	5%	1/10W		R300	1-216-295-91	SHORT				
R219	1-216-073-00	RES,CHIP	10K	5%	1/10W				(KV-25FV10A ONLY)				
R220	1-216-073-00	RES,CHIP	10K	5%	1/10W		R301	1-216-295-91	SHORT				
R221	1-216-073-00	RES,CHIP	10K	5%	1/10W		R302	1-216-295-91	SHORT				
R222	1-216-071-00	RES,CHIP	8.2K	5%	1/10W				(KV-25FV10A ONLY)				
R223	1-216-073-00	RES,CHIP	10K	5%	1/10W		R304	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R224	1-216-073-00	RES,CHIP	10K	5%	1/10W				(KV-25FV10A ONLY)				
R225	1-216-073-00	RES,CHIP	10K	5%	1/10W		R304	1-208-790-11	RES,CHIP	2.2K	0.50%	1/10W	
R226	1-249-425-11	CARBON	4.7K	5%	1/4W				(KV-20FV10/21FV10/21FV10C)				
R227	1-216-097-91	RES,CHIP	100K	5%	1/10W		R305	1-216-033-00	RES,CHIP	220	5%	1/10W	
R228	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R306	1-208-806-11	RES,CHIP	10K	0.50%	1/10W	
R229	1-216-097-91	RES,CHIP	100K	5%	1/10W		R307	1-216-075-00	RES,CHIP	12K	5%	1/10W	
R230	1-216-073-00	RES,CHIP	10K	5%	1/10W				(KV-25FV10A ONLY)				
R241	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R307	1-216-075-00	RES,CHIP	12K	5%	1/10W	
R242	1-216-083-00	RES,CHIP	27K	5%	1/10W				(KV-20FV10/21FV10/21FV10C)				
R243	1-216-689-11	RES,CHIP	39K	5%	1/10W		R308	1-216-025-91	RES,CHIP	100	5%	1/10W	
R244	1-216-049-91	RES,CHIP	1K	5%	1/10W		R310	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R245	1-216-049-91	RES,CHIP	1K	5%	1/10W		R312	1-216-033-00	RES,CHIP	220	5%	1/10W	
R248	1-216-049-91	RES,CHIP	1K	5%	1/10W		R313	1-216-033-00	RES,CHIP	220	5%	1/10W	
R249	1-216-025-91	RES,CHIP	100	5%	1/10W		R314	1-216-033-00	RES,CHIP	220	5%	1/10W	
R250	1-216-033-00	RES,CHIP	220	5%	1/10W		R315	1-216-033-00	RES,CHIP	220	5%	1/10W	
R251	1-216-025-91	RES,CHIP	100	5%	1/10W		R316	1-247-807-31	CARBON	100	5%	1/4W	
R252	1-216-033-00	RES,CHIP	220	5%	1/10W		R317	1-216-025-91	RES,CHIP	100	5%	1/10W	
R253	1-215-899-11	METALOXIDE	15K	5%	2W	F	R318	1-216-025-91	RES,CHIP	100	5%	1/10W	
R254	1-216-033-00	RES,CHIP	220	5%	1/10W		R319	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R255	1-216-022-00	RES,CHIP	75	5%	1/10W		R320	1-247-807-31	CARBON	100	5%	1/4W	
R256	1-216-033-00	RES,CHIP	220	5%	1/10W		R321	1-216-041-00	RES,CHIP	470	5%	1/10W	
R257	1-249-429-11	CARBON	10K	5%	1/4W		R322	1-216-025-91	RES,CHIP	100	5%	1/10W	
R258	1-216-073-00	RES,CHIP	10K	5%	1/10W		R323	1-216-037-00	RES,CHIP	330	5%	1/10W	
R259	1-216-073-00	RES,CHIP	10K	5%	1/10W		R324	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R263	1-247-815-91	CARBON	220	5%	1/4W		R328	1-247-807-31	CARBON	100	5%	1/4W	
R264	1-247-815-91	CARBON	220	5%	1/4W		R329	1-216-025-91	RES,CHIP	100	5%	1/10W	
R265	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R330	1-216-025-91	RES,CHIP	100	5%	1/10W	
R266	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R331	1-216-025-91	RES,CHIP	100	5%	1/10W	
R267	1-216-022-00	RES,CHIP	75	5%	1/10W		R333	1-216-043-91	RES,CHIP	560	5%	1/10W	
R269	1-216-049-91	RES,CHIP	1K	5%	1/10W		R334	1-216-025-91	RES,CHIP	100	5%	1/10W	
R270	1-216-022-00	RES,CHIP	75	5%	1/10W		R335	1-216-057-00	RES,CHIP	2.2K	5%	1/10W	
R271	1-216-113-00	RES,CHIP	470K	5%	1/10W		R336	1-216-057-00	RES,CHIP	2.2K	5%	1/10W	
R272	1-216-113-00	RES,CHIP	470K	5%	1/10W		R337	1-216-057-00	RES,CHIP	2.2K	5%	1/10W	
R273	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R338	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R274	1-216-065-91	RES,CHIP	4.7K	5%	1/10W		R339	1-216-047-91	RES,CHIP	820	5%	1/10W	
R276	1-216-295-91	SHORT					R340	1-249-417-11	CARBON	1K	5%	1/4W	
R277	1-216-295-91	SHORT					R341	1-216-073-00	RES,CHIP	10K	5%	1/10W	
R279	1-249-425-11	CARBON	4.7K	5%	1/4W		R342	1-216-069-00	RES,CHIP	6.8K	5%	1/10W	
R296	1-249-437-11	CARBON	47K	5%	1/4W		R343	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R297	1-216-043-91	RES,CHIP	560	5%	1/10W		R344	1-216-295-91	SHORT				
R298	1-216-041-00	RES,CHIP	470	5%	1/10W		R345	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R299	1-249-425-11	CARBON	4.7K	5%	1/4W		R346	1-216-097-91	RES,CHIP	100K	5%	1/10W	
							R347	1-216-049-91	RES,CHIP	1K	5%	1/10W	
							R348	1-216-295-91	SHORT				



**Note:**

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF.NO.	PART NO.	DESCRIPTION	REMARK				REF.NO.	PART NO.	DESCRIPTION	REMARK			
R349	1-216-295-91	SHORT (KV-20FV10/21FV10/21FV10C)					R409	1-247-863-91	CARBON	22K	5%	1/4W	
R350	1-208-806-11	RES,CHIP	10K	0.50%	1/10W		R410	1-216-077-00	RES,CHIP	15K	5%	1/10W	
R351	1-216-025-91	RES,CHIP	100	5%	1/10W		R411	1-216-121-91	RES,CHIP	1M	5%	1/10W	
R352	1-216-053-00	RES,CHIP	1.5K	5%	1/10W		R412	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R353	1-216-025-91	RES,CHIP	100	5%	1/10W		R415	1-247-815-91	CARBON	220	5%	1/4W	
R354	1-216-025-91	RES,CHIP	100	5%	1/10W		R422	1-249-436-11	CARBON	39K	5%	1/4W	
R355	1-216-025-91	RES,CHIP	100	5%	1/10W		R423	1-249-431-11	CARBON	15K	5%	1/4W	
R356	1-216-059-00	RES,CHIP	2.7K	5%	1/10W		R424	1-247-863-91	CARBON	22K	5%	1/4W	
R357	1-216-295-91	SHORT (KV-25FV10A ONLY)					R426	1-249-425-11	CARBON	4.7K	5%	1/4W	
R359	1-216-057-00	RES,CHIP	2.2K	5%	1/10W		R428	1-249-425-11	CARBON	4.7K	5%	1/4W	
R361	1-216-049-91	RES,CHIP	1K	5%	1/10W		R429	1-249-427-11	CARBON	6.8K	5%	1/4W	
R362	1-216-043-91	RES,CHIP	560	5%	1/10W		R433	1-249-427-11	CARBON	6.8K	5%	1/4W	
R363	1-216-037-00	RES,CHIP	330	5%	1/10W		R440	1-216-049-91	RES,CHIP (KV-25FV10A ONLY)	1K	5%	1/10W	
R364	1-216-025-91	RES,CHIP	100	5%	1/10W		R441	1-216-097-91	RES,CHIP (KV-25FV10A ONLY)	100K	5%	1/10W	
R365	1-216-025-91	RES,CHIP	100	5%	1/10W		R442	1-216-083-00	RES,CHIP (KV-25FV10A ONLY)	27K	5%	1/10W	
R366	1-216-053-00	RES,CHIP	1.5K	5%	1/10W		R443	1-216-053-00	RES,CHIP (KV-25FV10A ONLY)	1.5K	5%	1/10W	
R367	1-216-057-00	RES,CHIP	2.2K	5%	1/10W		R444	1-216-089-91	RES,CHIP (KV-25FV10A ONLY)	47K	5%	1/10W	
R368	1-216-041-00	RES,CHIP	470	5%	1/10W		R445	1-216-062-00	RES,CHIP (KV-25FV10A ONLY)	3.6K	5%	1/10W	
R369	1-216-043-91	RES,CHIP	560	5%	1/10W		R446	1-216-065-91	RES,CHIP (KV-25FV10A ONLY)	4.7K	5%	1/10W	
R370	1-216-033-00	RES,CHIP	220	5%	1/10W		R448	1-216-065-91	RES,CHIP (KV-25FV10A ONLY)	4.7K	5%	1/10W	
R372	1-216-037-00	RES,CHIP	330	5%	1/10W		R460	1-249-429-11	CARBON	10K	5%	1/4W	
R373	1-216-025-91	RES,CHIP	100	5%	1/10W		R461	1-249-429-11	CARBON	10K	5%	1/4W	
R374	1-216-025-91	RES,CHIP	100	5%	1/10W		R490	1-216-295-91	SHORT (KV-20FV10/21FV10/21FV10C)				
R375	1-216-053-00	RES,CHIP	1.5K	5%	1/10W		R491	1-216-295-91	SHORT (KV-20FV10/21FV10/21FV10C)				
R376	1-216-049-91	RES,CHIP	1K	5%	1/10W		R501	1-247-843-11	CARBON	3.3K	5%	1/4W	
R377	1-216-057-00	RES,CHIP	2.2K	5%	1/10W		R502	$\triangle$ 1-216-480-11	METAL OX DE (KV-25FV10A ONLY)	820	5%	3W	F
R378	1-216-295-91	SHORT					R502	$\triangle$ 1-215-920-11	METAL OXIDE (KV-20FV10/21FV10/21FV10C)	3.3K	5%	3W	F
R379	1-216-049-91	RES,CHIP	1K	5%	1/10W		R503	$\triangle$ 1-249-426-11	CARBON	5.6K	5%	1/4W	F
R380	1-208-810-11	RES,CHIP	15K	0.50%	1/10W		R506	$\triangle$ 1-215-885-00	METAL OX DE	68	5%	2W	F
R381	1-216-053-00	RES,CHIP	1.5K	5%	1/10W		R507	$\triangle$ 1-260-099-11	CARBON	1K	5%	1/2W	
R382	1-216-295-91	SHORT					R509	$\triangle$ 1-216-480-11	METAL OX DE (KV-25FV10A ONLY)	820	5%	3W	F
R383	1-216-295-91	SHORT					R509	$\triangle$ 1-215-921-11	METAL OXIDE (KV-20FV10/21FV10/21FV10C)	4.7K	5%	3W	F
R384	1-216-295-91	SHORT					R512	$\triangle$ 1-215-910-00	METAL OX DE	68	5%	3W	F
R386	1-216-073-00	RES,CHIP	10K	5%	1/10W		R513	$\triangle$ 1-215-908-00	METAL OX DE	33	5%	3W	F
R387	1-259-884-11	CARBON	4.7M	5%	1/4W		R520	$\triangle$ 1-215-861-00	METAL OX DE	47	5%	1W	F
R390	1-216-049-91	RES,CHIP	1K	5%	1/10W		R521	1-249-411-11	CARBON	330	5%	1/4W	
R391	1-216-073-00	RES,CHIP	10K	5%	1/10W		R522	1-249-415-11	CARBON	680	5%	1/4W	
R392	1-216-049-91	RES,CHIP	1K	5%	1/10W								
R395	1-216-022-00	RES,CHIP	75	5%	1/10W								
R398	1-216-022-00	RES,CHIP	75	5%	1/10W								
R399	1-216-022-00	RES,CHIP	75	5%	1/10W								
R400	1-247-863-91	CARBON	22K	5%	1/4W								
R401	1-249-441-11	CARBON	100K	5%	1/4W								
R402	1-247-815-91	CARBON	220	5%	1/4W								
R403	1-216-073-00	RES,CHIP	10K	5%	1/10W								
R404	1-216-073-00	RES,CHIP	10K	5%	1/10W								
R405	1-247-807-31	CARBON	100	5%	1/4W								

**A****Note:**

The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

**Note:**

The components identified by **⊠** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding x-ray radiation. Should replacement be required, replace only with the value originally used.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R523	1-216-073-00	RES,CHIP	10K 5% 1/10W
R524	1-249-429-11	CARBON	10K 5% 1/4W
R525	1-249-427-11	CARBON	6.8K 5% 1/4W
R526	1-216-081-00	RES,CHIP	22K 5% 1/10W
R527	1-216-079-00	RES,CHIP	18K 5% 1/10W
R528	1-249-421-11	CARBON	2.2K 5% 1/4W
R529	1-216-103-00	RES,CHIP (KV-25FV10A ONLY)	180K 5% 1/10W
R529	1-216-105-91	RES,CHIP (KV-20FV10/21FV10/21FV10C)	220K 5% 1/10W
R530	1-216-097-91	RES,CHIP (KV-25FV10A ONLY)	100K 5% 1/10W
R530	1-216-095-00	RES,CHIP (KV-20FV10/21FV10/21FV10C)	82K 5% 1/10W
R532	1-215-437-00	METAL (KV-25FV10A ONLY)	4.7K 1% 1/4W
R532	1-215-431-00	METAL (KV-20FV10/21FV10/21FV10C)	2.7K 1% 1/4W
R533	1-215-461-00	METAL	47K 1% 1/4W
R534	1-215-451-00	METAL (KV-25FV10A ONLY)	18K 1% 1/4W
R534	1-215-455-00	METAL (KV-20FV10/21FV10/21FV10C)	27K 1% 1/4W
R535	1-249-441-11	CARBON	100K 5% 1/4W
R540	1-249-421-11	CARBON (KV-20FV10/21FV10 ONLY)	2.2K 5% 1/4W
R541	1-249-429-11	CARBON (KV-25FV10A ONLY)	10K 5% 1/4W
R541	1-249-425-11	CARBON (KV-20FV10/21FV10/21FV10C)	4.7K 5% 1/4W
R542	1-249-429-11	CARBON	10K 5% 1/4W
R543	1-249-429-11	CARBON	10K 5% 1/4W
R544	1-216-351-00	METAL OXIDE (KV-25FV10A ONLY)	1.5 5% 1W F
R544	1-216-357-00	METAL OXIDE (KV-20FV10/21FV10/21FV10C)	4.7 5% 1W F
R546	△ 1-215-890-11	METAL OXIDE	470 5% 2W F
R547	△ 1-249-385-11	CARBON	2.2 5% 1/4W F
R548	1-249-429-11	CARBON (KV-25FV10A ONLY)	10K 5% 1/4W
R548	1-249-425-11	CARBON (KV-20FV10/21FV10/21FV10C)	4.7K 5% 1/4W
R549	1-249-429-11	CARBON	10K 5% 1/4W
R552	1-247-887-00	CARBON	220K 5% 1/4W
R553	1-260-312-11	CARBON	47 5% 1/2W
R556	1-216-113-00	RES,CHIP	470K 5% 1/10W
R557	1-216-085-00	RES,CHIP	33K 5% 1/10W
R558	1-216-073-00	RES,CHIP	10K 5% 1/10W
R559	1-216-133-00	RES,CHIP (KV-25FV10A ONLY)	3.3M 5% 1/10W

REF.NO.	PART NO.	DESCRIPTION	REMARK
R559	1-216-113-00	RES,CHIP (KV-20FV10/21FV10/21FV10C)	470K 5% 1/10W
R561	△ 1-249-377-11	CARBON	0.47 5% 1/4W F
R562	△ 1-260-288-11	CARBON	0.47 5% 1/2W
R571	△ 1-216-365-00	METAL OXIDE	0.47 5% 2W F
R572	△ 1-249-429-11	CARBON	10K 5% 1/4W
R573	△ 1-247-895-91	CARBON	470K 5% 1/4W
R574	△ 1-249-416-11	CARBON	820 5% 1/4W F
R575	△ 1-247-895-91	CARBON	470K 5% 1/4W
R576	△ 1-249-441-11	CARBON	100K 5% 1/4W
R577	1-249-429-11	CARBON	10K 5% 1/4W
R578	△ 1-215-902-11	METAL OX DE	47K 5% 1W F
R579	△ 1-208-777-11	RES,CHIP	620 0.50% 1/10W
⊠ R582	△ 1-208-806-11	RES,CHIP	10K 0.50% 1/10W
R583	△ 1-249-441-11	CARBON	100K 5% 1/4W
⊠ R584	△ 1-208-828-11	RES,CHIP (KV-25FV10A ONLY)	82K 0.50% 1/10W
R585	△ 1-216-073-00	RES,CHIP	10K 5% 1/10W
R586	△ 1-216-073-00	RES,CHIP	10K 5% 1/10W
R587	△ 1-216-073-00	RES,CHIP	10K 5% 1/10W
R590	1-216-119-00	RES,CHIP (KV-25FV10A ONLY)	820K 5% 1/10W
R590	1-216-095-00	RES,CHIP	82K 5% 1/10W
R591	△ 1-215-882-00	METAL OX DE	22 5% 2W F
R592	1-216-119-00	RES,CHIP (KV-25FV10A ONLY)	820K 5% 1/10W
R592	1-216-099-00	RES,CHIP (KV-20FV10/21FV10/21FV10C)	120K 5% 1/10W
R642	1-249-437-11	CARBON	47K 5% 1/4W
R656	1-249-415-11	CARBON	680 5% 1/4W
R659	△ 1-216-387-11	METAL OXIDE	0.68 5% 3W F
R667	△ 1-216-387-11	METAL OXIDE	0.68 5% 3W F
R673	1-249-421-11	CARBON	2.2K 5% 1/4W
R674	1-247-863-91	CARBON	22K 5% 1/4W
R690	△ 1-216-355-11	METAL OX DE	3.3 5% 1W F
R870	1-249-429-11	CARBON	10K 5% 1/4W
R871	1-216-295-91	SHORT	
R873	1-249-415-11	CARBON	680 5% 1/4W
R874	1-216-049-91	RES,CHIP	1K 5% 1/10W
R875	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R900	1-216-041-00	RES,CHIP	470 5% 1/10W
R901	1-216-067-00	RES,CHIP	5.6K 5% 1/10W
R904	1-216-067-00	RES,CHIP	5.6K 5% 1/10W
R905	1-216-081-00	RES,CHIP	22K 5% 1/10W
R906	1-216-091-00	RES,CHIP	56K 5% 1/10W
R907	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R908	1-216-081-00	RES,CHIP	22K 5% 1/10W
R909	1-216-091-00	RES,CHIP	56K 5% 1/10W
R912	1-216-295-91	SHORT	
R920	1-216-085-00	RES,CHIP	33K 5% 1/10W
R921	1-216-085-00	RES,CHIP	33K 5% 1/10W

**Note:**

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<b>SWITCH</b>				<b>CAPACITOR</b>			
S001	1-692-431-21	SWITCH, TACTILE		C600	$\Delta$ 1-136-311-51	F LM 0.47 $\mu$ F 20% 125V (KV-20FV10 ONLY)	
S002	1-692-431-21	SWITCH, TACTILE		C600	$\Delta$ 1-136-311-61	F LM 0.47 $\mu$ F 20% 300V (KV-21FV10/21FV10C/KV-25FV10A ONLY)	
S003	1-692-431-21	SWITCH, TACTILE		C601	1-130-495-00	MYLAR 0.1 $\mu$ F 5% 50V	
S004	1-692-431-21	SWITCH, TACTILE		C602	1-126-967-11	ELECT 47 $\mu$ F 20% 50V	
S005	1-692-431-21	SWITCH, TACTILE		C604	1-130-471-00	MYLAR 0.001 $\mu$ F 5% 50V	
S006	1-692-431-21	SWITCH, TACTILE					
S008	1-762-816-11	SWITCH, TACTILE		C606	$\Delta$ 1-113-924-11	CERAMIC CH P 0.0047 $\mu$ F 20% 250V	
S010	1-762-816-11	SWITCH, TACTILE		C607	1-136-311-51	F LM 0.47 $\mu$ F 20% 125V (KV-20FV10/21FV10C ONLY)	
<b>SWITCH</b>				C607	1-136-311-61	F LM 0.47 $\mu$ F 20% 300V (KV-21FV10/21FV10C/25FV10A ONLY)	
SW501	1-572-707-11	SWITCH, LEVER		C609	1-126-968-11	ELECT 100 $\mu$ F 20% 50V	
<b>TRANSFORMER</b>				C610	1-126-964-11	ELECT 10 $\mu$ F 20% 50V	
T501	$\Delta$ 1-437-210-11	TRANSFORMER, HORIZONTAL DRIVE		C611	$\Delta$ 1-113-924-11	CERAMIC CH P 0.0047 $\mu$ F 20% 250V	
T503	$\Delta$ 1-426-981-11	TRANSFORMER, FERRITE (PMT) (KV-25FV10A ONLY)		C613	$\Delta$ 1-128-718-11	ELECT 560 $\mu$ F 20% 400V (KV-21FV10/21FV10C/25FV10A ONLY)	
T504	$\Delta$ 1-431-693-11	TRANSFORMER, HORIZONTAL L NEAR (KV-25FV10A ONLY)		C613	1-128-717-11	ELECT 680 $\mu$ F 20% 250V (KV-20FV10 ONLY)	
T504	$\Delta$ 1-435-079-11	TRANSFORMER, HORIZONTAL L NEAR (KV-20FV10/21FV10/21FV10C)		C614	1-126-964-11	ELECT 10 $\mu$ F 20% 50V	
T505	$\Delta$ 1-453-306-11	FBT ASSY NX-4011//X4J4 (KV-25FV10A ONLY)		C615	1-130-495-00	F LM 0.1 $\mu$ F 5% 50V	
T505	$\Delta$ 1-453-316-11	FBT ASSY NX-1748//X4A4 (KV-20FV10/21FV10/21FV10C)		C616	1-130-202-00	FILM 0.022 $\mu$ F 10% 400V (KV-21FV10/21FV10C/25FV10A ONLY)	
<b>TUNER</b>				C617	1-107-824-11	CERAMIC CH P 220PF 5% 1KV	
TU101	$\Delta$ 8-598-431-00	TUNER, FSS BTF-WA411 FSS		C618	1-125-893-11	F LM 680PF 3% 1.5KV	
<b>CRYSTAL</b>				C620	1-164-081-11	CERAMIC CHIP 470PF 10% 50V	
X001	1-767-487-11	VIBRATOR, CRYSTAL		C621	1-136-356-11	F LM 470PF 5% 50V	
X300	1-579-972-11	VIBRATOR, CRYSTAL (KV-25FV10A ONLY)		C622	1-130-471-00	MYLAR 0.001 $\mu$ F 5% 50V	
X301	1-567-505-11	OSCILLATOR, CRYSTAL		C623	1-104-665-11	ELECT 100 $\mu$ F 20% 25V	
X302	1-579-973-11	VIBRATOR, CRYSTAL (KV-25FV10A ONLY)		C624	1-125-772-91	CERAMIC CHIP 1500PF 10% 2KV	
<b>G</b>				C625	1-164-625-11	CERAMIC CHIP 680PF 10% 500V	
* A-1311-754-A G (VAR) MOUNTED PC BOARD (KV-25FV10A ONLY)				C626	1-164-625-11	CERAMIC CHIP 680PF 10% 500V	
* A-1311-807-A G (VAR) MOUNTED PC BOARD (KV-21FV10/21FV10C ONLY)				C630	1-124-347-00	ELECT 100 $\mu$ F 20% 160V	
* A-1311-782-A G (VAR) MOUNTED PC BOARD (KV-20FV10 ONLY)				C631	1-126-944-11	ELECT 3300 $\mu$ F 20% 25V	
1-533-223-11 HOLDER, FUSE				C632	1-126-943-11	ELECT 2200 $\mu$ F 20% 25V	
* 4-374-846-01 COVER, CAPACITOR, CAP TYPE				C633	1-104-341-11	F LM 0.1 $\mu$ F 10% 250V	
4-382-854-11 SCREW +PSW 3X10				C636	1-113-924-11	CERAMIC 0.0047 $\mu$ F 20% 125V (KV-20FV10 ONLY)	
				C637	1-113-924-11	CERAMIC 0.0047 $\mu$ F 20% 125V (KV-20FV10 ONLY)	
				C643	1-113-924-11	CERAMIC CHIP 0.0047 $\mu$ F 20% 250V	
				C644	1-113-924-11	CERAMIC CHIP 0.0047 $\mu$ F 20% 250V	
				C645	1-137-605-11	F LM 0.01 $\mu$ F 10% 250V	
				C647	1-130-471-00	MYLAR 0.001 $\mu$ F 5% 50V	
				C649	1-126-970-11	ELECT 330 $\mu$ F 20% 50V	
				C650	1-130-471-00	MYLAR 0.001 $\mu$ F 5% 50V	
				C651	1-130-467-00	MYLAR 470PF 5% 50V	
				C652	1-126-965-11	ELECT 22 $\mu$ F 20% 50V	
				C653	1-107-636-11	ELECT 10 $\mu$ F 20% 160V	



**Note:**

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK		
C656	1-107-679-91	ELECT	10 $\mu$ F	20%	450V
C658	1-130-491-00	MYLAR	0 047 $\mu$ F	5%	50V
C659	1-162-599-12	CERAMIC CH P	0 0047 $\mu$ F		250V
C660	1-162-599-12	CERAMIC CH P	0 0047 $\mu$ F		250V
C661	1-162-599-12	CERAMIC CH P	0 0047 $\mu$ F		250V
C662	1-162-599-12	CERAMIC CH P	0 0047 $\mu$ F		250V
C663	1-136-346-21	FILM (KV-20FV10 ONLY)	0.22 $\mu$ F	20%	125V
C663	1-136-346-61	FILM (KV-21FV10/21FV10C/25FV10A ONLY)	0.22 $\mu$ F	20%	300V

**CONNECTOR**

CN601 *	1-508-786-00	P N, CONNECTOR (5MM PITCH) 2P
CN602 *	1-580-843-11	PIN, CONNECTOR (POWER)
CN641 *	1-564-513-11	PLUG, CONNECTOR 10P
CN642 *	1-564-507-11	PLUG, CONNECTOR 4P
CN645 *	1-508-786-00	P N, CONNECTOR (5MM PITCH) 2P

**DIODE**

D601	8-719-991-33	DIODE 1SS133T-77
D602	8-719-991-33	DIODE 1SS133T-77
D603	8-719-982-26	DIODE MTZJ-33B
D604	8-719-028-72	DIODE RGP02-17EL-6433
D605 $\triangle$	8-719-510-53	DIODE D4SB60L
D606 $\triangle$	8-719-108-18	THYRISTOR 5P6M
D607	8-719-991-33	DIODE 1SS133T-77
D608	8-719-110-53	DIODE RD20ESB2
D609	8-719-311-31	DIODE RU-1P (KV-25FV10A ONLY)
D609	8-719-311-31	DIODE RU-1P (21FV10/21FV10C ONLY)
D610	8-719-510-02	DIODE D1NS4
D611	8-719-063-70	DIODE D1NL20U
D612	8-719-110-17	DIODE RD10ESB2
D613	8-719-063-70	DIODE D1NL20U
D614	8-719-063-70	DIODE D1NL20U
D615	8-719-312-10	DIODE RU4AM-T3
D617	8-719-510-37	DIODE D5LC20U
D618	8-719-110-31	DIODE RD12ESB2
D619	8-719-991-33	DIODE 1SS133T-77
D620	8-719-110-17	DIODE RD10ESB2
D630	8-719-510-37	DIODE D5LC20U
D631	8-719-911-55	DIODE U05G
D632	8-719-911-55	DIODE U05G
D633	8-719-948-45	DIODE ERA22-08
D634	8-719-991-33	DIODE 1SS133T-77
D635	8-719-991-33	DIODE 1SS133T-77
D636	8-719-063-70	DIODE D1NL20U

REF.NO.	PART NO.	DESCRIPTION	REMARK
D637	8-719-110-03	DIODE RD7.5ESB2	
D638	8-719-510-48	DIODE D1N20R	

**FUSE**

F600 $\triangle$	1-532-506-51	FUSE 6.3A/250V (KV-21FV10/21FV10C/25FV10A ONLY)
F600 $\triangle$	1-576-193-11	FUSE 6.3A/125V (KV-20FV10 ONLY)

**FERRITE BEAD**

FB600	1-412-911-11	FERRITE	0 $\mu$ H
FB601	1-412-911-11	FERRITE	0 $\mu$ H
FB602	1-412-911-11	FERRITE	0 $\mu$ H
FB603	1-412-911-11	FERRITE	0 $\mu$ H
FB604	1-412-911-11	FERRITE	0 $\mu$ H
FB605	1-412-911-11	FERRITE	0 $\mu$ H
FB606	1-412-911-11	FERRITE	0 $\mu$ H
FB609	1-412-911-11	FERRITE	0 $\mu$ H

**IC**

IC601 $\triangle$	8-749-014-48	IC STR-F6656 (KV-21FV10/21FV10C/25FV10A ONLY)
IC601 $\triangle$	8-749-015-61	IC STR-F6626 (KV-20FV10 ONLY)
IC602 $\triangle$	8-749-920-61	IC SE135N-LF12

**COIL**

L642	1-412-529-11	INDUCTOR	22 $\mu$ H
L644	1-412-529-11	INDUCTOR	22 $\mu$ H

**PHOTO COUPLER**

PH600 $\triangle$	8-749-010-64	PHOTO COUPLER PC123FY2
-------------------	--------------	------------------------

**TRANSISTOR**

Q601	8-729-922-37	TRANSISTOR 2SD2144S-UVW
Q602	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q603	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q605 $\triangle$	8-729-044-30	TRANSISTOR 2SK2845-LB102
Q606	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q607	8-729-922-37	TRANSISTOR 2SD2144S-UVW
Q610	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q644	8-729-119-78	TRANSISTOR 2SC2785-HFE

**Note:**

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

G

REF.NO.	PART NO.	DESCRIPTION	REMARK			
RESISTOR						
R600	△ 1-247-289-00	CARBON (KV-21FV10/21FV10C/25FV10A ONLY)	8.2M	5%	1W	
R601	△ 1-219-513-11	CARBON (KV-20FV10 ONLY)	4.7M	5%	1/2W	
R602	△ 1-249-389-11	CARBON	4.7	5%	1/4W	F
R603	1-215-485-00	METAL	470K	1%	1/4W	
R607	1-215-859-00	METAL OXIDE	22	5%	1W	F
R608	1-240-205-11	CARBON	22M	5%	1/2W	
R609	1-249-421-11	CARBON	2.2K	5%	1/4W	
R610	1-249-429-11	CARBON	10K	5%	1/4W	
R611	1-249-437-11	CARBON	47K	5%	1/4W	
R612	1-249-415-11	CARBON	680	5%	1/4W	
R613	△ 1-219-512-11	CARBON	2.2M	5%	1/2W	
R614	1-249-413-11	CARBON	470	5%	1/4W	
R616	△ 1-260-302-51	CARBON	6 8	5%	1/2W	
R617	1-247-791-91	CARBON	22	5%	1/4W	
R623	1-249-440-11	CARBON	82K	5%	1/4W	
R624	1-249-437-11	CARBON	47K	5%	1/4W	
R626	1-249-417-11	CARBON	1K	5%	1/4W	
R627	△ 1-240-251-11	CMT,MELF	6 8	5%	10W	
R628	1-249-441-11	CARBON	100K	5%	1/4W	
R629	△ 1-260-324-11	CARBON	470	5%	1/2W	
R630	△ 1-249-429-11	CARBON	10K	5%	1/4W	F
R631	1-249-437-11	CARBON	47K	5%	1/4W	
R632	△ 1-202-933-61	FUSIBLE	0.1	10%	1/2W	F
R633	1-215-479-00	METAL (KV-21FV10/21FV10C/25FV10A ONLY)	270K	1%	1/4W	
R633	1-215-483-00	METAL (KV-20FV10 ONLY)	390K	1%	1/4W	
R634	1-215-479-00	METAL (KV-21FV10/21FV10C/25FV10A ONLY)	270K	1%	1/4W	
R636	1-249-421-11	CARBON	2.2K	5%	1/4W	
R637	△ 1-215-929-11	METAL OXIDE (KV-21FV10/21FV10C/25FV10A ONLY)	100K	5%	3W	F
R639	△ 1-216-361-21	METAL OXIDE	0.22	5%	2W	F
R640	1-249-415-11	CARBON	680	5%	1/4W	
R641	1-249-429-11	CARBON	10K	5%	1/4W	
R642	1-249-421-11	CARBON	2.2K	5%	1/4W	
R646	1-216-485-11	METAL OXIDE (KV-21FV10/21FV10C/25FV10A ONLY)	5.6K	5%	3W	F
R647	1-249-402-11	CARBON (KV-21FV10/21FV10C/25FV10A ONLY)	56	5%	1/4W	
R647	1-249-399-11	CARBON (KV-20FV10 ONLY)	33	5%	1/4W	
R648	1-249-421-11	CARBON	2.2K	5%	1/4W	
R649	1-249-417-11	CARBON	1K	5%	1/4W	
R650	△ 1-216-362-11	METAL OXIDE	0.27	5%	2W	F
R651	1-249-419-11	CARBON	1.5K	5%	1/4W	
R652	1-247-843-11	CARBON	3.3K	5%	1/4W	

REF.NO.	PART NO.	DESCRIPTION	REMARK			
R653	1-215-898-11	METAL OX DE	10K	5%	2W	F
R654	1-249-419-11	CARBON	1 5K	5%	1/4W	
R657	1-249-417-11	CARBON	1K	5%	1/4W	
R660	1-249-429-11	CARBON	10K	5%	1/4W	
R662	1-249-417-11	CARBON	1K	5%	1/4W	
R664	1-249-417-11	CARBON	1K	5%	1/4W	
R665	1-249-429-11	CARBON	10K	5%	1/4W	
R672	1-216-485-11	METAL OXIDE (KV-21FV10/21FV10C/25FV10A ONLY)	5.6K	5%	3W	F
R674	$\triangle$ 1-216-485-11	METAL OXIDE (KV-21FV10/21FV10C/25FV10A ONLY)	5.6K	5%	3W	F
R674	$\triangle$ 1-215-924-00	METAL OX DE (KV-20FV10 ONLY)	15K	5%	3W	F

**RELAY**

RY601	$\triangle$ 1-755-018-11	RELAY
RY602	$\triangle$ 1-755-266-11	RELAY, AC POWER

**TRANSFORMER**

T601	$\triangle$ 1-426-717-11	TRANSFORMER, LINE FILTER (LFT) (KV-20FV10 ONLY)
T602	$\triangle$ 1-426-717-11	TRANSFORMER, LINE FILTER (LFT)
T603	$\triangle$ 1-433-807-11	TRANSFORMER, REGULAT (KV-21FV10/21FV10C/25FV10A ONLY)
T603	$\triangle$ 1-433-806-11	TRANSFORMER, REGULAT (KV-20FV10 ONLY)
T604	$\triangle$ 1-431-852-11	TRANSFORMER, CONVERTER (SRT)

**THERMISTOR**

TH605	$\triangle$ 1-803-586-11	THERMISTOR, NTC
-------	--------------------------	-----------------

**THERMISTOR**

THP601	$\triangle$ 1-803-540-11	THERMISTOR (KV-21FV10/21FV10C/25FV10A ONLY)
THP601	$\triangle$ 1-809-539-11	THERMISTOR, POSITIVE (KV-20FV10 ONLY)

**VARISTOR**

VDR600	$\triangle$ 1-803-587-11	VARISTOR (KV-21FV10/21FV10C/25FV10A ONLY)
VDR600	$\triangle$ 1-803-585-11	VARISTOR (KV-20FV10 ONLY)





**Note:**  
The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés per un trame et une marque  $\triangle$  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

REF.NO. PART NO. DESCRIPTION REMARK



- \* A-1331-898-A C MOUNTED PC BOARD (KV-25FV10A ONLY)
- \* A-1331-965-A C MOUNTED PC BOARD (KV-20FV10/21FV10/21FV10C ONLY)

7-682-949-01 SCREW +PSW 3X10

CAPACITOR

C1751	1-107-652-11	ELECT	10 $\mu$ F	20%	250V
C1752	1-162-114-00	CERAMIC CHIP	0.0047 $\mu$ F		2KV
C1755	1-107-649-11	ELECT	2.2 $\mu$ F	20%	250V
C1777	1-107-698-11	ELECT	10 $\mu$ F	20%	25V

CONNECTOR

CN1707	* 1-564-506-11	PLUG, CONNECTOR 3P
CN1751	* 1-564-508-11	PLUG, CONNECTOR 5P
CN1752	* 1-564-510-11	PLUG, CONNECTOR 7P
CN1753	1-695-915-11	TAB (CONTACT)
CN1755	1-695-915-11	TAB (CONTACT)

DIODE

D1754	8-719-901-83	DIODE 1SS83
D1755	8-719-901-83	DIODE 1SS83
D1756	8-719-901-83	DIODE 1SS83
D1758	8-719-302-43	DIODE EL1Z

IC

IC1707	8-759-603-37	IC M5216P
IC1751	8-759-562-43	IC TDA6108JF/N1B

JACK

J1751	$\triangle$ 1-540-071-22	SOCKET, CRT
-------	--------------------------	-------------

COIL

L1751	1-408-613-31	INDUCTOR	68 $\mu$ H
-------	--------------	----------	------------

RESISTOR

R1756	1-260-099-11	CARBON	1K	5%	1/2W
R1757	1-260-099-11	CARBON	1K	5%	1/2W
R1758	1-260-099-11	CARBON	1K	5%	1/2W

REF.NO. PART NO. DESCRIPTION REMARK

R1759	1-260-087-11	CARBON	100	5%	1/2W
R1760	1-260-123-11	CARBON	100K	5%	1/2W
R1761	$\triangle$ 1-216-373-11	METAL OX DE	2.2	5%	2W F
R1762	$\triangle$ 1-216-375-00	METAL OX DE (KV-25FV10A ONLY)	3.3	5%	2W F
R1763	1-247-807-31	CARBON	100	5%	1/4W
R1764	1-247-807-31	CARBON	100	5%	1/4W
R1765	1-247-807-31	CARBON	100	5%	1/4W
R1770	1-260-132-11	CARBON	560K	5%	1/2W
R1777	1-247-843-11	CARBON	3.3K	5%	1/4W
R1778	1-249-429-11	CARBON	10K	5%	1/4W
R1780	1-247-863-91	CARBON	22K	5%	1/4W
R1781	1-247-863-91	CARBON	22K	5%	1/4W
R1787	1-247-863-91	CARBON	22K	5%	1/4W

VARIABLE RESISTOR

RV1750	1-241-714-11	RES, ADJ, METAL FILM	110M
--------	--------------	----------------------	------



- \* A-1342-465-A V MOUNTED PC BOARD (KV-25FV10A ONLY)
- 7-682-949-01 SCREW +PSW 3X10

CAPACITOR

C961	1-161-830-00	CERAMIC	0.0047 $\mu$ F		500V
C962	1-130-491-00	MYLAR	0.047 $\mu$ F	5%	50V
C963	1-107-638-11	ELECT	33 $\mu$ F	20%	160V
C964	1-126-925-11	ELECT	470 $\mu$ F	20%	10V
C968	1-106-383-00	MYLAR	0.047 $\mu$ F	10%	200V
C969	1-107-667-11	ELECT	2.2 $\mu$ F	20%	160V
C970	1-104-999-11	MYLAR	0.1 $\mu$ F	10%	200V
C972	1-126-941-11	ELECT	470 $\mu$ F	20%	25V
C973	1-130-491-00	MYLAR	0.047 $\mu$ F	5%	50V
C975	1-126-925-11	ELECT	470 $\mu$ F	20%	10V
C978	1-130-471-00	MYLAR	0.001 $\mu$ F	5%	50V
C979	1-130-471-00	MYLAR	0.001 $\mu$ F	5%	50V
C980	1-104-665-11	ELECT	100 $\mu$ F	20%	10V


CONNECTOR

CN961	* 1-564-510-11	PLUG, CONNECTOR 7P
CN962	* 1-770-723-11	CONNECTOR, BOARD TO BOARD 8P


DIODE

D964	8-719-991-33	DIODE 1SS133T-77
------	--------------	------------------

**Note:**

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK				REF.NO.	PART NO.	DESCRIPTION	REMARK			
D967	8-719-110-88	DIODE RD39ESB2					C1964	1-126-925-11	ELECT	470μF	20%	10V	
D968	8-719-110-88	DIODE RD39ESB2					C1968	1-106-383-00	MYLAR	0.047μF	10%	200V	
							C1969	1-107-667-11	ELECT	2.2μF	20%	160V	
							C1970	1-104-999-11	MYLAR	0.1μF	10%	200V	
		<b>TRANSISTOR</b>					C1972	1-126-941-11	ELECT	470μF	20%	25V	
Q961	8-729-119-78	TRANSISTOR 2SC2785-HFE					C1973	1-130-491-00	MYLAR	0.047μF	5%	50V	
Q962	8-729-119-78	TRANSISTOR 2SC2785-HFE					C1975	1-126-925-11	ELECT	470μF	20%	10V	
Q963	8-729-017-05	TRANSISTOR 2SA1837					C1978	1-130-471-00	MYLAR	0.001μF	5%	50V	
Q965	8-729-017-06	TRANSISTOR 2SC4793					C1979	1-130-471-00	MYLAR	0.001μF	5%	50V	
Q967	8-729-119-78	TRANSISTOR 2SC2785-HFE					C1980	1-104-665-11	ELECT	100μF	20%	10V	
Q968	8-729-026-39	TRANSISTOR 2SA933AS-QT											
		<b>RESISTOR</b>							<b>CONNECTOR</b>				
R962	1-249-401-11	CARBON	47	5%	1/4W		CN1963	1-564-506-11	PLUG, CONNECTOR 3P				
R963	1-249-417-11	CARBON	1K	5%	1/4W		CN1964	1-564-508-11	PLUG, CONNECTOR 5P				
R964	1-260-312-11	CARBON	47	5%	1/2W								
R965	1-249-414-11	CARBON	560	5%	1/4W				<b>DIODE</b>				
R966	1-249-417-11	CARBON	1K	5%	1/4W		D1964	8-719-991-33	DIODE 1SS133T-77				
							D1967	8-719-110-88	DIODE RD39ESB2				
R967	1-249-410-11	CARBON	270	5%	1/4W		D1968	8-719-110-88	DIODE RD39ESB2				
R968	1-249-417-11	CARBON	1K	5%	1/4W								
R969	1-249-386-11	CARBON	2.7	5%	1/4W				<b>TRANSISTOR</b>				
R970	1-249-403-11	CARBON	68	5%	1/4W		Q1961	8-729-119-78	TRANSISTOR 2SC2785-HFE				
R971	1-247-815-91	CARBON	220	5%	1/4W		Q1962	8-729-119-78	TRANSISTOR 2SC2785-HFE				
							Q1963	8-729-017-05	TRANSISTOR 2SA1837				
R972	1-249-432-11	CARBON	18K	5%	1/4W		Q1965	8-729-017-06	TRANSISTOR 2SC4793				
R973	1-249-403-11	CARBON	68	5%	1/4W		Q1967	8-729-119-78	TRANSISTOR 2SC2785-HFE				
R974	1-216-476-11	METAL OXIDE	180	5%	3W		Q1968	8-729-026-39	TRANSISTOR 2SA933AS-QT				
R975	1-249-417-11	CARBON	1K	5%	1/4W								
R976	1-249-432-11	CARBON	18K	5%	1/4W				<b>RESISTOR</b>				
							R1962	1-249-401-11	CARBON	47	5%	1/4W	
R977	1-249-429-11	CARBON	10K	5%	1/4W		R1963	1-249-417-11	CARBON	1K	5%	1/4W	
R978	1-247-807-31	CARBON	100	5%	1/4W		R1964	1-260-312-11	CARBON	47	5%	1/2W	
R979	1-249-414-11	CARBON	560	5%	1/4W		R1965	1-249-414-11	CARBON	560	5%	1/4W	
R980	1-247-807-31	CARBON	100	5%	1/4W		R1966	1-249-417-11	CARBON	1K	5%	1/4W	
R981	1-249-416-11	CARBON	820	5%	1/4W								
							R1967	1-249-410-11	CARBON	270	5%	1/4W	
R982	1-249-386-11	CARBON	2.7	5%	1/4W		R1968	1-249-417-11	CARBON	1K	5%	1/4W	
R985	1-249-401-11	CARBON	47	5%	1/4W		R1969	1-249-386-11	CARBON	2.7	5%	1/4W	
R986	1-249-397-11	CARBON	22	5%	1/4W		R1970	1-249-403-11	CARBON	68	5%	1/4W	
							R1971	1-247-815-91	CARBON	220	5%	1/4W	
							R1972	1-249-432-11	CARBON	18K	5%	1/4W	
							R1973	1-249-403-11	CARBON	68	5%	1/4W	
							R1974	1-216-476-11	METAL OX DE	180	5%	3W	
							R1975	1-249-417-11	CARBON	1K	5%	1/4W	
							R1976	1-249-432-11	CARBON	18K	5%	1/4W	
							R1977	1-249-429-11	CARBON	10K	5%	1/4W	
							R1978	1-247-807-31	CARBON	100	5%	1/4W	
							R1979	1-249-414-11	CARBON	560	5%	1/4W	
		<b>CAPACITOR</b>											
C1961	1-161-830-00	CERAMIC	0.0047μF		500V								
C1962	1-130-491-00	MYLAR	0.047μF	5%	50V								
C1963	1-107-638-11	ELECT	33μF	20%	160V								



\* A-1342-465-A V MOUNTED PC BOARD  
(KV-20FV10/21FV10/21FV10C ONLY)


7-682-949-01 SCREW +PSW 3X1



**Note:**

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

**Note:**

Les composants identifiés par un trame et une marque  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK		
R1980	1-247-807-31	CARBON	100	5%	1/4W
R1981	1-249-416-11	CARBON	820	5%	1/4W
R1982	1-249-386-11	CARBON	2.7	5%	1/4W
R1985	1-249-401-11	CARBON	47	5%	1/4W
R1986	1-249-397-11	CARBON	22	5%	1/4W




\* A-1372-117-A MOUNTED PWB, HZ  
(KV-25FV10A ONLY)

CONNECTOR

CN901	*	1-580-843-11	PIN, CONNECTOR (POWER)
CN902	*	1-580-843-11	PIN, CONNECTOR (POWER)

SWITCH

S901		1-571-433-21	SWITCH, PUSH (AC POWER)
------	---	--------------	-------------------------

REF.NO.	PART NO.	DESCRIPTION	REMARK
---------	----------	-------------	--------

ACCESSORIES AND PACKAGING

1-418-387-11	REMOTE COMMANDER (RM-Y168)
4-978-977-01	BATTERY COVER FOR RM-Y168
1-417-131-31	CONVERTER
3-866-872-42	MANUAL, INSTRUCTION (KV-21FV10/21FV10C/25FV10A ONLY)
3-866-871-22	MANUAL, INSTRUCTION (KV-20FV10)
* 4-041-255-01	BAG, PROTECTION
* 4-067-890-01	CARTON, NDIV DUAL (KV-25FV10A ONLY)
* 4-070-554-01	CARTON, INDIVIDUAL (KV-20FV10/21FV10/21FV10C ONLY)
* 4-067-892-02	CUSHION ASSY, UPPER (KV-25FV10A ONLY)
* 4-070-562-01	CUSHION ASSY, UPPER (KV-20FV10/21FV10/21FV10C ONLY)
* 4-070-563-01	CUSHION ASSY, LOWER (KV-20FV10/21FV10/21FV10C ONLY)
1-501-730-41	ANTENNA, TELESCOPIC (KV-21FV10/21FV10C/25FV10A ONLY)