

-FIRMWARE: 6/4/2012 Version 1012.3
 -2012 LED TV X9N Full HD Firmware (T-MX9FAUSC_1012.3)
 -“Makes better picture quality and solves sound noise with 'Auto Volume On'.”
 Avail on GSPN or Samsung,Com
Always check for latest updates

Quick Parts List:

- Verify before ordering -

No	Ver.	Part No.	Description
1	ALL	BN44-00497A	SMPS
2	CS01	BN94-04577D	Main PCB
3	TS02	BN94-05764M	Main PCB
4	CS01	BN07-01102A	Panel
5	TS02	BN95-00589A	Panel
6	TS02	BN95-00571B	T-CON PCB
7	TS02	BN96-21616B	Front Cover
8	CS01	BN96-21616E	Front Cover
9	ALL	BN96-21736E	Stand Base
10	ALL	BN96-21742A	Stand Guide
11	ALL	BN96-21745A	Rear Cover
12	ALL	AA59-00600A	Remote
13	CS01	BN96-21632A	T-CON PCB
14	ALL	BN96-21669C	Speaker
15	ALL	BN96-22239A	LVDS Cable
16	ALL	3903-000599	Power Cord

HELP : 888-751-4086; 866-894-0637 FE)
 GSPN

<http://gspn3.samsungsportal.com>

PLUS ONE

<http://my.plus1solutions.net/clientPortals/samsung>

HOT TIPS

-New 2012 Model... always check for latest bulletins and firmware updates.

- Important Bulletins for rear cover removal and front cover replacement to prevent damage.

SERVICE BULLETINS

ASC20120319002

SUBJECT: Rear Cover replacement procedure for 2012 Full LED (EH series) TV models

ASC20120319001


SUBJECT: Front Cover replacement procedure

Disassembly Caution for LED-H TV Servicing Prep.

1. Place monitor face down on cushioned table.



2. Remove 4 screws from the stand.

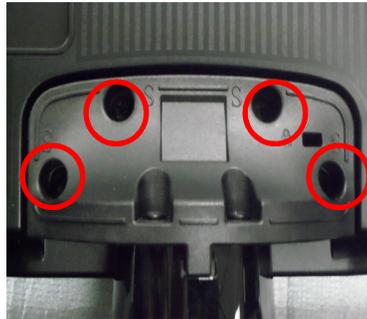

3. Remove stand.



4. Remove the 1 screw of cover jack.



5. Remove cover jack.



6. Disconnect the function Assy. Cable




7. Remove the screws of rear-cover.





8. Remove the rear cover



Not removing the connector can cause **Damage** to the PC/Connector as shown.

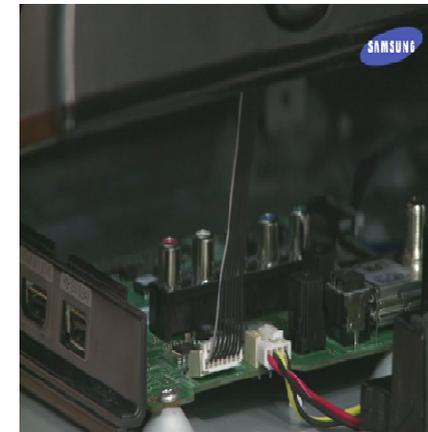

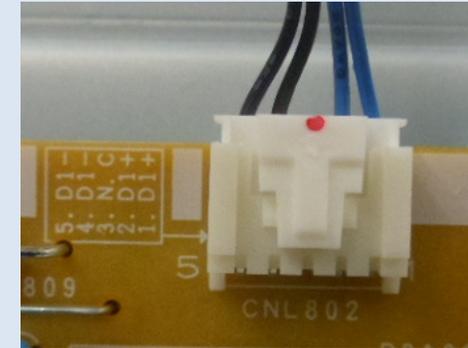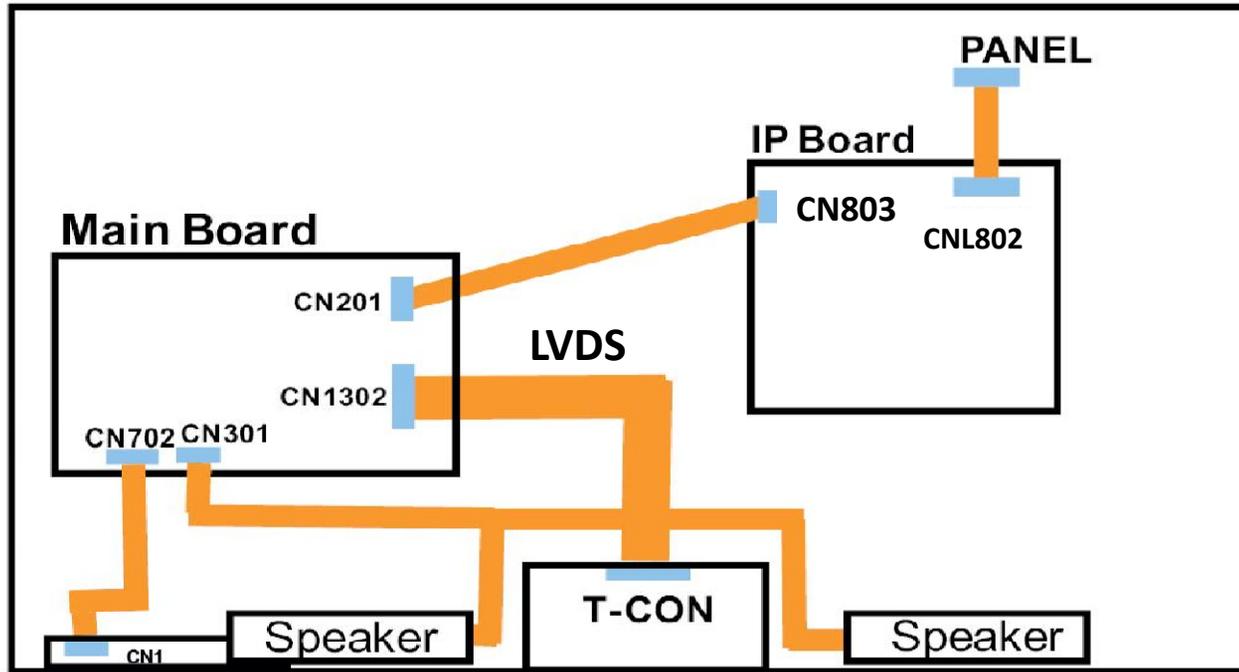

CNL802 IP SMPS to LEDs

1	D1 -
2	D1 -
3	N/C
4	D1 +
5	D1 +

FUNCTION & IR


CN803 IP SMPS to /fro MAIN BOARD

1	B13V	8	GND
2	PWM_DIMM	9	GND
3	B13V	10	GND
4	B13V	11	B5V
5	Vamp 13V	12	A5V
6	BLU On/Off	13	B5V
7	Vamp 13V	14	Power On/Off


UN**EH TV Start Up Sequence

Sequence	Location	DC Voltage
1. 5V STBY to Main Board	CN803-12 (A5V)	5V
2. Power On/Off From Main Board	CN803-14 (Power On/Off)	0V-3.5V
3. Low Volts On to Main Board with Booting Melody (X9 MStar)	CN803-1,3,5,7 (B13V) CN803- 11,13 (B5)	13V 5V
4. Back Light On/Off From Main Board	CN803-6) BLU On/Off	0V – 4.9V 5 Sec Dly
5. Back Light Dim Control from Main Board “0 to 20” Backlight	CN803 - 2 (PWM_DIMM) effective DC Voltage is max when backlight max	0.5V – 4.0V (effective) Dark to Bright
6. Dim Control Out from IP SMPS to LEDs D1 – is max voltage when backlight is min	CNL802-1 & 2 (D1 -) C NL802-4 & 5 (D1+) D1 + stays constant DC voltage.	1.3V-32.8V 110.8V

MAIN

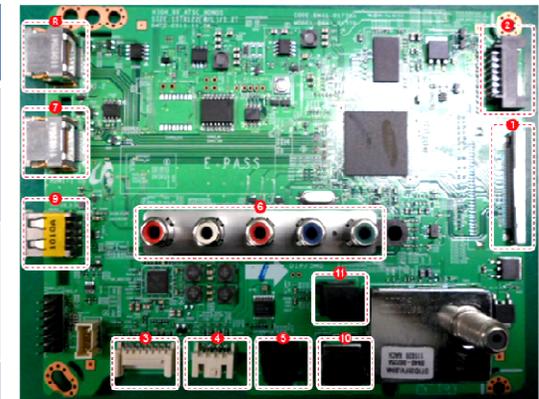

SMPS


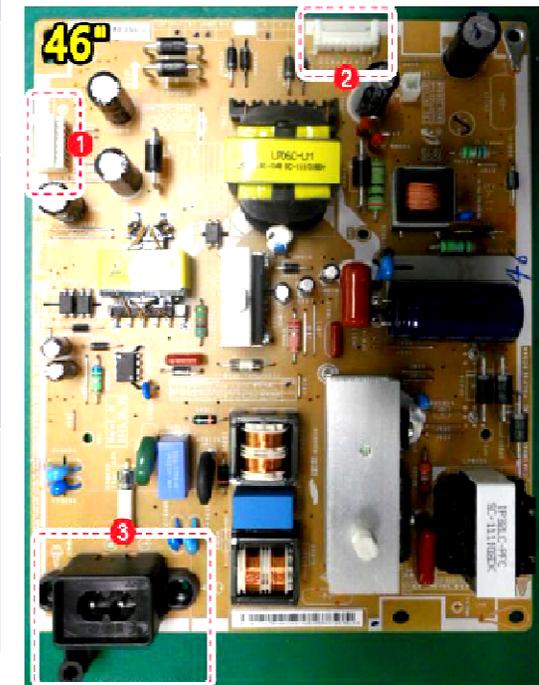


Function Control Troubleshooting

- ✓ Standby **A3.3V** on Function Connector, Pin 3.

5 Directional Function Control

UNEH4000 Sample

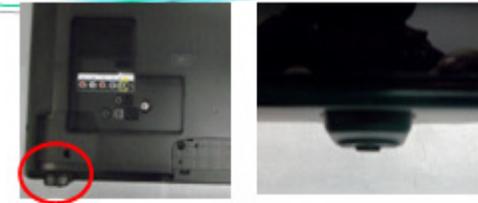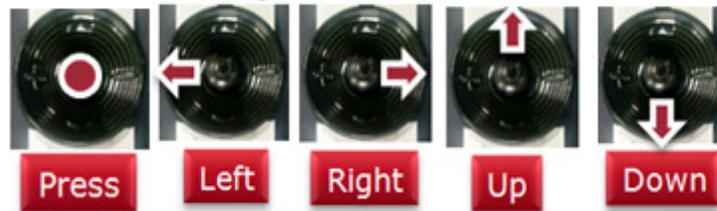


- ✓ All Pins should read **3.3V** before commands.

CN702 (FUNCTION)			
1	IR	5	MSDA
2	GND	6	KEY1
3	A3.3V	7	KEY2
4	MSCL	8	GND

All Functions can be Tested in Standby Mode


(Standby Voltage)

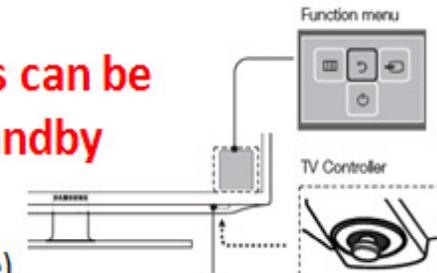

- ✓ **Press**, at Key 1, Pin 6. 3.3V to 0.0V DC

Command	PIN	Signal	DC Voltage/Notes
IR	1	IR	3.3V to 2.5V DC with any Remote Control Commands
Press	6	Key 1	3.3V to 0.0V DC
Left	7	Key 2	3.3V to 1.6V DC
Right	7	Key 2	3.3V to 2.5V DC
Up	7	Key 2	3.3V to 0.0V DC
Down	7	Key 2	3.3V to 0.8V DC

Actual IR Signal

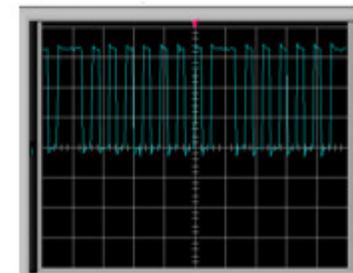

4V P-P Data

- ✓ **Left, Right, Up, Down** at Key 2, Pin 7. Check **specific voltages** on chart.

Fast Track Troubleshooting Manual



TROUBLESHOOTING VIDEO PROBLEMS

1. Verify Video Operation (2012 Models)

- a. **Boot Logo** models with X10 Micro-Processor & above during power on. **Boot Sound** only (X9 MPU) during power on.
- b. **Customer Picture Test** in user menu
- c. **“Display”** (If display and Boot Logo & Customer Picture Test are OK the source or cables are first suspected . Then check for a defective input on the Main Board.)
- d. Substitute with known good Source (external DVD or Signal Generator to check inputs on Main Board)

2. Using Test Patterns in Factory Mode

- ENTER FACTORY MODE -


1. Select an active source signal since Test Pattern may rely on signal source to appear or select TV Source mode.

Customer Remote



2. Power Standby
3. Mute, 182, Power On
4. Select SVC
5. Select Test Patterns

Service Remote

2. Power On
3. Info, Test

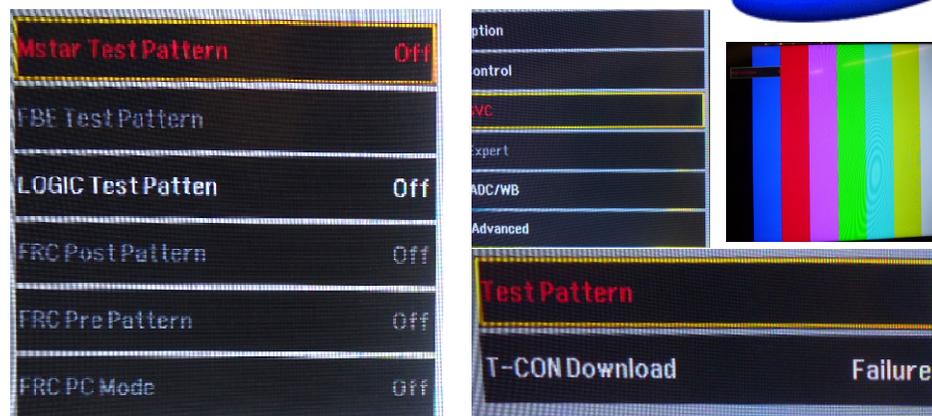


T-Con Troubleshooting

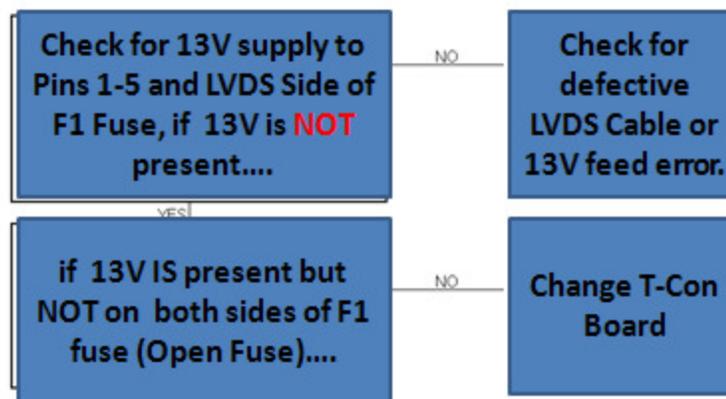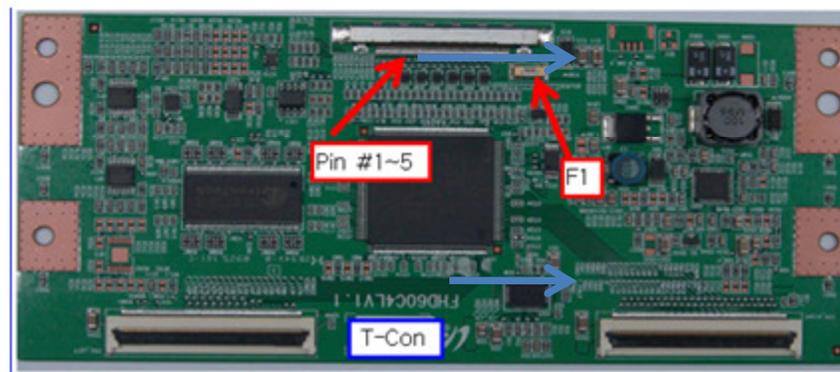



ON SCREEN FAILURE EXAMPLES:

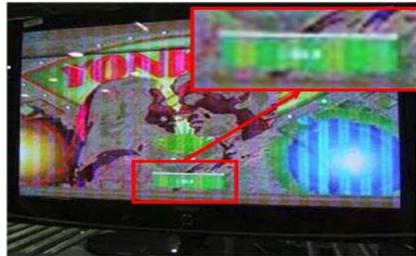

If Picture & Display errors
Defective Main Board, LVDS,
or T-CON



Green lines or a green screen
defective main board , LVDS , or
T-CON.




Original Image



Image on Screen

Pixelization can be caused by the main board
but is more commonly a source error

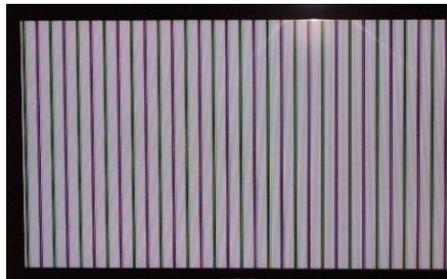

Vertical or Horizontal Lines :Defective
Panel likely but also T-CON, LVDS, or Main
Board. Use Test Patterns in Factory Service
Mode to determine error)

ALIGNMENTS:

1. Check/Set **Option Bytes**: in Factory Mode
(Must be performed after replacing **Main Board**.)

Standard Remote

1. Power OFF the TV
2. Press MUTE, 1 8 2, then POWER

Factory remote

1. Power the TV ON
2. Press INFO then FACTORY

Option	T-MX9HAUSC-1006.0 DTP-LP3-0061-11 DTP-LP3-App-0061-10 OPTION:32P6AF0D,US,4000,NONE
Control	
SVC	FactoryCS:011120080 ADC:HDMI/COMP/PC/AV/ EDID:SUCCESS HDCP:SUCCESS
Expert	
ADC/WB	Build Date:1-30-2012 Date Of Purchase:00/00/00
Advanced	

Factory Reset	
Type	32P6AF0D
Model	UE4000
SVC Model	4000
Local Set	US
Tuner	SLATC2
Ch Table	NONE
Front Color	NONE

2. Check/Perform latest **Firmware Upgrade** for **all** repairs.
3. Perform reset in Service Mode if Main board is replaced.

SPECIAL NOTES:

Inform customer of reset of all
Settings if Main Board is replaced.

Option Bytes settings for UN46EH5000

Model Code	Side Label	Option Type	Basic Model	SVC Model	Tuner	Region	Ch Table	Front Color	Local Set
UN46EH5000FXZA	CS01	46P6AF0D	UEH5000	UEH5000	-	-	SAMEX	U-S-C-5K	US
UN46EH5000FXZA	TS02	46A6AF0D	UEH5000	UEH5000	-	-	SAMEX	U-S-C-5K	US

'2012 LED Hybrid Disassembly **cautions** for Front Cover

To prevent the removal process from damaging the connections on the sides of the panel.

(New panels come with the Front Cover)


1. Place TV face up on cushioned table.





2. **Cut and split** the cover off at the top



3. Carefully remove the Front Cover and insulated paper in Front of T-Con area.

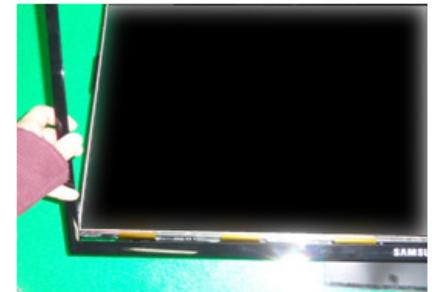

4. Attach the Front Cover bottom first to the panel

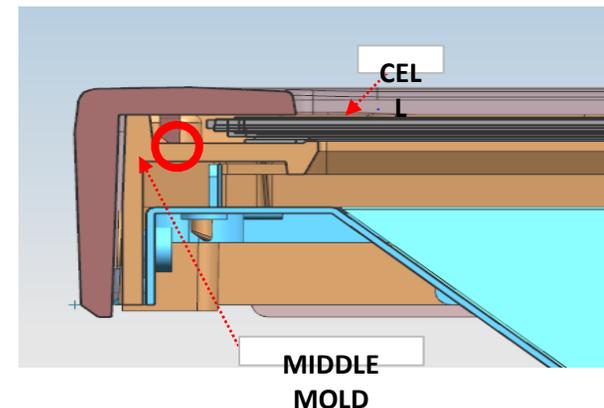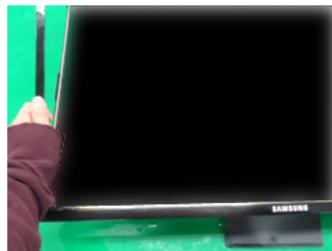

5. Secure the plastic latch on the left and right side of the Front Cover as shown

6. Visually inspect the spacing between the Cover and the panel for equal clearance

7. Combine to stick the Front Cover Rib into the middle mold.