


Wire Harness Side

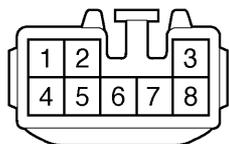

I03480


INSPECTION**1. INSPECT TURN SIGNAL FLASHER CIRCUIT**

Disconnect the connector from the combination switch and inspect the connect on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
3 – Ground	Constant	Continuity
5 – Ground	Turn signal switch RIGHT or OFF	No continuity
5 – Ground	Turn signal switch LEFT	Continuity
6 – Ground	Turn signal switch LEFT	No continuity
6 – Ground	Turn signal switch RIGHT	Continuity
7 – Ground	Constant	Continuity
8 – Ground	Hazard warning switch OFF	No continuity
8 – Ground	Hazard warning switch ON	Continuity
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery positive voltage
4 – Ground	Constant	Battery positive voltage

If circuit is as specified, replace the relay.

If circuit is not as specified, inspect the circuits connected to other parts.

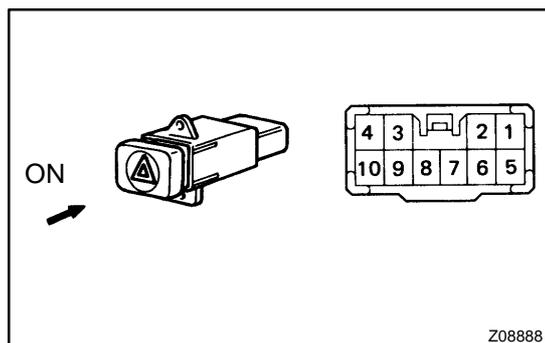


Z08888

2. INSPECT HAZARD WARNING SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	7 – 10	Continuity
ON	7 – 8	Continuity
Illumination circuit	2 – 3	Continuity

If continuity is not as specified, replace the switch.

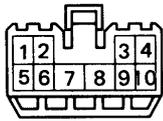Wire Harness Side

S-10-1

Z08740

3. INSPECT HAZARD WARNING SWITCH CIRCUIT

Disconnect the switch connector and inspect the connection on the wire harness side, as shown.

Tester connection	Condition	Specified condition
8 – Ground	Constant	Continuity
*2 – Ground	Light control switch position OFF	No voltage
*2 – Ground	Light control switch position TAIL or HEAD	Battery positive voltage

*: illumination

If the circuit is not as specified, inspect the circuits connected to other parts.