

CX-JN77

SERVICE MANUAL

Ver 1.0 2004.04

AEP Model
UK Model
E Model



CX-JN77 is the amplifier, CD player, tape deck and tuner section in JAX-N77/PK77.

CD Section	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM74-F1BD81
	Base Unit Name	BU-F1BD81A
	Optical Pick-up Block Name	KSM-215DCP
Tape deck Section	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	CWM43FR34

SPECIFICATIONS

Amplifier section

Chilean, Peruvian, Mexican models

DIN power output (rated): 100 + 100 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
125 + 125 watts (6 ohms at 1 kHz, 10% THD)

Music power output (reference):
250 + 250 watts (6 ohms at 1 kHz, 10% THD)

AEP, UK, CIS models

The following measured at AC 120, 127, 220, 240 V 50/60 Hz

DIN power output (rated): 144 + 144 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
180 + 180 watts (6 ohms at 1 kHz, 10% THD)

Inputs

VIDEO/MD IN (phono jacks):
voltage 450/250 mV,
impedance 47 kilohms

Outputs

PHONES (stereo mini jack):
accepts headphones of
8 ohms or more

SPEAKER:
accepts impedance of 6 to
16 ohms

CD player section

System Compact disc and digital audio system

Laser Semiconductor laser ($\lambda=780$ nm)

Emission duration: continuous

Frequency response 2 Hz – 20 kHz (± 0.5 dB)

Signal-to-noise ratio More than 90 dB

Dynamic range More than 90 dB

Tape deck section

Recording system 4-track 2-channel, stereo

Frequency response 50 – 13,000 Hz (± 3 dB), using Sony TYPE I cassettes

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range 65.0 – 74.0 MHz
(There is no stereo effect.
10-kHz step)

Russian models 87.5 – 108.0 MHz
(50-kHz step)

Other models 87.5 – 108.0 MHz
(50-kHz step)

Antenna FM lead antenna
Antenna terminals 75 ohms unbalanced
Intermediate frequency 10.7 MHz

AM tuner section

Tuning range
Pan-American models: 530 – 1,710 kHz
(with the tuning interval set at 10 kHz)
531 – 1,710 kHz
(with the tuning interval set at 9 kHz)

European and Russian models:
531 – 1,602 kHz (with the tuning interval set at 9 kHz)

Antenna AM loop antenna
Antenna terminals External antenna terminal
Intermediate frequency 450 kHz

– Continued on next page –

COMPACT DISC DECK RECEIVER

9-877-745-01

2004D05-1

© 2004.04

Sony Corporation

Home Audio Company

Published by Sony Engineering Corporation



General

Power requirements

European and Russian models:

230 V AC, 50/60 Hz

Mexican models: 127 V AC, 60 Hz

Other models: 120 V, 220 V or

230 – 240 V AC, 50/60 Hz

Adjustable with voltage selector

Power consumption

European and Russian models:

180 watts

0.25 watts (at the Power

Saving Mode)

Other models:

170 watts

Dimensions (w/h/d) incl. projecting parts and controls

Amplifier/Tuner/Tape/CD section:

Approx. 280 × 325 ×

425 mm

Mass

Approx. 9.9 kg

Design and specifications are subject to change without notice.

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

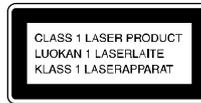

This appliance is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

TABLE OF CONTENTS

1. SERVICING NOTES	4	7. EXPLODED VIEWS	58
2. GENERAL		7-1. Case Section	58
Location of Controls	7	7-2. Tape Mechanism Deck Section (CWM43FR34)	59
3. DISASSEMBLY		7-3. Cassette Box Section	60
3-1. Disassembly Flow	9	7-4. Front Panel Section	61
3-2. Case (Side-L/R)	10	7-5. Back Panel Section	62
3-3. Case (Top)	10	7-6. Chassis Section	63
3-4. Tray Panel	11	7-7. CD Mechanism Deck Section-1 (CDM74-F1BD81)	64
3-5. CD Mechanism Deck (CDM74-F1BD81)	11	7-8. CD Mechanism Deck Section-2 (CDM74-F1BD81)	65
3-6. Front Panel Block	12	7-9. CD Mechanism Deck Section-3 (CDM74-F1BD81)	66
3-7. Back Panel Section	12	7-10. Base Unit Section (BU-F1BD81A)	67
3-8. MAIN Board	13	8. ELECTRICAL PARTS LIST	68
3-9. Tape Mechanism Deck (CWM43FR34)	13		
3-10. Table Assy	14	• Abbreviation	
3-11. MOTOR (TB) Board	14	E51 : Chilean and Peruvian models	
3-12. MOTOR (LD) Board	15	MX : Mexican model	
3-13. Base Unit (BU-F1BD81A)	15		
3-14. CD Board	16		
4. TEST MODE	17		
5. ELECTRICAL ADJUSTMENTS			
CD Section	21		
6. DIAGRAMS			
6-1. Block Diagram – SERVO Section –	22		
6-2. Block Diagram – MAIN Section –	23		
6-3. Block Diagram			
– PANEL/POWER SUPPLY Section –	24		
6-4. Note for Printed Wiring Boards and Schematic Diagrams	25		
6-5. Printed Wiring Board – CD Board –	26		
6-6. Schematic Diagram – CD Board –	27		
6-7. Printed Wiring Boards – CHANGER Section –	28		
6-8. Schematic Diagram – CHANGER Section –	29		
6-9. Printed Wiring Boards			
– CDMP3 CONNECT/TRANSLATION Boards –	30		
6-10. Schematic Diagram			
– CDMP3 CONNECT/TRANSLATION Boards –	31		
6-11. Schematic Diagram – MAIN Section (1/4) –	32		
6-12. Schematic Diagram – MAIN Section (2/4) –	33		
6-13. Schematic Diagram – MAIN Section (3/4) –	34		
6-14. Schematic Diagram – MAIN Section (4/4) –	35		
6-15. Printed Wiring Boards – MAIN Section –	36		
6-16. Printed Wiring Board – PANEL Section –	37		
6-17. Schematic Diagram – PANEL Section (1/2) –	38		
6-18. Schematic Diagram – PANEL Section (2/2) –	39		
6-19. Printed Wiring Board – POWER AMP Section – (AEP, UK, CIS only)	40		
6-20. Schematic Diagram – POWER AMP Section – (AEP, UK, CIS only)	41		
6-21. Printed Wiring Board – POWER AMP Section – (E51, MX only)	42		
6-22. Schematic Diagram – POWER AMP Section – (E51, MX only)	43		
6-23. Printed Wiring Boards – TRANS Section – (AEP, UK, CIS only)	44		
6-24. Schematic Diagram – TRANS Section – (AEP, UK, CIS only)	45		
6-25. Printed Wiring Boards – TRANS Section – (E51, MX only)	46		
6-26. Schematic Diagram – TRANS Section – (E51, MX only)	47		

SECTION 1 SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK


The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveforms is output three times.


• MODEL IDENTIFICATION

– Rear View –

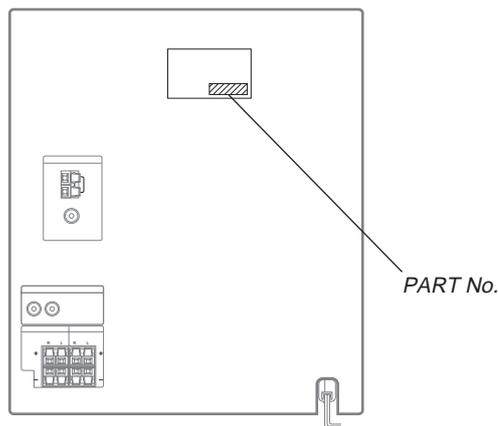


MODEL	PART No.
AEP, UK models	4-253-949-0□
CIS model	4-253-950-0□
Chilean and Peruvian models	4-253-951-0□
Mexican model	4-255-500-0□


HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF.

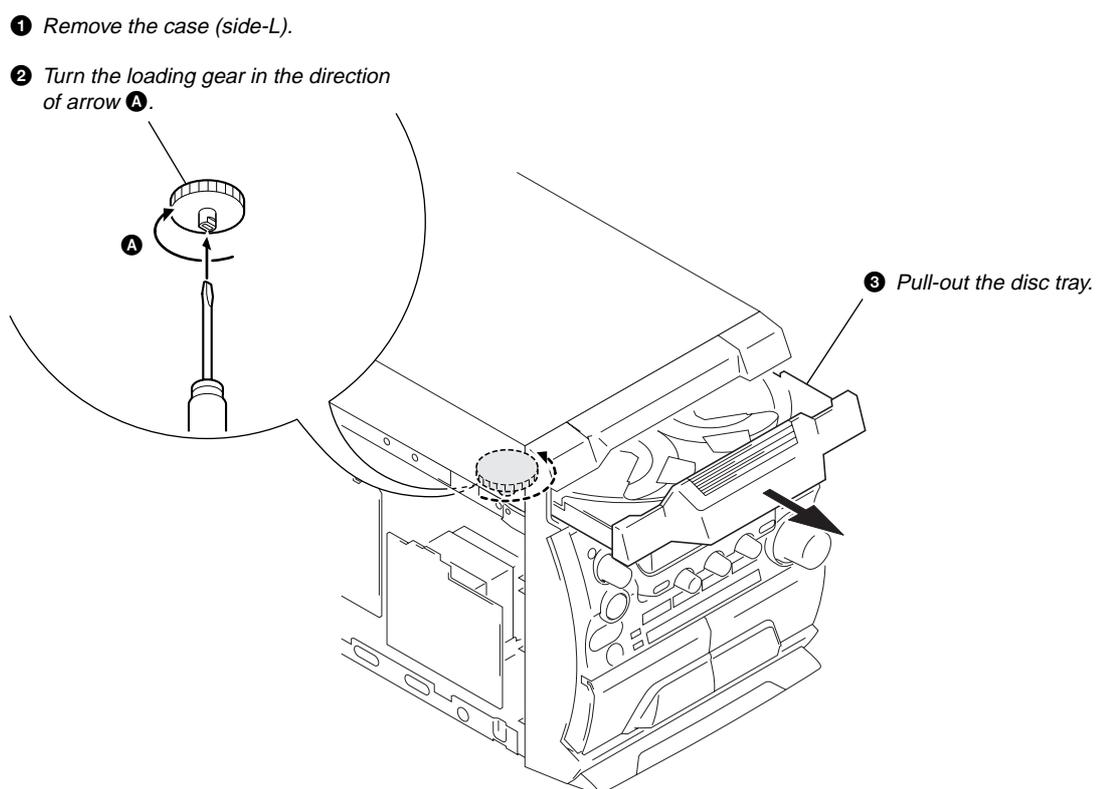


**SERVICE POSITION
– CD MECHANISM DECK –**

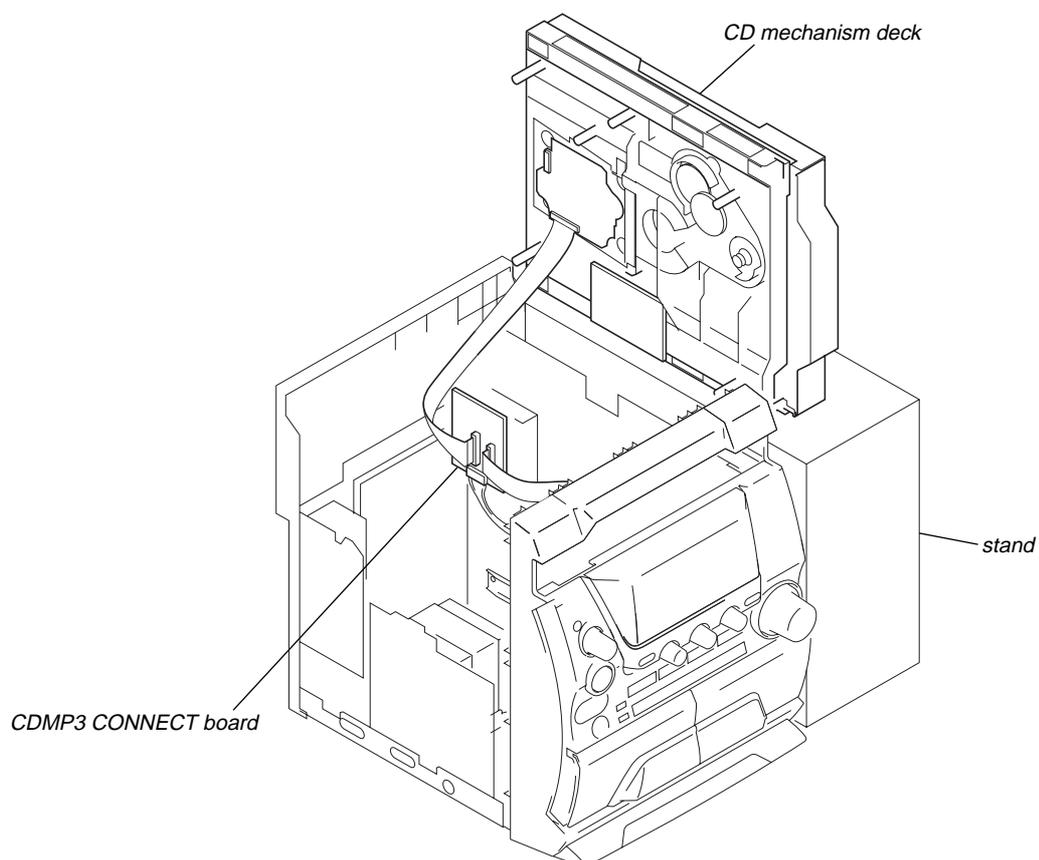

– FRONT PANEL SECTION –

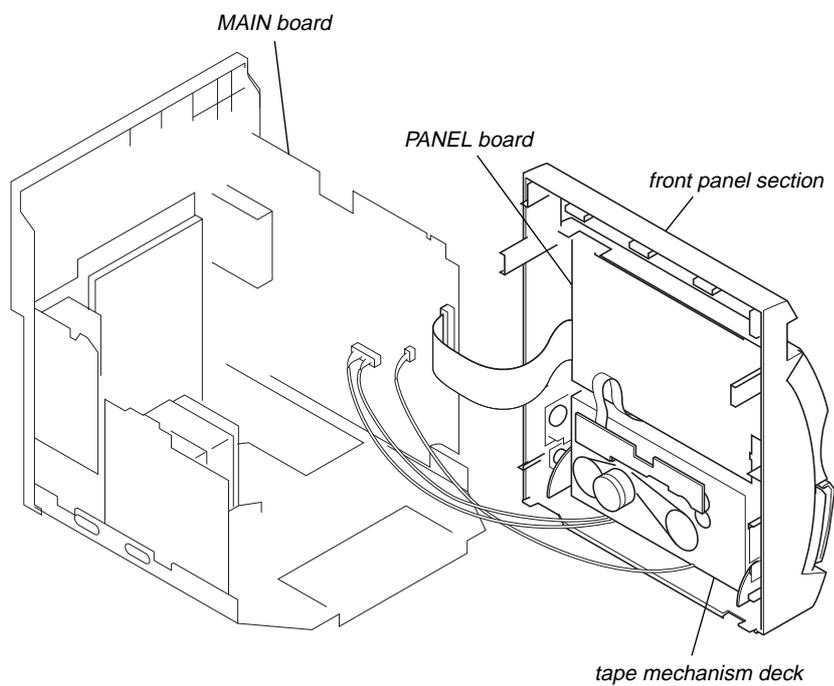

– AMP BOARD –

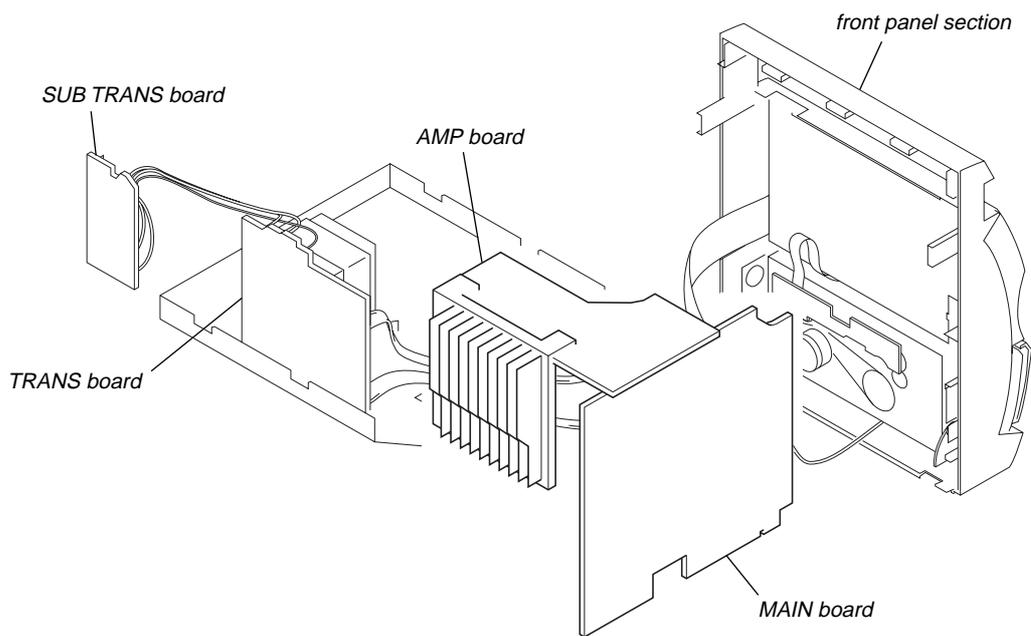

SECTION 2 GENERAL

This section is extracted from instruction manual.

• LOCATION OF CONTROLS

Main unit

ALPHABETICAL ORDER

A - N


- ALBUM + 29
- ALBUM - 29
- BASS control 5
- CD 16
- CD SYNC 12
- Deck A 9
- Deck B 28
- DISC 1 - 3 23
- DISC SKIP/EX-CHANGE 24
- Disc tray 22
- DISPLAY 15
- Display window 4
- ENTER 2
- i-Bass 13
- MIDDLE control 5

O - Z

- Operation Dial (AMS/TUNING) 14
- P FILE 6
- PHONES jack 11
- PLAY MODE 20
- PRESET EQ 3
- REC PAUSE/START 8
- Remote sensor 7
- SURROUND 21
- TAPE A/B 18
- TREBLE control 5
- TUNER/BAND 17
- TUNING MODE 20
- VIDEO/MD 19
- VOLUME control 26

BUTTON DESCRIPTIONS

- I/⏻ (power) 1
- ▲ PUSH (deck A) (eject) 10
- ▲ (eject) 25
- PUSH ▲ (deck B) (eject) 27
- ◀◀ (rewind) 29
- (stop) 29
- ▶▶ (play) 29
- || (pause) 29
- ▶▶ (fast forward) 29

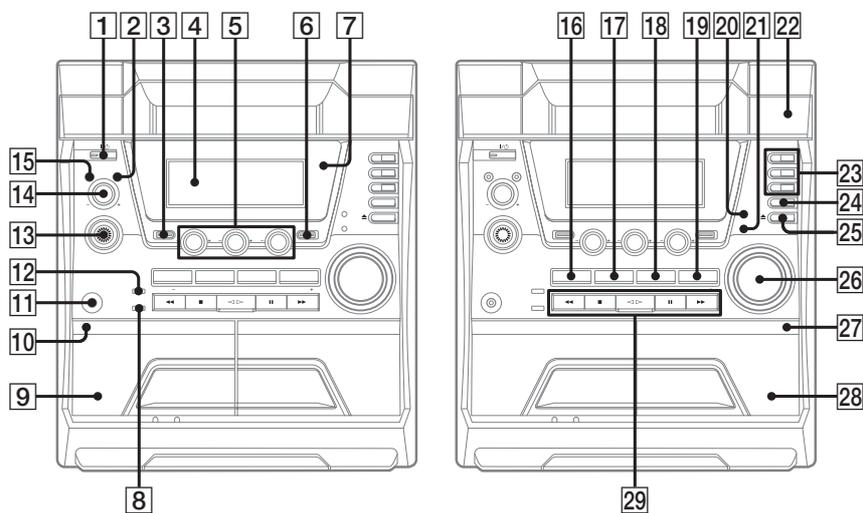

Remote control

ALPHABETICAL ORDER

A - E

- ALBUM + **11**
- ALBUM - **13**
- CD **18**
- CLEAR **15**
- CLOCK/TIMER SELECT **2**
- CLOCK/TIMER SET **3**
- DISC SKIP **10**
- DISPLAY **21**
- ENTER **9**
- EQ **14**

F - Z

- FM MODE **4**
- FUNCTION **6**
- PLAY MODE **20**
- REPEAT **4**
- SLEEP **22**
- TAPE **17**
- TUNER BAND **5**
- TUNER MEMORY **19**
- TUNING MODE **20**
- VOLUME +/- **12**

BUTTON DESCRIPTIONS

- I/⏻ (power) **1**
- ⏮/⏭ (rewind/fast forward) **7**
- ▶ (play) **8**
- ⏸ (pause) **8**
- (stop) **8**
- /+ (tuning) **16**
- ⏮/⏭ (go back/go forward) **16**

Setting the clock

Use buttons on the remote for the operation.


- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press ⏮ or ⏭ repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press ⏮ or ⏭ repeatedly to set the minute.
- 6** Press ENTER.
The clock starts working.

To adjust the clock

- 1** Press CLOCK/TIMER SET.
- 2** Press ⏮ or ⏭ repeatedly to select "CLOCK SET", then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.

Notes

- The clock settings are canceled when you disconnect the power cord or if a power failure occurs.
- You cannot set the clock in Power Saving Mode.

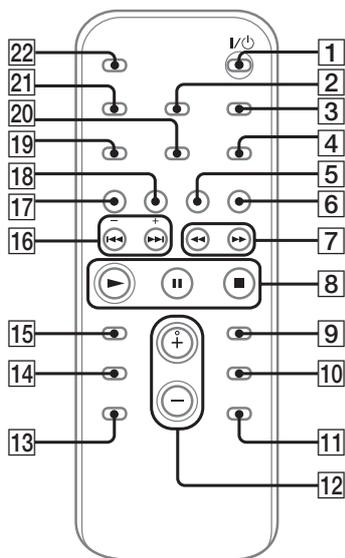


SECTION 3 DISASSEMBLY

- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW


Note 1: The process described in  can be performed in any order.

Note 2: Without completing the process described in , the next process can not be performed.

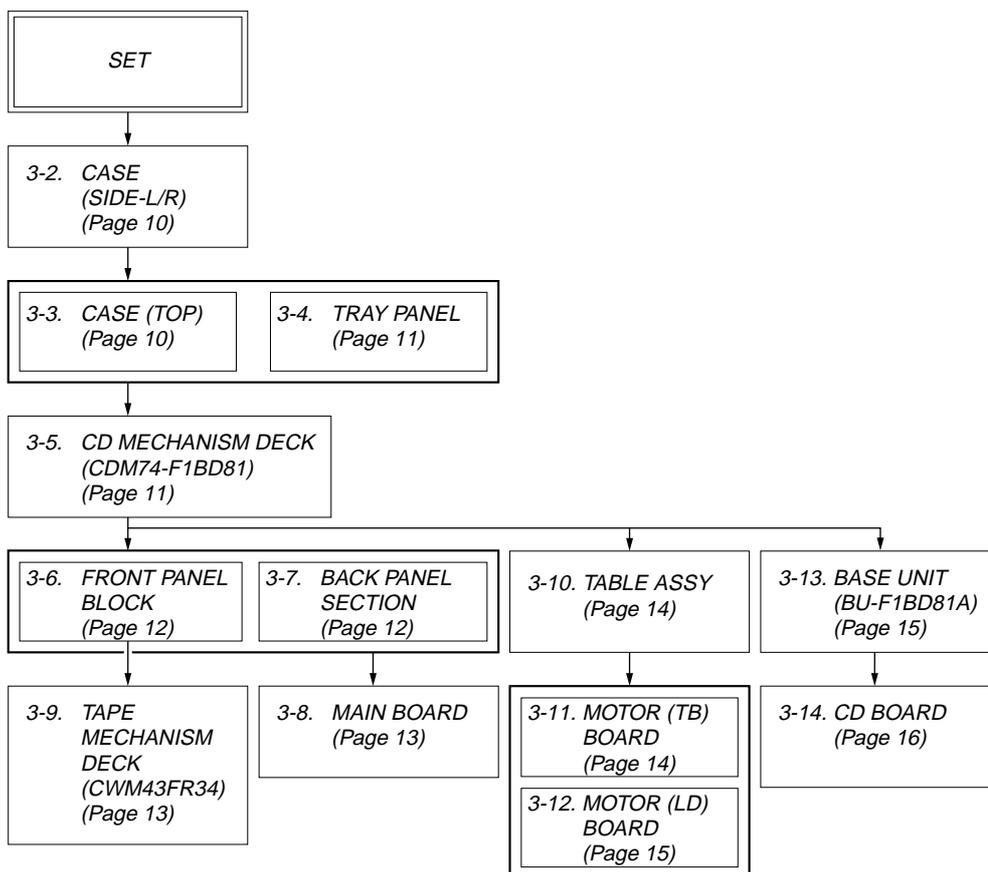


Note: Follow the disassembly procedure in the numerical order given.


3-2. CASE (SIDE-L/R)

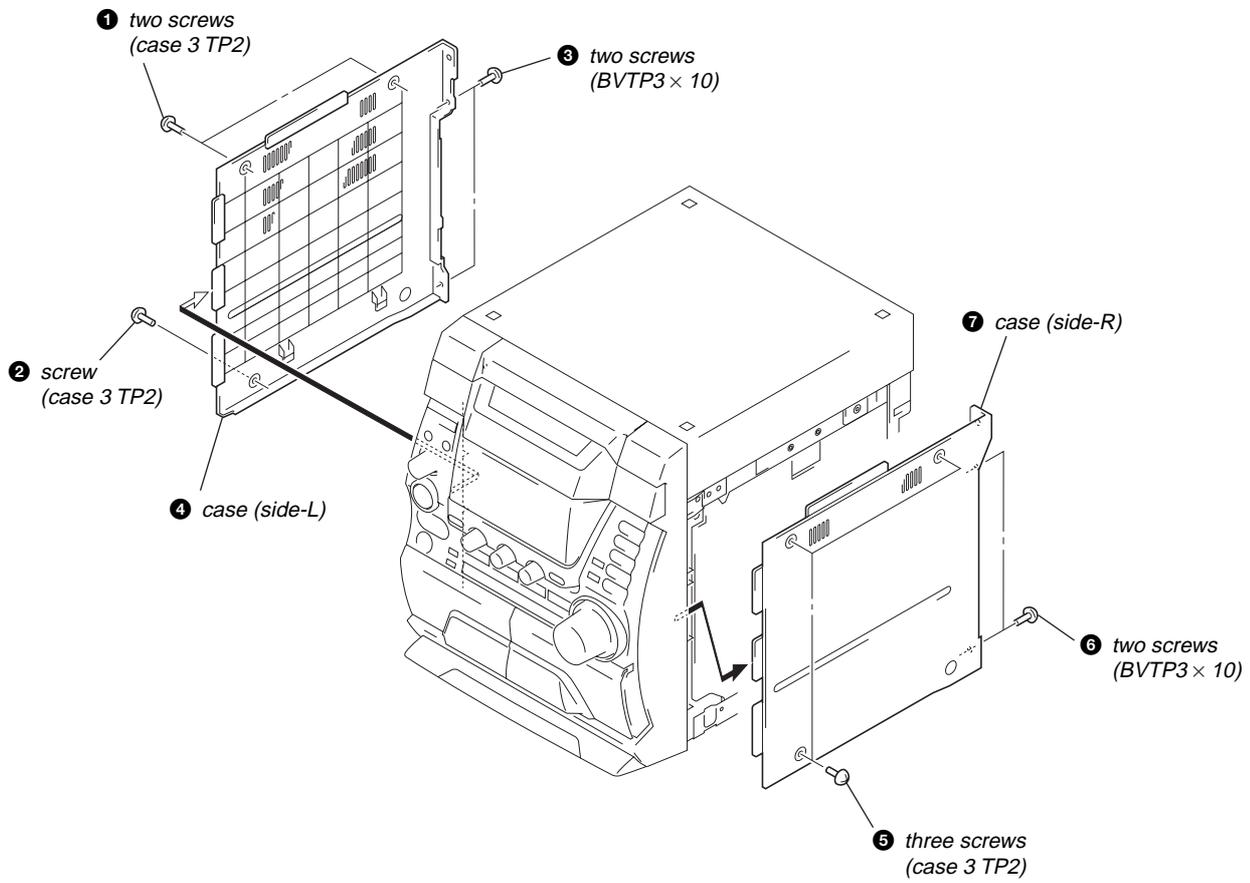


3-3. CASE (TOP)

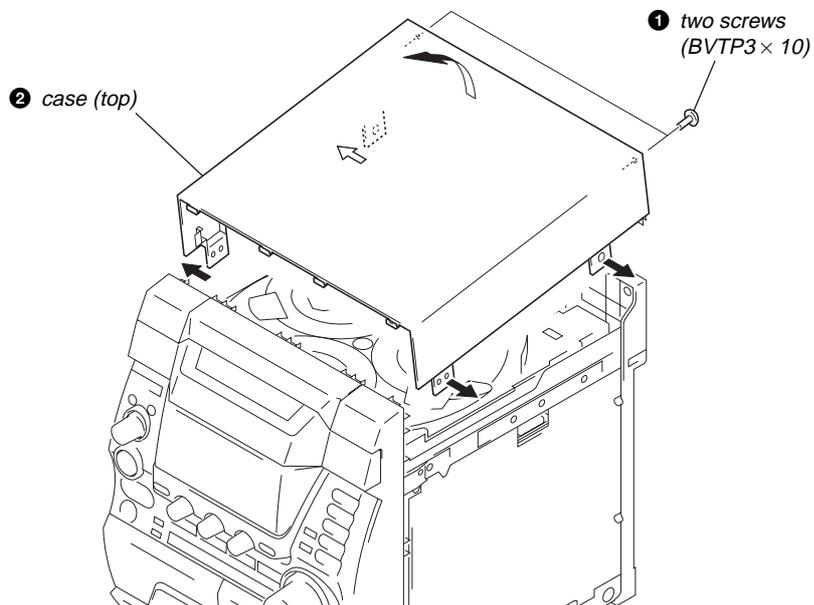

3-4. TRAY PANEL

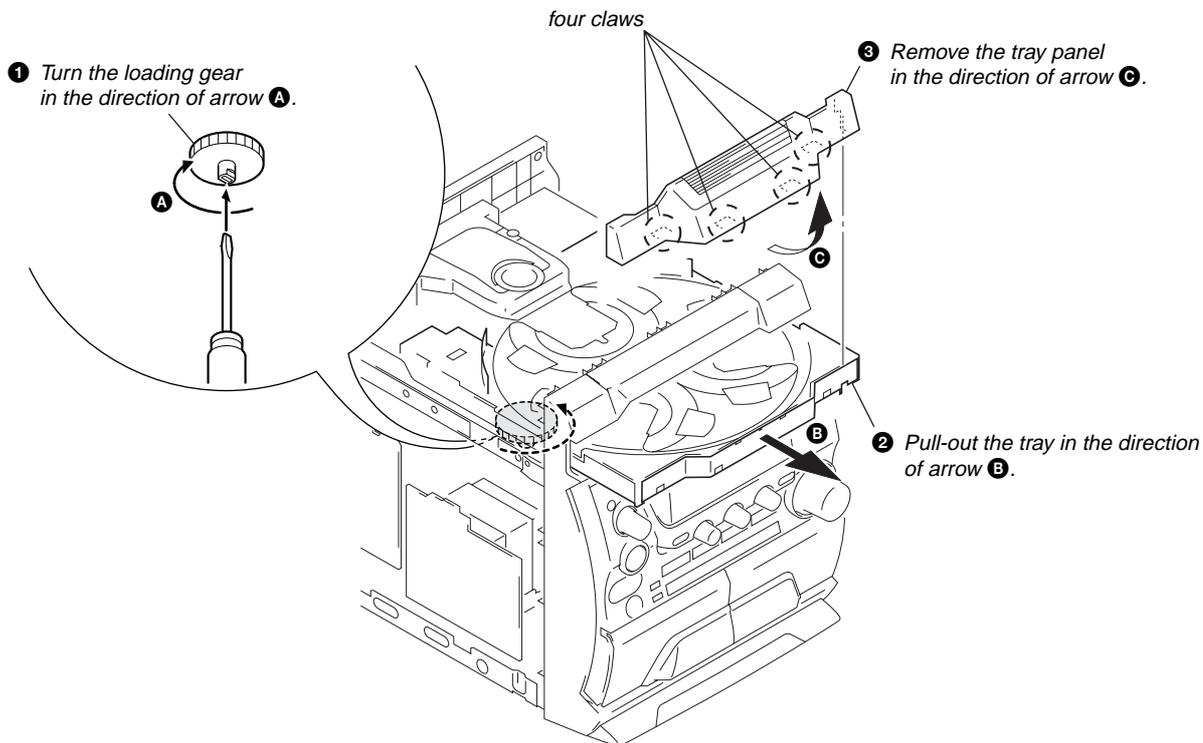


3-5. CD MECHANISM DECK (CDM74-F1BD81)

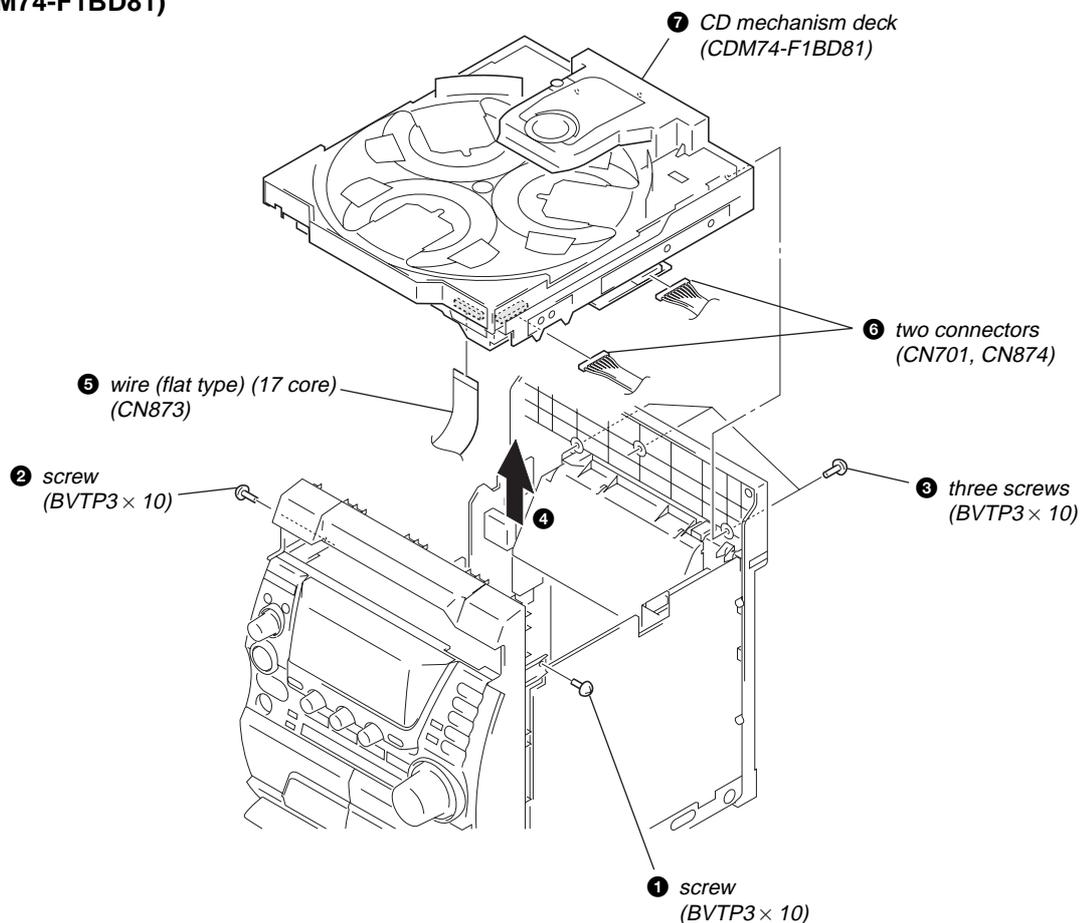


3-6. FRONT PANEL BLOCK

- Abbreviation
 E51 : Chilean and Peruvian models
 MX : Mexican model

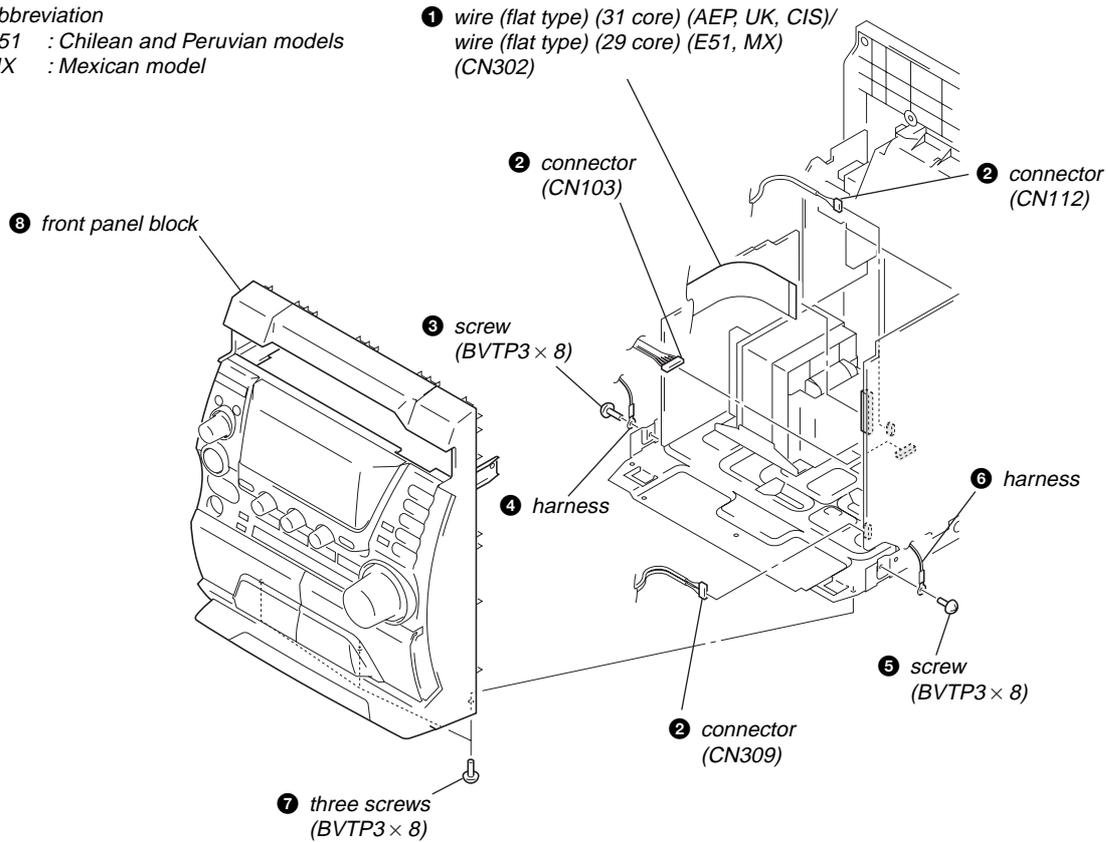


3-7. BACK PANEL SECTION


- Abbreviation
 E51 : Chilean and Peruvian models
 MX : Mexican model

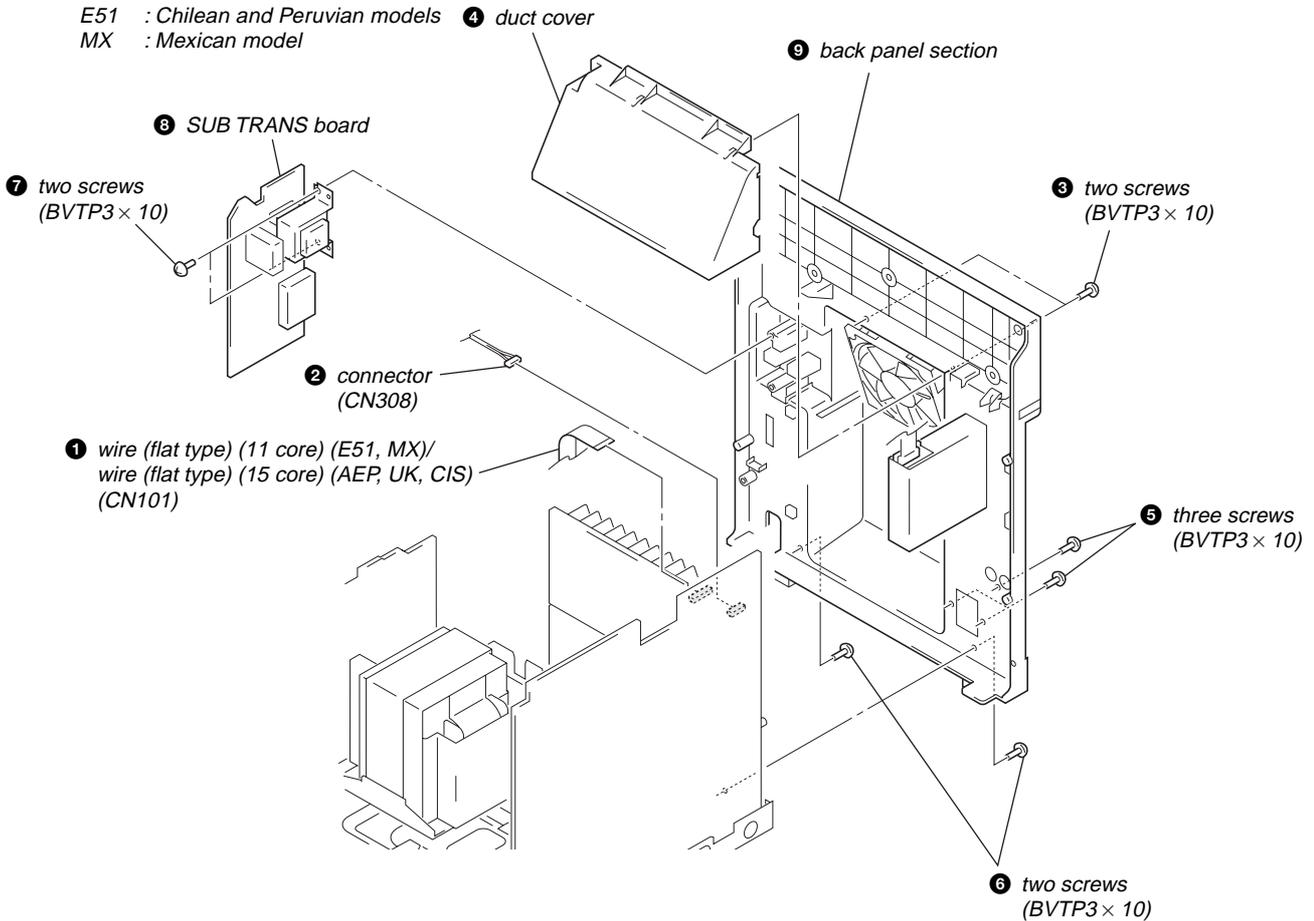


3-8. MAIN BOARD

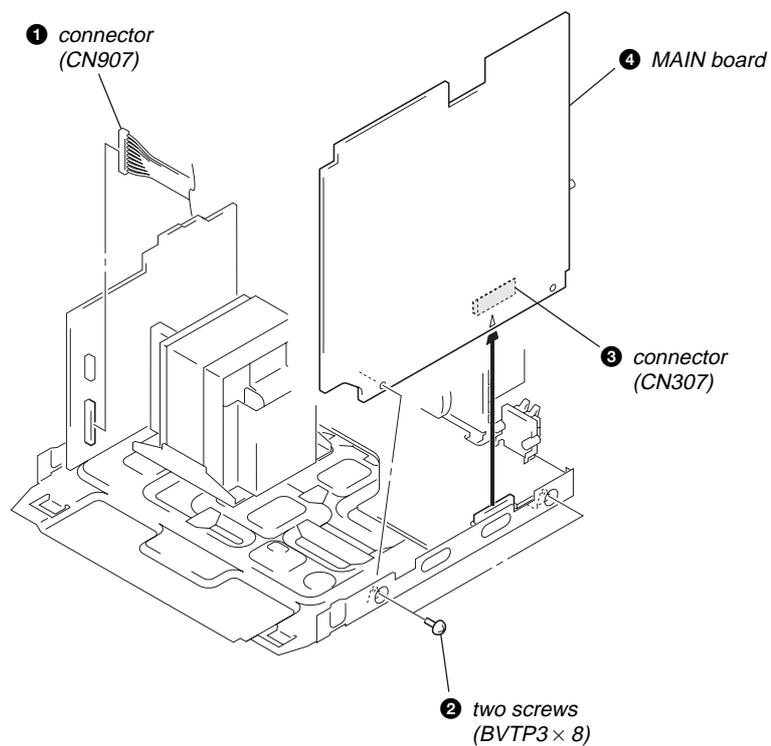


3-9. TAPE MECHANISM DECK (CWM43FR34)

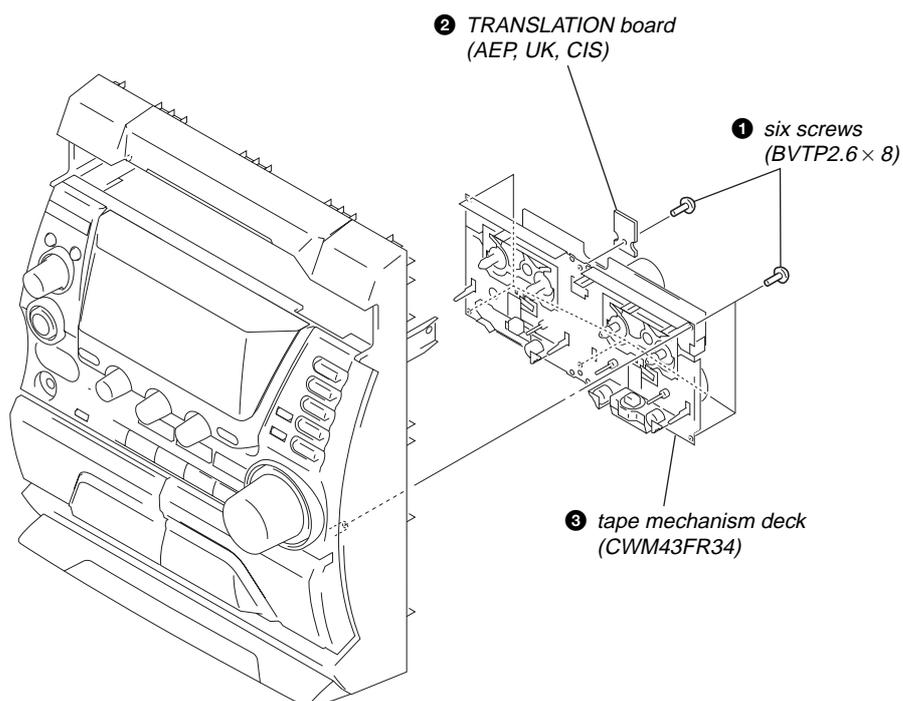


3-10. TABLE ASSY

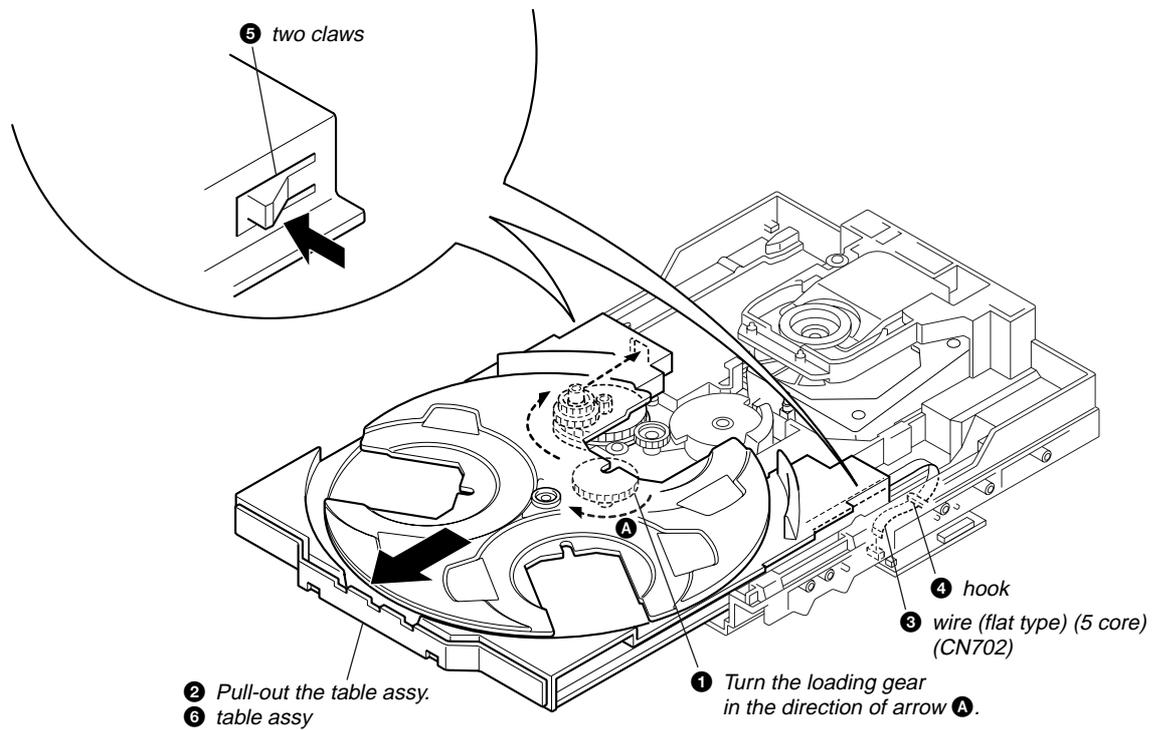


3-11. MOTOR (TB) BOARD

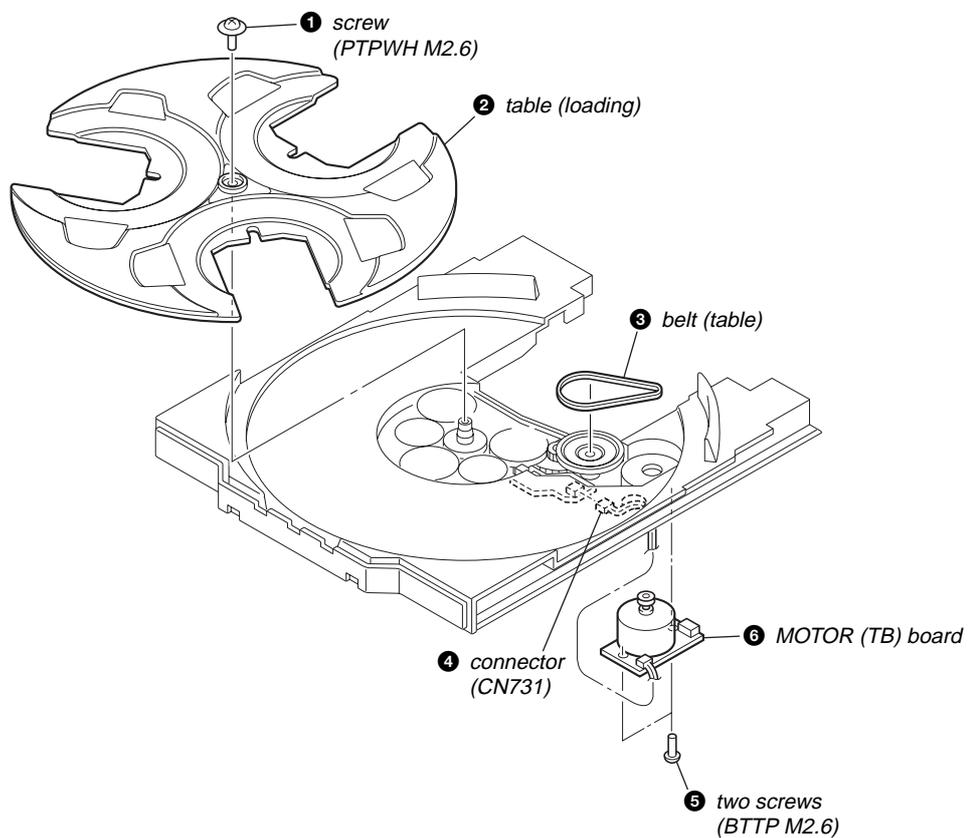


3-12. MOTOR (LD) BOARD

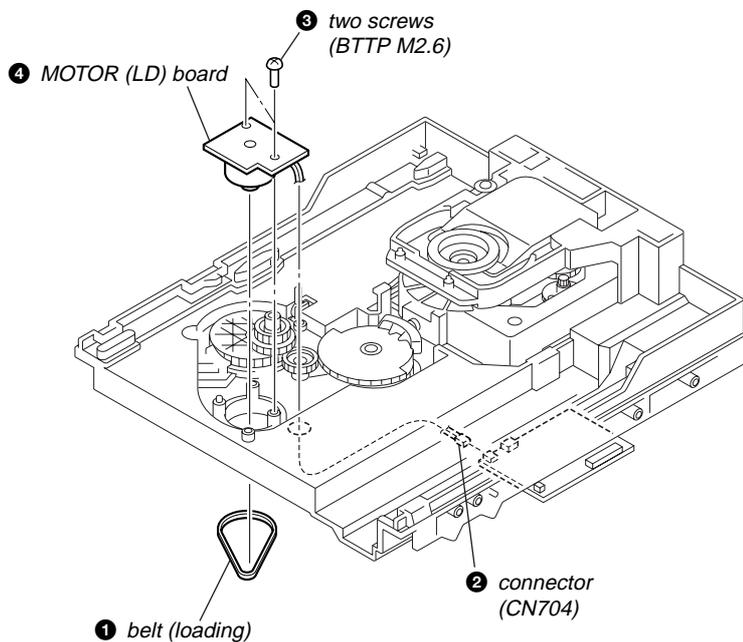

3-13. BASE UNIT (BU-F1BD81A)

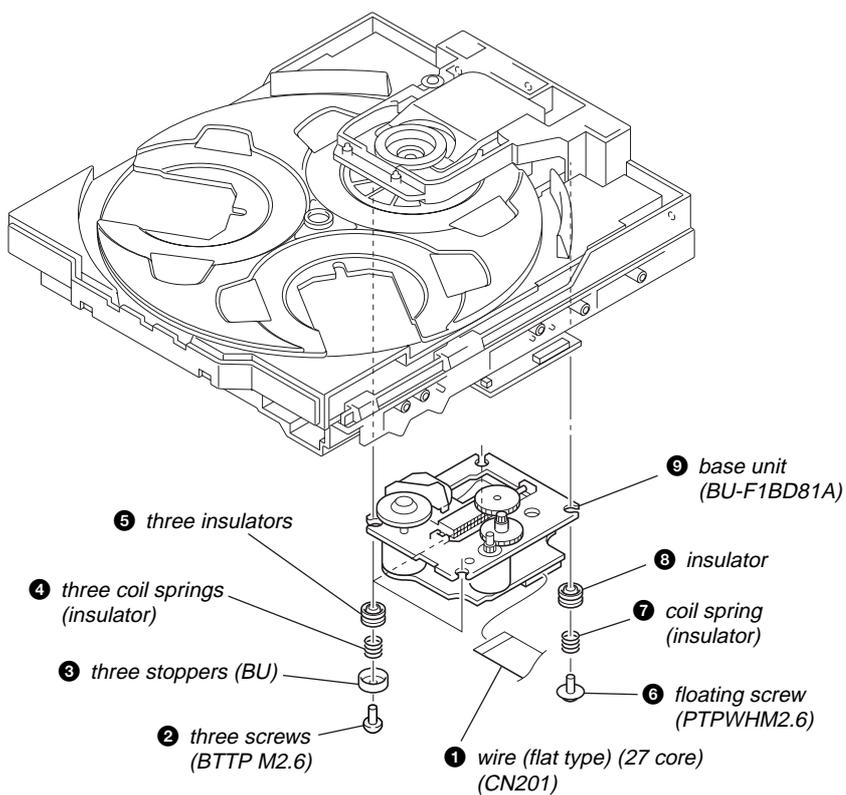

3-14. CD BOARD

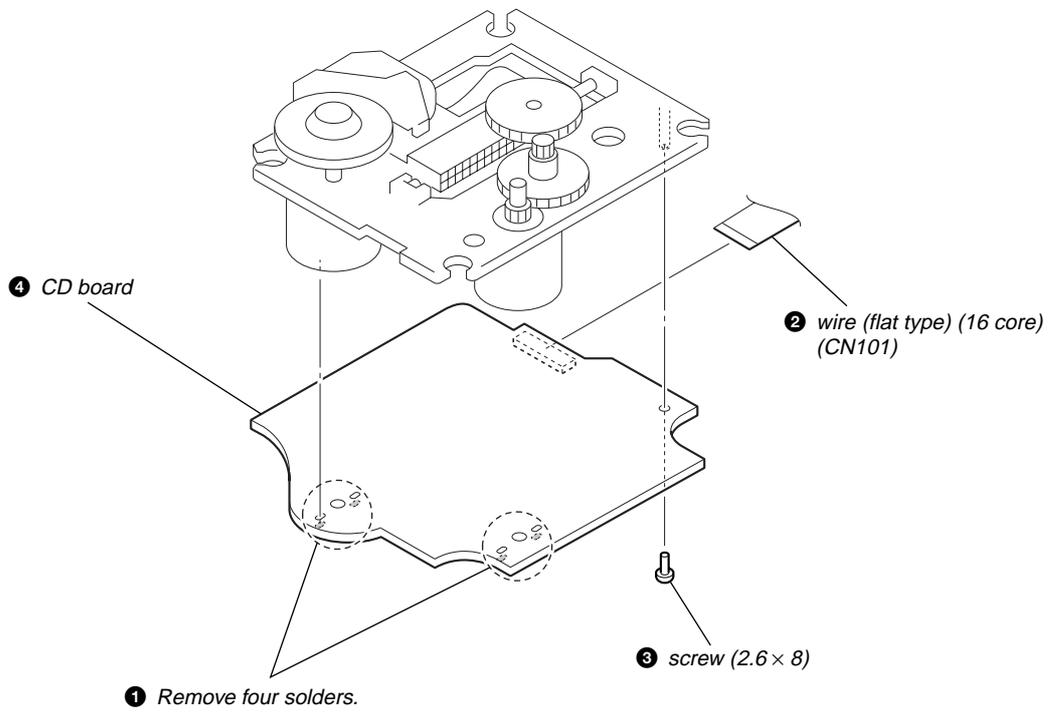

SECTION 4 TEST MODE

MC COLD RESET

- The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press three buttons of **■**, **P FILE** and **DISC 1** simultaneously.
3. The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

TUNER STEP CHANGE-OVER (Except AEP, UK, CIS)

- A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press the **TUNER/BAND** button to select "AM".
3. Press the **I/⏻** button to turn the power OFF.
4. Press two buttons of **PLAY MODE/TUNING MODE** and **I/⏻** simultaneously.
5. The message "AM 9K STEP" or "AM 10K STEP" is displayed on the fluorescent indicator tube, and thus the channel step is changed over.

CD SHIP (LOCK) MODE

- This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press the **CD** button to select "CD".
3. Press two buttons of **CD** and **POWER** simultaneously.
4. The message "LOCK" is displayed on the fluorescent indicator tube, and the CD ship mode is set.

CD SHIP (LOCK) MODE & COLD RESET

- This mode is used to perform CD chip (lock) mode and cold reset simultaneously.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press the **CD** button to select "CD".
3. Press three buttons of **■**, **CD** and **DISPLAY** simultaneously.
4. The message "COLD RESET" is displayed on the fluorescent indicator tube momentarily, then becomes standby states.

CHANGE-OVER FUNCTION OF MD/VIDEO

- This mode is used to enable function of external input to change over between MD and VIDEO.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press two buttons of **VIDEO (MD)** and **I/⏻** simultaneously.
3. The message "MD" or "VIDEO" is displayed on the fluorescent indicator tube, and the function of external input is changed over.

CD TRAY LOCK MODE

- This mode is used to unable to take sample disc out of tray in the shop.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press the **CD** button to select "CD".
3. Set disc on the CD tray, press two buttons of **■** and **▲** for 5 seconds.
4. The message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked. (Even if pressing the **▲** button, the message "LOCKED" is displayed on the fluorescent indicator tube and the CD tray is locked)
5. To release from this mode, press two buttons of **■** and **▲** for 5 seconds.
6. The message "UNLOCKED" is displayed on the fluorescent indicator tube and the CD tray is unlocked.

AMP TEST MODE

- This mode is used to display the parameter of amplifier IC and display the VACS status.

Procedure:

1. Press the **I/⏻** button to turn the power ON.
2. Press three buttons of **■**, **P FILE** and **PLAY MODE/TUNING MODE** simultaneously.
3. When the AMP test mode is activated, the message "AMP TEST IN" is displayed on the fluorescent indicator tube momentarily, then amplifier adjustment mode is displayed on the fluorescent indicator tube.
4. Press the **DISPLAY** button to changed over between VACS status display mode and the amplifier IC parameter display mode.
5. In the amplifier IC parameter display mode, press the **i-BASS** button to changed over DBFB ON/OFF, and when it is ON, the character "D" is displayed on the fluorescent indicator tube.
6. In the amplifier IC parameter display mode, press the **SURROUND** button to changed over surround ON/OFF, and when it is ON, the character "S" is displayed on the fluorescent indicator tube.
7. In the amplifier IC parameter display mode, turn each knob of **BASS**, **MIDDLE** and **TREBLE** causes respective parameters to be changed, as well as change-over of the display on the fluorescent indicator tube.

AGING MODE

- This mode can be used for operation check of CD section and tape deck section.
CD section and tape deck section work in parallel.

If an error occurred:

The aging operation stops only an error occurred sections and display then status.

If no error occurs:

The aging operation continues repeatedly.

Procedure:

1. Press the **[I/O]** button to turn the power ON.
2. Press the **[CD]** button to select "CD".
3. Set disc on the CD tray and set tape into the deck.
4. Press three buttons of **[■]**, **[P FILE]** and **[DISC SKIP/EX-CHANGE]** simultaneously.
5. Aging operations of CD and tape are started at the same time.
6. To release from this mode, press the **[I/O]** button to turn the power OFF and press the function buttons.

1. Display at the Aging Mode

Display operating state of CD section and tape deck section alternately.


If an error occurred, stop display which that section.

2. CD Section

The sequence during the aging mode is following as below.

Display at the aging mode is the same as the normal operation.


Aging mode sequence (CD section) :

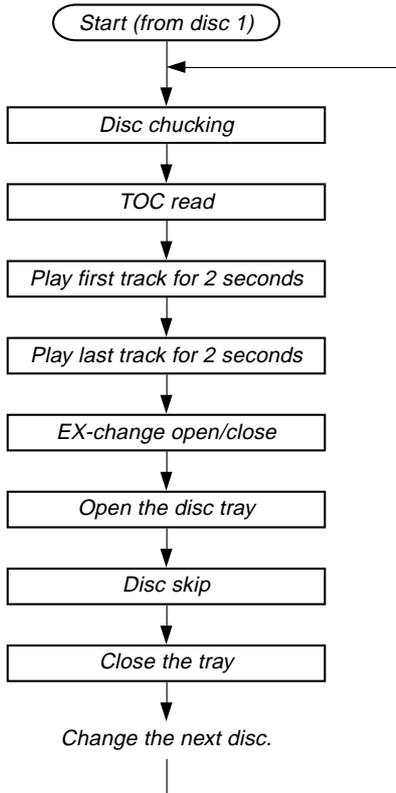

3. Tape Deck Section

The sequence during the aging mode is following as below.
If an error occurred, stop display that step.

Aging mode sequence (tape deck section) :

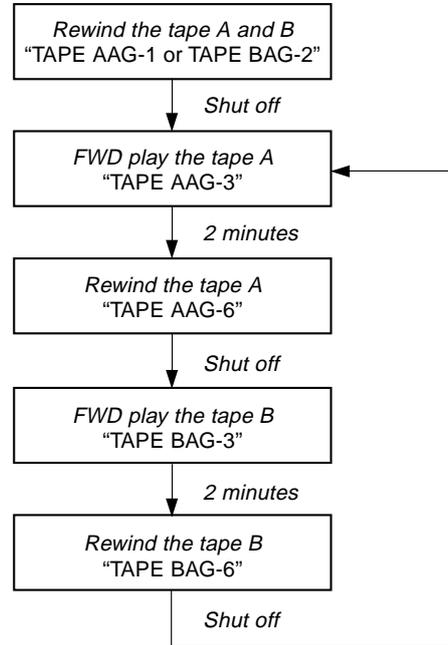

Note: "TAPE *AG-*" is display of each step.

PANEL TEST MODE

- This mode is used to check the fluorescent indicator tube, LEDs and buttons.

Procedure:

1. Press the **[I/O]** button to turn the power ON.
2. Press three buttons of **[■]**, **[P FILE]** and **[ENTER]** simultaneously.
3. Fluorescent indicator tube and LEDs are all turned ON.
4. Press two buttons of **[■]** and **[ENTER]** simultaneously, mode is changed over.
5. In the key check mode, press each key, the defined key number of every each key list is displayed on the fluorescent indicator tube.
6. In the key count check mode, "KEYCNT 0" is displayed on the fluorescent indicator tube. Each time a key is pressed, "K" value increases. However, once a key is pressed, it is no longer taken into account.
7. In the headphone input check mode, connect the headphone, the message "H_P ON" is displayed on the fluorescent indicator tube, and disconnect the headphone, the message "H_P OFF" is displayed on the fluorescent indicator tube.
8. In the volume check mode, "VOLUME FLAT" is displayed on the fluorescent indicator tube. Turn the **[VOLUME]** knob clockwise, the message "VOLUME UP" is displayed on the fluorescent indicator tube momentarily and turn the **[VOLUME]** knob counterclockwise, the message "VOLUME DOWN" is displayed on the fluorescent indicator tube momentarily.

MC TEST MODE

- This mode is used to check operations of microprocessor.

Procedure:

- Press the **I/O** button to turn the power ON.
- Press three buttons of **■**, **P FILE** and **DISC 3** simultaneously.
- When the MC test mode is activated, VACS level is displayed on the fluorescent indicator tube momentarily.
- Turn the **AMS/TUNING** knob clockwise, the message "ALL EQ MAX" is displayed on the fluorescent indicator tube momentarily and turn the **AMS/TUNING** knob counterclockwise, the message "ALL EQ MIN" is displayed on the fluorescent indicator tube momentarily.
- Press the **PRESET EQ** button, the message "ALL EQ FLAT" is displayed on the fluorescent indicator tube momentarily.
- Turn the **VOLUME** knob clockwise, the message "VOLUME MAX" is displayed on the fluorescent indicator tube momentarily and turn the **VOLUME** knob counterclockwise, the message "VOLUME MIN" is displayed on the fluorescent indicator tube momentarily.
- Press the **i-BASS** button to changed over VACS ON/OFF.
- When the **REC PAUSE/START** button is pressed twice with a tape set in the deck-B, the function is switched "MD" or "VIDEO" and recording starts. When the **◀** or **▶** button is pressed during recording, the tape is rewound back to the beginning of recording, the function is switched to "TAPE B", then playback starts.
- When the **CD SYNC** key is pressed with the test tape (AMS-100, AMS-110A) in the deck, number of space between tunes is counted, then if AMS-110A is set, "OK" is displayed on the fluorescent indicator tube and if AMS-100 is set, "NG" is displayed on the fluorescent indicator tube.
- Press the **I/O** button to release from this mode, then cold reset is performed.

VERSION DISPLAY MODE

- This mode is used to check the model, destination and software version.

Procedure:

- Press the **I/O** button to turn the power ON.
- Press three buttons of **■**, **P FILE** and **DISC 2** simultaneously.
- When this mode is activated, model and destination is displayed on the fluorescent indicator tube.
- Press the **DISPLAY** button to changed over between software version and year, month, day of the software creation display mode and model and destination display mode.
- To release from this mode, press three buttons of **■**, **P FILE** and **DISC 2** simultaneously.

CD ERROR CODE DISPLAY MODE

- This mode can be used for error code display of CD section.

Procedure:

- Press the **I/O** button to turn the power ON.
- Press the **CD** key to select "CD".
- Press three buttons of **■**, **CD** and **DISC 1** simultaneously.
- When this mode is activated, mechanism deck error code is displayed on the fluorescent indicator tube.
- Press the **i-BASS** button to changed over between optical pick-up error code display mode and mechanism deck error code mode.
- Turn the **AMS/TUNING** knob to change over display of error history.

1. Mechanism Deck Error Code Mode

- When this mode is entered, mechanism deck error code is displayed with the 10-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the mechanism deck error code mode, "M" is displayed on the fluorescent indicator tube.

The second digit from the left indicates:

(Error history No. display)

The second digit from the left indicates which order the error history is. "1" indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:

(Error status display)

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 0	No error
0 8	Table operation time-out (Table does not move to the target position within the specified time)
1 6	In the chucking down operation, the operation was retried by the maximum number of times but the operation could not be completed
1 7	In the chucking up and down operation, the reverse recovery processing was attempted but it could not be recovered
1 8	In the chucking up operation, the operation was retried by the maximum number of times but the operation could not be completed
2 0	Loading operation time-out (Table does not move to the target position within the specified time)
2 2	As the chuck was in the ex-open status at the initialization, the closing was attempted but could not be completed

The 5th and 6th digit from the left indicates:

(Present status display)

The 5th and 6th digit from the left indicates which operating status when an error occurred is indicated.

Display	Status
0 1	Open completion status
0 2	From open status, the movement to chucking down position is under way
0 3	From chucking down position, the open operation is under way
0 4	Chucking down completion status
1 0	The chucking down operation is under way
1 1	The chucking up operation is under way
1 2	Close completion status
1 3	From close status, the ex-open operation is under way
1 4	From ex-open status, the close operation is under way
1 8	Ex-pen completion status

The 7th and 8th digit from the left indicates:

(Motor status display)

The 7th and 8th digit from the left indicates which motor output status when an error occurred is indicated.

Display	Status
× 0	No table motor output
× 1	Table motor forward output
× 2	Table motor backward output
× 3	Table motor break output
0 ×	No loading motor output
1 ×	Loading motor forward output
2 ×	Loading motor backward output
3 ×	Loading motor break output

The 9th and 10 th digit from the left indicates:

(Tray status display)

The 9th and 10th digit from the left indicates which target processing when an error occurred is indicated.

Display	Status
0 1	Open operation
1 2	Close operation
1 8	Ex-open operation

2. Optical Pick-up Error Code Mode

- When this mode is entered, optical pick-up error code is displayed with the 8-character format on the fluorescent indicator tube.

The first digit from the left indicates:

The first digit from the left indicates which mode the error history is. In the optical pick-up error code mode, "D" is displayed on the fluorescent indicator tube.

The second digit from the left indicates:

(Error history No. display)

The second digit from the left indicates which order the error history is. "1" indicates the latest error history, and each time the number increases by one, the error history goes back to one-previous error.

The third and 4th digit from the left indicates:

(Error status display)

The third and 4th digit from the left indicates which error status is indicated.

Display	Status
0 1	Not focused (TOC read without a disc)
0 2	GFS NG (TOC read with a disc chucked)
0 3	Start operation time-over
0 4	Defocused continuously (Defocused during TOC reading)
0 5	Q code not entered for specified time
0 6	Tracking not turned ON
0 7	Blank disc (Blank disc TOC read)

The 5th and 6th digit from the left indicates:

(Error step display)

The 5th and 6th digit from the left indicates which processing when a trouble occurred

Display	Contents
0 1	Power OFF in progress
0 2	Initialize in progress
0 3	Oscillation stopping
0 4	From oscillation stop, oscillation starting
0 5	Stopping
0 6	Stop operation is under way
0 7	Start operation in progress
0 8	TOC read in progress
0 9	Search operation is under way
0 A	Playback operation is under way
0 B	Pause operation is under way
0 C	Playback manual search operation is under way
0 D	Pause manual search operation is under way
0 E	—

The 7th and 8th digit from the left indicates:

The 7th and 8th digit from the left indicates which operation in progress when a trouble occurred. (Step of each processing of the 5th and 6th digits is indicated)

5 REPEAT LIMIT CANCEL MODE

- Number of repeat for CD playback is 5 times when the repeat mode is "REPEAT". This mode is used to enables CD to repeat playback for limitless times.

Procedure:

- Press the  button to turn the power ON.
- Press the  button to select "CD".
- Press three buttons of ,  and  simultaneously.
- The message "LIMIT OFF" is displayed on the fluorescent indicator tube momentarily, CD repeat 5 limit is cancelled.


SECTION 5 ELECTRICAL ADJUSTMENTS

CD SECTION


Note:

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

RF signal waveform

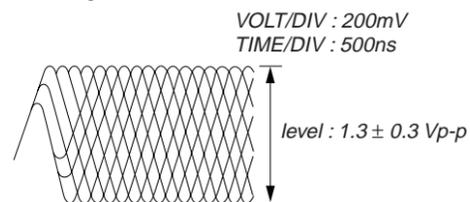


S-CURVE CHECK

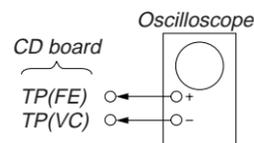

Procedure :


1. Connect an oscilloscope to TP (FE) and TP (VC) on the CD board.
2. Press the button to turn the power ON.
3. Load a disc (YEDS-18) and actuate the focus search. (In consequence of open and close the disc tray, actuate the focus search)
4. Confirm that the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 0.5 Vp-p.

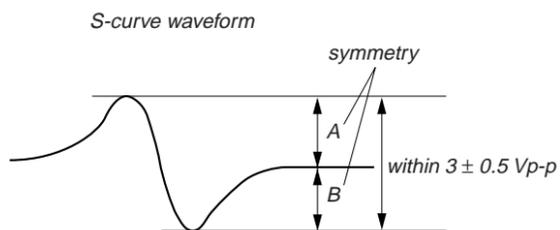

- Note:**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

Connecting Location: CD board

RFAC LEVEL CHECK

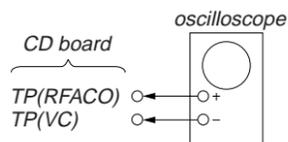


Procedure :

1. Connect an oscilloscope to TP (RFACO) and TP (VC) on the CD board.
2. Press the button to turn the power ON.
3. Load a disc (YEDS-18) and playback.
4. Confirm that oscilloscope waveform is clear and check if RFAC signal level is correct or not.

Note: Clear RFAC signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.


Connecting Location: CD board

– CD BOARD (Conductor Side) –

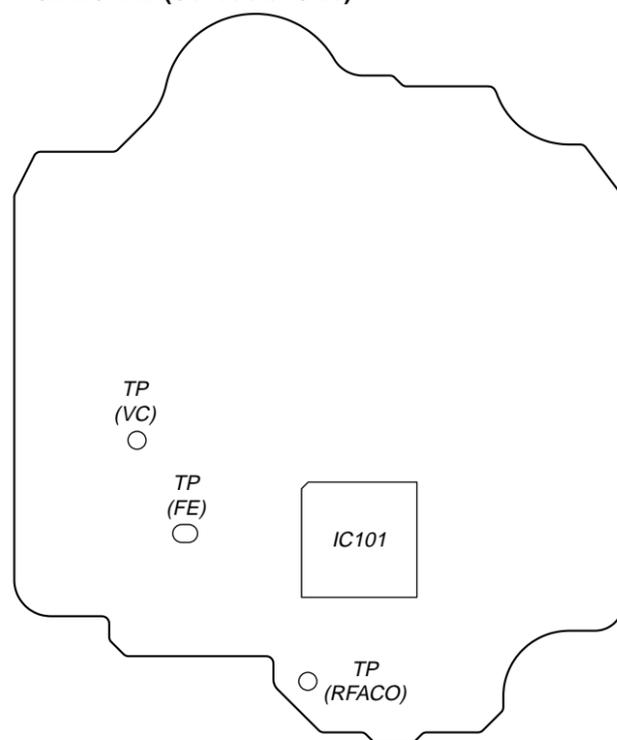


SECTION 6
DIAGRAMS


6-1. BLOCK DIAGRAM – SERVO Section –

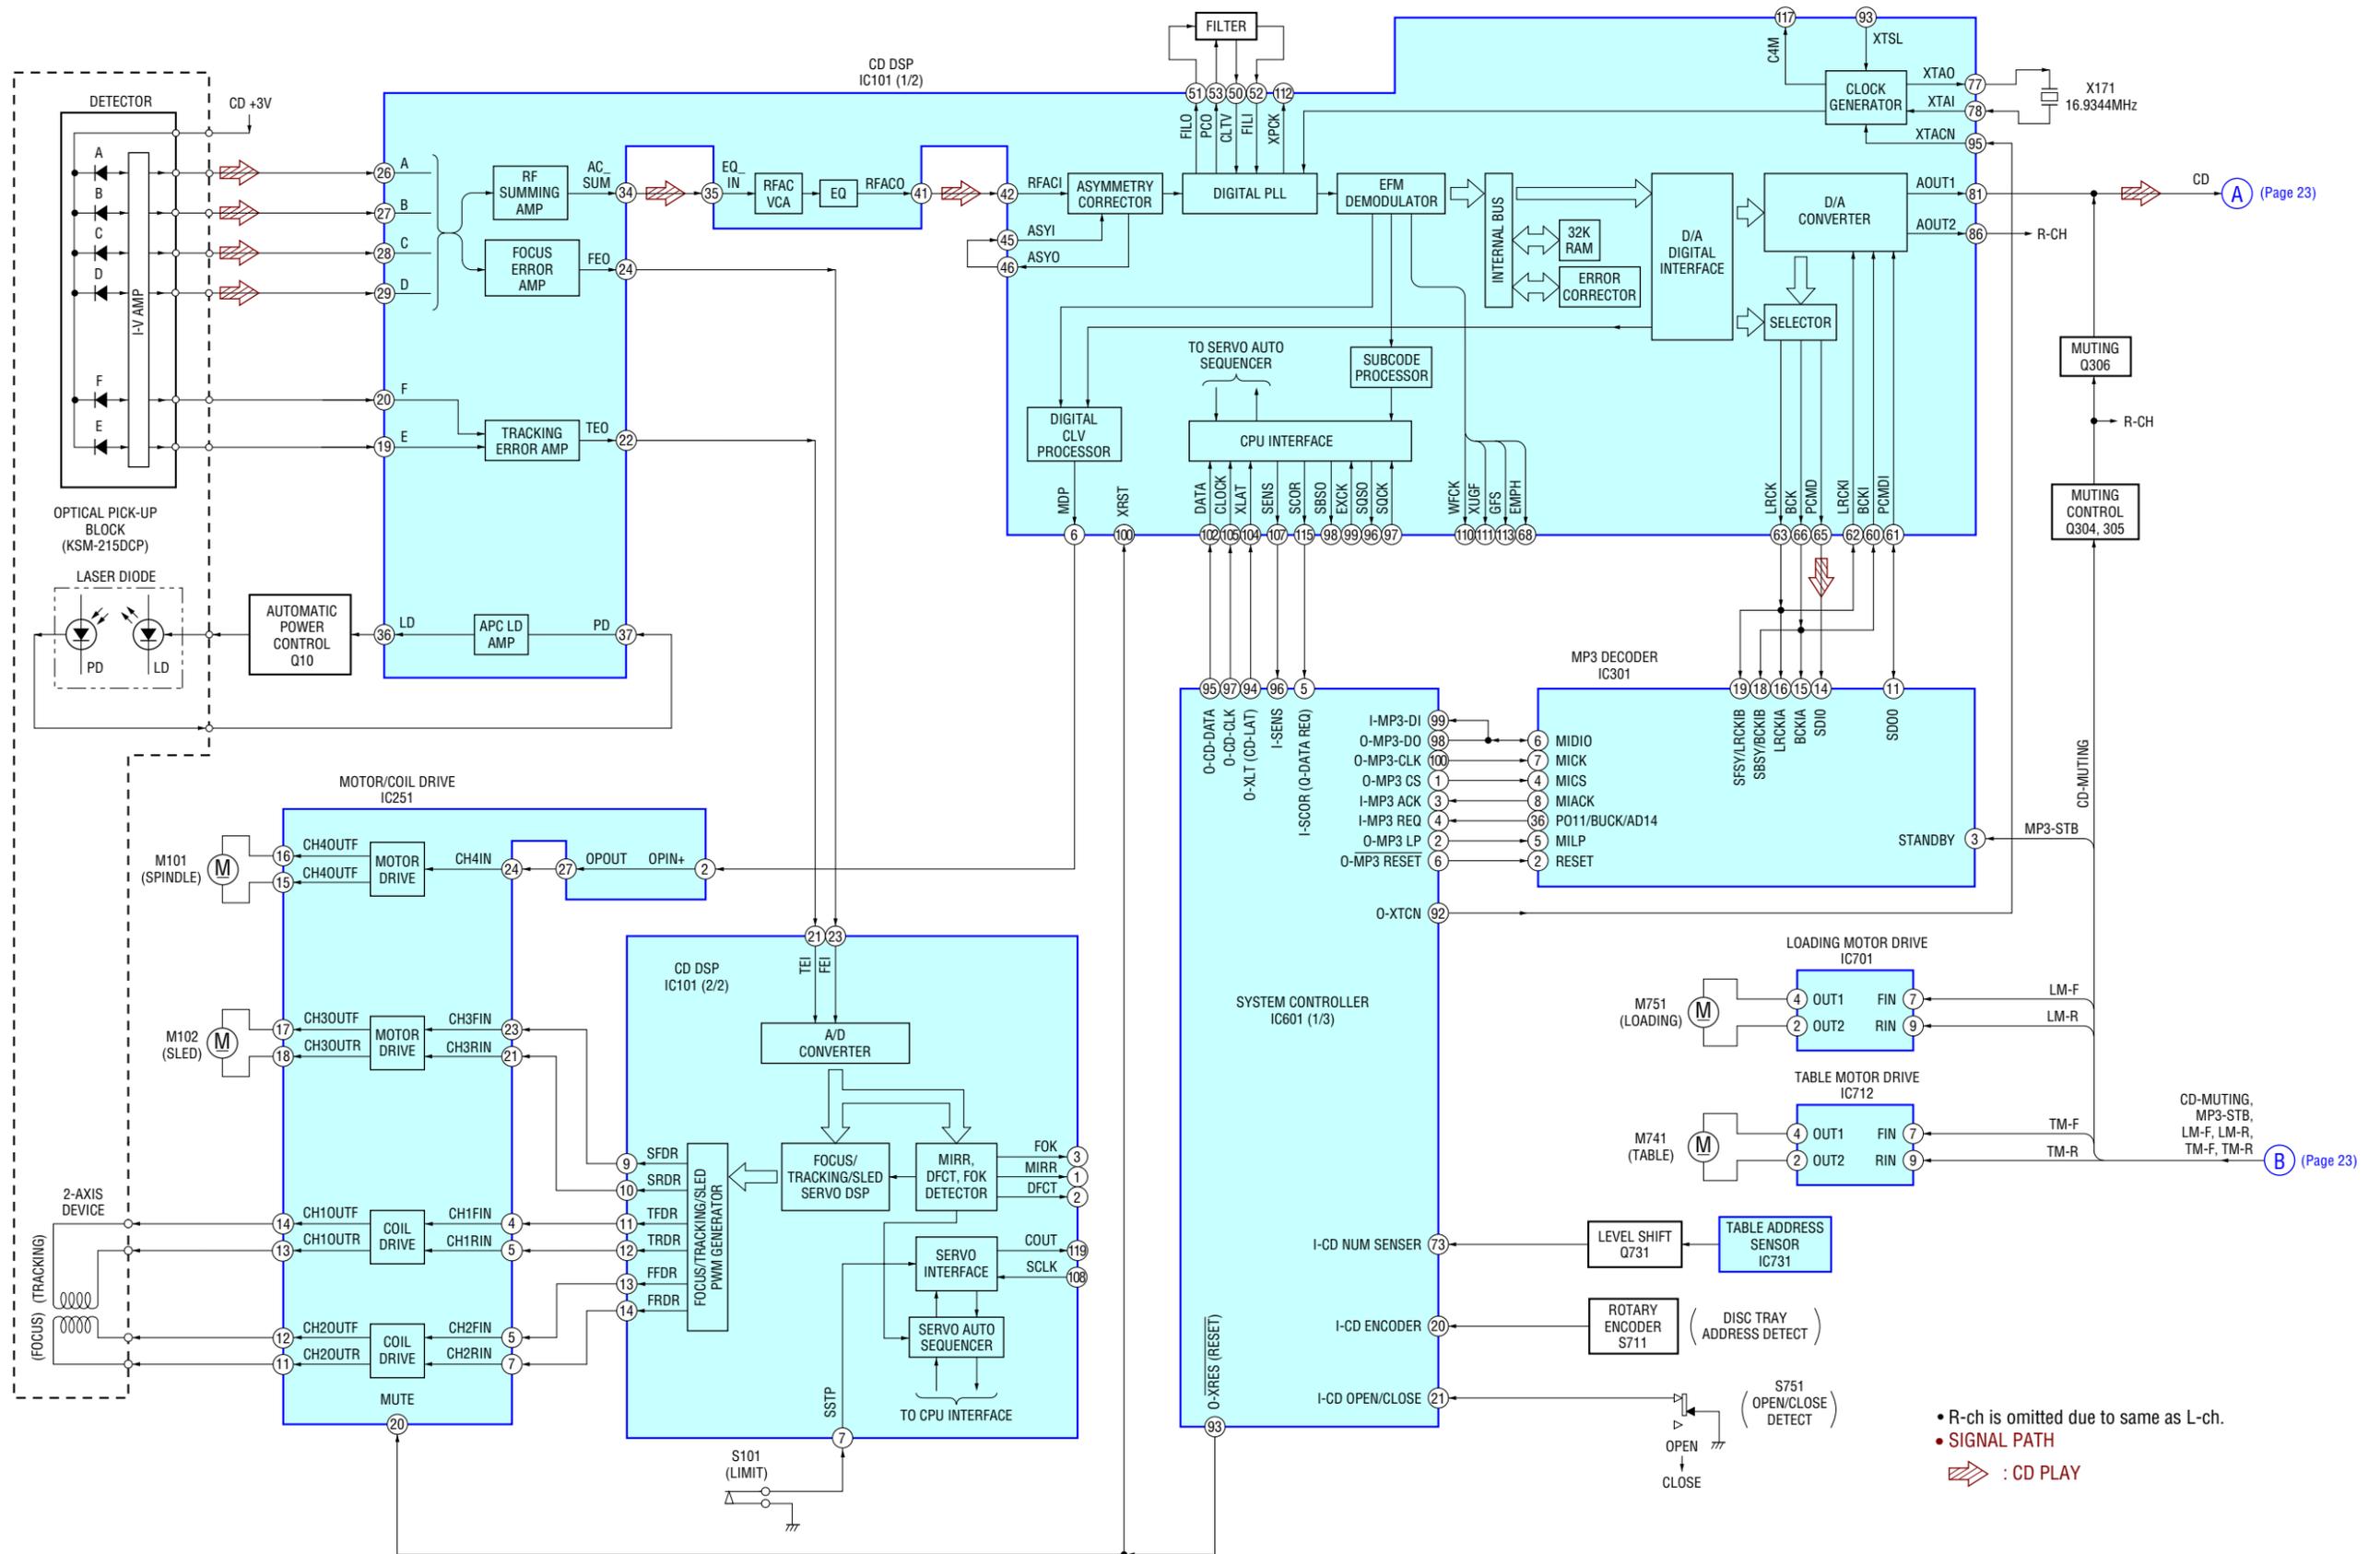

6-2. BLOCK DIAGRAM – MAIN Section –

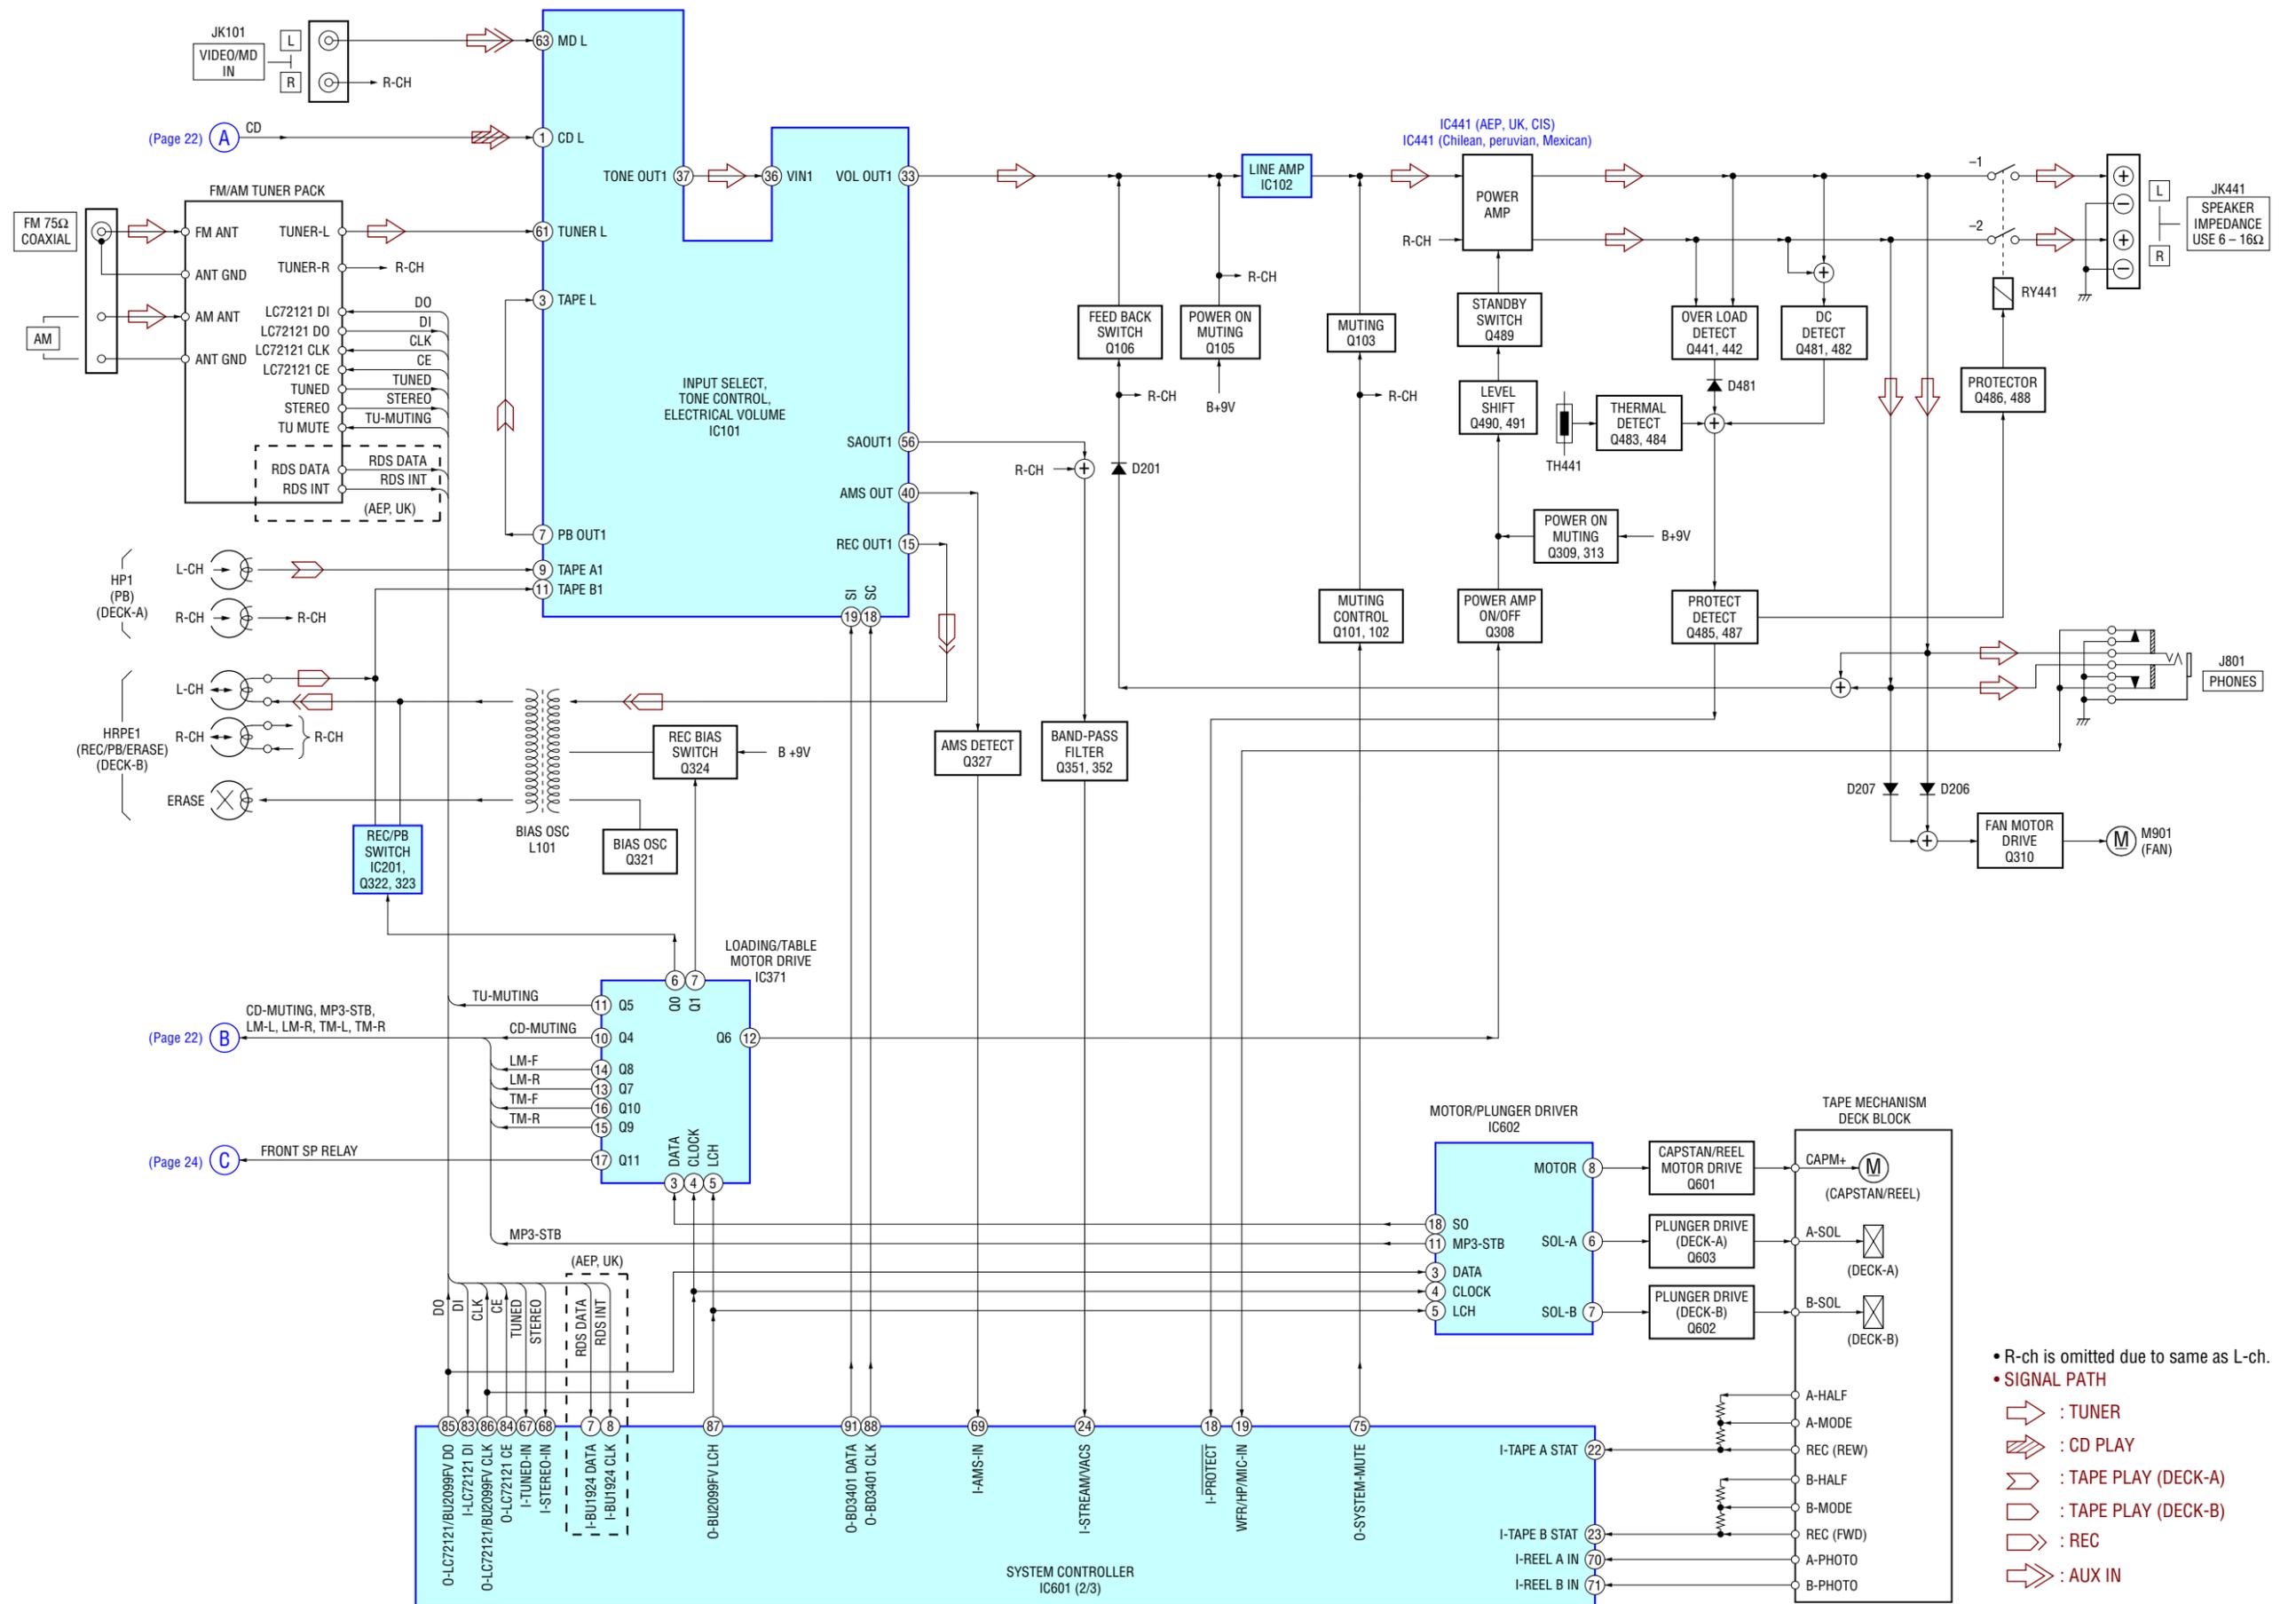

6-3. BLOCK DIAGRAM – PANEL/POWER SUPPLY Section –

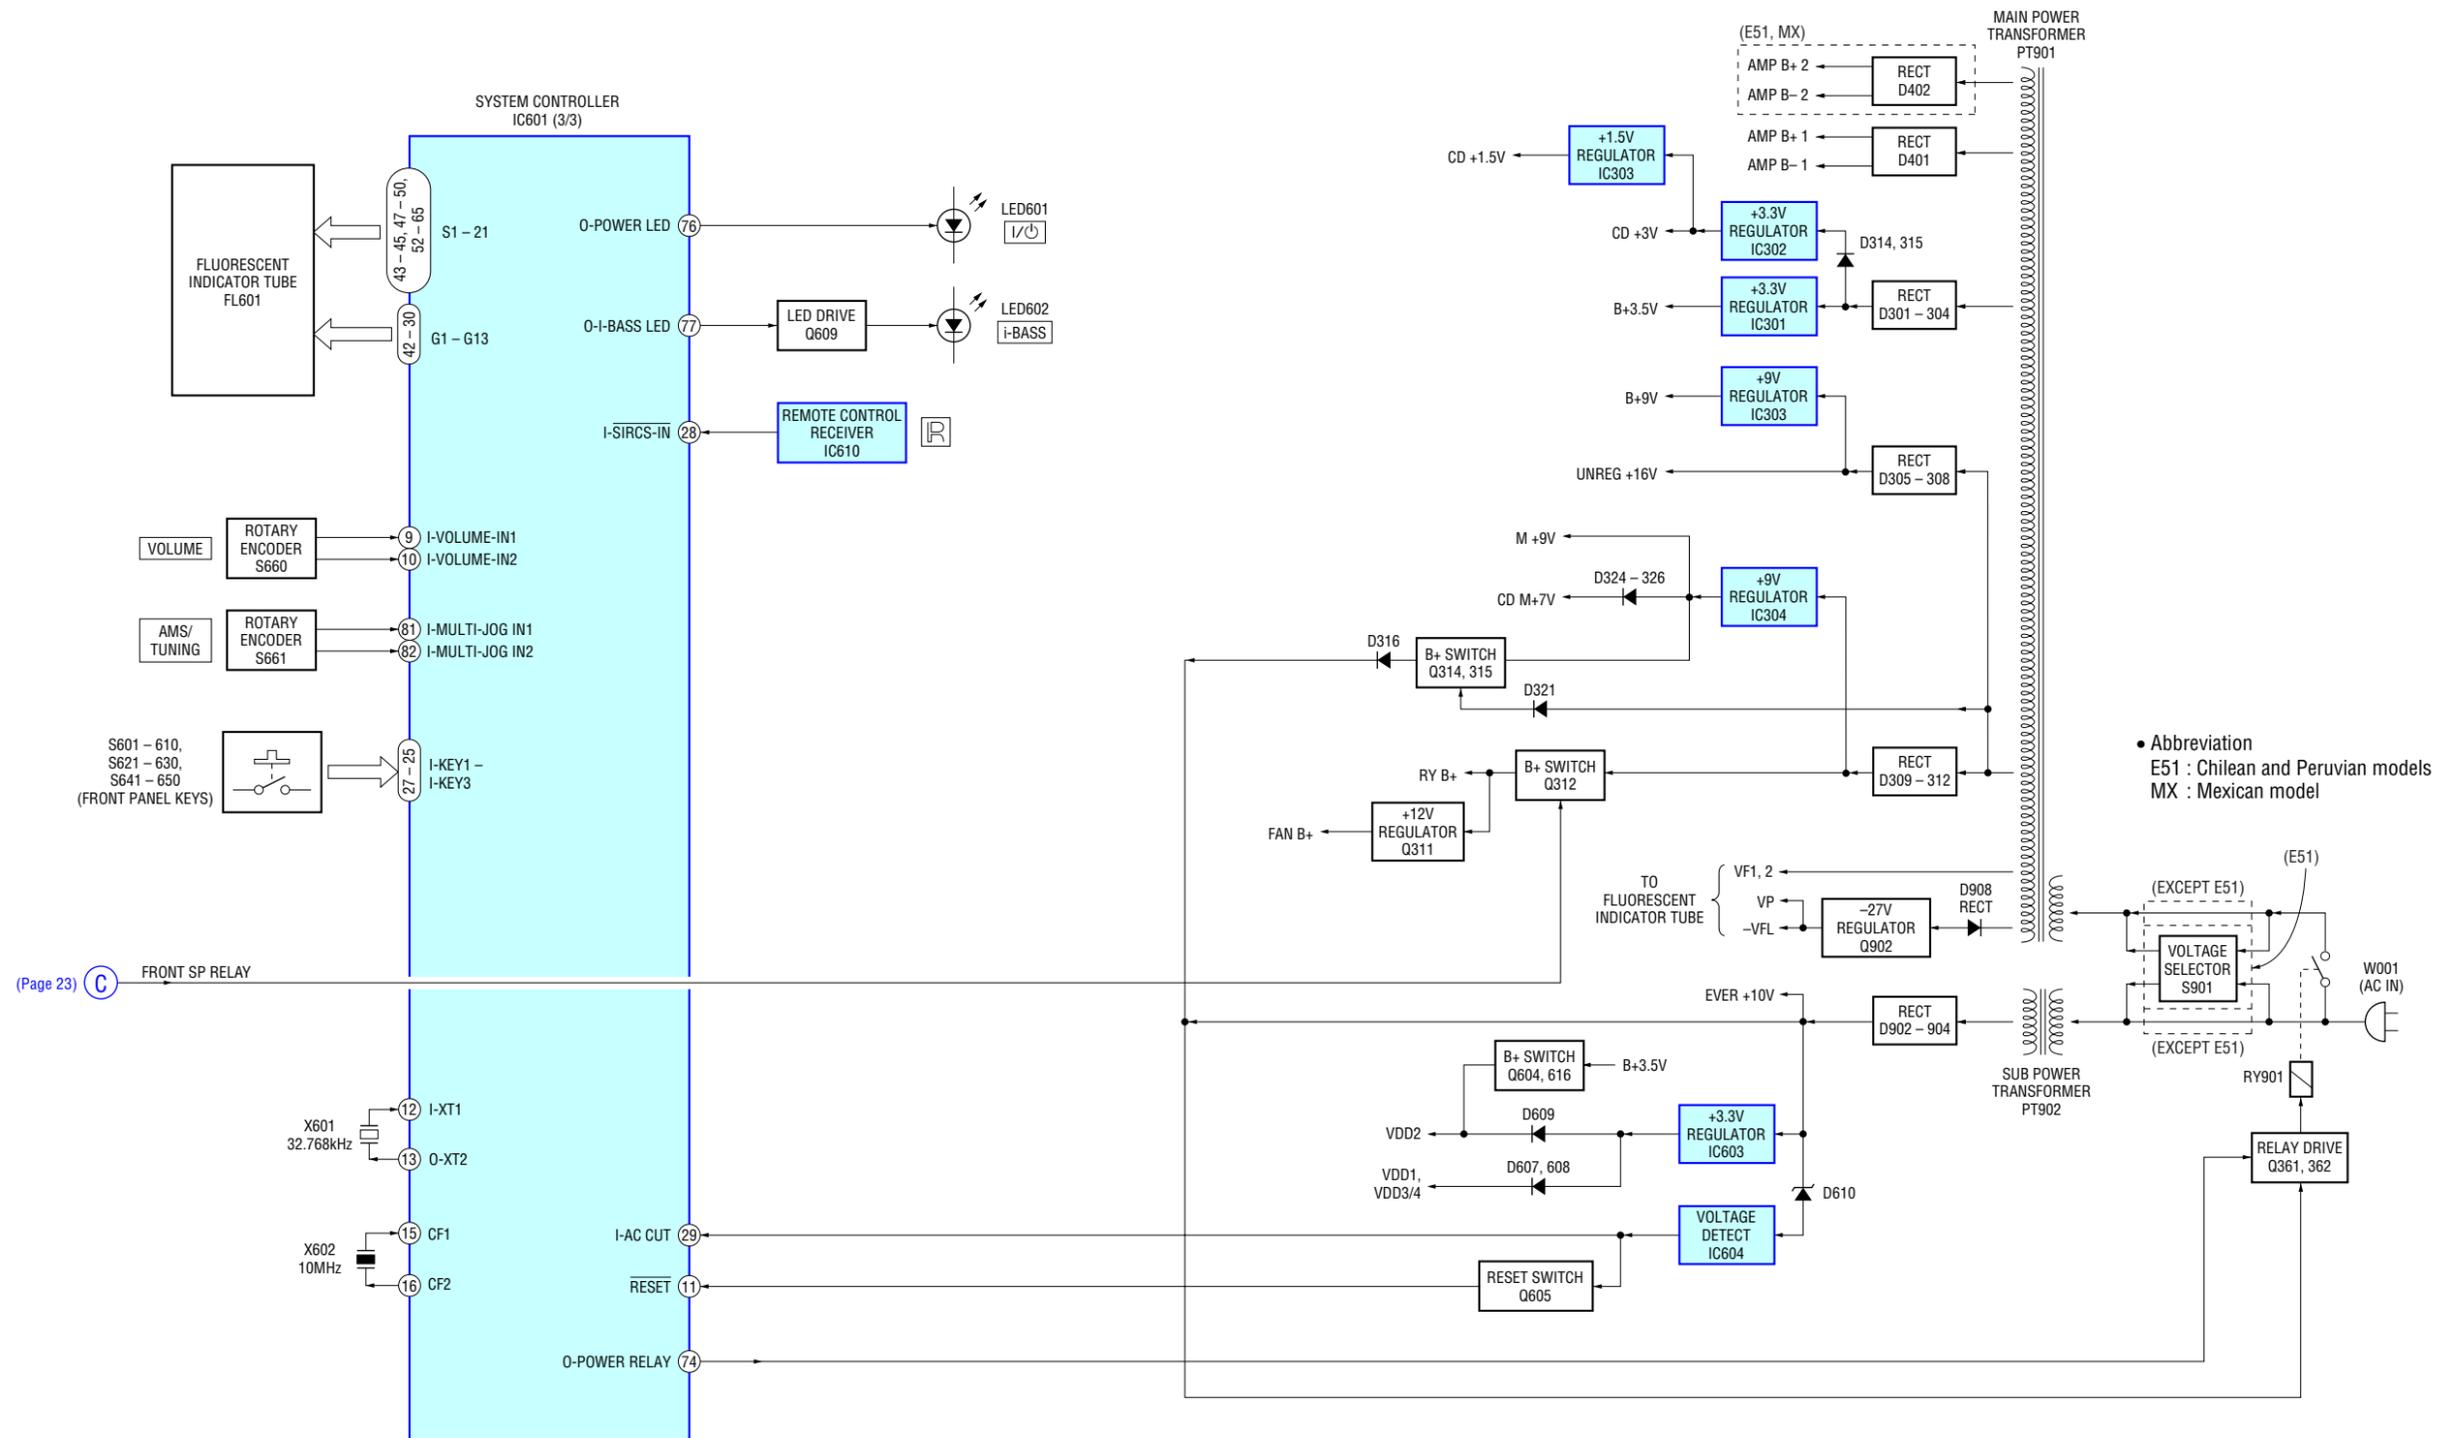



6-4. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note on Printed Wiring Board:

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:
 Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.
 Parts face side: Parts on the parts face side seen from (Component Side) the parts face are indicated.

• Indication of transistor.

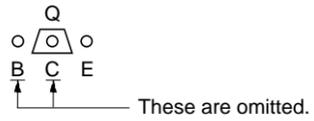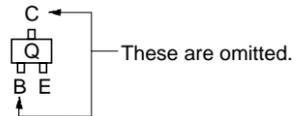



Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}W$ or less unless otherwise specified.
- Δ : internal component.
- \square : nonflammable resistor.
- \square : fusible resistor.
- \square : panel designation.


Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- : B+ Line.
- - - : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
 - BD Section -
 - no mark : CD PLAY
 - Other Sections -
 - no mark : FM
 - () : TAPE PLAY
 - << >> : TAPE REC
 - [] : CD PLAY
 - * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - \Rightarrow : TUNER (FM/AM)
 - \Rightarrow : TAPE PLAY (DECK A)
 - \Rightarrow : TAPE PLAY (DECK B)
 - \Rightarrow : REC
 - \Rightarrow : CD PLAY
 - \Rightarrow : AUX IN
- Abbreviation
 - E51 : Chilean and Peruvian models
 - MX : Mexican model


• Circuit Boards Location

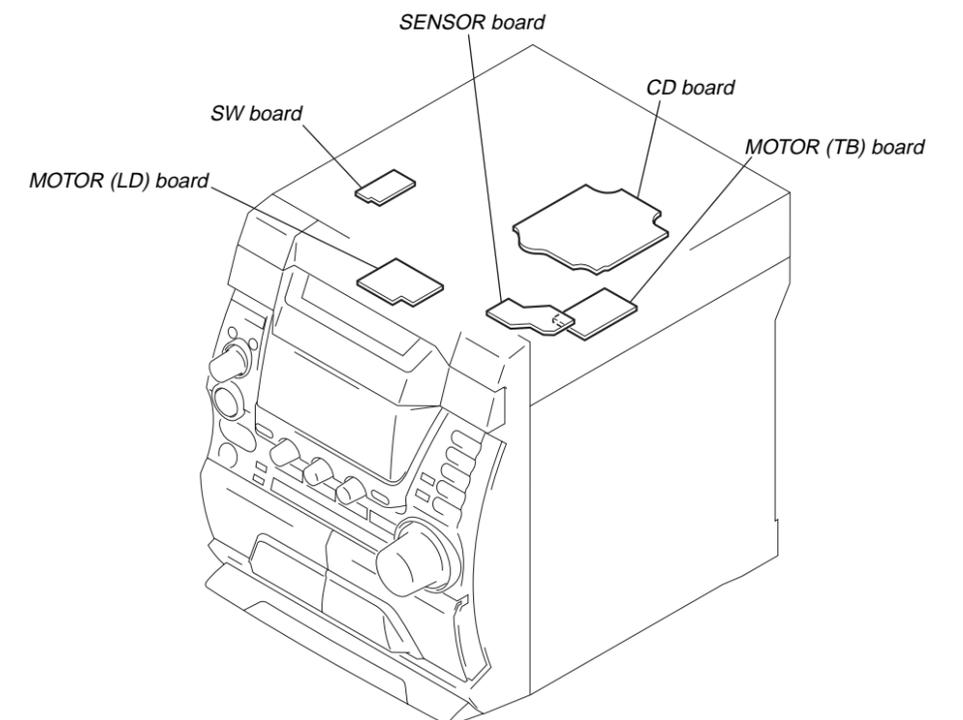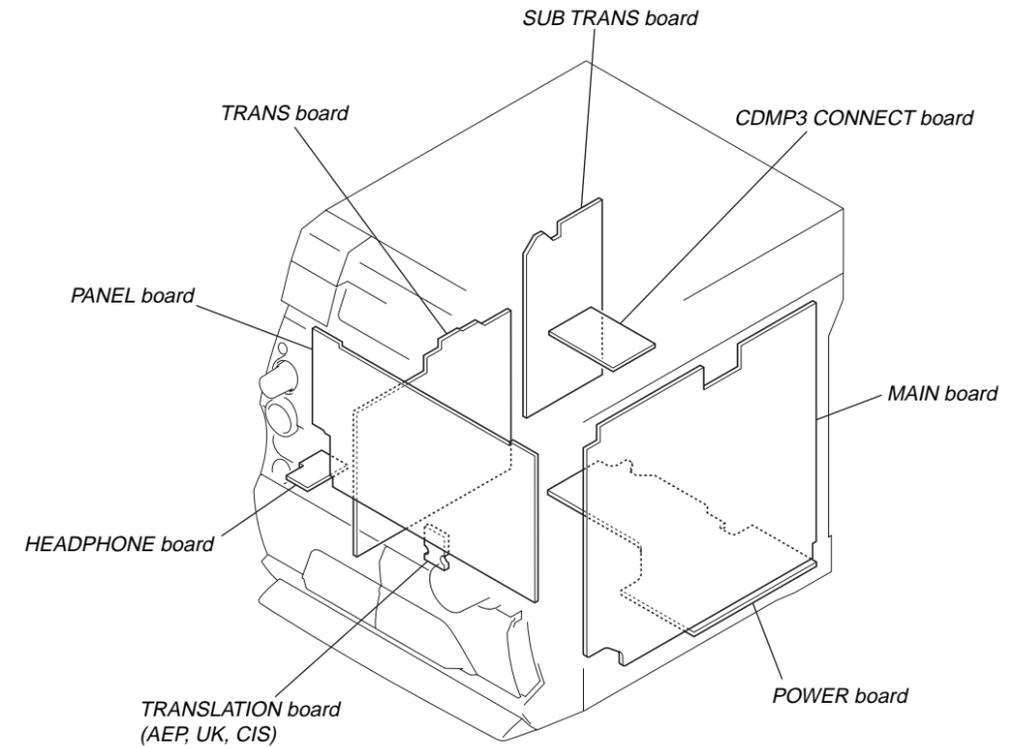

6-5. PRINTED WIRING BOARD – CD Board – • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

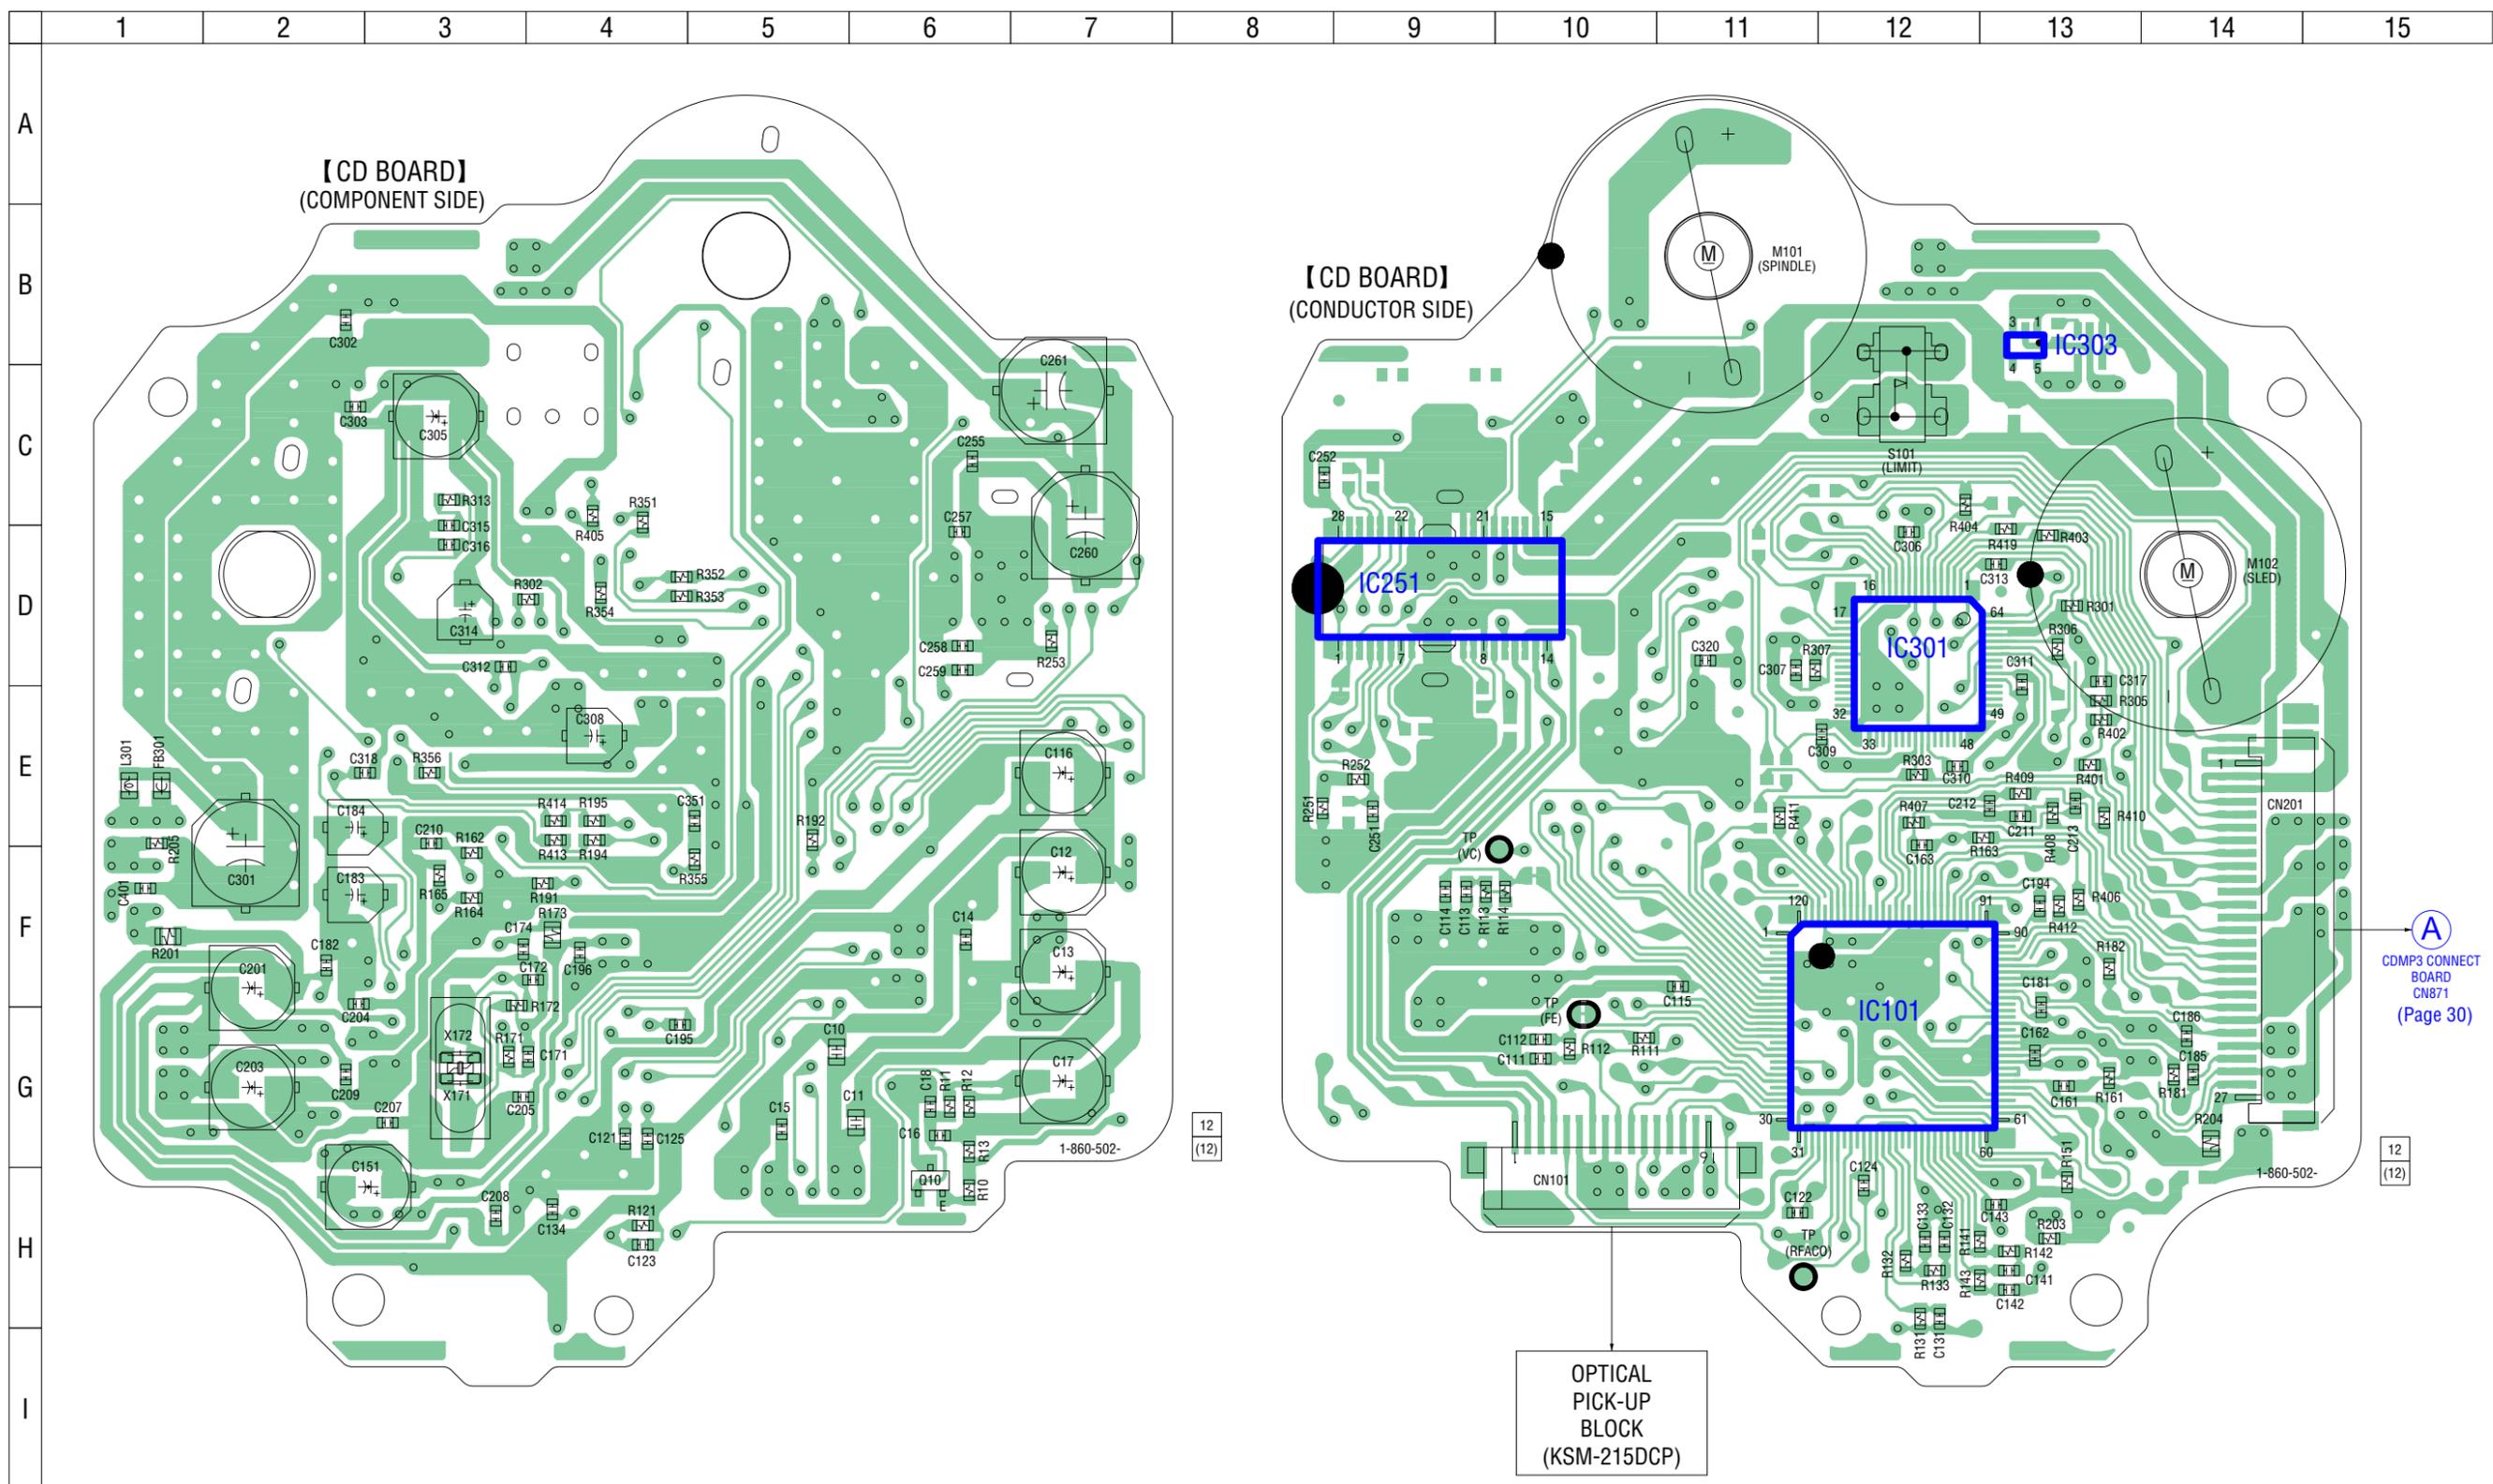


6-6. SCHEMATIC DIAGRAM – CD Board – • See page 48 for IC Block Diagrams. • See page 48 for Waveforms.

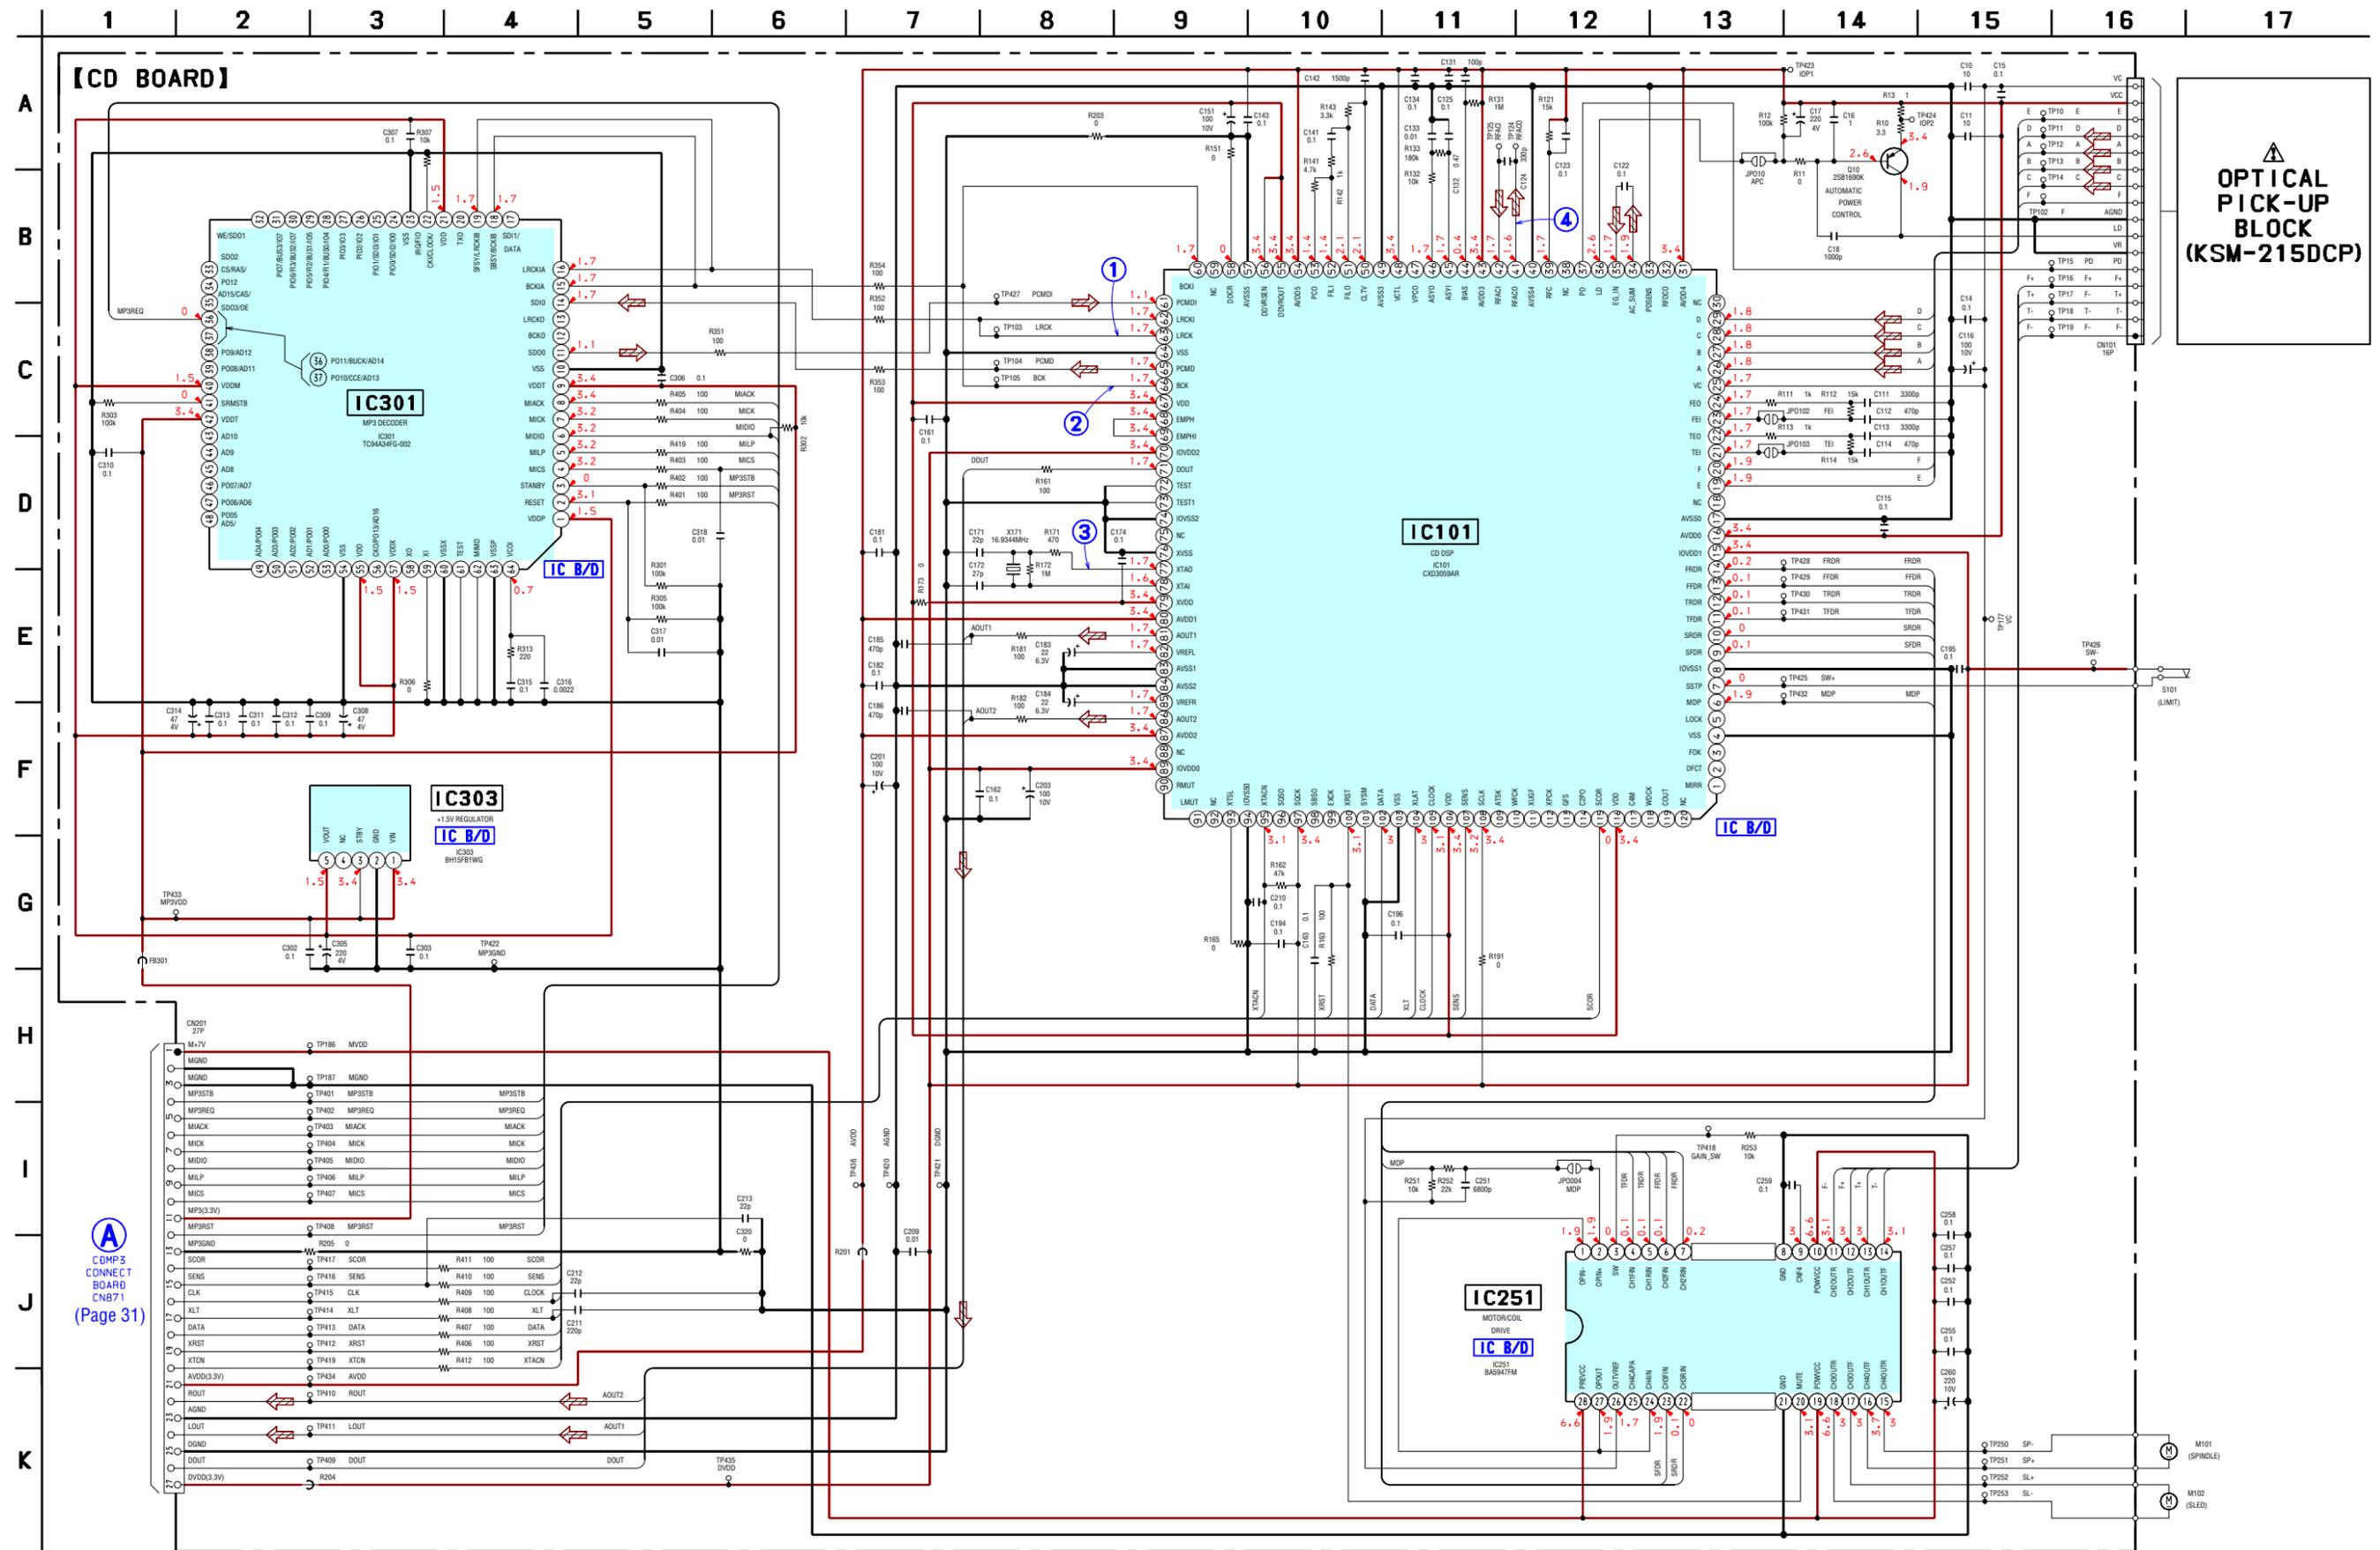


A
CMP3
CONNECT
BOARD
CN871
(Page 31)

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

6-7. PRINTED WIRING BOARDS – CHANGER Section – • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

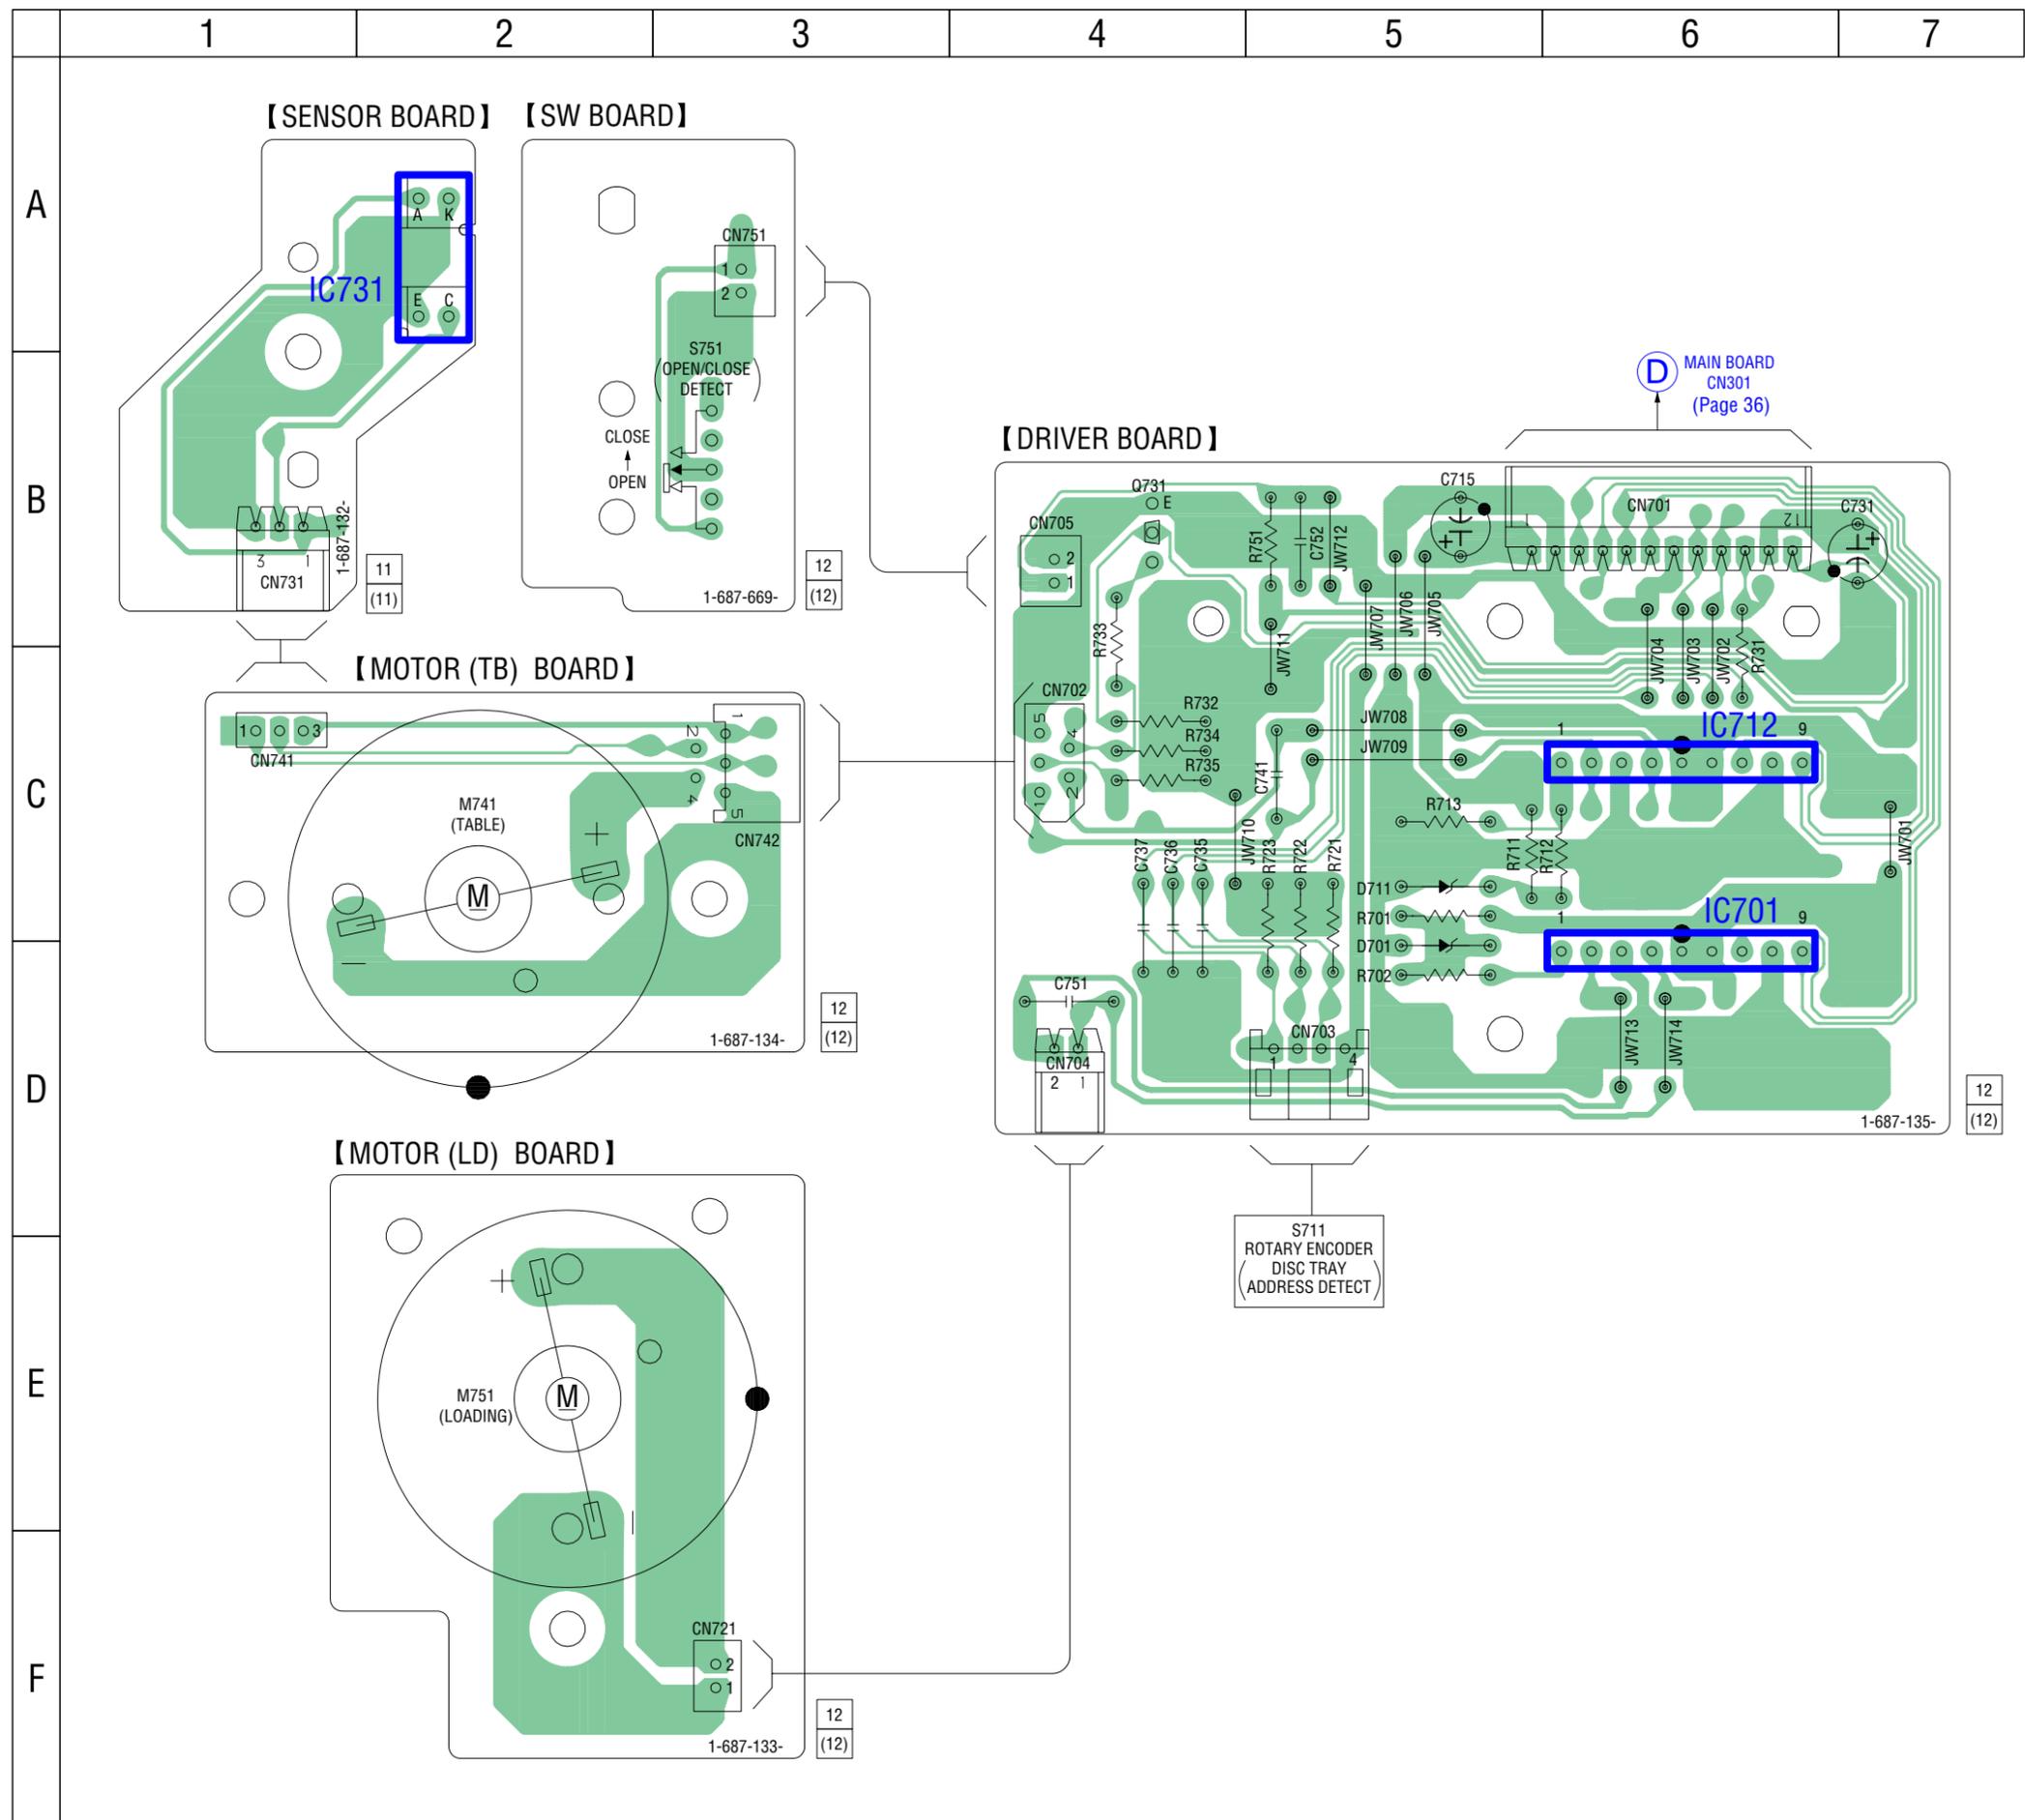


6-8. SCHEMATIC DIAGRAM – CHANGER Section – • See page 48 for IC Block Diagram.

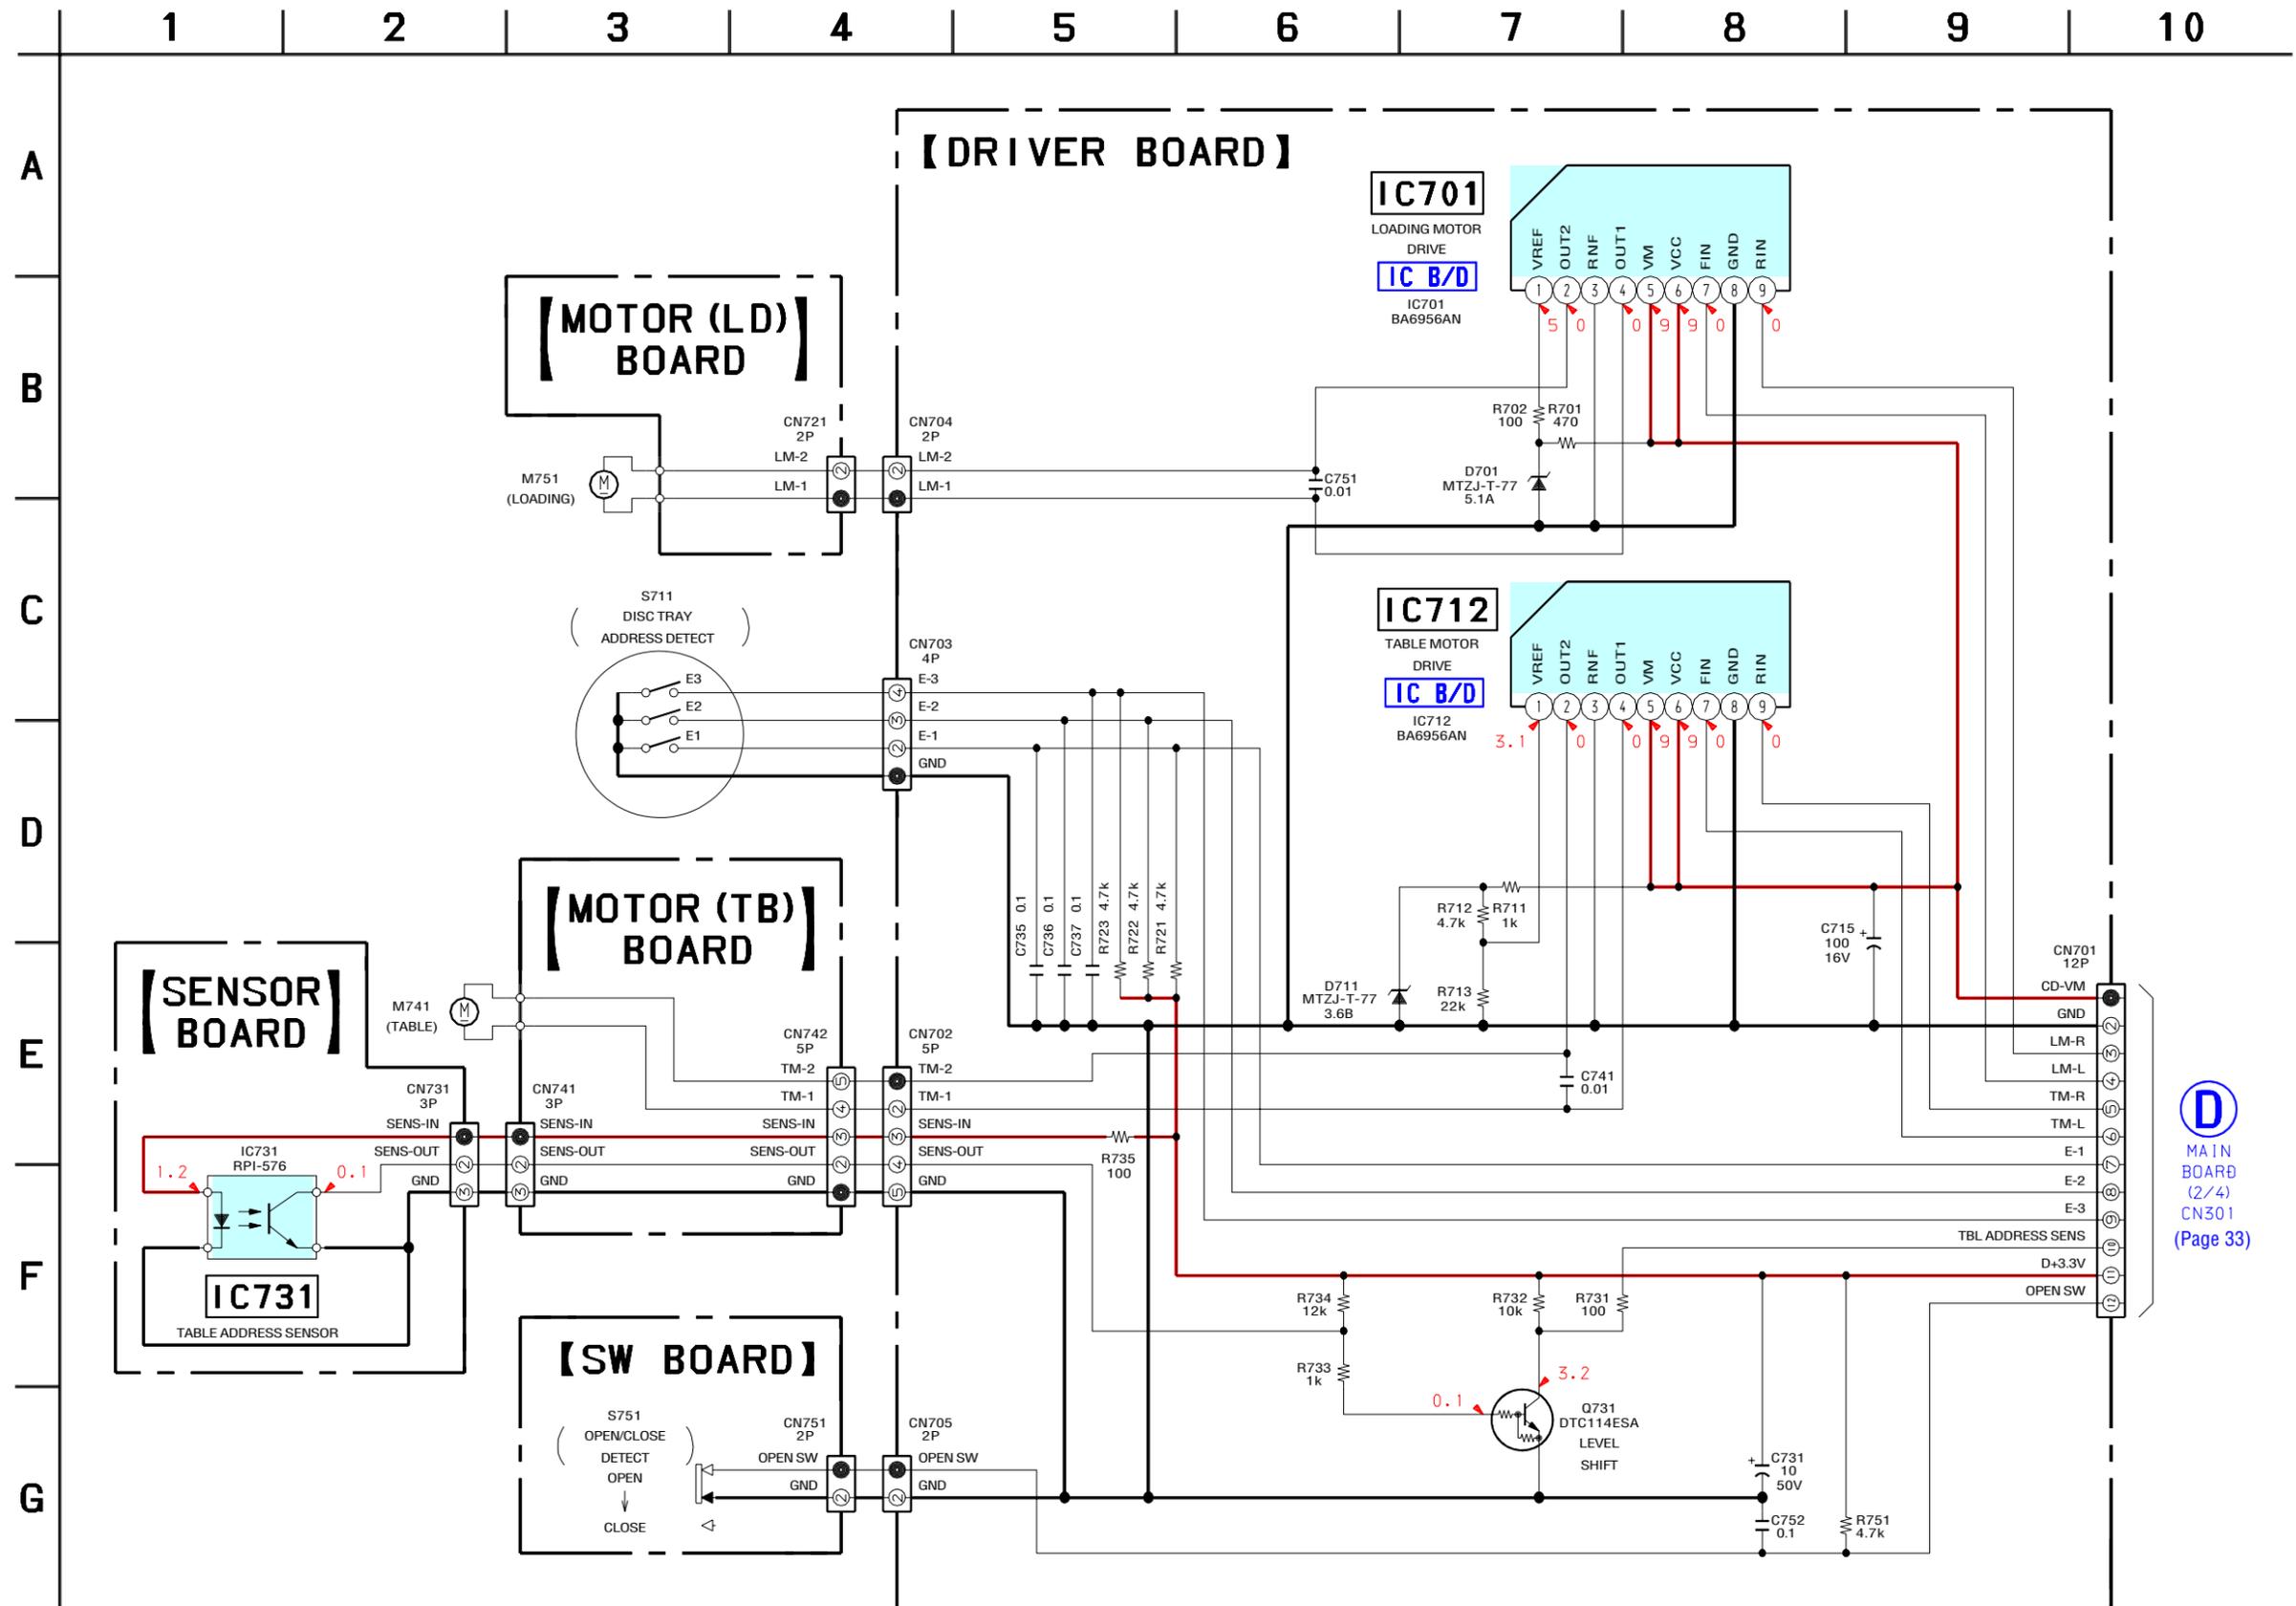


6-9. PRINTED WIRING BOARDS – CDMP3 CONNECT/TRANSLATION Boards – • See page 25 for Circuit Boards Location.


 :Uses unleaded solder.

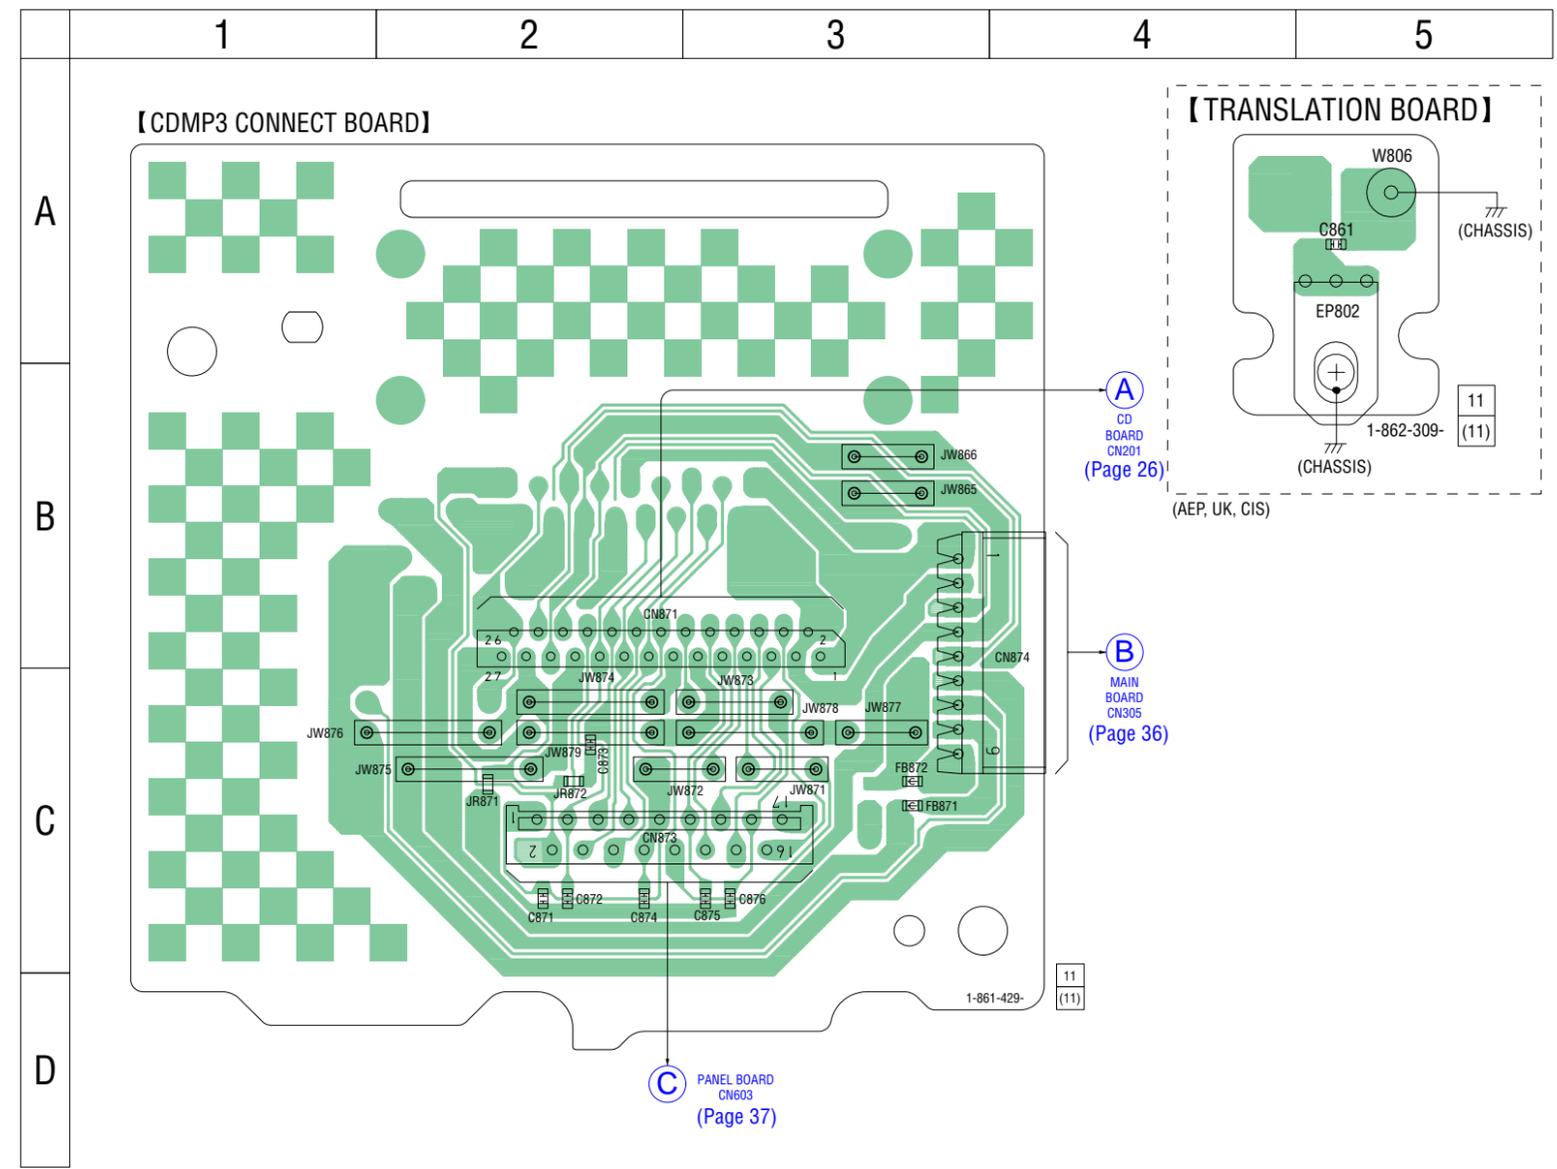


6-10. SCHEMATIC DIAGRAM – CDMP3 CONNECT/TRANSLATION Boards –

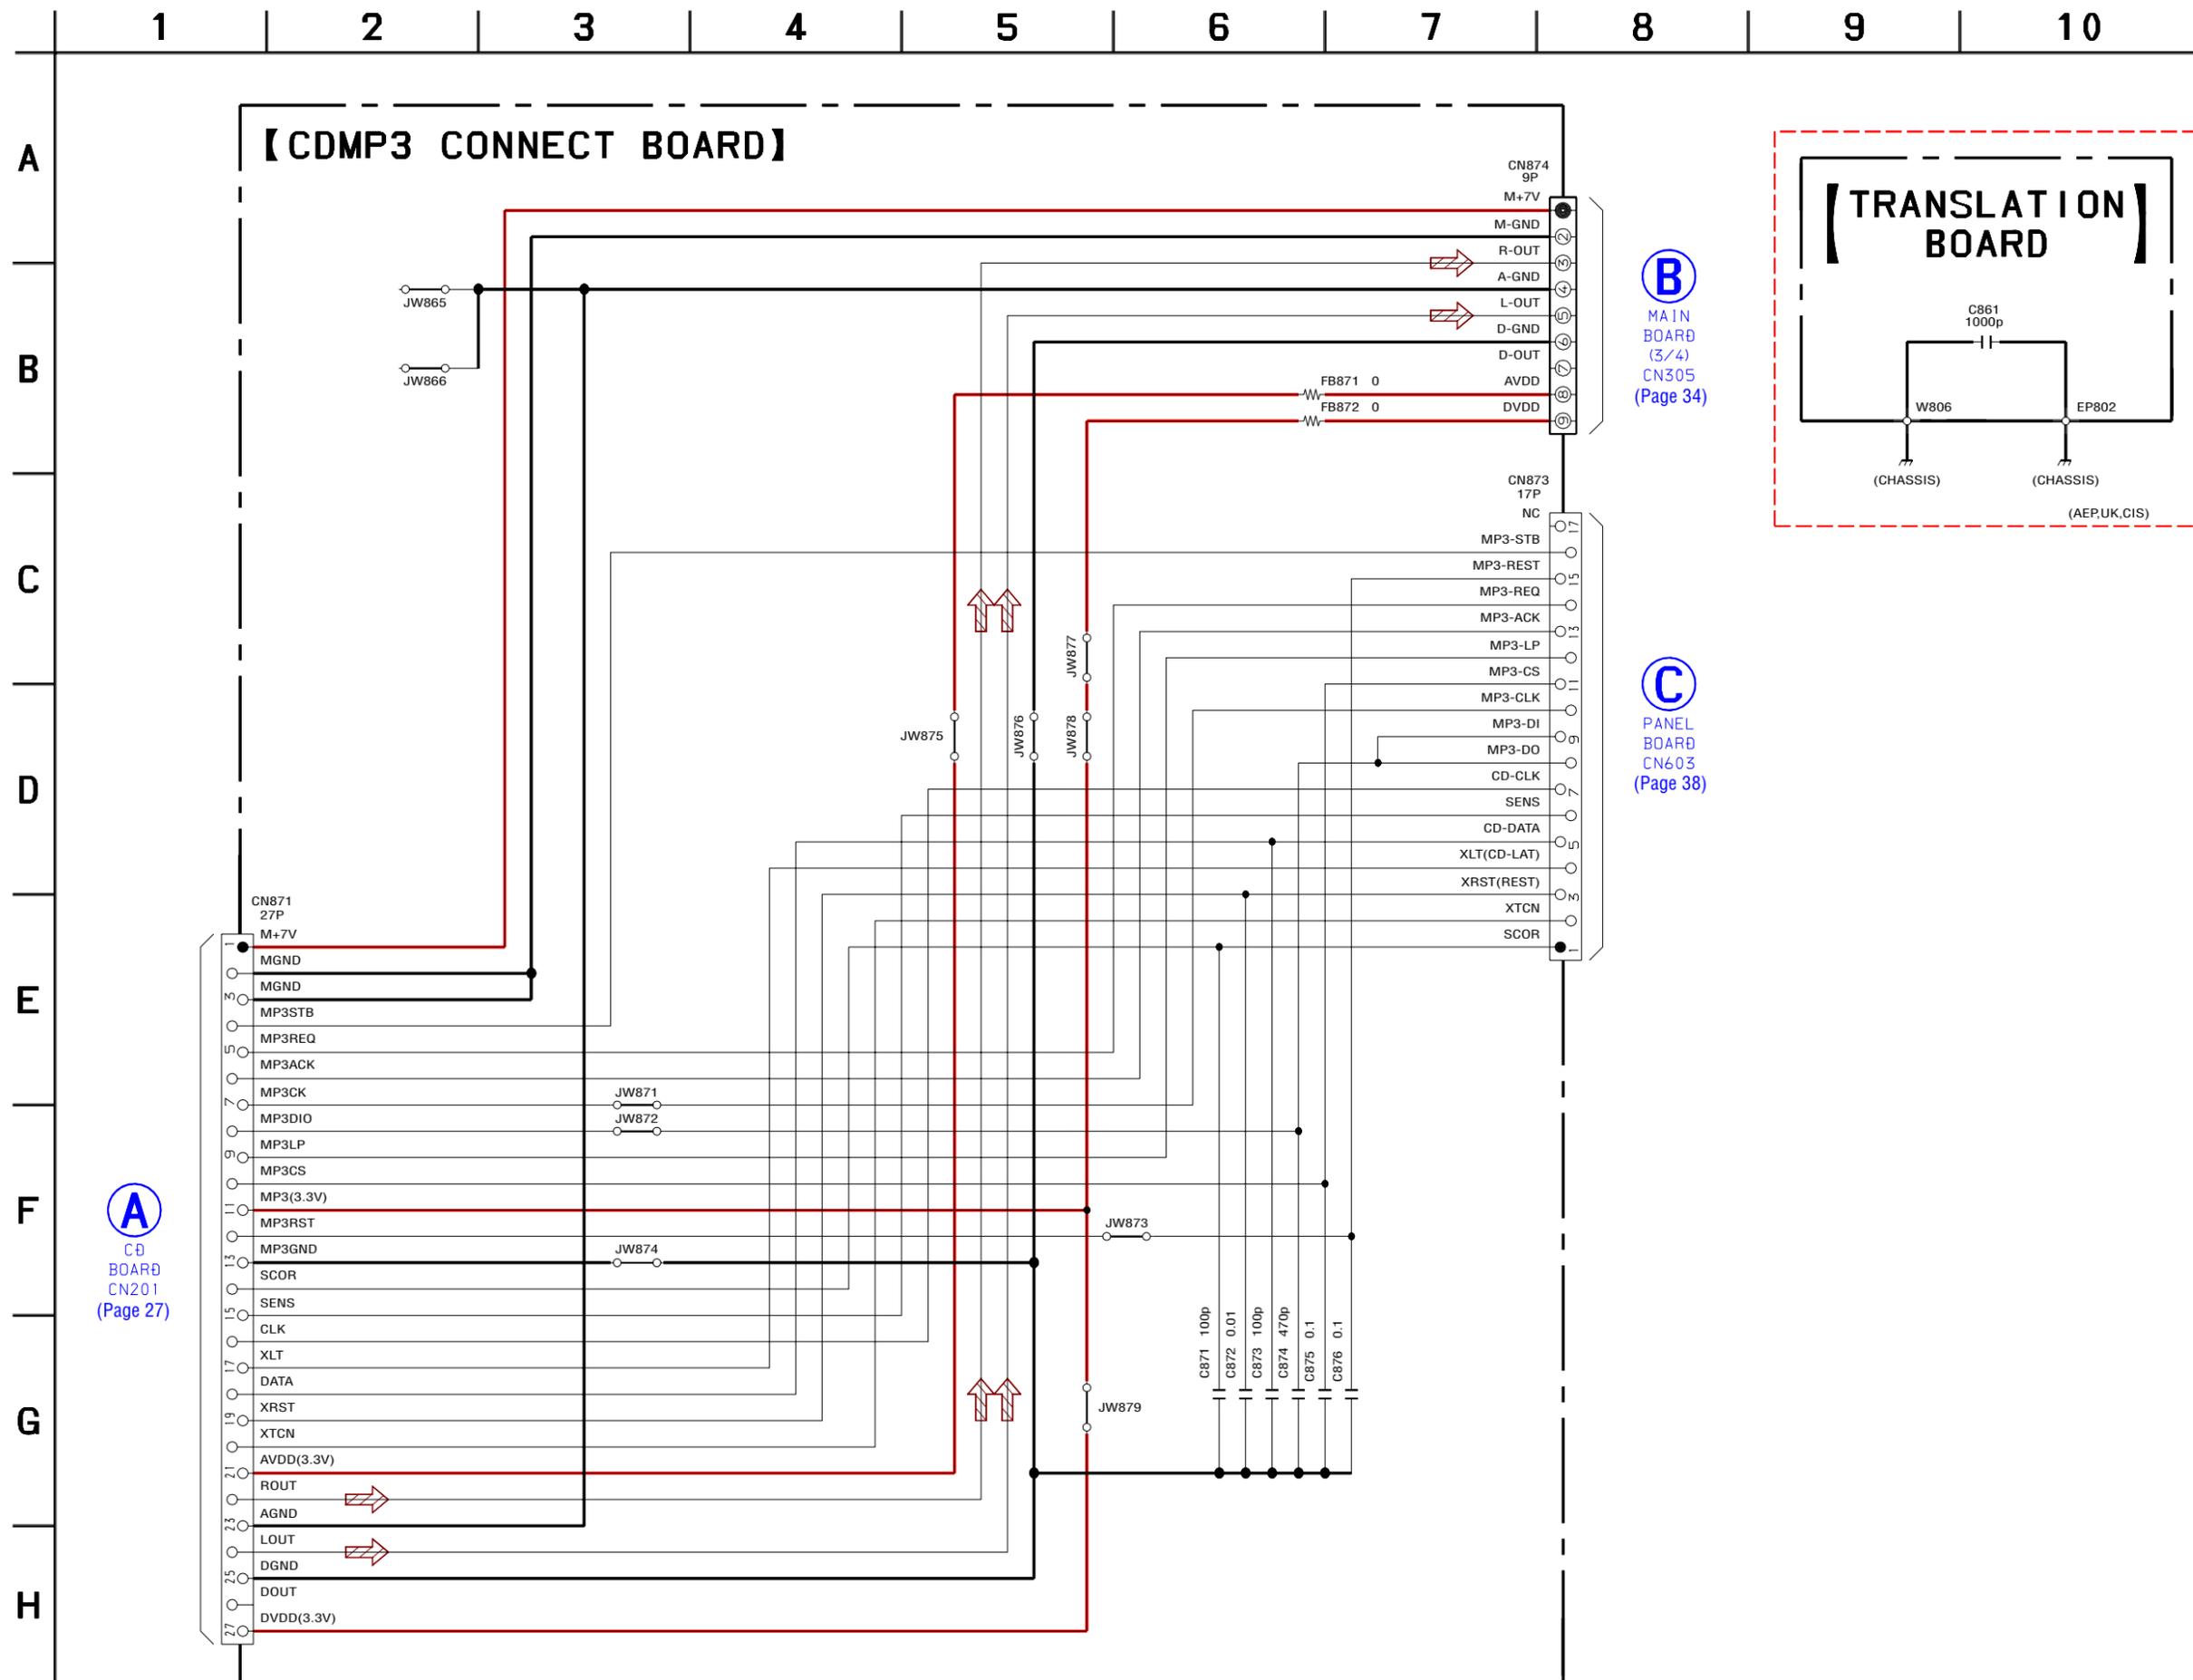


6-11. SCHEMATIC DIAGRAM – MAIN Section (1/4) – • See page 48 for IC Block Diagram.

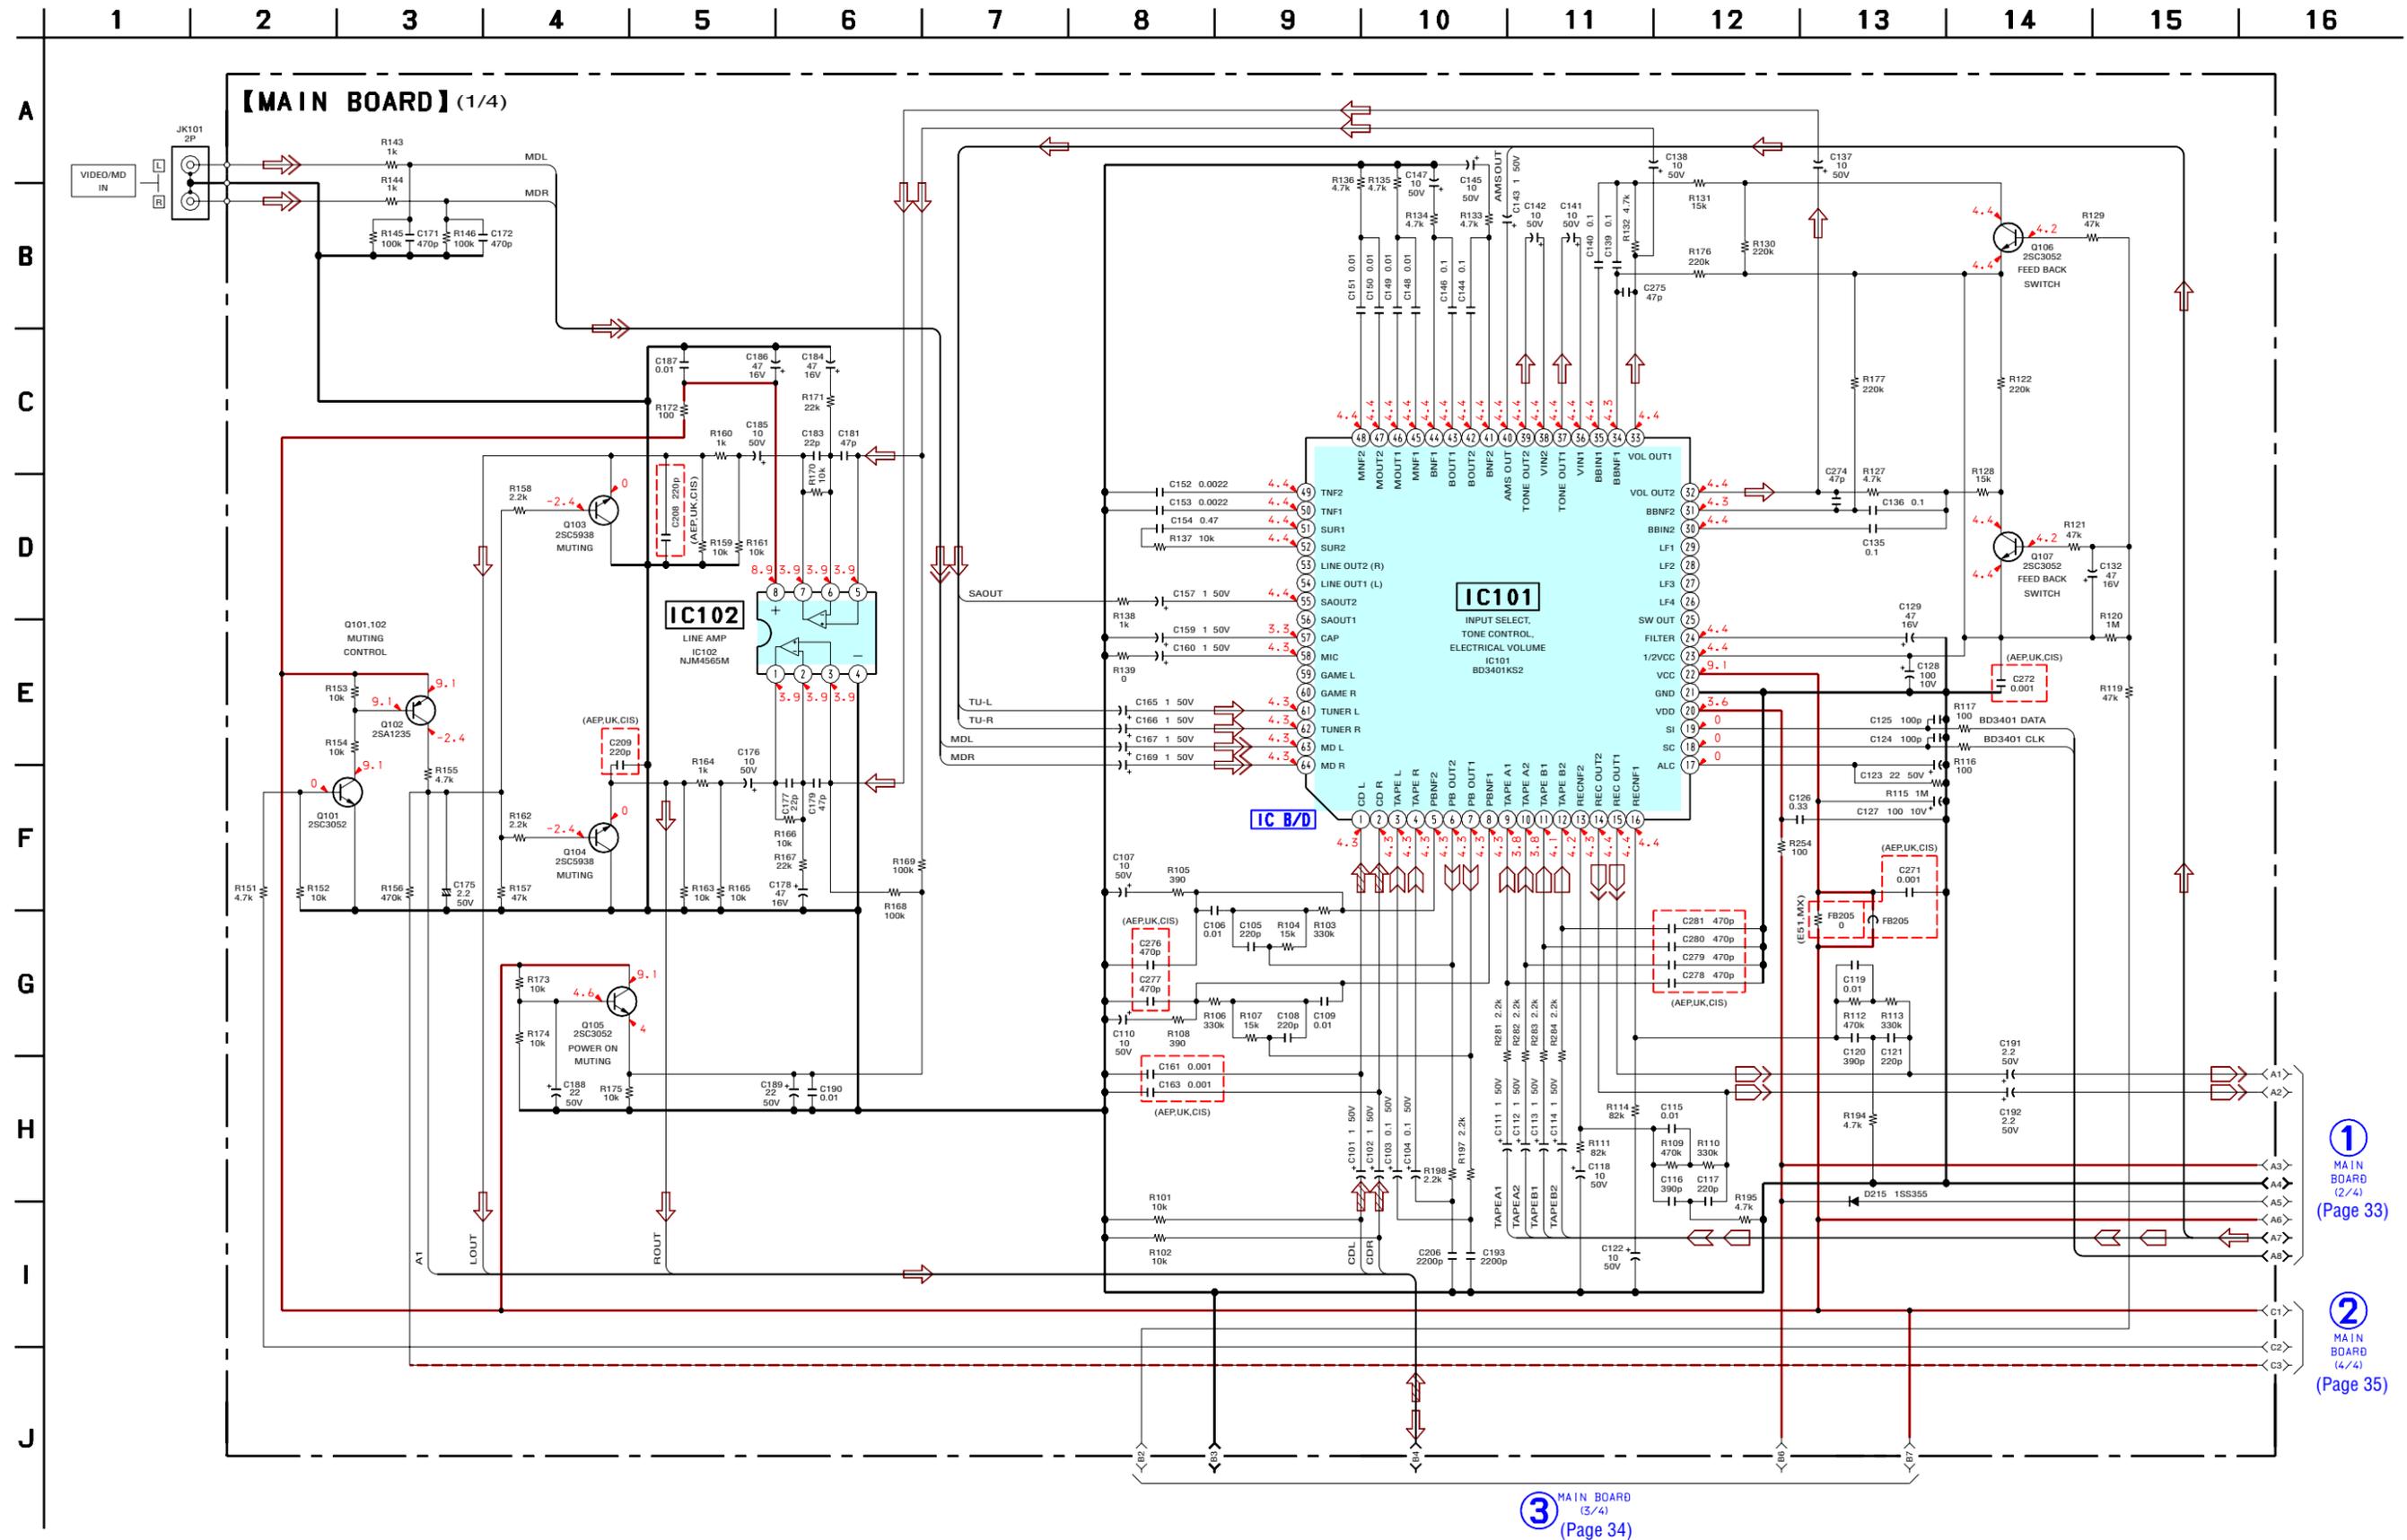

6-12. SCHEMATIC DIAGRAM – MAIN Section (2/4) – • See page 48 for IC Block Diagram. • See page 48 for Waveform.

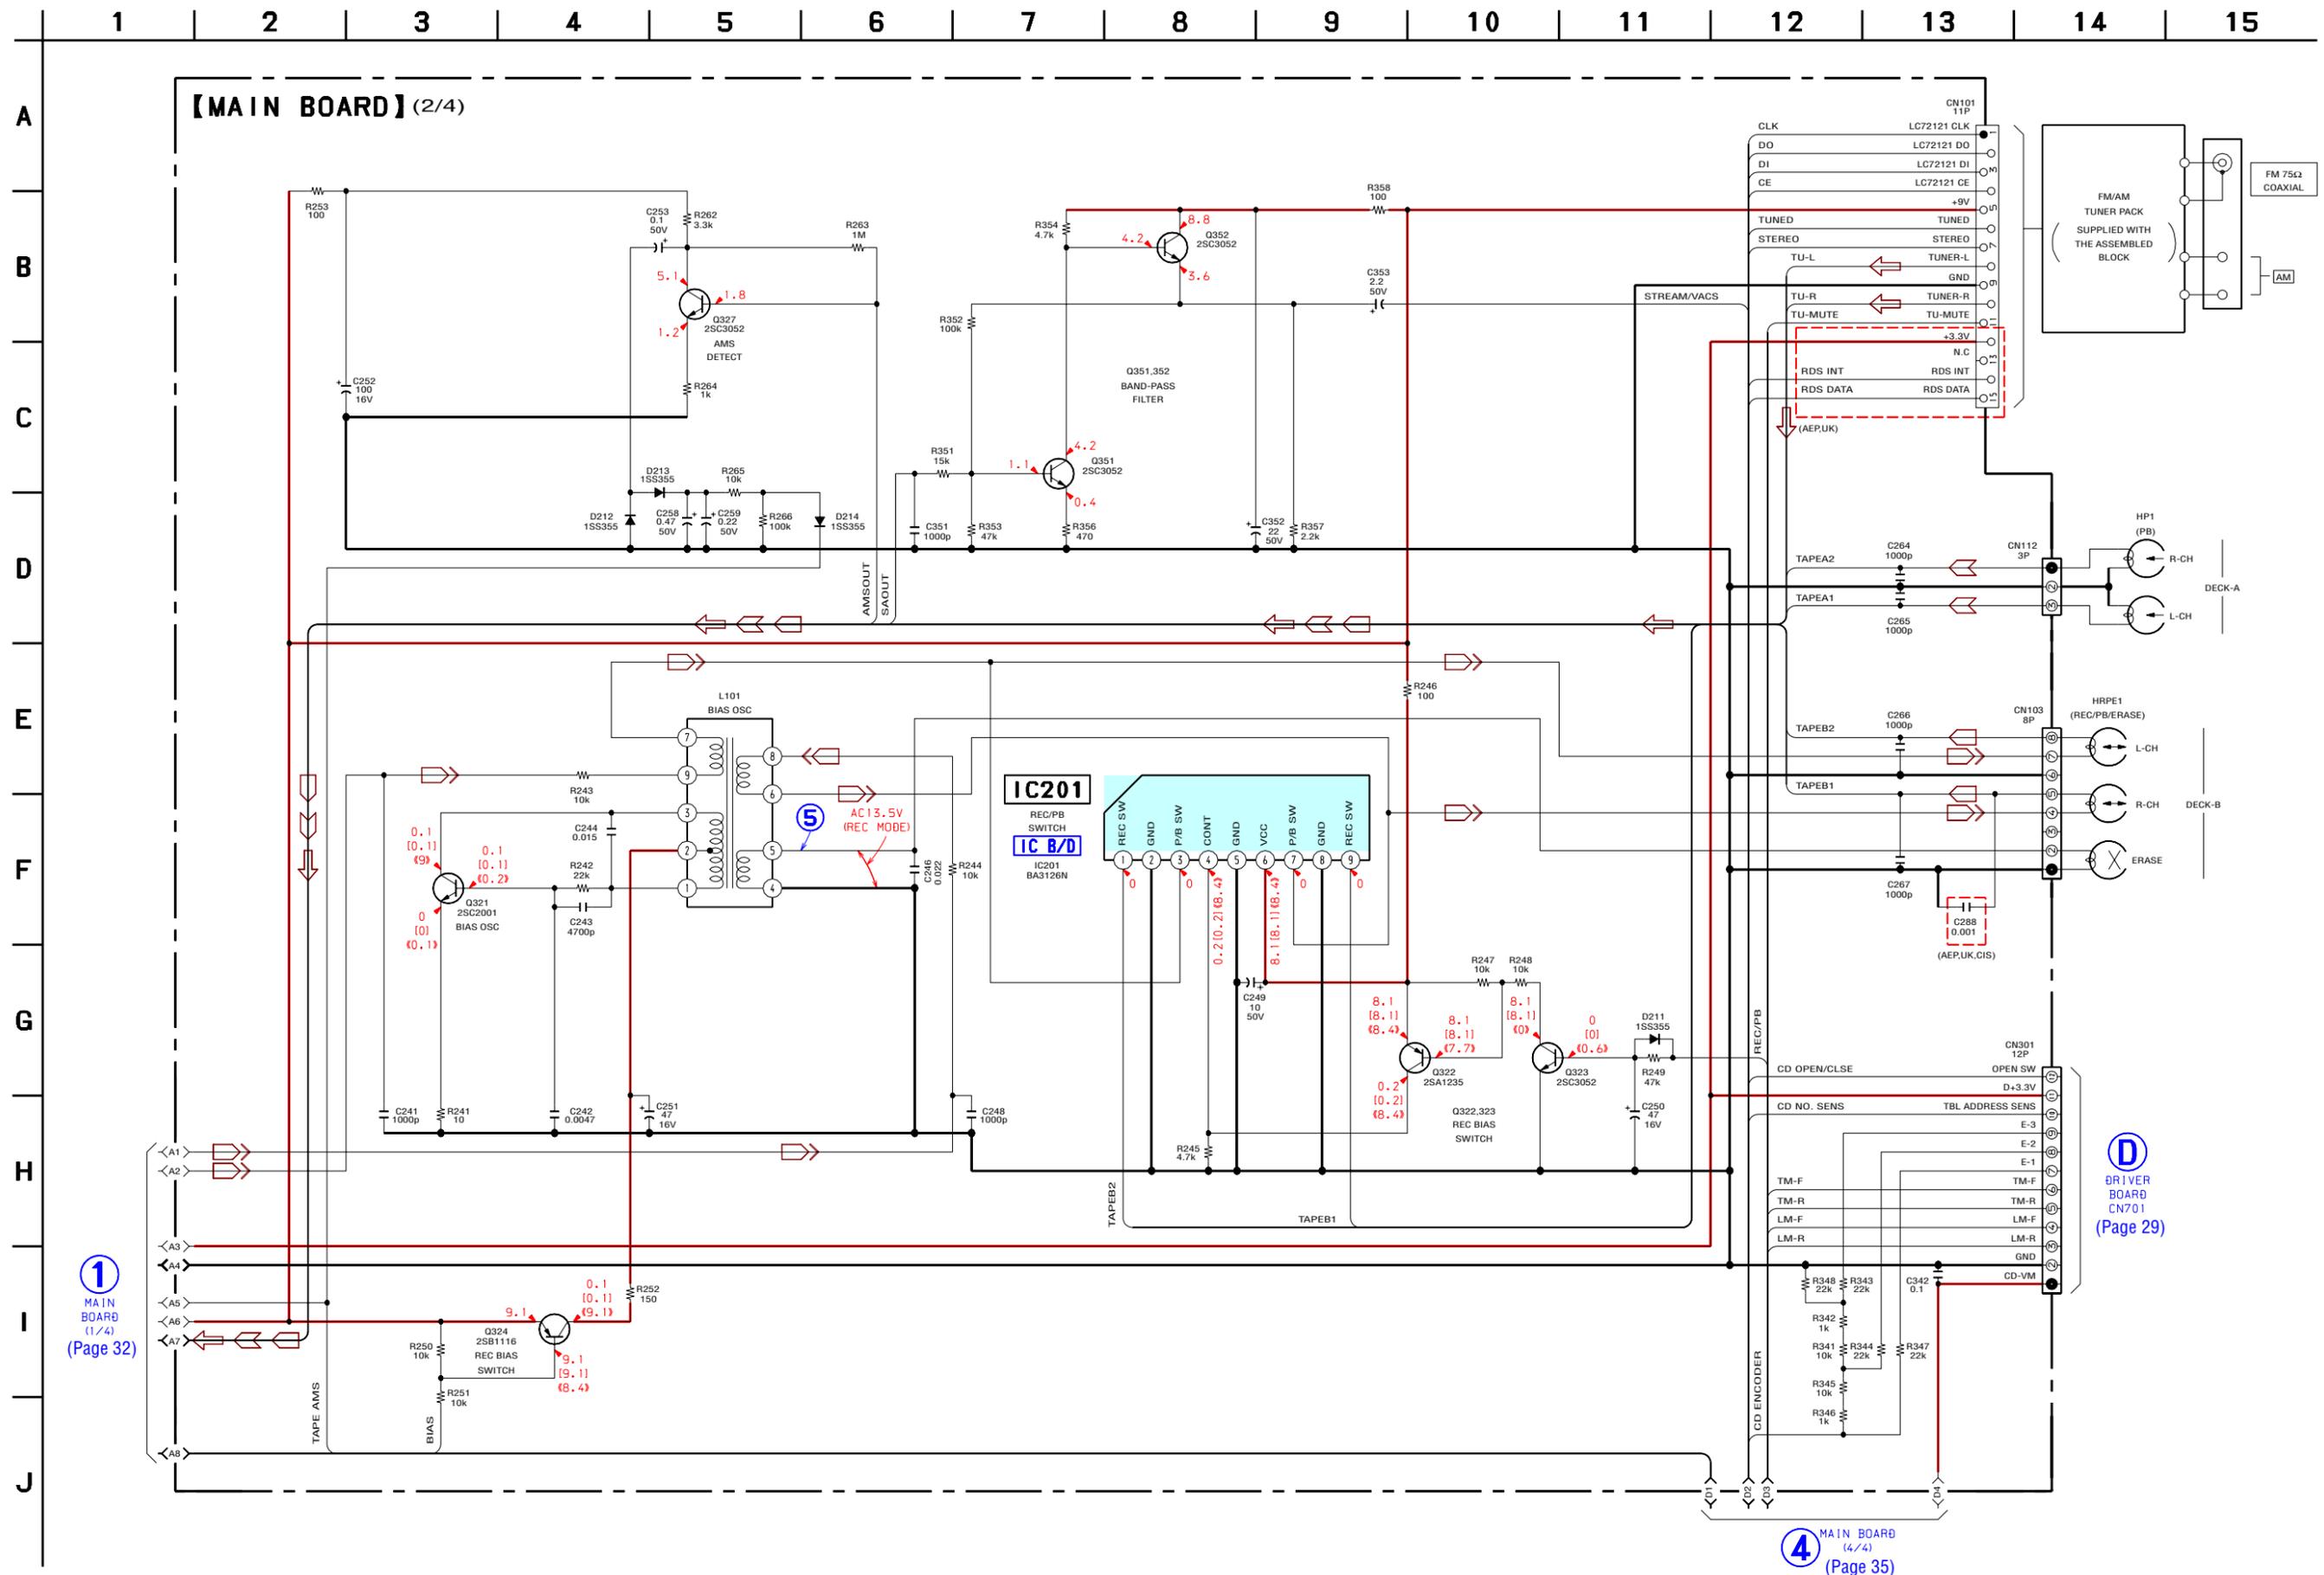

6-13. SCHEMATIC DIAGRAM – MAIN Section (3/4) –

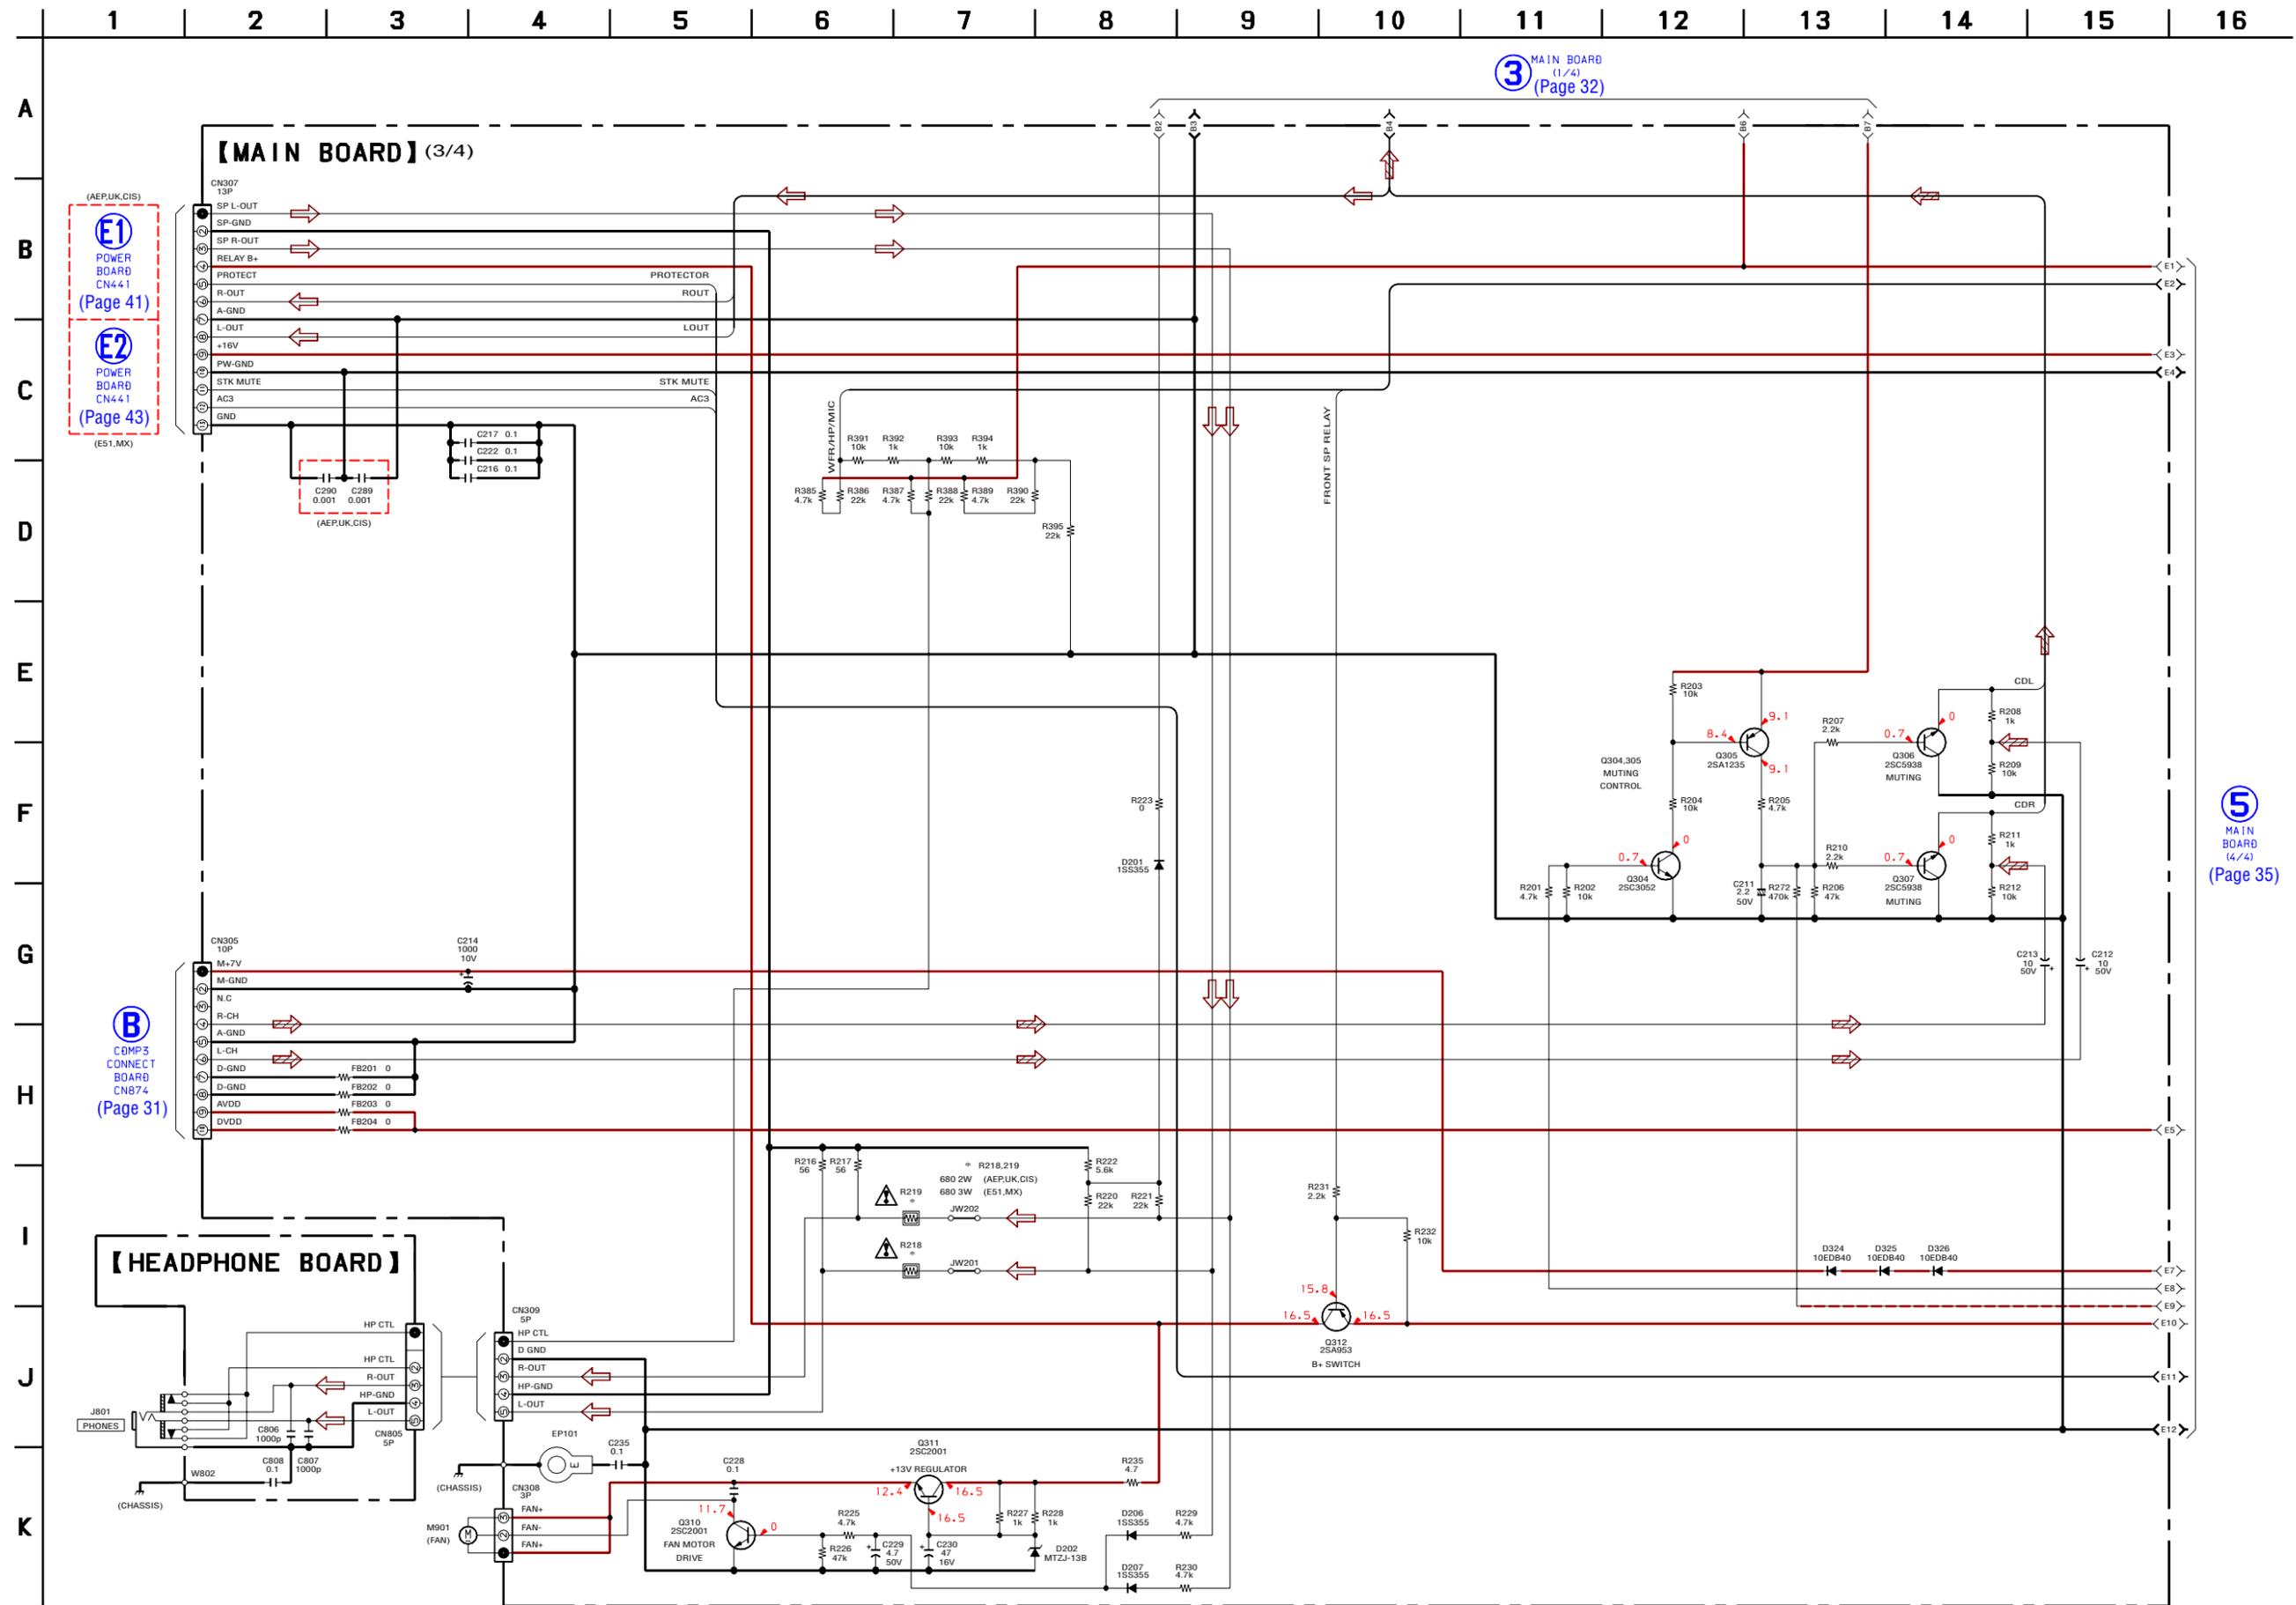


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


6-15. PRINTED WIRING BOARDS – MAIN Section – • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D201	H-9
D202	H-10
D206	I-10
D207	H-10
D211	F-3
D212	G-5
D213	G-4
D214	G-4
D215	G-4
D301	H-7
D302	H-7
D303	H-7
D304	H-7
D305	H-6
D306	H-7
D307	H-6
D308	H-7
D309	H-6
D310	H-6
D311	H-6
D312	H-6
D313	F-7
D316	G-5
D321	H-5
D322	H-4
D324	E-3
D325	E-3
D326	E-3
IC101	D-5
IC102	D-8
IC201	E-4
IC301	F-7
IC302	E-8
IC303	F-7
IC304	F-6
IC371	B-4
Q101	G-8
Q102	G-8
Q103	G-9
Q104	G-9
Q105	E-10
Q106	D-7
Q107	D-7
Q304	D-4
Q305	D-4
Q306	D-4
Q307	D-4
Q308	A-3
Q309	B-3
Q310	G-10
Q311	H-10
Q312	H-10
Q313	B-2
Q314	G-5
Q315	G-5
Q321	E-6
Q322	E-4
Q323	E-4
Q324	F-4
Q327	F-4
Q351	G-4
Q352	G-3
Q361	G-6
Q362	G-5

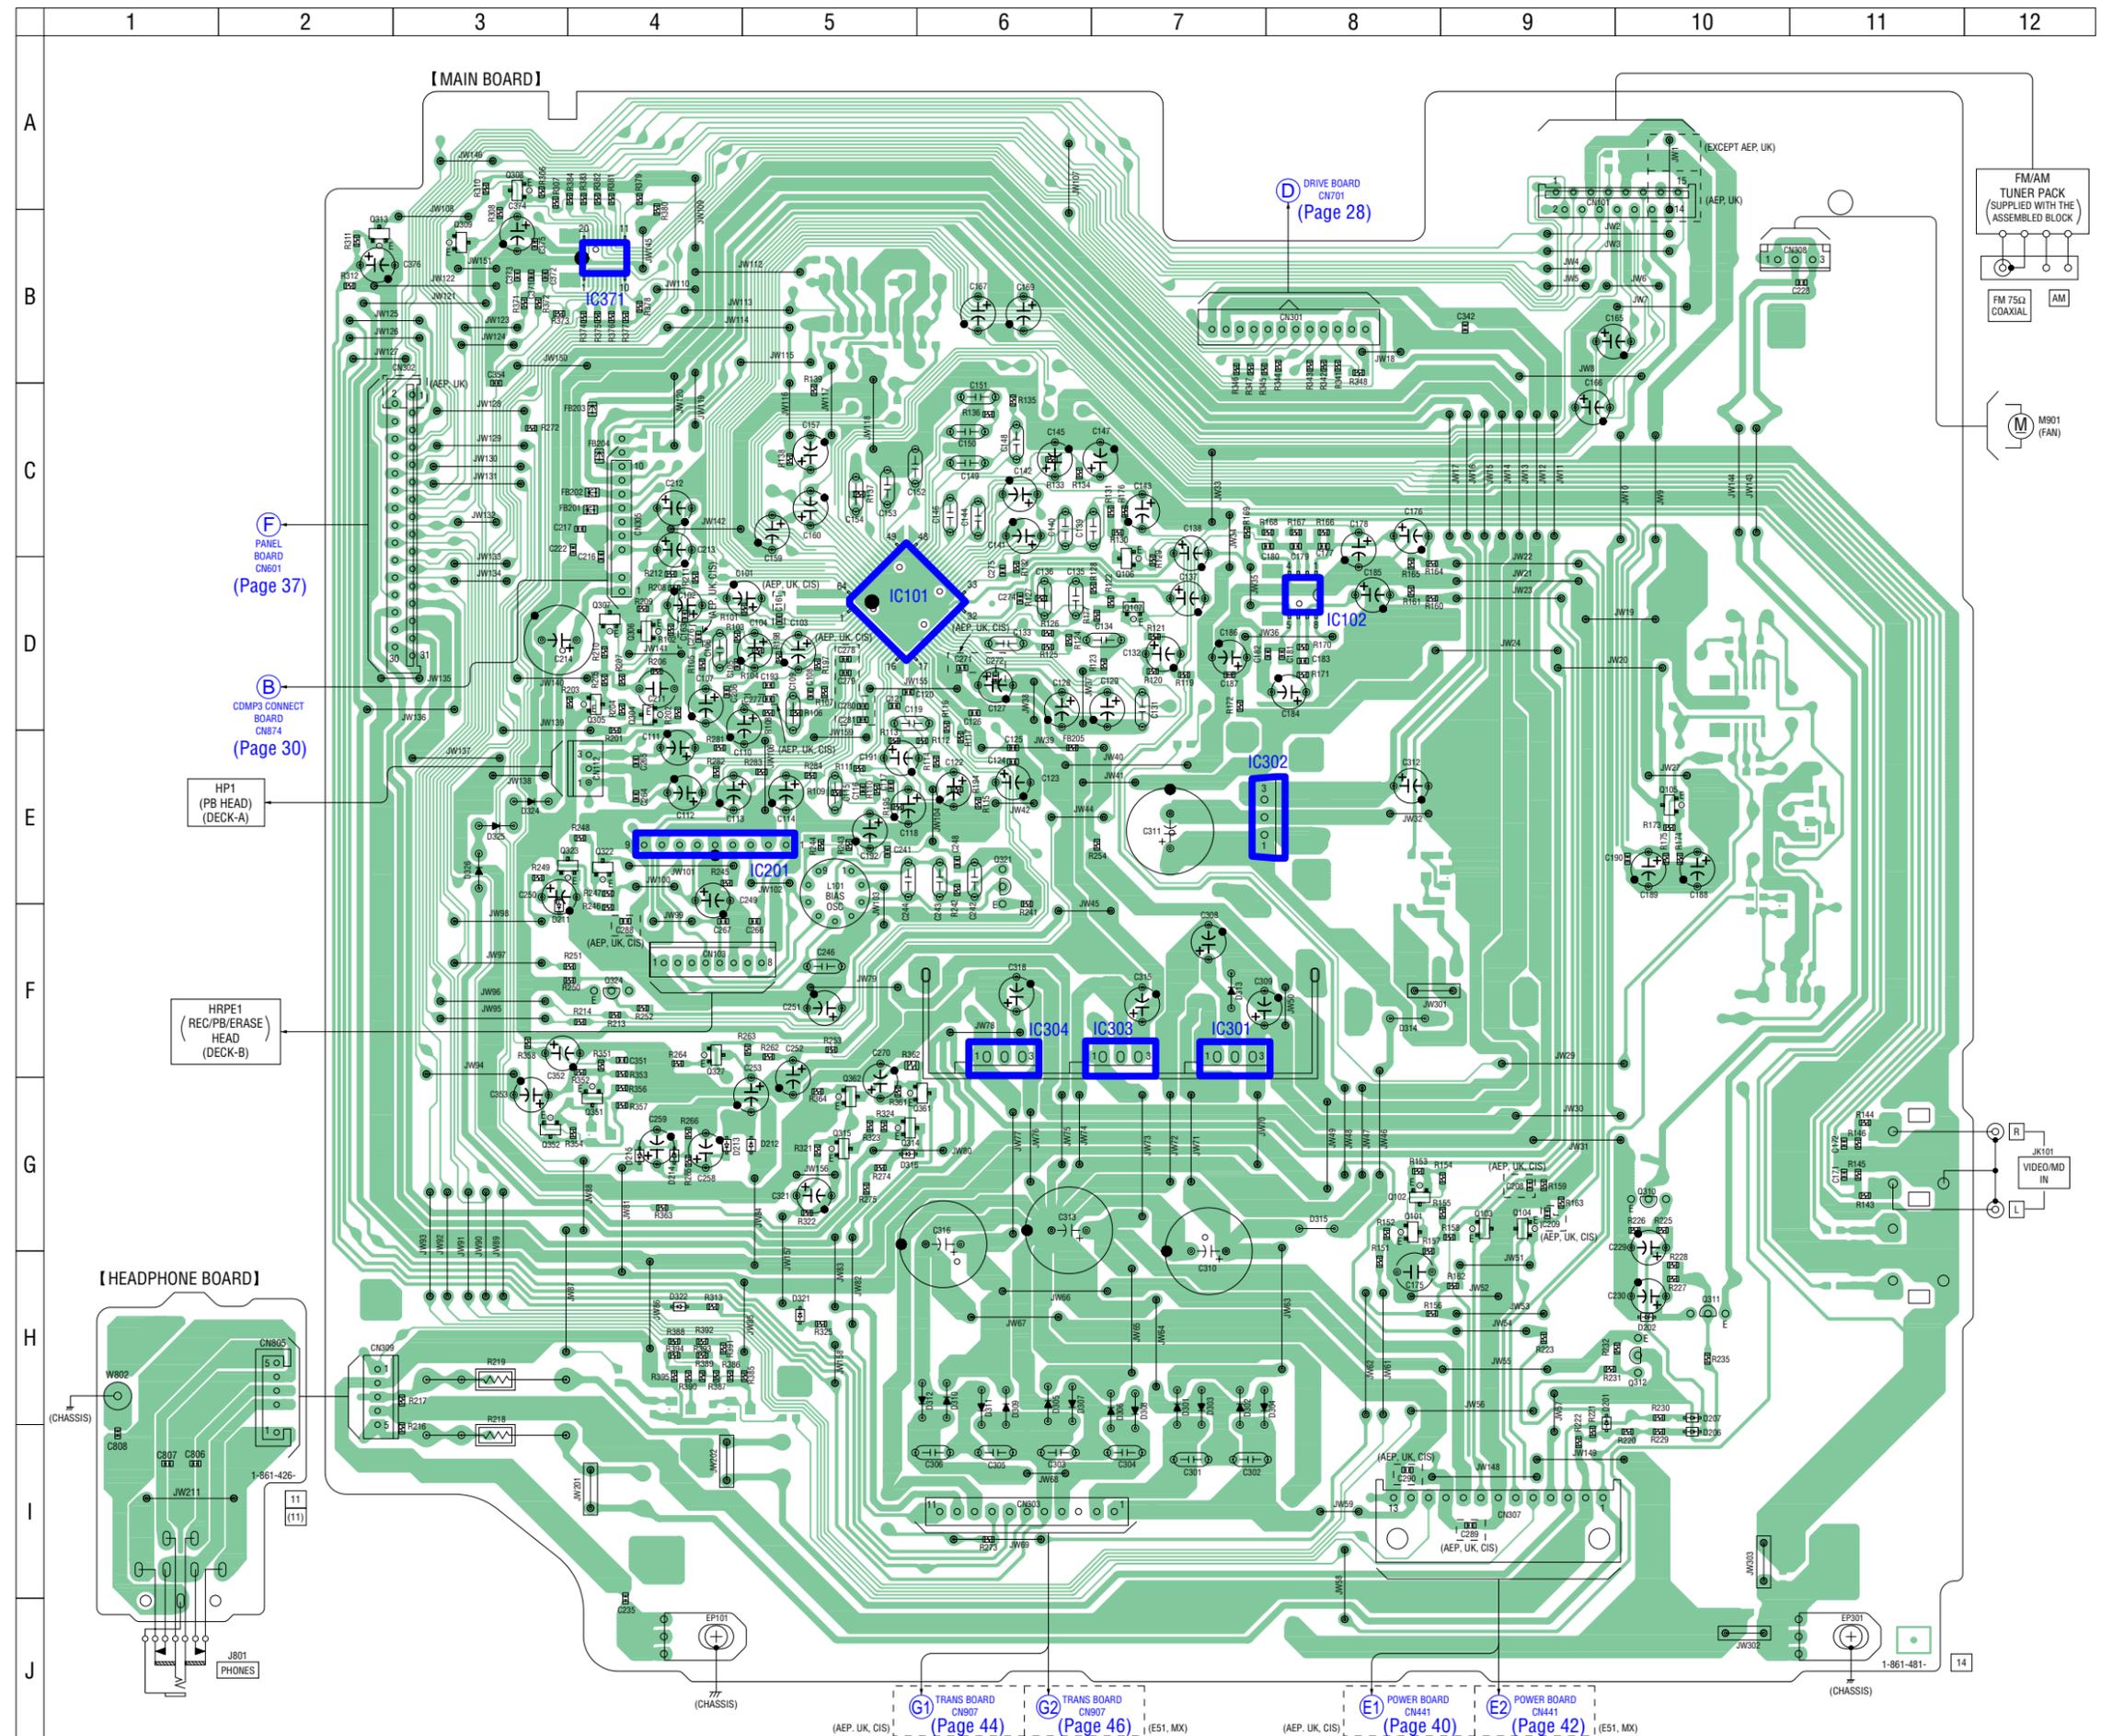


6-16. PRINTED WIRING BOARD – PANEL Section – • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

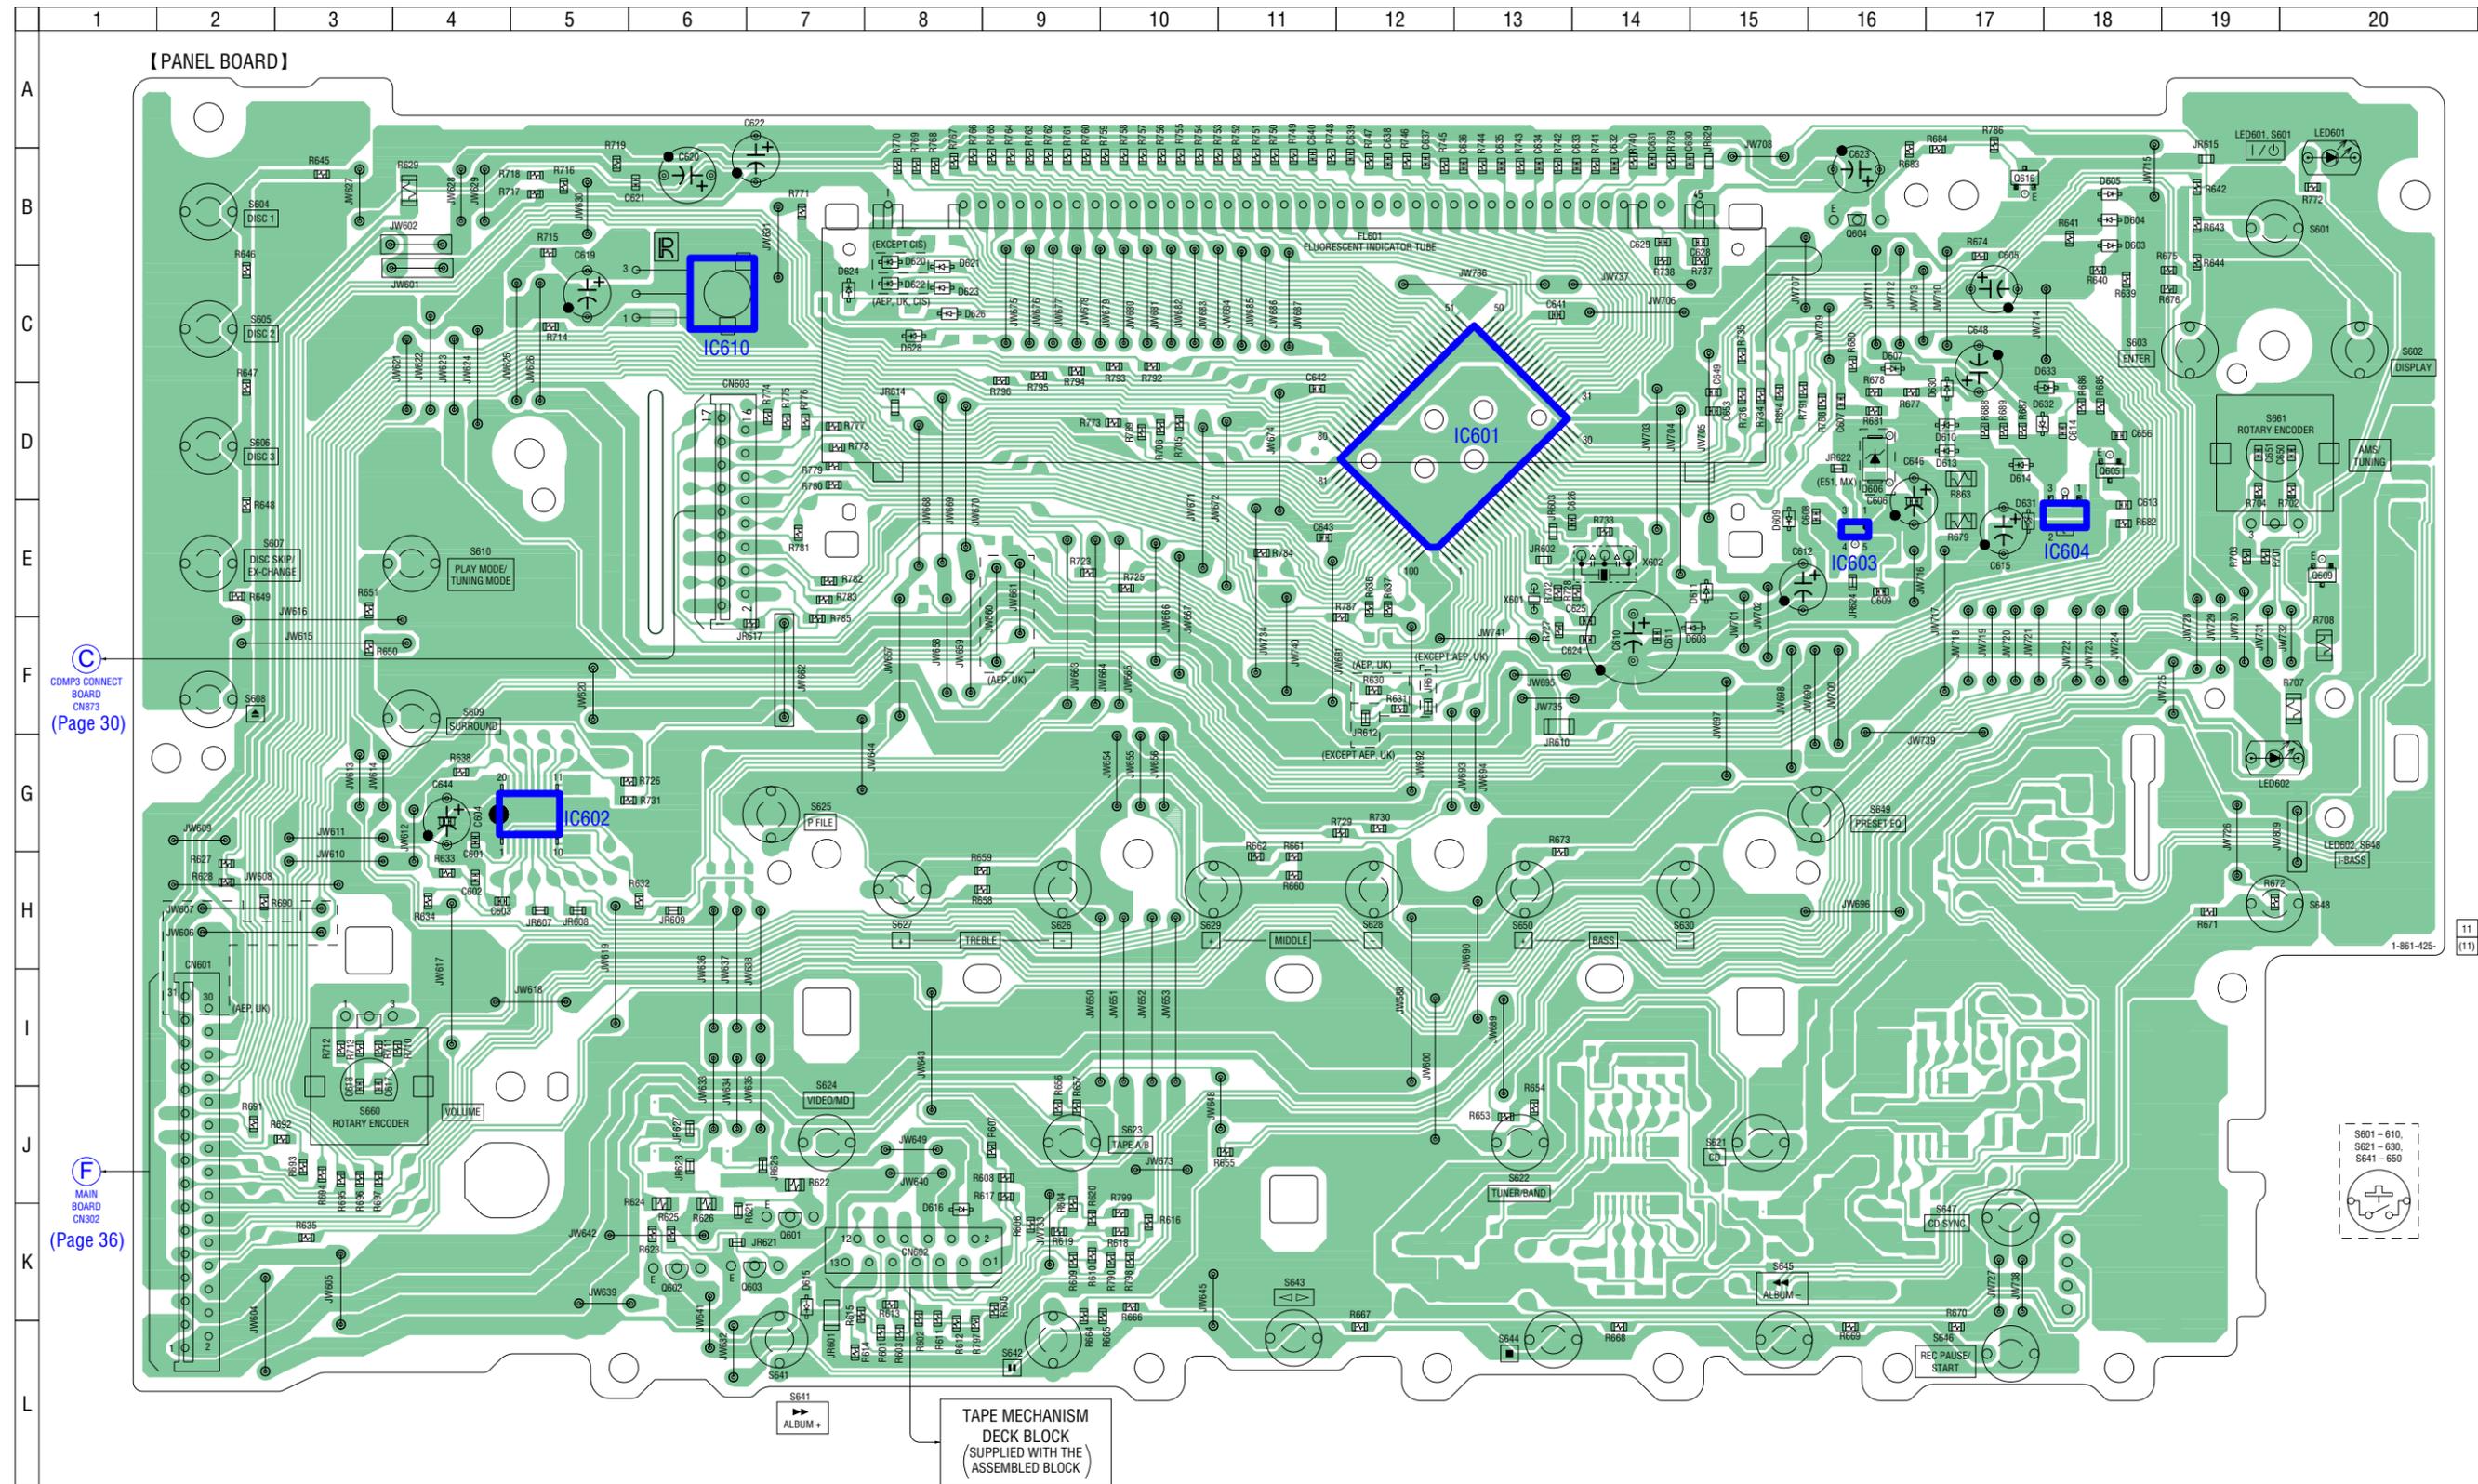

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D603	B-18	D613	D-17	D626	C-8	IC603	E-16	Q603	K-7
D604	B-18	D614	D-17	D628	C-8	IC604	E-18	Q604	B-16
D605	B-18	D615	K-7	D630	D-17	IC610	C-6	Q605	D-18
D606	D-16	D616	K-8	D631	E-17			Q609	E-20
D607	C-16	D620	B-8	D632	D-17	LED601	B-20	Q616	B-17
D608	F-15	D621	C-8	D633	D-18	LED602	G-19		
D609	E-15	D622	C-8						
D610	D-17	D623	C-8	IC601	D-13	Q601	K-7		
D611	E-15	D624	C-7	IC602	G-5	Q602	K-6		

6-18. SCHEMATIC DIAGRAM – PANEL Section (2/2) –

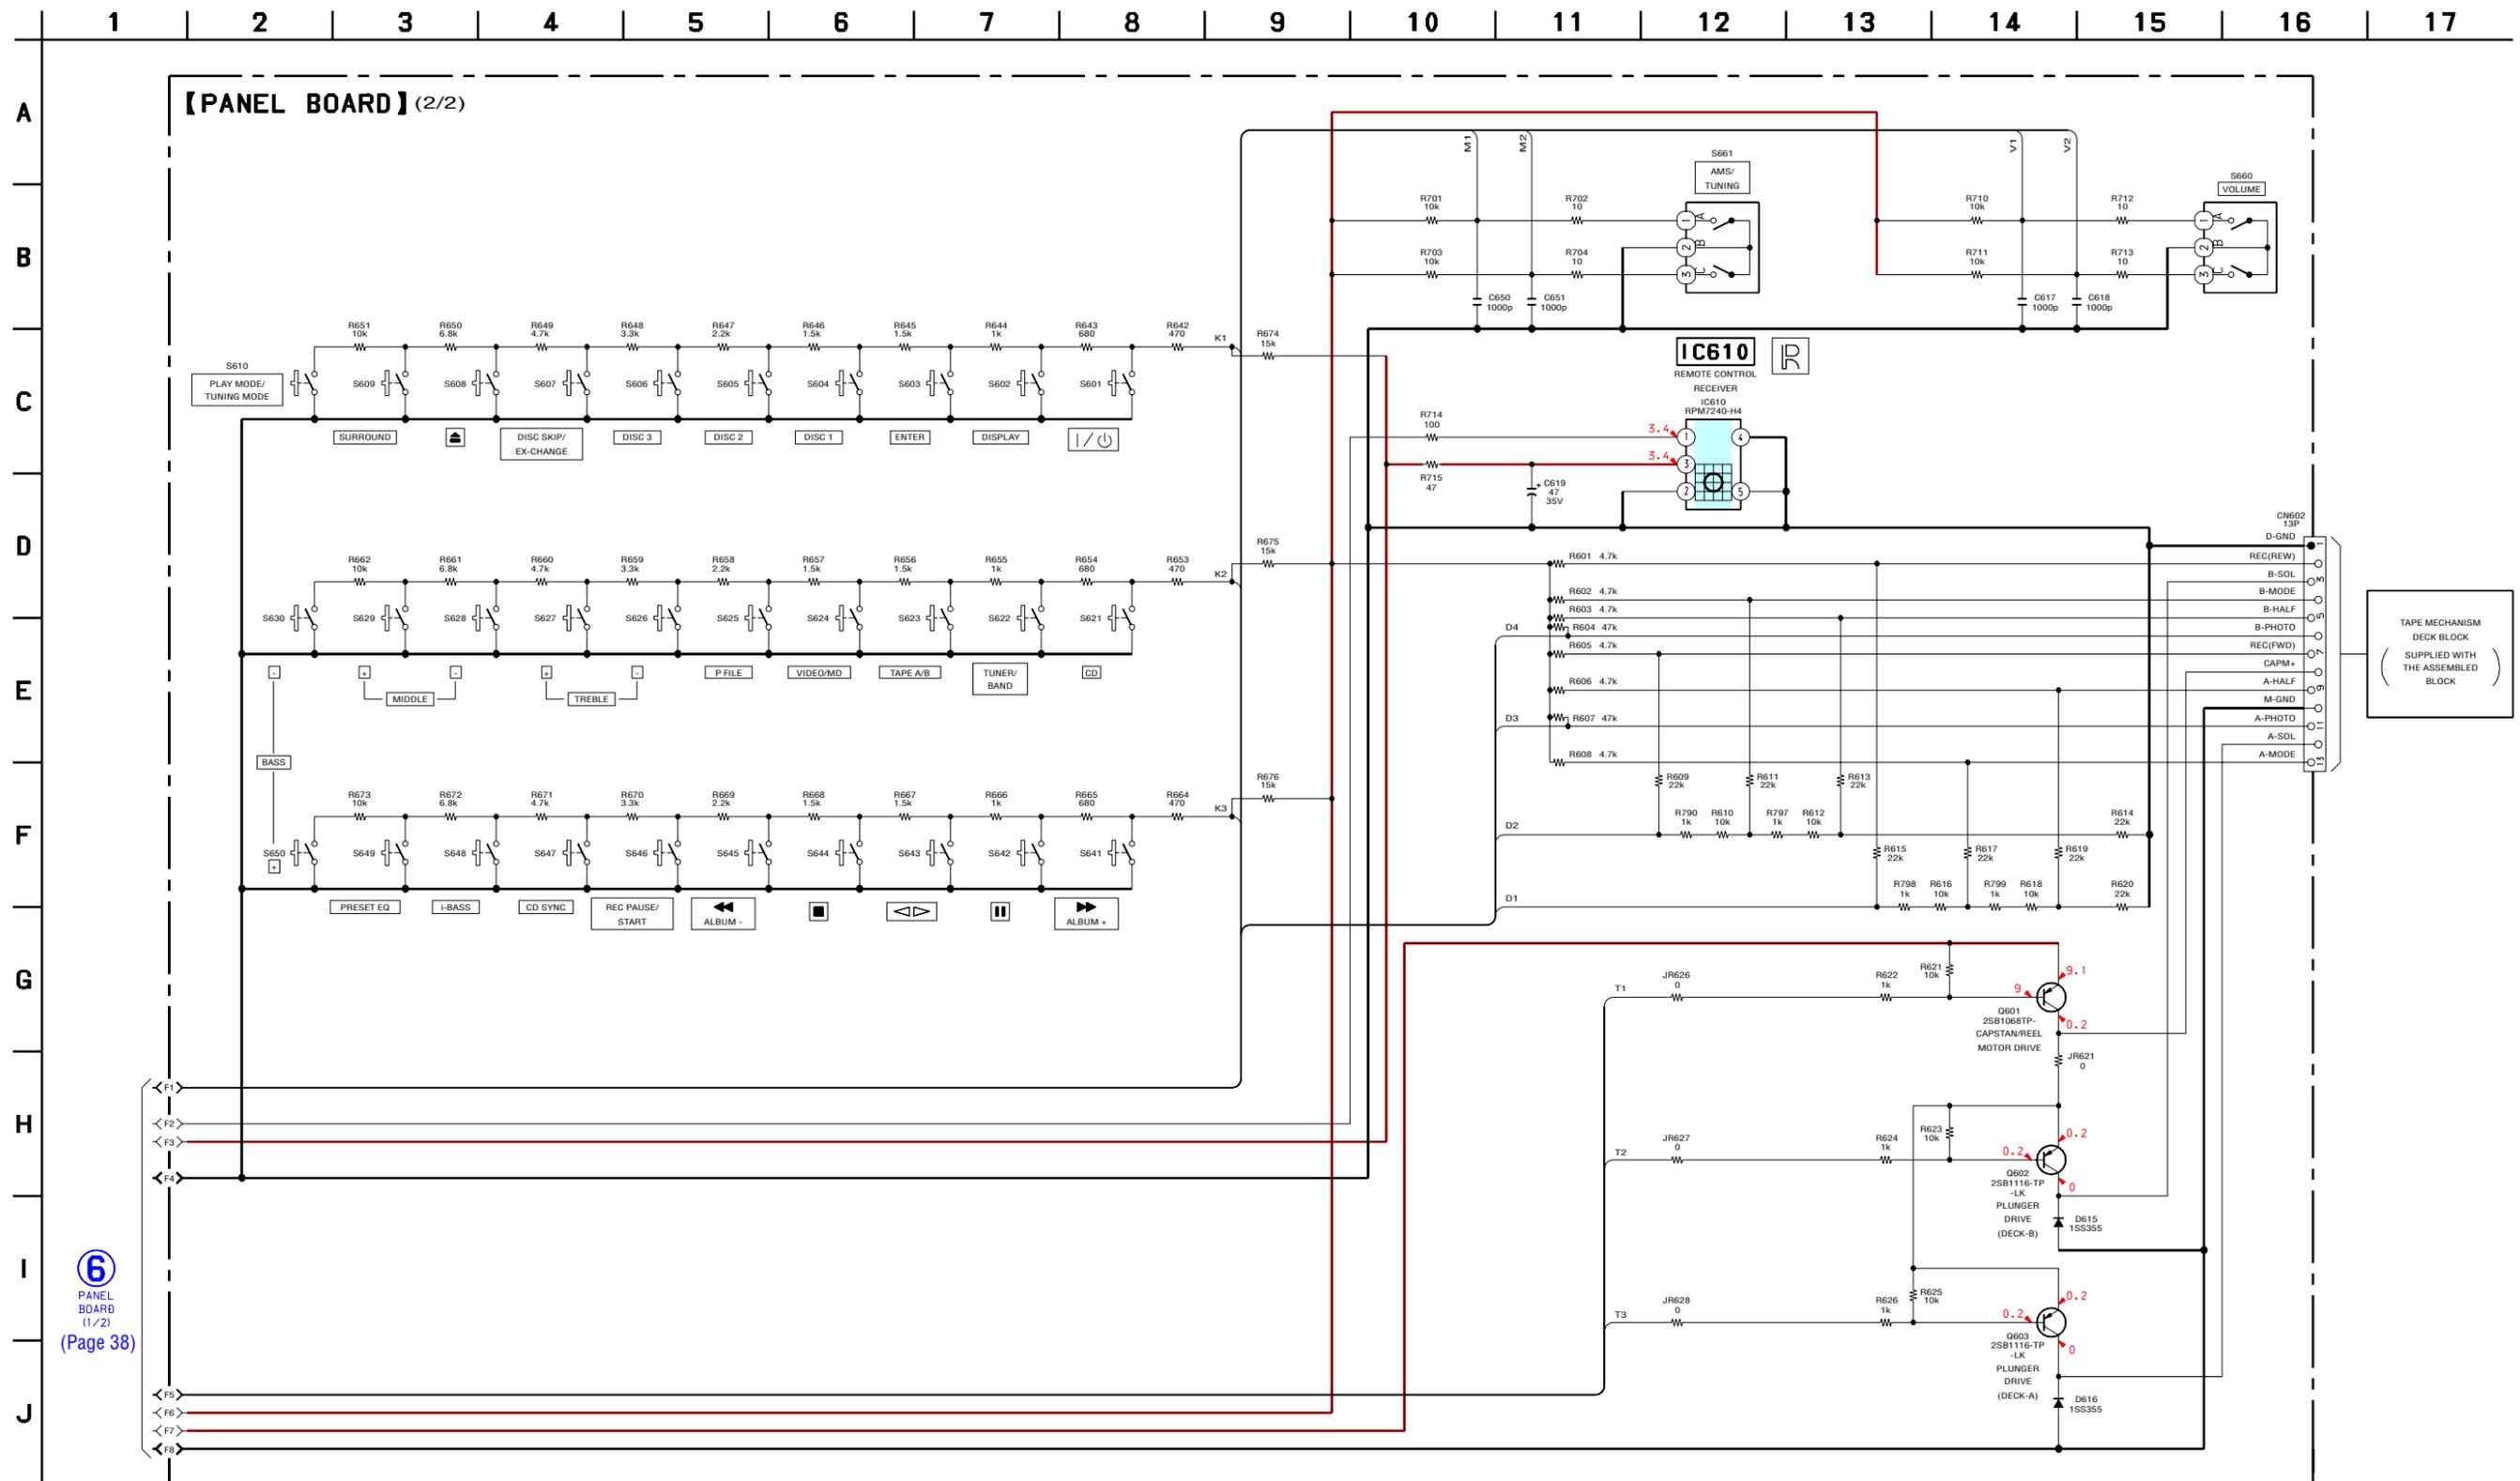


6
PANEL BOARD (1/2)
(Page 38)

6-19. PRINTED WIRING BOARD – POWER AMP Section – (AEP, UK, CIS only) • See page 25 for Circuit Boards Location.  :Uses unleaded solder.


• Semiconductor Location

Ref. No.	Location
D401	E-3
D441	C-6
D442	C-6
D443	C-1
D481	C-5
D482	C-4
D483	C-8
IC441	B-6
Q441	C-6
Q442	C-6
Q481	C-8
Q482	C-8
Q483	C-8
Q484	C-8
Q485	B-4
Q486	B-4
Q487	B-4
Q488	C-5
Q489	C-8

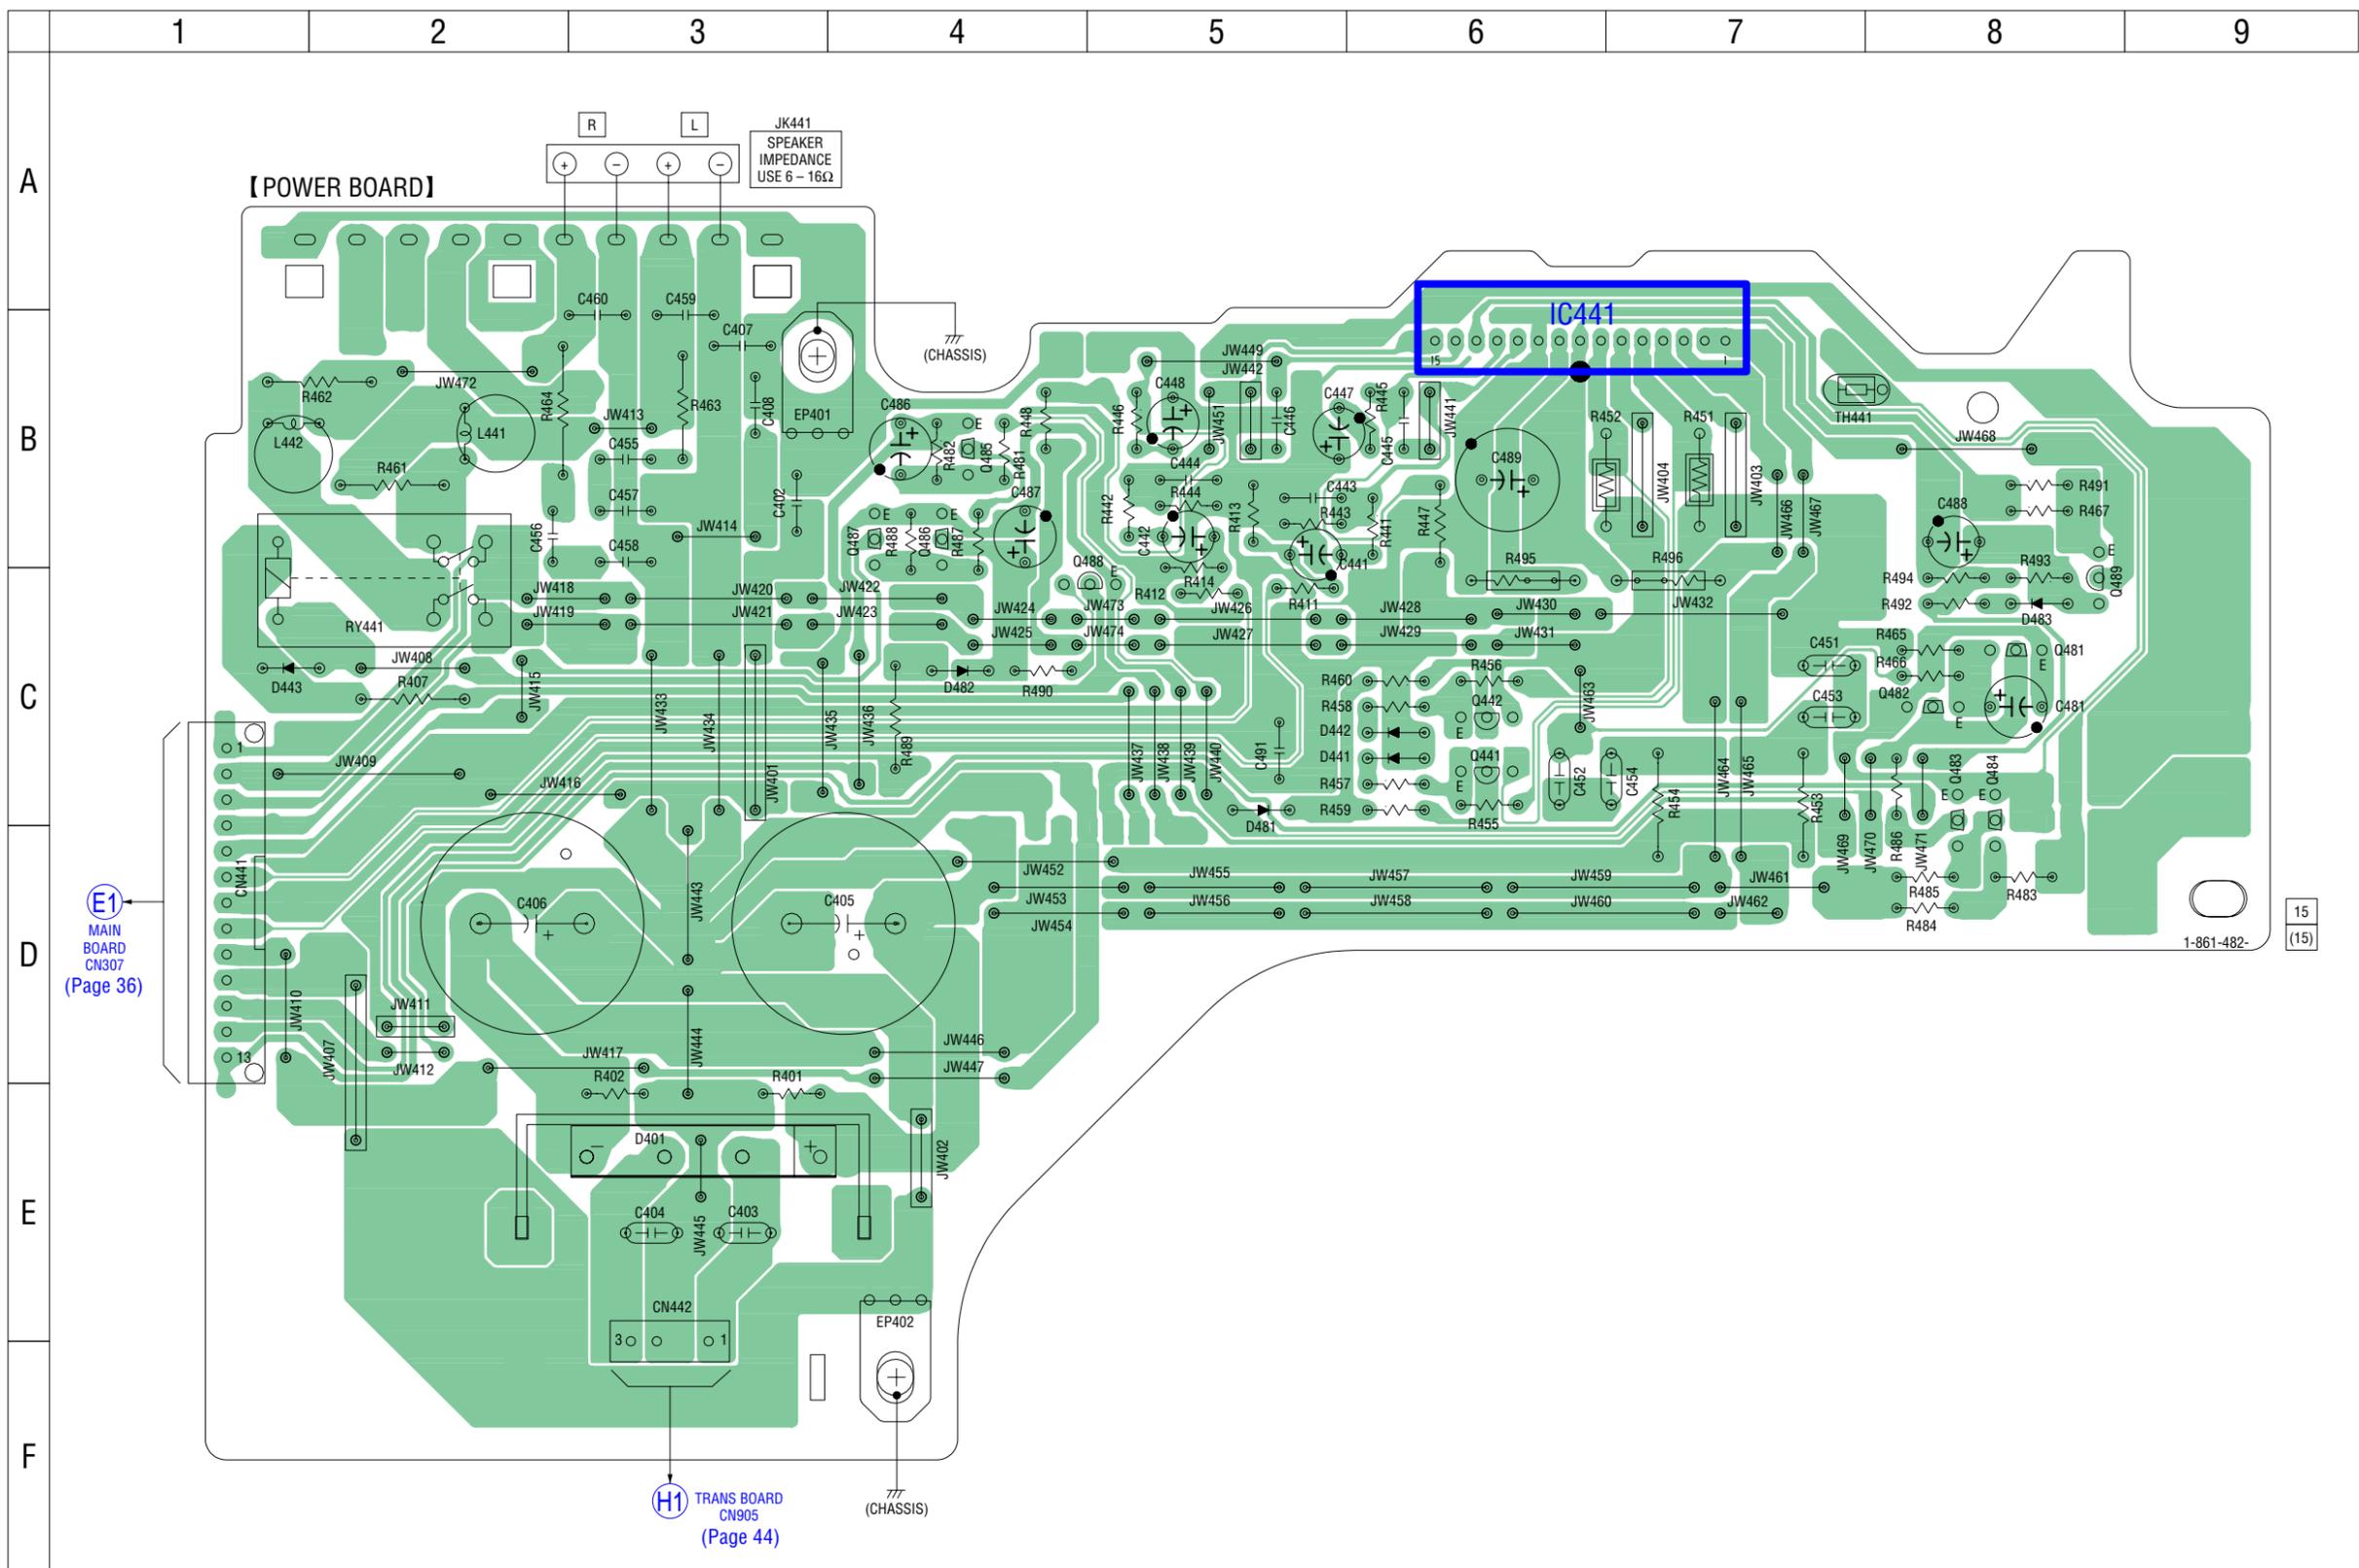

15
(15)

6-20. SCHEMATIC DIAGRAM – POWER AMP Section – (AEP, UK, CIS only)

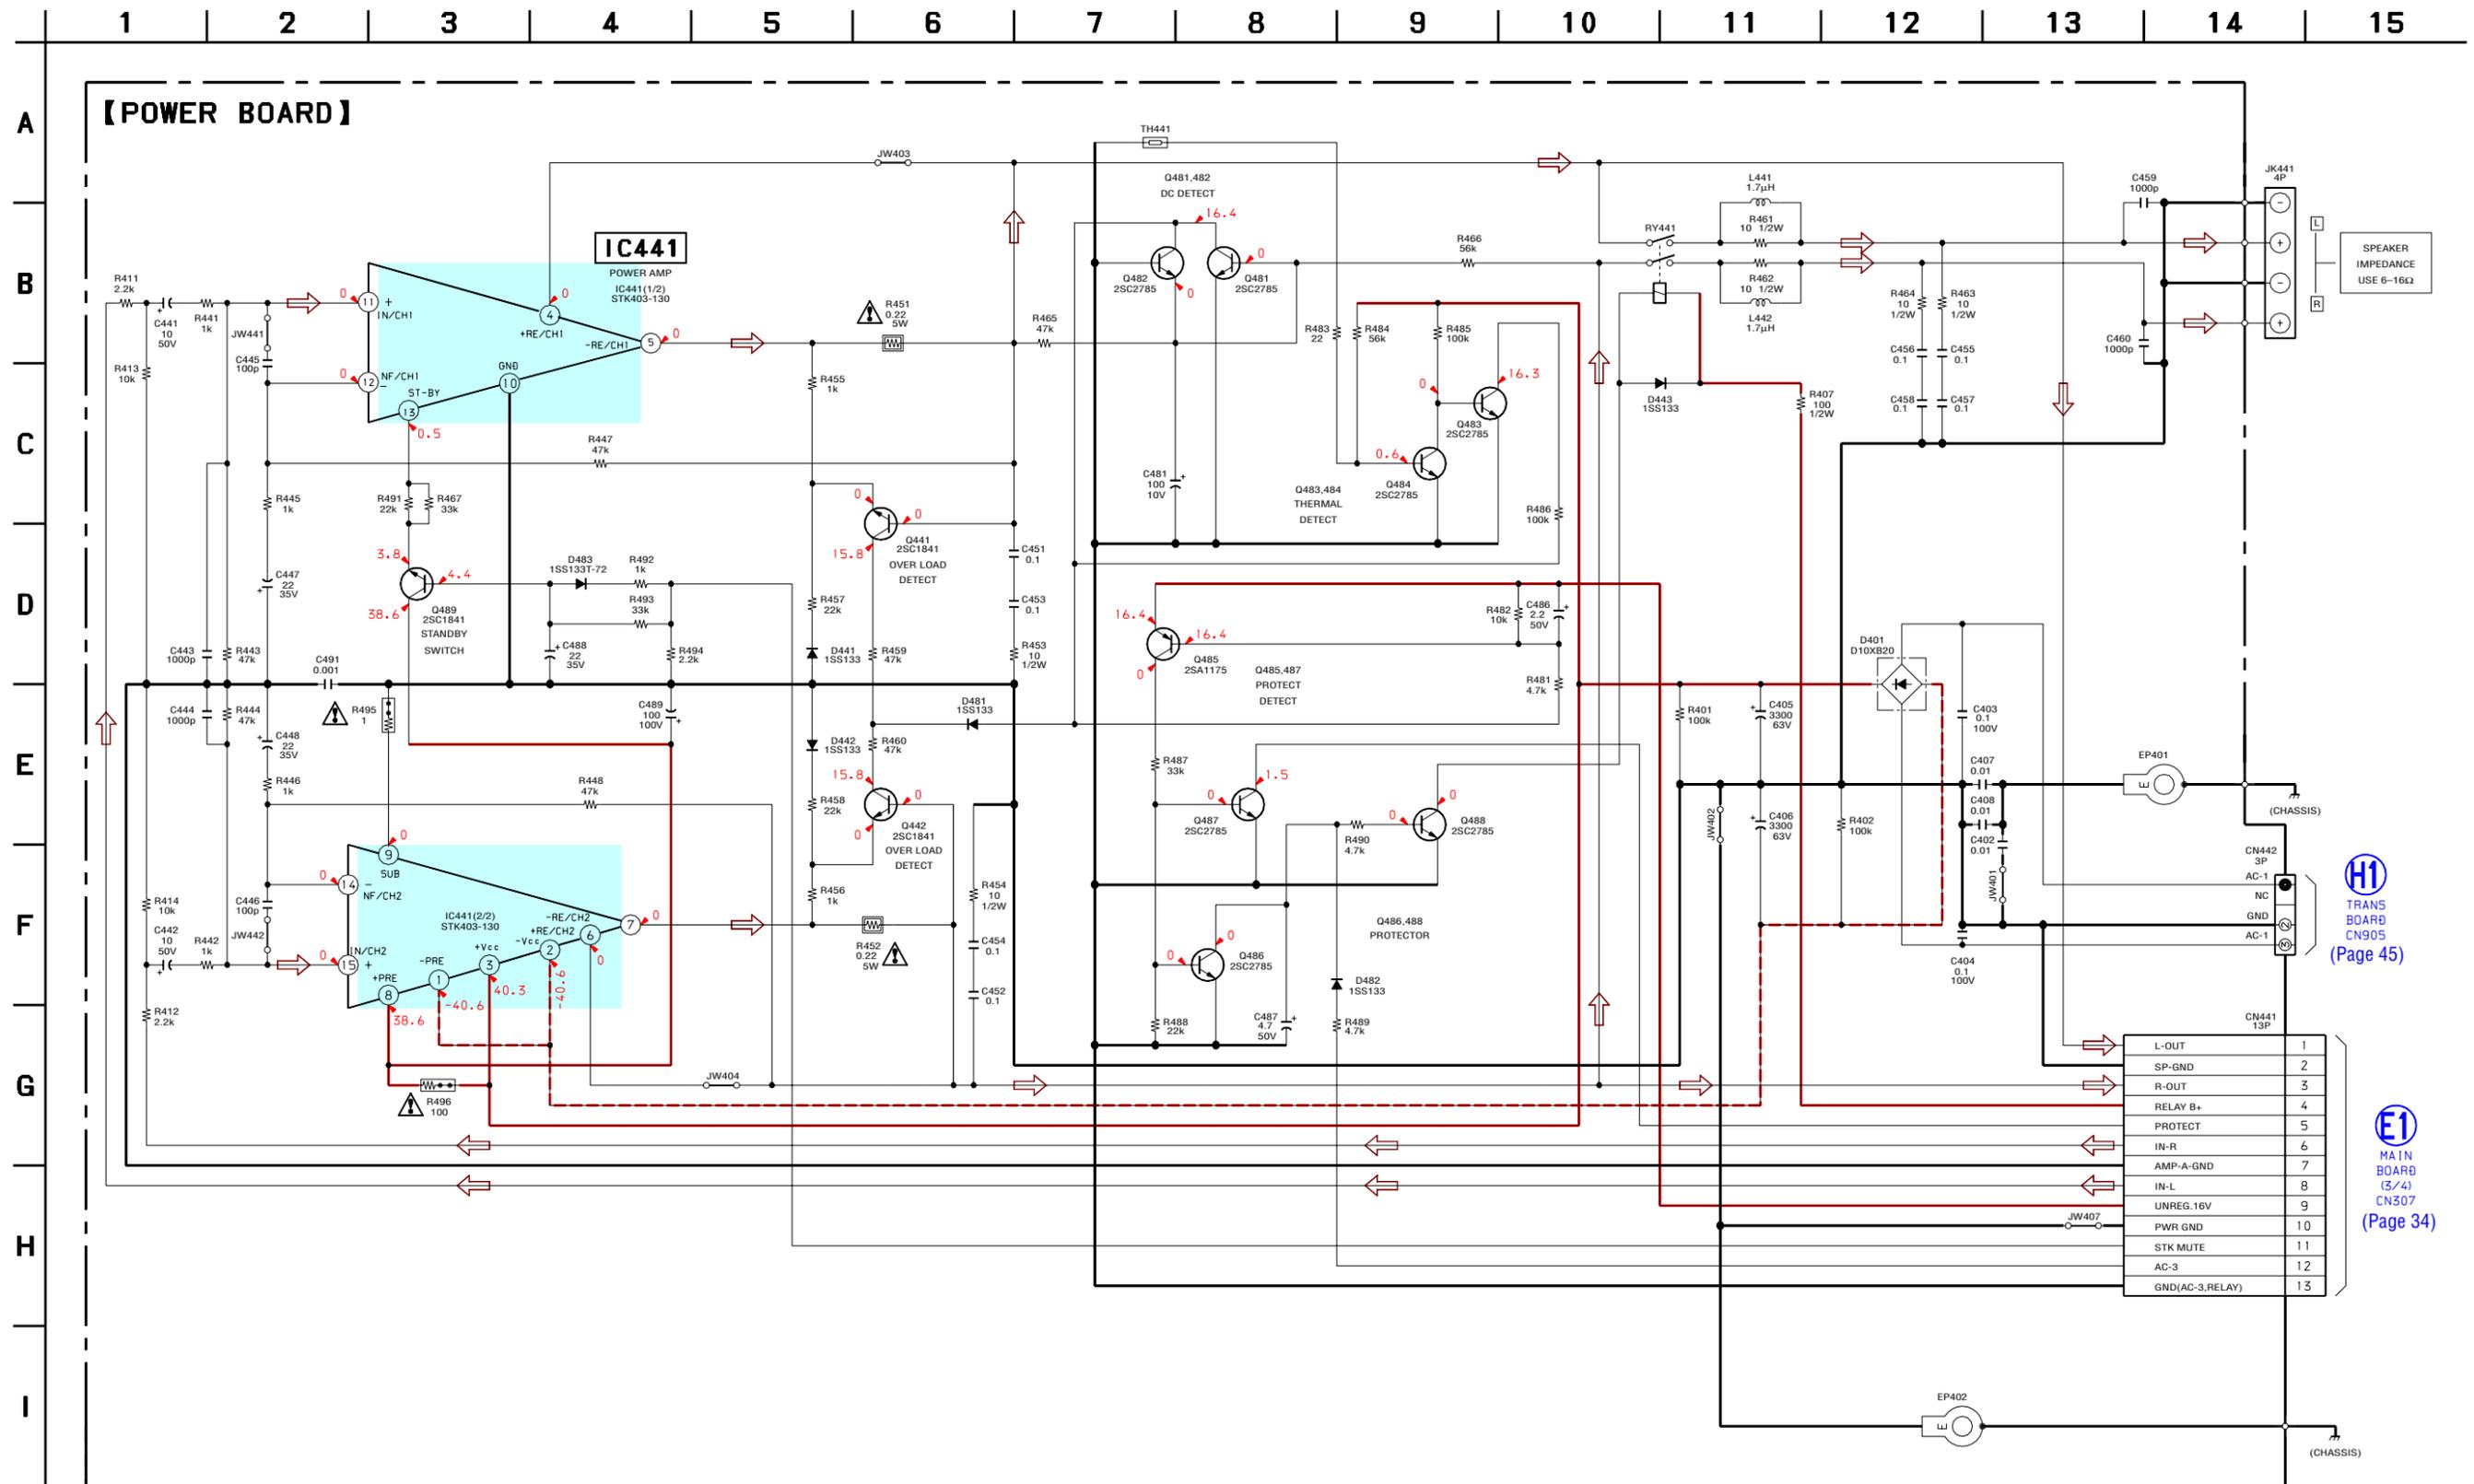


The components identified by mark Δ or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


6-21. PRINTED WIRING BOARD – POWER AMP Section – (E51, MX only) • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D401	F-4
D402	G-3
D441	C-7
D442	C-6
D443	C-1
D444	D-8
D445	B-7
D446	B-7
D481	C-7
D482	C-4
IC441	A-6
Q441	C-6
Q442	C-6
Q481	C-7
Q482	C-7
Q483	B-9
Q484	C-9
Q485	B-4
Q486	B-4
Q487	B-3
Q488	C-4
Q489	C-8
Q490	C-7
Q491	D-7

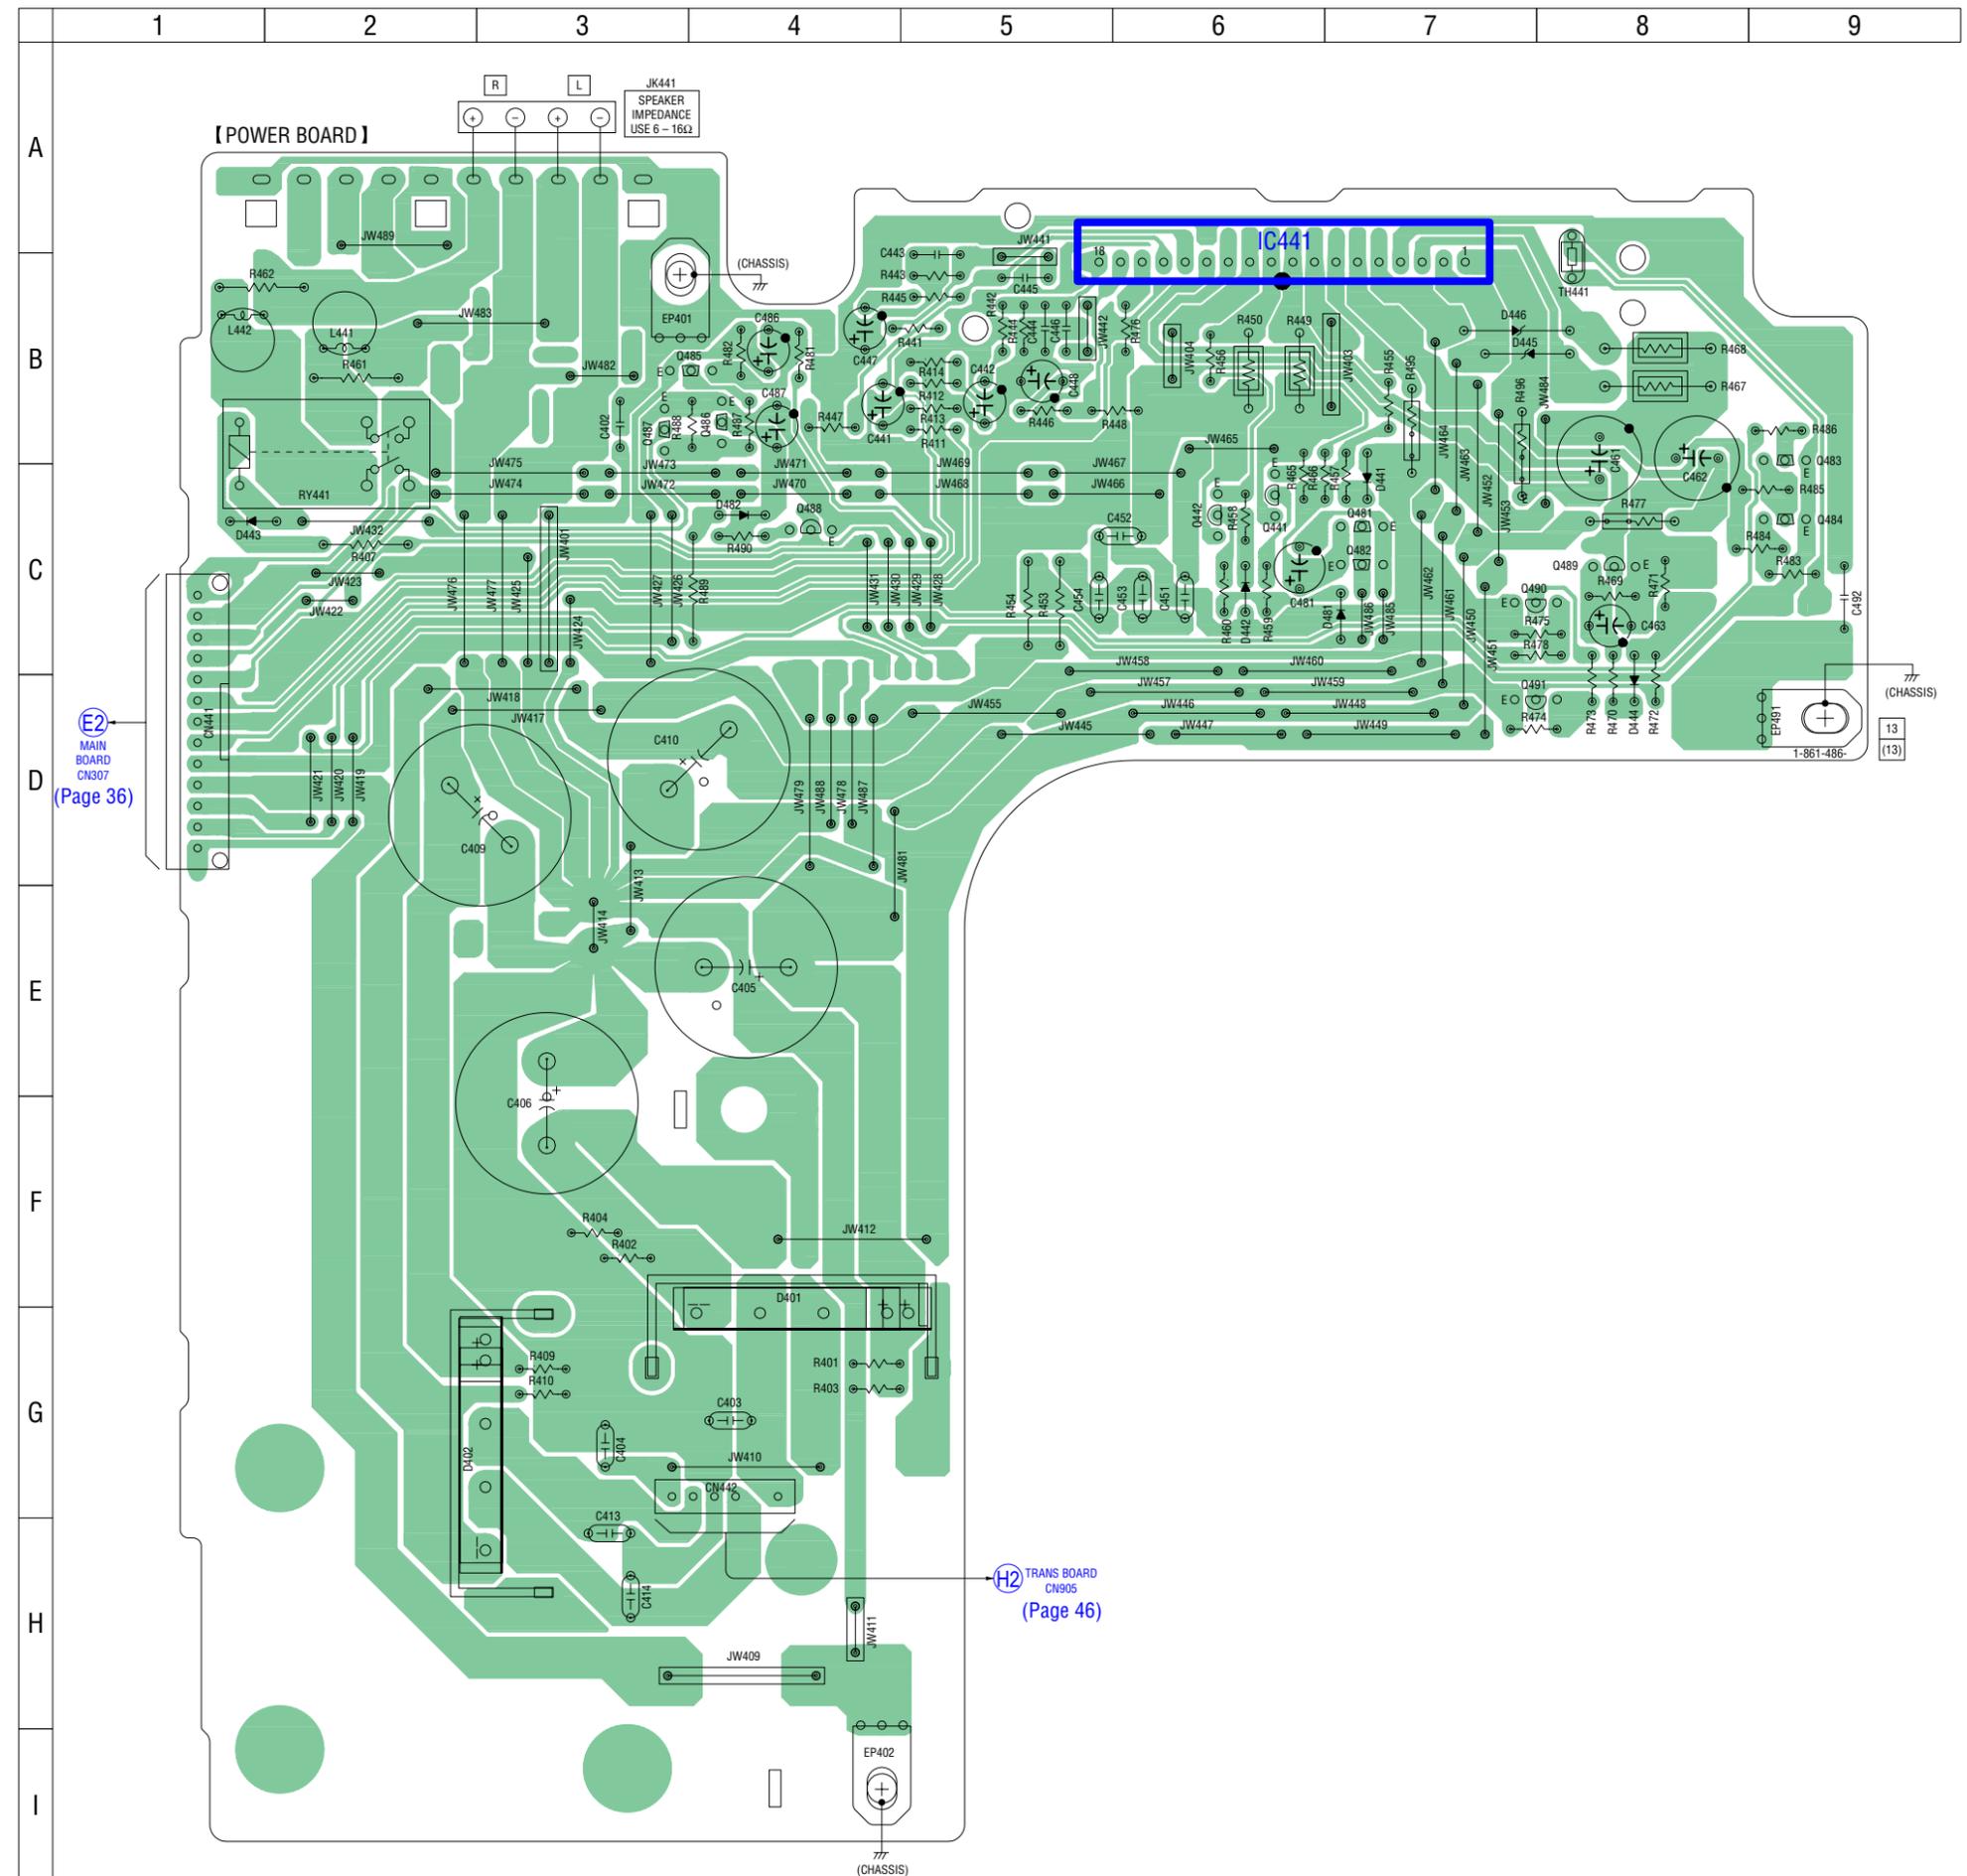


6-22. SCHEMATIC DIAGRAM – POWER AMP Section – (E51, MX only)

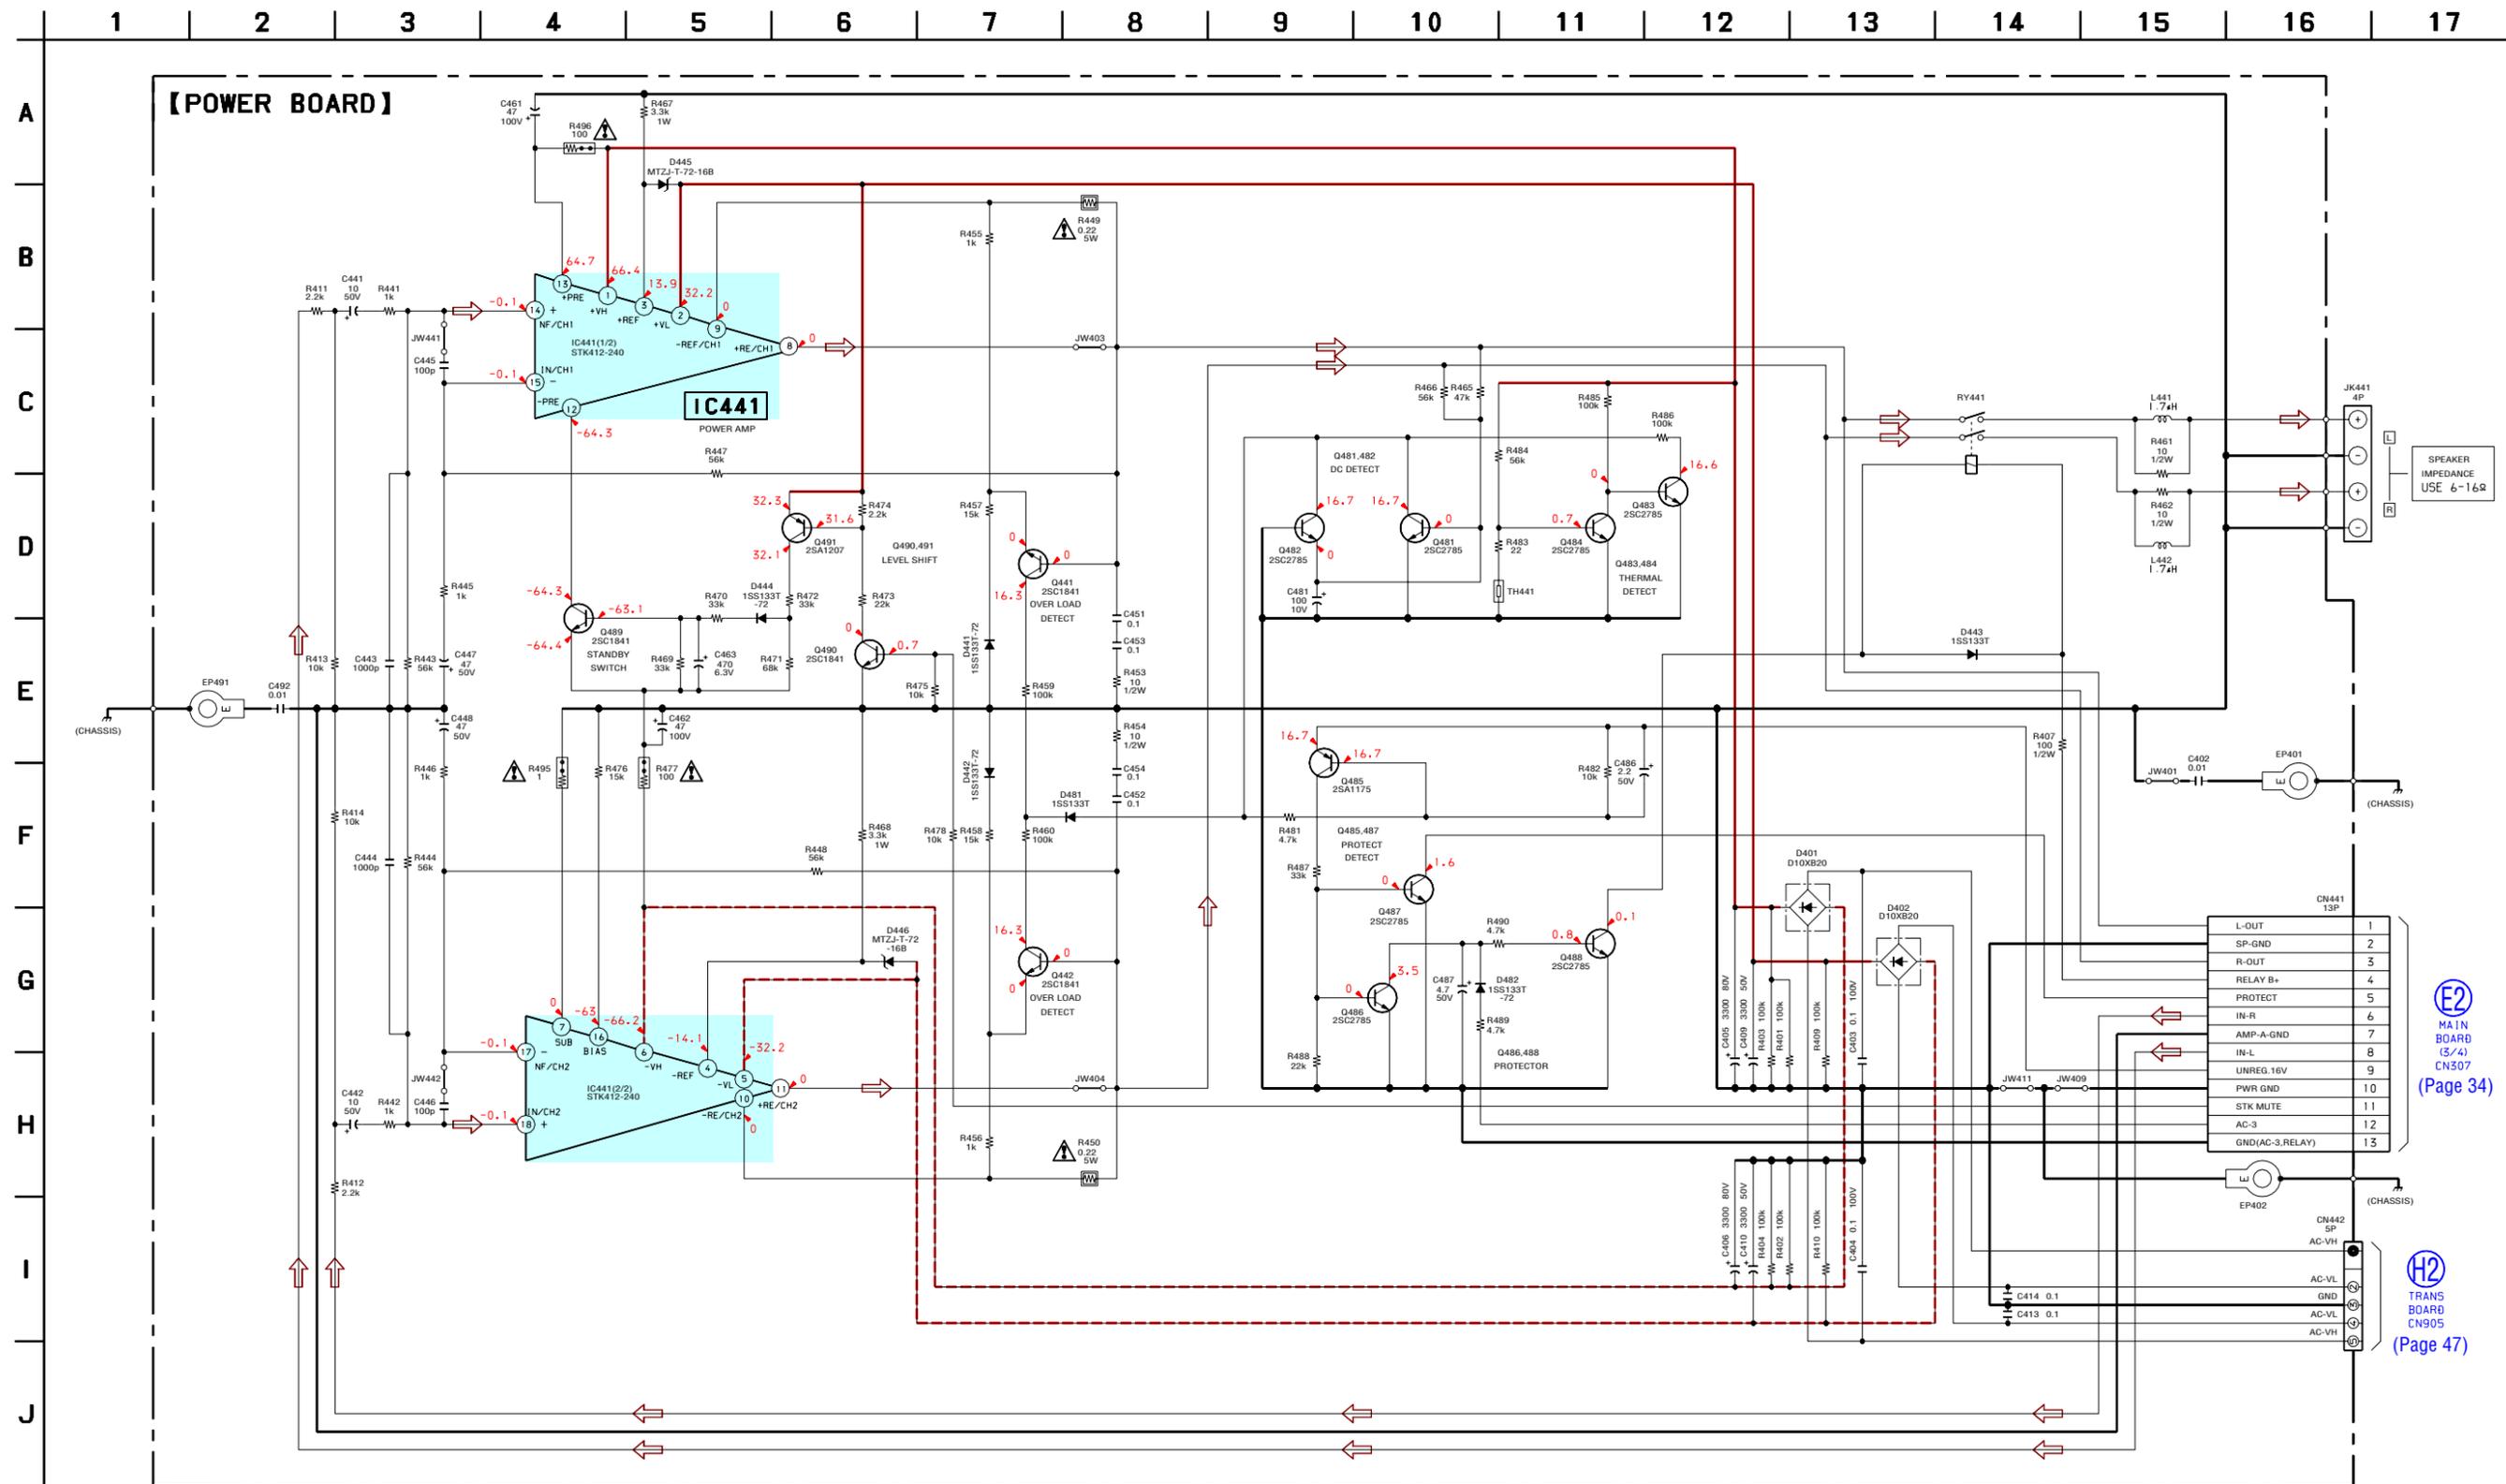

(E2)
MAIN BOARD (E/4) CN507 (Page 34)

(H2)
TRANS BOARD CN905 (Page 47)


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

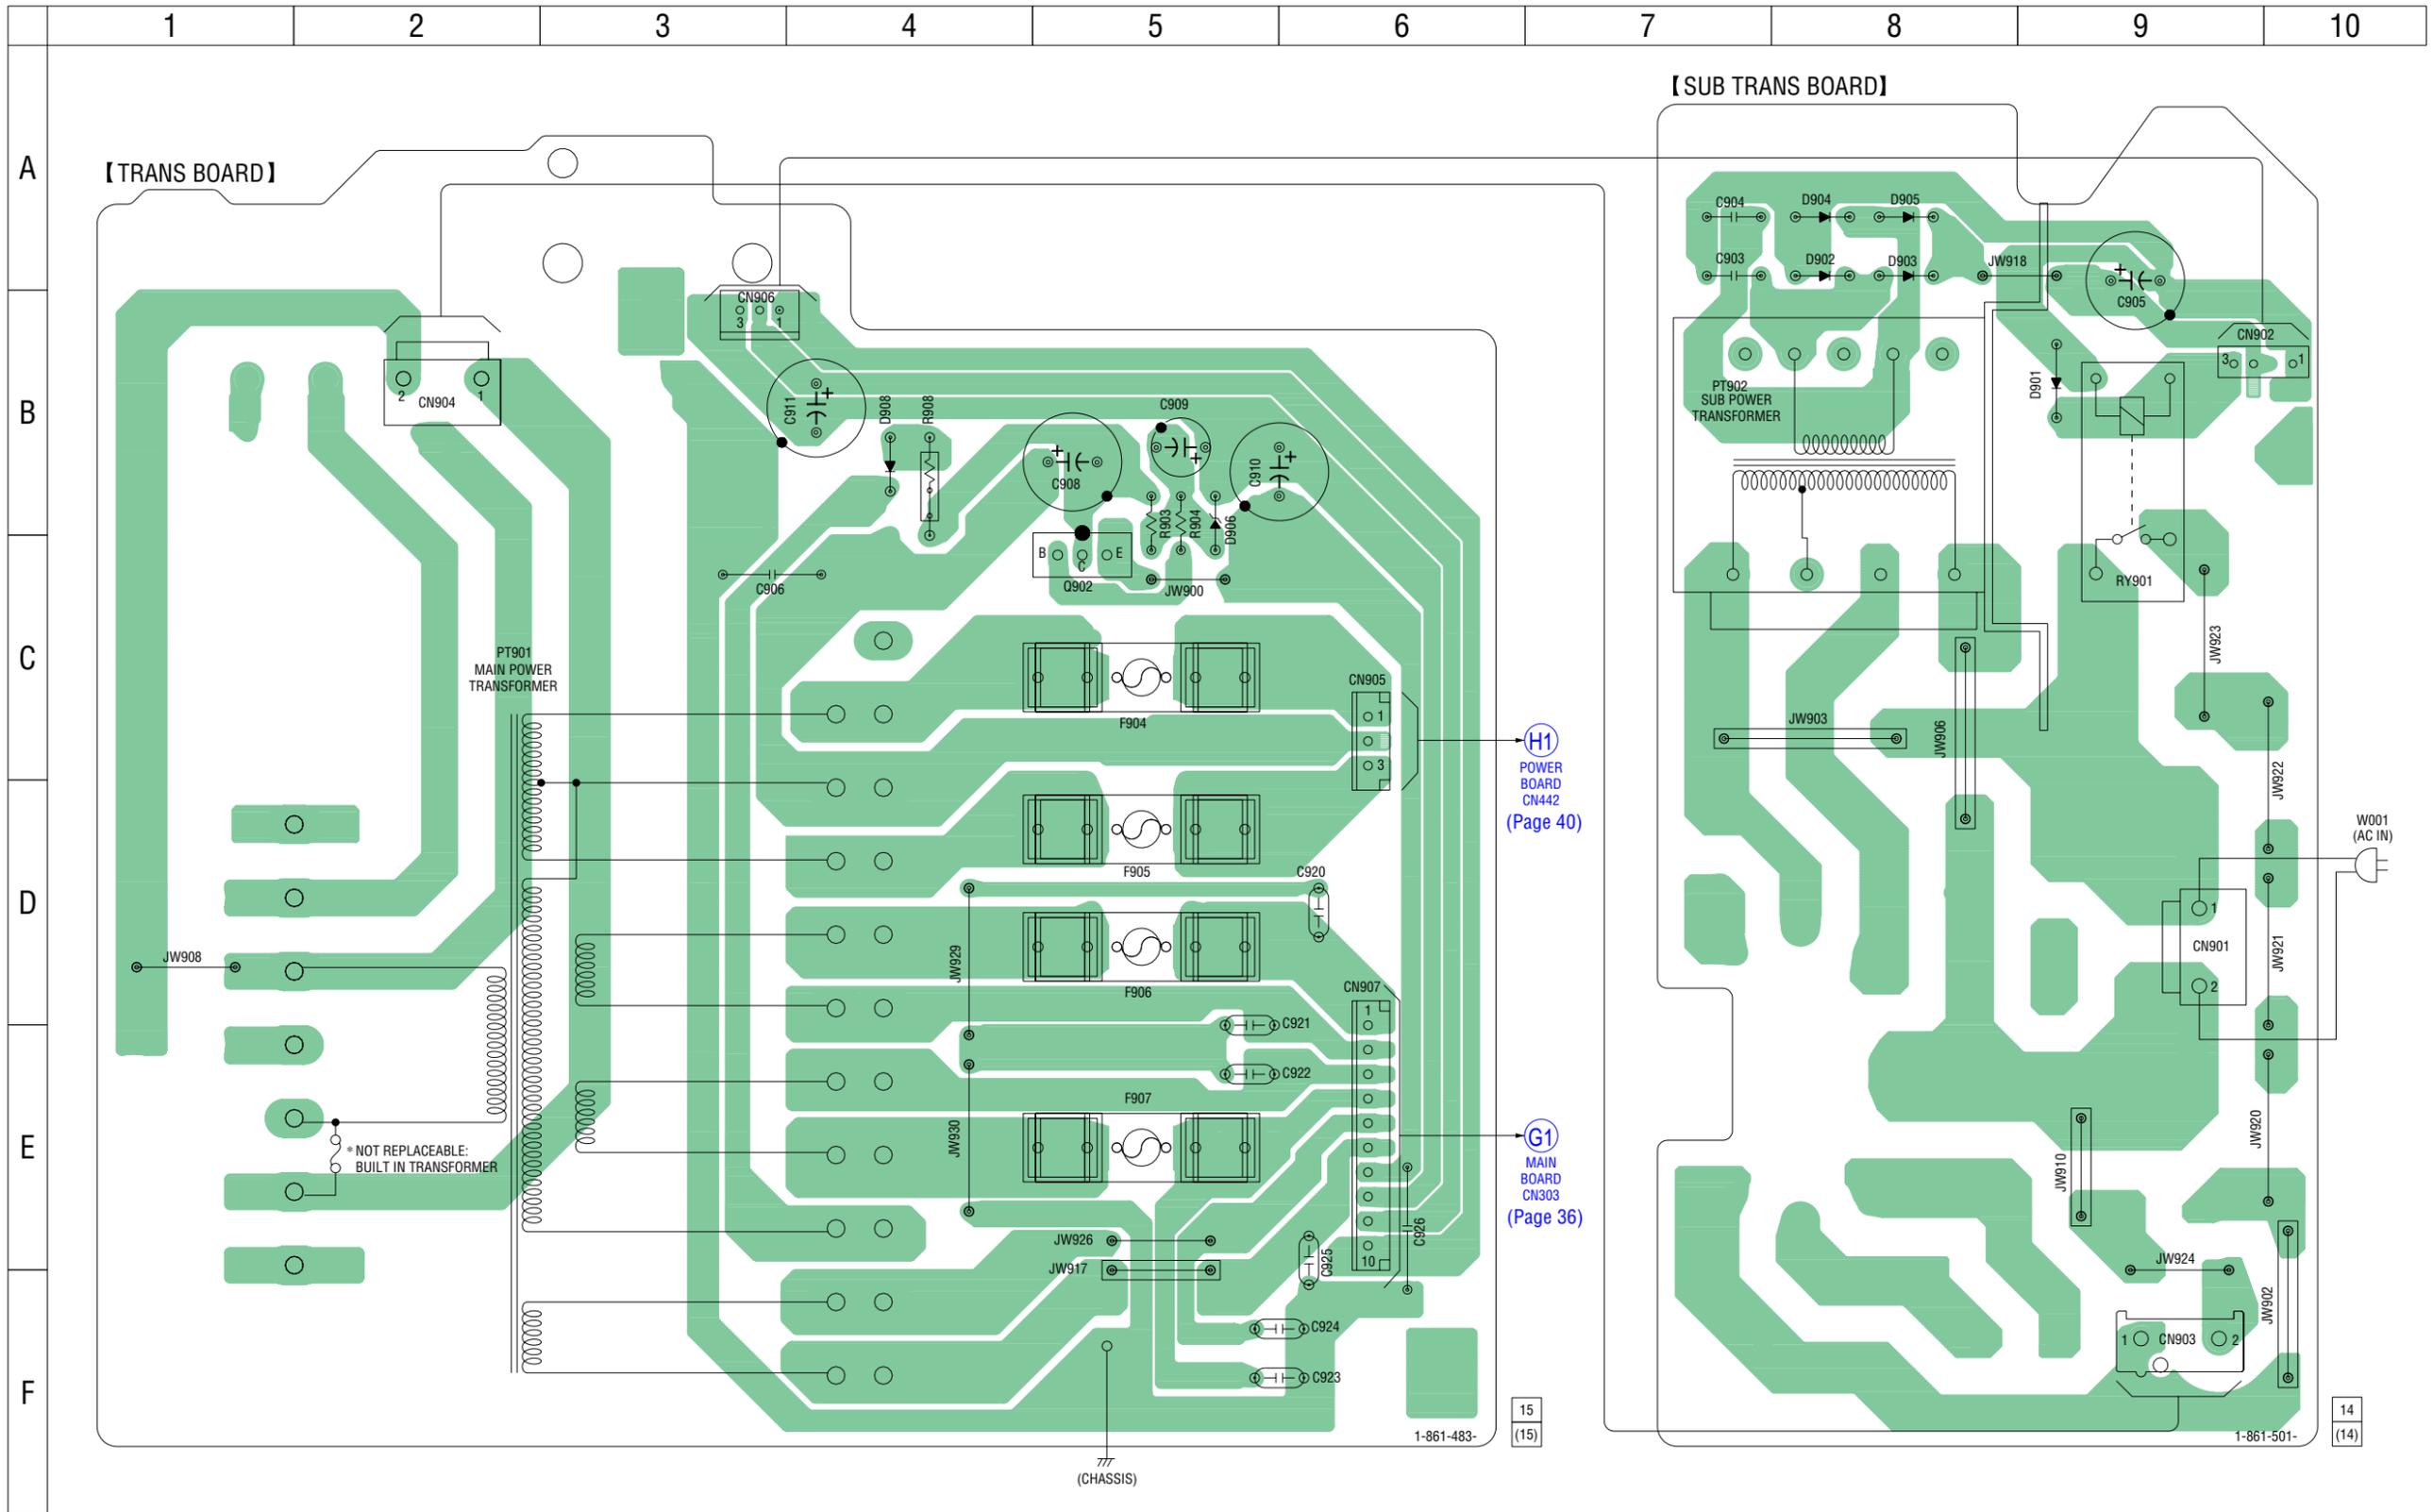

• Semiconductor Location

Ref. No.	Location
D901	B-9
D902	A-8
D903	A-8
D904	A-8
D905	A-8
D906	B-5
D908	B-4
Q902	C-5

6-24. SCHEMATIC DIAGRAM – TRANS Section – (AEP, UK, CIS only)

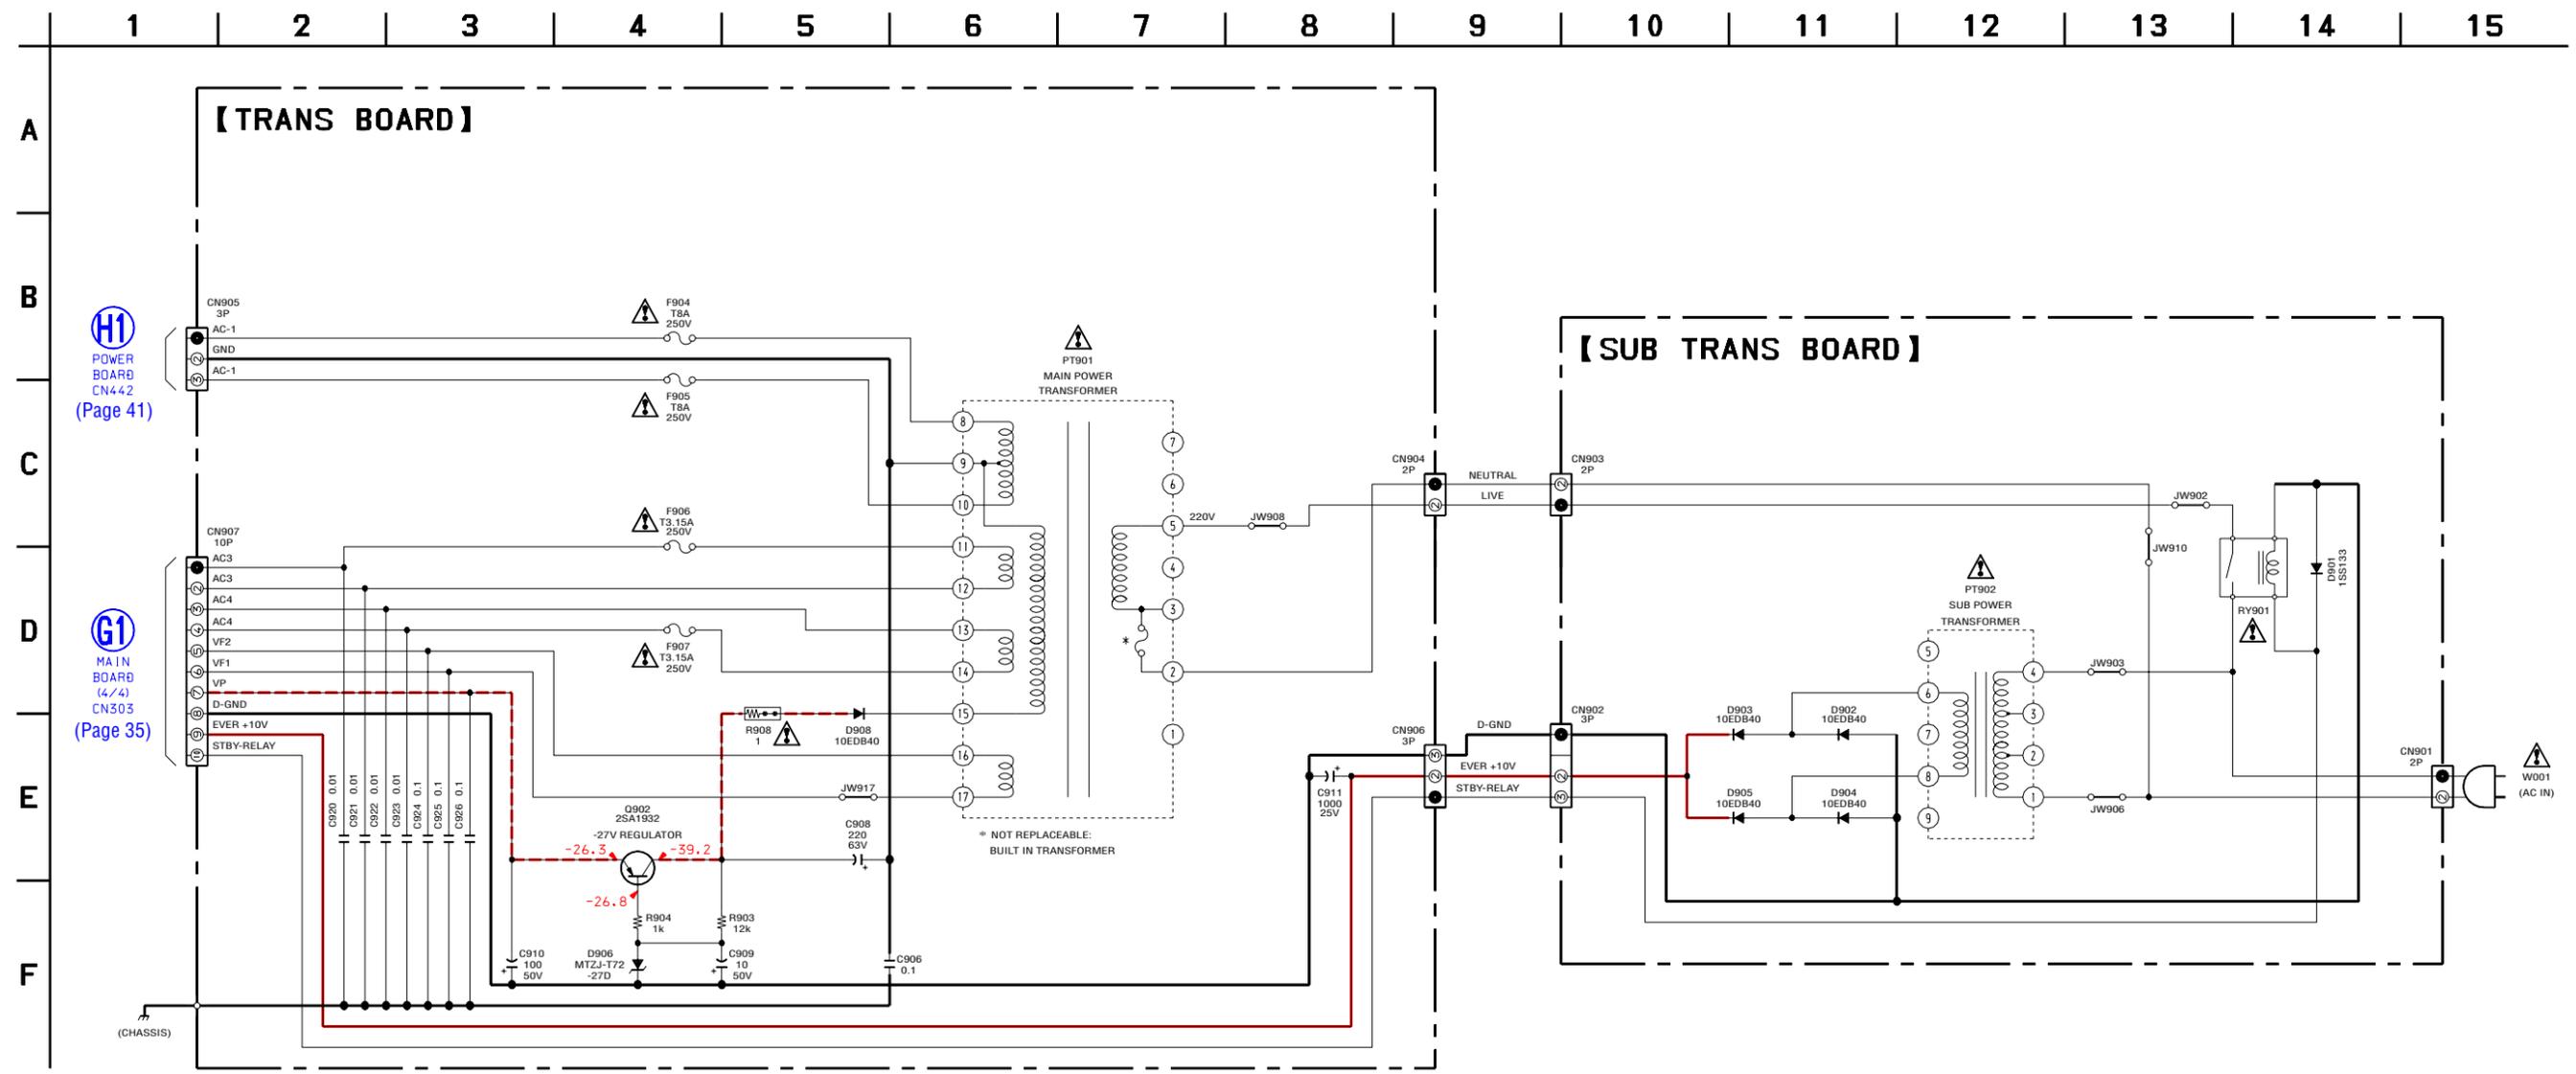


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


6-25. PRINTED WIRING BOARDS – TRANS Section – (E51, MX only) • See page 25 for Circuit Boards Location.  :Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D901	B-9
D902	A-8
D903	A-8
D904	A-8
D905	A-8
D906	C-6
D908	B-4
Q902	B-5

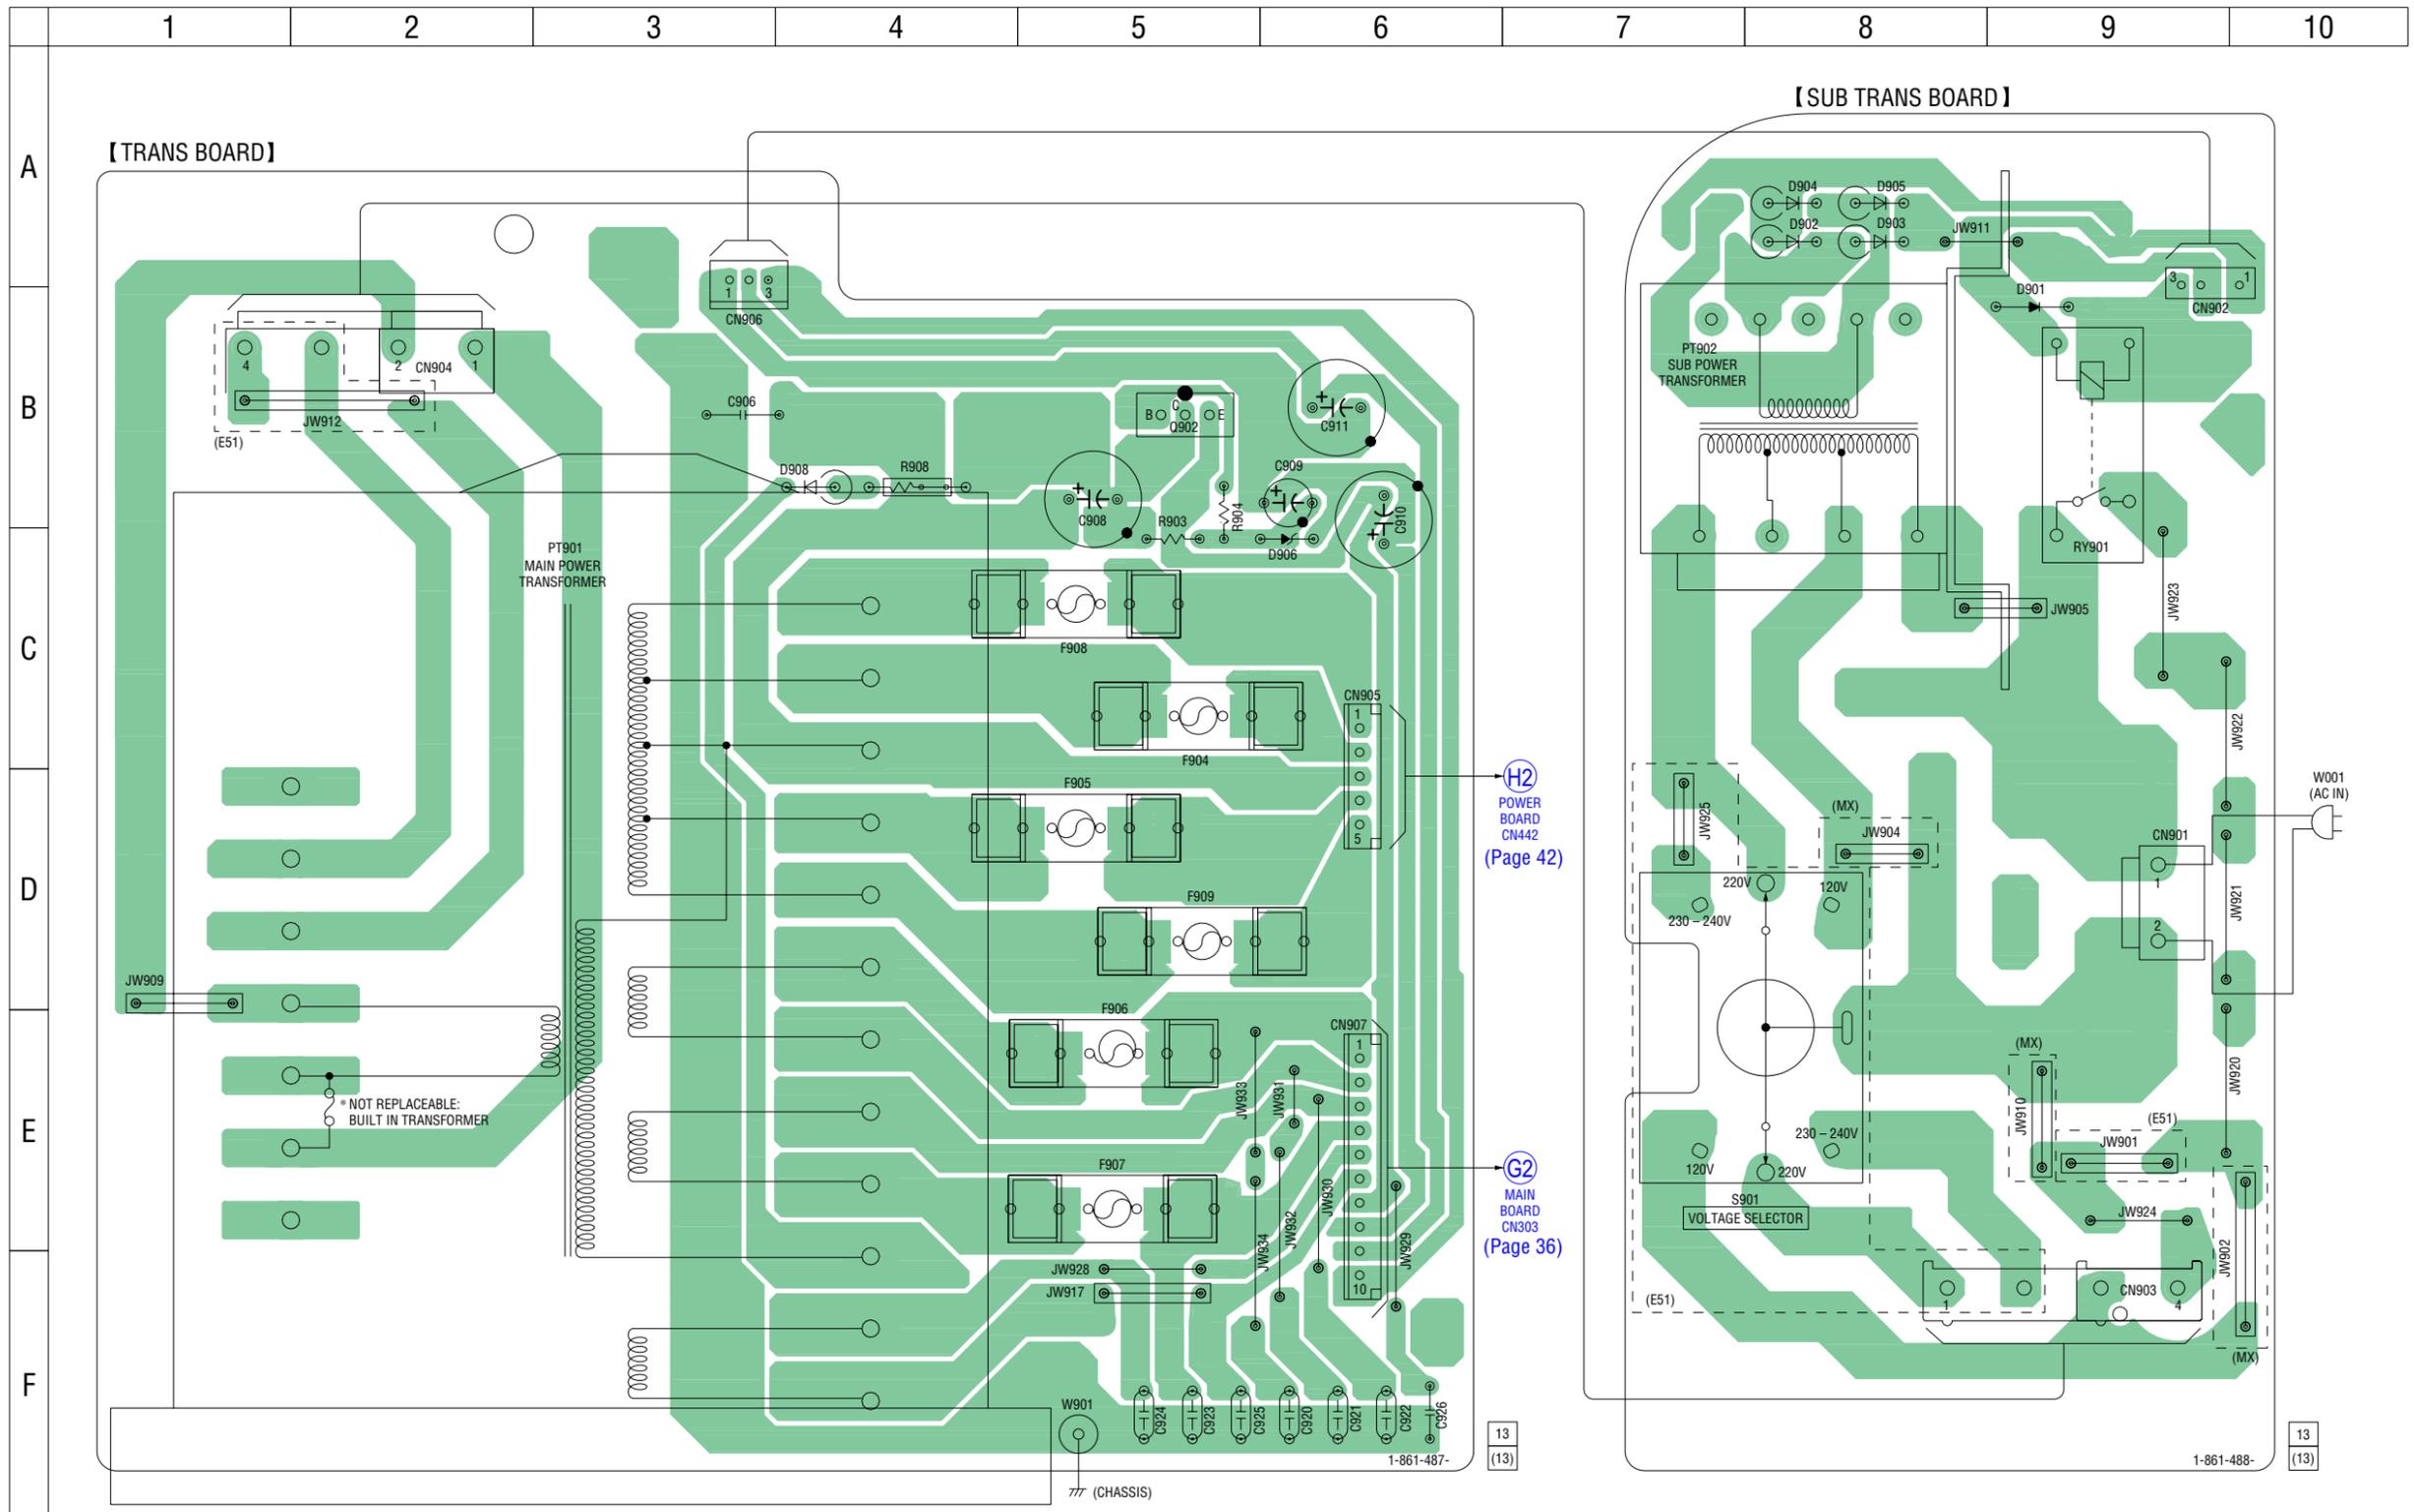


6-26. SCHEMATIC DIAGRAM –TRANS Section – (E51, MX only)

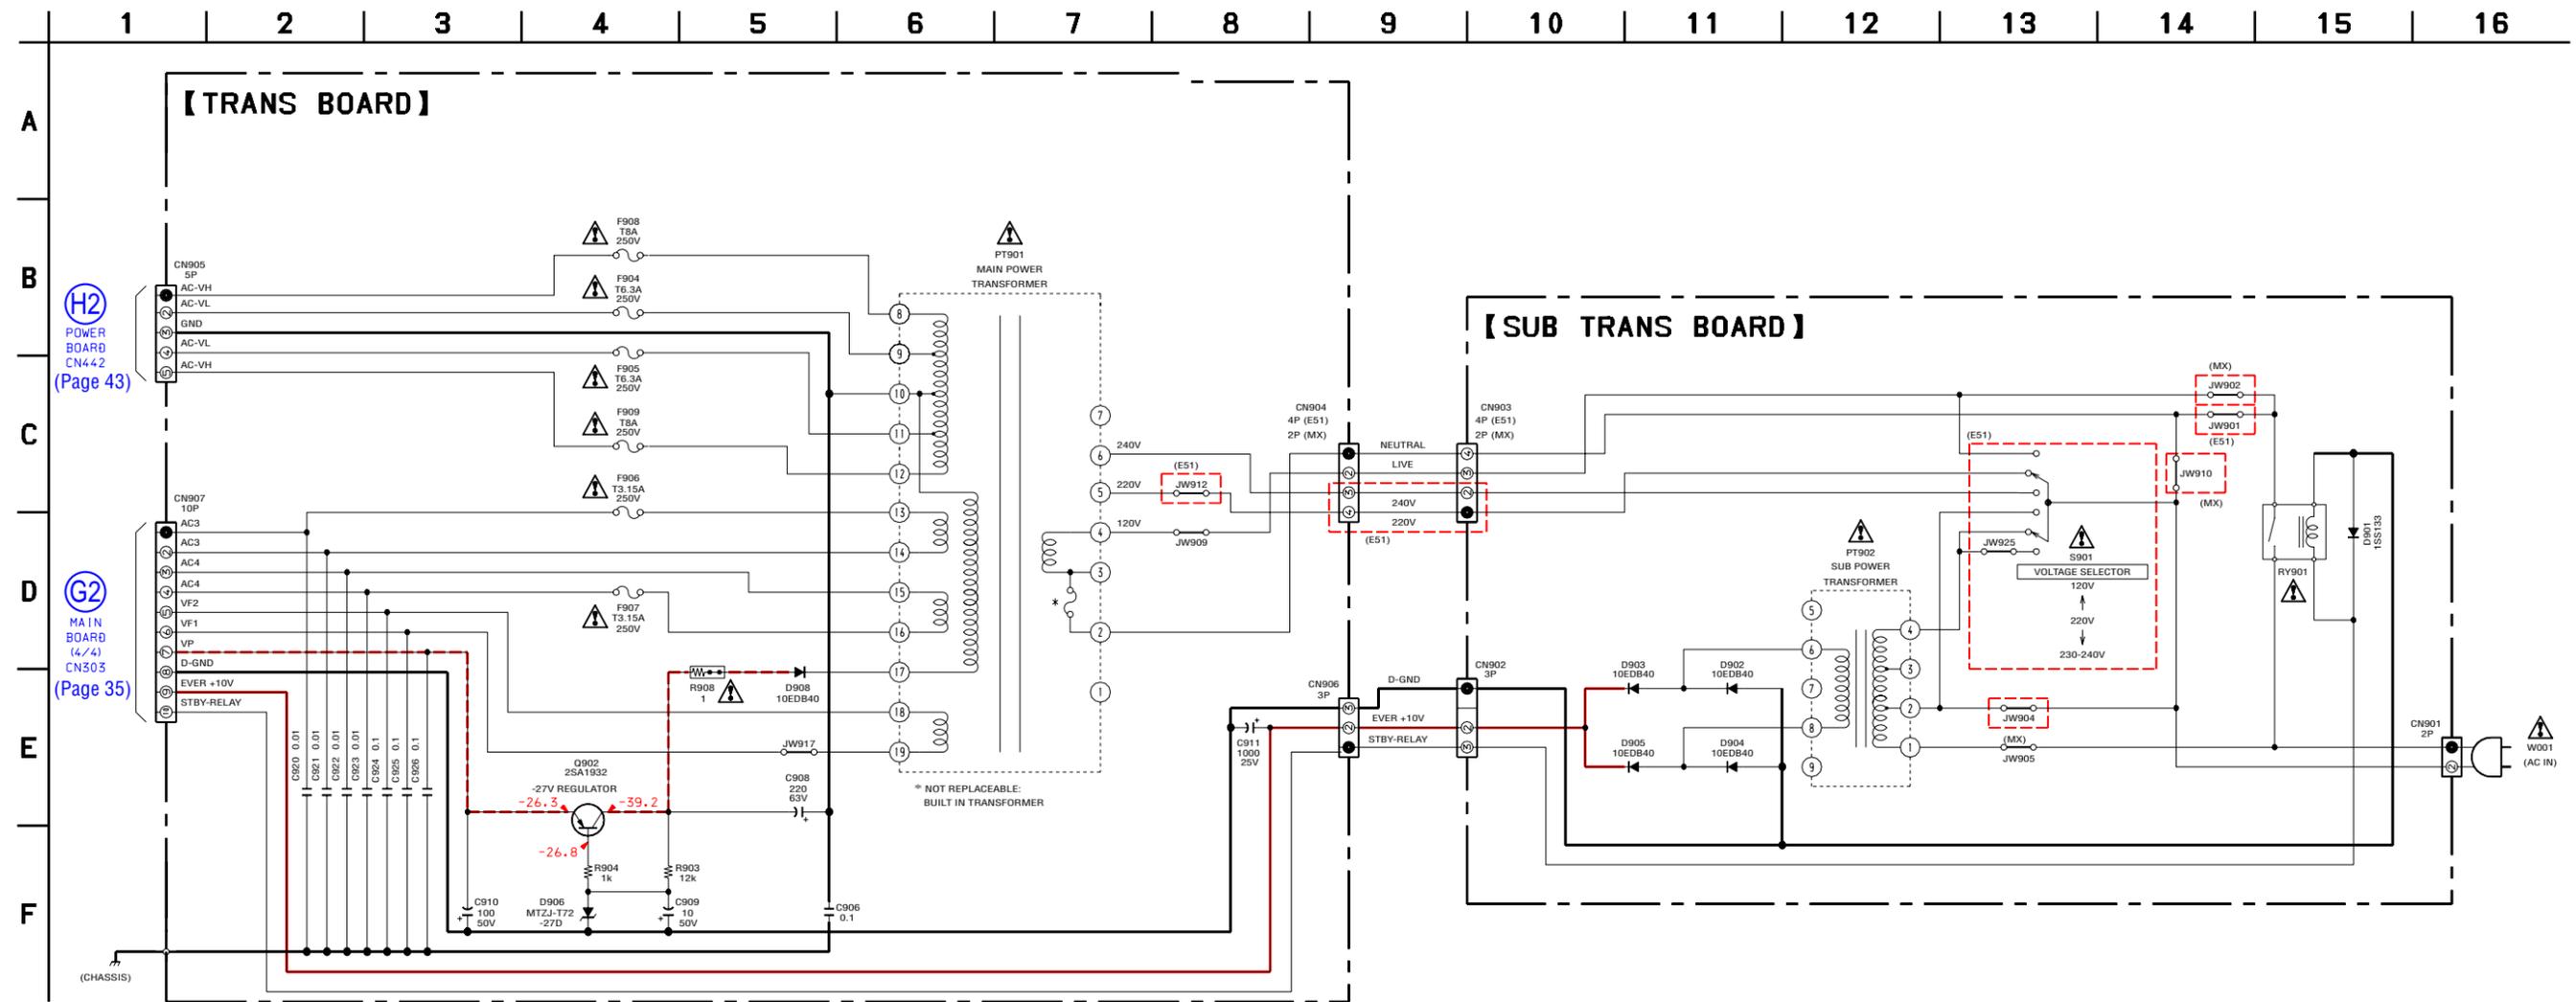


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

• Waveforms


– CD Board –

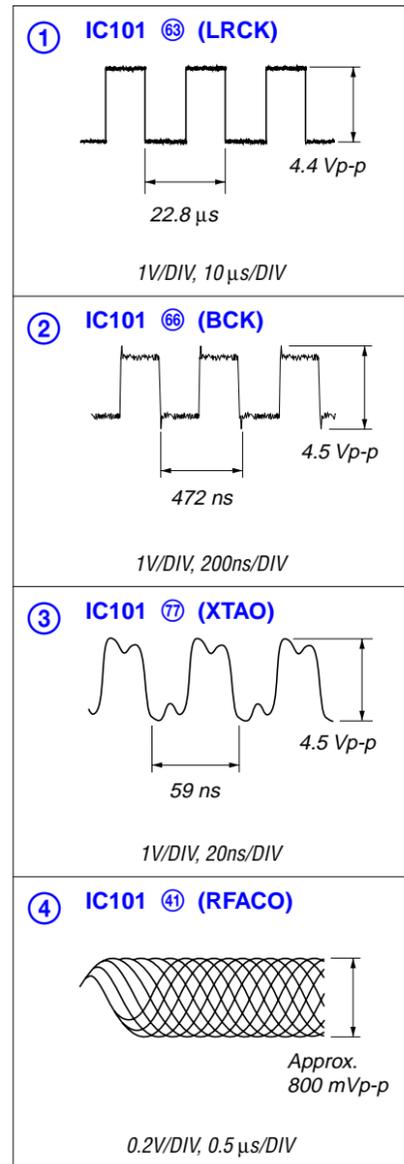

– MAIN Board –

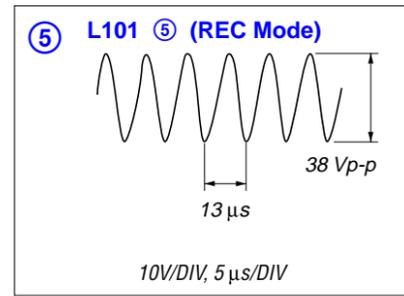


– PANEL Board –

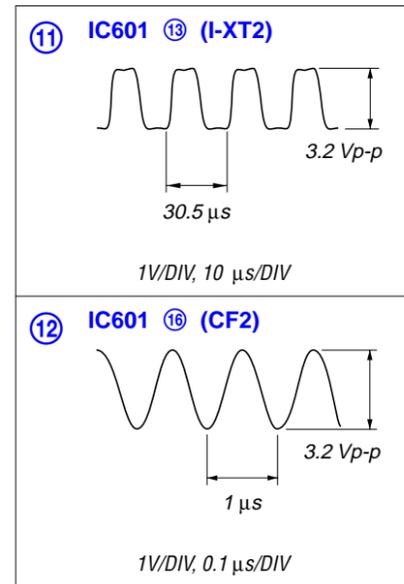


• IC Block Diagrams


– CD Board –

IC101 CXD3059AR

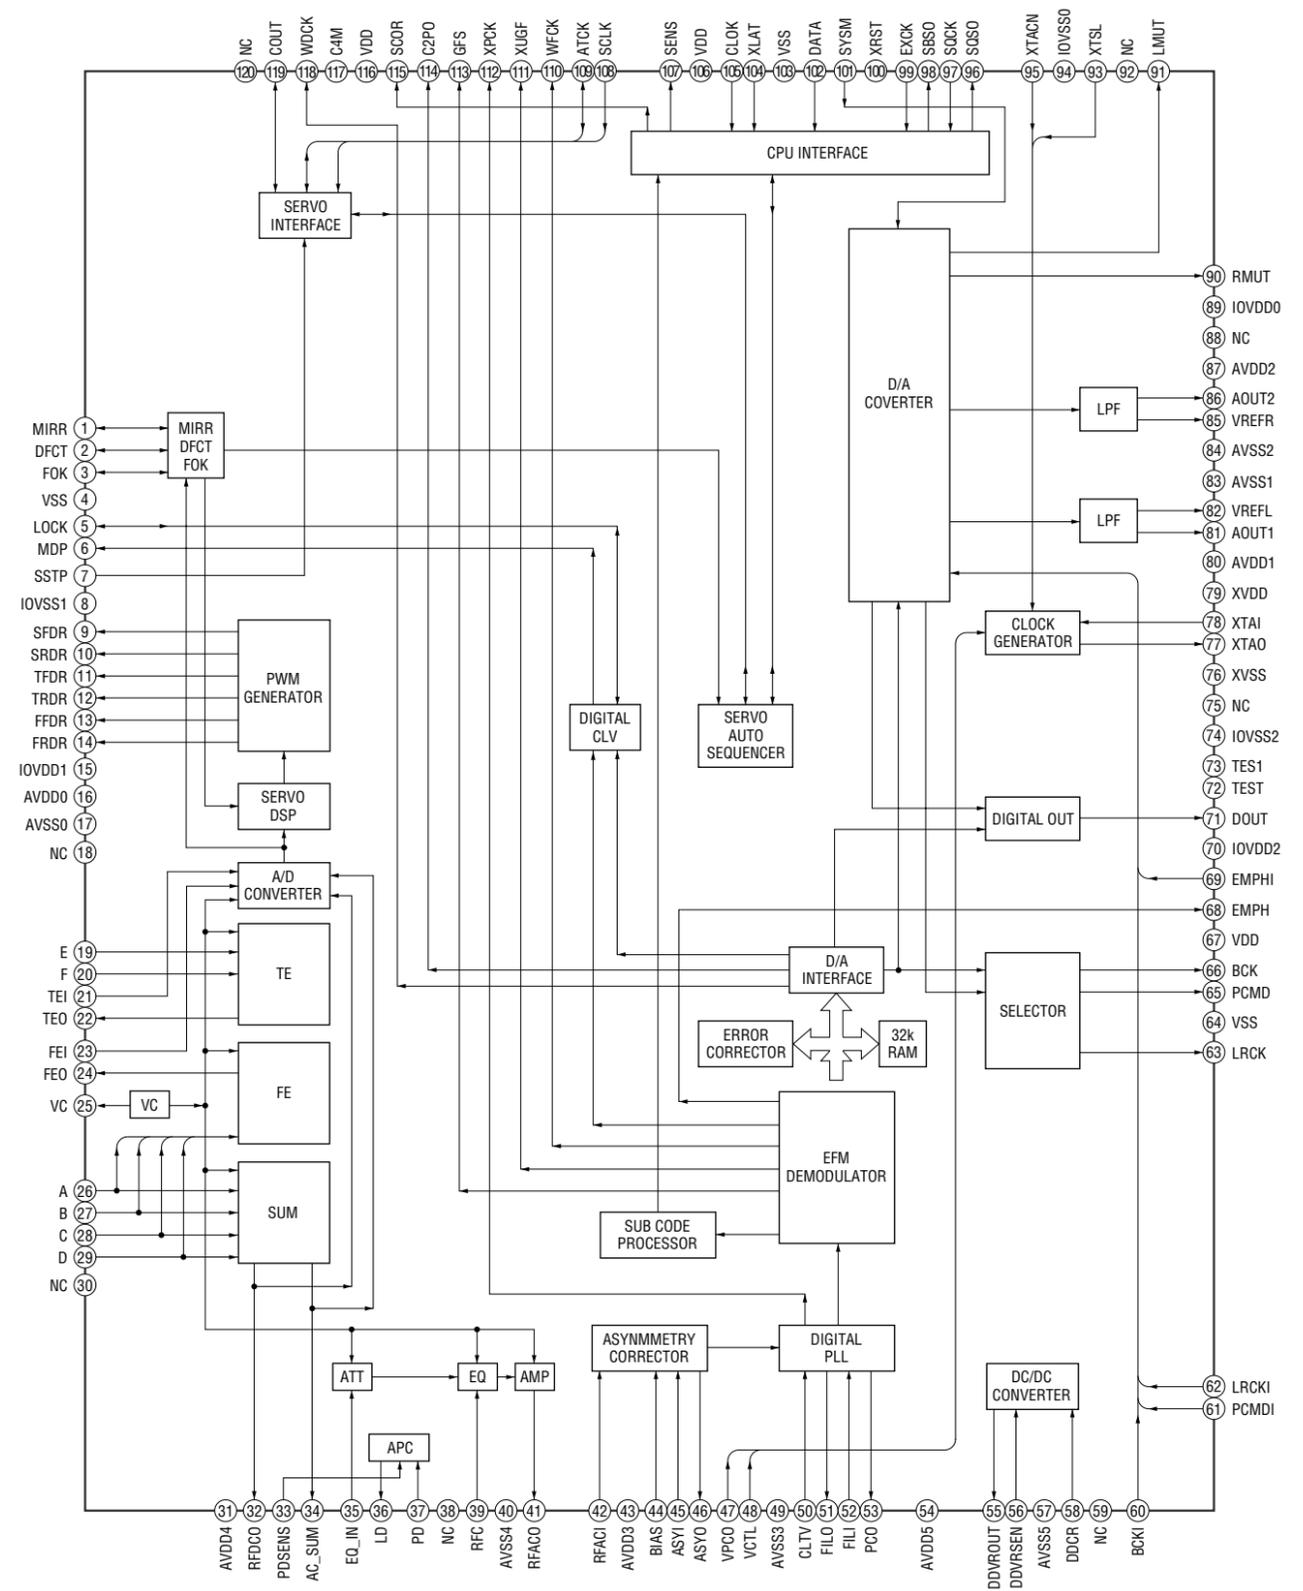


IC251 BA5947FM

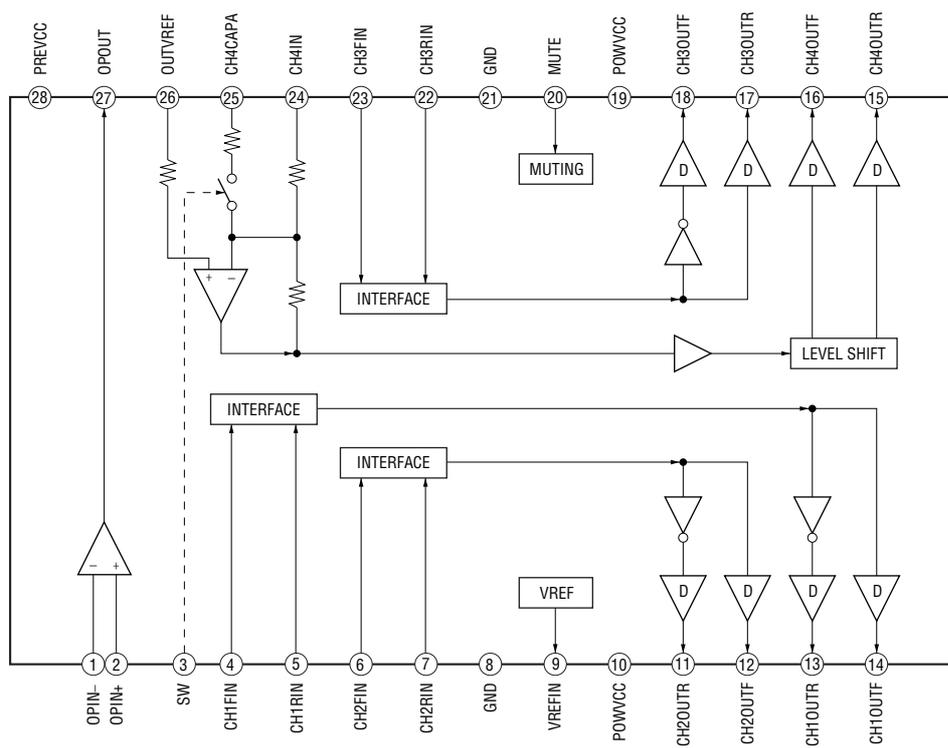

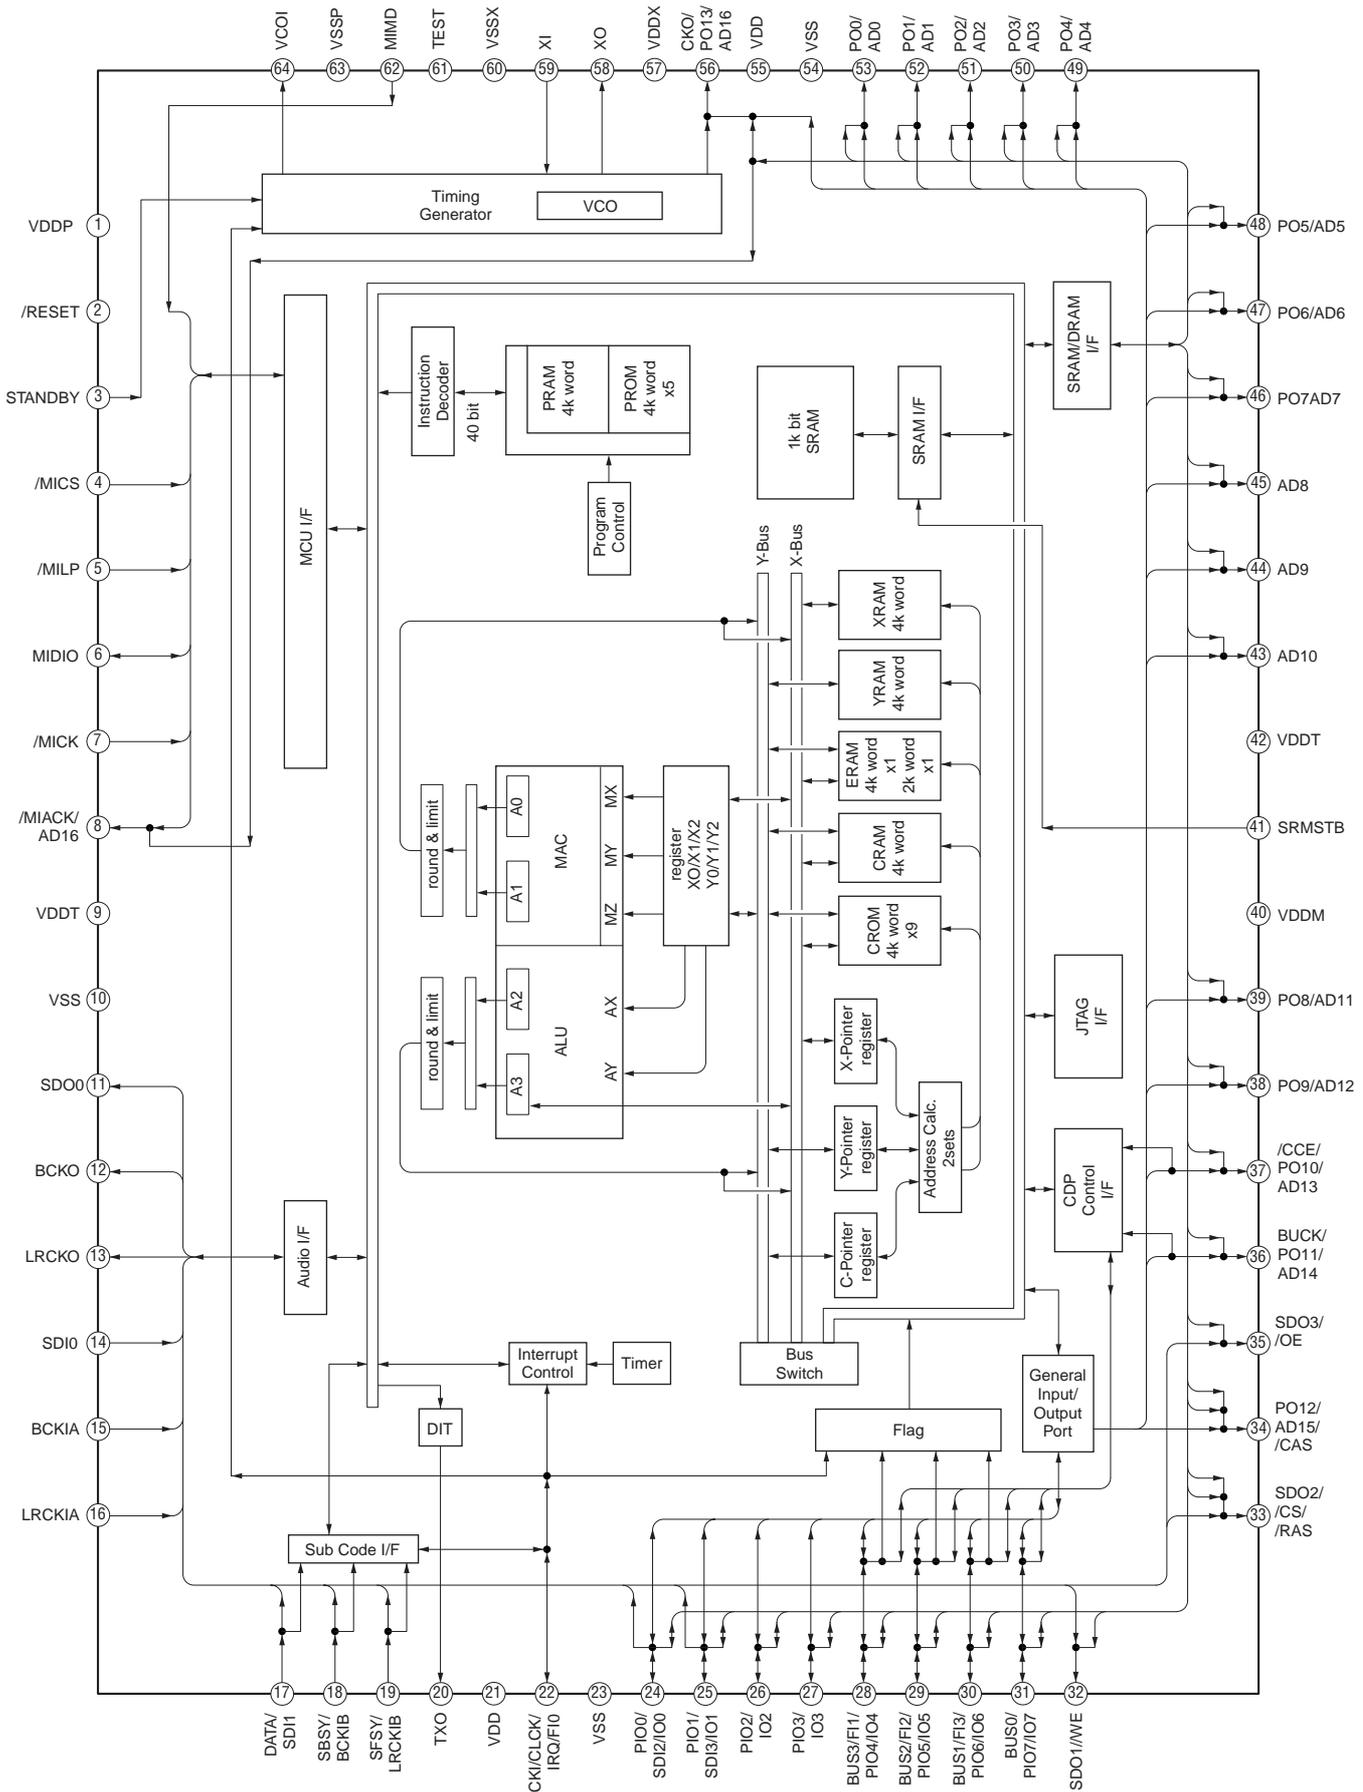


IC303 BH15FB1WG

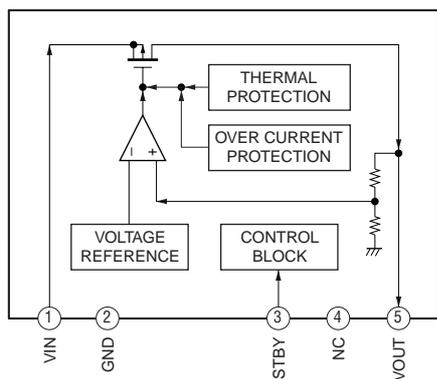


- DRIVER Board -

IC701, 712 BA6956AN

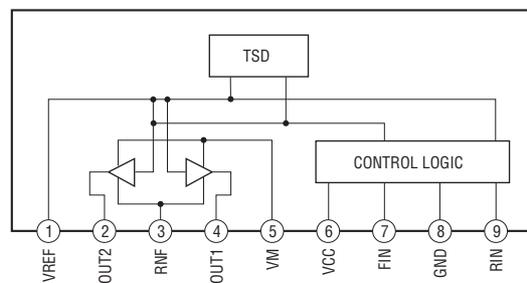


- MAIN Board -

IC101 BD3401KS2

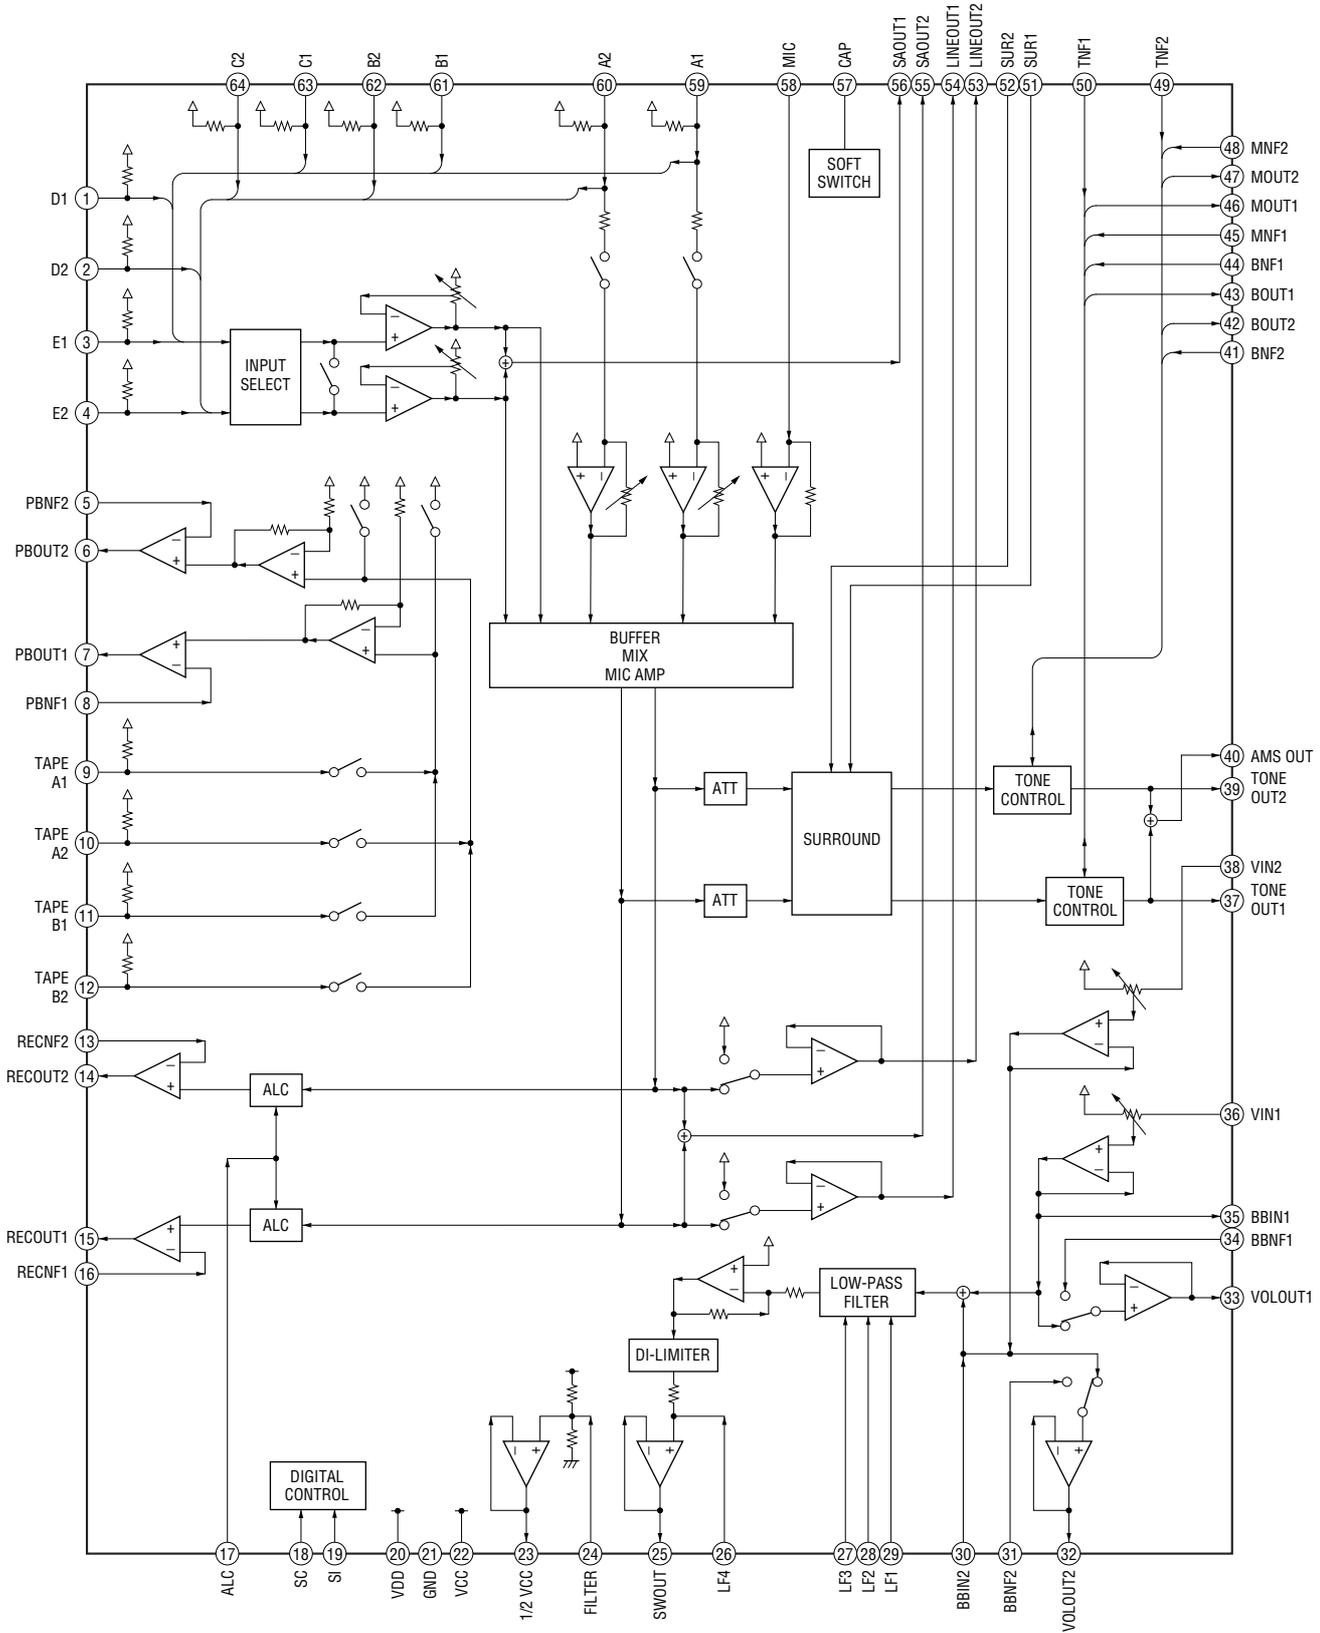

IC201 BA3126N

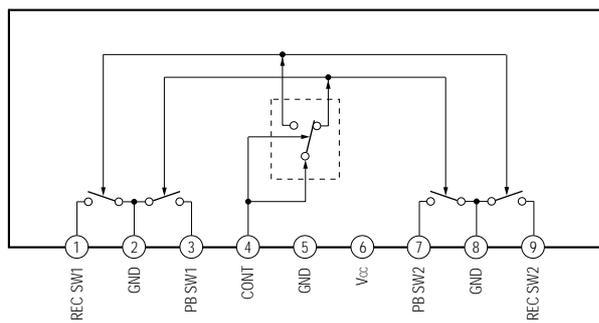

• IC Pin Function Description

MAIN BOARD IC371 BU2099FV (LOADING/TABLE MOTOR DRIVER)

Pin No.	Pin Name	I/O	Description
1	VSS	—	Ground terminal
2	N.C.	—	Not used
3	DATA	I	Serial data input from the motor/plunger driver
4	CLOCK	I	Serial data transfer clock signal input from the system controller
5	LCH	I	Latch pulse signal input from the system controller
6	Q0	O	Recording/playback selection signal output terminal
7	BIAS	O	Recording bias control signal output terminal
8, 9	Q2, Q3	O	Not used
10	Q4	O	CD muting on/off control signal output terminal
11	Q5	O	Tuner muting on/off control signal output to the FM/AM tuner pack
12	Q6	O	Power amplifier on/off control signal output terminal
13	Q7	O	Loading motor drive signal output terminal
14	Q8	O	Loading motor drive signal output terminal
15	Q9	O	Table motor drive signal output terminal
16	Q10	O	Table motor drive signal output terminal
17	Q11	O	Front speaker on/off relay drive control signal output terminal
18	SO	O	Serial data output terminal Not used
19	OE	—	Not used
20	VDD	—	Power supply terminal (+3.3V)

PANEL BOARD IC601 LC876996A-53H2-E (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	O-MP3 CS	O	Chip select signal output to the MP3 decoder
2	O-MP3 LP	O	Latch pulse signal output to the MP3 decoder
3	I-MP3 ACK	I	Acknowledge signal input from the MP3 decoder
4	I-MP3 REQ	I	Request signal input from the MP3 decoder
5	I-SCOR (Q-DATA REQ)	I	Subcode Q data request signal input from the CD DSP
6	O-MP3 RESET	O	Reset signal output to the MP3 decoder "L": reset
7	I-BU1924 DATA	I	RDS serial data input from the FM/AM tuner pack (AEP, UK only)
8	I-BU1924 CLK	I	RDS serial data transfer clock signal input from the FM/AM tuner pack (AEP, UK only)
9	I-VOLUME-IN1	I	Jog dial pulse input terminal (VOLUME)
10	I-VOLUME-IN2	I	Jog dial pulse input terminal (VOLUME)
11	RESET	I	System reset signal input terminal "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it changes to "H"
12	I-XT1	I	System clock input terminal (32.768 kHz)
13	O-XT2	O	System clock output terminal (32.768 kHz)
14	VSS1	—	Ground terminal
15	CF1	I	System clock input terminal (10 MHz)
16	CF2	O	System clock output terminal (10 MHz)
17	VDD1	—	Power supply terminal (+3.3V)
18	I-PROTECT	I	Protect signal input from the amplifier circuit
19	WFR/HP/MIC-IN	I	Headphone detection signal input from the electrical volume
20	I-CD ENCODER	I	Disc tray address detection signal input terminal
21	I-CD OPEN/CLOSE	I	Disc tray open/close detection signal input terminal
22	I-TAPE A STAT	I	Deck-A cassette detection signal, deck-A mode detection signal and recording (reverse direction) detection signal input terminal (A/D input)
23	I-TAPE B STAT	I	Deck-B cassette detection signal, deck-B mode detection signal and recording (forward direction) detection signal input terminal (A/D input)
24	I-STREAM/VACS	I	VACS/stream signal input terminal (A/D input)
25 to 27	I-KEY3 to I-KEY1	I	Front panel key input terminal (A/D input)
28	I-SIRCS IN	I	Remote control signal input terminal
29	I-AC CUT	I	AC detection signal input terminal "L": AC off
30 to 42	G13 to G1	O	Grid drive signal output to the fluorescent indicator tube
43 to 45	S1 to S3	O	Segment drive signal output to the fluorescent indicator tube
46	VDD3	—	Power supply terminal (+3.3V)
47 to 50	S4 to S7	O	Segment drive signal output to the fluorescent indicator tube
51	-VPP	—	Power supply terminal (-27V)
52 to 65	S8 to S21	O	Segment drive signal output to the fluorescent indicator tube
66	I-SPEC/ MODEL/METER	I	Destination setting signal, model setting signal and VACS/stream gain control signal input terminal
67	I-TUNED-IN	I	Tuning detection signal input from the FM/AM tuner pack "L": tuned
68	I-STEREO-IN	I	FM stereo detection signal input from the FM/AM tuner pack "L": stereo
69	I-AMS-IN	I	Auto music sensor detection signal input from the electrical volume "L": music is present, "H": music is not present
70	I-REEL-A-IN	I	Deck-A tape reel rotating detection signal input terminal
71	I-REEL-B-IN	I	Deck-B tape reel rotating detection signal input terminal

Pin No.	Pin Name	I/O	Description
72	VDD4	—	Power supply terminal (+3.3V)
73	I-CD NUM SENSOR	I	CD table address detection signal input terminal
74	O-POWER RELAY	O	Power on/off control signal output terminal “H”: power on
75	O-SYSTEM-MUTE	O	System muting on/off control signal output terminal “H”: muting on
76	O-POWER LED	O	LED drive signal output of the I/Ⓞ (power) indicator “H”: LED on
77	O-I-BASS LED	O	LED drive signal output of the i-BASS indicator “H”: LED on
78 to 80	NONE	O	Not used
81	I-MULTI-JOG IN1	I	Jog dial pulse input terminal (MULTI JOG)
82	I-MULTI-JOG IN2	I	Jog dial pulse input terminal (MULTI JOG)
83	I-LC72121 DI	I	Serial data input from the FM/AM tuner pack
84	O-LC72121 CE	O	Chip enable signal output to the FM/AM tuner pack
85	O-LC72121/ BU2099FV DO	O	Serial data output to the FM/AM tuner pack and motor/plunger drive
86	O-LC72121/ BU2099FV CLK	O	Serial data transfer clock signal output to the FM/AM tuner pack, loading/table motor driver and motor/plunger driver
87	O-BU2099FV LCH	O	Latch pulse signal output to the loading/table motor driver and motor/plunger driver
88	O-BU3401 CLK	O	Serial data transfer clock signal output to the electrical volume
89	VSS2	—	Ground terminal
90	VDD2	—	Power supply terminal (+3.3V)
91	O-BU3401 DATA	O	Serial data output to the electrical volume
92	O-XTCN	O	Oscillator control signal output to the CD DSP
93	O-X-RES (RESET)	O	Reset signal output to the CD DSP and motor/coil driver “L”: reset
94	O-XLT (CD-LAT)	O	Latch pulse signal output to the CD DSP
95	O-CD-DATA	O	Serial data output to the CD DSP
96	I-SENS	I	Serial data input from the CD DSP
97	O-CD-CLK	O	Serial data transfer clock signal output to the CD DSP
98	O-MP3-DO	O	Serial data output to the MP3 decoder
99	I-MP3-DI	I	Serial data input from the MP3 decoder
100	O-MP3-CLK	O	Serial data transfer clock signal output to the MP3 decoder

PANEL BOARD IC602 BU2099FV (MOTOR/PLUNGER DRIVER)

Pin No.	Pin Name	I/O	Description
1	VSS	—	Ground terminal
2	NC	—	Not used
3	DATA	I	Serial data input from the system controller
4	CLOCK	I	Serial data transfer clock signal input from the system controller
5	LCH	I	Latch pulse signal input from the system controller
6	SOL-A	O	Deck-A side trigger plunger drive signal output terminal
7	SOL-B	O	Deck-B side trigger plunger drive signal output terminal
8	MOTOR	O	Capstan/reel motor drive signal output terminal
9, 10	NC	—	Not used
11	MP3-STB	O	Standby signal output to the MP3 decoder
12 to 17	NC	—	Not used
18	SO	O	Serial data output to the loading/table motor driver
19	$\overline{\text{OE}}$	—	Not used
20	VDD	—	Power supply terminal (+3.3V)

SECTION 7 EXPLODED VIEWS


NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
E51 : Chilean and Peruvian models
MX : Mexican model


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

7-1. CASE SECTION

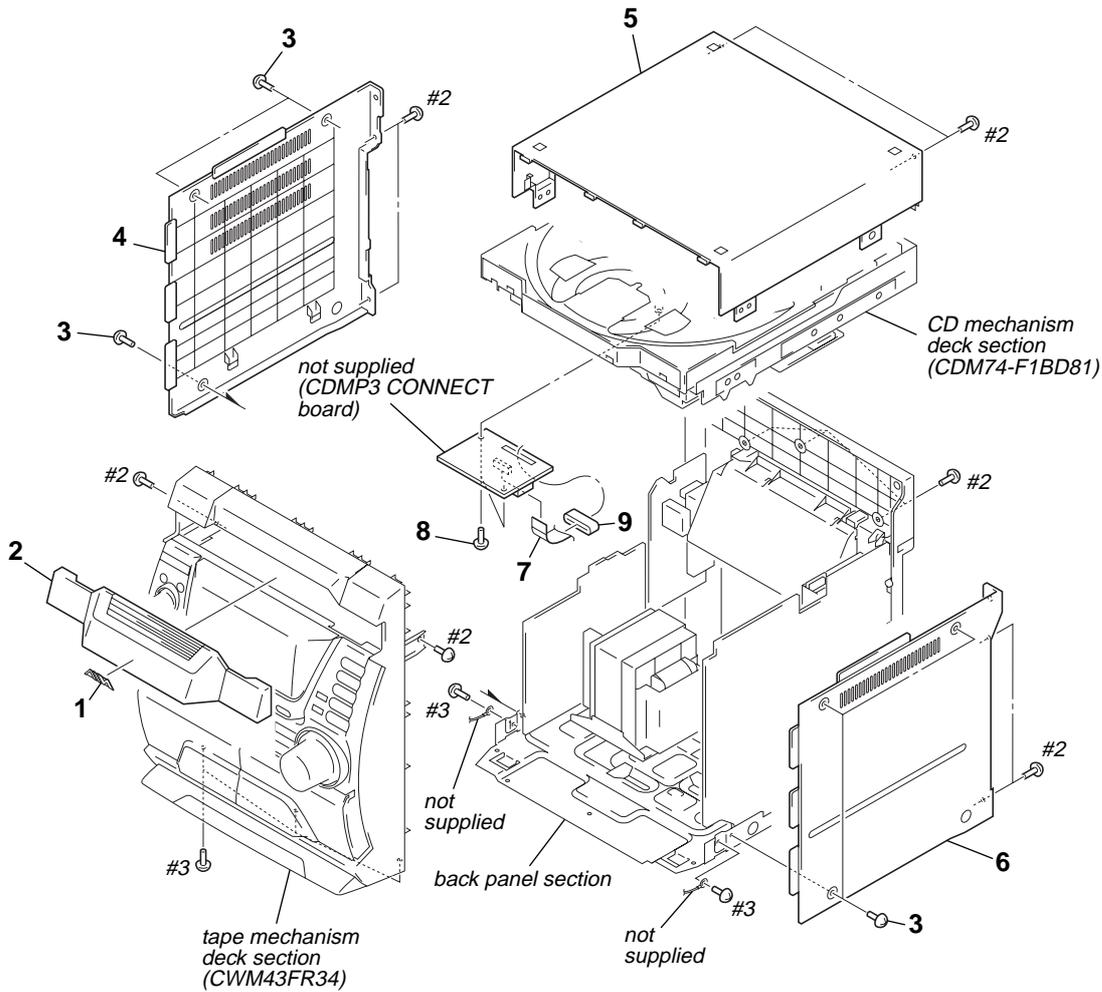


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-245-158-01	EMBLEM		7	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
2	4-252-696-01	PANEL, TRAY		8	4-951-620-01	SCREW (2.6X8), +BVTP	
3	3-363-099-32	SCREW (CASE 3 TP2)		9	1-469-854-11	CORE, FERRITE	
4	4-245-183-91	CASE (SIDE-L)		#2	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
5	4-244-849-91	CASE (TOP)		#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
6	4-245-184-91	CASE (SIDE-R)					

7-2. TAPE MECHANISM DECK SECTION
(CWM43FR34)

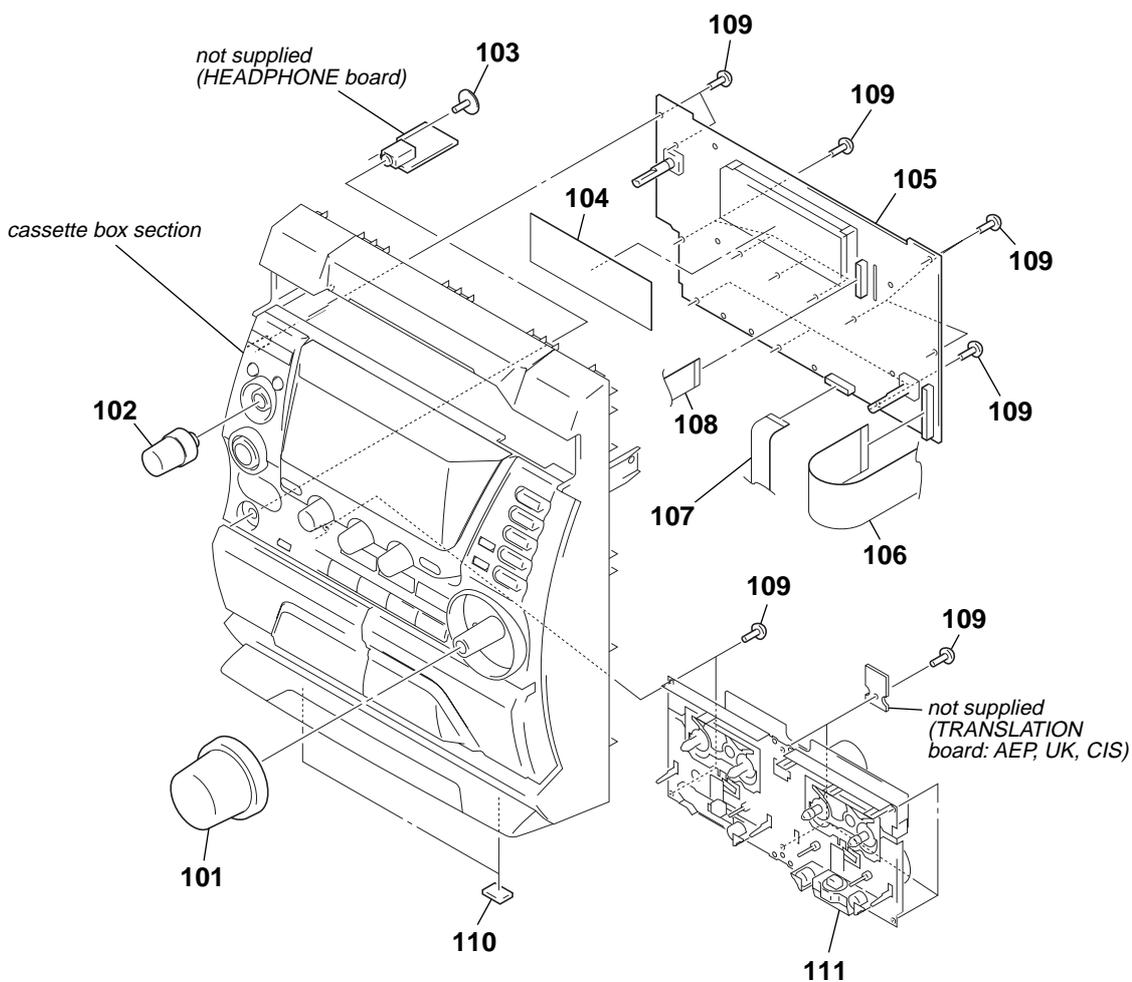


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-252-707-01	KNOB (VOL), PLATING ROTARY		106	1-773-288-11	WIRE (FLAT TYPE) (29 CORE) (E51, MX)	
102	4-252-709-01	KNOB (AMS), PLATING ROTARY		106	1-773-322-11	WIRE (FLAT TYPE) (31 CORE) (AEP, UK, CIS)	
103	3-229-336-01	SCREW, +BVWH TAPPING		107	1-827-145-11	WIRE (FLAT TYPE) (13 CORE)	
104	4-252-718-01	SHEET, FL		108	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
105	A-4751-484-A	PANEL BOARD, COMPLETE (AEP, UK)		109	4-951-620-01	SCREW (2.6X8), +BVTP	
105	A-4751-493-A	PANEL BOARD, COMPLETE (E51, MX)		110	4-225-252-01	CUSHION (FOOT)	
105	A-4751-564-A	PANEL BOARD, COMPLETE (CIS)		111	1-796-486-71	DECK, MECHANICAL (CWM43FR34)	

7-3. CASSETTE BOX SECTION

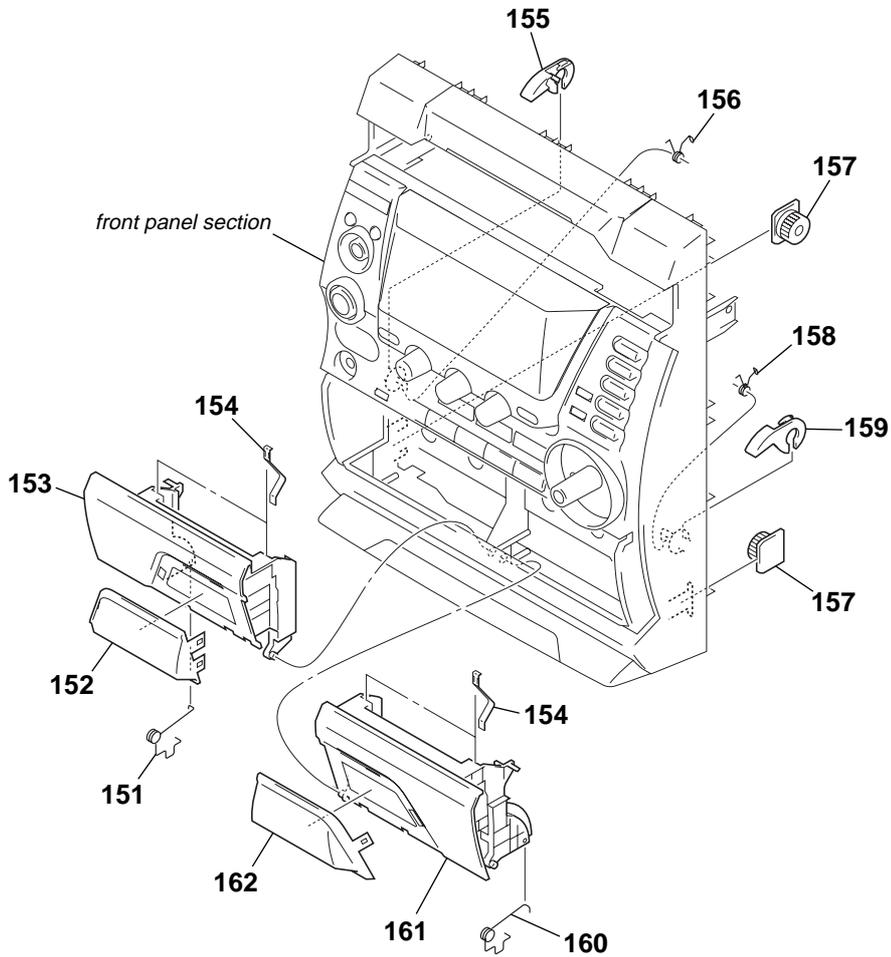


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-252-715-01	SPRING (BOX CASS L), TORSION		157	4-224-104-41	DAMPER	
152	4-252-698-01	WINDOW (L), CASSETTE		158	4-231-841-01	SPRING (HEART CAM-B)	
153	4-252-695-01	BOX (L), CASSETTE		159	4-231-825-01	CAM (B), HEART	
154	4-238-631-01	TAPE SPRING		160	4-252-716-01	SPRING (BOX CASS R), TORSION	
155	4-231-824-01	CAM (A), HEART		161	4-252-694-01	BOX (R), CASSETTE	
156	4-231-836-01	SPRING (HEART CAM-A)		162	4-252-699-01	WINDOW (R), CASSETTE	

7-4. FRONT PANEL SECTION

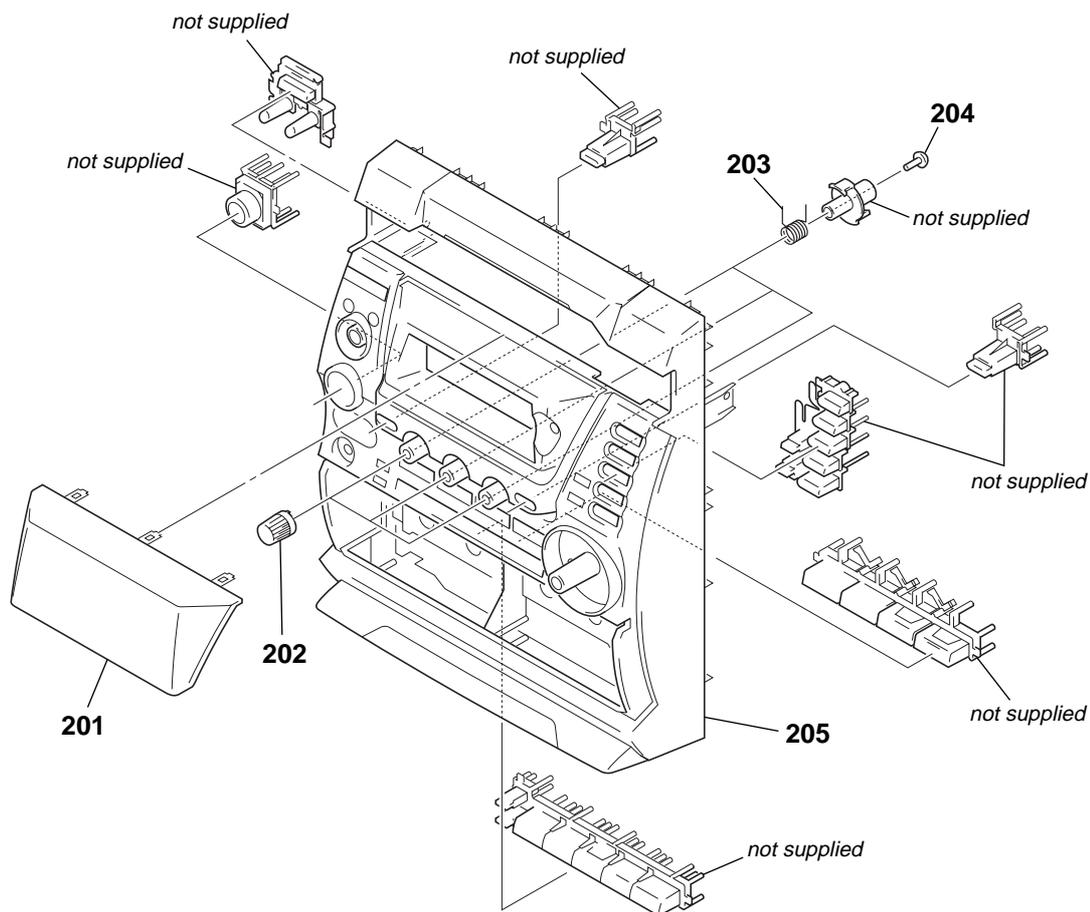


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-252-697-61	WINDOW, DISPLAY (AEP, UK)		203	4-252-717-01	SPRING (BASS), TORSION	
201	4-252-697-71	WINDOW, DISPLAY (CIS)		204	4-218-253-72	SCREW (M2.6), +BTTP (AEP, UK, E51, MX)	
201	4-252-697-81	WINDOW, DISPLAY (E51, MX)		204	4-951-620-11	SCREW (2.6X10), +BVTP (CIS)	
202	4-252-710-01	KNOB (BASS), PLATING ROTARY		205	4-252-693-01	PANEL, FRONT	

7-5. BACK PANEL SECTION

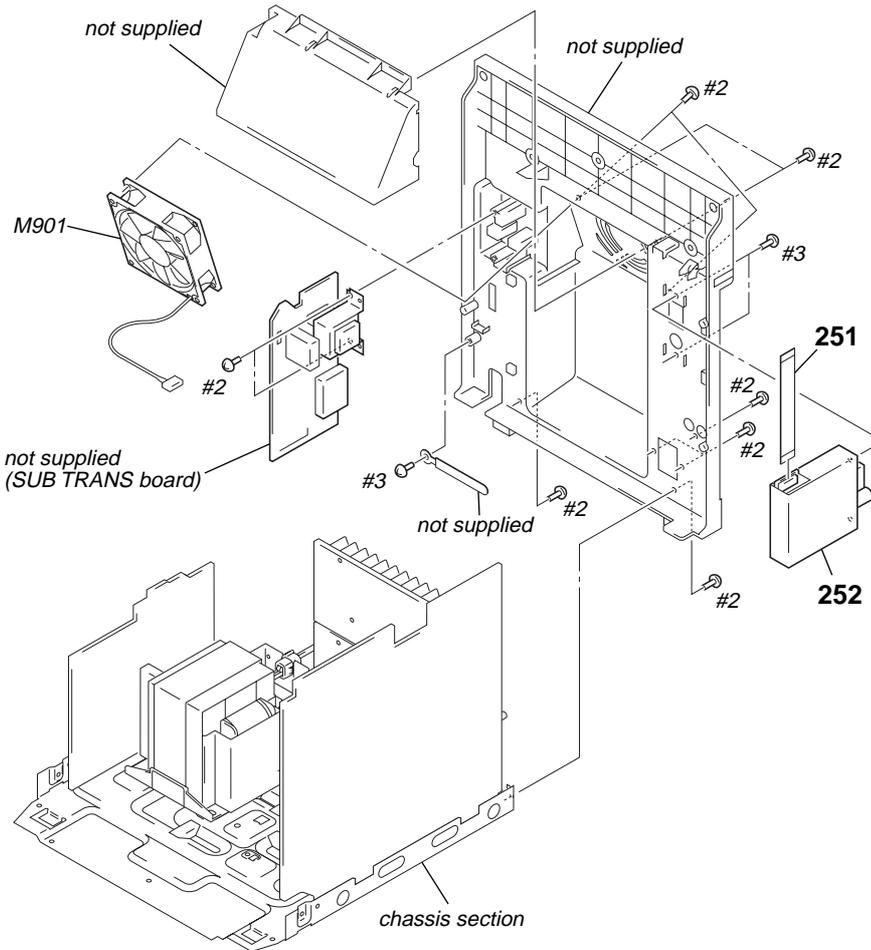

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	1-769-940-11	WIRE (FLAT TYPE) (11 CORE) (E51, MX)		M901	1-763-072-11	FAN, DC (E51)	
251	1-777-353-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK, CIS)		M901	1-763-117-13	FAN, DC (EXCEPT E51)	
252	1-693-615-11	TUNER (FM/AM) (E51, MX)		#2	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
252	1-693-616-11	TUNER (FM/AM) (AEP, UK)		#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
252	1-693-654-11	TUNER (FM/AM) (CIS)					


7-6. CHASSIS SECTION

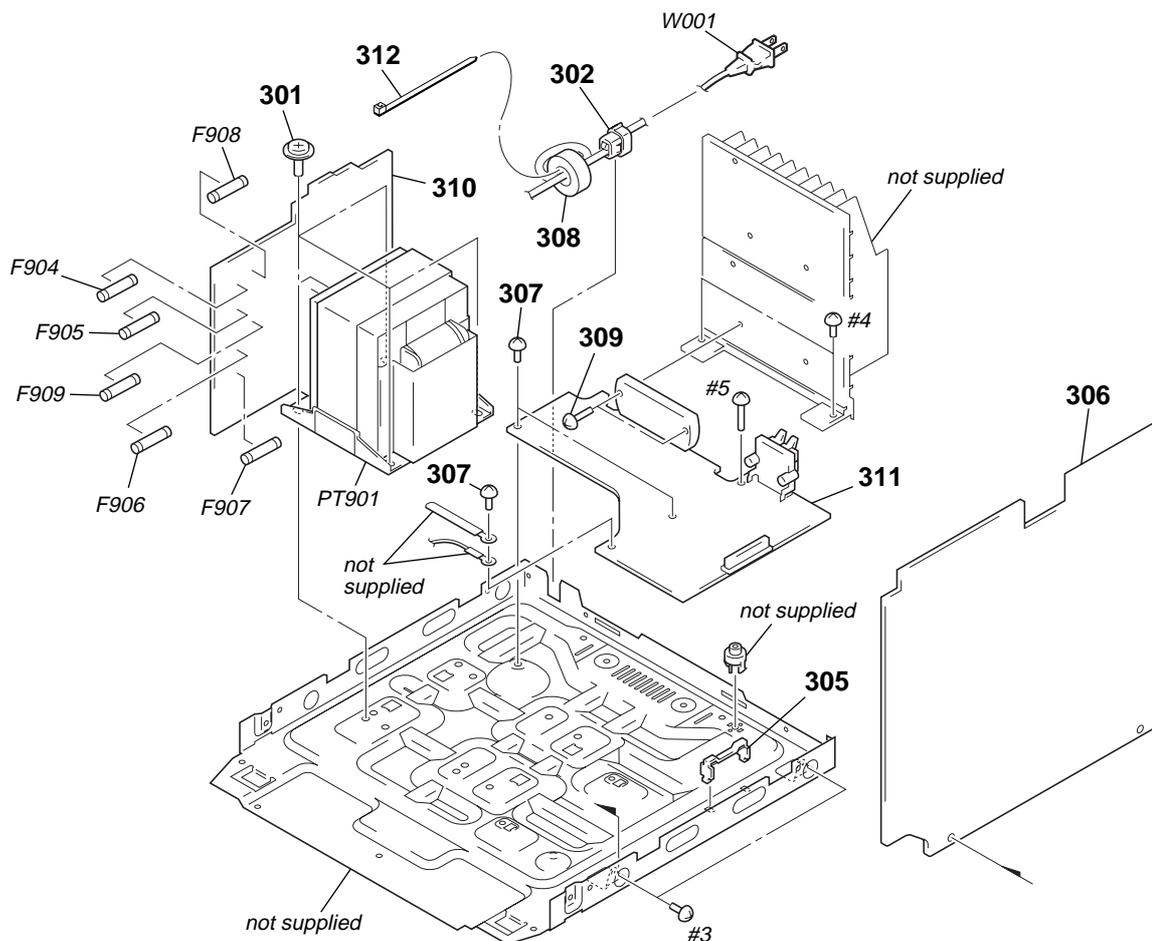

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	4-900-386-01	SCREW		\triangle F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
302	3-703-244-00	BUSHING (2104), CORD (EXCEPT MX)				(AEP, UK, CIS)	
* 302	3-703-571-12	BUSHING (S) (4516), CORD (MX)		\triangle F905	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3A/250V)	
305	4-988-533-01	HOLDER, PWB				(E51, MX)	
306	A-4751-486-A	MAIN BOARD, COMPLETE (AEP, UK)		\triangle F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
						(AEP, UK, CIS)	
306	A-4751-495-A	MAIN BOARD, COMPLETE (E51, MX)		\triangle F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
306	A-4752-928-A	MAIN BOARD, COMPLETE (CIS)		\triangle F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
307	4-242-539-01	BVIT3B+3-8R W/O SLOT					
308	1-400-285-11	F-BEAD, E2515MRT		\triangle F908	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
309	3-905-609-31	SCREW (TRANSISTOR) (CIS)				(E51, MX)	
				\triangle F909	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V)	
						(E51, MX)	
309	3-905-609-41	SCREW (TRANSISTOR) (EXCEPT CIS)		\triangle PT901	1-443-234-11	TRANSFORMER, POWER (AEP, UK, CIS)	
310	A-4751-489-A	TRANS BOARD, COMPLETE (AEP, UK, CIS)		\triangle PT901	1-443-251-11	TRANSFORMER, POWER (E51)	
310	A-4751-498-A	TRANSFORMER BOARD, COMPLETE (E51)		\triangle PT901	1-443-295-11	TRANSFORMER, POWER (MX)	
310	A-4752-953-A	TRANSFORMER BOARD, COMPLETE (MX)					
311	A-4751-490-A	POWER BOARD, COMPLETE (AEP, UK, CIS)					
				\triangle W001	1-777-071-83	CORD, POWER (EXCEPT MX)	
311	A-4751-499-A	POWER BOARD, COMPLETE (E51)		\triangle W001	1-827-226-11	CORD, POWER (MX)	
311	A-4752-996-A	POWER BOARD, COMPLETE (MX)		#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
312	4-059-585-01	TIE, CABLE		#4	7-685-881-09	SCREW +BVTT 4X8 (S)	
\triangle F904	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3A/250V)	(E51, MX)	#5	7-685-649-79	SCREW +BVTP 3X14 TYPE2 IT-3	

7-7. CD MECHANISM DECK SECTION-1
(CDM74-F1BD81)

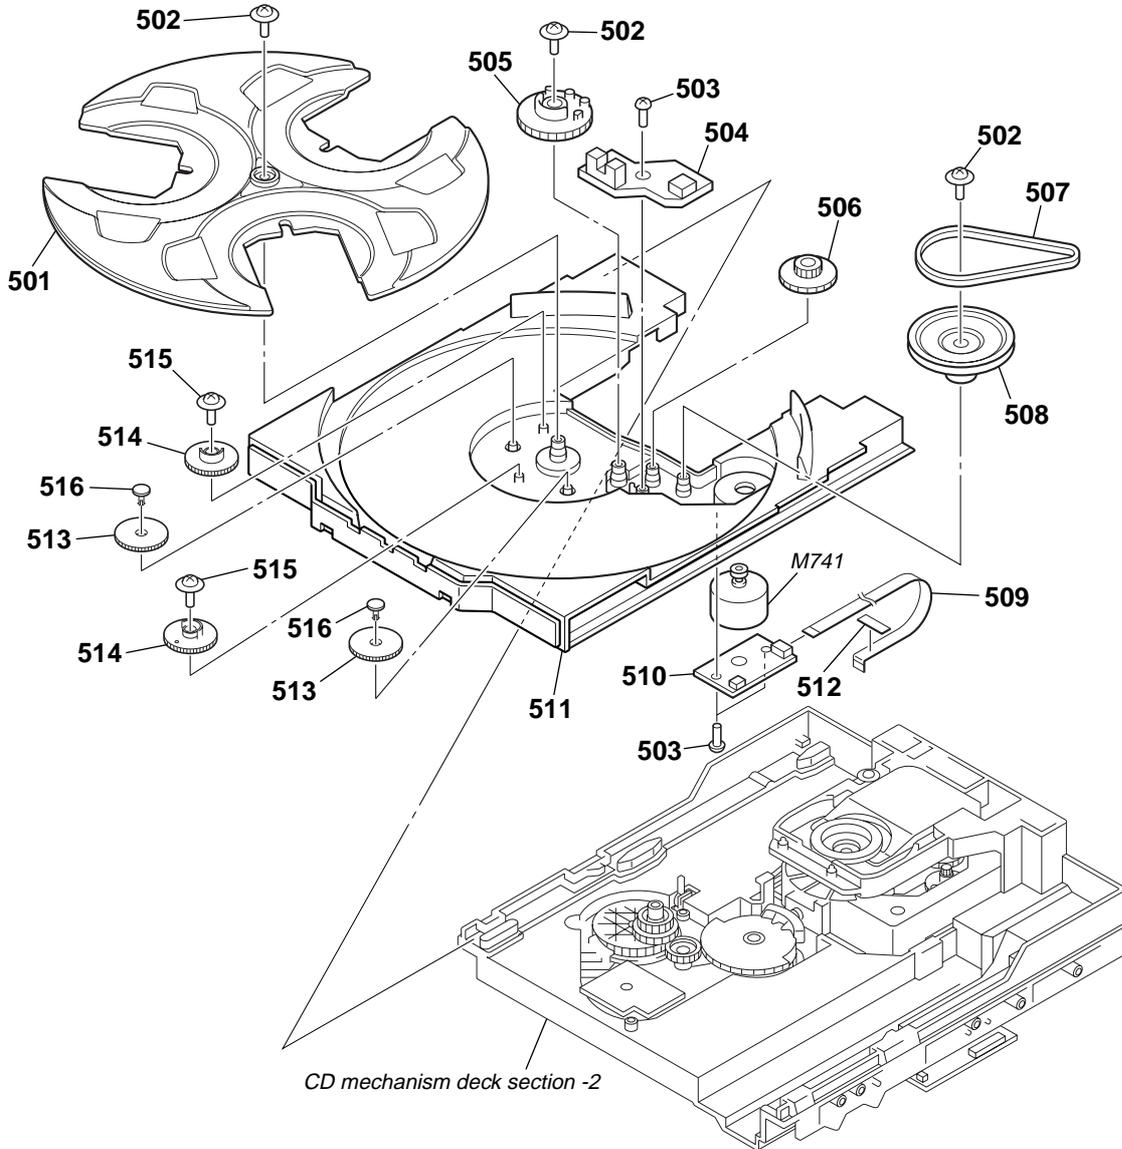


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-243-815-01	TABLE (LOADING)		510	1-687-134-12	MOTOR (TB) BOARD	
502	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		511	4-243-816-01	TRAY	
503	4-218-253-21	SCREW (M2.6), +BTTP		512	3-321-598-01	SHEET (BA)	
504	1-687-132-12	SENSOR BOARD		513	4-245-570-01	GEAR (JOINT)	
505	4-243-819-01	GEAR (GENEVA)		514	4-245-571-02	GEAR (STOPPER)	
506	4-243-820-01	GEAR (TABLE)		515	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
507	4-243-823-01	BELT (TABLE)		516	4-245-572-01	BUSHING (GEAR)	
508	4-243-821-01	PULLEY (TABLE)		M741	A-4723-963-A	MOTOR ASSY, TABLE	
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)					

7-8. CD MECHANISM DECK SECTION-2
(CDM74-F1BD81)

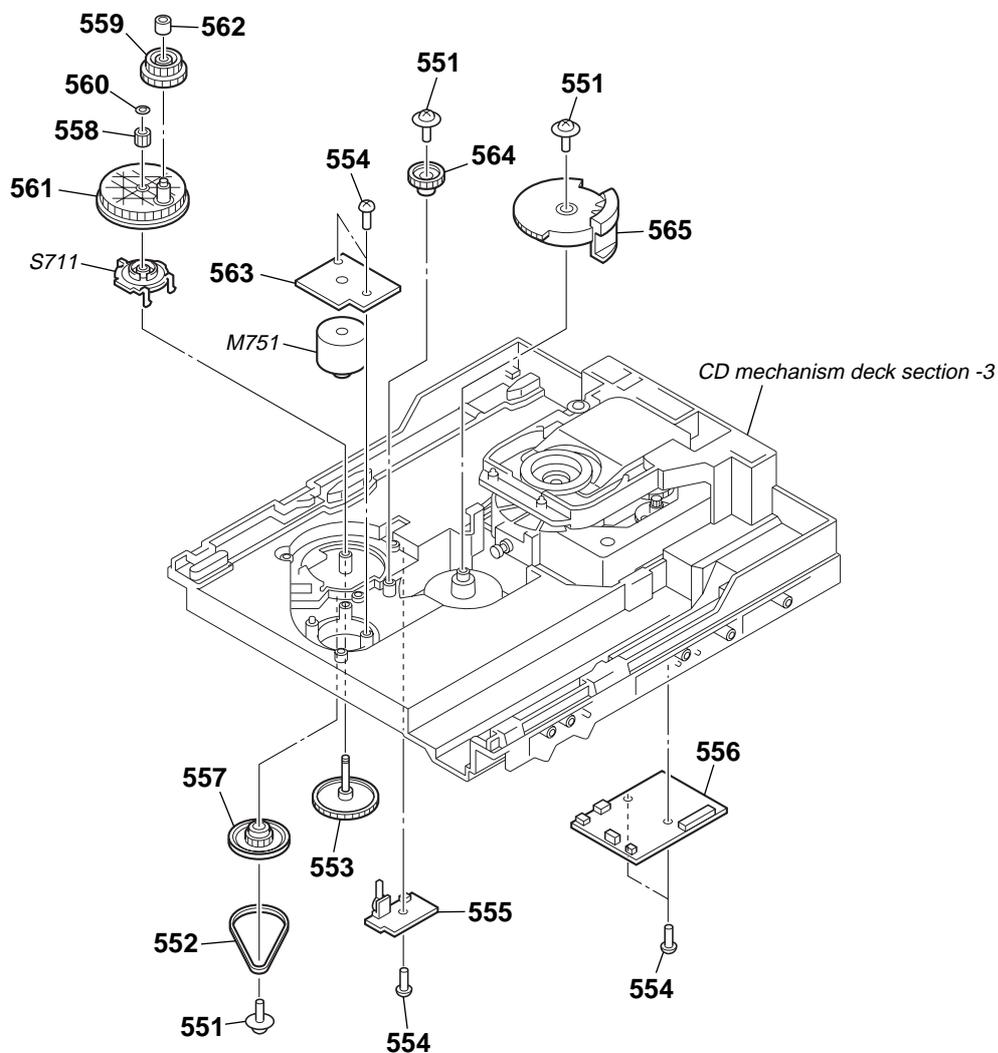


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		560	3-016-533-11	WASHER (FR), STOPPER	
552	4-244-034-01	BELT (LOADING)		561	4-244-108-01	GEAR, SWING	
553	4-224-613-01	GEAR (SHAFT)		562	4-224-608-01	COLLAR, SWING	
554	4-218-253-31	SCREW (M2.6), +BTTP		563	1-687-133-12	MOTOR (LD) BOARD	
555	1-687-669-12	SW BOARD		564	4-224-606-01	GEAR (RV)	
556	1-687-135-12	DRIVER BOARD		565	4-243-818-01	GEAR (U/D)	
557	4-225-844-01	GEAR (LOADING A)		M751	A-4736-655-A	MOTOR ASSY, LOADING	
558	4-224-611-01	GEAR (LOADING B)		S711	1-477-680-12	ENCODER, ROTARY	
559	4-224-609-01	GEAR (LOADING C)				(DISC TRAY ADDRESS DETECT)	

7-9. CD MECHANISM DECK SECTION-3
(CDM74-F1BD81)

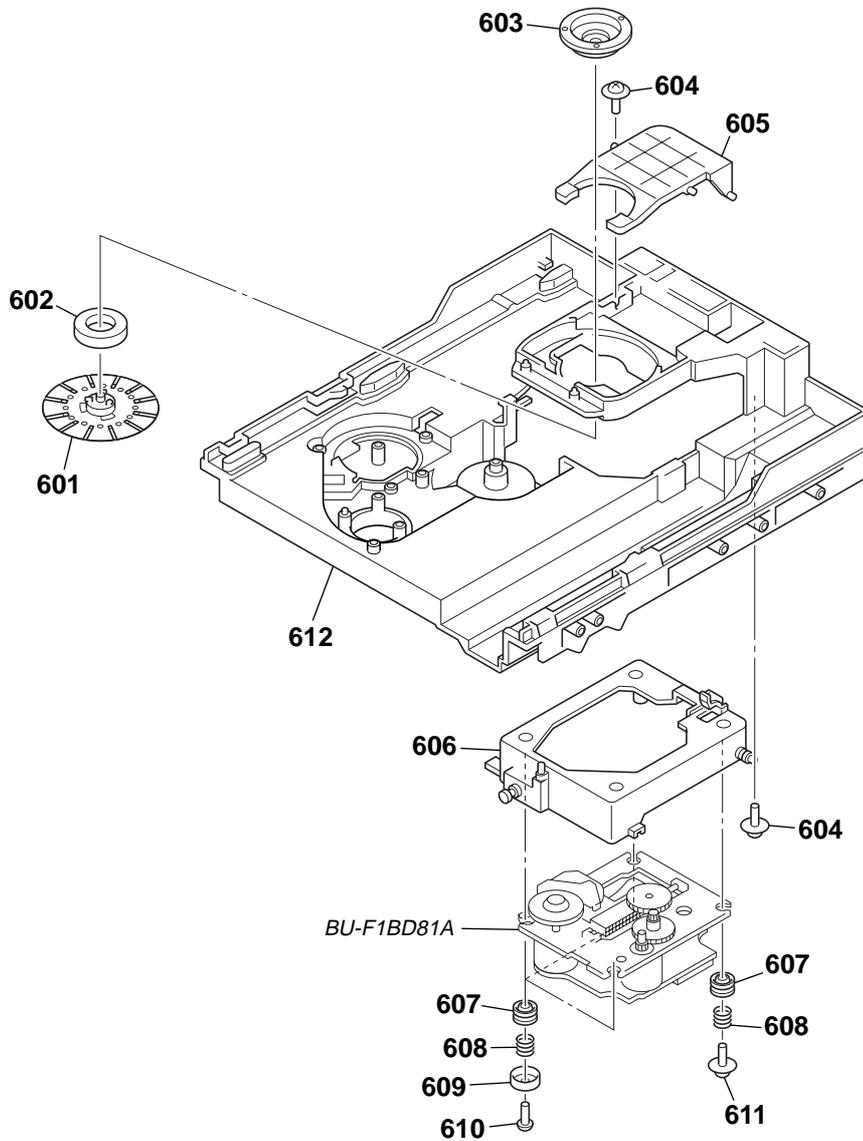

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
601	X-4955-707-2	PULLEY (A5) ASSY, CHUCKING		607	4-227-549-11	INSULATOR	
602	1-471-035-11	MAGNET ASSY		608	4-227-045-31	SPRING (INSULATOR), COIL	
603	4-231-189-01	PULLEY (B), CHUCKING		609	4-231-151-01	STOPPER (BU)	
604	4-218-252-61	SCREW (+PTPWH M2.6), FLOATING		610	4-218-253-31	SCREW (M2.6), +BTTP	
605	4-243-822-02	LEVER (LIFTER)		611	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
606	X-4955-536-1	HOLDER (213) ASSY		612	4-243-817-01	CHASSIS	

**7-10. BASE UNIT SECTION
(BU-F1BD81A)**

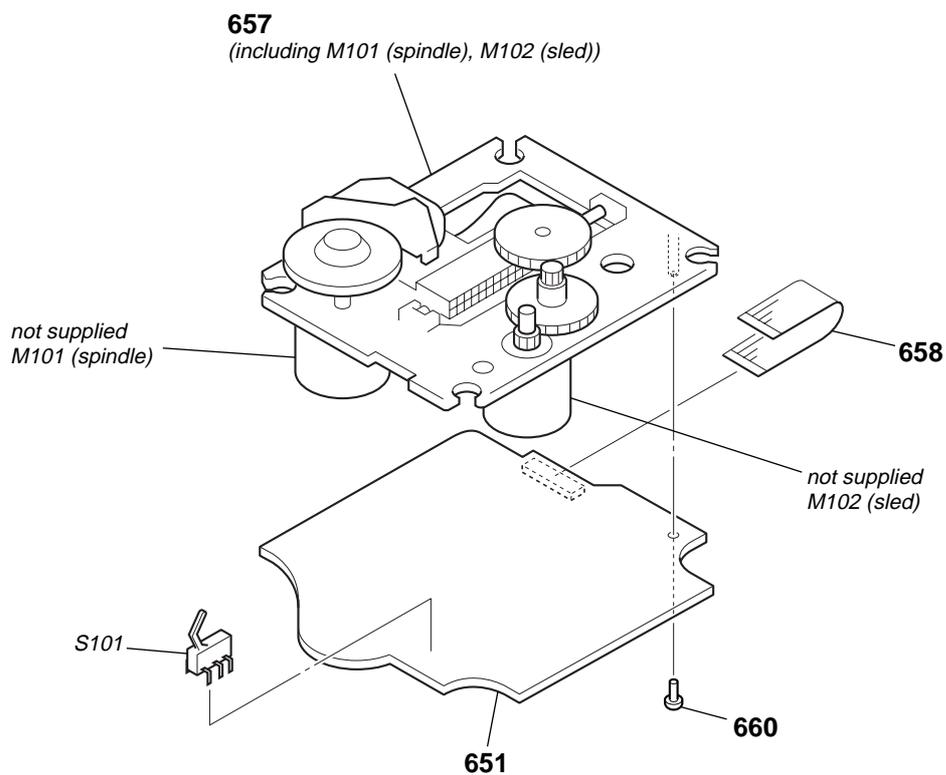

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
651	A-4751-431-A	CD BOARD, COMPLETE		660	4-951-620-01	SCREW (2.6X8), +BVTP	
\triangle 657	8-820-244-11	OPTICAL PICK-UP (KSM-215DCP/C2NP)		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
658	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)					

SECTION 8 ELECTRICAL PARTS LIST

CD

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
E51 : Chilean and Peruvian models
MX : Mexican model

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- **CAPACITORS**
uF: μ F
- **COILS**
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-4751-431-A	CD BOARD, COMPLETE *****					
		< CAPACITOR/SHORT >					
C10	1-165-989-11	CERAMIC CHIP	10uF 10% 6.3V	C201	1-128-995-21	ELECT CHIP	100uF 20% 10V
C11	1-165-989-11	CERAMIC CHIP	10uF 10% 6.3V	C203	1-128-995-21	ELECT CHIP	100uF 20% 10V
C14	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C209	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C15	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C210	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C16	1-115-156-11	CERAMIC CHIP	1uF 10V	C211	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C17	1-126-246-11	ELECT CHIP	220uF 20% 4V	C212	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C18	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C213	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C111	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C251	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C112	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	C252	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C113	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C255	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C114	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	C257	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C115	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C258	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C116	1-128-995-21	ELECT CHIP	100uF 20% 10V	C259	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C122	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C260	1-128-394-11	ELECT CHIP	220uF 20% 10V
C123	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C302	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C124	1-162-959-11	CERAMIC CHIP	330PF 5% 50V	C303	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C125	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C305	1-126-246-11	ELECT CHIP	220uF 20% 4V
C131	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C306	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C132	1-117-863-11	CERAMIC CHIP	0.47uF 10% 6.3V	C307	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C133	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C308	1-126-208-21	ELECT CHIP	47uF 20% 4V
C134	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C309	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C141	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C310	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C142	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 50V	C311	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C143	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C312	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C151	1-128-995-21	ELECT CHIP	100uF 20% 10V	C313	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C161	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C314	1-126-208-21	ELECT CHIP	47uF 20% 4V
C162	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C315	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C163	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C316	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C171	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C317	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C172	1-162-920-11	CERAMIC CHIP	27PF 5% 50V	C318	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C174	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C320	1-216-864-11	SHORT CHIP	0
C181	1-164-360-11	CERAMIC CHIP	0.1uF 16V			< CONNECTOR >	
C182	1-164-360-11	CERAMIC CHIP	0.1uF 16V	CN101	1-770-425-11	CONNECTOR, FFC/FPC 16P	
C183	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	CN201	1-818-350-11	CONNECTOR (FFC) 27P	
C184	1-124-778-00	ELECT CHIP	22uF 20% 6.3V			< FERRITE BEAD >	
C185	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	FB301	1-500-445-21	FERRITE, EMI (SMD) (2012)	
C186	1-164-315-11	CERAMIC CHIP	470PF 5% 50V			< IC >	
C194	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC101	8-752-425-12	IC CXD3059AR	
C195	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC251	6-705-808-01	IC BA5947FM	
C196	1-164-360-11	CERAMIC CHIP	0.1uF 16V				

CD

CDMP3 CONNECT

DRIVER

Ref. No.	Part No.	Description	Remark
IC301	6-705-365-01	IC TC94A34FG-002	
IC303	6-705-807-01	IC BH15FB1WG	
< TRANSISTOR >			
Q10	6-550-363-01	TRANSISTOR 2SB1690KT146	
< RESISTOR/FERRITE BEAD >			
R10	1-216-791-11	METAL CHIP 3.3 5%	1/10W
R11	1-216-864-11	SHORT CHIP 0	
R12	1-216-845-11	METAL CHIP 100K 5%	1/10W
R13	1-218-446-11	METAL CHIP 1 5%	1/10W
R111	1-216-821-11	METAL CHIP 1K 5%	1/10W
R112	1-216-835-11	METAL CHIP 15K 5%	1/10W
R113	1-216-821-11	METAL CHIP 1K 5%	1/10W
R114	1-216-835-11	METAL CHIP 15K 5%	1/10W
R121	1-216-835-11	METAL CHIP 15K 5%	1/10W
R131	1-216-857-11	METAL CHIP 1M 5%	1/10W
R132	1-216-833-11	METAL CHIP 10K 5%	1/10W
R133	1-216-848-11	METAL CHIP 180K 5%	1/10W
R141	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R142	1-216-821-11	METAL CHIP 1K 5%	1/10W
R143	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
R151	1-216-864-11	SHORT CHIP 0	
R161	1-216-809-11	METAL CHIP 100 5%	1/10W
R162	1-216-841-11	METAL CHIP 47K 5%	1/10W
R163	1-216-809-11	METAL CHIP 100 5%	1/10W
R165	1-216-864-11	SHORT CHIP 0	
R171	1-216-817-11	METAL CHIP 470 5%	1/10W
R172	1-216-857-11	METAL CHIP 1M 5%	1/10W
R173	1-216-295-00	SHORT CHIP 0	
R181	1-216-809-11	METAL CHIP 100 5%	1/10W
R182	1-216-809-11	METAL CHIP 100 5%	1/10W
R191	1-216-864-11	SHORT CHIP 0	
R201	1-500-445-21	FERRITE, EMI (SMD) (2012)	
R203	1-216-864-11	SHORT CHIP 0	
R204	1-500-445-21	FERRITE, EMI (SMD) (2012)	
R205	1-216-864-11	SHORT CHIP 0	
R251	1-216-833-11	METAL CHIP 10K 5%	1/10W
R252	1-216-837-11	METAL CHIP 22K 5%	1/10W
R253	1-216-833-11	METAL CHIP 10K 5%	1/10W
R301	1-216-845-11	METAL CHIP 100K 5%	1/10W
R302	1-216-833-11	METAL CHIP 10K 5%	1/10W
R303	1-216-845-11	METAL CHIP 100K 5%	1/10W
R305	1-216-845-11	METAL CHIP 100K 5%	1/10W
R306	1-216-864-11	SHORT CHIP 0	
R307	1-216-833-11	METAL CHIP 10K 5%	1/10W
R313	1-216-813-11	METAL CHIP 220 5%	1/10W
R351	1-216-809-11	METAL CHIP 100 5%	1/10W
R352	1-216-809-11	METAL CHIP 100 5%	1/10W
R353	1-216-809-11	METAL CHIP 100 5%	1/10W
R354	1-216-809-11	METAL CHIP 100 5%	1/10W
R401	1-216-809-11	METAL CHIP 100 5%	1/10W
R402	1-216-809-11	METAL CHIP 100 5%	1/10W
R403	1-216-809-11	METAL CHIP 100 5%	1/10W
R404	1-216-809-11	METAL CHIP 100 5%	1/10W
R405	1-216-809-11	METAL CHIP 100 5%	1/10W
R406	1-216-809-11	METAL CHIP 100 5%	1/10W

Ref. No.	Part No.	Description	Remark
R407	1-216-809-11	METAL CHIP 100 5%	1/10W
R408	1-216-809-11	METAL CHIP 100 5%	1/10W
R409	1-216-809-11	METAL CHIP 100 5%	1/10W
R410	1-216-809-11	METAL CHIP 100 5%	1/10W
R411	1-216-809-11	METAL CHIP 100 5%	1/10W
R412	1-216-809-11	METAL CHIP 100 5%	1/10W
R419	1-216-809-11	METAL CHIP 100 5%	1/10W
< VIBRATOR >			
X171	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)	

CDMP3 CONNECT BOARD			

< CAPACITOR >			
C871	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C872	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C873	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C874	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C875	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C876	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
< CONNECTOR >			
CN871	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P	
CN873	1-784-778-11	CONNECTOR, FFC 17P	
* CN874	1-564-725-11	PIN, CONNECTOR (SMALL TYPE) 9P	
< SHORT >			
FB871	1-216-864-11	SHORT CHIP 0	
FB872	1-216-864-11	SHORT CHIP 0	
JR871	1-216-864-11	SHORT CHIP 0	
JR872	1-216-864-11	SHORT CHIP 0	

1-687-135-12	DRIVER BOARD		

< CAPACITOR >			
C715	1-126-933-11	ELECT 100uF 20%	16V
C731	1-126-964-11	ELECT 10uF 20%	50V
C735	1-164-159-21	CERAMIC 0.1uF 50V	
C736	1-164-159-21	CERAMIC 0.1uF 50V	
C737	1-164-159-21	CERAMIC 0.1uF 50V	
C741	1-162-306-11	CERAMIC 0.01uF 20%	16V
C751	1-162-306-11	CERAMIC 0.01uF 20%	16V
C752	1-164-159-21	CERAMIC 0.1uF 50V	
< CONNECTOR >			
CN701	1-785-338-11	PIN, CONNECTOR (LIGHT ANGLE) 12P	
CN702	1-784-766-11	CONNECTOR, FFC 5P	
* CN703	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CN704	1-785-328-11	PIN, CONNECTOR (LIGHT ANGLE) 2P	
< DIODE >			
D701	8-719-921-42	DIODE MTZJ-5.1A	
D711	8-719-109-69	DIODE RD3.6ESB2	

DRIVER	HEADPHONE	MAIN
---------------	------------------	-------------

Ref. No.	Part No.	Description	Remark
< IC >			
IC701	8-759-598-69	IC BA6956AN	
IC712	8-759-598-69	IC BA6956AN	
< TRANSISTOR >			
Q731	8-729-029-66	TRANSISTOR DTC114ESA	
< RESISTOR >			
R701	1-249-413-11	CARBON 470 5% 1/4W	
R702	1-247-807-31	CARBON 100 5% 1/4W	
R711	1-249-417-11	CARBON 1K 5% 1/4W	
R712	1-249-425-11	CARBON 4.7K 5% 1/4W	
R713	1-249-433-11	CARBON 22K 5% 1/4W	
R721	1-249-425-11	CARBON 4.7K 5% 1/4W	
R722	1-249-425-11	CARBON 4.7K 5% 1/4W	
R723	1-249-425-11	CARBON 4.7K 5% 1/4W	
R731	1-247-807-31	CARBON 100 5% 1/4W	
R732	1-249-429-11	CARBON 10K 5% 1/4W	
R733	1-249-417-11	CARBON 1K 5% 1/4W	
R734	1-249-430-11	CARBON 12K 5% 1/4W	
R735	1-247-807-31	CARBON 100 5% 1/4W	
R751	1-249-425-11	CARBON 4.7K 5% 1/4W	

HEADPHONE BOARD

< CAPACITOR >

C806	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V
C807	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V
C808	1-164-156-11	CERAMIC CHIP 0.1uF 25V

< JACK >

J801	1-793-829-11	JACK, HEADPHONE (PHONES)
------	--------------	--------------------------

A-4751-486-A	MAIN BOARD, COMPLETE (AEP, UK)
A-4751-495-A	MAIN BOARD, COMPLETE (E51, MX)
A-4752-928-A	MAIN BOARD, COMPLETE (CIS)

7-685-872-09	SCREW +BVTT 3X8 (S)
--------------	---------------------

< CAPACITOR >

C101	1-126-960-11	ELECT 1uF 20% 50V
C102	1-126-960-11	ELECT 1uF 20% 50V
C103	1-126-956-11	ELECT 0.1uF 20% 50V
C104	1-126-956-11	ELECT 0.1uF 20% 50V
C105	1-164-230-11	CERAMIC CHIP 220PF 5% 50V
C106	1-131-679-31	FILM 0.01uF 5% 50V
C107	1-126-964-11	ELECT 10uF 20% 50V
C108	1-164-230-11	CERAMIC CHIP 220PF 5% 50V
C109	1-131-679-31	FILM 0.01uF 5% 50V
C110	1-126-964-11	ELECT 10uF 20% 50V
C111	1-126-960-11	ELECT 1uF 20% 50V
C112	1-126-960-11	ELECT 1uF 20% 50V
C113	1-126-960-11	ELECT 1uF 20% 50V
C114	1-126-960-11	ELECT 1uF 20% 50V
C115	1-131-679-31	FILM 0.01uF 5% 50V

Ref. No.	Part No.	Description	Remark
C116	1-164-392-11	CERAMIC CHIP 390PF 5% 50V	
C117	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
C118	1-126-964-11	ELECT 10uF 20% 50V	
C119	1-131-679-31	FILM 0.01uF 5% 50V	
C120	1-164-392-11	CERAMIC CHIP 390PF 5% 50V	
C121	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
C122	1-126-964-11	ELECT 10uF 20% 50V	
C123	1-126-965-11	ELECT 22uF 20% 50V	
C124	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C125	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C126	1-165-112-11	CERAMIC CHIP 0.33uF 16V	
C127	1-104-665-11	ELECT 100uF 20% 25V	
C128	1-104-665-11	ELECT 100uF 20% 25V	
C129	1-126-947-11	ELECT 47uF 20% 35V	
C132	1-126-947-11	ELECT 47uF 20% 35V	
C135	1-136-165-00	FILM 0.1uF 5% 50V	
C136	1-136-165-00	FILM 0.1uF 5% 50V	
C137	1-126-964-11	ELECT 10uF 20% 50V	
C138	1-126-964-11	ELECT 10uF 20% 50V	
C139	1-136-165-00	FILM 0.1uF 5% 50V	
C140	1-136-165-00	FILM 0.1uF 5% 50V	
C141	1-126-964-11	ELECT 10uF 20% 50V	
C142	1-126-964-11	ELECT 10uF 20% 50V	
C143	1-126-960-11	ELECT 1uF 20% 50V	
C144	1-136-165-00	FILM 0.1uF 5% 50V	
C145	1-126-964-11	ELECT 10uF 20% 50V	
C146	1-136-165-00	FILM 0.1uF 5% 50V	
C147	1-126-964-11	ELECT 10uF 20% 50V	
C148	1-131-679-31	FILM 0.01uF 5% 50V	
C149	1-131-679-31	FILM 0.01uF 5% 50V	
C150	1-131-679-31	FILM 0.01uF 5% 50V	
C151	1-131-679-31	FILM 0.01uF 5% 50V	
C152	1-130-475-00	MYLAR 0.0022uF 5% 50V	
C153	1-130-475-00	MYLAR 0.0022uF 5% 50V	
C154	1-131-700-31	FILM 0.47uF 5% 50V	
C157	1-126-960-11	ELECT 1uF 20% 50V	
C159	1-126-960-11	ELECT 1uF 20% 50V	
C160	1-126-960-11	ELECT 1uF 20% 50V	
C161	1-162-971-11	CERAMIC CHIP 0.001uF 10% 50V	
		(AEP, UK, CIS)	
C163	1-162-971-11	CERAMIC CHIP 0.001uF 10% 50V	
		(AEP, UK, CIS)	
C165	1-126-960-11	ELECT 1uF 20% 50V	
C166	1-126-960-11	ELECT 1uF 20% 50V	
C167	1-126-960-11	ELECT 1uF 20% 50V	
C169	1-126-960-11	ELECT 1uF 20% 50V	
C171	1-164-362-11	CERAMIC CHIP 470PF 5% 50V	
C172	1-164-362-11	CERAMIC CHIP 470PF 5% 50V	
C175	1-109-953-11	ELECT 2.2uF 20% 50V	
C176	1-126-964-11	ELECT 10uF 20% 50V	
C177	1-162-945-11	CERAMIC CHIP 22PF 5% 50V	
C178	1-126-947-11	ELECT 47uF 20% 35V	
C179	1-162-949-11	CERAMIC CHIP 47PF 5% 50V	
C181	1-162-949-11	CERAMIC CHIP 47PF 5% 50V	
C183	1-162-945-11	CERAMIC CHIP 22PF 5% 50V	
C184	1-126-947-11	ELECT 47uF 20% 35V	
C185	1-126-964-11	ELECT 10uF 20% 50V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C186	1-126-947-11	ELECT	47uF 20% 35V				
C187	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C288	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V
C188	1-126-965-11	ELECT	22uF 20% 50V				(AEP, UK, CIS)
C189	1-126-965-11	ELECT	22uF 20% 50V	C289	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V
C190	1-162-974-11	CERAMIC CHIP	0.01uF 50V				(AEP, UK, CIS)
C191	1-126-961-11	ELECT	2.2uF 20% 50V	C290	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V
C192	1-126-961-11	ELECT	2.2uF 20% 50V				(AEP, UK, CIS)
C193	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C301	1-136-165-00	FILM	0.1uF 5% 50V
C206	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C302	1-136-165-00	FILM	0.1uF 5% 50V
C208	1-164-230-11	CERAMIC CHIP	220PF 5% 50V	C303	1-136-165-00	FILM	0.1uF 5% 50V
			(AEP, UK, CIS)	C304	1-136-165-00	FILM	0.1uF 5% 50V
C209	1-164-230-11	CERAMIC CHIP	220PF 5% 50V	C305	1-136-165-00	FILM	0.1uF 5% 50V
			(AEP, UK, CIS)	C306	1-136-165-00	FILM	0.1uF 5% 50V
C211	1-109-953-11	ELECT	2.2uF 20% 50V	C308	1-126-965-11	ELECT	22uF 20% 50V
C212	1-126-964-11	ELECT	10uF 20% 50V	C309	1-126-965-11	ELECT	22uF 20% 50V
C213	1-126-964-11	ELECT	10uF 20% 50V	C310	1-126-936-11	ELECT	3300uF 20% 16V
C214	1-126-926-11	ELECT	1000uF 20% 10V	C311	1-126-964-11	ELECT	10uF 20% 50V
C216	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C312	1-126-964-11	ELECT	10uF 20% 50V
C217	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C313	1-126-943-11	ELECT	2200uF 20% 25V
C222	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C315	1-126-933-11	ELECT	100uF 20% 16V
C228	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C316	1-126-943-11	ELECT	2200uF 20% 25V
C229	1-126-963-11	ELECT	4.7uF 20% 50V	C318	1-126-933-11	ELECT	100uF 20% 16V
C230	1-126-947-11	ELECT	47uF 20% 35V	C321	1-126-961-11	ELECT	2.2uF 20% 50V
C235	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C342	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C241	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C351	1-164-357-11	CERAMIC CHIP	0.001uF 5% 50V
C242	1-130-479-00	MYLAR	0.0047uF 5% 50V	C352	1-126-965-11	ELECT	22uF 20% 50V
C243	1-130-479-00	MYLAR	0.0047uF 5% 50V	C353	1-126-961-11	ELECT	2.2uF 20% 50V
C244	1-131-681-31	FILM	0.015uF 5% 50V	C354	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C246	1-136-157-00	FILM	0.022uF 5% 50V	C371	1-164-362-11	CERAMIC CHIP	470PF 5% 50V
C248	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C372	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C249	1-126-964-11	ELECT	10uF 20% 50V	C373	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C250	1-126-947-11	ELECT	47uF 20% 35V	C374	1-126-947-11	ELECT	47uF 20% 35V
C251	1-126-947-11	ELECT	47uF 20% 35V	C375	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C252	1-126-933-11	ELECT	100uF 20% 16V	C376	1-126-961-11	ELECT	2.2uF 20% 50V
C253	1-126-956-11	ELECT	0.1uF 20% 50V				< CONNECTOR >
C258	1-126-959-11	ELECT	0.47uF 20% 50V	CN101	1-568-830-11	CONNECTOR, FFC 11P (CIS, E51, MX)	
C259	1-126-957-11	ELECT	0.22uF 20% 50V	CN101	1-784-776-11	CONNECTOR, FFC 15P (AEP, UK)	
C264	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V	* CN103	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P	
C265	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V	* CN112	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C266	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V	CN302	1-568-844-11	CONNECTOR, FFC 29P (CIS, E51, MX)	
C267	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V	CN302	1-784-792-11	CONNECTOR, FFC 31P (AEP, UK)	
C270	1-126-964-11	ELECT	10uF 20% 50V	CN307	1-778-982-21	CONNECTOR, BOARD TO BOARD 13P	
C271	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V	CN308	1-564-506-11	PLUG, CONNECTOR 3P	
			(AEP, UK, CIS)	CN309	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
C272	1-162-971-11	CERAMIC CHIP	0.001uF 10% 50V				< DIODE >
			(AEP, UK, CIS)	D201	8-719-988-61	DIODE 1SS355TE-17	
C274	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	D202	8-719-083-63	DIODE UDZSTE-1713B	
C275	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	D206	8-719-988-61	DIODE 1SS355TE-17	
C276	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D207	8-719-988-61	DIODE 1SS355TE-17	
			(AEP, UK, CIS)	D211	8-719-988-61	DIODE 1SS355TE-17	
C277	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D212	8-719-988-61	DIODE 1SS355TE-17	
			(AEP, UK, CIS)	D213	8-719-988-61	DIODE 1SS355TE-17	
C278	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D214	8-719-988-61	DIODE 1SS355TE-17	
			(AEP, UK, CIS)	D215	8-719-988-61	DIODE 1SS355TE-17	
C279	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D301	6-500-522-21	DIODE 10EDB40-TB3	
			(AEP, UK, CIS)	D302	6-500-522-21	DIODE 10EDB40-TB3	
C280	1-164-362-11	CERAMIC CHIP	470PF 5% 50V	D303	6-500-522-21	DIODE 10EDB40-TB3	
			(AEP, UK, CIS)				
C281	1-164-362-11	CERAMIC CHIP	470PF 5% 50V				
			(AEP, UK, CIS)				

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D304	6-500-522-21	DIODE 10EDB40-TB3		Q307	6-550-889-01	TRANSISTOR 2SC5938-T112-1B	
D305	6-500-522-21	DIODE 10EDB40-TB3		Q308	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D306	6-500-522-21	DIODE 10EDB40-TB3		Q309	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D307	6-500-522-21	DIODE 10EDB40-TB3		Q310	8-729-142-46	TRANSISTOR 2SC2001-LK	
D308	6-500-522-21	DIODE 10EDB40-TB3		Q311	8-729-142-46	TRANSISTOR 2SC2001-LK	
D309	6-500-522-21	DIODE 10EDB40-TB3		Q312	8-729-041-19	TRANSISTOR 2SA953-T-K	
D310	6-500-522-21	DIODE 10EDB40-TB3		Q313	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D311	6-500-522-21	DIODE 10EDB40-TB3		Q314	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D312	6-500-522-21	DIODE 10EDB40-TB3		Q315	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D313	8-719-085-36	DIODE 11EQS04-TB5		Q321	8-729-142-46	TRANSISTOR 2SC2001-LK	
D316	8-719-988-61	DIODE 1SS355TE-17		Q322	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
D321	8-719-988-61	DIODE 1SS355TE-17		Q323	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D322	8-719-988-61	DIODE 1SS355TE-17		Q324	8-729-140-04	TRANSISTOR 2SB1116A-L	
D324	6-500-522-21	DIODE 10EDB40-TB3		Q327	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D325	6-500-522-21	DIODE 10EDB40-TB3		Q351	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D326	6-500-522-21	DIODE 10EDB40-TB3		Q352	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< EARTH TERMINAL >		Q361	6-550-580-01	TRANSISTOR 2SA1235TP-1F	
EP101	1-537-771-21	TERMINAL BOARD, GROUND		Q362	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
EP301	1-537-771-21	TERMINAL BOARD, GROUND				< RESISTOR >	
		< FERRITE BEAD/SHORT >		R101	1-216-833-11	METAL CHIP 10K 5% 1/10W	
FB201	1-216-864-11	SHORT CHIP 0		R102	1-216-833-11	METAL CHIP 10K 5% 1/10W	
FB202	1-216-864-11	SHORT CHIP 0		R103	1-216-851-11	METAL CHIP 330K 5% 1/10W	
FB203	1-216-864-11	SHORT CHIP 0		R104	1-216-835-11	METAL CHIP 15K 5% 1/10W	
FB204	1-216-864-11	SHORT CHIP 0		R105	1-216-816-11	METAL CHIP 390 5% 1/10W	
FB205	1-216-864-11	SHORT CHIP 0 (E51, MX)		R106	1-216-851-11	METAL CHIP 330K 5% 1/10W	
FB205	1-543-958-22	BEAD, FERRITE (CHIP) (1608) (AEP, UK, CIS)		R107	1-216-835-11	METAL CHIP 15K 5% 1/10W	
		< IC >		R108	1-216-816-11	METAL CHIP 390 5% 1/10W	
IC101	6-705-852-01	IC BD3401KS2		R109	1-216-853-11	METAL CHIP 470K 5% 1/10W	
IC102	8-759-710-97	IC NJM4565M-D		R110	1-216-851-11	METAL CHIP 330K 5% 1/10W	
IC201	8-759-508-69	IC BA3126N		R111	1-216-844-11	METAL CHIP 82K 5% 1/10W	
IC301	6-702-771-01	IC TA78033LS		R112	1-216-853-11	METAL CHIP 470K 5% 1/10W	
IC302	6-702-771-01	IC TA78033LS		R113	1-216-851-11	METAL CHIP 330K 5% 1/10W	
IC303	8-759-701-59	IC NJM78M09FA		R114	1-216-844-11	METAL CHIP 82K 5% 1/10W	
IC304	8-759-701-59	IC NJM78M09FA		R115	1-216-857-11	METAL CHIP 1M 5% 1/10W	
IC371	6-704-046-01	IC BU2099FV		R116	1-216-809-11	METAL CHIP 100 5% 1/10W	
		< JACK >		R117	1-216-809-11	METAL CHIP 100 5% 1/10W	
JK101	1-793-987-11	JACK, PIN 2P (VIDEO/MD IN)		R119	1-216-841-11	METAL CHIP 47K 5% 1/10W	
		< COIL >		R120	1-216-857-11	METAL CHIP 1M 5% 1/10W	
L101	1-437-220-11	TRANSFORMER, BIAS OSCILLATION		R121	1-216-841-11	METAL CHIP 47K 5% 1/10W	
		< TRANSISTOR >		R122	1-216-849-11	METAL CHIP 220K 5% 1/10W	
Q101	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R127	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q102	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R128	1-216-835-11	METAL CHIP 15K 5% 1/10W	
Q103	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R129	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q104	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R130	1-216-849-11	METAL CHIP 220K 5% 1/10W	
Q105	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R131	1-216-835-11	METAL CHIP 15K 5% 1/10W	
Q106	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R132	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q107	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R133	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q304	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R134	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q305	6-550-580-01	TRANSISTOR 2SA1235TP-1F		R135	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q306	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R136	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
				R137	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R138	1-216-821-11	METAL CHIP 1K 5% 1/10W	
				R139	1-216-864-11	SHORT CHIP 0	
				R143	1-216-821-11	METAL CHIP 1K 5% 1/10W	
				R144	1-216-821-11	METAL CHIP 1K 5% 1/10W	
				R145	1-216-845-11	METAL CHIP 100K 5% 1/10W	
				R146	1-216-845-11	METAL CHIP 100K 5% 1/10W	

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R151	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R223	1-216-864-11	SHORT CHIP	0		
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W	R225	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R226	1-216-841-11	METAL CHIP	47K	5%	1/10W
R153	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R154	1-216-833-11	METAL CHIP	10K	5%	1/10W	R227	1-216-821-11	METAL CHIP	1K	5%	1/10W
R155	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R228	1-216-821-11	METAL CHIP	1K	5%	1/10W
R156	1-216-853-11	METAL CHIP	470K	5%	1/10W	R229	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R157	1-216-841-11	METAL CHIP	47K	5%	1/10W	R230	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R231	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R158	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R232	1-216-833-11	METAL CHIP	10K	5%	1/10W
R160	1-216-821-11	METAL CHIP	1K	5%	1/10W	R235	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R161	1-216-833-11	METAL CHIP	10K	5%	1/10W	R241	1-216-797-11	METAL CHIP	10	5%	1/10W
R162	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R242	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R243	1-216-833-11	METAL CHIP	10K	5%	1/10W
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R164	1-216-821-11	METAL CHIP	1K	5%	1/10W	R244	1-216-833-11	METAL CHIP	10K	5%	1/10W
R165	1-216-833-11	METAL CHIP	10K	5%	1/10W	R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R166	1-216-833-11	METAL CHIP	10K	5%	1/10W	R246	1-216-809-11	METAL CHIP	100	5%	1/10W
R167	1-216-837-11	METAL CHIP	22K	5%	1/10W	R247	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R248	1-216-833-11	METAL CHIP	10K	5%	1/10W
R168	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R169	1-216-845-11	METAL CHIP	100K	5%	1/10W	R249	1-216-841-11	METAL CHIP	47K	5%	1/10W
R170	1-216-833-11	METAL CHIP	10K	5%	1/10W	R250	1-216-833-11	METAL CHIP	10K	5%	1/10W
R171	1-216-837-11	METAL CHIP	22K	5%	1/10W	R251	1-216-833-11	METAL CHIP	10K	5%	1/10W
R172	1-216-809-11	METAL CHIP	100	5%	1/10W	R252	1-216-811-11	METAL CHIP	150	5%	1/10W
						R253	1-216-809-11	METAL CHIP	100	5%	1/10W
R173	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R174	1-216-833-11	METAL CHIP	10K	5%	1/10W	R254	1-216-809-11	METAL CHIP	100	5%	1/10W
R175	1-216-833-11	METAL CHIP	10K	5%	1/10W	R262	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R176	1-216-849-11	METAL CHIP	220K	5%	1/10W	R263	1-216-857-11	METAL CHIP	1M	5%	1/10W
R177	1-216-849-11	METAL CHIP	220K	5%	1/10W	R264	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R265	1-216-833-11	METAL CHIP	10K	5%	1/10W
R194	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R195	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R266	1-216-845-11	METAL CHIP	100K	5%	1/10W
R197	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R272	1-216-853-11	METAL CHIP	470K	5%	1/10W
R198	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R273	1-216-864-11	SHORT CHIP	0		
R201	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R274	1-216-864-11	SHORT CHIP	0		
						R275	1-216-864-11	SHORT CHIP	0		
R202	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R203	1-216-833-11	METAL CHIP	10K	5%	1/10W	R281	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R204	1-216-833-11	METAL CHIP	10K	5%	1/10W	R282	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R205	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R283	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R206	1-216-841-11	METAL CHIP	47K	5%	1/10W	R284	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
						R306	1-216-833-11	METAL CHIP	10K	5%	1/10W
R207	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R208	1-216-821-11	METAL CHIP	1K	5%	1/10W	R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R209	1-216-833-11	METAL CHIP	10K	5%	1/10W	R308	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R210	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R310	1-216-833-11	METAL CHIP	10K	5%	1/10W
R211	1-216-821-11	METAL CHIP	1K	5%	1/10W	R311	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R312	1-216-837-11	METAL CHIP	22K	5%	1/10W
R212	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R213	1-216-821-11	METAL CHIP	1K	5%	1/10W	R313	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R214	1-216-821-11	METAL CHIP	1K	5%	1/10W	R321	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R216	1-216-806-11	METAL CHIP	56	5%	1/10W	R322	1-216-837-11	METAL CHIP	22K	5%	1/10W
R217	1-216-806-11	METAL CHIP	56	5%	1/10W	R323	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R324	1-216-833-11	METAL CHIP	10K	5%	1/10W
△R218	1-215-891-11	METAL OXIDE	680	5%	2W F (AEP, UK, CIS)	R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
△R218	1-215-916-00	METAL OXIDE	680	5%	3W F (E51, MX)	R341	1-216-833-11	METAL CHIP	10K	5%	1/10W
△R219	1-215-891-11	METAL OXIDE	680	5%	2W F (AEP, UK, CIS)	R342	1-216-821-11	METAL CHIP	1K	5%	1/10W
△R219	1-215-916-00	METAL OXIDE	680	5%	3W F (E51, MX)	R343	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R344	1-216-837-11	METAL CHIP	22K	5%	1/10W
R220	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R221	1-216-837-11	METAL CHIP	22K	5%	1/10W	R345	1-216-833-11	METAL CHIP	10K	5%	1/10W
R222	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R346	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R347	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R348	1-216-837-11	METAL CHIP	22K	5%	1/10W
						R351	1-216-835-11	METAL CHIP	15K	5%	1/10W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

MAIN **MOTOR (LD)** **MOTOR (TB)** **PANEL**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R352	1-216-845-11	METAL CHIP	100K 5% 1/10W	C606	1-115-156-11	CERAMIC CHIP	1uF 10V
R353	1-216-841-11	METAL CHIP	47K 5% 1/10W	C607	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R354	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C608	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
R356	1-216-817-11	METAL CHIP	470 5% 1/10W	C609	1-115-156-11	CERAMIC CHIP	1uF 10V
R357	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	C610	1-126-916-11	ELECT	1000uF 20% 6.3V
R358	1-216-809-11	METAL CHIP	100 5% 1/10W	C611	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R361	1-216-833-11	METAL CHIP	10K 5% 1/10W	C612	1-126-964-11	ELECT	10uF 20% 50V
R362	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	C613	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R363	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C614	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R364	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C615	1-126-961-11	ELECT	2.2uF 20% 50V
R371	1-216-809-11	METAL CHIP	100 5% 1/10W	C617	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R372	1-216-809-11	METAL CHIP	100 5% 1/10W	C618	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R373	1-216-809-11	METAL CHIP	100 5% 1/10W	C619	1-126-947-11	ELECT	47uF 20% 35V
R374	1-216-833-11	METAL CHIP	10K 5% 1/10W	C620	1-126-947-11	ELECT	47uF 20% 35V
R375	1-216-833-11	METAL CHIP	10K 5% 1/10W	C621	1-162-995-11	CERAMIC CHIP	0.022uF 50V
R376	1-216-833-11	METAL CHIP	10K 5% 1/10W	C622	1-126-963-11	ELECT	4.7uF 20% 50V
R377	1-216-833-11	METAL CHIP	10K 5% 1/10W	C623	1-126-963-11	ELECT	4.7uF 20% 50V
R378	1-216-833-11	METAL CHIP	10K 5% 1/10W	C624	1-162-918-11	CERAMIC CHIP	18PF 5% 50V
R379	1-216-833-11	METAL CHIP	10K 5% 1/10W	C625	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
R380	1-216-833-11	METAL CHIP	10K 5% 1/10W	C626	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R381	1-216-833-11	METAL CHIP	10K 5% 1/10W	C628	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R382	1-216-833-11	METAL CHIP	10K 5% 1/10W	C629	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R383	1-216-833-11	METAL CHIP	10K 5% 1/10W	C630	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R384	1-216-833-11	METAL CHIP	10K 5% 1/10W	C631	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R385	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C632	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R386	1-216-837-11	METAL CHIP	22K 5% 1/10W	C633	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R387	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C634	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R388	1-216-837-11	METAL CHIP	22K 5% 1/10W	C635	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R389	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	C636	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R390	1-216-837-11	METAL CHIP	22K 5% 1/10W	C637	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R391	1-216-833-11	METAL CHIP	10K 5% 1/10W	C638	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R392	1-216-821-11	METAL CHIP	1K 5% 1/10W	C639	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R393	1-216-833-11	METAL CHIP	10K 5% 1/10W	C640	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R394	1-216-821-11	METAL CHIP	1K 5% 1/10W	C641	1-164-156-11	CERAMIC CHIP	0.1uF 25V
R395	1-216-837-11	METAL CHIP	22K 5% 1/10W	C642	1-164-156-11	CERAMIC CHIP	0.1uF 25V
*****				C643	1-164-156-11	CERAMIC CHIP	0.1uF 25V
1-687-133-12	MOTOR (LD) BOARD		*****	C644	1-126-964-11	ELECT	10uF 20% 50V
*****				C646	1-104-662-91	ELECT	22uF 20% 25V
1-687-134-12	MOTOR (TB) BOARD		*****	C648	1-104-662-91	ELECT	22uF 20% 25V
*****				C649	1-164-156-11	CERAMIC CHIP	0.1uF 25V
< CONNECTOR >				C650	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
CN742	1-784-727-11	CONNECTOR, FFC 5P	*****	C651	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
*****				C653	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
A-4751-484-A	PANEL BOARD, COMPLETE (AEP, UK)		*****	C656	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
A-4751-493-A	PANEL BOARD, COMPLETE (E51, MX)		*****	CN601	1-568-844-11	CONNECTOR, FFC 29P (CIS, E51, MX)	
A-4751-564-A	PANEL BOARD, COMPLETE (CIS)		*****	CN601	1-784-792-11	CONNECTOR, FFC 31P (AEP, UK)	
< CAPACITOR >				CN602	1-784-735-11	CONNECTOR, FFC 13P	
C601	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	CN603	1-784-778-11	CONNECTOR, FFC 17P	
C602	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	< DIODE >			
C603	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	D603	8-719-988-61	DIODE	1SS355TE-17
C604	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D604	8-719-988-61	DIODE	1SS355TE-17
C605	1-126-963-11	ELECT	4.7uF 20% 50V	D605	8-719-988-61	DIODE	1SS355TE-17
*****				* D606	6-500-486-01	DIODE	PTZ-TE25-11B (E51, MX)
*****				D607	8-719-988-61	DIODE	1SS355TE-17

PANEL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D608	8-719-988-61	DIODE 1SS355TE-17		Q603	8-729-140-04	TRANSISTOR	2SB1116A-L
D609	8-719-988-61	DIODE 1SS355TE-17		Q604	8-729-119-76	TRANSISTOR	2SA1175-HFE
D610	8-719-056-78	DIODE UDZ-TE-17-4.3B		Q605	8-729-120-28	TRANSISTOR	2SC1623-L5L6
D611	8-719-988-61	DIODE 1SS355TE-17					
D613	8-719-988-61	DIODE 1SS355TE-17		Q609	8-729-027-55	TRANSISTOR	DTC143EKA-T146
				Q616	8-729-027-55	TRANSISTOR	DTC143EKA-T146
D614	8-719-988-61	DIODE 1SS355TE-17				< RESISTOR >	
D615	8-719-988-61	DIODE 1SS355TE-17					
D616	8-719-988-61	DIODE 1SS355TE-17		R601	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D620	8-719-988-61	DIODE 1SS355TE-17 (EXCEPT CIS)		R602	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D621	8-719-988-61	DIODE 1SS355TE-17		R603	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R604	1-216-841-11	METAL CHIP	47K 5% 1/10W
D622	8-719-988-61	DIODE 1SS355TE-17 (AEP, UK, CIS)		R605	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D623	8-719-988-61	DIODE 1SS355TE-17					
D624	8-719-988-61	DIODE 1SS355TE-17		R606	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D626	8-719-988-61	DIODE 1SS355TE-17		R607	1-216-841-11	METAL CHIP	47K 5% 1/10W
D628	8-719-988-61	DIODE 1SS355TE-17		R608	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R609	1-216-837-11	METAL CHIP	22K 5% 1/10W
D630	8-719-988-61	DIODE 1SS355TE-17		R610	1-216-833-11	METAL CHIP	10K 5% 1/10W
D631	8-719-978-33	DIODE DTZ-TT11-6.8B					
D632	8-719-083-57	DIODE UDZSTE-173.6B		R611	1-216-837-11	METAL CHIP	22K 5% 1/10W
D633	8-719-988-61	DIODE 1SS355TE-17		R612	1-216-833-11	METAL CHIP	10K 5% 1/10W
		< FLUORESCENT INDICATOR TUBE >		R613	1-216-837-11	METAL CHIP	22K 5% 1/10W
FL601	1-518-977-11	INDICATOR TUBE, FLUORESCENT		R614	1-216-837-11	METAL CHIP	22K 5% 1/10W
		< IC >		R615	1-216-837-11	METAL CHIP	22K 5% 1/10W
IC601	6-804-440-01	IC LC876996A-53H2-E		R616	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC602	6-704-046-01	IC BU2099FV		R617	1-216-837-11	METAL CHIP	22K 5% 1/10W
IC603	6-704-045-01	IC MM1574ANLE		R618	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC604	8-759-533-04	IC M62703ML-E1		R619	1-216-837-11	METAL CHIP	22K 5% 1/10W
IC610	6-600-174-01	IC RPM7240-H4		R620	1-216-837-11	METAL CHIP	22K 5% 1/10W
		< SHORT >					
JR601	1-216-296-11	SHORT CHIP	0	R621	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR602	1-216-864-11	SHORT CHIP	0	R622	1-216-049-11	RES-CHIP	1K 5% 1/10W
JR603	1-216-864-11	SHORT CHIP	0	R623	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR607	1-216-864-11	SHORT CHIP	0	R624	1-216-049-11	RES-CHIP	1K 5% 1/10W
JR608	1-216-864-11	SHORT CHIP	0	R625	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR609	1-216-864-11	SHORT CHIP	0	R626	1-216-049-11	RES-CHIP	1K 5% 1/10W
JR610	1-216-296-11	SHORT CHIP	0	R627	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR611	1-216-864-11	SHORT CHIP	0 (CIS, E51, MX)	R628	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR612	1-216-864-11	SHORT CHIP	0 (CIS, E51, MX)	R629	1-216-150-11	RES-CHIP	10 5% 1/8W
JR614	1-216-864-11	SHORT CHIP	0	R630	1-216-809-11	METAL CHIP	100 5% 1/10W (AEP, UK)
JR615	1-216-864-11	SHORT CHIP	0	R631	1-216-809-11	METAL CHIP	100 5% 1/10W (AEP, UK)
JR617	1-216-864-11	SHORT CHIP	0	R632	1-216-809-11	METAL CHIP	100 5% 1/10W
JR621	1-216-864-11	SHORT CHIP	0	R633	1-216-809-11	METAL CHIP	100 5% 1/10W
JR622	1-216-864-11	SHORT CHIP	0	R634	1-216-809-11	METAL CHIP	100 5% 1/10W
JR624	1-216-864-11	SHORT CHIP	0	R635	1-216-809-11	METAL CHIP	100 5% 1/10W
JR626	1-216-864-11	SHORT CHIP	0	R636	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR627	1-216-864-11	SHORT CHIP	0	R637	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR628	1-216-864-11	SHORT CHIP	0	R638	1-216-809-11	METAL CHIP	100 5% 1/10W
JR629	1-216-864-11	SHORT CHIP	0	R639	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R640	1-216-834-11	METAL CHIP	12K 5% 1/10W
		< LED >					
LED601	8-719-063-93	LED SLR325VC-N-T32 (I/C)		R641	1-216-849-11	METAL CHIP	220K 5% 1/10W
LED602	6-500-810-01	LED SELU5923C-STP15 (i-BASS)		R642	1-216-817-11	METAL CHIP	470 5% 1/10W
				R643	1-216-819-11	METAL CHIP	680 5% 1/10W
		< TRANSISTOR >		R644	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q601	8-729-116-57	TRANSISTOR 2SB1068-K		R645	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
Q602	8-729-140-04	TRANSISTOR 2SB1116A-L					
				R646	1-216-823-11	METAL CHIP	1.5K 5% 1/10W
				R647	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
				R648	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
				R649	1-216-829-11	METAL CHIP	4.7K 5% 1/10W

PANEL

Ref. No.	Part No.	Description	Quantity	Unit	Remark	Ref. No.	Part No.	Description	Quantity	Unit	Remark
R650	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R713	1-216-797-11	METAL CHIP	10	5%	1/10W
R651	1-216-833-11	METAL CHIP	10K	5%	1/10W	R714	1-216-809-11	METAL CHIP	100	5%	1/10W
R653	1-216-817-11	METAL CHIP	470	5%	1/10W	R715	1-216-805-11	METAL CHIP	47	5%	1/10W
R654	1-216-819-11	METAL CHIP	680	5%	1/10W	R716	1-216-837-11	METAL CHIP	22K	5%	1/10W
R655	1-216-821-11	METAL CHIP	1K	5%	1/10W	R717	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R656	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R718	1-216-837-11	METAL CHIP	22K	5%	1/10W
R657	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R719	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R658	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R723	1-216-809-11	METAL CHIP	100	5%	1/10W
R659	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R725	1-216-809-11	METAL CHIP	100	5%	1/10W
R660	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R726	1-216-833-11	METAL CHIP	10K	5%	1/10W
R661	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R727	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R662	1-216-833-11	METAL CHIP	10K	5%	1/10W	R728	1-220-397-11	METAL CHIP	4.7M	5%	1/10W
R664	1-216-817-11	METAL CHIP	470	5%	1/10W	R729	1-216-809-11	METAL CHIP	100	5%	1/10W
R665	1-216-819-11	METAL CHIP	680	5%	1/10W	R730	1-216-809-11	METAL CHIP	100	5%	1/10W
R666	1-216-821-11	METAL CHIP	1K	5%	1/10W	R731	1-216-809-11	METAL CHIP	100	5%	1/10W
R667	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R732	1-216-853-11	METAL CHIP	470K	5%	1/10W
R668	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R733	1-216-809-11	METAL CHIP	100	5%	1/10W
R669	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R734	1-216-821-11	METAL CHIP	1K	5%	1/10W
R670	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R735	1-216-821-11	METAL CHIP	1K	5%	1/10W
R671	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R736	1-216-821-11	METAL CHIP	1K	5%	1/10W
R672	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R737	1-216-845-11	METAL CHIP	100K	5%	1/10W
R673	1-216-833-11	METAL CHIP	10K	5%	1/10W	R738	1-216-845-11	METAL CHIP	100K	5%	1/10W
R674	1-216-835-11	METAL CHIP	15K	5%	1/10W	R739	1-216-845-11	METAL CHIP	100K	5%	1/10W
R675	1-216-835-11	METAL CHIP	15K	5%	1/10W	R740	1-216-845-11	METAL CHIP	100K	5%	1/10W
R676	1-216-835-11	METAL CHIP	15K	5%	1/10W	R741	1-216-845-11	METAL CHIP	100K	5%	1/10W
R677	1-216-864-11	SHORT CHIP	0			R742	1-216-845-11	METAL CHIP	100K	5%	1/10W
R678	1-216-845-11	METAL CHIP	100K	5%	1/10W	R743	1-216-845-11	METAL CHIP	100K	5%	1/10W
R679	1-216-172-00	RES-CHIP	82	5%	1/8W	R744	1-216-845-11	METAL CHIP	100K	5%	1/10W
R680	1-216-838-11	METAL CHIP	27K	5%	1/10W	R745	1-216-845-11	METAL CHIP	100K	5%	1/10W
R681	1-216-849-11	METAL CHIP	220K	5%	1/10W	R746	1-216-845-11	METAL CHIP	100K	5%	1/10W
R682	1-216-833-11	METAL CHIP	10K	5%	1/10W	R747	1-216-845-11	METAL CHIP	100K	5%	1/10W
R683	1-216-849-11	METAL CHIP	220K	5%	1/10W	R748	1-216-845-11	METAL CHIP	100K	5%	1/10W
R684	1-216-821-11	METAL CHIP	1K	5%	1/10W	R749	1-216-845-11	METAL CHIP	100K	5%	1/10W
R685	1-216-841-11	METAL CHIP	47K	5%	1/10W	R750	1-216-845-11	METAL CHIP	100K	5%	1/10W
R686	1-216-841-11	METAL CHIP	47K	5%	1/10W	R751	1-216-845-11	METAL CHIP	100K	5%	1/10W
R687	1-216-833-11	METAL CHIP	10K	5%	1/10W	R752	1-216-845-11	METAL CHIP	100K	5%	1/10W
R688	1-216-817-11	METAL CHIP	470	5%	1/10W	R753	1-216-845-11	METAL CHIP	100K	5%	1/10W
R689	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R754	1-216-845-11	METAL CHIP	100K	5%	1/10W
R690	1-216-809-11	METAL CHIP	100	5%	1/10W	R755	1-216-845-11	METAL CHIP	100K	5%	1/10W
R691	1-216-809-11	METAL CHIP	100	5%	1/10W	R756	1-216-845-11	METAL CHIP	100K	5%	1/10W
R692	1-216-809-11	METAL CHIP	100	5%	1/10W	R757	1-216-845-11	METAL CHIP	100K	5%	1/10W
R693	1-216-809-11	METAL CHIP	100	5%	1/10W	R758	1-216-845-11	METAL CHIP	100K	5%	1/10W
R694	1-216-809-11	METAL CHIP	100	5%	1/10W	R759	1-216-845-11	METAL CHIP	100K	5%	1/10W
R695	1-216-809-11	METAL CHIP	100	5%	1/10W	R760	1-216-845-11	METAL CHIP	100K	5%	1/10W
R696	1-216-809-11	METAL CHIP	100	5%	1/10W	R761	1-216-845-11	METAL CHIP	100K	5%	1/10W
R697	1-216-809-11	METAL CHIP	100	5%	1/10W	R762	1-216-845-11	METAL CHIP	100K	5%	1/10W
R701	1-216-833-11	METAL CHIP	10K	5%	1/10W	R763	1-216-845-11	METAL CHIP	100K	5%	1/10W
R702	1-216-797-11	METAL CHIP	10	5%	1/10W	R764	1-216-845-11	METAL CHIP	100K	5%	1/10W
R703	1-216-833-11	METAL CHIP	10K	5%	1/10W	R765	1-216-845-11	METAL CHIP	100K	5%	1/10W
R704	1-216-797-11	METAL CHIP	10	5%	1/10W	R766	1-216-845-11	METAL CHIP	100K	5%	1/10W
R705	1-216-809-11	METAL CHIP	100	5%	1/10W	R767	1-216-845-11	METAL CHIP	100K	5%	1/10W
R706	1-216-809-11	METAL CHIP	100	5%	1/10W	R768	1-216-845-11	METAL CHIP	100K	5%	1/10W
R707	1-216-182-00	RES-CHIP	220	5%	1/8W	R769	1-216-845-11	METAL CHIP	100K	5%	1/10W
R708	1-216-182-00	RES-CHIP	220	5%	1/8W	R770	1-216-845-11	METAL CHIP	100K	5%	1/10W
R710	1-216-833-11	METAL CHIP	10K	5%	1/10W	R771	1-216-841-11	METAL CHIP	47K	5%	1/10W
R711	1-216-833-11	METAL CHIP	10K	5%	1/10W	R772	1-216-813-11	METAL CHIP	220	5%	1/10W
R712	1-216-797-11	METAL CHIP	10	5%	1/10W	R773	1-216-809-11	METAL CHIP	100	5%	1/10W
						R774	1-216-809-11	METAL CHIP	100	5%	1/10W

PANEL

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R775	1-216-809-11	METAL CHIP	100 5% 1/10W	S648	1-762-875-21	SWITCH, KEYBOARD (i-BASS)	
R776	1-216-817-11	METAL CHIP	470 5% 1/10W	S649	1-762-875-21	SWITCH, KEYBOARD (PRESET EQ)	
R777	1-216-809-11	METAL CHIP	100 5% 1/10W	S650	1-762-875-21	SWITCH, KEYBOARD (BASS +)	
R778	1-216-809-11	METAL CHIP	100 5% 1/10W	S660	1-786-417-11	SW, RTRY RE012307PVB30F (VOLUME)	
R779	1-216-809-11	METAL CHIP	100 5% 1/10W	S661	1-786-418-11	SWITCH, ROTARY (ENCODER) (AMS/TUNING)	
R780	1-216-817-11	METAL CHIP	470 5% 1/10W			< VIBRATOR >	
R781	1-216-809-11	METAL CHIP	100 5% 1/10W	X601	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)	
R782	1-216-809-11	METAL CHIP	100 5% 1/10W	X602	1-795-004-21	VIBRATOR, CERAMIC (10MHz)	
R783	1-216-809-11	METAL CHIP	100 5% 1/10W			*****	
R784	1-216-809-11	METAL CHIP	100 5% 1/10W			A-4751-490-A	POWER BOARD, COMPLETE (AEP, UK, CIS)
R785	1-216-809-11	METAL CHIP	100 5% 1/10W			A-4751-499-A	POWER BOARD, COMPLETE (E51)
R786	1-216-833-11	METAL CHIP	10K 5% 1/10W			A-4752-996-A	POWER BOARD, COMPLETE (MX)
R787	1-216-809-11	METAL CHIP	100 5% 1/10W				*****
R788	1-216-809-11	METAL CHIP	100 5% 1/10W			7-685-872-09	SCREW +BVTT 3X8 (S)
R789	1-216-841-11	METAL CHIP	47K 5% 1/10W				< CAPACITOR >
R790	1-216-821-11	METAL CHIP	1K 5% 1/10W			C402	1-162-306-11 CERAMIC 0.01uF 20% 16V
R791	1-216-809-11	METAL CHIP	100 5% 1/10W			C403	1-137-749-11 MYLAR 0.1uF 100V
R792	1-216-809-11	METAL CHIP	100 5% 1/10W			C404	1-137-749-11 MYLAR 0.1uF 100V
R793	1-216-809-11	METAL CHIP	100 5% 1/10W			C405	1-127-814-11 ELECT 3300uF 20% 80V
R794	1-216-809-11	METAL CHIP	100 5% 1/10W				(E51, MX)
R795	1-216-809-11	METAL CHIP	100 5% 1/10W			C405	1-135-516-11 ELECT 3300uF 20% 63V
R796	1-216-809-11	METAL CHIP	100 5% 1/10W				(AEP, UK, CIS)
R797	1-216-821-11	METAL CHIP	1K 5% 1/10W			C406	1-127-814-11 ELECT 3300uF 20% 80V
R798	1-216-821-11	METAL CHIP	1K 5% 1/10W				(E51, MX)
R799	1-216-821-11	METAL CHIP	1K 5% 1/10W			C406	1-135-516-11 ELECT 3300uF 20% 63V
R854	1-216-813-11	METAL CHIP	220 5% 1/10W				(AEP, UK, CIS)
R863	1-216-170-00	RES-CHIP	68 5% 1/8W			C407	1-162-306-11 CERAMIC 0.01uF 20% 16V
		< SWITCH >					(AEP, UK, CIS)
S601	1-762-875-21	SWITCH, KEYBOARD (I/⏻)				C408	1-162-306-11 CERAMIC 0.01uF 20% 16V
S602	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)					(AEP, UK, CIS)
S603	1-762-875-21	SWITCH, KEYBOARD (ENTER)				C409	1-127-811-11 ELECT 3300uF 20% 50V
S604	1-762-875-21	SWITCH, KEYBOARD (DISC 1)					(E51, MX)
S605	1-762-875-21	SWITCH, KEYBOARD (DISC 2)				C410	1-127-811-11 ELECT 3300uF 20% 50V
S606	1-762-875-21	SWITCH, KEYBOARD (DISC 3)					(E51, MX)
S607	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP/EX-CHANGE)				C413	1-136-497-81 FILM 0.1uF 5% 50V
S608	1-762-875-21	SWITCH, KEYBOARD (▲)					(E51, MX)
S609	1-762-875-21	SWITCH, KEYBOARD (SURROUND)				C414	1-136-497-81 FILM 0.1uF 5% 50V
S610	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/TUNING MODE)					(E51, MX)
S621	1-762-875-21	SWITCH, KEYBOARD (CD)				C441	1-126-964-11 ELECT 10uF 20% 50V
S622	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)				C442	1-126-964-11 ELECT 10uF 20% 50V
S623	1-762-875-21	SWITCH, KEYBOARD (TAPE A/B)				C443	1-162-294-31 CERAMIC 0.001uF 10% 50V
S624	1-762-875-21	SWITCH, KEYBOARD (VIDEO/MD)				C444	1-162-294-31 CERAMIC 0.001uF 10% 50V
S625	1-762-875-21	SWITCH, KEYBOARD (P FILE)				C445	1-162-282-31 CERAMIC 100PF 10% 50V
S626	1-762-875-21	SWITCH, KEYBOARD (TREBLE -)				C446	1-162-282-31 CERAMIC 100PF 10% 50V
S627	1-762-875-21	SWITCH, KEYBOARD (TREBLE +)				C447	1-126-965-11 ELECT 22uF 20% 50V
S628	1-762-875-21	SWITCH, KEYBOARD (MIDDLE -)					(AEP, UK, CIS)
S629	1-762-875-21	SWITCH, KEYBOARD (MIDDLE +)				C447	1-126-967-11 ELECT 47uF 20% 50V
S630	1-762-875-21	SWITCH, KEYBOARD (BASS -)					(E51, MX)
S641	1-762-875-21	SWITCH, KEYBOARD (▶▶ ALBUM +)				C448	1-126-965-11 ELECT 22uF 20% 50V
S642	1-762-875-21	SWITCH, KEYBOARD (■)					(AEP, UK, CIS)
S643	1-762-875-21	SWITCH, KEYBOARD (◀ ▷)				C448	1-126-967-11 ELECT 47uF 20% 50V
S644	1-762-875-21	SWITCH, KEYBOARD (■)					(E51, MX)
S645	1-762-875-21	SWITCH, KEYBOARD (◀◀ ALBUM -)				C451	1-136-497-81 FILM 0.1uF 5% 50V
S646	1-762-875-21	SWITCH, KEYBOARD (REC/PAUSE/START)				C452	1-136-497-81 FILM 0.1uF 5% 50V
S647	1-762-875-21	SWITCH, KEYBOARD (CD SYNC)				C453	1-136-497-81 FILM 0.1uF 5% 50V
						C454	1-136-497-81 FILM 0.1uF 5% 50V

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C455	1-136-497-81	FILM	0.1uF 5% 50V (AEP, UK, CIS)			< COIL >	
C456	1-136-497-81	FILM	0.1uF 5% 50V (AEP, UK, CIS)	L441	1-422-009-13	COIL, AIR-CORE	
C457	1-136-497-81	FILM	0.1uF 5% 50V (AEP, UK, CIS)	L442	1-422-009-13	COIL, AIR-CORE	
C458	1-136-497-81	FILM	0.1uF 5% 50V (AEP, UK, CIS)			< TRANSISTOR >	
C459	1-162-294-31	CERAMIC	0.001uF 10% 50V (AEP, UK, CIS)	Q441	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
C460	1-162-294-31	CERAMIC	0.001uF 10% 50V (AEP, UK, CIS)	Q442	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
C461	1-128-562-11	ELECT	47uF 20% 100V (E51, MX)	Q481	8-729-119-79	TRANSISTOR	2SC2785-FEK
C462	1-128-562-11	ELECT	47uF 20% 100V (E51, MX)	Q482	8-729-119-79	TRANSISTOR	2SC2785-FEK
C463	1-104-655-91	ELECT	470uF 20% 6.3V (E51, MX)	Q483	8-729-119-79	TRANSISTOR	2SC2785-FEK
C481	1-104-665-11	ELECT	100uF 20% 25V	Q484	8-729-119-79	TRANSISTOR	2SC2785-FEK
C486	1-126-961-11	ELECT	2.2uF 20% 50V	Q485	8-729-119-76	TRANSISTOR	2SA1175-HFE
C487	1-126-963-11	ELECT	4.7uF 20% 50V	Q486	8-729-119-79	TRANSISTOR	2SC2785-FEK
C488	1-126-965-11	ELECT	22uF 20% 50V (AEP, UK, CIS)	Q487	8-729-119-79	TRANSISTOR	2SC2785-FEK
				Q488	8-729-119-79	TRANSISTOR	2SC2785-FEK
						< RESISTOR >	
C489	1-128-563-11	ELECT	100uF 20% 100V (AEP, UK, CIS)	R401	1-247-879-91	CARBON	100K 5% 1/4W
C491	1-162-294-31	CERAMIC	0.001uF 10% 50V (AEP, UK, CIS)	R402	1-247-879-91	CARBON	100K 5% 1/4W
C492	1-162-306-11	CERAMIC	0.01uF 20% 16V (E51, MX)	R403	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)
		< CONNECTOR >		R404	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)
CN441	1-778-981-21	CONNECTOR, BOARD TO BOARD 13P		R407	1-260-316-51	CARBON	100 5% 1/2W
		< DIODE >		R409	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)
D401	6-500-360-01	DIODE D10XB20		R410	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)
D402	6-500-360-01	DIODE D10XB20 (E51, MX)		R411	1-249-421-11	CARBON	2.2K 5% 1/4W
D441	8-719-991-33	DIODE 1SS133T-77		R412	1-249-421-11	CARBON	2.2K 5% 1/4W
D442	8-719-991-33	DIODE 1SS133T-77		R413	1-249-429-11	CARBON	10K 5% 1/4W
D443	8-719-991-33	DIODE 1SS133T-77		R414	1-249-429-11	CARBON	10K 5% 1/4W
D444	8-719-991-33	DIODE 1SS133T-77 (E51, MX)		R441	1-247-831-91	CARBON	1K 5% 1/4W
D445	8-719-947-65	DIODE MTZJ-T-72-16B (E51, MX)		R442	1-247-831-91	CARBON	1K 5% 1/4W
D446	8-719-947-65	DIODE MTZJ-T-72-16B (E51, MX)		R443	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)
D481	8-719-991-33	DIODE 1SS133T-77		R443	1-247-873-91	CARBON	56K 5% 1/4W (E51, MX)
D482	8-719-991-33	DIODE 1SS133T-77		R444	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)
D483	8-719-991-33	DIODE 1SS133T-77 (AEP, UK, CIS)		R444	1-247-873-91	CARBON	56K 5% 1/4W (E51, MX)
		< EARTH TERMINAL >		R445	1-247-831-91	CARBON	1K 5% 1/4W
EP401	1-537-771-21	TERMINAL BOARD, GROUND		R446	1-247-831-91	CARBON	1K 5% 1/4W
EP402	1-537-771-21	TERMINAL BOARD, GROUND		R447	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)
EP491	1-537-771-21	TERMINAL BOARD, GROUND (E51, MX)		R447	1-247-873-91	CARBON	56K 5% 1/4W (E51, MX)
		< IC >		R448	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)
IC441	6-600-169-01	IC STK412-240 (E51, MX)		R448	1-247-873-91	CARBON	56K 5% 1/4W (E51, MX)
IC441	6-600-221-01	IC STK403-130 (AEP, UK, CIS)		△R451	1-217-156-00	METAL	0.22 10% 5W F
		< TERMINAL BOARD >		△R452	1-217-156-00	METAL	0.22 10% 5W F
JK441	1-694-884-11	TERMINAL BOARD (4P) (SPEAKER IMPEDANCE USE 6-16Ω)		R453	1-260-076-11	CARBON	10 5% 1/2W
				R454	1-260-076-11	CARBON	10 5% 1/2W

POWER	SENSOR	SUB TRANS
--------------	---------------	------------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R455	1-247-831-91	CARBON	1K 5% 1/4W	R490	1-247-847-91	CARBON	4.7K 5% 1/4W
R456	1-247-831-91	CARBON	1K 5% 1/4W	R491	1-247-863-11	CARBON	22K 5% 1/4W (AEP, UK, CIS)
R457	1-249-431-11	CARBON	15K 5% 1/4W (E51, MX)	R492	1-247-831-91	CARBON	1K 5% 1/4W (AEP, UK, CIS)
R457	1-247-863-11	CARBON	22K 5% 1/4W (AEP, UK, CIS)	R493	1-249-435-11	CARBON	33K 5% 1/4W (AEP, UK, CIS)
R458	1-249-431-11	CARBON	15K 5% 1/4W (E51, MX)	R494	1-249-421-11	CARBON	2.2K 5% 1/4W (AEP, UK, CIS)
R458	1-247-863-11	CARBON	22K 5% 1/4W (AEP, UK, CIS)	△R495	1-202-972-61	FUSIBLE	1 5% 1/4W F
R459	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)	△R496	1-212-881-11	FUSIBLE	100 5% 1/4W F
R459	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)	< RELAY >			
R460	1-247-871-91	CARBON	47K 5% 1/4W (AEP, UK, CIS)	RY441	1-755-372-11	RELAY (E51, MX)	
R460	1-247-879-91	CARBON	100K 5% 1/4W (E51, MX)	RY441	1-755-373-11	RELAY (AEP, UK, CIS)	
R461	1-260-076-11	CARBON	10 5% 1/2W	< THERMISTOR >			
R462	1-260-076-11	CARBON	10 5% 1/2W	TH441	1-807-796-11	THERMISTOR	
R463	1-260-076-11	CARBON	10 5% 1/2W (AEP, UK, CIS)	*****			
R464	1-260-076-11	CARBON	10 5% 1/2W (AEP, UK, CIS)	1-687-132-12	SENSOR BOARD	*****	
R465	1-247-871-91	CARBON	47K 5% 1/4W	< CONNECTOR >			
R466	1-247-873-91	CARBON	56K 5% 1/4W	CN731	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE) 3P	
R467	1-215-872-11	METAL OXIDE	3.3K 5% 1W (E51, MX)	< IC >			
R467	1-249-435-11	CARBON	33K 5% 1/4W (AEP, UK, CIS)	IC731	(Not supplied) IC RPI-576	*****	
R468	1-215-872-11	METAL OXIDE	3.3K 5% 1W (E51, MX)	SUB TRANS BOARD *****			
R469	1-249-435-11	CARBON	33K 5% 1/4W (E51, MX)	< CONNECTOR >			
R470	1-249-435-11	CARBON	33K 5% 1/4W (E51, MX)	CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
R471	1-249-439-11	CARBON	68K 5% 1/4W (E51, MX)	< DIODE >			
R472	1-249-435-11	CARBON	33K 5% 1/4W (E51, MX)	D901	8-719-991-33	DIODE 1SS133T-77	
R473	1-247-863-11	CARBON	22K 5% 1/4W (E51, MX)	D902	6-500-522-21	DIODE 10EDB40-TB3	
R474	1-249-421-11	CARBON	2.2K 5% 1/4W (E51, MX)	D903	6-500-522-21	DIODE 10EDB40-TB3	
R475	1-249-429-11	CARBON	10K 5% 1/4W (E51, MX)	D904	6-500-522-21	DIODE 10EDB40-TB3	
R476	1-249-431-11	CARBON	15K 5% 1/4W (E51, MX)	D905	6-500-522-21	DIODE 10EDB40-TB3	
R477	1-212-881-11	FUSIBLE	100 5% 1/4W (E51, MX)	< TRANSFORMER >			
R478	1-249-429-11	CARBON	10K 5% 1/4W (E51, MX)	△PT902	X-4956-293-1	SUB TRANS ASSY (AEP, UK, CIS)	
R481	1-247-847-91	CARBON	4.7K 5% 1/4W	△PT902	X-4956-294-1	TRANS ASSY, SUB (E51)	
R482	1-249-429-11	CARBON	10K 5% 1/4W	△PT902	X-4956-322-1	SUB TRANS ASSY (MX)	
R483	1-249-397-11	CARBON	22 5% 1/4W	< RELAY >			
R484	1-247-873-91	CARBON	56K 5% 1/4W	△RY901	1-755-276-11	RELAY, POWER	
R485	1-247-879-91	CARBON	100K 5% 1/4W	< SWITCH >			
R486	1-247-879-91	CARBON	100K 5% 1/4W	△S901	1-786-055-21	SELECTOR, VOLTAGE (VOLTAGE SELECT)	(E51)
R487	1-249-435-11	CARBON	33K 5% 1/4W	*****			
R488	1-247-863-11	CARBON	22K 5% 1/4W				
R489	1-247-847-91	CARBON	4.7K 5% 1/4W				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

SW **TRANS** **TRANSLATION**

Ref. No.	Part No.	Description	Remark
	1-687-669-12	SW BOARD *****	
		< SWITCH >	
S751	1-786-514-11	SWITCH, LEVER (SLIDE) (OPEN/CLOSE DETECT)	

	A-4751-489-A	TRANS BOARD, COMPLETE (AEP, UK, CIS)	
	A-4751-498-A	TRANS BOARD, COMPLETE (E51)	
	A-4752-953-A	TRANS BOARD, COMPLETE (MX) *****	
	1-533-217-41	HOLDER, FUSE < CAPACITOR >	
C906	1-164-159-11	CERAMIC 0.1uF 50V	
C908	1-128-553-11	ELECT 220uF 20% 63V	
C909	1-126-964-11	ELECT 10uF 20% 50V	
C910	1-126-968-11	ELECT 100uF 20% 50V	
C911	1-126-942-61	ELECT 1000uF 20% 25V	
C920	1-131-679-31	FILM 0.01uF 5% 50V	
C921	1-131-679-31	FILM 0.01uF 5% 50V	
C922	1-131-679-31	FILM 0.01uF 5% 50V	
C923	1-131-679-31	FILM 0.01uF 5% 50V	
C924	1-136-165-00	FILM 0.1uF 5% 50V	
C925	1-136-165-00	FILM 0.1uF 5% 50V	
C926	1-164-159-11	CERAMIC 0.1uF 50V	
		< CONNECTOR >	
CN904	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P (EXCEPT E51)	
CN904	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P (E51)	
CN905	1-564-506-11	PLUG, CONNECTOR 3P (AEP, UK, CIS)	
* CN905	1-564-508-11	PLUG, CONNECTOR 5P (E51, MX)	
* CN906	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
* CN907	1-764-333-11	PLUG, CONNECTOR 10P	
		< DIODE >	
D906	8-719-983-79	DIODE MTZJ-T-72-2D	
D908	6-500-522-21	DIODE 10EDB40-TB3	
		< TRANSISTOR >	
Q902	8-729-048-52	TRANSISTOR 2SA1932 (TP)	
		< RESISTOR >	
R903	1-249-430-11	CARBON 12K 5% 1/4W	
R904	1-247-831-91	CARBON 1K 5% 1/4W	
△ R908	1-202-972-61	FUSIBLE 1 5% 1/4W F	

		TRANSLATION BOARD (AEP, UK, CIS) *****	
		< CAPACITOR >	
C861	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	

Ref. No.	Part No.	Description	Remark
		< EARTH TERMINAL >	
EP802	1-537-771-21	TERMINAL BOARD, GROUND *****	
		MISCELLANEOUS *****	
7	1-775-251-11	WIRE (FLAT TYPE) (27 CORE)	
9	1-469-854-11	CORE, FERRITE	
106	1-773-288-11	WIRE (FLAT TYPE) (29 CORE) (E51, MX)	
106	1-773-322-11	WIRE (FLAT TYPE) (31 CORE) (AEP, UK, CIS)	
107	1-827-145-11	WIRE (FLAT TYPE) (13 CORE)	
108	1-773-048-11	WIRE (FLAT TYPE) (17 CORE)	
111	1-796-486-71	DECK, MECHANICAL (CWM43FR34)	
251	1-769-940-11	WIRE (FLAT TYPE) (11 CORE) (E51, MX)	
251	1-777-353-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK, CIS)	
252	1-693-615-11	TUNER (FM/AM) (E51, MX)	
252	1-693-616-11	TUNER (FM/AM) (AEP, UK)	
252	1-693-654-11	TUNER (FM/AM) (CIS)	
308	1-400-285-11	F-BEAD, E2515MRT	
509	1-776-182-11	WIRE (FLAT TYPE) (5 CORE)	
602	1-471-035-11	MAGNET ASSY	
△ 657	8-820-244-11	OPTICAL PICK-UP (KSM-215DCP/C2NP)	
658	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
△ F904	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3A/250V) (E51, MX)	
△ F904	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V) (AEP, UK, CIS)	
△ F905	1-533-473-12	FUSE, GLASS TUBE (DIA. 5) (T6.3A/250V) (E51, MX)	
△ F905	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V) (AEP, UK, CIS)	
△ F906	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ F907	1-533-470-12	FUSE, GLASS TUBE (DIA. 5) (T3.15AL/250V)	
△ F908	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V) (E51, MX)	
△ F909	1-576-655-12	FUSE, GLASS TUBE (DIA. 5) (T8A/250V) (E51, MX)	
M741	A-4723-963-A	MOTOR ASSY, TABLE	
M751	A-4736-655-A	MOTOR ASSY, LOADING	
M901	1-763-072-11	FAN, DC (E51)	
M901	1-763-117-13	FAN, DC (EXCEPT E51)	
△ PT901	1-443-234-11	TRANSFORMER, POWER (AEP, UK, CIS)	
△ PT901	1-443-251-11	TRANSFORMER, POWER (E51)	
△ PT901	1-443-295-11	TRANSFORMER, POWER (MX)	
S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
S711	1-477-680-12	ENCODER, ROTARY (DISC TRAY ADDRESS DETECT)	
△ W001	1-777-071-83	CORD, POWER (EXCEPT MX)	
△ W001	1-827-226-11	CORD, POWER (MX) *****	
		ACCESSORIES *****	
	1-569-008-32	ADAPTOR, CONVERSION (E51)	
	1-770-019-51	ADAPTOR, CONVERSION PLUG (UK)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

MEMO

