


# TOSHIBA

FILE NO. 050-200410

## SERVICE MANUAL

## COLOR TELEVISION

# 27A34

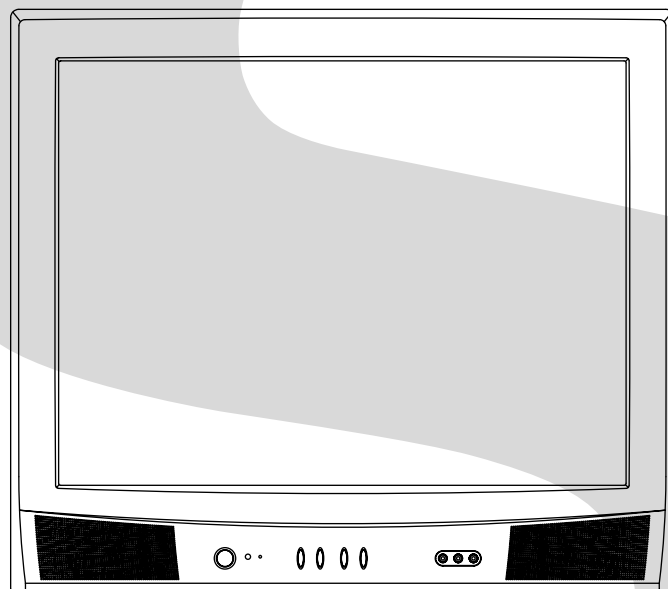

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal [Note 2] should be more than 1M ohm by using the 500V insulation resistance meter [Note 1].
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### [Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

#### [Note 2]

External exposure metal: Antenna terminal  
Earphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

# TABLE OF CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>IMPORTANT</b> .....	A1-1
<b>TABLE OF CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-6
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP .....	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C1-1
<b>CONFIRMATION OF HOURS USED</b> .....	C1-1
<b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....	C1-1
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-5
<b>BLOCK DIAGRAMS</b> .....	E-1, E-2
<b>PRINTED CIRCUIT BOARDS</b>	
MAIN/CRT .....	F-1~F-4
<b>SCHEMATIC DIAGRAMS</b>	
MICON .....	G-1, G-2
CHROMA .....	G-3, G-4
DEFLECTION .....	G-5, G-6
POWER .....	G-7, G-8
SOUND .....	G-9, G-10
TUNER/STEREO .....	G-11, G-12
AV .....	G-13, G-14
CRT .....	G-15, G-16
COMB/FILTER .....	G-17, G-18
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEWS</b> .....	I-1, I-2
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1, J1-2
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1~J2-8

# GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	27 inch / 676mmV
			CRT Type	Normal
			Deflection	108 degree
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker	2Speaker	
			Position	Front
			Size	2.0 x 3.5 Inch
		Sound Output	Impedance	8 ohm
			MAX	2.5 + 2.5 W
			10%(Typical)	2.0 + 2.0 W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	Tuning System	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CATV)
		Tuning System		F-Synth
		Input Impedance		VHF/UHF 75 ohm
		CH Coverage		2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
		Frequency	Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
G-3	Power	Power Source	AC	120V AC 60Hz
			DC	-
		Power Consumption at AC		125 W at AC 120 V 60 Hz
		Stand by (at AC)		3 W at AC 120 V 60 Hz
		Per Year		-- kWh/Year
		Protector	Power Fuse	Yes
			Safety Circuit	Yes
G-4	Regulation	IC Protector(Micro Fuse)		No
		Safety		UL/CSA[From '04 APR O/R]
		Radiation		FCC/IC[From '04 APR O/R]
G-5	Temperature	X-Radiation		DHHS/HWC[From '04 APR O/R]
		Operation		+5oC ~ +40oC
G-6	Operating Humidity	Storage		-20oC ~ +60oC
				Less than 80% RH

## GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu		Yes
		Menu Type		Icon
		Picture		Yes
		Contrast		Yes
		Brightness		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Audio		Yes
		Bass		Yes
		Treble		Yes
		Balance		Yes
		BBE On/Off		No
		Stable Sound On/Off		Yes
		Surround On/Off		Yes
		Set Up		Yes
		TV/CABLE(CATV)		Yes
		CH Program		Yes
		Add/Erase		Yes
		Option		Yes
		Language		Yes
		V-chip		Yes
		CH Label		Yes
		Favorite CH		Yes
		Lock		Yes
		On/Off Timer		Yes
		Color Stream DVD/DTV		Yes
		Control Level		Yes
		Volume		Yes
		Brightness		Yes
		Contrast		Yes
		Color		Yes
		Tint		Yes
		Sharpness		Yes
		Tuning		No
		Bass		Yes
		Treble		Yes
		Balance		Yes
		Back Light		No
		Stereo,Audio Output,SAP		Yes
		Video		Yes
		Color Stream		Yes
		Channel(TV/Cable)		Yes
		CH Label		Yes
		Game Timer		Yes
		Sleep Timer		Yes
		Sound Mute		Yes
		V-chip Rating		Yes
		16: 9		No
G-8	OSD Language		English    French    Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min
			Step	<u>  10  </u> Min
		On/Off Timer	Program(On Timer / Off Timer / Clock)	Yes
		Wake Up Timer		No
		Timer Back-up (at Power Off Mode)	more than	--    Min    Sec

## GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-GQ
		Glow in Dark Remocon	Yes
		Format	Toshiba
		Custom Code	TV:40-BF h
		Power Source	3V
		Voltage(D.C)	
		UM size x pcs	UM-4 x 2 pcs
		Total Keys	29 Keys
		Keys	Power
			Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100	Yes
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		Cap/Text(TV/Caption/Text)	Yes
		1/2(CH1/CH2)	Yes
		TV/Video(TV/AV)	Yes
		CH RTN(Quick View)	Yes
		Sleep	Yes
		RECall(Call)	Yes
		Reset	Yes
		Menu/Enter	Yes
		Mute	Yes
		Exit	Yes
		MTS(Audio Select)	Yes
		Fav.Up	Yes
		Fav.Down	Yes
		16: 9	No
		Multi Brand Keys	CH Up(VCR)
			No
			CH Down(VCR)
			No
			Pause/Still
			No
			TV/VCR(VCR)
			No
			FF
			No
			Rew
			No
			Rec
			No
			Play
			No
			Stop
			No
			TV
			No
			VCR
			No
			Cable
			No
			DVD
			No
			CODE
			No
			DVD MENU <
			No
			DVD MENU >
			No
			DVD CLEAR
			No
			TOP MENU
			No
			DVD MENU
			No

## GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA, Toshiba Type
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	Yes
		Just Clock Function	No
		CH Label	Yes
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	Yes 3 Lines
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	Yes
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Energy Star	No
		Favorite CH	Yes
		Surround	Yes
		16:9 Mode	No
		2 Tuner P-in-P	No

## GENERAL SPECIFICATIONS

G-12	Accessories	Owner's Manual	Language	English / French[From '04 APR O/R]
			W/ Warranty	Yes
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	
			Terminal	
		Loop Antenna		No
			Terminal	
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Facility List		No
		Important Safety Instruction		No
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM4 size x 2
			OEM Brand	No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Registration Card (NDL Card)		Yes
		ESP Card		No[From '04 MAR O/R]
		PTB Sheet		No
		300 ohm to 75 ohm Antenna Adapter		No



## GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
		Rear	AC/DC	No	
			TV/CATV Selector	No	
			Degauss	No	
			Main Power SW	No	
		Indicator	Power	Yes(RED)	
			Stand-by	No	
			On Timer	No	
		Terminals	Front	Video Input	RCA
				Audio Input	RCA x 2
				Other Terminal	No
			Rear	Video Input(Rear1)	RCA
				Video Input(Rear2)	RCA
				Audio Input(Rear1)	RCA x 2
				Audio Input(Rear2)	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2
				S- Input	Yes
				Euro Scart	No
				Color Stream	RCA x 3
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No

G-14	Set Size	Approx. W x D x H (mm)	650 x 500.5 x 571.5		
G-15	Weight	Net (Approx.)	36.5kg ( 80.5 lbs)		
		Gross (Approx.)	40.5Kg ( 89.3 lbs)		
G-16	Carton	Master Carton		No	
			Content	---- Sets	
			Material	-- /--	
			Dimensions W x D x H(mm)	-- x -- x --	
		Description of Origin	No		
			Gift Box	Yes	
				Material	Double/Brown
				Dimensions W x D x H(mm)	771 x 580 x 665
		Design		As per Buyer's	
		Description of Origin	Yes		
			Drop Test	Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces	
				Height (cm)	60 (ORION SPEC:31)
Container Stuffing	165 Sets/40' container				

G-17	Cabinet Material	Cabinet	Cabinet Front	PS 94V0 DECABROM
			Cabinet Rear	PS 94V0 DECABROM
		PCB	Non-Halogen Demand	No
			Eyelet Demand	Yes

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap.  
(Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

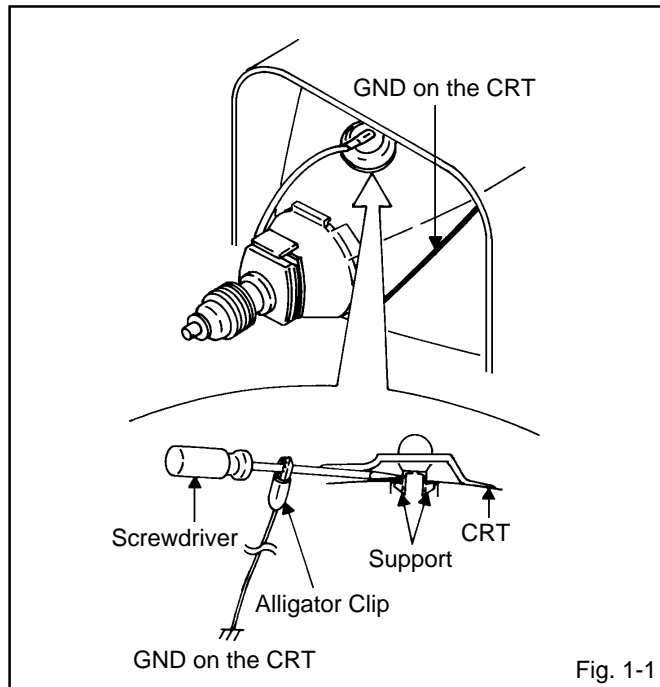


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support.  
(Refer to Fig. 1-2.)

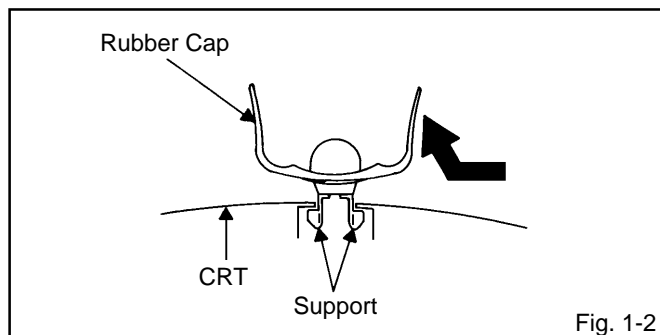


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

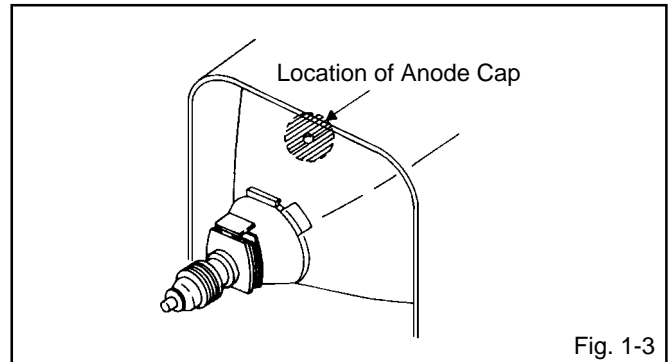


Fig. 1-3

### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

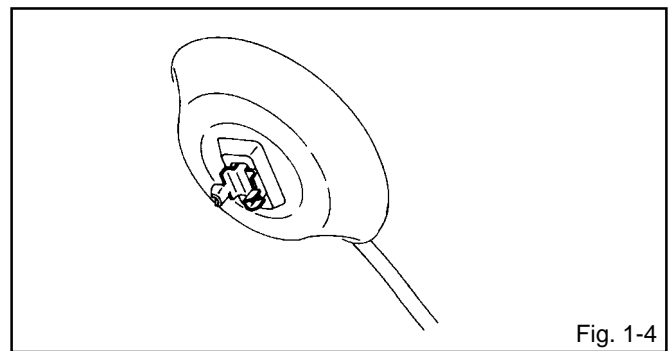


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

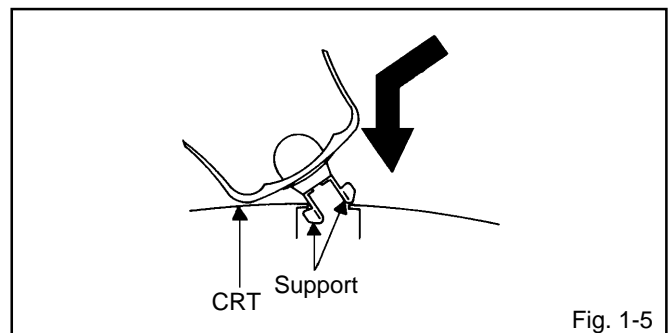


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

## DISASSEMBLY INSTRUCTIONS


### 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

#### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

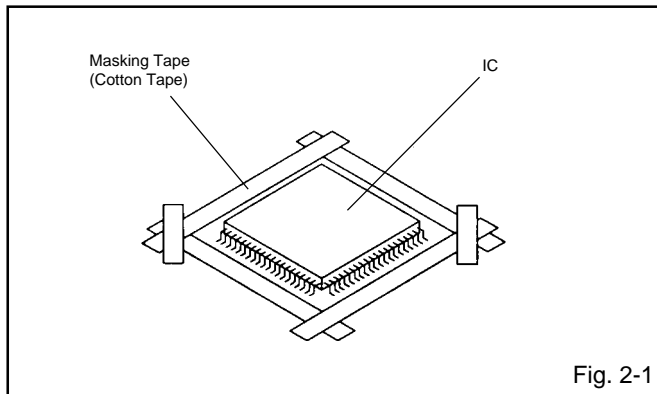

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

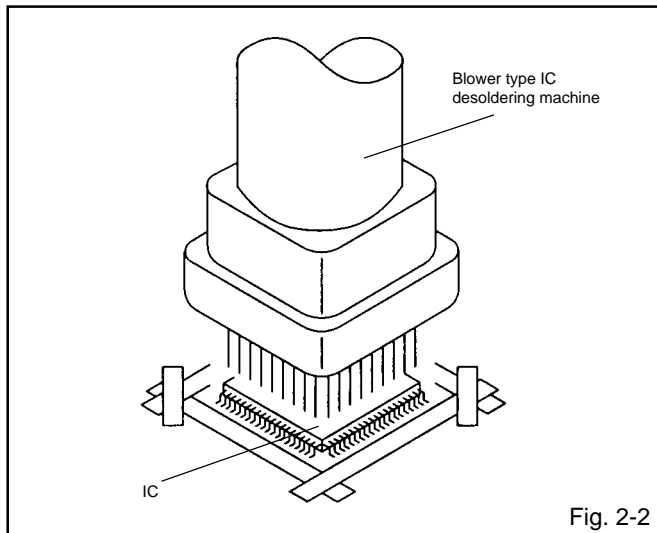

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

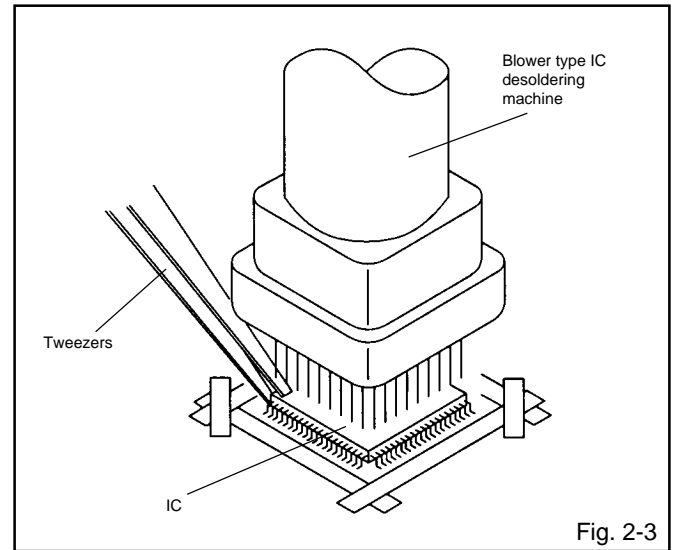

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

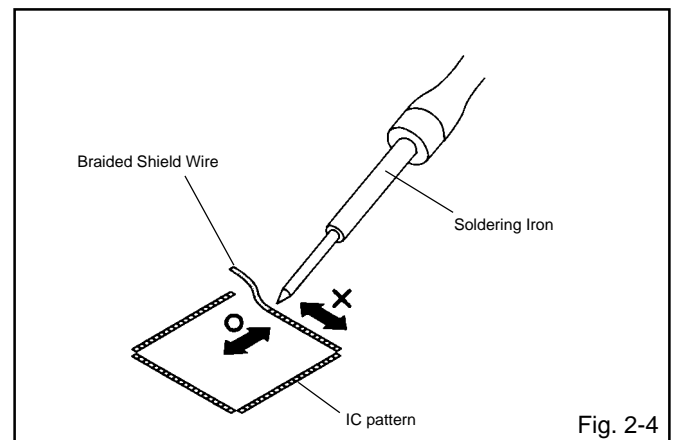


# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

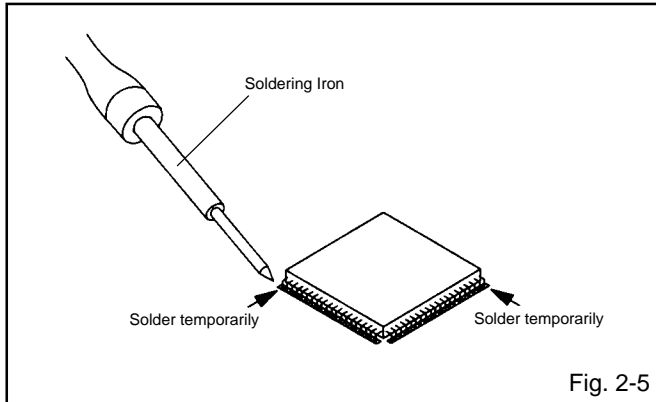


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

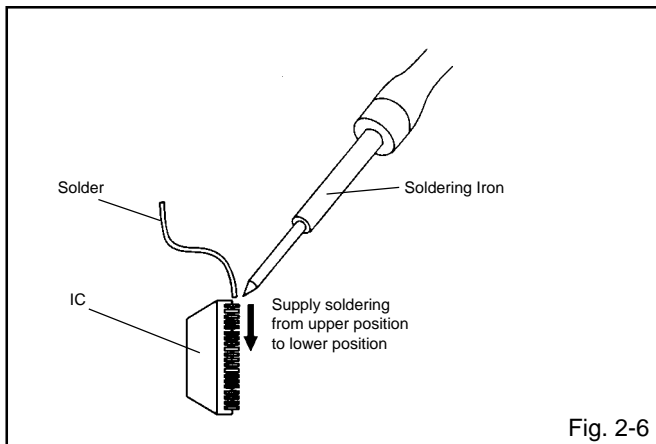


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

### NOTE

Do not absorb the solder to excess.

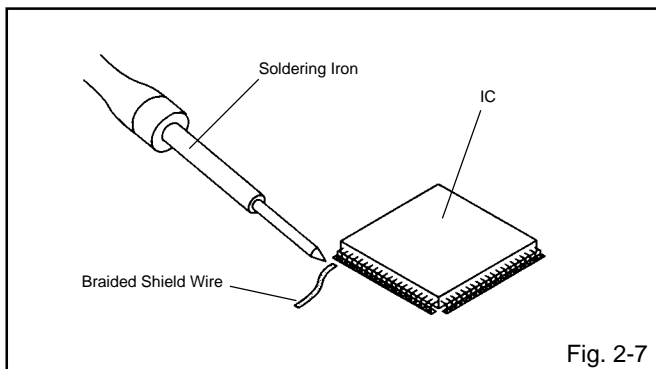

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

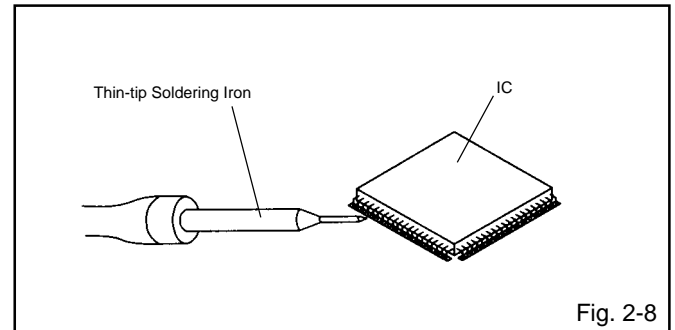

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.  
To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

## CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

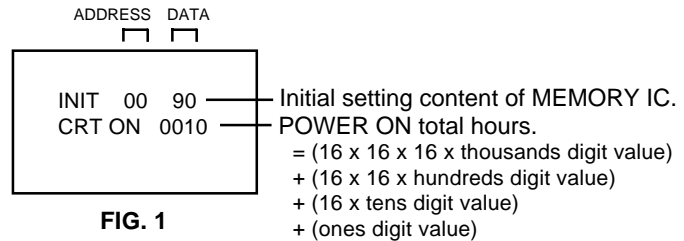


FIG. 1

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: No need setting for after INI 1F due to the adjustment value.**

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	90	E8	02	65	5E	B3	24	37	39	AC	AA	04	40	40	40	7F
10	50	00	00	00	00	00	00	99	3F	0F	0D	E6	A8	21	42	00

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button (6) on the remote control for more than 1 second.  
ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the VOL. UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. UP/DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.  
**After the data input, set to the initializing of shipping.**
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button (1) on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.  
The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

**Prepare the following measurement tools for electrical adjustments.**

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen.  
Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

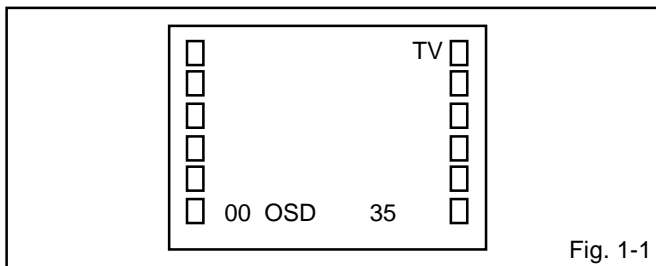


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO. FUNCTION	NO. FUNCTION
00 OSD H	19 CONTRAST CENT
01 CUT OFF	20 CONTRAST MIN
02 H. VCO	21 COLOR MAX
03 H. PHASE	22 COLOR CENTER
04 AFC GAIN	23 COLOR MIN
05 V. SHIFT	24 TINT
06 H. SIZE	25 SHARPNESS
07 V. SIZE	26 Cb DELAY FINE
08 V. LINEARITY	27 Cr DELAY FINE
09 VS CORRECTION	28 Cb PEDESTAL ADJ
10 DRIVE R	29 Cr PEDESTAL ADJ
11 DRIVE B	30 E/W PARABOLA
12 R CUT OFF	31 E/W CORNER
13 G CUT OFF	32 E/W TRAPEZIUM
14 B CUT OFF	33 LEVEL
15 BRIGHT MAX	34 SEPARATION1
16 BRIGHT CENT	35 SEPARATION2
17 BRIGHT MIN	88 READ DATA
18 CONTRAST MAX	

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: CONSTANT VOLTAGE

1. Place the set with Aging Test for more than 5 minutes.
2. Using the remote control, set the brightness and contrast to normal position.
3. Set condition is AV MODE without signal.
4. Connect the digital voltmeter to the **TP003**.
5. Adjust the **VR502** until the digital voltmeter is  $123 \pm 0.5V$ .

### 2-2: CUT OFF

1. Place the set with Aging Test for more than 15 minutes.
2. Set condition is AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
5. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-3: WHITE BALANCE

**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(12)** on the remote control to select "R CUT OFF".
5. Press the CH. UP/DOWN button on the remote control to select the "R CUT OFF", "G CUT OFF", "B CUT OFF", "B. DRIVE" or "R. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R CUT OFF, G CUT OFF, B CUT OFF, B. DRIVE, and R. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

### 2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

### 2-5: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "H. PHAS".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

# ELECTRICAL ADJUSTMENTS

## 2-6: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "H. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 11%.

## 2-7: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

## 2-8: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes  $9 \pm 2\%$ .

## 2-9: VERTICAL LINEARITY

**NOTE:** Adjust after performing adjustments in section 2-8.  
After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V. LIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

## 2-10: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select "TRAPEZIUM".
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

## 2-11: PARABOLA


1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select "PARABOLA".
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

## 2-12: LEVEL

1. Receive the VHF HIGH (70dB).
2. Connect the AC voltmeter to **pin 6 of CP101**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is  $75 \pm 2\text{mV}$ .

## 2-13: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-1**)

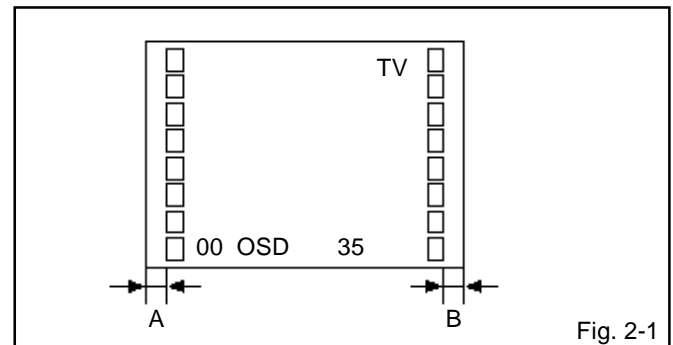

## 2-14: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the TV/VIDEO button on the remote control to set to the CS mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "BRI CENT".
9. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

# ELECTRICAL ADJUSTMENTS

## 2-15: TINT/COLOR CENT

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP024**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line **(Refer to Fig. 2-2)**
5. Connect the oscilloscope to **TP022**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $120 \pm 10\%$  of the white level. **(Refer to Fig. 2-3)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7.
10. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~7.

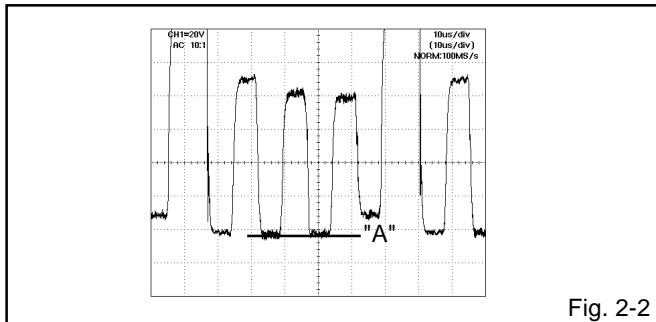


Fig. 2-2

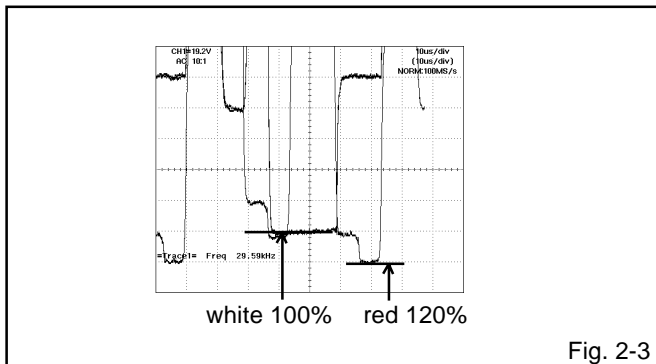


Fig. 2-3

## 2-16: CONTRAST MAX MANUAL

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "110".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.
5. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 1~3.

## 2-17: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

### Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

### Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch=Non input and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(34)** on the remote control to select "SEP 1".
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **Audio Out Jack (L-ch)**.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(35)** on the remote control to select "SEP 2".
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum.

## 2-18: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	CS
02	H.VCO	03	03	03
04	AFC GAIN	04	04	04
05	V.SHIFT	02	02	02
09	VS.CORRECTION	38	38	38
15	BRI.MAX	140	140	140
17	BRI.MIN	50	50	50
19	CONT.CENT	64	64	64
20	CONT.MIN	20	20	20
21	COL.MAX	90	90	90
23	COL.MIN	00	00	00
25	SHARPNESS	40	40	40
26	CB DL	00	00	00
27	CR DL	00	00	00
28	CB PED	08	08	08
29	CR PED	08	08	08
31	CORNER	35	35	35



# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

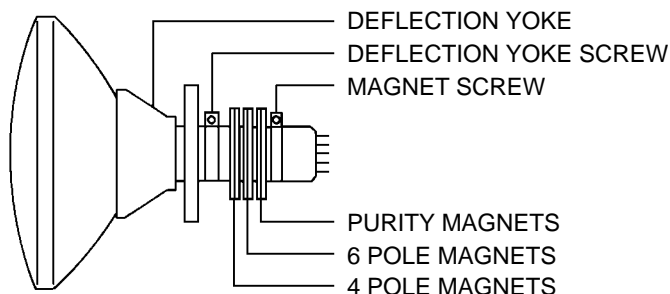


Fig. 3-1

### 3-3: STATIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


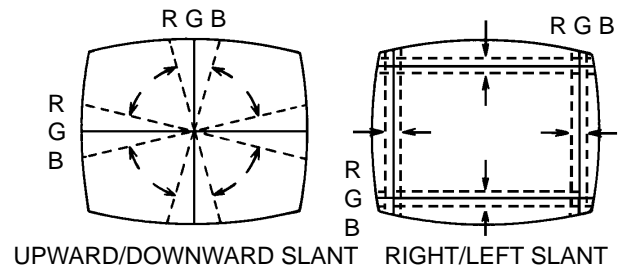


Fig. 3-2-a

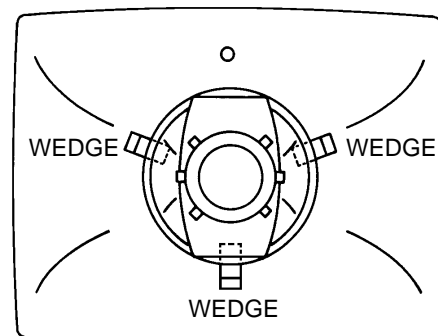


WEDGE POSITION


Fig. 3-2-b

## ELECTRICAL ADJUSTMENTS

### 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

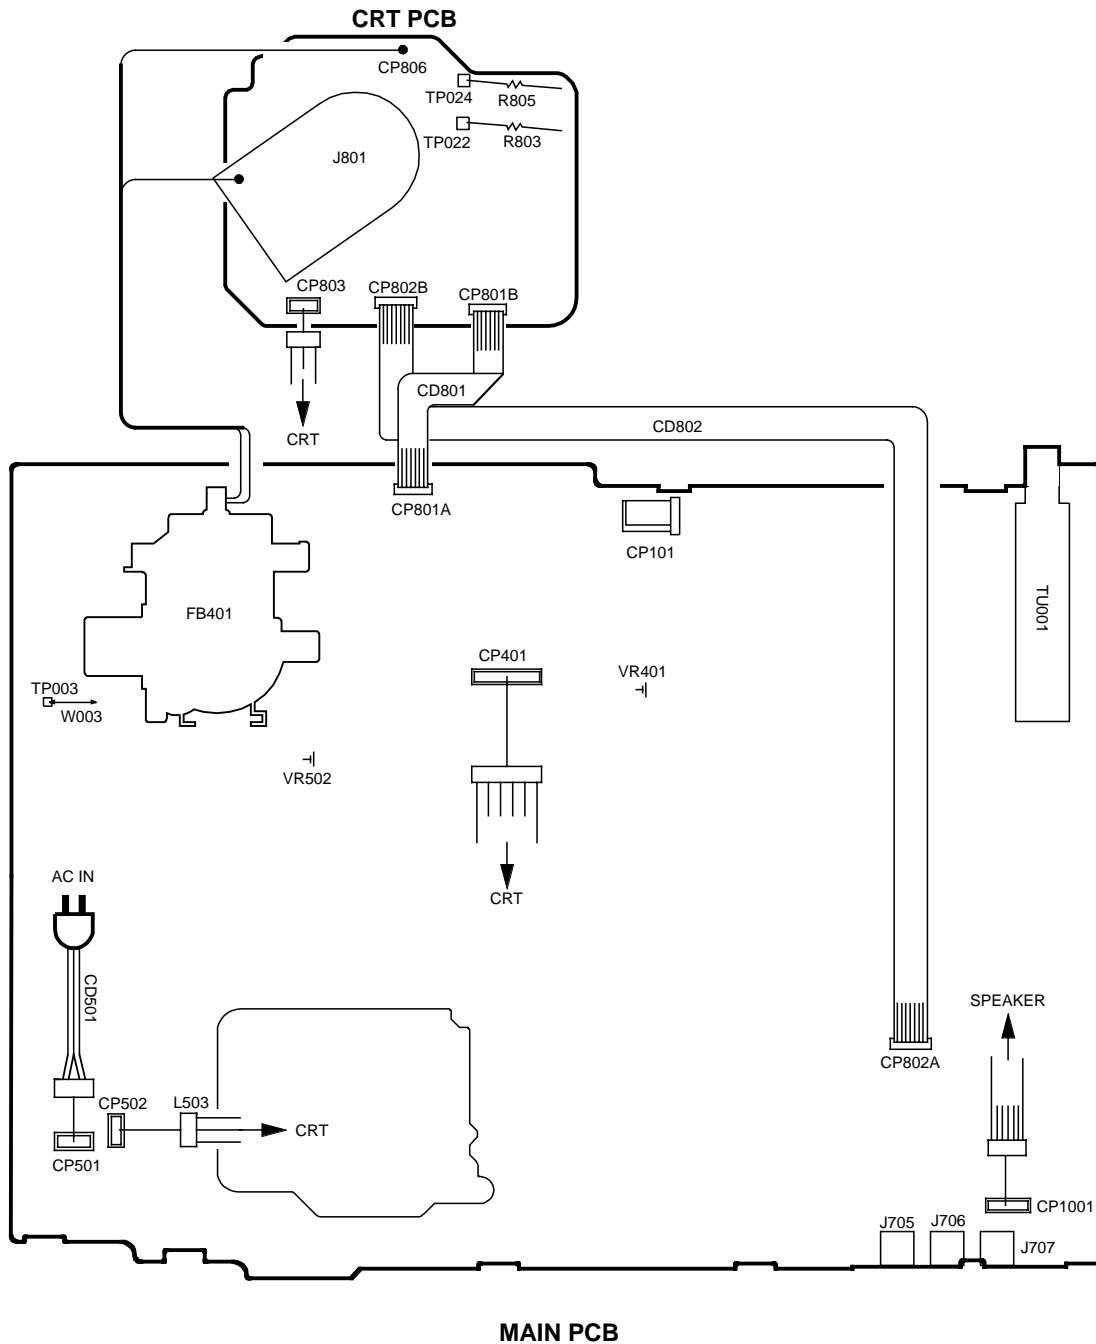


BLOCK DIAGRAM

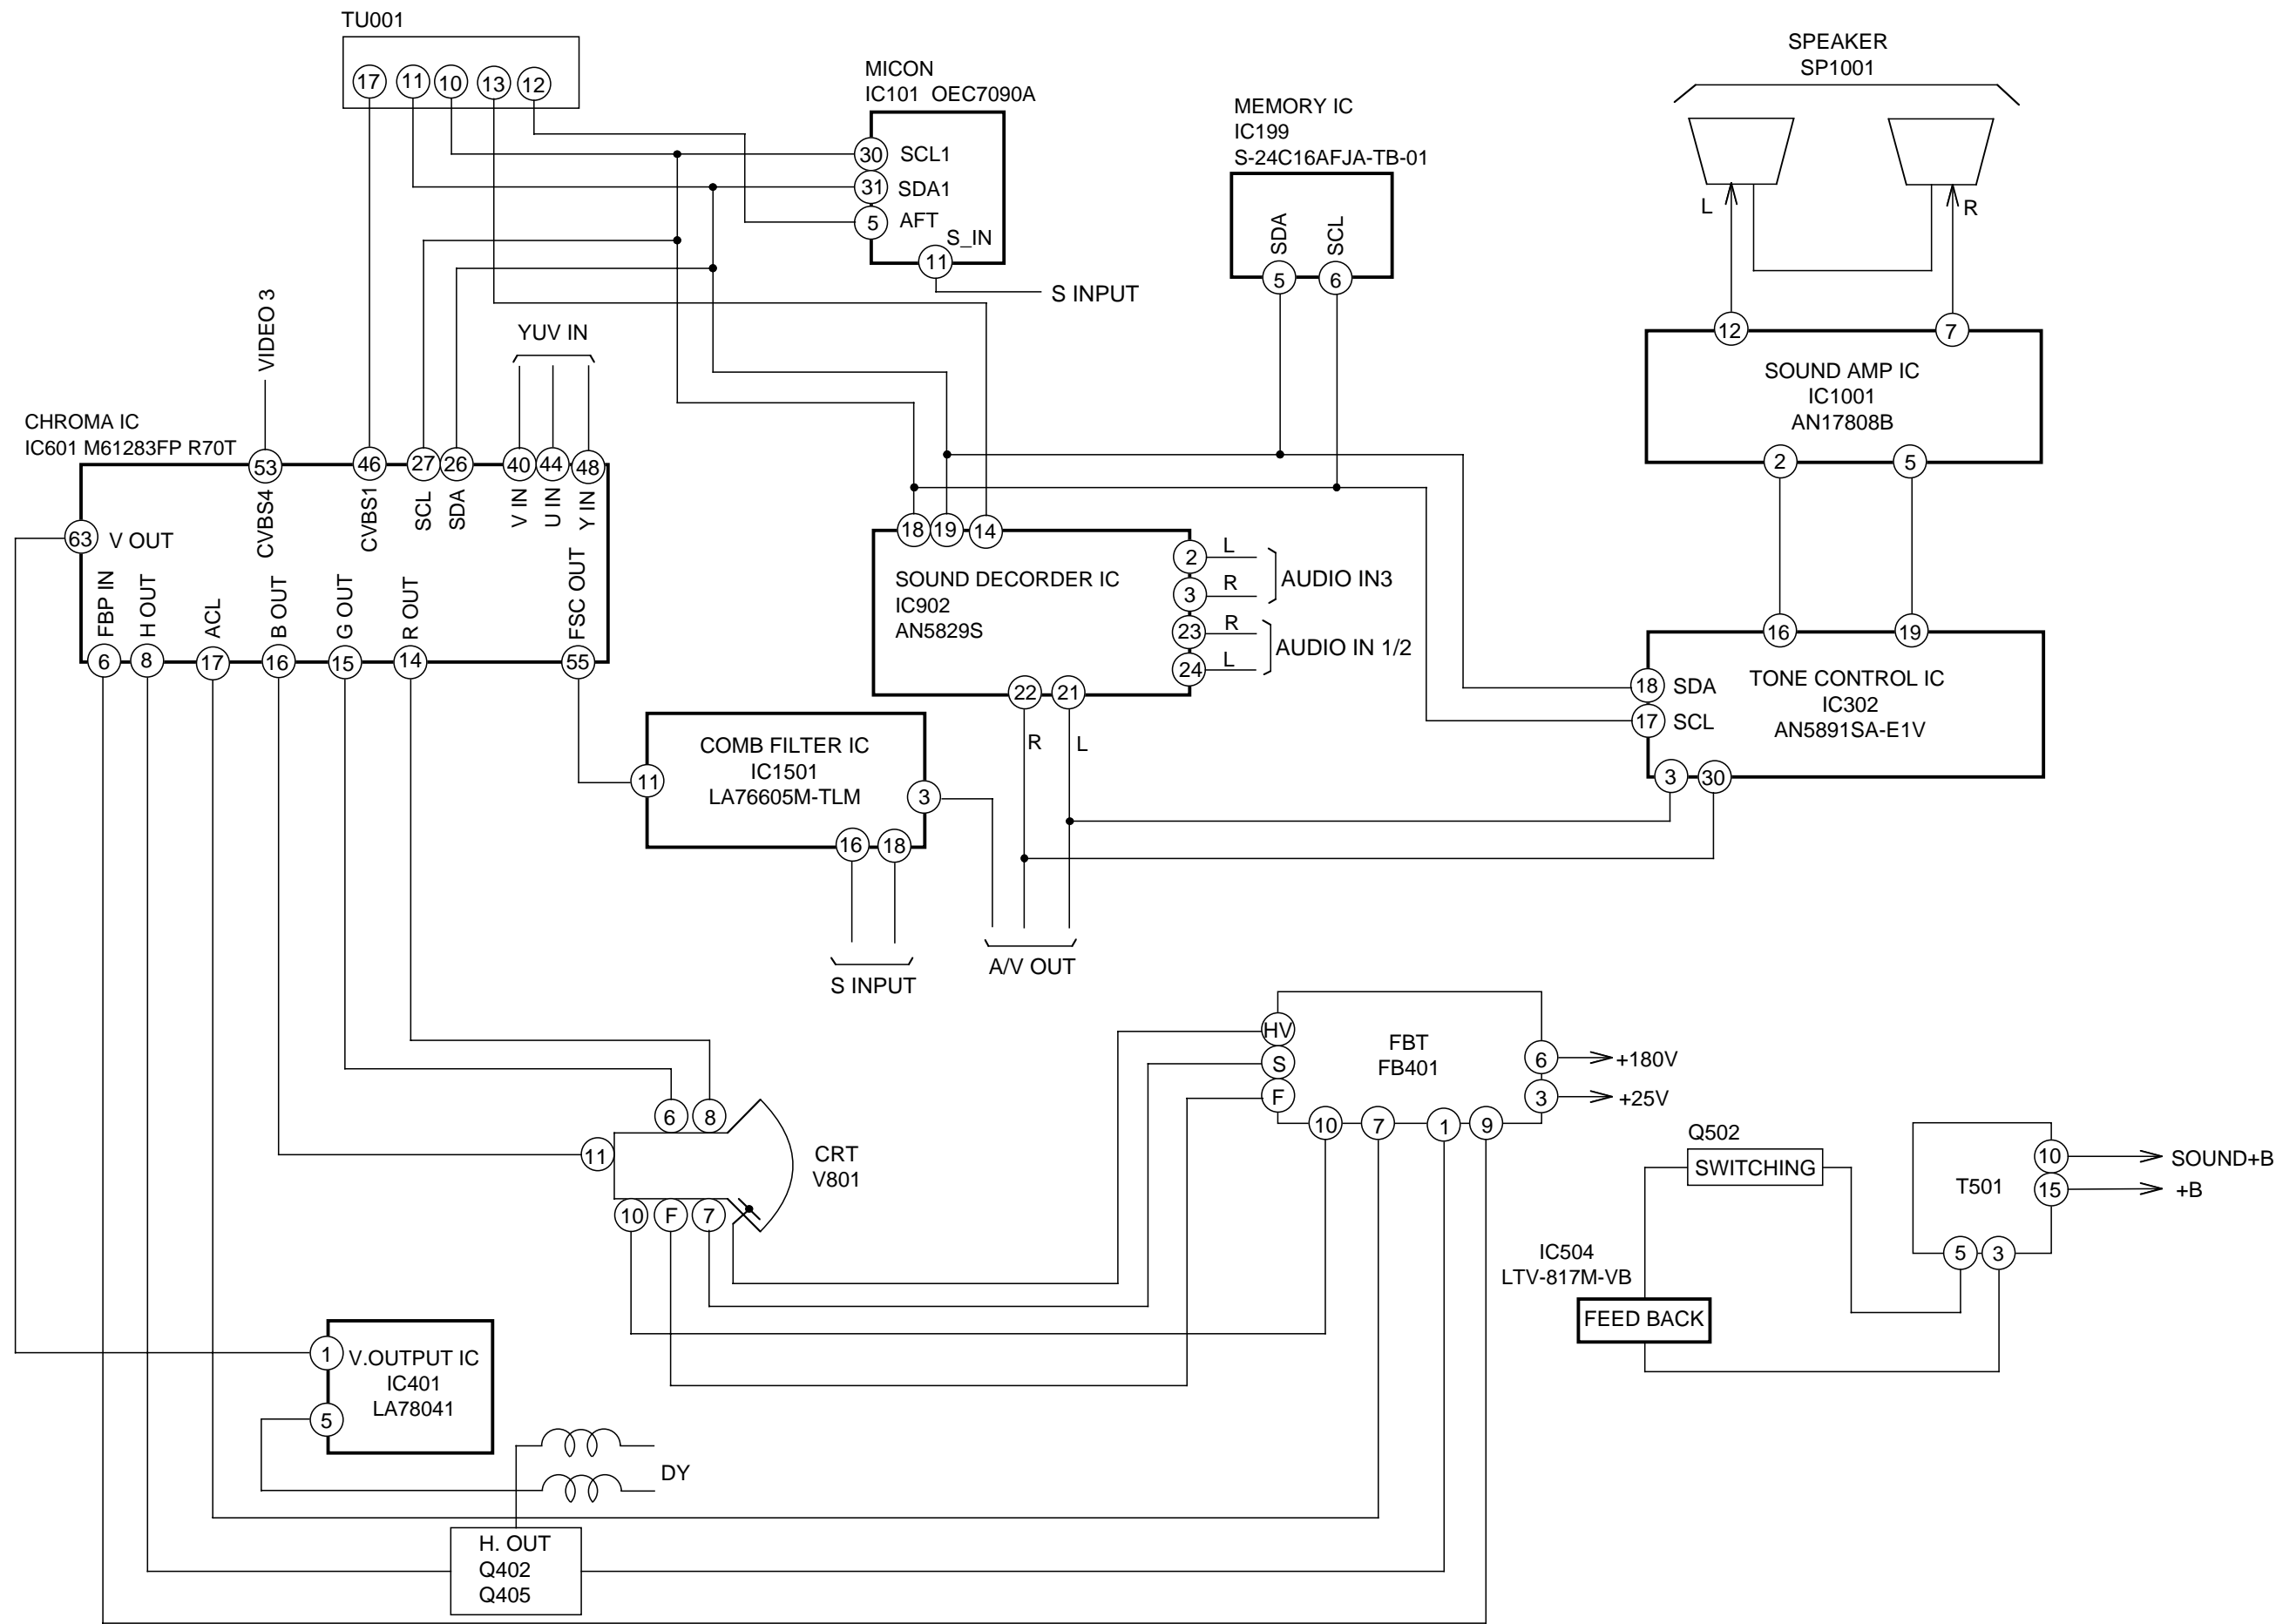





PRINTED CIRCUIT BOARDS  
MAIN/CRT (CHIP MOUNTED PARTS)  
SOLDER SIDE

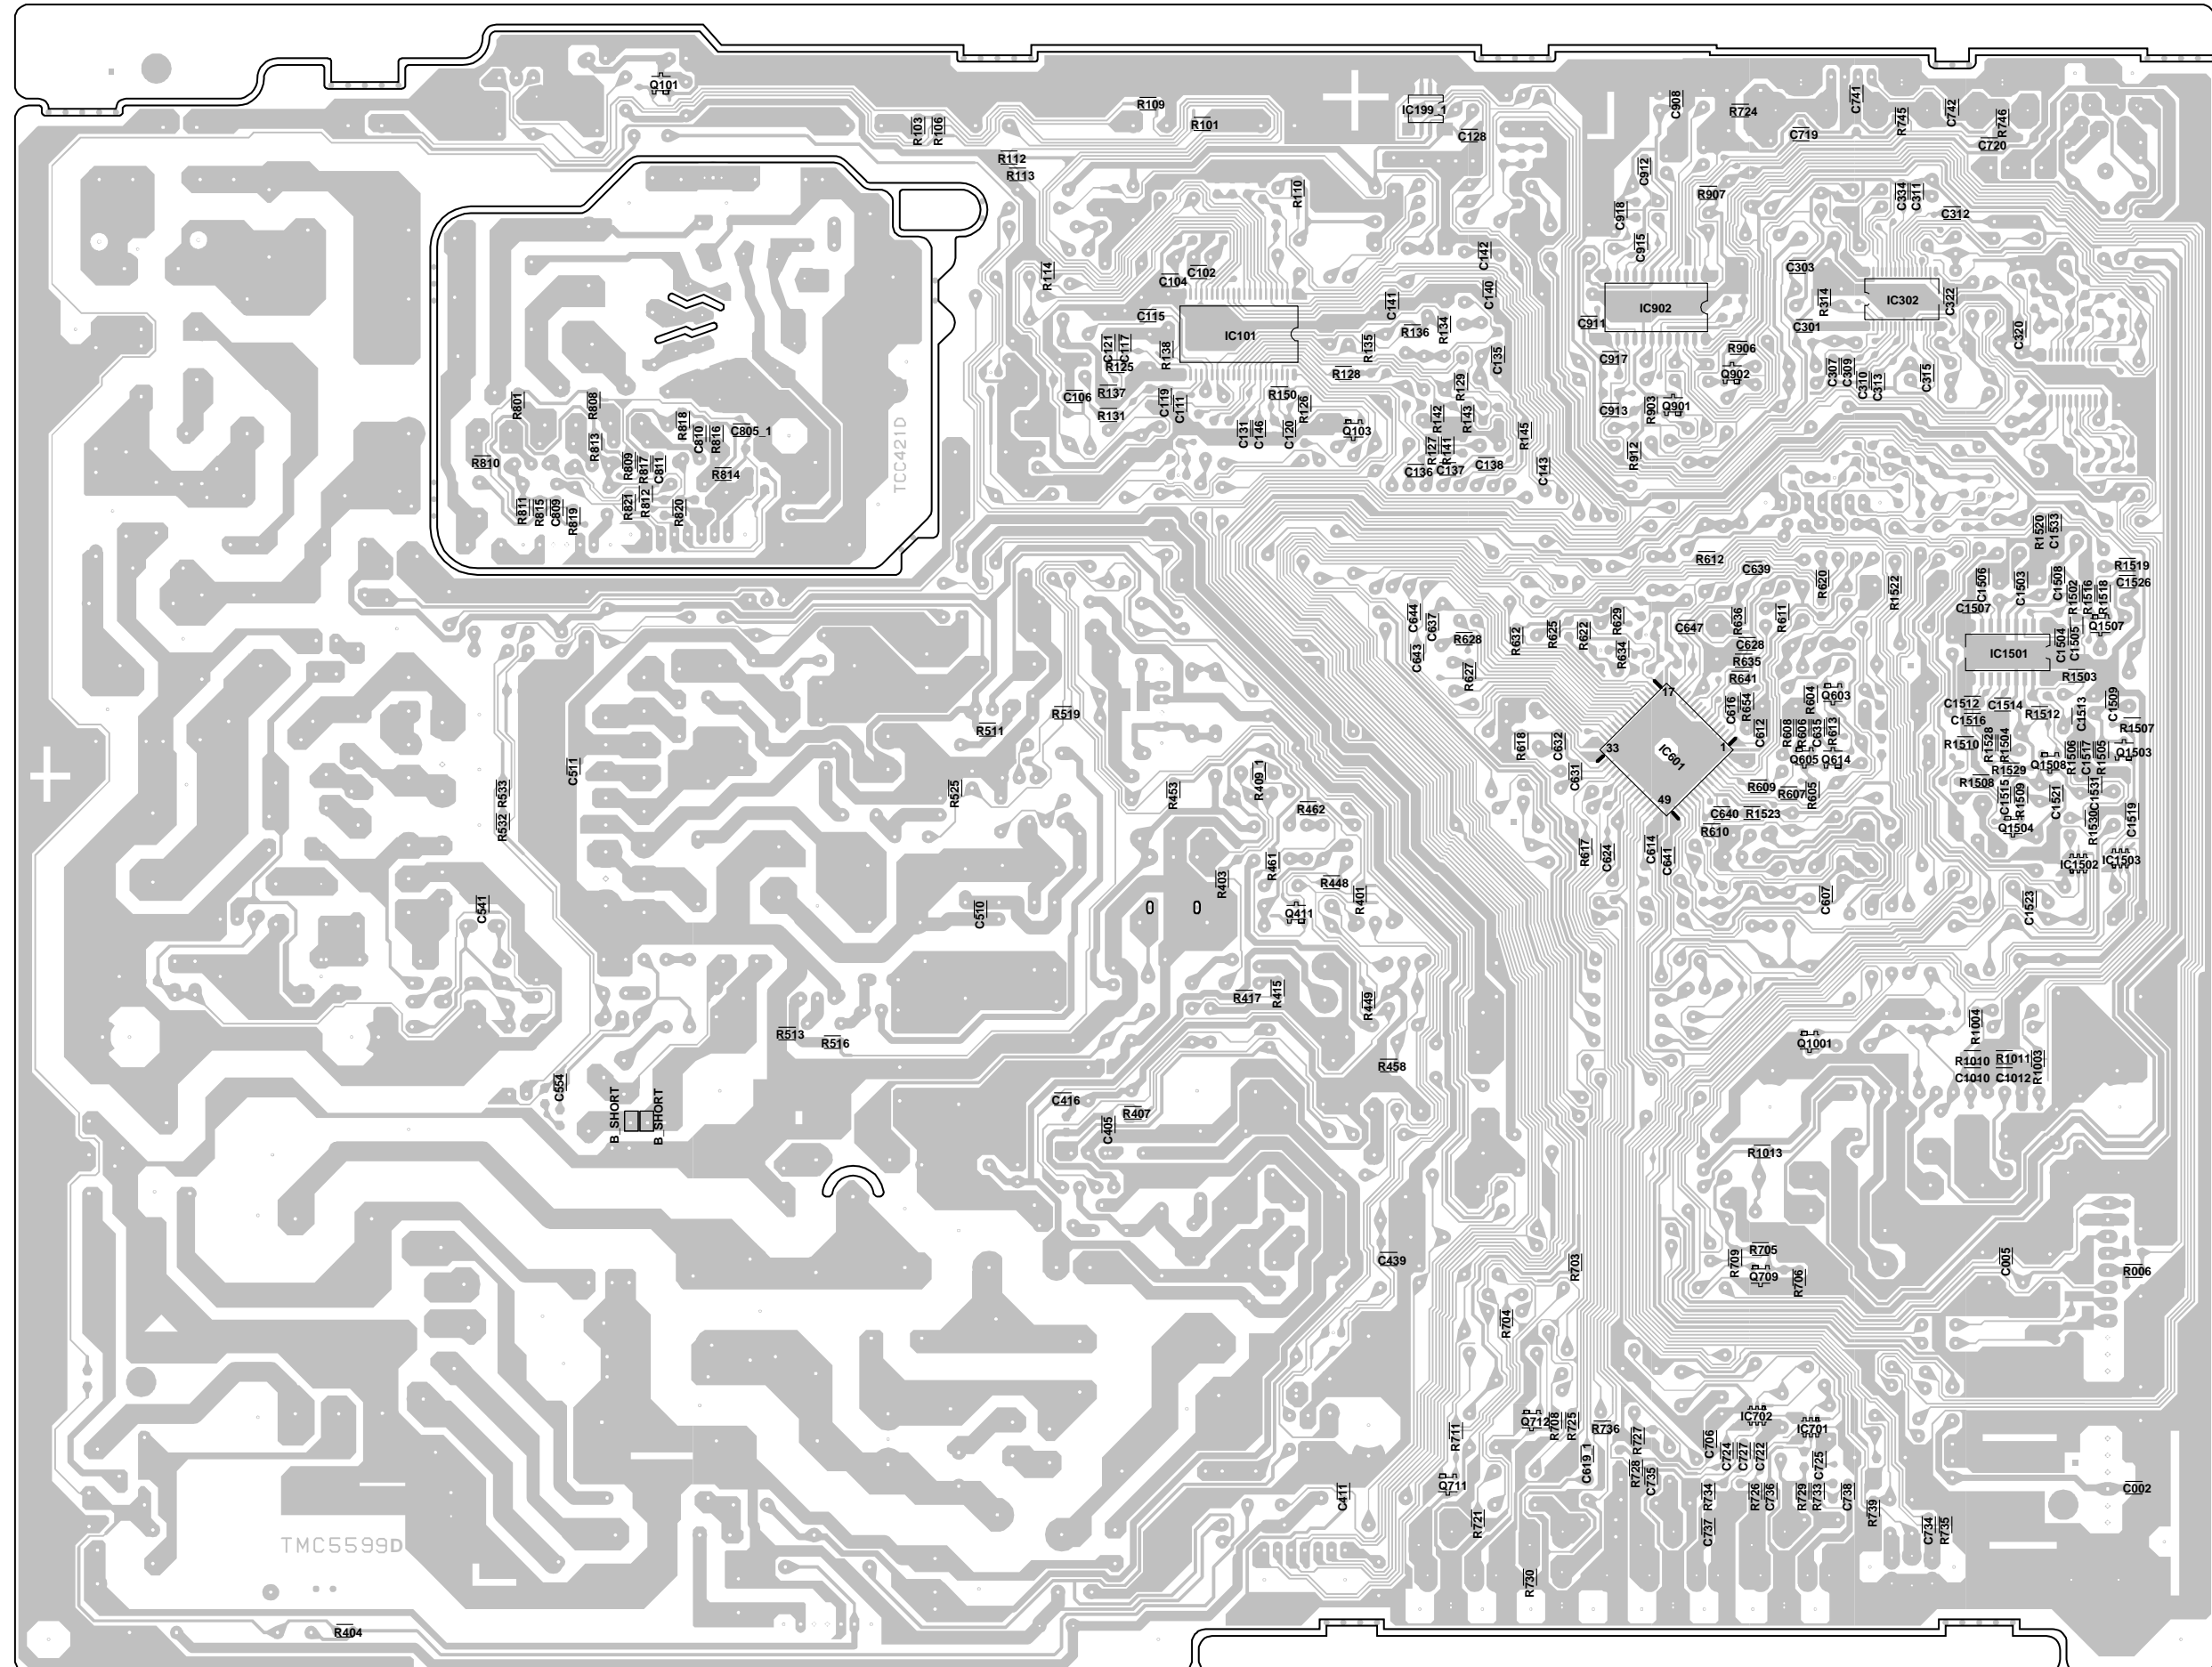

# MICON SCHEMATIC DIAGRAM (MAIN PCB)

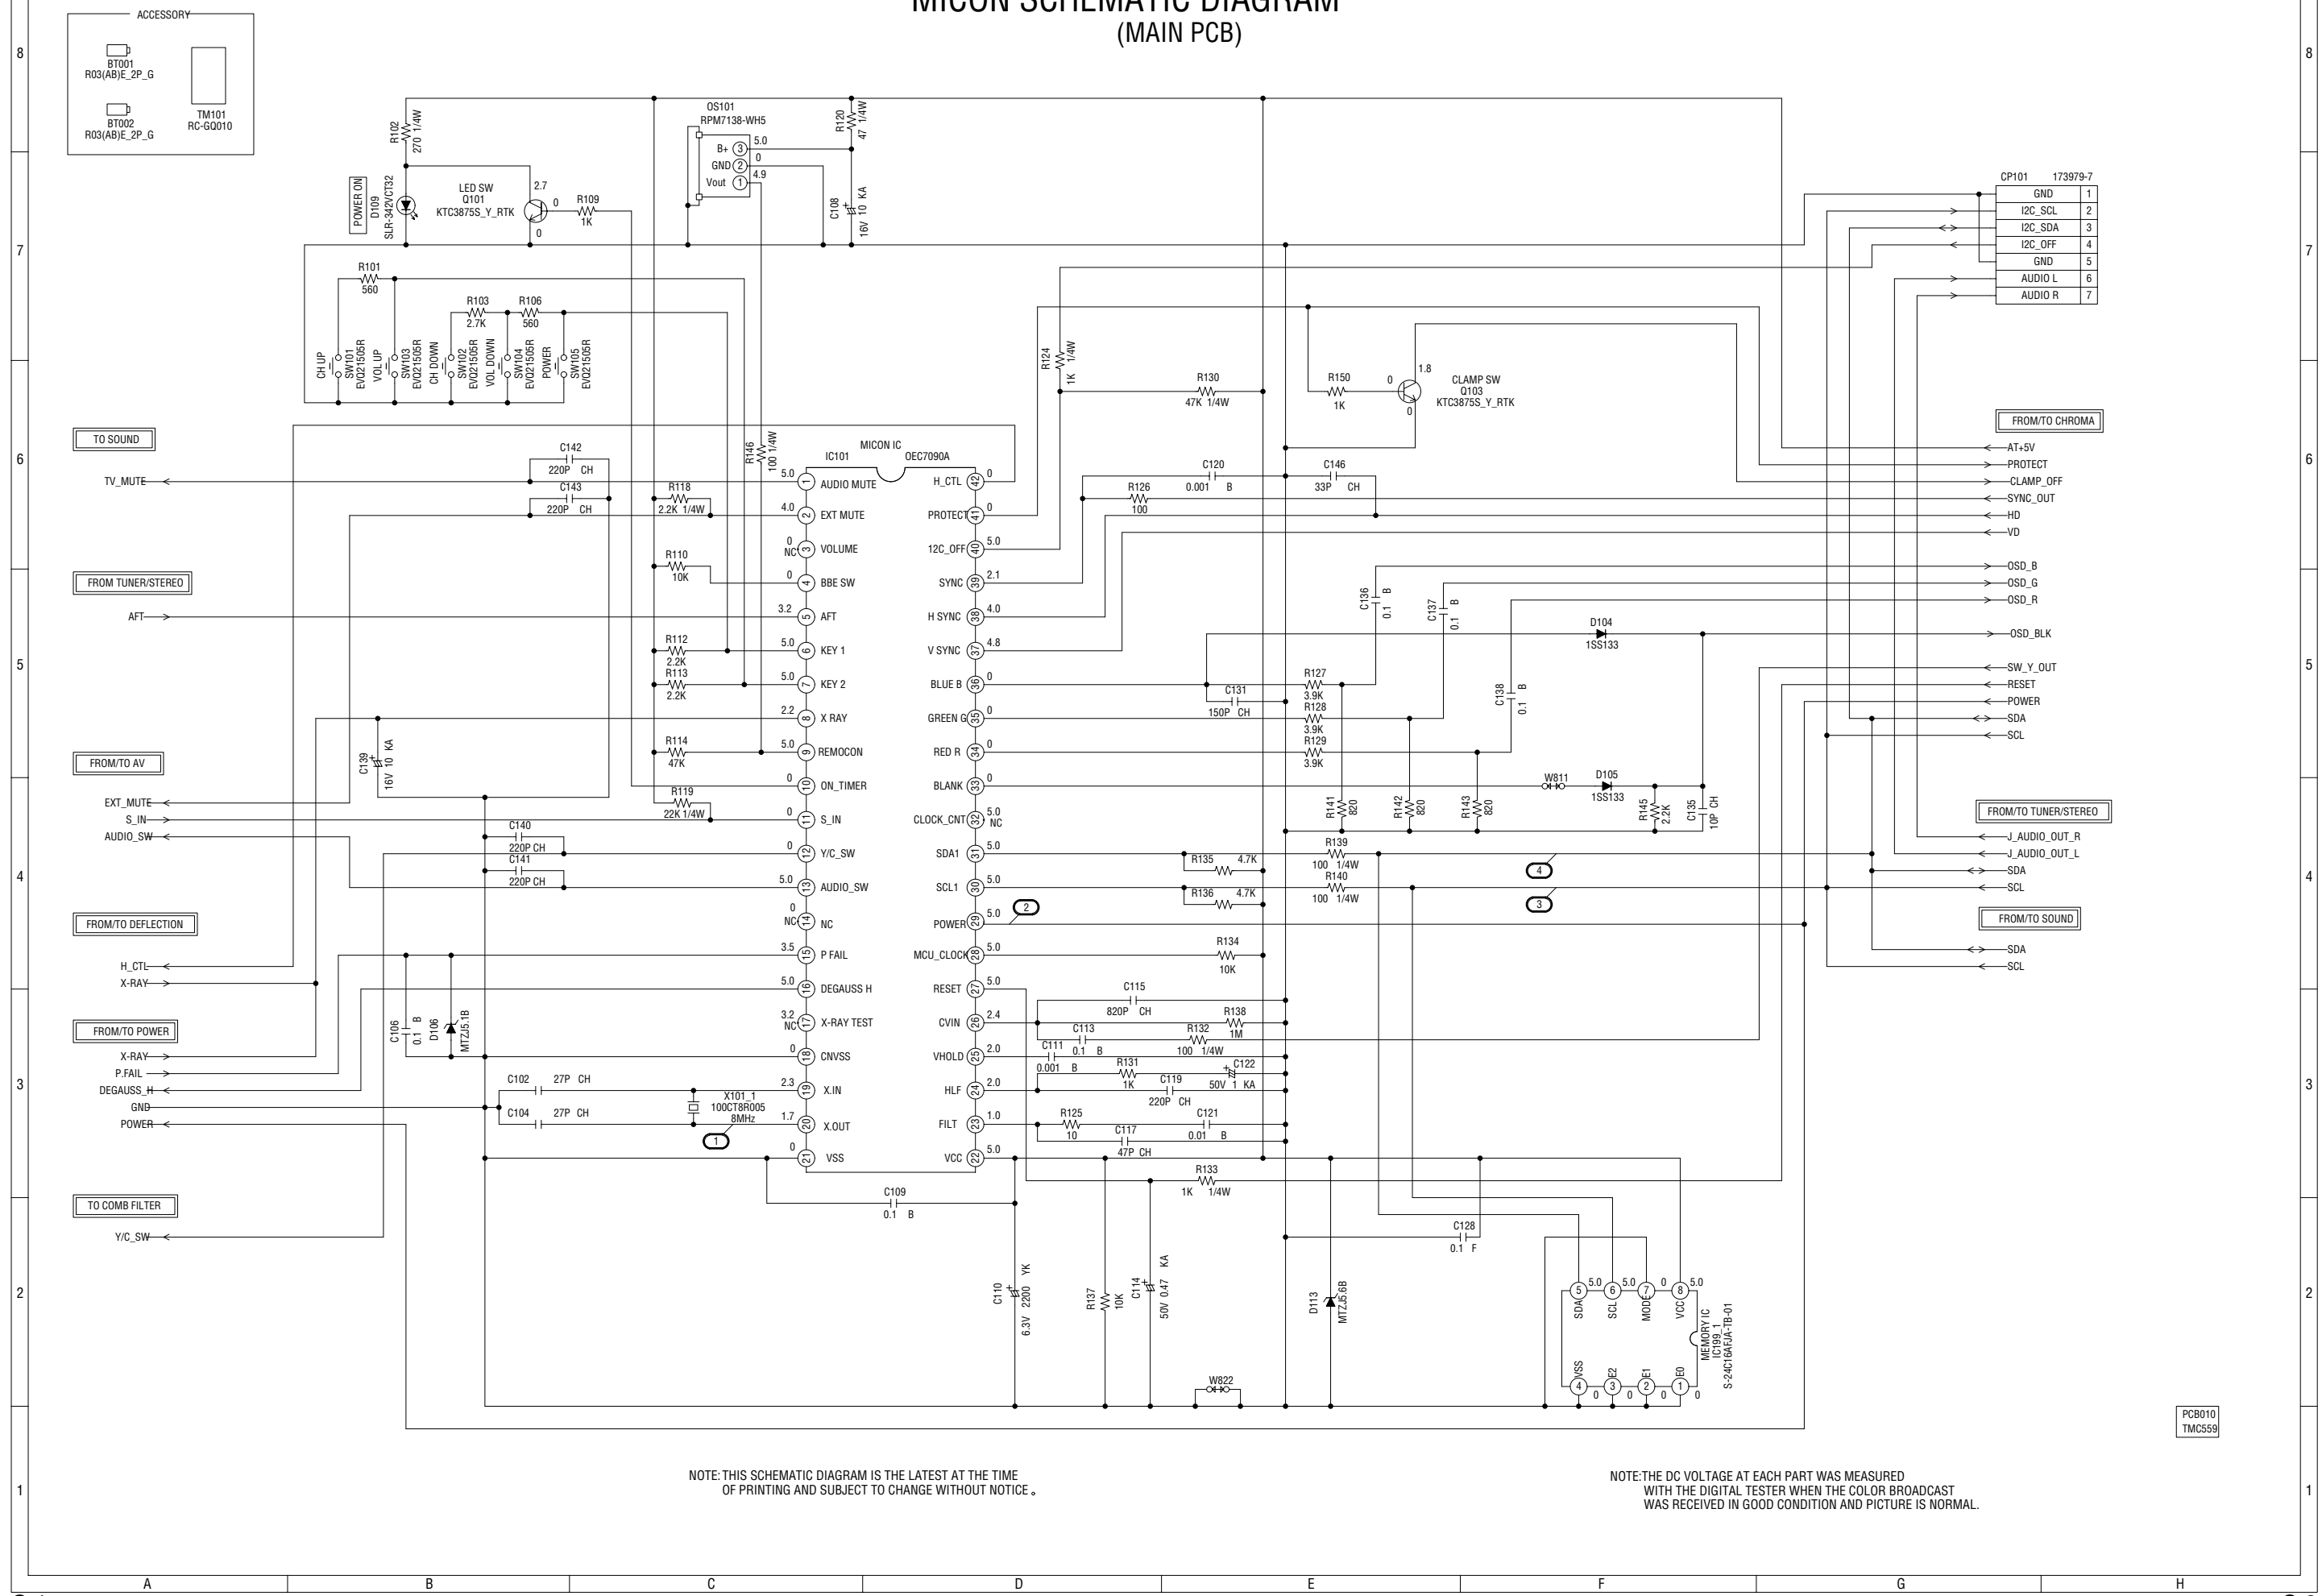


## CHROMA SCHEMATIC DIAGRAM

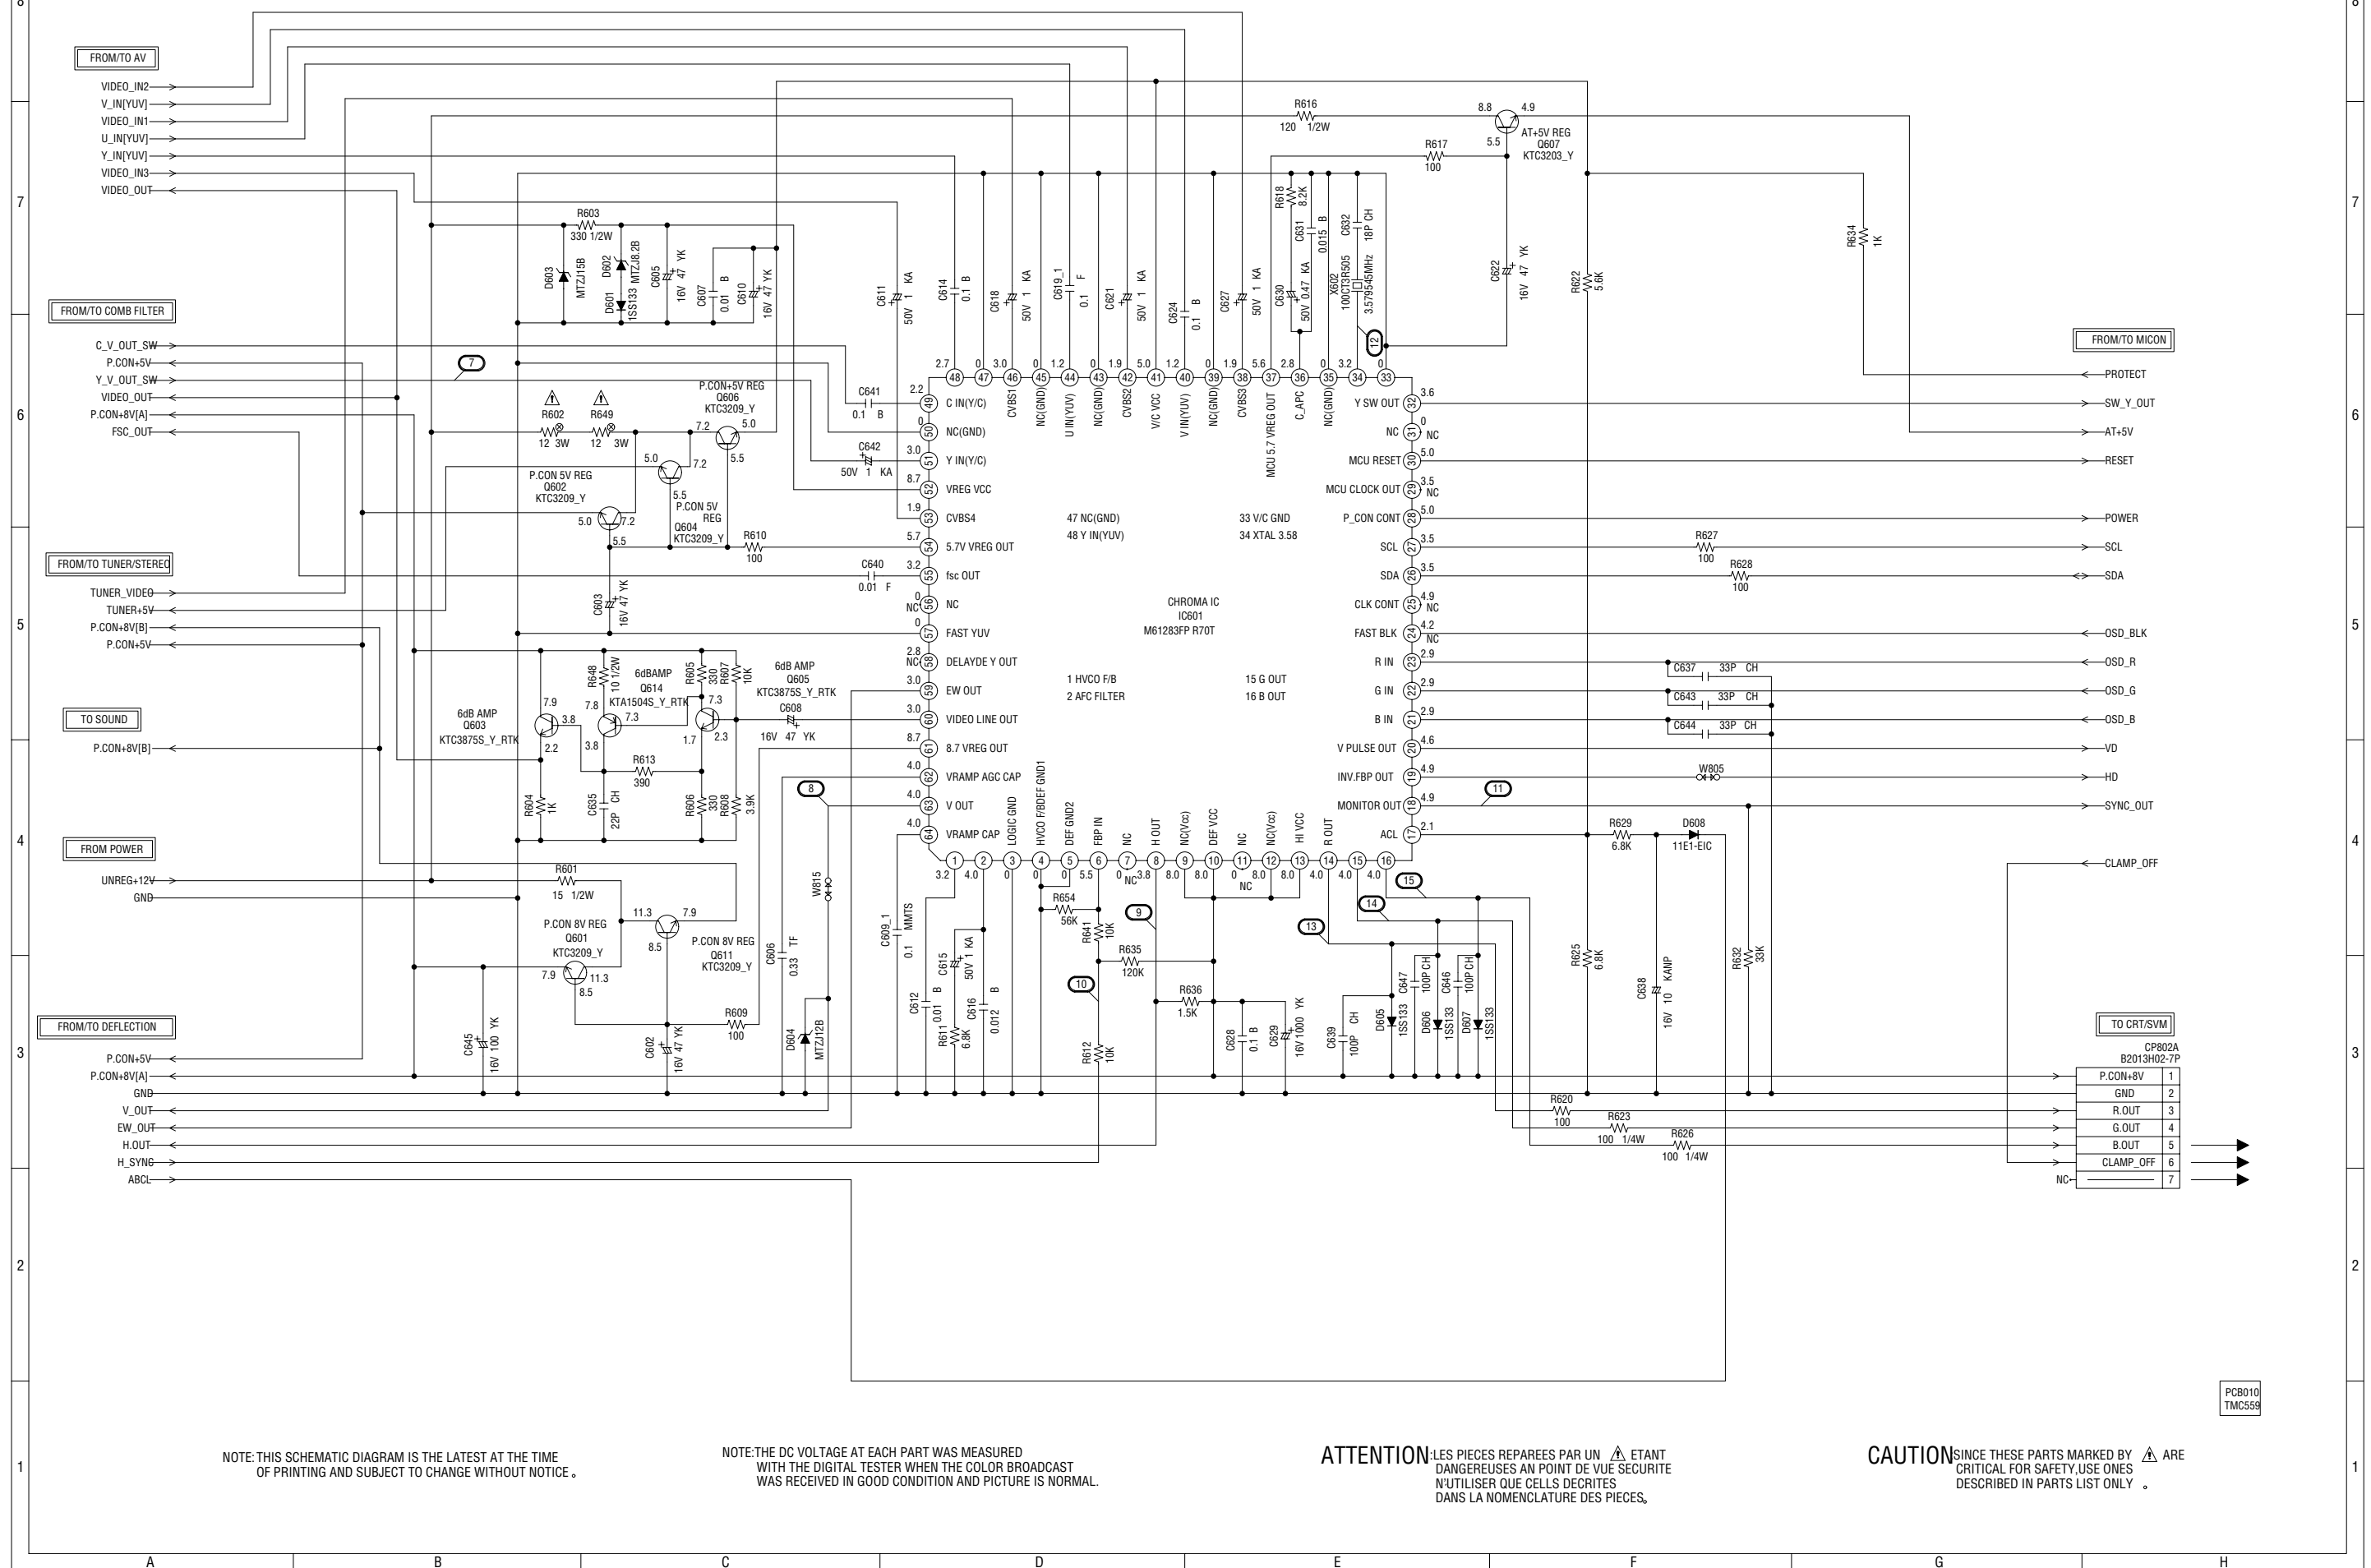


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**ATTENTION:** LES PIECES REPARÉES PAR UN  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .

### DEFLECTION SCHEMATIC DIAGRAM (MAIN PCB)

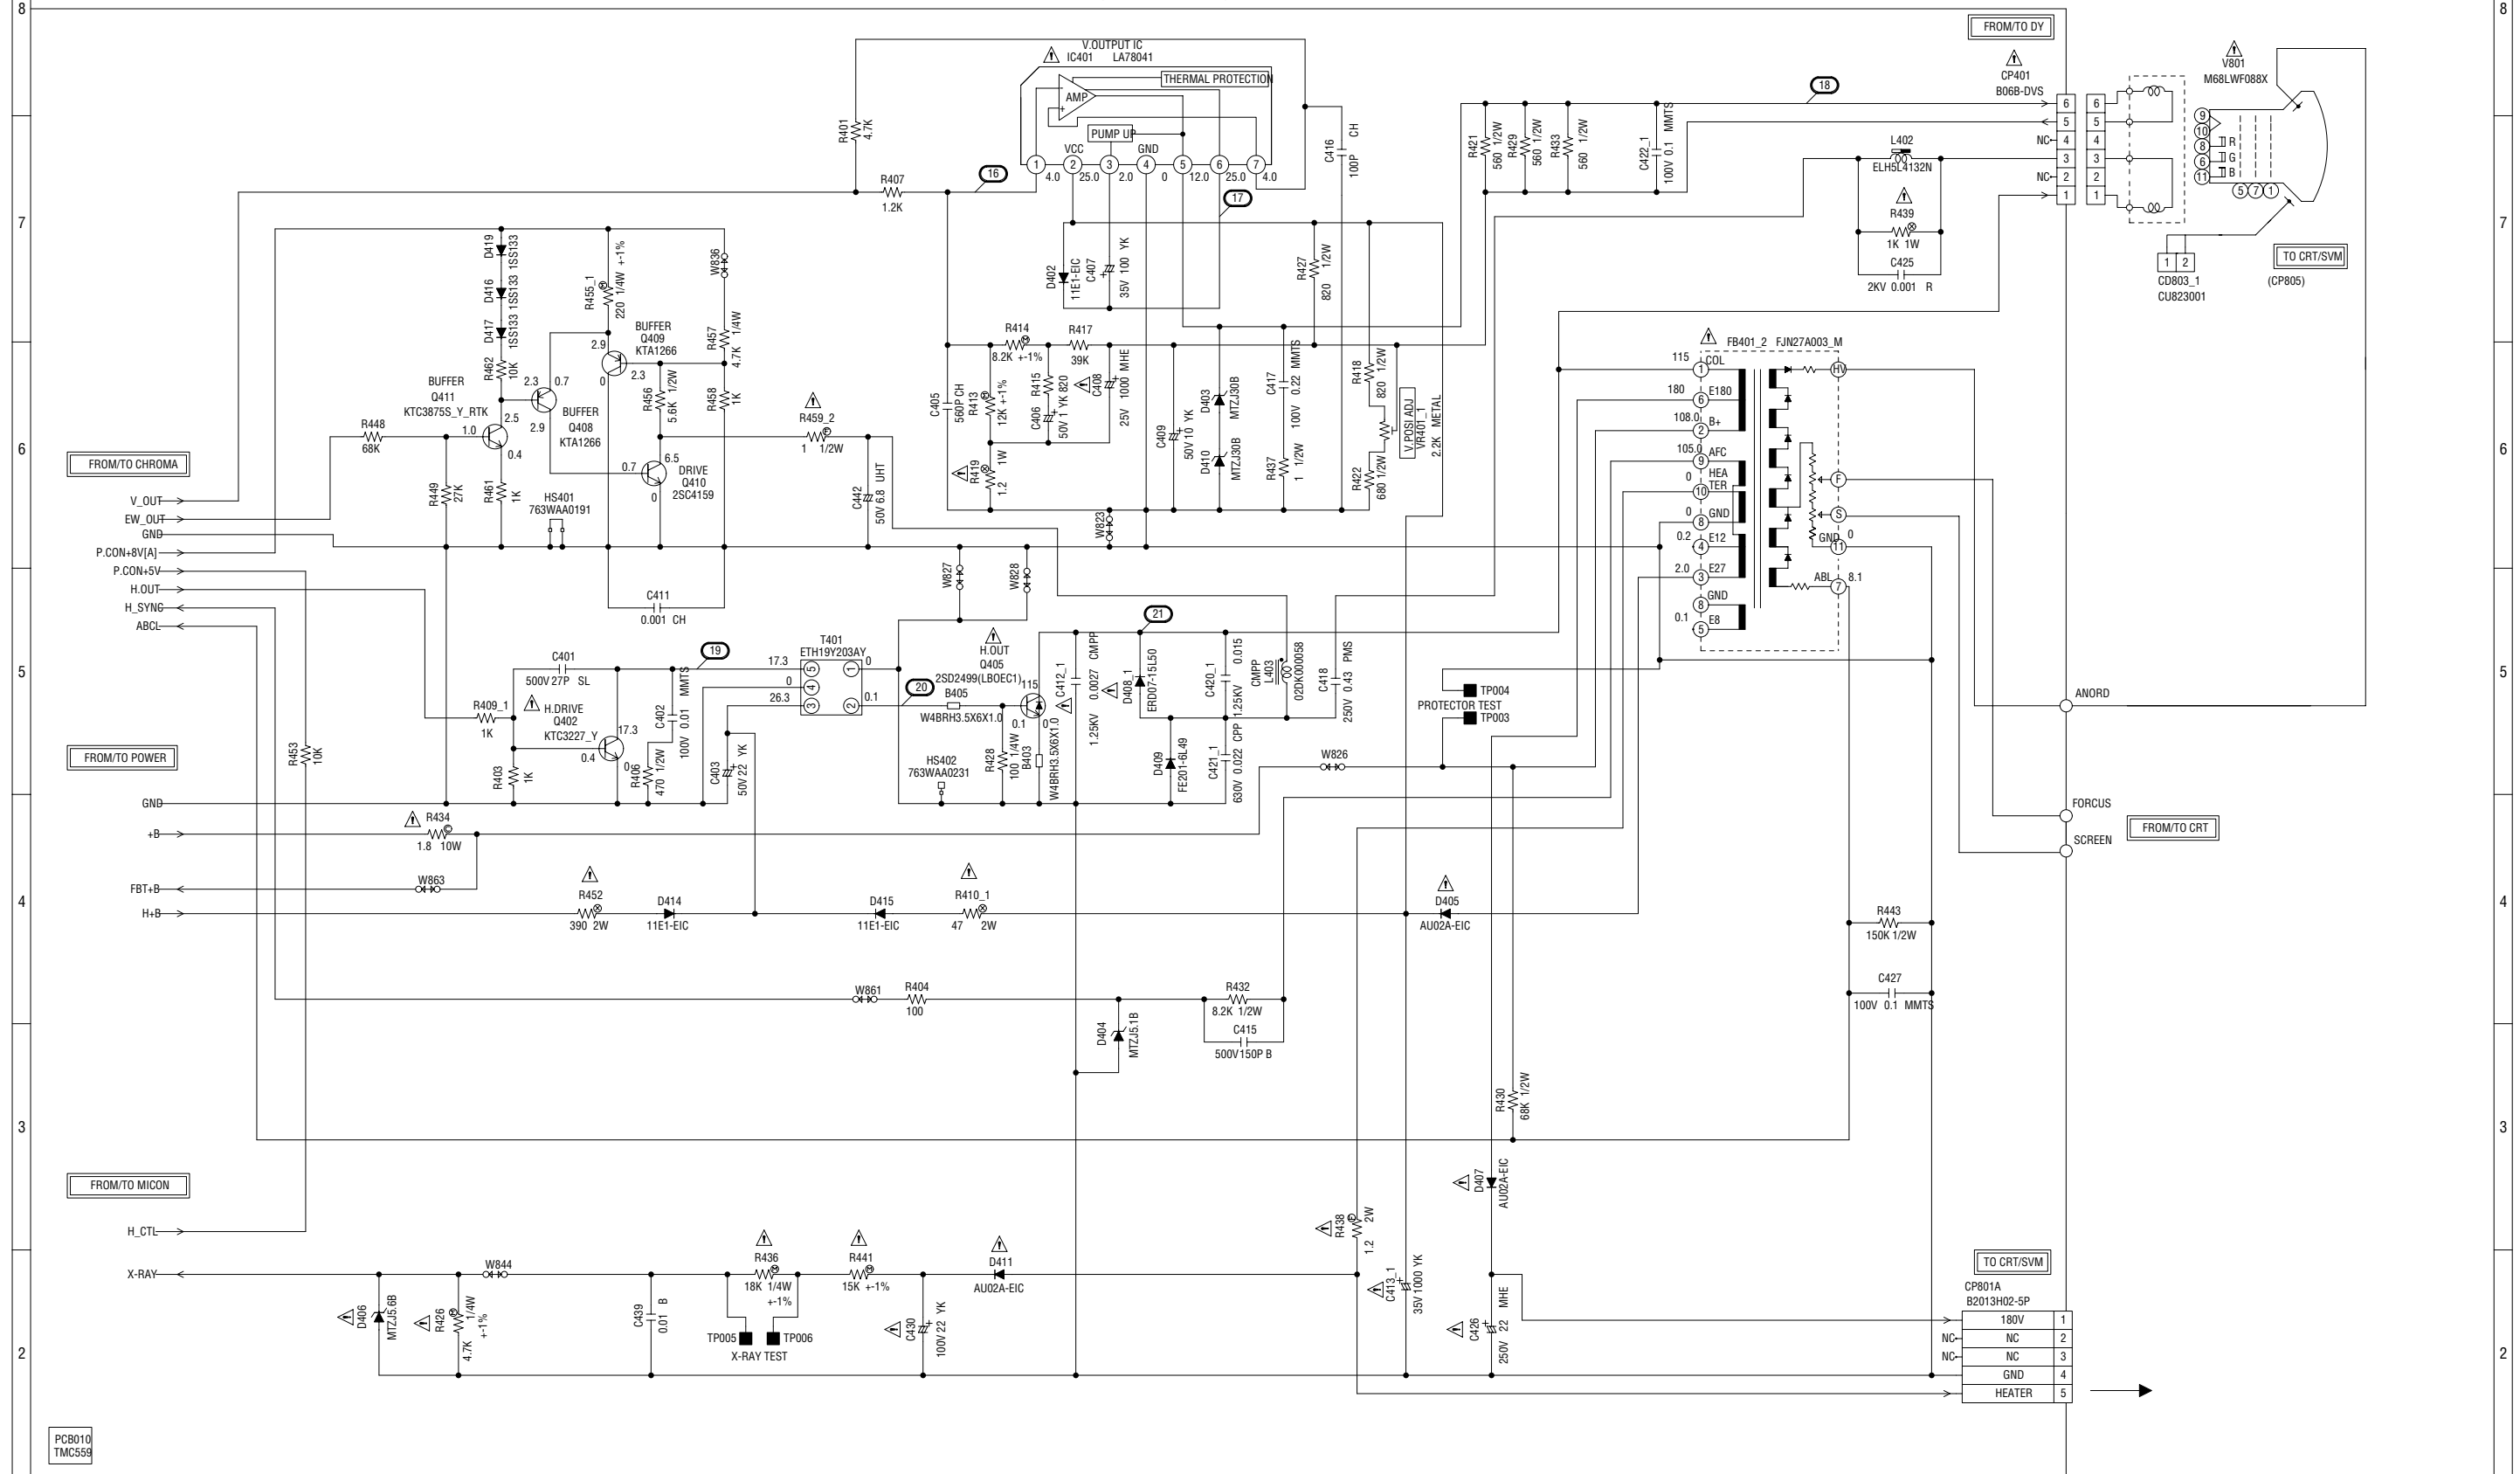


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

**ATTENTION:** LES PIÈCES RÉPARÉES PAR UN  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.



POWER SCHEMATIC DIAGRAM  
(MAIN PCB)

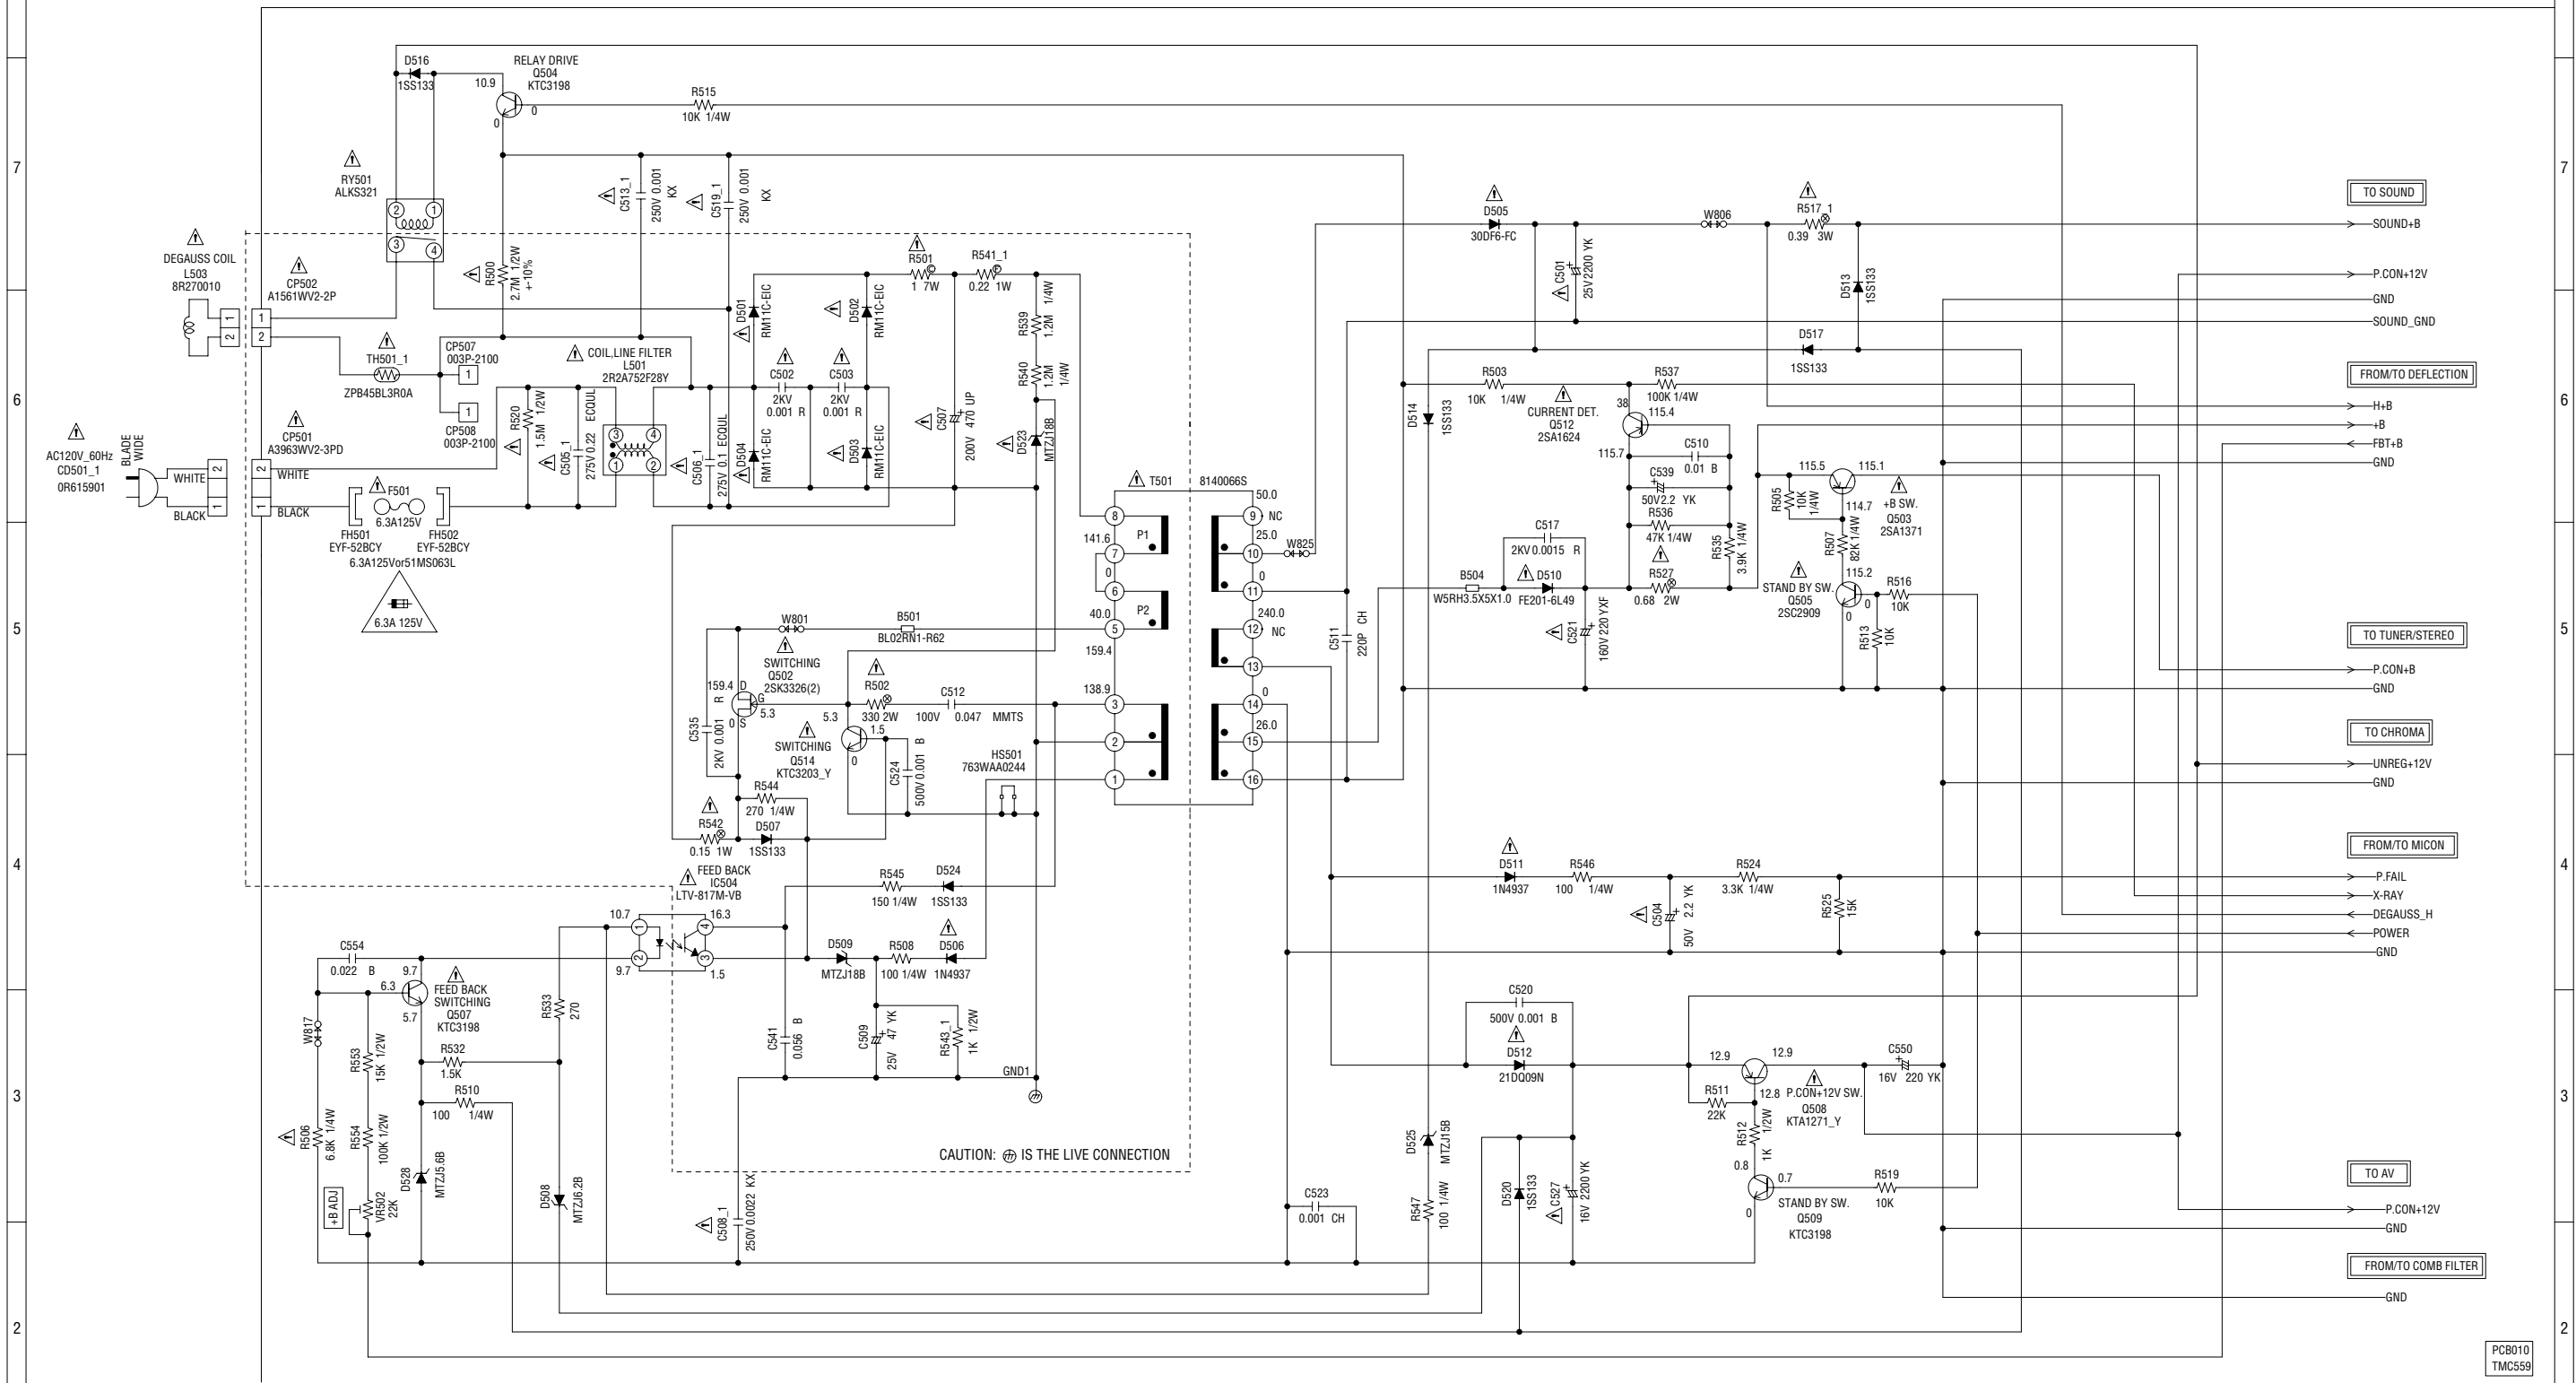

**CAUTION:** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501)

**ATTENTION:** POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V(F501)

**NOTE:** THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**NOTE:** THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**NOTE:** THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

**ATTENTION:** LES PIECES REPARÉES PAR UN [triangle symbol] ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


**CAUTION:** SINCE THESE PARTS MARKED BY [triangle symbol] ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


# SOUND SCHEMATIC DIAGRAM (MAIN PCB)

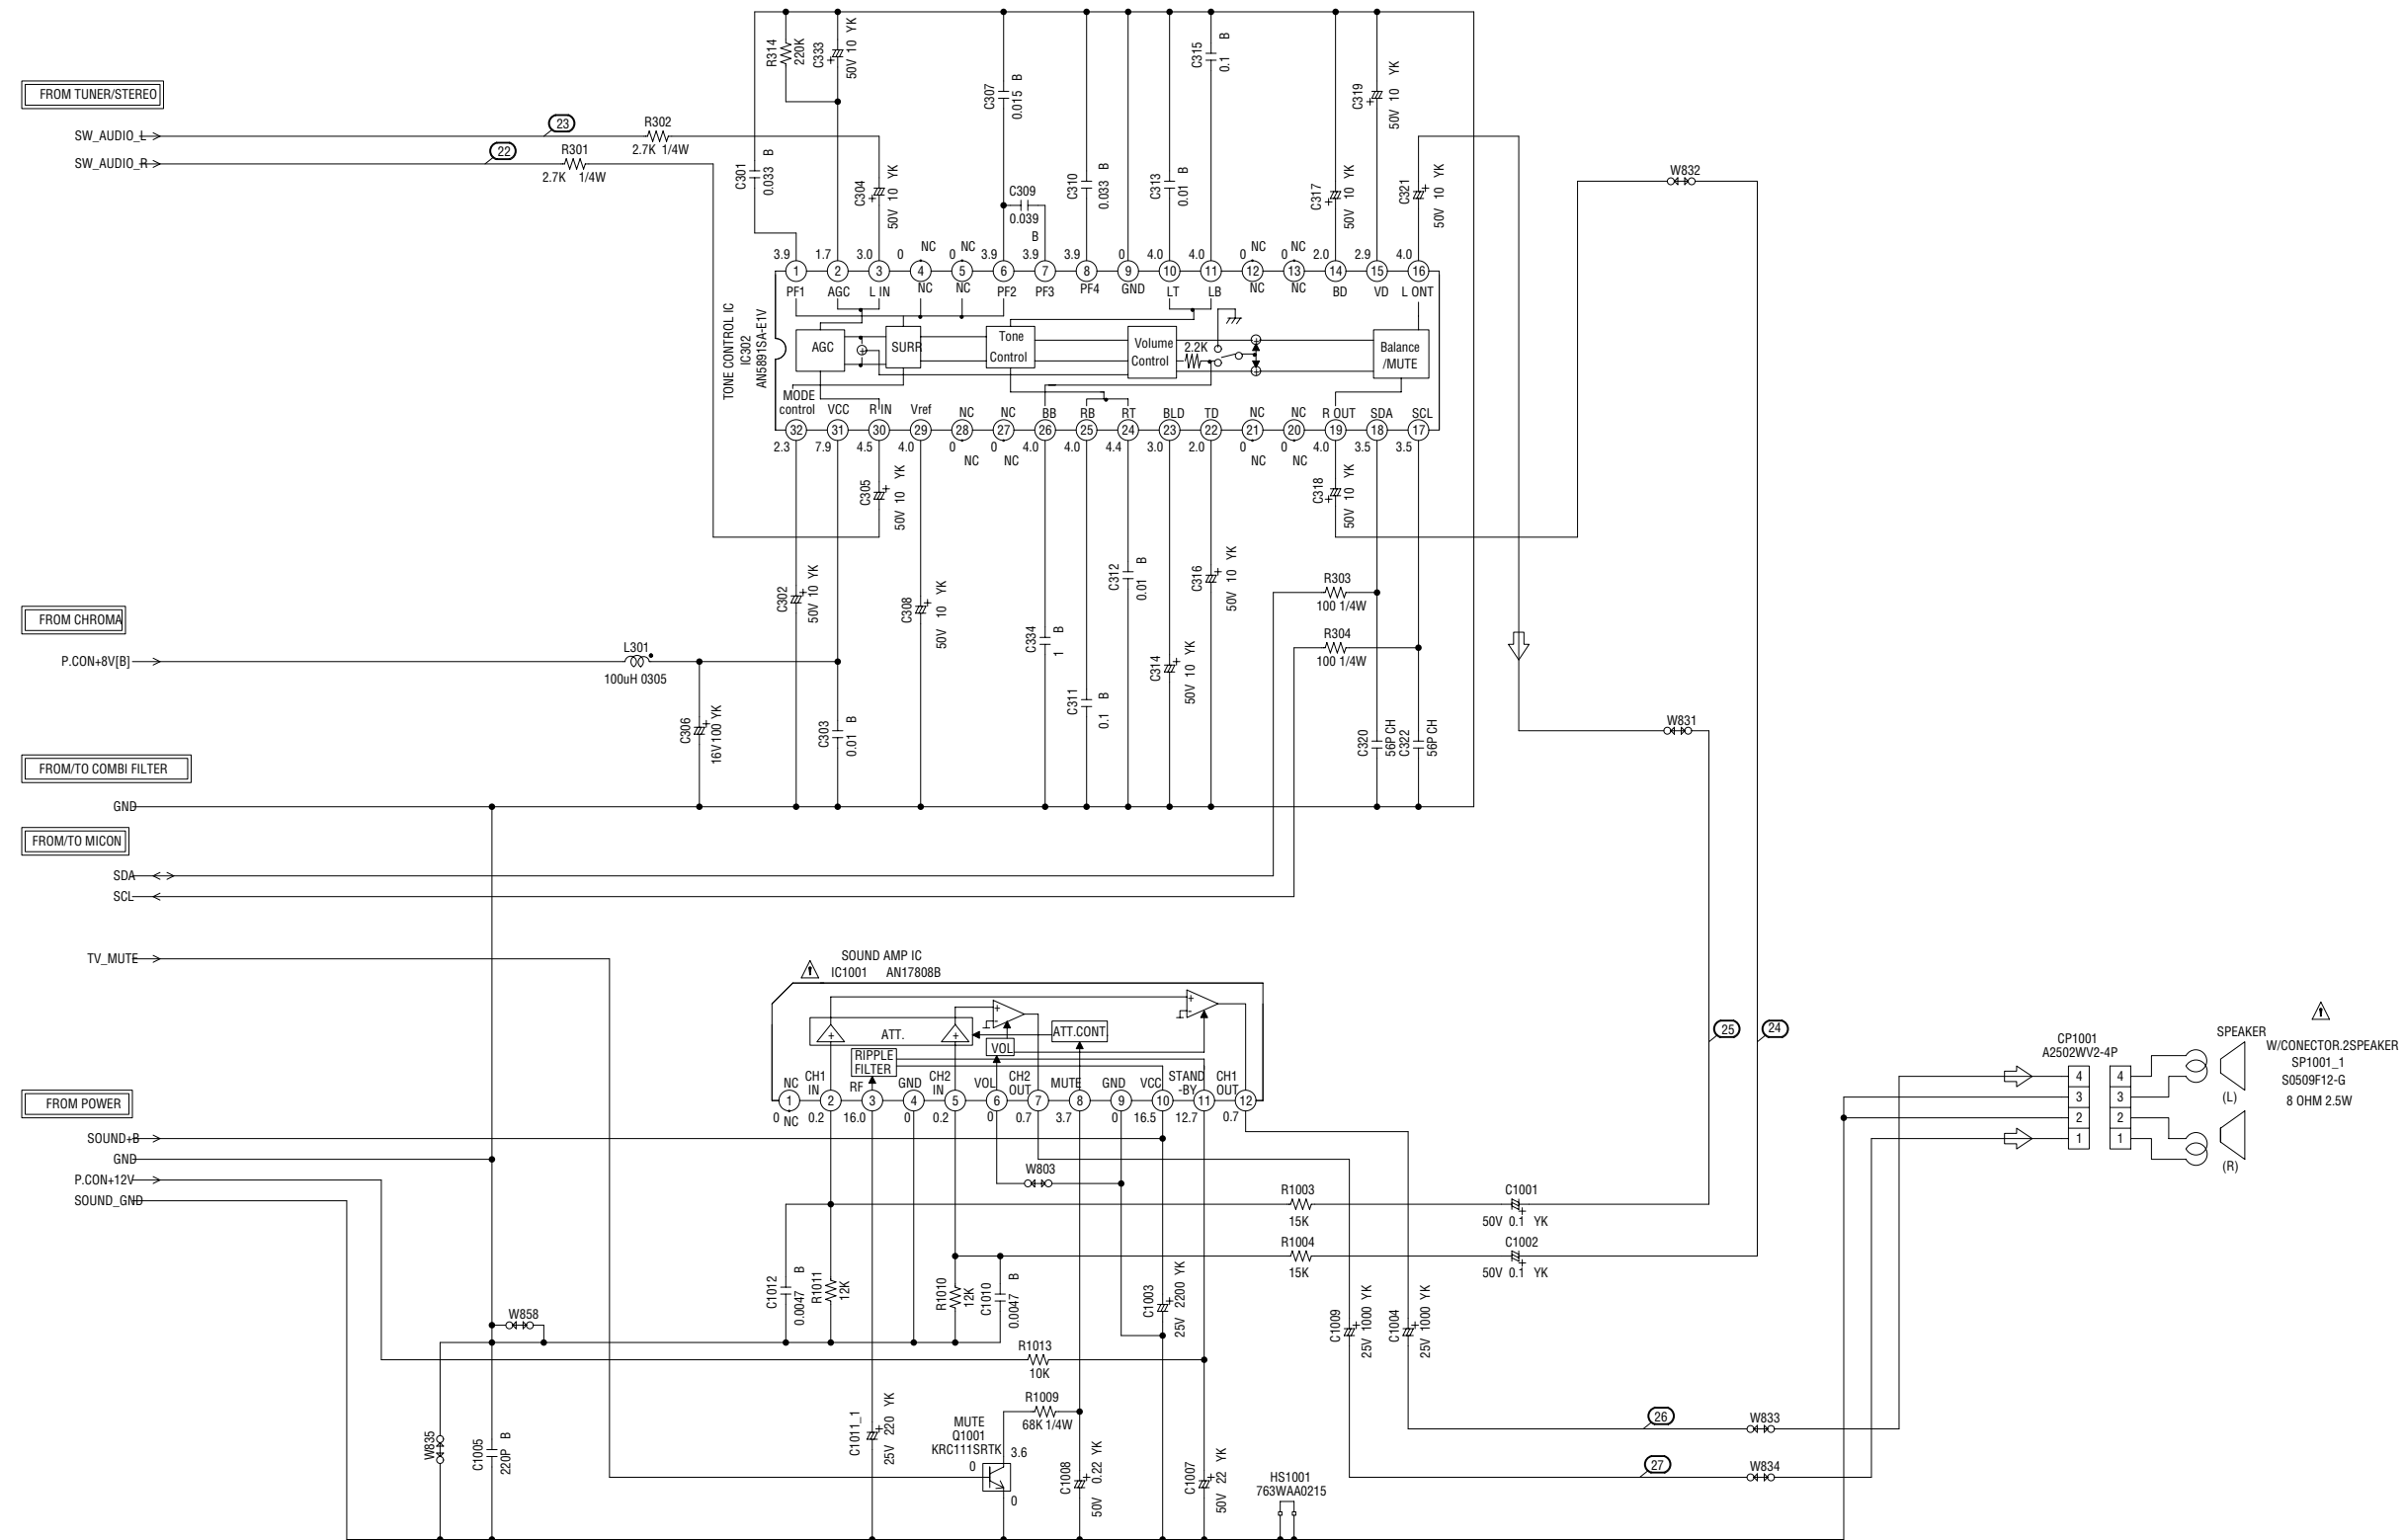


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

CAUTION: DIGITAL TRANSISTOR



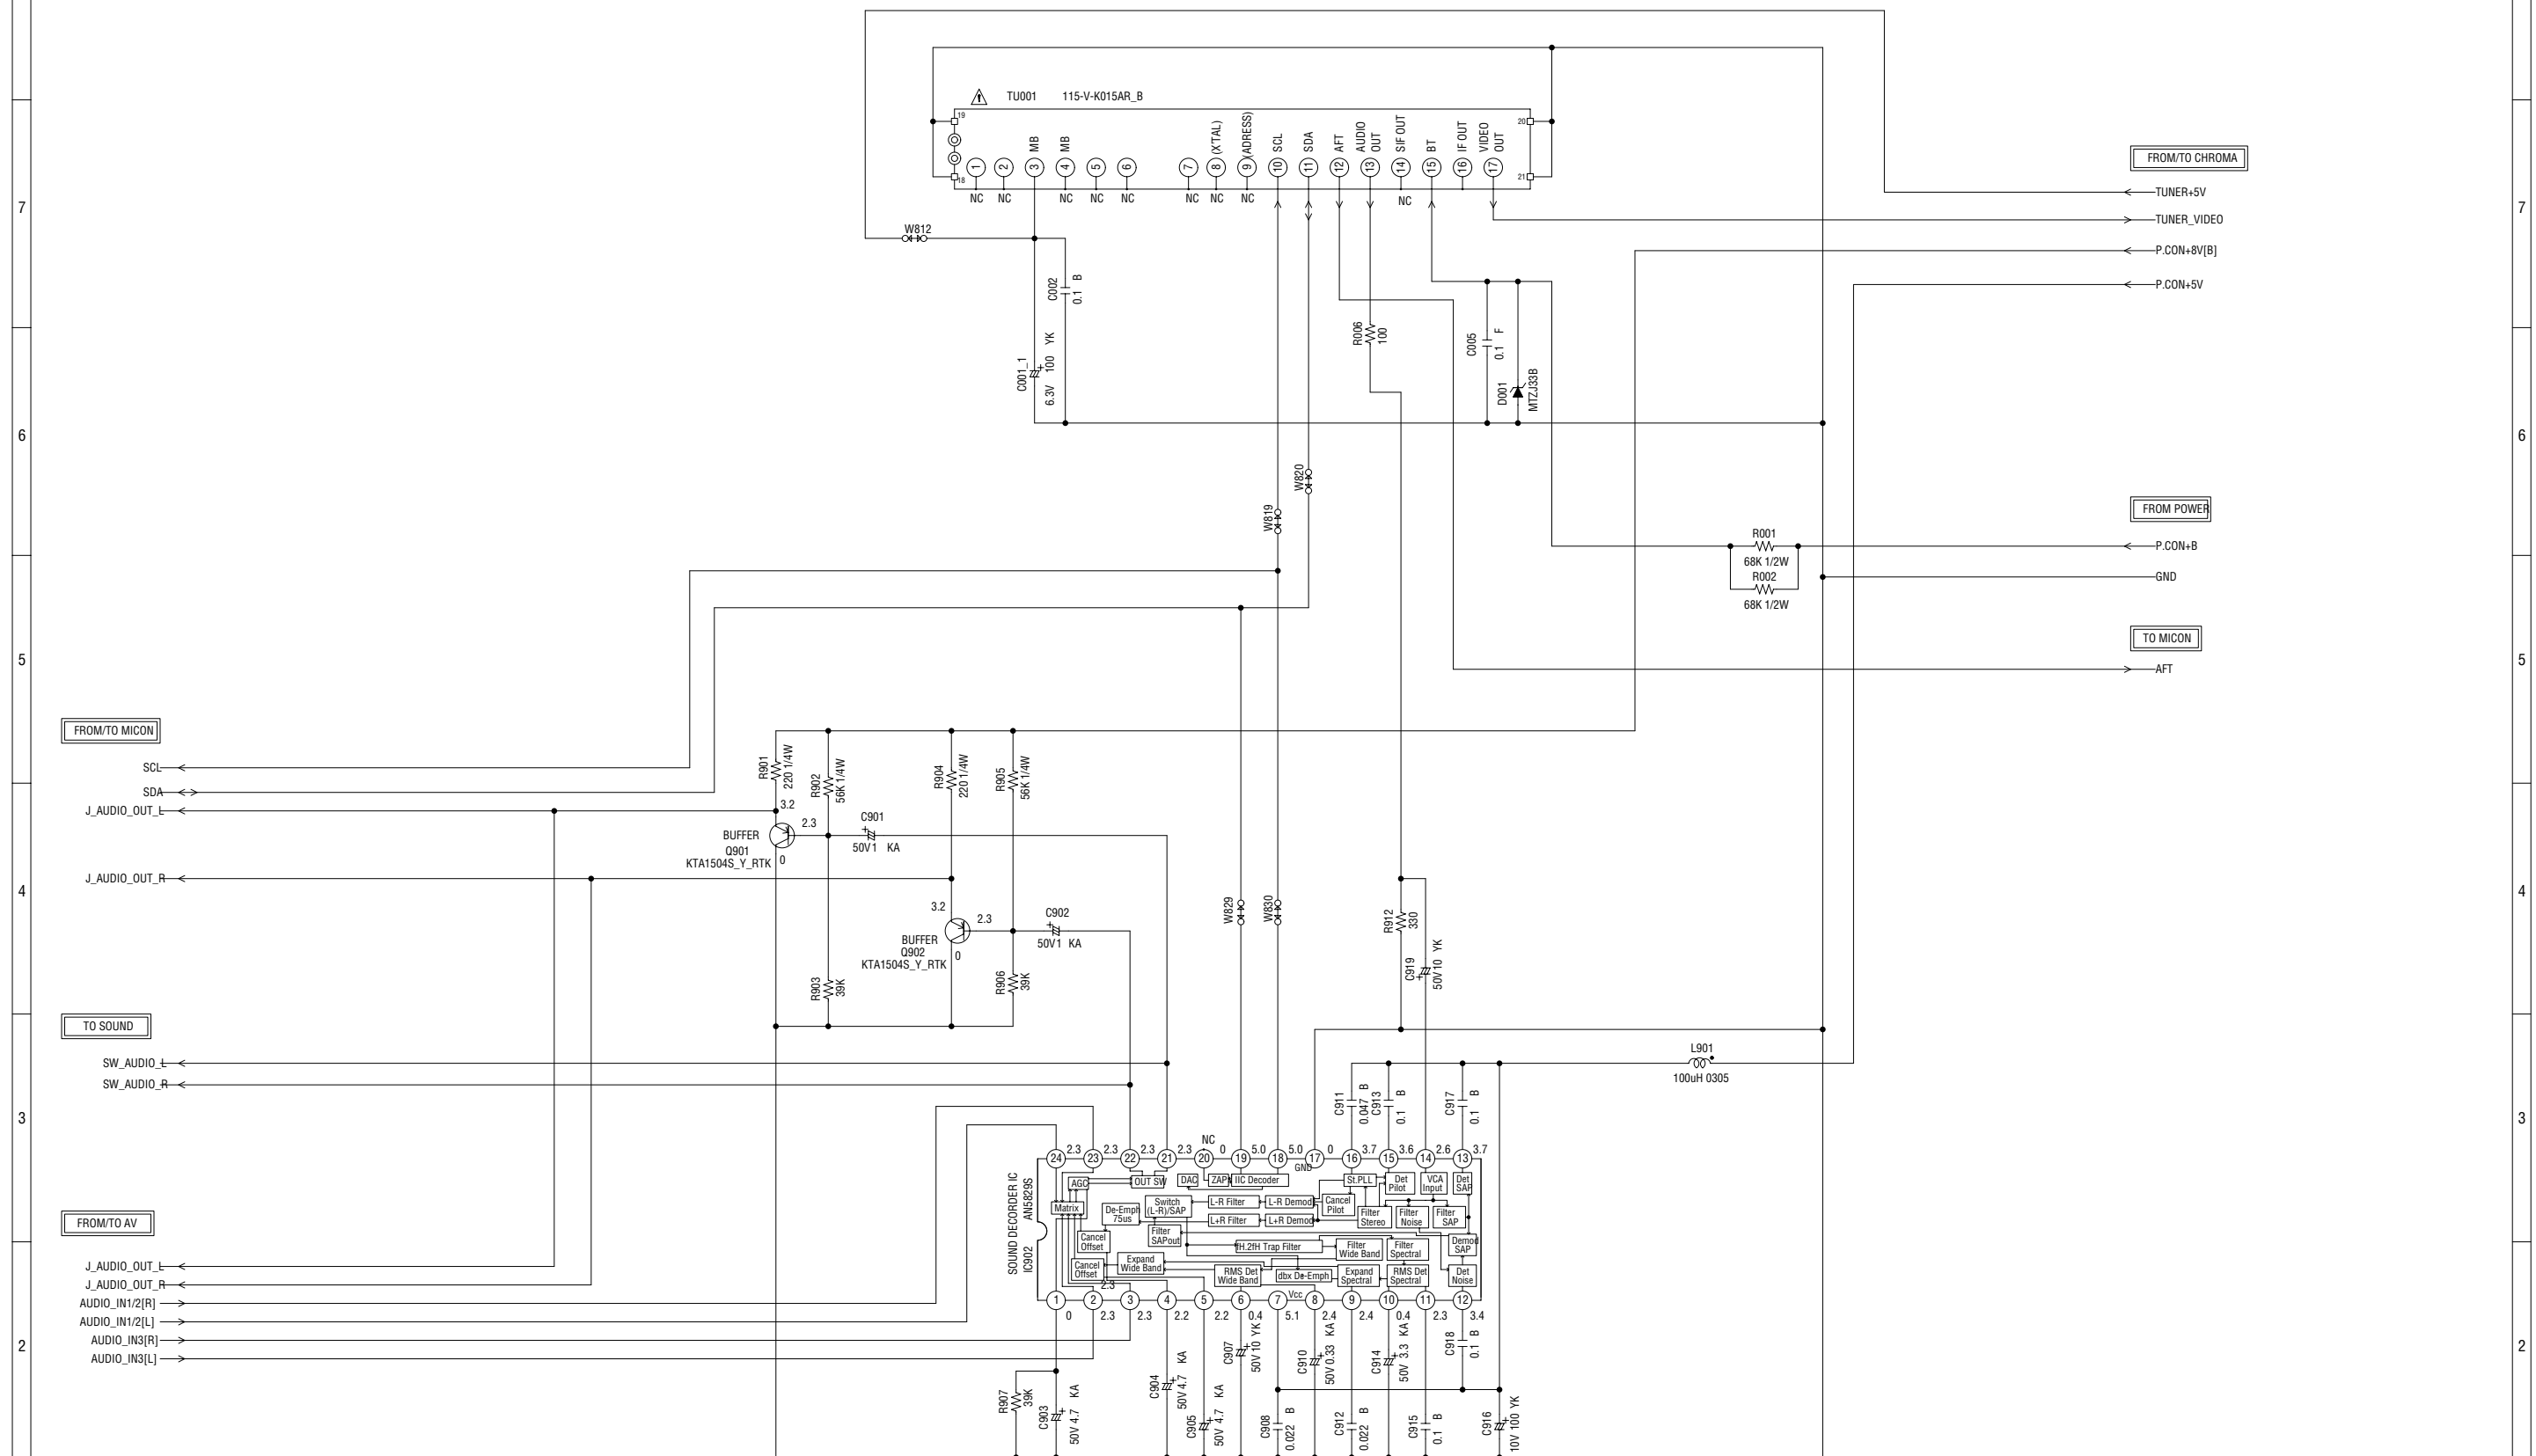

## TUNER/STEREO SCHEMATIC DIAGRAM



NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

**ATTENTION:** LES PIÈCES RÉPARÉES PAR UN  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

**CAUTION** SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .


PCB010  
TMC559

AV SCHEMATIC DIAGRAM  
(MAIN PCB)

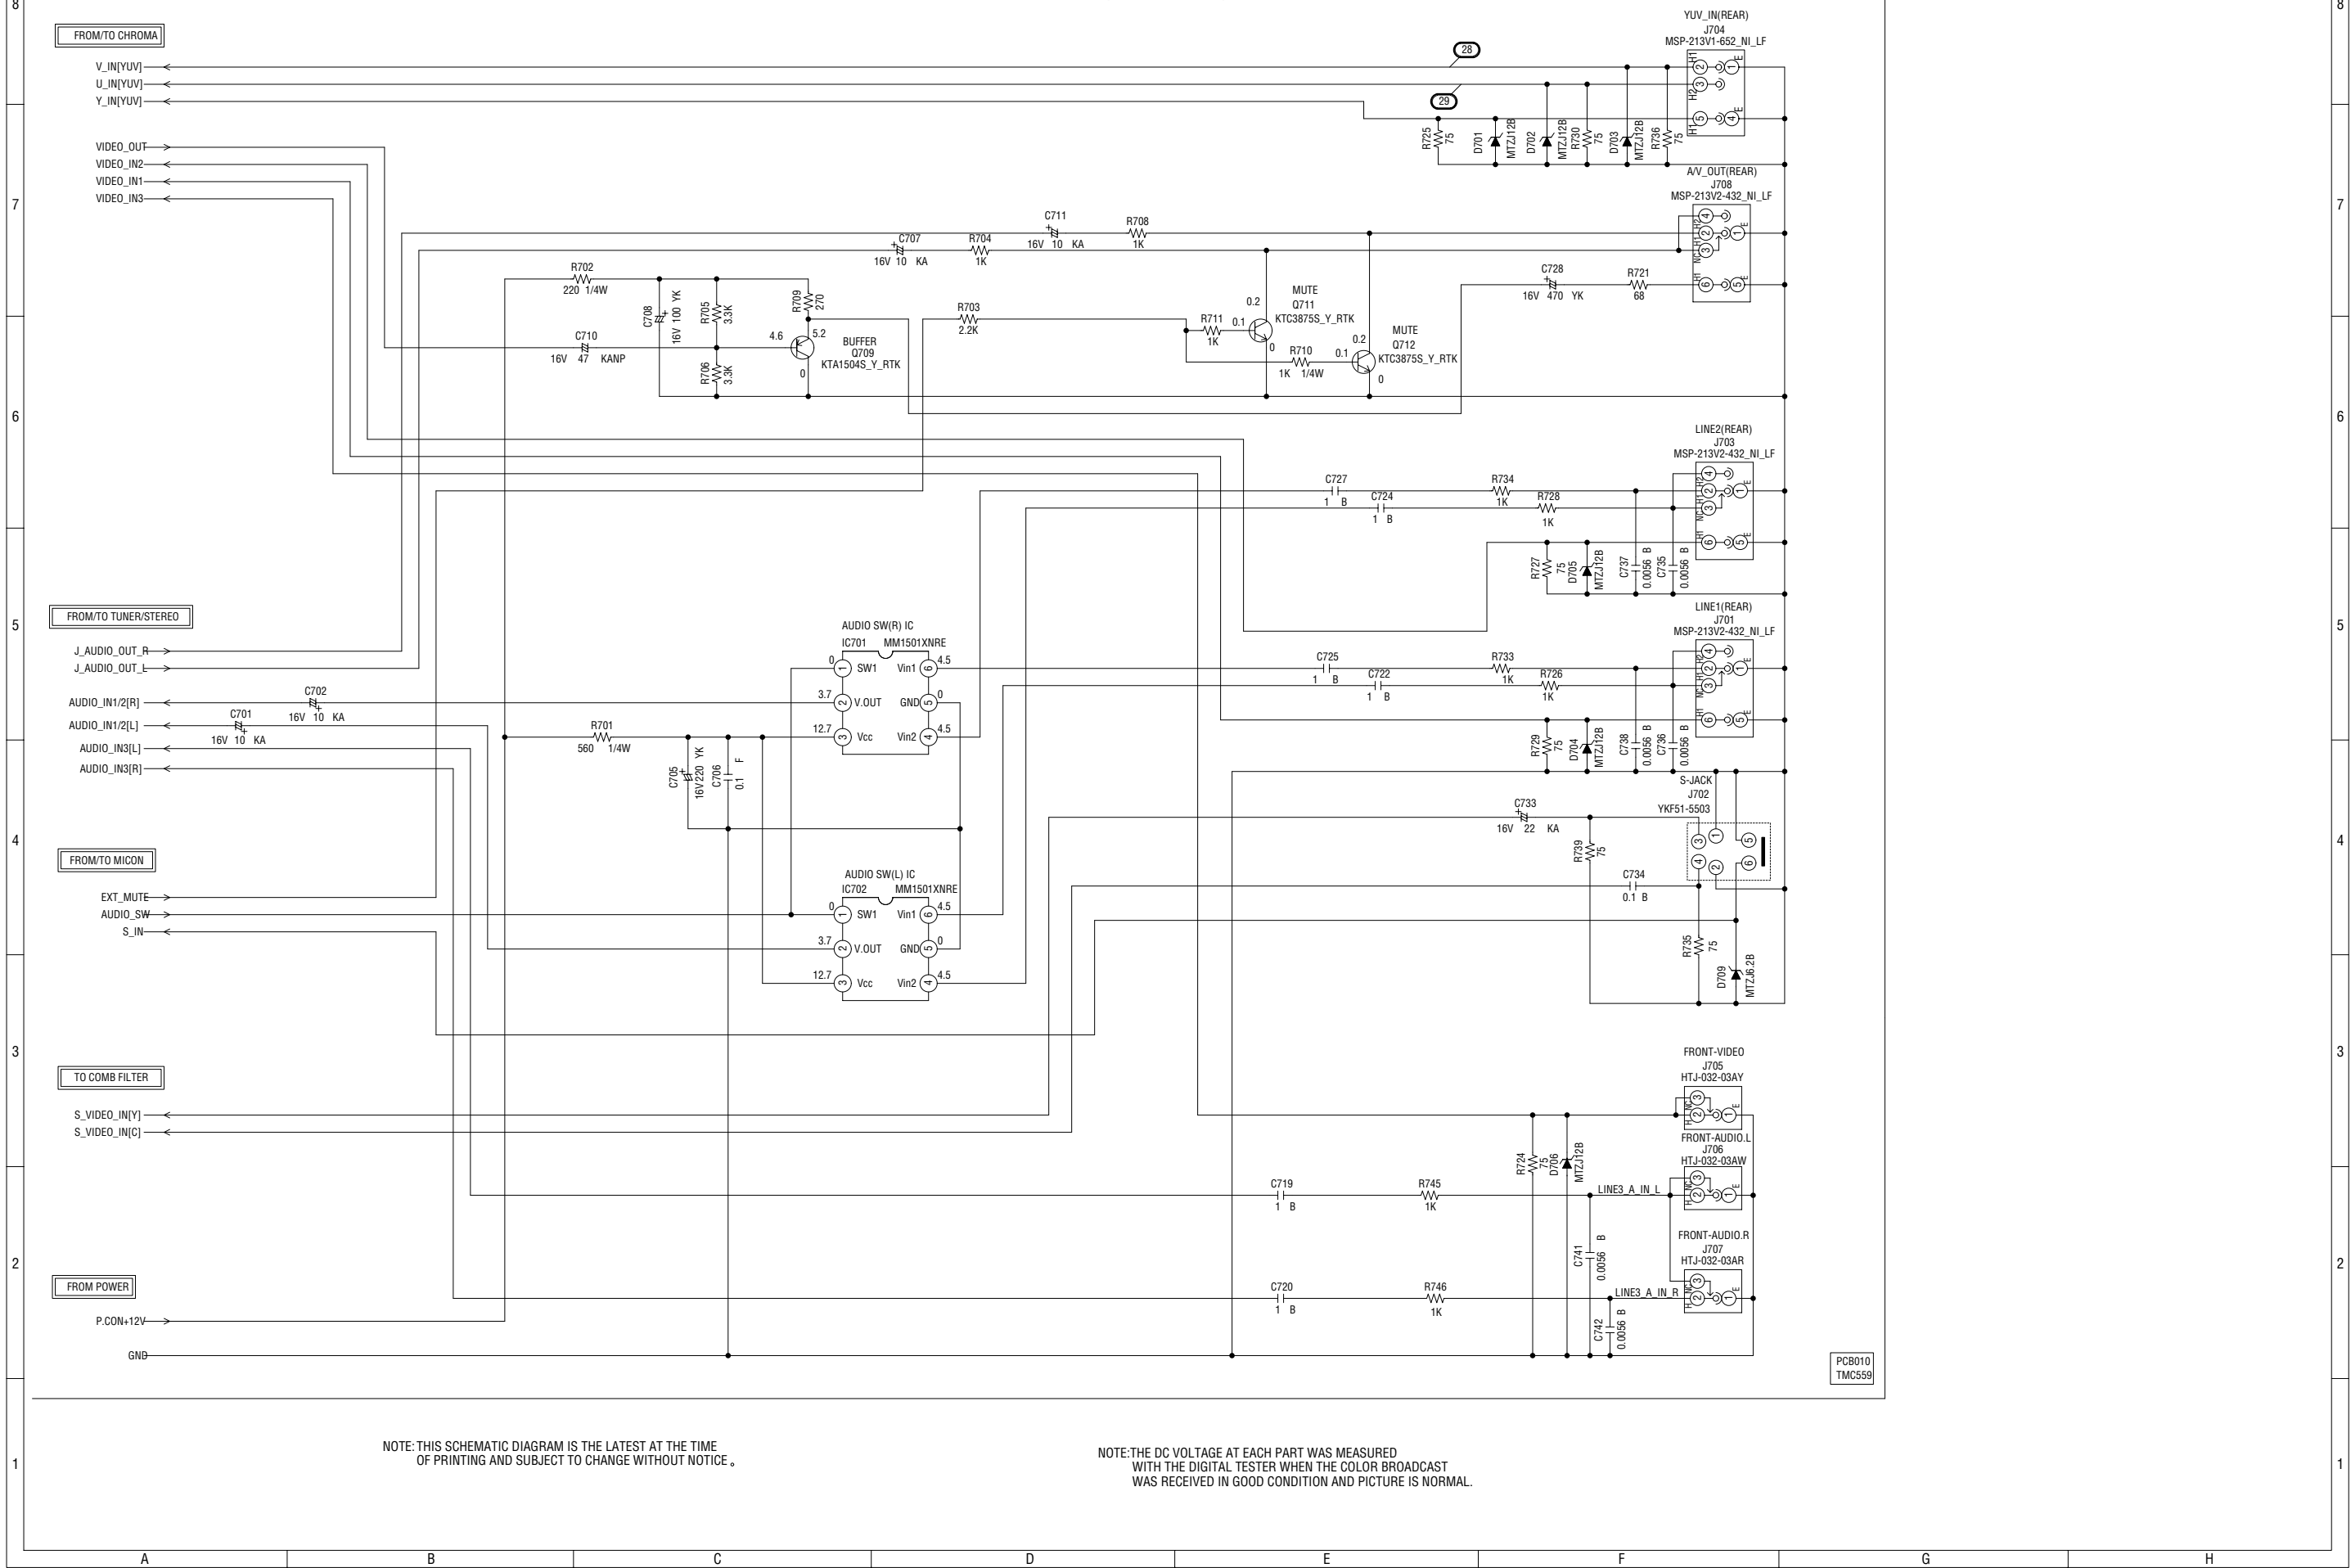


CRT SCHEMATIC DIAGRAM  
(CRT PCB)


CRT BLOCK (W/O SVM)

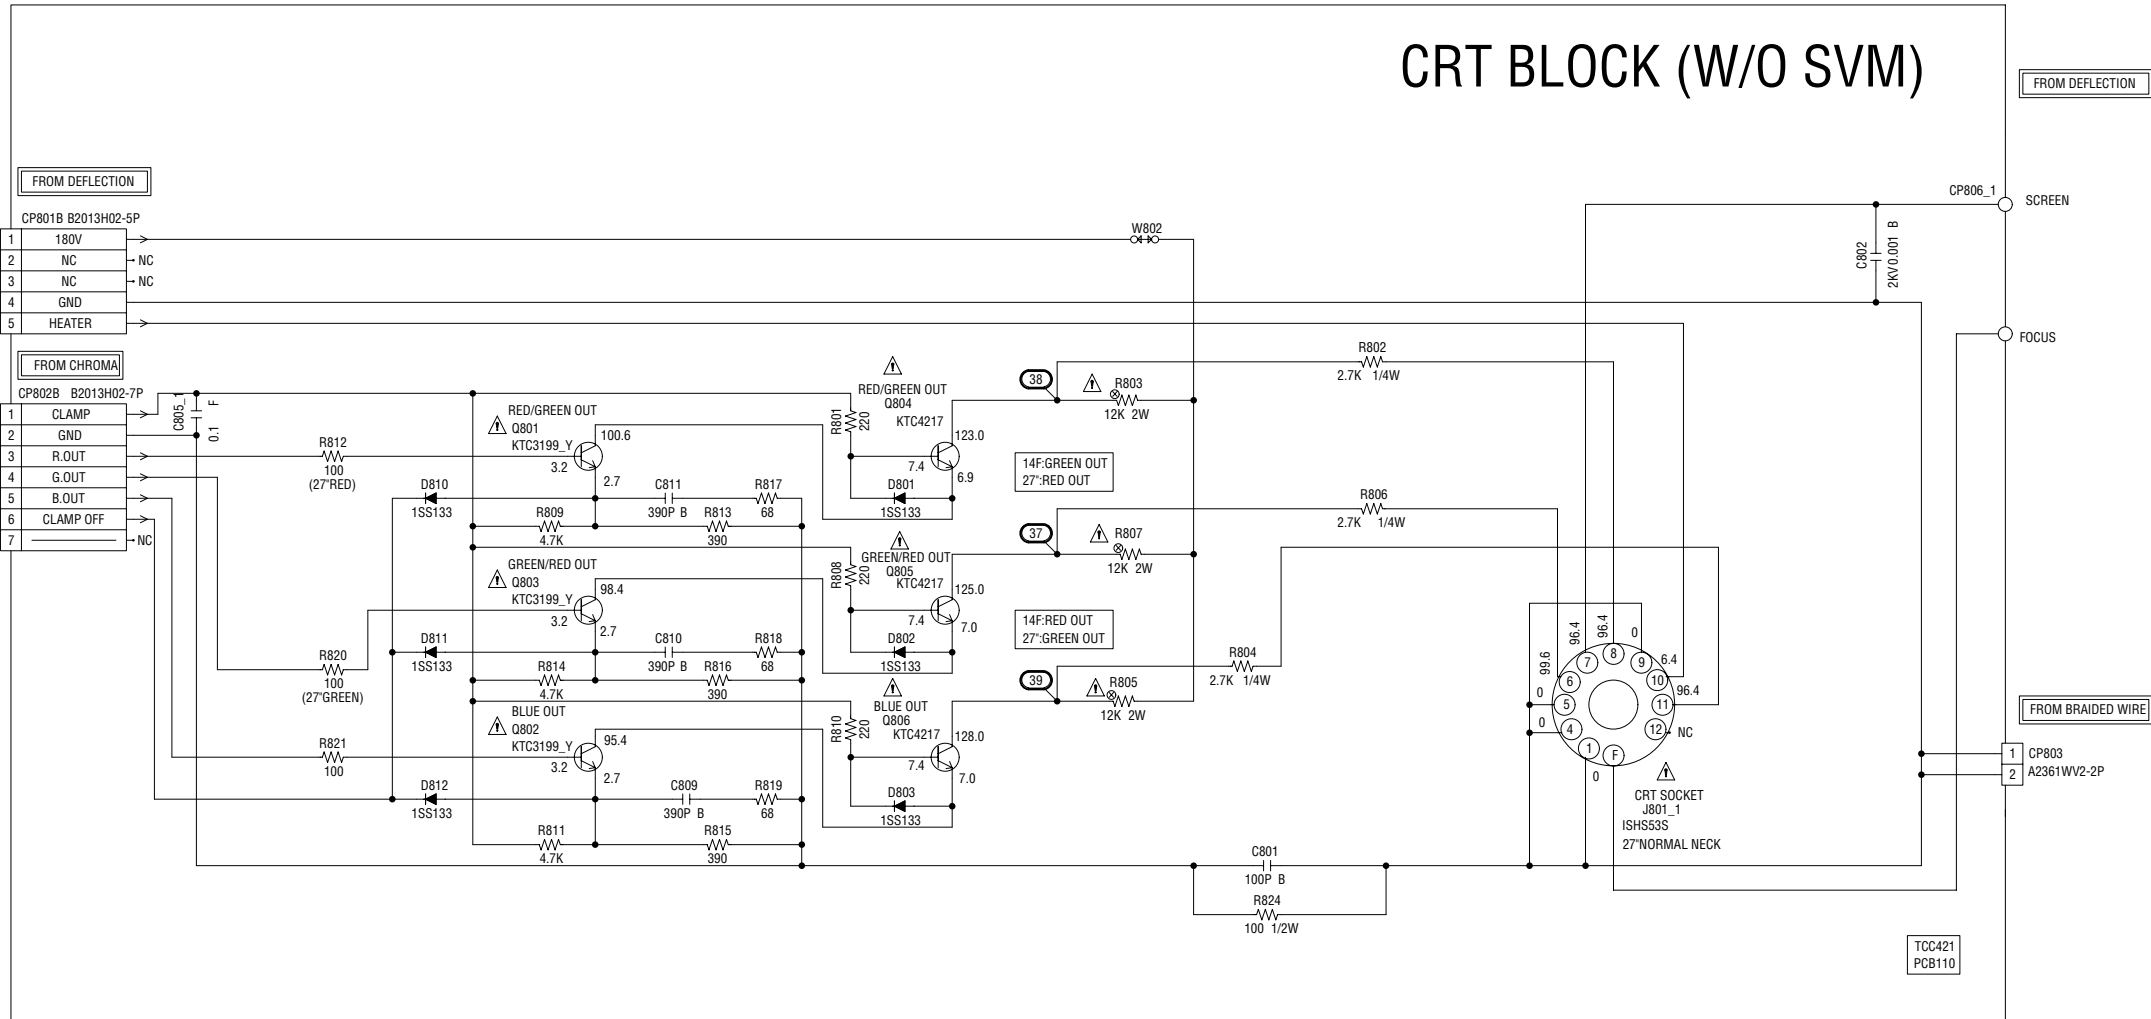


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN  ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

## COMB/FILTER SCHEMATIC DIAGRAM (MAIN PCB)

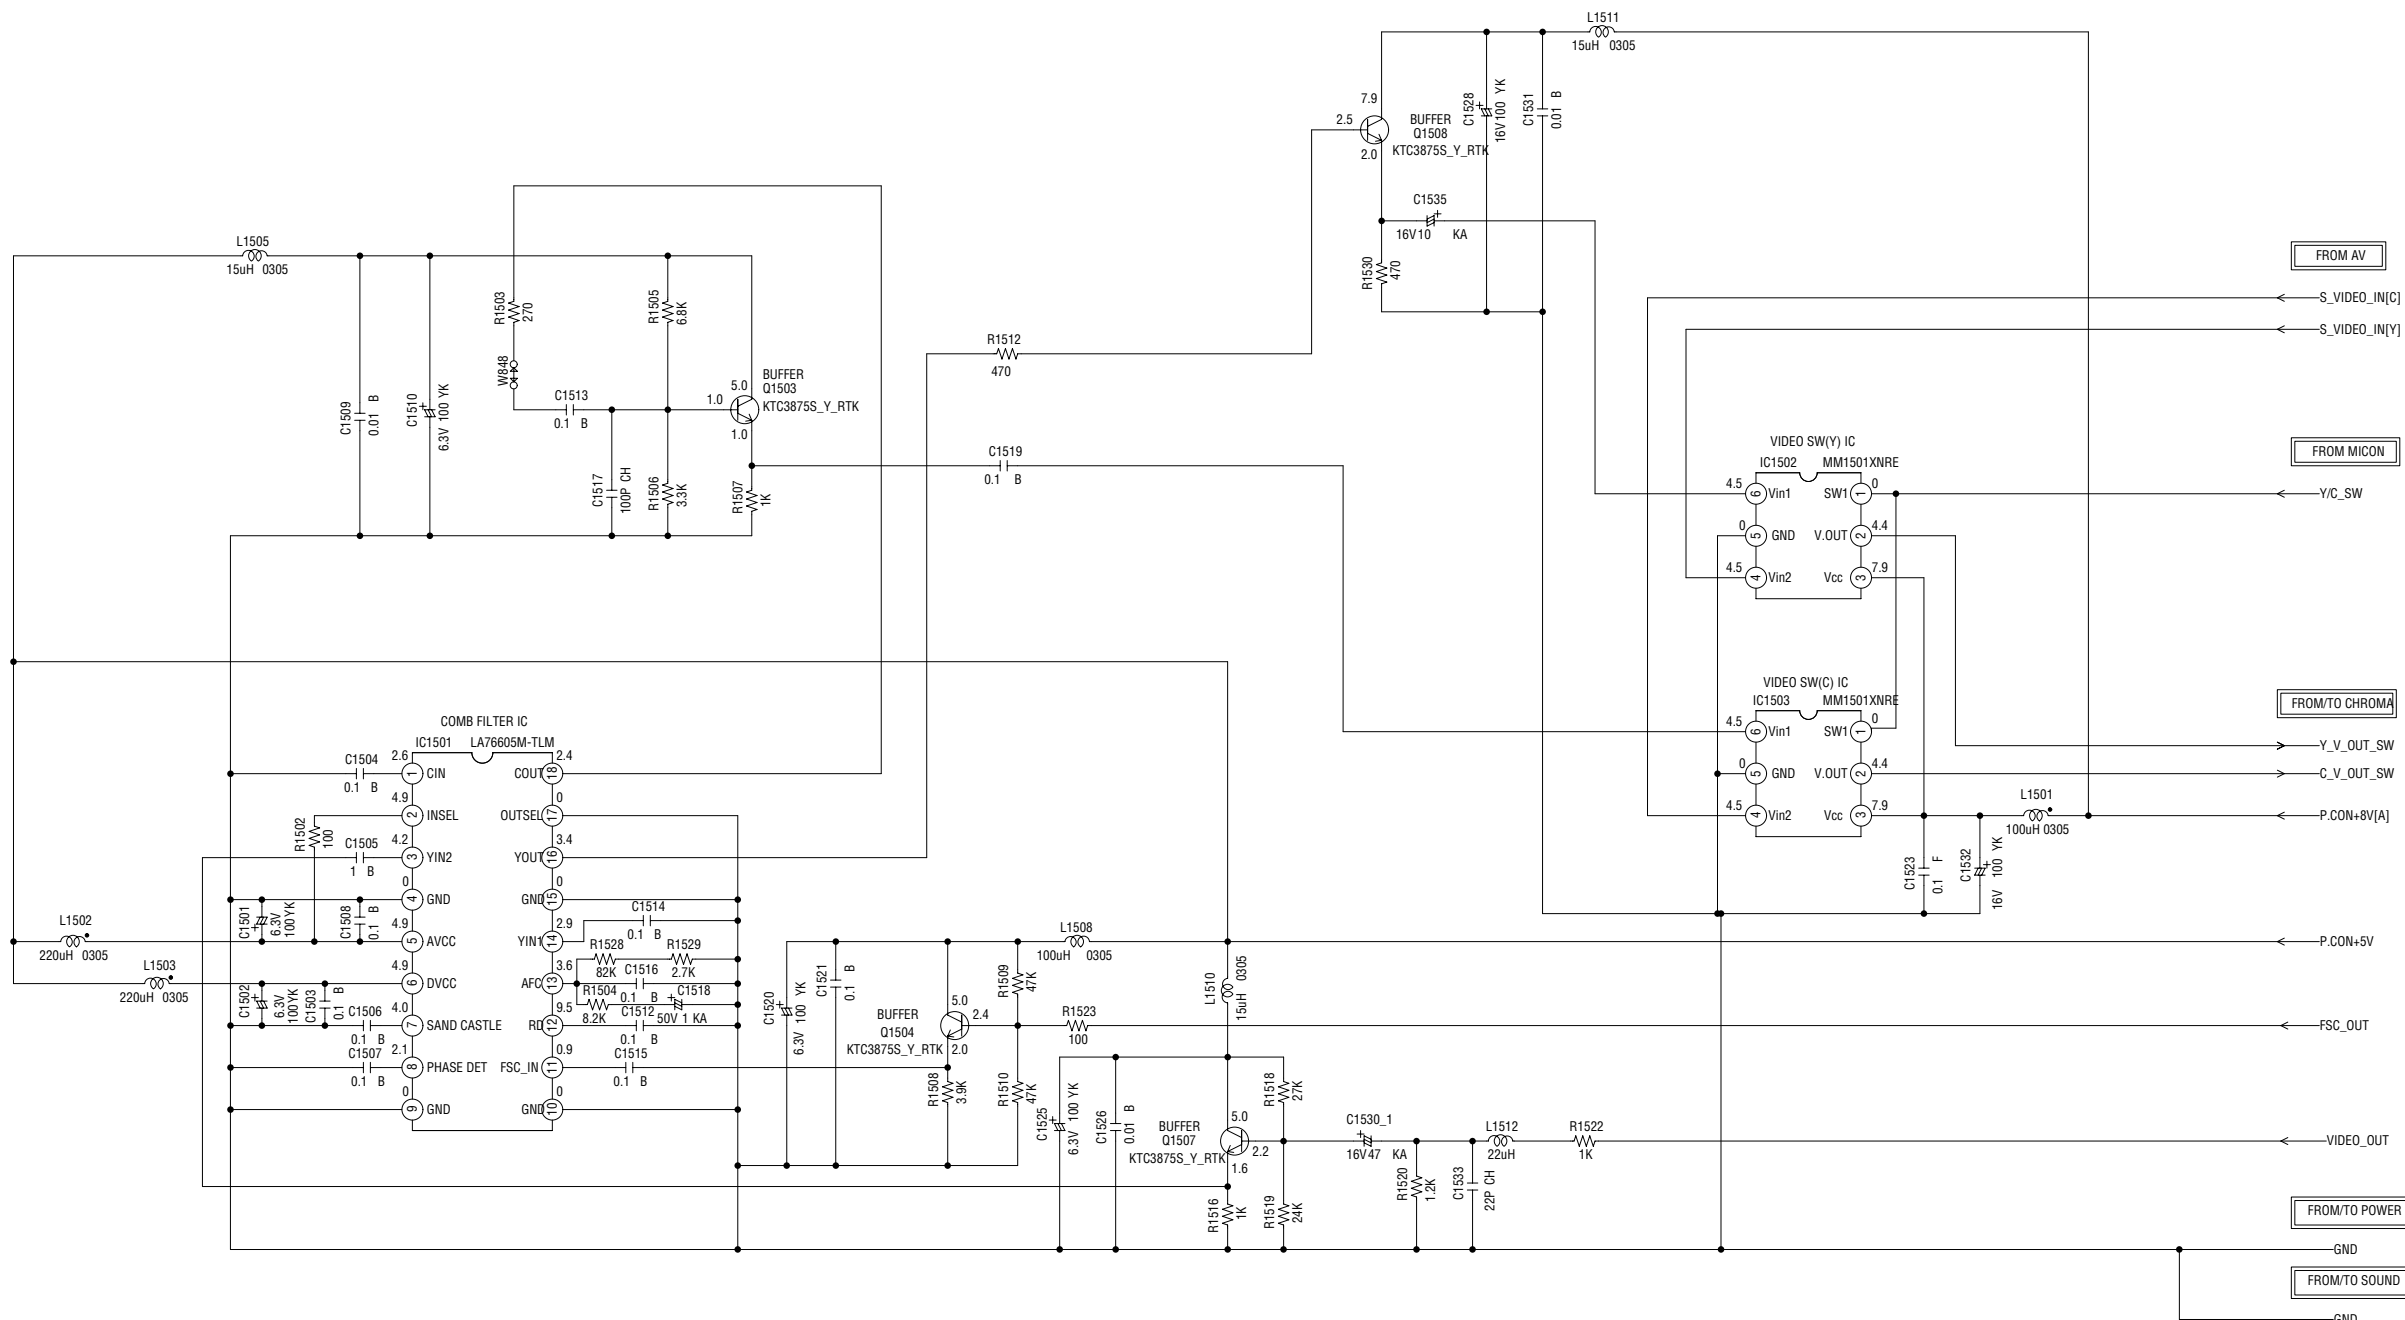


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


PCB010  
TMC559

## WAVEFORMS


### MICON

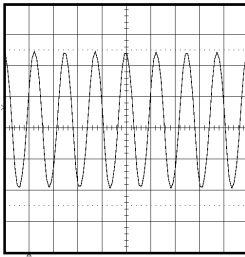


① 1V 0.1μs/div

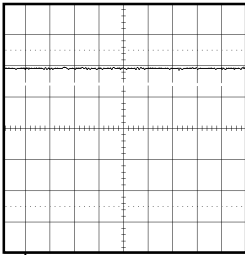

② 1V 1μs/div

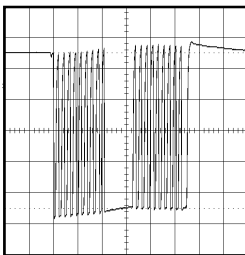


③ 1V 50μs/div

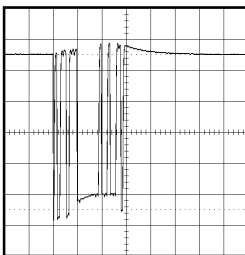


④ 1V 0.1ms/div


### CHROMA

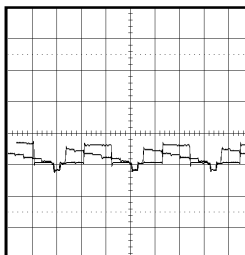


⑦ 1V 20μs/div

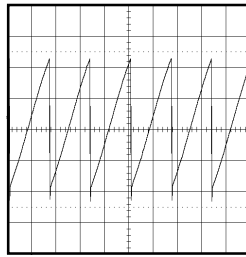


⑧ 0.5V 10ms/div

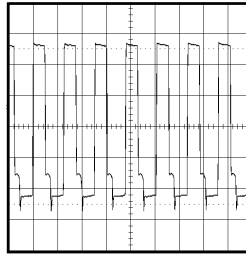


⑨ 1V 50μs/div

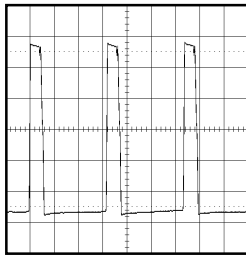


⑩ 2V 20μs/div

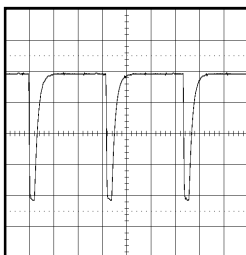


⑪ 0.5V 20μs/div

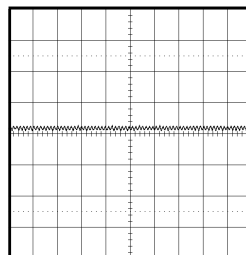


⑫ 1V 2μs/div

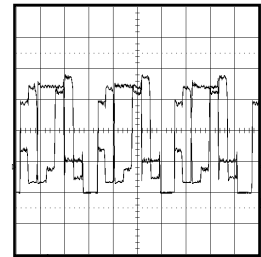


⑬ 1V 20μs/div

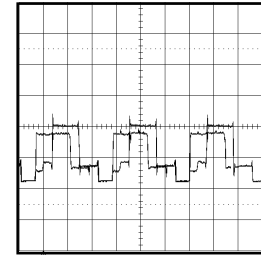


⑭ 2V 20μs/div

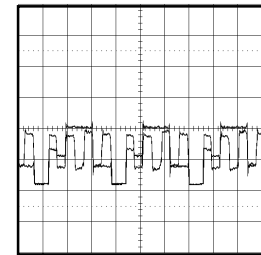

⑮ 2V 20μs/div

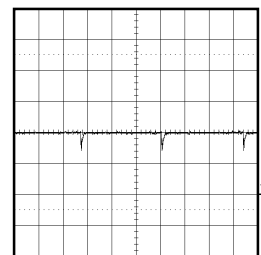

⑯ 2V 5ms/div

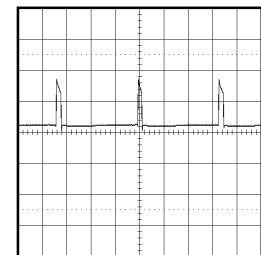


⑰ 20V 5ms/div


### DEFLECTION

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


## WAVEFORMS

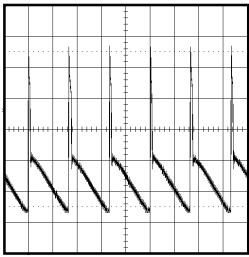


⑱ 10V 10ms/div

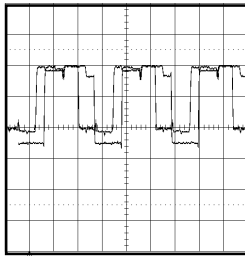


③⑧ 50V 20μs/div

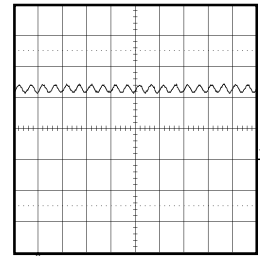


②⑤ 2V 5ms/div

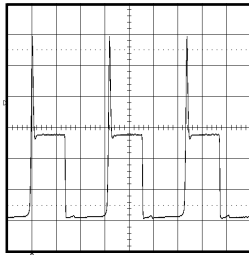

⑲ 20V 20μs/div

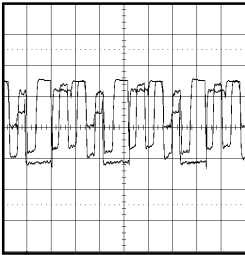


③⑨ 50V 20μs/div

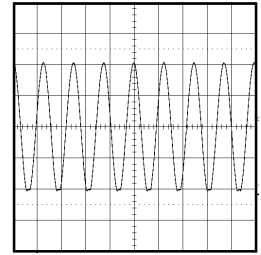


②⑥ 5V 2ms/div


## SOUND

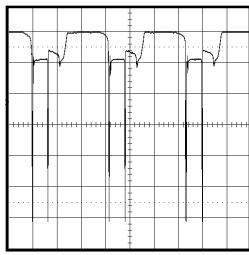

②⑩ 2V 20μs/div

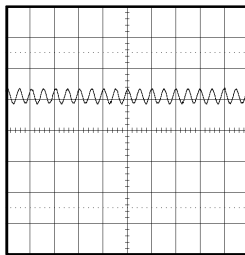


②② 2V 5ms/div

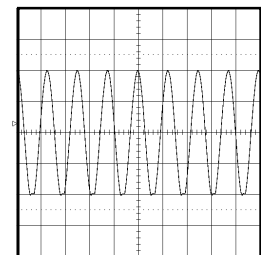


②⑦ 5V 2ms/div


## AV

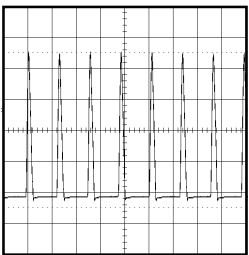

②① 200V 50μs/div

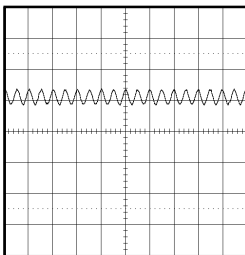


②③ 2V 5ms/div

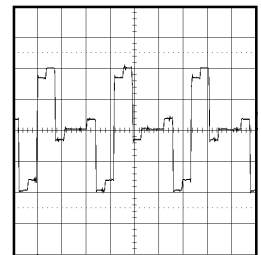


②⑧ 200mV 20μs/div


## CRT

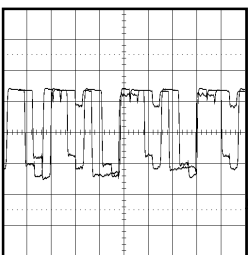

③⑦ 50V 20μs/div

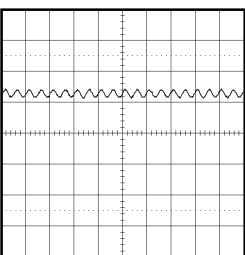

②④ 2V 5ms/div

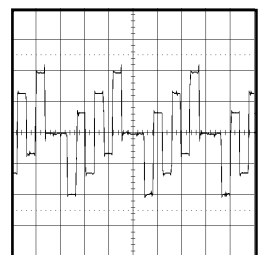


②⑨ 200mV 20μs/div


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



# MECHANICAL EXPLODED VIEW

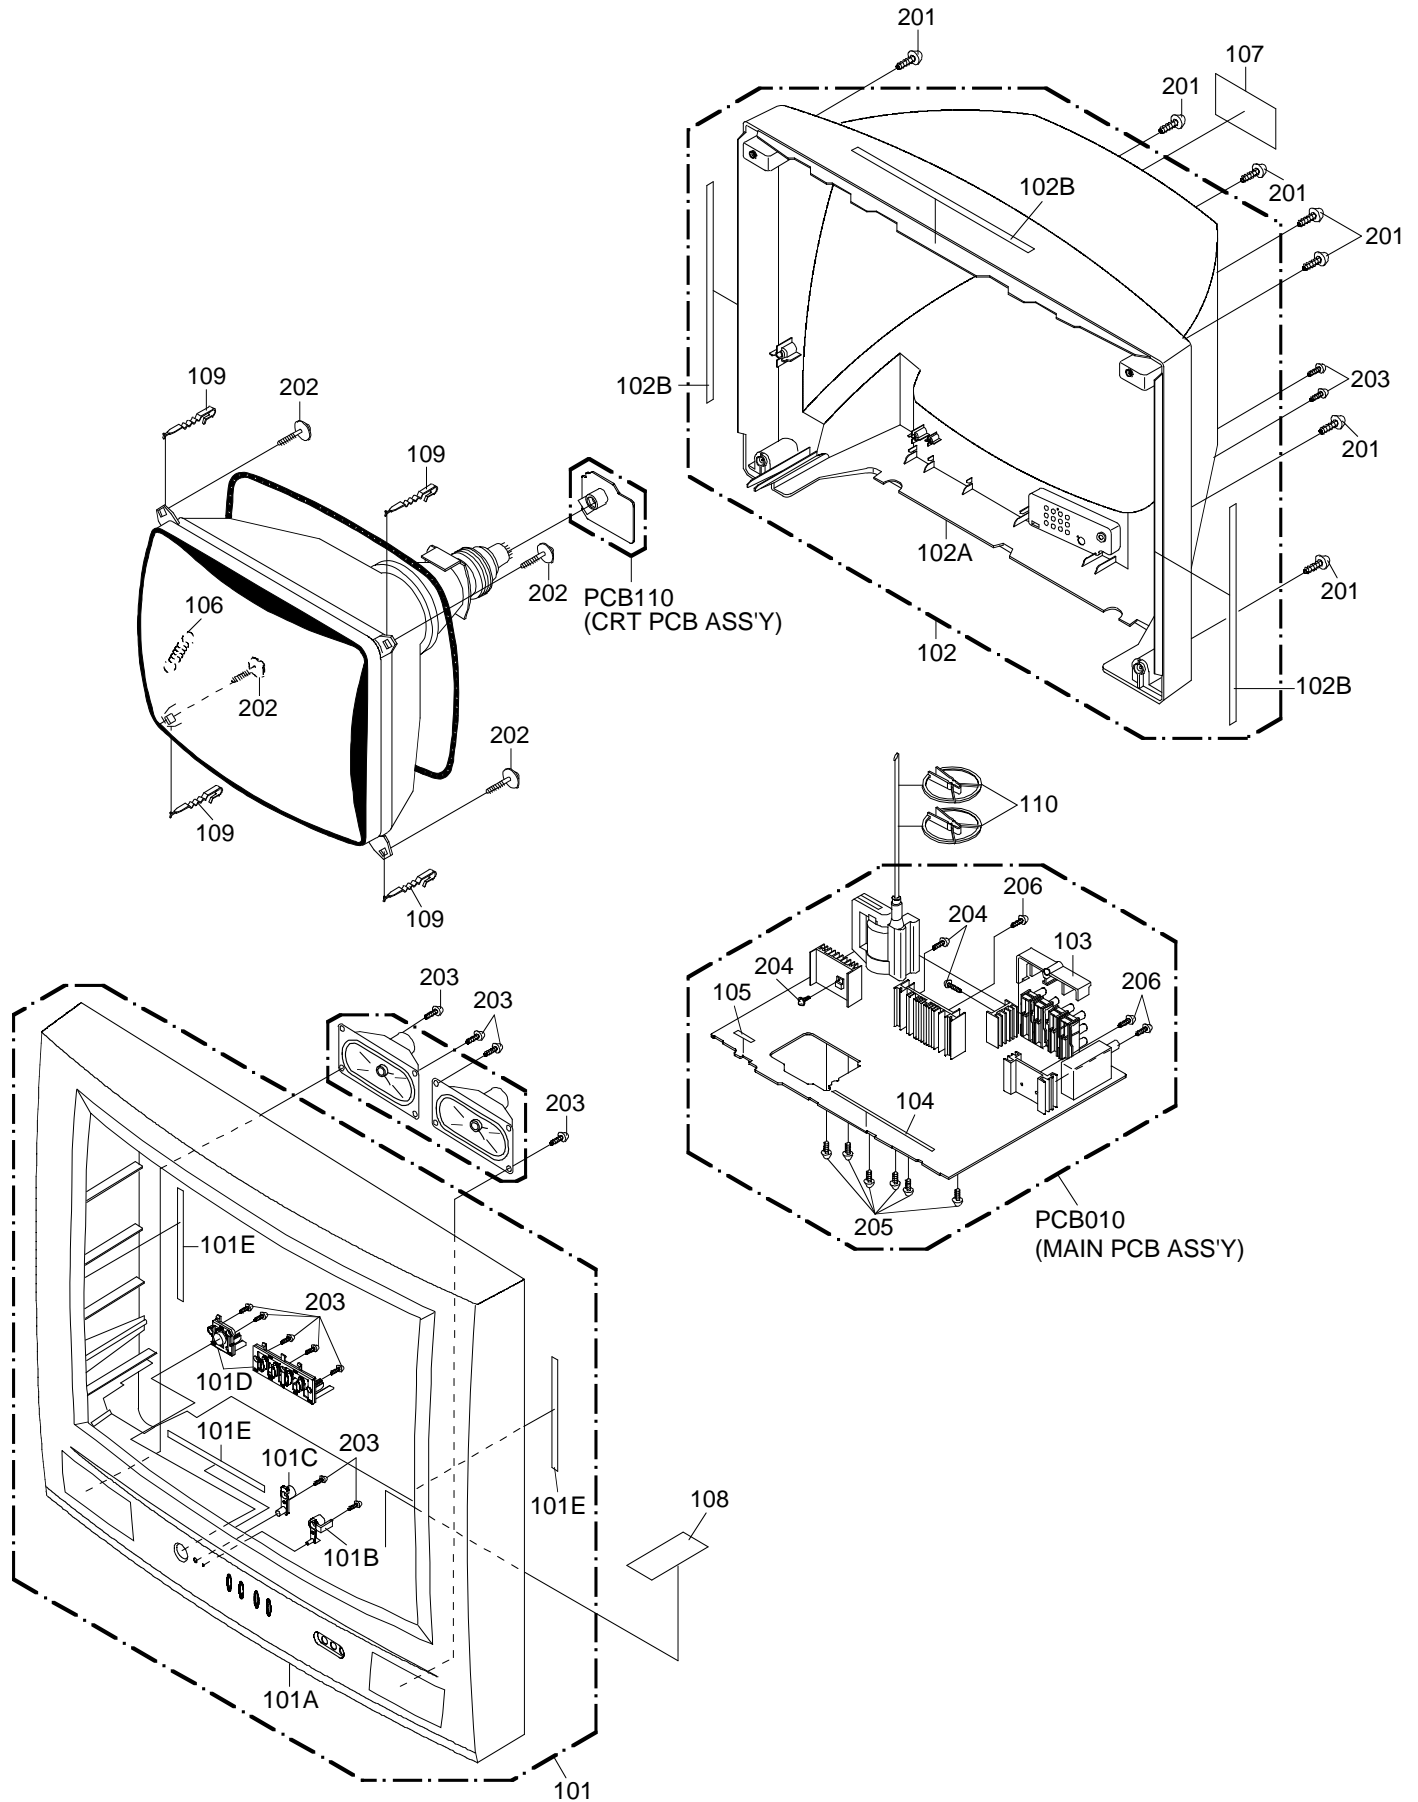

# MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

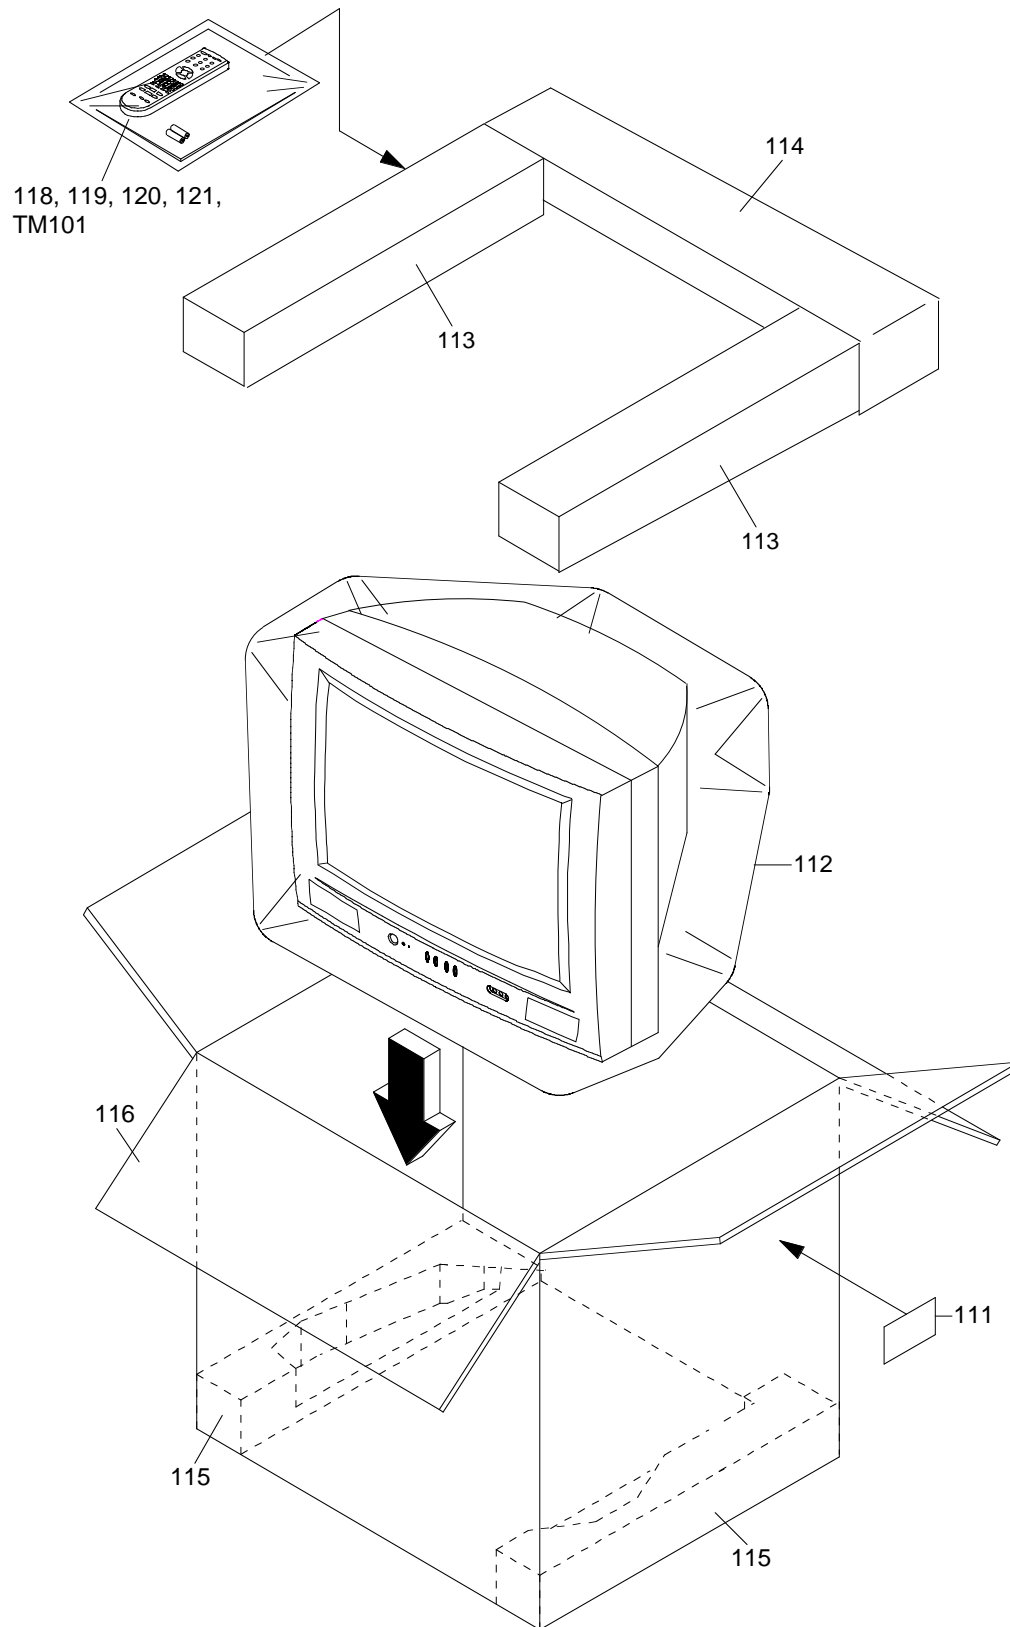

# MECHANICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description	
101	AE003348	A3N425N720	CABINET,FRONT ASSY	
101A	AE003349	701WPJC546	CABINET,FRONT	
101B	AD302098	713WPA0265	GLASS,LED	
101C	AD302096	713WPA0273	GUIDE,REMOCON	
101D	AE003350	735WPBA984	BUTTON ASS'Y	
101E	AE003071	800WQ0A041	FELT SHEET	
102	AE003351	A3N425N740	CABINET,BACK ASSY	
102A	AE003352	702WPAA463	CABINET,BACK	
102B	AE003187	800WQ0A071	FELT SHEET	
103	AD301616	761WPA0263	HOLDER,JACK	
104	AE003353	800WQ0A059	FELT SHEET	
105	AE003190	800WQ0A067	FELT SHEET	
106	AD300759	741WUA0021	SPRING,EARTH	
107	AE003354	722549A321	SHEET,RATING	
108	AD300007	7230006755	SHEET,CAUTION	
109	AD300768	762WPA0009	HOLDER,CRT WIRE	
110	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
111	AE004195	723000C587	SHEET,BAR CODE	
112	AD300432	791WHA0092	LAMIFILM,BAG	
113	AE003356	792WHAA091	PACKAGE,TOP	
114	AE003357	792WHAA092	PACKAGE,BACK	
115	AE003358	792WHAA093	PACKAGE,BOTTOM	
116	AE003359	793WCDC101	GIFT BOX	
117	AE003360	A3N425N975	INSTRUCTION BOOK KIT	
118	AD301213	JA4UD300	POLYBAG,INSTRUCTION(RED CAUTION)	
119	AD300022	J3I70417	REGISTRATION CARD	
120	AE003361	J3N42501A	INSTRUCTION BOOK	
121	AD300023	J3I70436	ESP CARD	
201	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
202	AD302384	8141H60D54	SCREW,TAP TITE(P) GW22	6x45
203	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8

## MECHANICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description	
101	AE003348	A3N425N720	CABINET,FRONT ASSY	
101A	AE003349	701WPJC546	CABINET,FRONT	
101B	AD302098	713WPA0265	GLASS,LED	
101C	AD302096	713WPA0273	GUIDE,REMOCON	
101D	AE003350	735WPBA984	BUTTON ASS'Y	
101E	AE003071	800WQ0A041	FELT SHEET	
102	AE003351	A3N425N740	CABINET,BACK ASSY	
102A	AE003352	702WPAA463	CABINET,BACK	
102B	AE003187	800WQ0A071	FELT SHEET	
103	AD301616	761WPA0263	HOLDER,JACK	
104	AE003353	800WQ0A059	FELT SHEET	
105	AE003190	800WQ0A067	FELT SHEET	
106	AD300759	741WUA0021	SPRING,EARTH	
107	AE004196	722549A366	SHEET,RATING	
108	AD300007	7230006755	SHEET,CAUTION	
109	AD300768	762WPA0009	HOLDER,CRT WIRE	
110	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
111	AE004195	723000C587	SHEET,BAR CODE	
112	AD300432	791WHA0092	LAMIFILM,BAG	
113	AE003356	792WHAA091	PACKAGE,TOP	
114	AE003357	792WHAA092	PACKAGE,BACK	
115	AE003358	792WHAA093	PACKAGE,BOTTOM	
116	AE003359	793WCDC101	GIFT BOX	
117	AE003360	A3N425N975	INSTRUCTION BOOK KIT	
118	AE003390	JA4UD200	POLYBAG,INSTRUCTION(RED CAUTION)	
119	AD300022	J3I70417	REGISTRATION CARD	
120	AE004197	J3N42501B	INSTRUCTION BOOK	
201	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
202	AD302384	8141H60D54	SCREW,TAP TITE(P) GW22	6x45
203	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8

# ELECTRICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△R410	AD302107	R3X18A470J	47 OHM 2W
R419	AD300784	R3X1811R2J	1.2 OHM 1W
△R426	BZ210030	R4X5T4472F	4.7K OHM 1/4W
△R434	BZ210259	R5Y2CF1R8J	1.8 OHM 10W
△R436	BZ210023	R4X5T4183F	18K OHM 1/4W
△R438	BZ210022	R6558A1R2J	1.2 OHM 2W
△R439	BZ210003	R3K181102J	1K OHM 1W
△R441	BZ210231	R4X5T6153F	15K OHM 1/6W
△R452	AD301385	R3X18A391J	390 OHM 2W
△R459	AD301595	R65582010J	1 OHM 1/2W
△R500	BZ210080	R0G3K2275K	2.7M OHM 1/2W
△R501	AD301596	R5X2AE010J	1 OHM 7W
△R502	BZ210249	R3X28A331J	330 OHM 2W
△R506	BZ210162	R002T4682J	6.8K OHM 1/4W
△R517	AD302108	R3X28BR39J	0.39 OHM 3W
△R520	BZ210206	R002T2155J	1.5M OHM 1/2W
△R527	BZ210149	R3X18AR68J	0.68 OHM 2W
△R541	BZ210190	R63581R22J	0.22 OHM 1W
△R542	BZ210248	R3X181R15J	0.15 OHM 1W
△R602	AD301975	R3X28B120J	12 OHM 3W
△R649	AD301975	R3X28B120J	12 OHM 3W
△R803	BZ210050	R3X18A123J	12K OHM 2W
△R805	BZ210050	R3X18A123J	12K OHM 2W
△R807	BZ210050	R3X18A123J	12K OHM 2W
<b>CAPACITORS</b>			
C408	BZ110032	E5EZF3102M	1000 UF 25V
△C412	AD301599	P4N8FJ272H	0.0027UF 1.25KV
C413	AD301977	E0ELF4102M	1000 UF 35V
C418	AE001019	P4J7F3434J	0.43 UF 250V PMS
△C420	AD300723	P4N8FJ153H	0.015 UF 1.25KV
C421	AD301600	P3N1F5223J	0.022 UF 630V
C425	BZ110182	C03L0R713K	0.001 UF 2KV R
C426	BZ110225	E5EZF0220M	22 UF 250V
△C430	BZ110195	E02LU8220M	22 UF 100V
C442	AD301601	E53FF56R8M	6.8 UF 50V NP
C501	BZ210176	E02LF3222M	2200 UF 25V
C502	BZ110182	C03L0R713K	0.001 UF 2KV R
C503	BZ110182	C03L0R713K	0.001 UF 2KV R
△C505	BZ110025	P2122B224M	0.22 UF 275V ECQUL
△C506	BZ110035	P2122B104M	0.1 UF 275V ECQUL
C507	BZ110012	E51CGC471M	470 UF 200V
△C508	BZ110222	CD39E0MH3M	0.0022UF 250V
△C513	AD301026	CD39E0M13M	0.001 UF 250V
C517	BZ110191	C03L0R7E3K	0.0015UF 2KV R
△C519	AD301026	CD39E0M13M	0.001 UF 250V
C521	BZ110228	E62NFB221M	220 UF 160V
C527	BZ110119	E02LF2222M	2200 UF 16V
C535	BZ110182	C03L0R713K	0.001 UF 2KV R
C646	AD301321	CQG0CH412J	100 PF 50V CH
C802	BZ110247	C0JBB0713K	0.001 UF 2KV B
C1003	BZ210176	E02LF3222M	2200 UF 25V
C1004	BZ110053	E02LF3102M	1000 UF 25V
C1009	BZ110053	E02LF3102M	1000 UF 25V
<b>DIODES</b>			
D001	BZ410037	D97U03301B	MTZJ33B T-77
D104	BZ410006	D1VT001330	1SS133T-77
D105	BZ410006	D1VT001330	1SS133T-77
D106	BZ410020	D97U05R11B	MTZJ5.1B T-77
D109	BZ410054	0021721150	SLR-342VCT32
D113	BZ410021	D97U05R61B	MTZJ5.6B T-77
D402	BZ410043	D2WT011E10	11E1-EIC
D403	BZ410019	D97U03001B	MTZJ30B T-77
D404	BZ410020	D97U05R11B	MTZJ5.1B T-77
D405	BZ410063	D2WTAU02A0	AU02A-EIC
△D406	BZ410021	D97U05R61B	MTZJ5.6B T-77
D407	BZ410063	D2WTAU02A0	AU02A-EIC
D408	AD302110	D2CF0715L0	ERD07-15L50
D409	AD301980	D2CF2016L0	FE201-6L49
D410	BZ410019	D97U03001B	MTZJ30B T-77
△D411	BZ410063	D2WTAU02A0	AU02A-EIC
D414	BZ410043	D2WT011E10	11E1-EIC

# ELECTRICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D415	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D416	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D417	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D419	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D505	BZ410111	D28F30DF60	DIODE,RECTIFIER 30DF6-FC
D506	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D507	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D508	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D509	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D510	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
D511	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D513	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D514	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D516	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D517	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D520	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D523	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D524	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D525	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D601	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D602	BZ410058	D97U08R21B	DIODE,ZENER MTZJ8.2B T-77
D603	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D604	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D605	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D606	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D607	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D608	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D701	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D702	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D703	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D704	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D705	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D706	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D709	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D810	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D811	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D812	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
<b>ICS</b>			
IC101	AD301981	I56F07090A	IC OEC7090A
IC199	AD302089	A3N401M015	INIT DATA
IC302	AD301983	I01FF58910	IC AN5891SA-E1V
IC401	BZ611117	I03TD80410	IC LA78041
△IC504	BZ410088	0002E00610	PHOTO COUPLER LTV-817M-VB
IC601	AE002803	I06FC1283A	IC M61283FP R70T
IC701	AD301988	I0UF015010	IC MM1501XNRE
IC702	AD301988	I0UF015010	IC MM1501XNRE
IC902	BZ611068	I01FF58290	IC AN5829S
△IC1001	AE003081	I0FSP7808B	IC AN17808B
IC1501	AE003002	I03FE76605	IC LA76605M-TLM
IC1502	AD301988	I0UF015010	IC MM1501XNRE
IC1503	AD301988	I0UF015010	IC MM1501XNRE
<b>TRANSISTORS</b>			
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON KTC3227_Y-AT
Q405	BZ510040	TDUU024990	TRANSISTOR,SILICON 2SD2499(LB0EC1)
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q410	BZ510110	TC30041590	TRANSISTOR,SILICON 2SC4159(D,E)
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q502	BZ510098	T220033260	FET 2SK3326(2)
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON 2SA1371(D,E)-AE

# ELECTRICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON 2SC2909(S,T)-AA
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON KTA1271_Y-AT
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
△Q801	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q802	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q803	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△Q805	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q1001	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR KRC111SR TK
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
<b>COILS &amp; TRANSFORMERS</b>			
L301	BZ310041	02167F101J	COIL 100 UH
L402	BZ310187	022100034A	COIL,LINEARITY ELH5L4132N
L403	AD301606	02DK000058	COIL,CHOKE 02DK000058
△L501	AD301124	029T000101	COIL,LINE FILTER 2R2A752F28Y
△L503	AD301607	028R270010	COIL,DEGAUSS 8R270010
L901	BZ310041	02167F101J	COIL 100 UH
L1501	BZ310041	02167F101J	COIL 100 UH
L1502	AD301417	02167F221J	COIL 220 UH
L1503	AD301417	02167F221J	COIL 220 UH
L1505	AD300613	02167F150J	COIL 15 UH
L1508	BZ310041	02167F101J	COIL 100 UH
L1510	AD300613	02167F150J	COIL 15 UH
L1511	AD300613	02167F150J	COIL 15 UH
L1512	AD301608	0216A6220J	COIL 22 UH
T401	BZ310189	0450190161	TRANS,HORIZONTAL DRIVE ETH19Y203AY
△T501	AD301034	048140066S	TRANSFORMER,SWITCHING 8140066S
<b>JACKS</b>			
J701	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK YKF51-5503
J703	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
△J801	AD301356	066F130020	SOCKET,CATHODE RAY,TUBE ISHS53S
<b>SWITCHES</b>			
SW101	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
<b>VARIABLE RESISTORS</b>			
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED EVNCYAA03BE4
<b>P.C.BOARD ASSEMBLIES</b>			
PCB010	AE003345	A3N425N010	PCB ASS'Y TMC559D
PCB110	AE003346	A3N425N110	PCB ASS'Y TCC421D

# ELECTRICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description
<b>MISCELLANEOUS</b>			
B403	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
△CD501	AD300746	120R615901	CORD,AC BUSH 0R615901
CD801	BZ614385	WCL6838038	FLAT CABLE AWM2468 A WG26 5C GRAY 380MM
CD802	AD302116	WEL6852038	FLAT CABLE AWM2468 A WG26 7C GRAY 520MM
CD803	BZ614378	06CU823001	CORD,CONNECTOR CU823001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE 173979-7
CP401	BZ614240	069X460029	CONNECTOR PCB SIDE B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE A3963WV2-3PD
CP502	BZ614283	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
CP507	BZ614016	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP508	BZ614016	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP803	BZ614269	069S320010	CONNECTOR PCB SIDE A2361WV2-2P
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP801B	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP802A	AD301997	067U007029	WIRE HOLDER B2013H02-7P
CP802B	AD301997	067U007029	WIRE HOLDER B2013H02-7P
EL001	BZ614044	124120301A	EYE LET XRY20X30BD
EL002	BZ614043	124116281A	EYE LET XRY16X28BD
△F501	BZ614422	081PC6R305	FUSE 51MS063L
△FB401	AE003347	043227016F	TRANSFORMER,FLYBACK FJN27A003_M
FH501	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
OS101	AD301048	0773071001	REMOTE RECEIVER RPM7138-WH5
△RY501	BZ612009	0560V20115	RELAY ALKS321
SP1001	AD302092	070Y435008	SPEAKER S0509F12-G
△TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
TM101	AD302093	076N0GQ010	TRANSMITTER RC-GQ010
△TU001	AE000273	0163300005	RF UNIT 115-V-K015AR_B
△V801	AD301614	0981270B01	CRT W/DY M68LWF088X
X101	AD302002	100CT8R005	CRYSTAL HC-49/U-S
X602	BZ613004	100CT3R505	CRYSTAL HC-49/C
<b>RESISTOR</b>			
	RC.....	CARBON RESISTOR	
<b>CAPACITORS</b>			
	CC.....	CERAMIC CAPACITOR	
	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
	CP.....	POLYESTER CAPACITOR	
	CPP.....	POLYPROPYLENE CAPACITOR	
	CPL.....	PLASTIC CAPACITOR	
	CMP.....	METAL POLYESTER CAPACITOR	
	CMPL.....	METAL PLASTIC CAPACITOR	
	CMPP.....	METAL POLYPROPYLENE CAPACITOR	



# ELECTRICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△R410	AD302107	R3X18A470J	47 OHM 2W
R419	AD300784	R3X1811R2J	1.2 OHM 1W
△R426	BZ210030	R4X5T4472F	4.7K OHM 1/4W
△R434	BZ210259	R5Y2CF1R8J	1.8 OHM 10W
△R436	BZ210023	R4X5T4183F	18K OHM 1/4W
△R438	BZ210022	R6558A1R2J	1.2 OHM 2W
△R439	BZ210003	R3K181102J	1K OHM 1W
△R441	BZ210231	R4X5T6153F	15K OHM 1/6W
△R452	AD301385	R3X18A391J	390 OHM 2W
△R459	AD301595	R65582010J	1 OHM 1/2W
△R500	BZ210080	R0G3K2275K	2.7M OHM 1/2W
△R501	AD301596	R5X2AE010J	1 OHM 7W
△R502	BZ210249	R3X28A331J	330 OHM 2W
△R506	BZ210162	R002T4682J	6.8K OHM 1/4W
△R517	AD302108	R3X28BR39J	0.39 OHM 3W
△R520	BZ210206	R002T2155J	1.5M OHM 1/2W
△R527	BZ210149	R3X18AR68J	0.68 OHM 2W
△R541	BZ210190	R63581R22J	0.22 OHM 1W
△R542	BZ210248	R3X181R15J	0.15 OHM 1W
△R602	AD301975	R3X28B120J	12 OHM 3W
△R649	AD301975	R3X28B120J	12 OHM 3W
△R803	BZ210050	R3X18A123J	12K OHM 2W
△R805	BZ210050	R3X18A123J	12K OHM 2W
△R807	BZ210050	R3X18A123J	12K OHM 2W
<b>CAPACITORS</b>			
C408	BZ110032	E5EZF3102M	1000 UF 25V
△C412	AD301599	P4N8FJ272H	0.0027UF 1.25KV
C413	AD301977	E0ELF4102M	1000 UF 35V
C418	AE001019	P4J7F3434J	0.43 UF 250V PMS
△C420	AD300723	P4N8FJ153H	0.015 UF 1.25KV
C421	AD301600	P3N1F5223J	0.022 UF 630V
C425	BZ110182	C03L0R713K	0.001 UF 2KV R
C426	BZ110225	E5EZF0220M	22 UF 250V
△C430	BZ110195	E02LU8220M	22 UF 100V
C442	AD301601	E53FF56R8M	6.8 UF 50V NP
C501	BZ210176	E02LF3222M	2200 UF 25V
C502	BZ110182	C03L0R713K	0.001 UF 2KV R
C503	BZ110182	C03L0R713K	0.001 UF 2KV R
△C505	BZ110025	P2122B224M	0.22 UF 275V ECQUL
△C506	BZ110035	P2122B104M	0.1 UF 275V ECQUL
C507	BZ110012	E51CGC471M	470 UF 200V
△C508	BZ110222	CD39E0MH3M	0.0022UF 250V
△C513	AD301026	CD39E0M13M	0.001 UF 250V
C517	BZ110191	C03L0R7E3K	0.0015UF 2KV R
△C519	AD301026	CD39E0M13M	0.001 UF 250V
C521	BZ110228	E62NFB221M	220 UF 160V
C527	BZ110119	E02LF2222M	2200 UF 16V
C535	BZ110182	C03L0R713K	0.001 UF 2KV R
C646	AD301321	CQG0CH412J	100 PF 50V CH
C802	BZ110247	C0JBB0713K	0.001 UF 2KV B
C1003	BZ210176	E02LF3222M	2200 UF 25V
C1004	BZ110053	E02LF3102M	1000 UF 25V
C1009	BZ110053	E02LF3102M	1000 UF 25V
<b>DIODES</b>			
D001	BZ410037	D97U03301B	MTZJ33B T-77
D104	BZ410006	D1VT001330	1SS133T-77
D105	BZ410006	D1VT001330	1SS133T-77
D106	BZ410020	D97U05R11B	MTZJ5.1B T-77
D109	BZ410054	0021721150	SLR-342VCT32
D113	BZ410021	D97U05R61B	MTZJ5.6B T-77
D402	BZ410043	D2WT011E10	11E1-EIC
D403	BZ410019	D97U03001B	MTZJ30B T-77
D404	BZ410020	D97U05R11B	MTZJ5.1B T-77
D405	BZ410063	D2WTAU02A0	AU02A-EIC
△D406	BZ410021	D97U05R61B	MTZJ5.6B T-77
D407	BZ410063	D2WTAU02A0	AU02A-EIC
D408	AD302110	D2CF0715L0	ERD07-15L50
D409	AD301980	D2CF2016L0	FE201-6L49
D410	BZ410019	D97U03001B	MTZJ30B T-77
△D411	BZ410063	D2WTAU02A0	AU02A-EIC
D414	BZ410043	D2WT011E10	11E1-EIC

# ELECTRICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D415	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D416	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D417	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D419	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△D501	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D502	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D503	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△D504	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D505	BZ410111	D28F30DF60	DIODE,RECTIFIER 30DF6-FC
D506	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D507	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D508	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D509	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D510	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
D511	AD300731	D2WXN49370	DIODE,SILICON 1N4937
D512	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D513	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D514	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D516	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D517	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D520	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D523	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D524	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D525	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D601	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D602	BZ410058	D97U08R21B	DIODE,ZENER MTZJ8.2B T-77
D603	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D604	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D605	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D606	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D607	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D608	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D701	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D702	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D703	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D704	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D705	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D706	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D709	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D810	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D811	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D812	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
<b>ICS</b>			
IC101	AD301981	I56F07090A	IC OEC7090A
IC199	AD302089	A3N401M015	INIT DATA
IC302	AD301983	I01FF58910	IC AN5891SA-E1V
IC401	BZ611117	I03TD80410	IC LA78041
△IC504	BZ410088	0002E00610	PHOTO COUPLER LTV-817M-VB
IC601	AE002803	I06FC1283A	IC M61283FP R70T
IC701	AD301988	I0UF015010	IC MM1501XNRE
IC702	AD301988	I0UF015010	IC MM1501XNRE
IC902	BZ611068	I01FF58290	IC AN5829S
△IC1001	AE003081	I0FSP7808B	IC AN17808B
IC1501	AE003002	I03FE76605	IC LA76605M-TLM
IC1502	AD301988	I0UF015010	IC MM1501XNRE
IC1503	AD301988	I0UF015010	IC MM1501XNRE
<b>TRANSISTORS</b>			
Q101	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q103	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q402	BZ510097	TCAT03227Y	TRANSISTOR,SILICON KTC3227_Y-AT
Q405	BZ510040	TDUU024990	TRANSISTOR,SILICON 2SD2499(LB0EC1)
Q408	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q409	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q410	BZ510110	TC30041590	TRANSISTOR,SILICON 2SC4159(D,E)
Q411	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q502	BZ510098	T220033260	FET 2SK3326(2)
Q503	BZ510005	TA3T1371A0	TRANSISTOR,SILICON 2SA1371(D,E)-AE

# ELECTRICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q505	BZ510011	TC3T029090	TRANSISTOR,SILICON 2SC2909(S,T)-AA
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q508	BZ510077	TAAT012714	TRANSISTOR,SILICON KTA1271_Y-AT
Q509	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q512	BZ510004	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
Q514	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q601	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q602	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q603	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q604	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q605	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q606	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q607	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q611	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q614	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q709	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q711	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q712	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
△Q801	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q802	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q803	BZ510100	TCATC3199Y	TRANSISTOR,SILICON KTC3199_Y-AT
△Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△Q805	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
△Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON KTC4217(O,Y)
Q901	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q902	BZ510108	TAAA1504SY	TRANSISTOR,SILICON KTA1504S_Y_RTK
Q1001	BZ510068	TNAAJ05003	COMPOUND TRANSISTOR KRC111SR TK
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1504	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1507	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
Q1508	BZ510109	TCAA3875SY	TRANSISTOR,SILICON KTC3875S_Y_RTK
<b>COILS &amp; TRANSFORMERS</b>			
L301	BZ310041	02167F101J	COIL 100 UH
L402	BZ310187	022100034A	COIL,LINEARITY ELH5L4132N
L403	AD301606	02DK000058	COIL,CHOKE 02DK000058
△L501	AD301124	029T000101	COIL,LINE FILTER 2R2A752F28Y
△L503	AD301607	028R270010	COIL,DEGAUSS 8R270010
L901	BZ310041	02167F101J	COIL 100 UH
L1501	BZ310041	02167F101J	COIL 100 UH
L1502	AD301417	02167F221J	COIL 220 UH
L1503	AD301417	02167F221J	COIL 220 UH
L1505	AD300613	02167F150J	COIL 15 UH
L1508	BZ310041	02167F101J	COIL 100 UH
L1510	AD300613	02167F150J	COIL 15 UH
L1511	AD300613	02167F150J	COIL 15 UH
L1512	AD301608	0216A6220J	COIL 22 UH
T401	BZ310189	0450190161	TRANS,HORIZONTAL DRIVE ETH19Y203AY
△T501	AD301034	048140066S	TRANSFORMER,SWITCHING 8140066S
<b>JACKS</b>			
J701	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J702	AD300108	063Q700002	JACK YKF51-5503
J703	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
J704	AD301037	060J411024	RCA JACK MSP-213V1-652 PBSN
J705	AD300110	060G401047	RCA JACK HTJ-032-03AY
J706	AD300111	060G401046	RCA JACK HTJ-032-03AW
J707	AD300112	060G401039	RCA JACK HTJ-032-03AR
J708	AD301038	060J431019	RCA JACK MSP-213V2-432 PBSN
△J801	AD301356	066F130020	SOCKET,CATHODE RAY,TUBE ISHS53S
<b>SWITCHES</b>			
SW101	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
<b>VARIABLE RESISTORS</b>			
VR401	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED NVG6TLTAB222
VR502	BZ210101	V1163H4BTC	VOLUME,SEMI FIXED EVNCYAA03BE4
<b>P.C.BOARD ASSEMBLIES</b>			
PCB010	AE003362	A3N429N010	PCB ASS'Y TMC559D
PCB110	AE003346	A3N425N110	PCB ASS'Y TCC421D

# ELECTRICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description
MISCELLANEOUS			
B403	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B405	BZ310129	024HT03564	CORE,BEADS W4BRH3.5X6X1.0
B501	BZ310045	024AT03481	CORE,BEADS BL02RN1-R62T2
B504	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN R03(AB)E_2P_G
△CD501	AD300746	120R615901	CORD,AC BUSH 0R615901
CD801	BZ614385	WCL6838038	FLAT CABLE AWM2468 A WG26 5C GRAY 380MM
CD802	AD302116	WEL6852038	FLAT CABLE AWM2468 A WG26 7C GRAY 520MM
CD803	BZ614378	06CU823001	CORD,CONNECTOR CU823001
CP101	BZ614102	0694270139	CONNECTOR PCB SIDE 173979-7
CP401	BZ614240	069X460029	CONNECTOR PCB SIDE B06B-DVS
CP501	BZ614176	069S320419	CONNECTOR PCB SIDE A3963WV2-3PD
CP502	BZ614283	069S420110	CONNECTOR PCB SIDE A1561WV2-2P
CP507	BZ614016	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP508	BZ614016	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP803	BZ614269	069S320010	CONNECTOR PCB SIDE A2361WV2-2P
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE A2502WV2-4P
CP801A	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP801B	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP802A	AD301997	067U007029	WIRE HOLDER B2013H02-7P
CP802B	AD301997	067U007029	WIRE HOLDER B2013H02-7P
EL001	BZ614044	124120301A	EYE LET XRY20X30BD
EL002	BZ614043	124116281A	EYE LET XRY16X28BD
△F501	BZ614422	081PC6R305	FUSE 51MS063L
△FB401	AE003347	043227016F	TRANSFORMER,FLYBACK FJN27A003_M
FH501	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
OS101	AD301048	0773071001	REMOTE RECEIVER RPM7138-WH5
△RY501	BZ612009	0560V20115	RELAY ALKS321
SP1001	AD302092	070Y435008	SPEAKER S0509F12-G
△TH501	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
TM101	AD302093	076N0GQ010	TRANSMITTER RC-GQ010
△TU001	AE000273	0163300005	RF UNIT 115-V-K015AR_B
△V801	AD301614	0981270B01	CRT W/DY M68LWF088X
X101	AD302002	100CT8R005	CRYSTAL HC-49/U-S
X602	BZ613004	100CT3R505	CRYSTAL HC-49/C
RESISTOR			
	RC.....	CARBON RESISTOR	
CAPACITORS			
	CC.....	CERAMIC CAPACITOR	
	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
	CP.....	POLYESTER CAPACITOR	
	CPP.....	POLYPROPYLENE CAPACITOR	
	CPL.....	PLASTIC CAPACITOR	
	CMP.....	METAL POLYESTER CAPACITOR	
	CMPL.....	METAL PLASTIC CAPACITOR	
	CMPP.....	METAL POLYPROPYLENE CAPACITOR	

# **TOSHIBA CORPORATION**

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN