


Service Manual

Pioneer

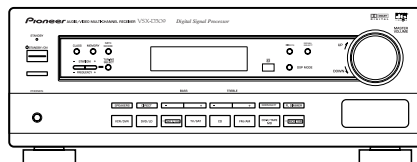

ORDER NO.
RRV2252

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D409 VSX-D309

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Type | Model | | Power Requirement | Remarks |
|-------|----------|----------|-------------------|---------|
| | VSX-D409 | VSX-D309 | | |
| KUXJI | ○ | ○ | AC120V | |
| KCXJI | ○ | ○ | AC120V | |

CONTENTS

| | | | |
|--|----|--|----|
| 1. SAFETY INFORMATION | 2 | 7. GENERAL INFORMATION | 48 |
| 2. EXPLODED VIEWS AND PARTS LIST | 3 | 7.1 DISASSEMBLY | 48 |
| 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM | 8 | 7.2 PARTS | 49 |
| 4. PCB CONNECTION DIAGRAM | 26 | 7.2.1 IC | 49 |
| 5. PCB PARTS LIST | 39 | 7.2.2 DISPLAY | 54 |
| 6. ADJUSTMENT | 47 | 8. PANEL FACILITIES AND SPECIFICATIONS | 56 |

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS SERVICE, INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE N.V. Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
 © PIONEER CORPORATION 2000

T – ZZK JAN. 2000 Printed in Japan

1. SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.


WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65



NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols  (fast operating fuse) and/or  (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible  (fusible de type rapide) et/ou  (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

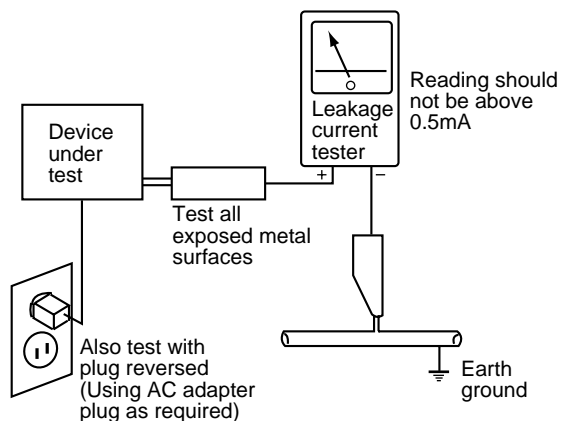

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.


The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to ∇ mark on the product are used for disassembly.

2.1 PACKING

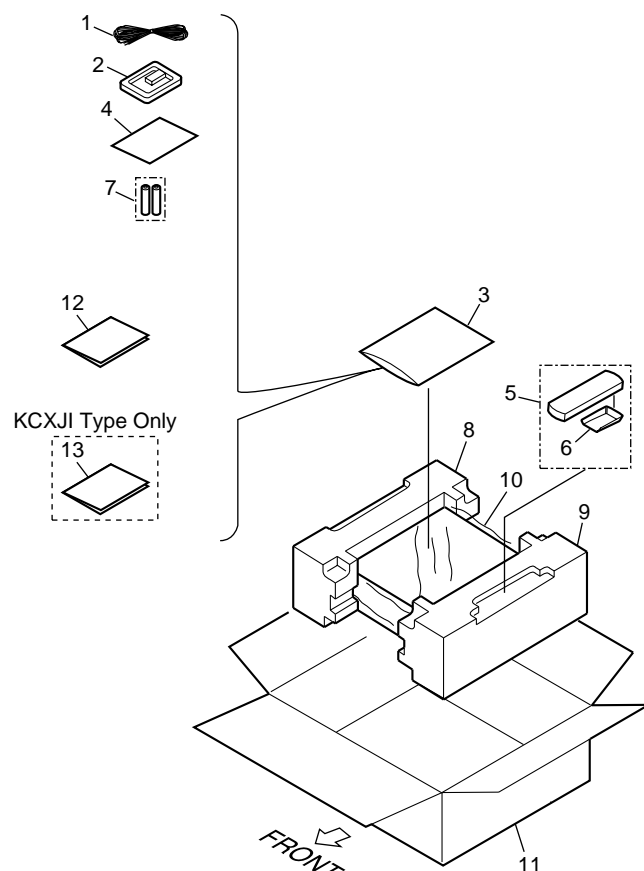

(1) PACKING PARTS LIST


| Mark | No. | Description | Part No. |
|------|-----|--|------------------------|
| | 1 | FM Wire Antenna | ADH7004 |
| | 2 | AM Loop Antenna | ATB7009 |
| | 3 | Polyethylene Bag (0.03 × 230 × 340) | Z21-038 |
| NSP | 4 | Warranty Card | See Contrast table (2) |
| | 5 | Remote Control Unit | AXD7246 |
| NSP | 6 | Battery Cover | AZA7378 |
| | 7 | Dry Cell Battery (R6P, AA) | VEM-013 |
| | 8 | Left Pad | AHA7275 |
| | 9 | Right Pad | AHA7276 |
| | 10 | Packing Sheet | AHG7069 |
| | 11 | Packing Case | See Contrast table (2) |
| | 12 | Operating Instructions (English) | See Contrast table (2) |
| | 13 | Operating Instructions (French) | See Contrast table (2) |

(2) CONTRAST TABLE

VSX-D409/KUXJI, KCXJI, VSX-D309/KUXJI and KCXJI are constructed the same except for the following :

| Mark | No. | Symbol and Description | Part No. | | | | Remarks |
|------|-----|----------------------------------|--------------------|--------------------|--------------------|--------------------|---------|
| | | | VSX-D409 /KUXJI | VSX-D409 /KCXJI | VSX-D309 /KUXJI | VSX-D309 /KCXJI | |
| NSP | 4 | Warranty Card | ARY7023 | ARY7024 | ARY7023 | ARY7024 | |
| | 11 | Packing Case | AHD7823 | AHD7823 | AHD7822 | AHD7822 | |
| | 12 | Operating Instructions (English) | ARB7219 | ARB7219 | ARB7214 | ARB7214 | |
| | 13 | Operating Instructions (French) | Not used | ARC7289 | Not used | ARC7272 | |

2.2 EXTERIOR SECTION

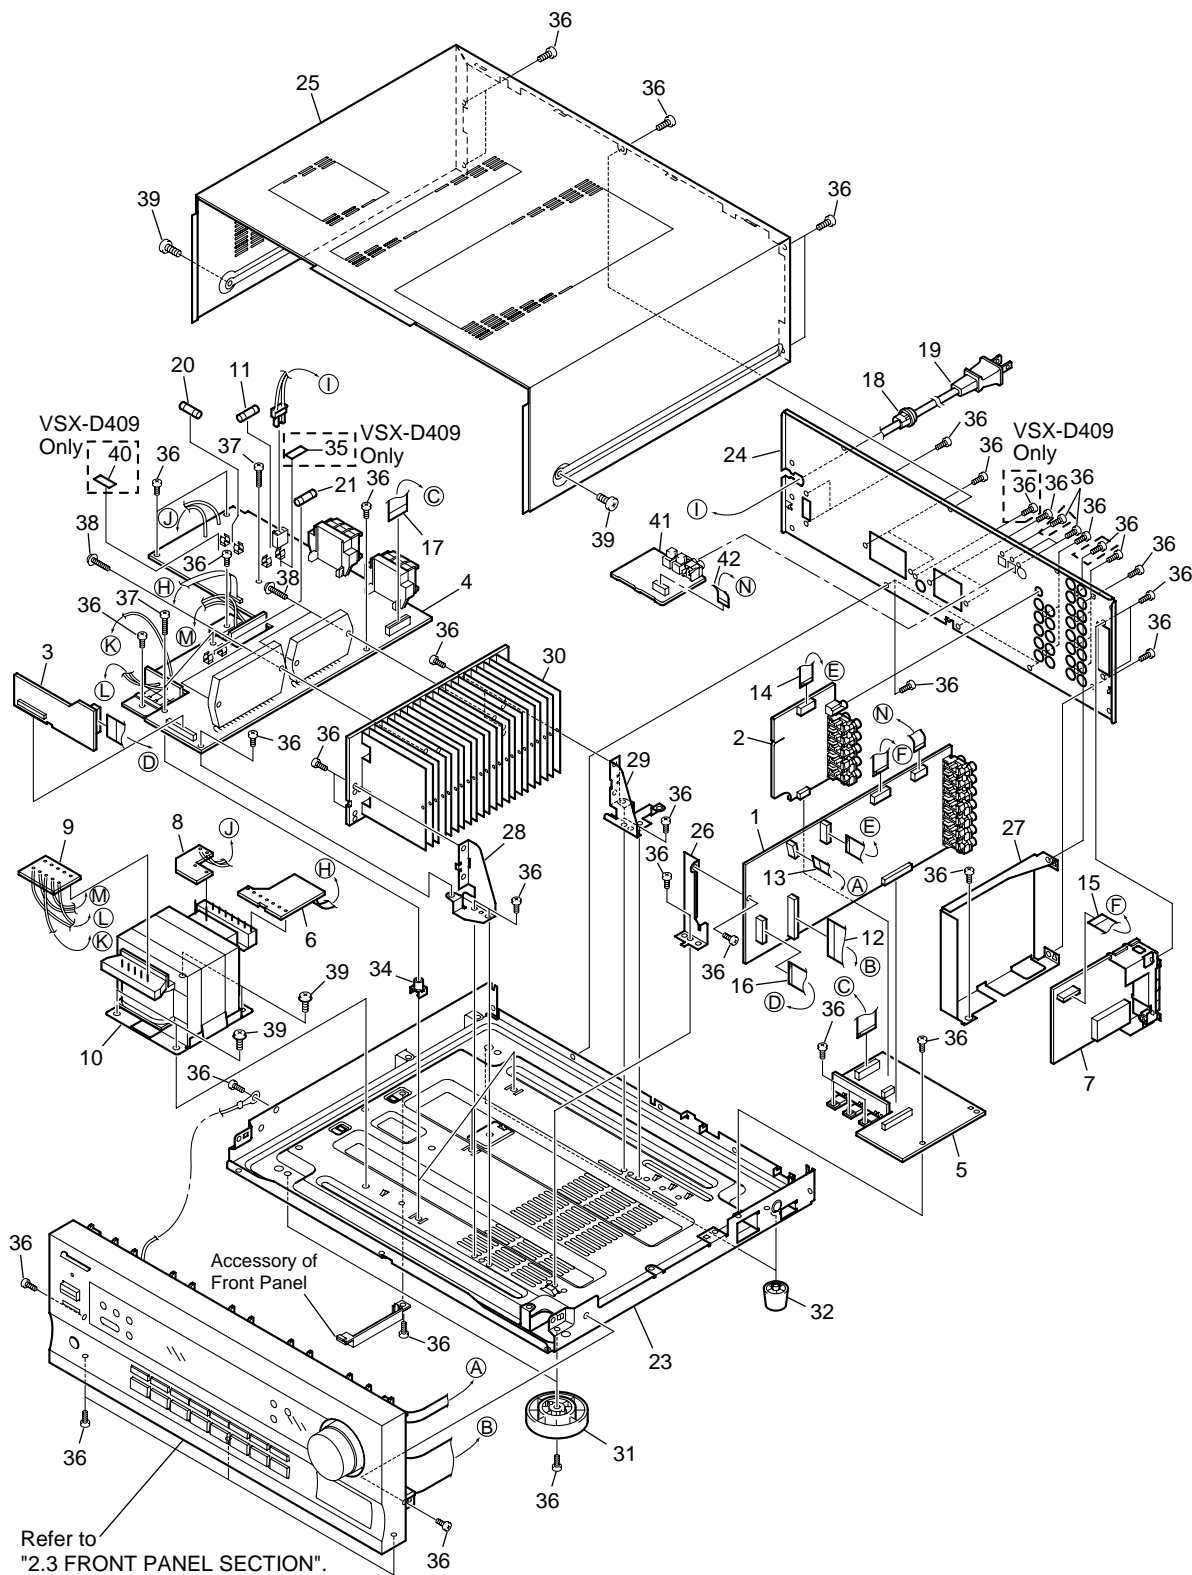

(1) EXTERIOR SECTION PARTS LIST


| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------|-----|--|------------------------|-------|-----|---|------------------------|
| NSP | 1 | D.D & INPUT Assy | See Contrast table (2) | △ | 21 | Fuse (FU701 : 10A) | REK1087 |
| | 2 | VIDEO&6CH IN Assy | AWX7474 | ••••• | 22 | | |
| | 3 | AMP INPUT Assy | AWX7382 | NSP | 23 | Under Base 409 | ANA7094 |
| | 4 | AMP&PRIMARY Assy | See Contrast table (2) | | 24 | Rear Panel | See Contrast table (2) |
| | 5 | REGULATOR Assy | See Contrast table (2) | | 25 | Bonnet Case | AZN7818 |
| NSP | 6 | TRANS 2 Assy | AWX7468 | | 26 | PCB Angle | ANG7253 |
| | 7 | FM/AM TUNER Unit | AXX7046 | | 27 | Shield R3 | ANG7277 |
| | 8 | TRANS 1 Assy | AWX7390 | | 28 | Heat Sink Angle F | ANG7251 |
| NSP | 9 | TRANS 3 Assy | AWX7392 | | 29 | Heat Sink Angle R | ANG7252 |
| △ | 10 | Power Transformer (AC120V) | See Contrast table (2) | NSP | 30 | Heat Sink 0.4 | See Contrast table (2) |
| △ | 11 | Fuse (FU1) | See Contrast table (2) | | 31 | Insulator | AMR7198 |
| | 12 | FFC (J31 : 32P/180 BD 60V) (D.D & INPUT CN102 ↔ FRONT CN402) | ADD7222 | | 32 | Foot Assy | REC1263 |
| | 13 | FFC (J32 : 19P/200 BD 60V) (D.D & INPUT CN103 ↔ FRONT CN401) | ADD7221 | | 33 | ••••• | |
| | 14 | FFC (J33 : 13P/200 BD 60V) (D.D & INPUT CN104 ↔ VIDEO&6CH IN CN303) | ADD7220 | NSP | 34 | PCB Mold | AMR2533 |
| | 15 | FFC (J34 : 13P/80 BD 60V) (D.D & INPUT CN105 ↔ FM/AM TUNER CN1) | ADD7189 | | 35 | Fuse Card | See Contrast table (2) |
| | 16 | FFC (J35 : 17P/90 BD 60V) (D.D & INPUT CN106 ↔ AMP INPUT CN290) | ADD7219 | | 36 | Screw | BBZ30P080FMC |
| | 17 | FFC (J36 : 22P/80 BD 60V) (REGULATOR CN801 ↔ AMP&PRIMARY CN53) | ADD7224 | | 37 | Screw | BBZ30P200FMC |
| | 18 | Strain Relief | CM-22C | | 38 | Screw | ABA7043 |
| △ | 19 | AC Power Cord | ADG7024 | | 39 | Screw | FBT40P080FZK |
| △ | 20 | Fuse (FU2) | See Contrast table (2) | NSP | 40 | Fuse Card | See Contrast table (2) |
| | | | | | 41 | DIGITAL IN Assy | See Contrast table (2) |
| | | | | | 42 | FFC (J37 : 6P/150 BD 60V) (D.D & INPUT CN1501 ↔ DIGITAL IN CN1901) | ADD7223 |

(2) CONTRAST TABLE

VSX-D409/KUXJI, KCXJI, VSX-D309/KUXJI and KCXJI are constructed the same except for the following :

| Mark | No. | Symbol and Description | Part No. | | | | Remarks |
|------|-----|----------------------------|--------------------|--------------------|--------------------|--------------------|---------|
| | | | VSX-D409 /KUXJI | VSX-D409 /KCXJI | VSX-D309 /KUXJI | VSX-D309 /KCXJI | |
| △ | 1 | D.D & INPUT Assy | AWX7649 | AWX7649 | AWX7494 | AWX7494 | |
| | 4 | AMP&PRIMARY Assy | AWX7480 | AWX7480 | AWX7506 | AWX7506 | |
| | 5 | REGULATOR Assy | AWX7467 | AWX7467 | AWX7493 | AWX7493 | |
| | 10 | Power Transformer (AC120V) | ATS7264 | ATS7264 | ATS7263 | ATS7263 | |
| | 11 | Fuse (FU1 : 10A) | REK1087 | REK1087 | Not used | Not used | |
| △ | 11 | Fuse (FU1 : 6.3A) | Not used | Not used | REK1069 | REK1069 | |
| △ | 20 | Fuse (FU2 : 8A) | REK1086 | REK1086 | Not used | Not used | |
| △ | 20 | Fuse (FU2 : 5A) | Not used | Not used | REK1067 | REK1067 | |
| NSP | 24 | Rear Panel | ANC7887 | ANC7886 | ANC7884 | ANC7885 | |
| | 30 | Heat Sink 0.4 | ANH7109 | ANH7109 | Not used | Not used | |
| | 30 | Heat Sink 0.4*50 | Not used | Not used | ANH7123 | ANH7123 | |
| NSP | 35 | Fuse Card | AXX7096 | AXX7096 | Not used | Not used | |
| NSP | 40 | Fuse Card | AXX2332 | AXX2332 | Not used | Not used | |
| | 41 | DIGITAL IN Assy | AWX7505 | AWX7505 | AWX7476 | AWX7476 | |

2.3 FRONT PANEL SECTION

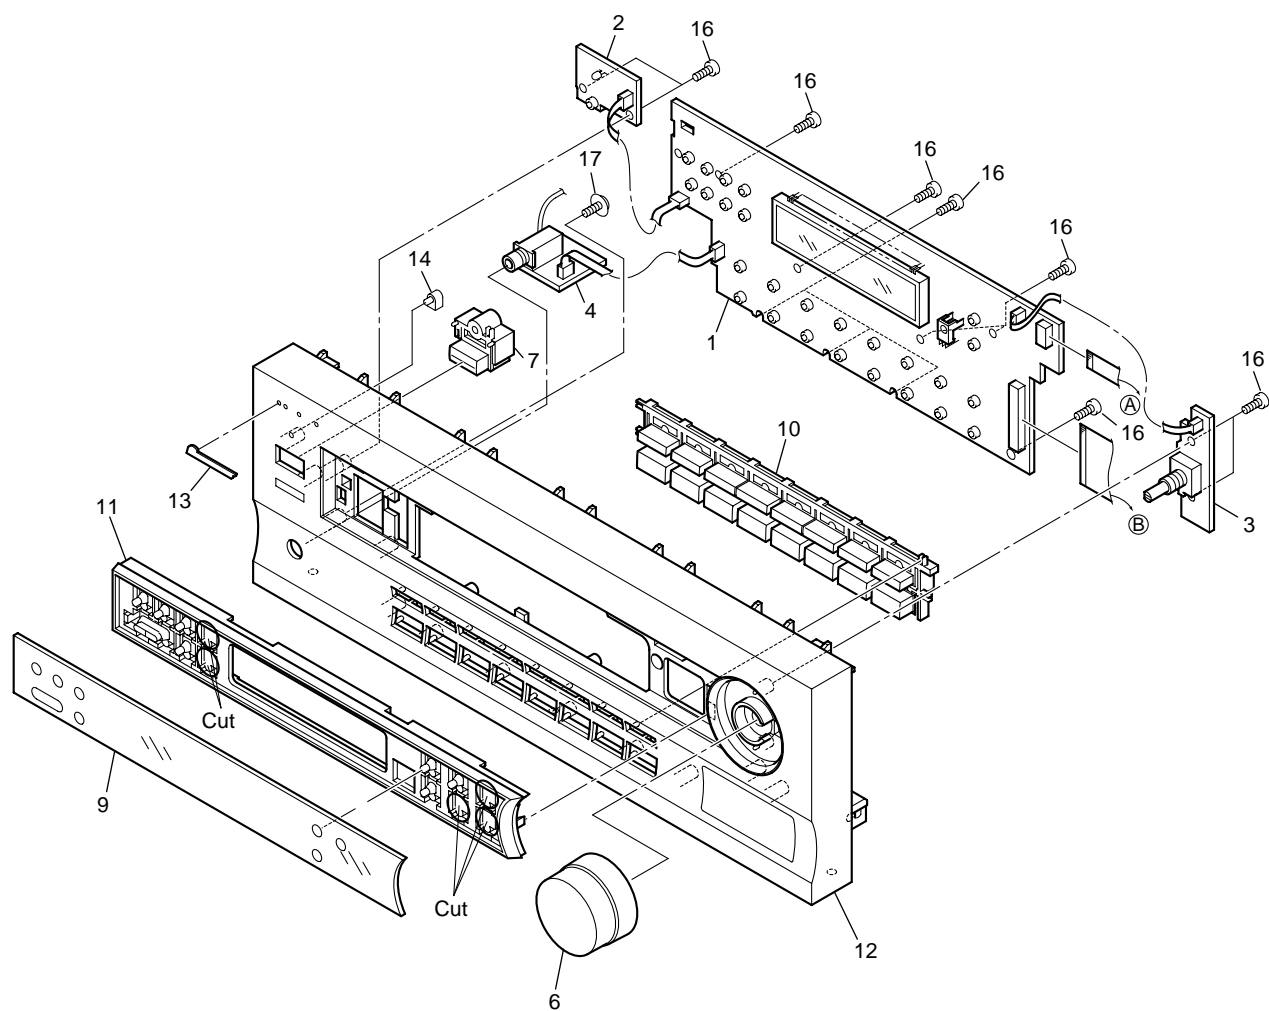

(1) FRONT PANEL SECTION PARTS LIST

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------------|-----|-----------------|------------------------|------|-----|-------------|------------------------|
| NSP NSP | 1 | FRONT Assy | See Contrast table (2) | | 11 | Sub Panel | AAD7552 |
| | 2 | POWER SW Assy | AWX7385 | | 12 | F Panel | See Contrast table (2) |
| | 3 | R. ENCODER Assy | AWX7386 | | 13 | Name Plate | PAM1776 |
| | 4 | H.P. Assy | AWX7556 | | 14 | LED Lens | PNW2019 |
| | 5 | ••••• | | | 15 | ••••• | |
| | 6 | Volume Knob | AAB7179 | | 16 | Screw | PPZ30P080FMC |
| | 7 | Power Button | AAD7440 | | 17 | Screw | ABA7009 |
| | 8 | ••••• | | | | | |
| | 9 | Window | AAK7719 | | | | |
| | 10 | F Button | See Contrast table (2) | | | | |


(2) CONTRAST TABLE

VSX-D409/KUXJI, KCXJI, VSX-D309/KUXJI and KCXJI are constructed the same except for the following :

| Mark | No. | Symbol and Description | Part No. | | | | Remarks |
|------|-----|------------------------|--------------------|--------------------|--------------------|--------------------|---------|
| | | | VSX-D409 /KUXJI | VSX-D409 /KCXJI | VSX-D309 /KUXJI | VSX-D309 /KCXJI | |
| | 1 | FRONT Assy | AWX7479 | AWX7479 | AWX7475 | AWX7475 | |
| | 10 | F Button | AAD7562 | AAD7562 | AAD7561 | AAD7561 | |
| | 12 | F Panel | AMB7663 | AMB7663 | AMB7661 | AMB7661 | |


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

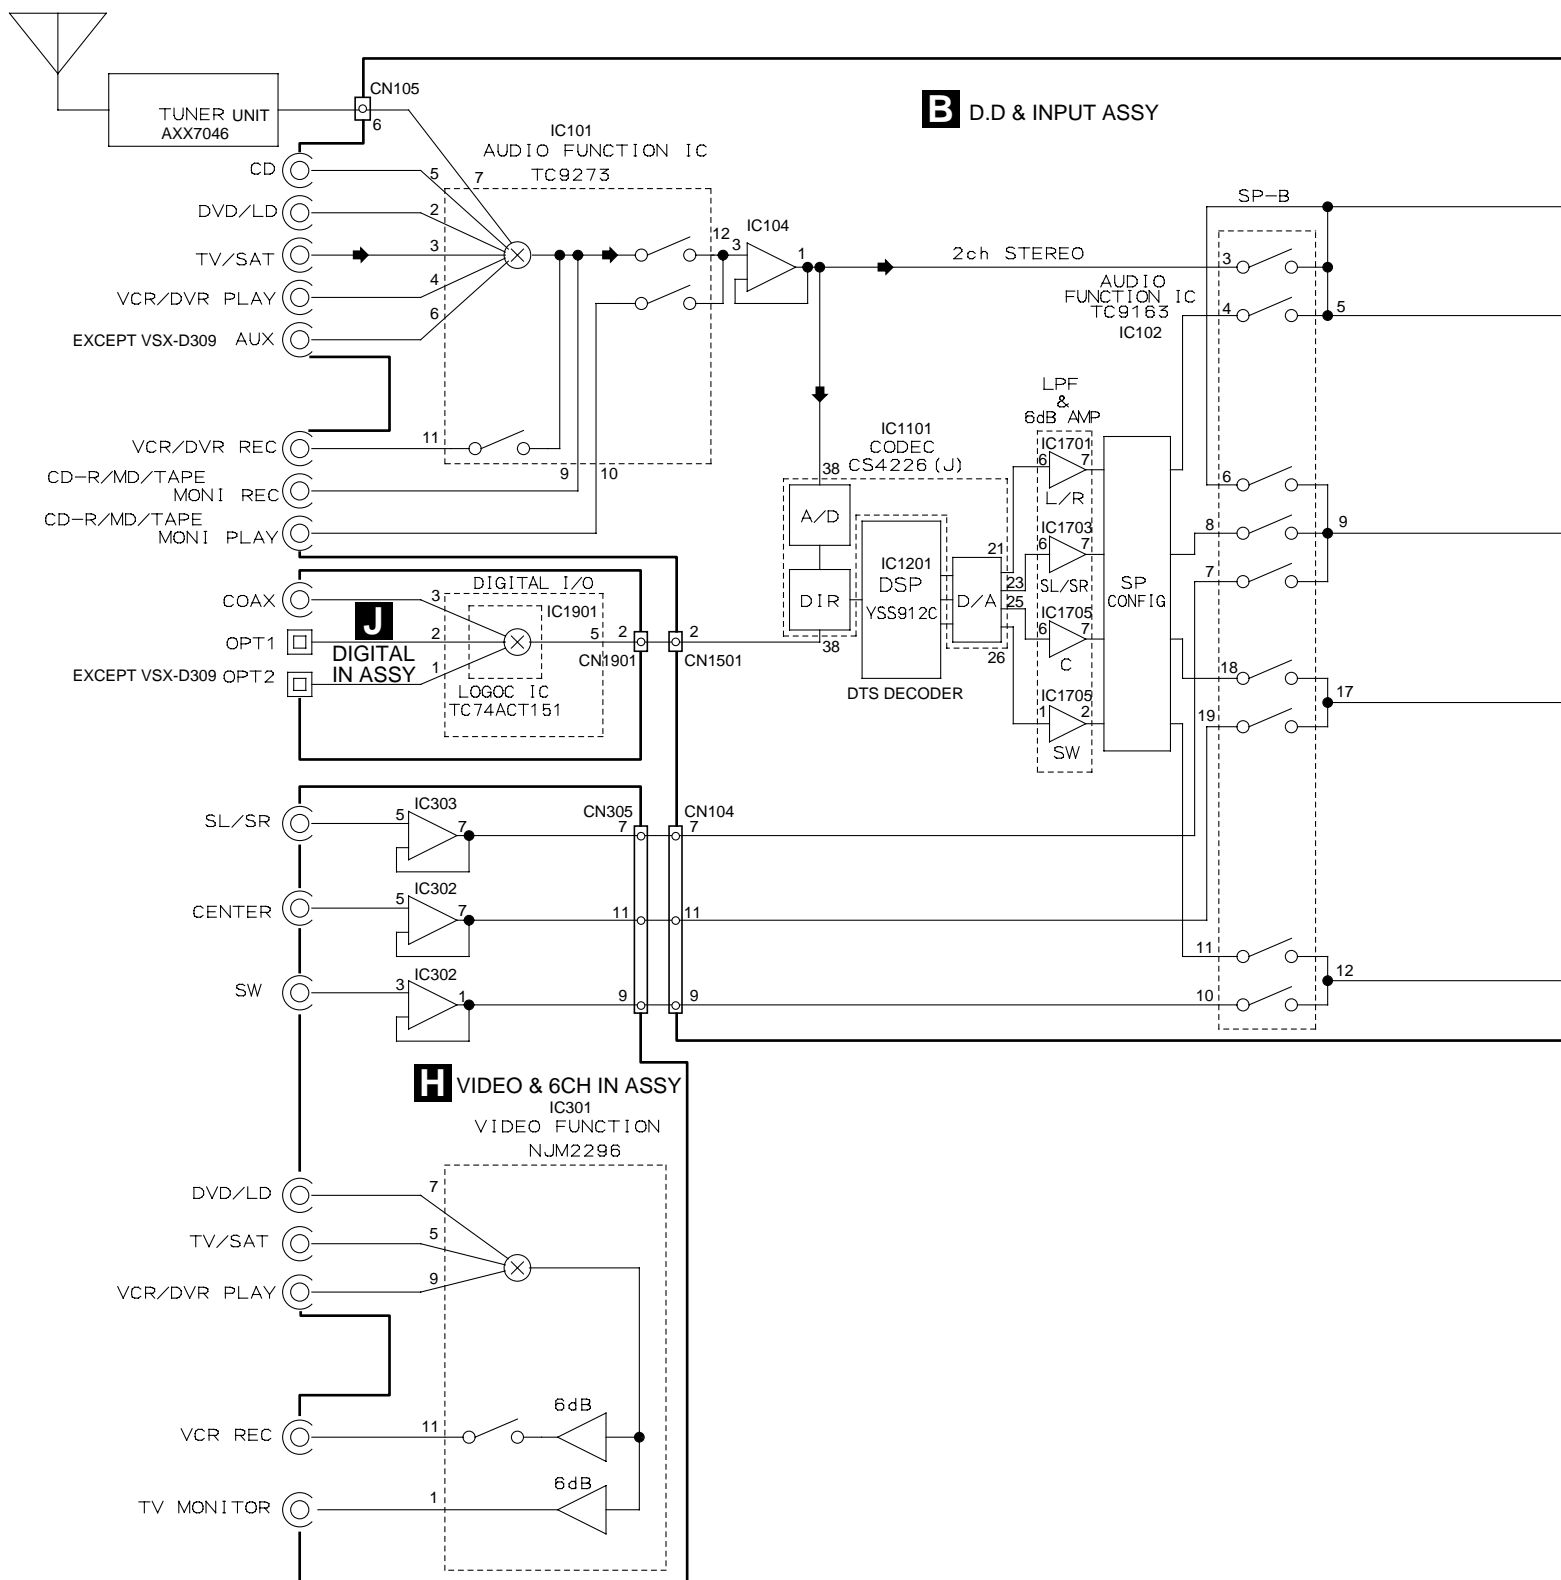




3.2 OVERALL WIRING CONNECTION DIAGRAM and AMP INPUT ASSY

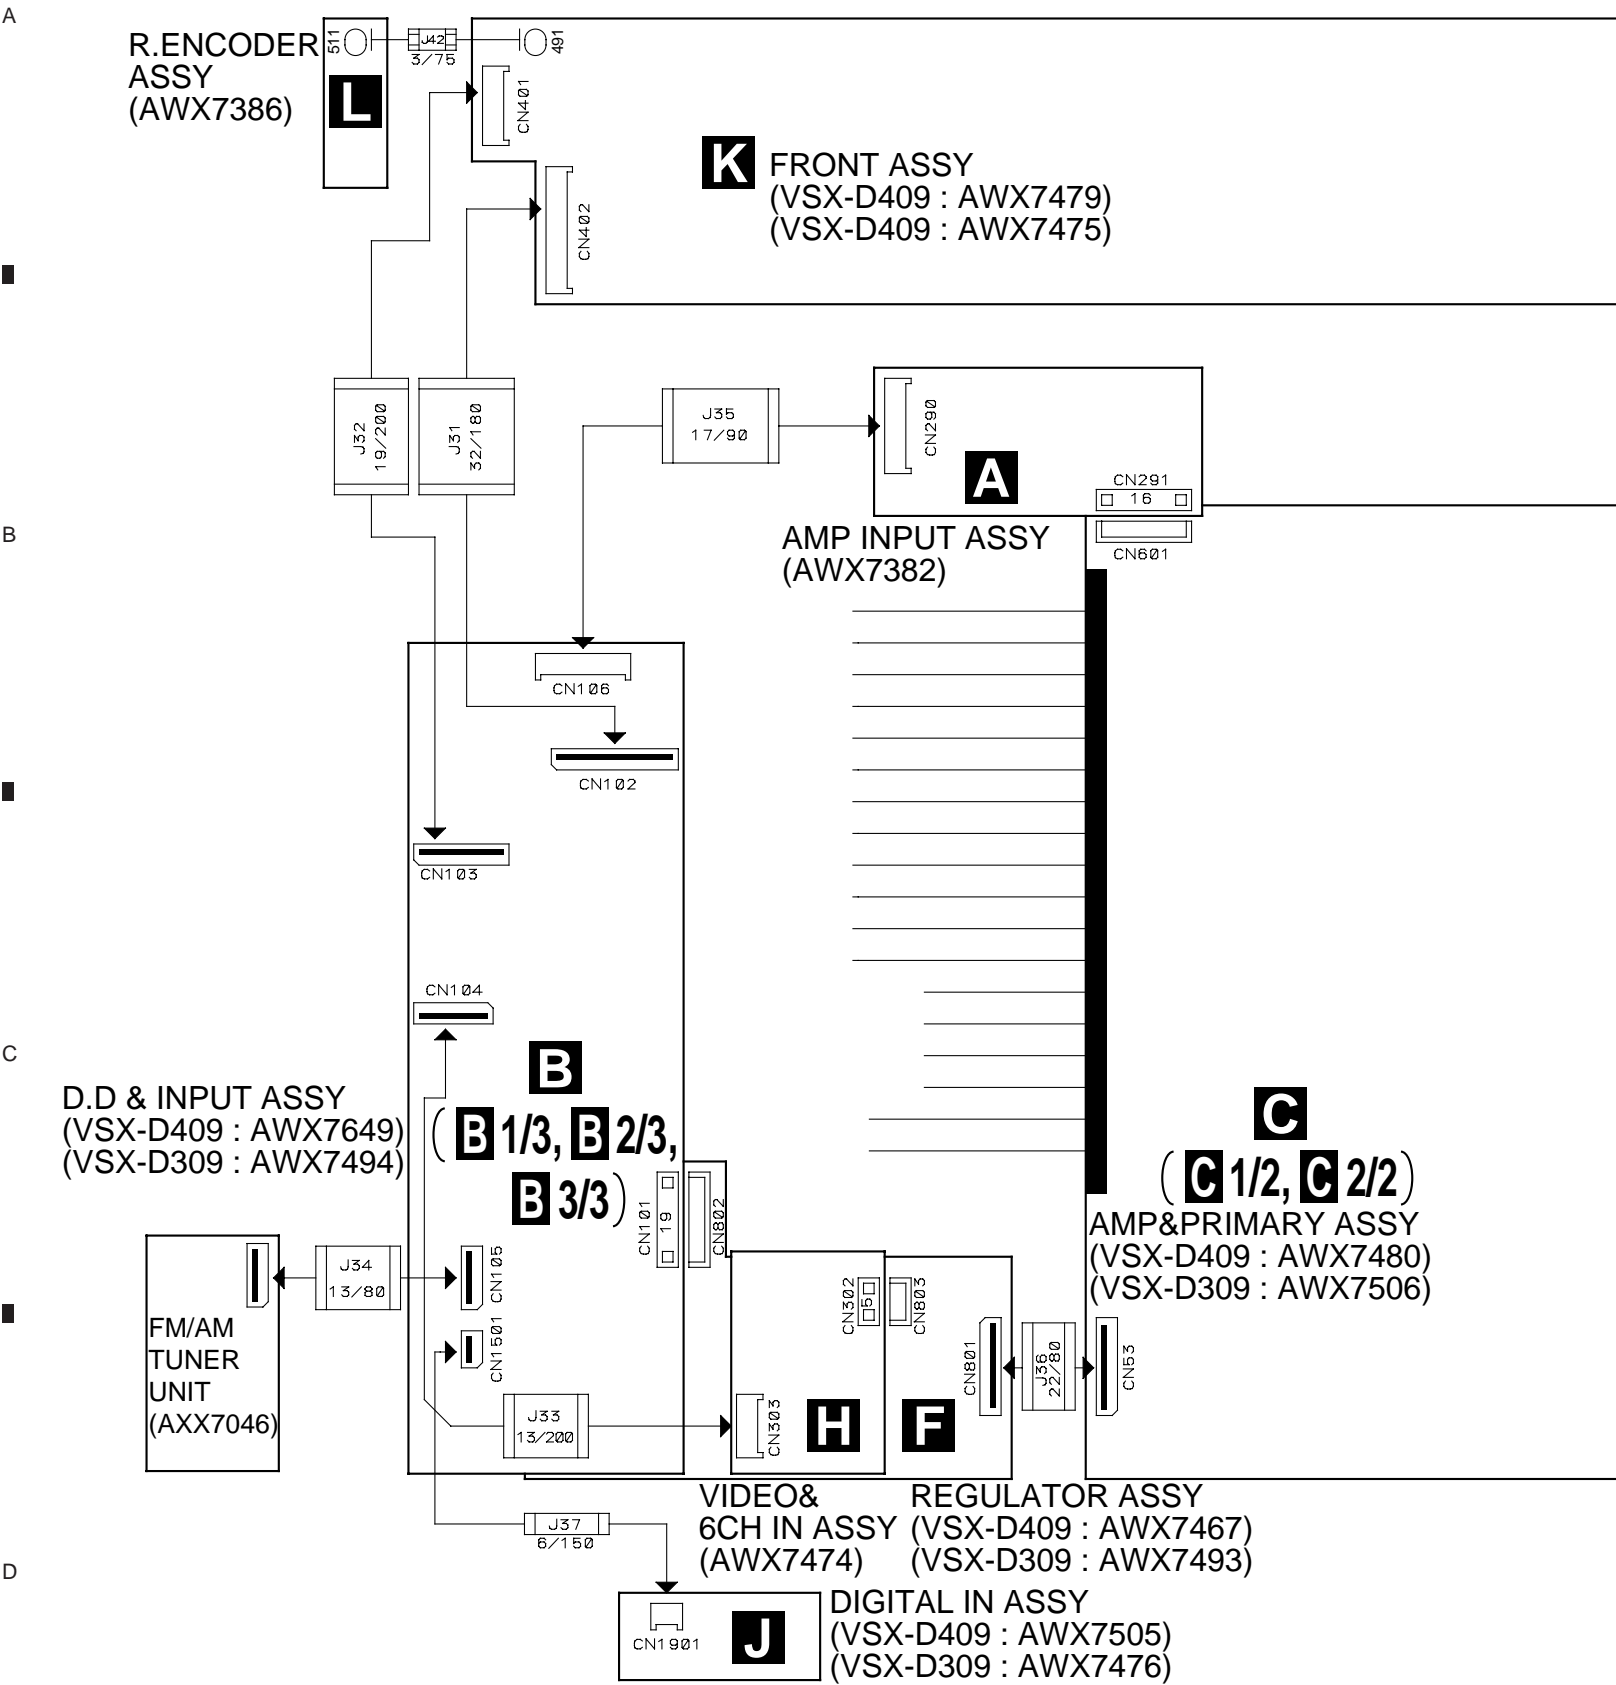


Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

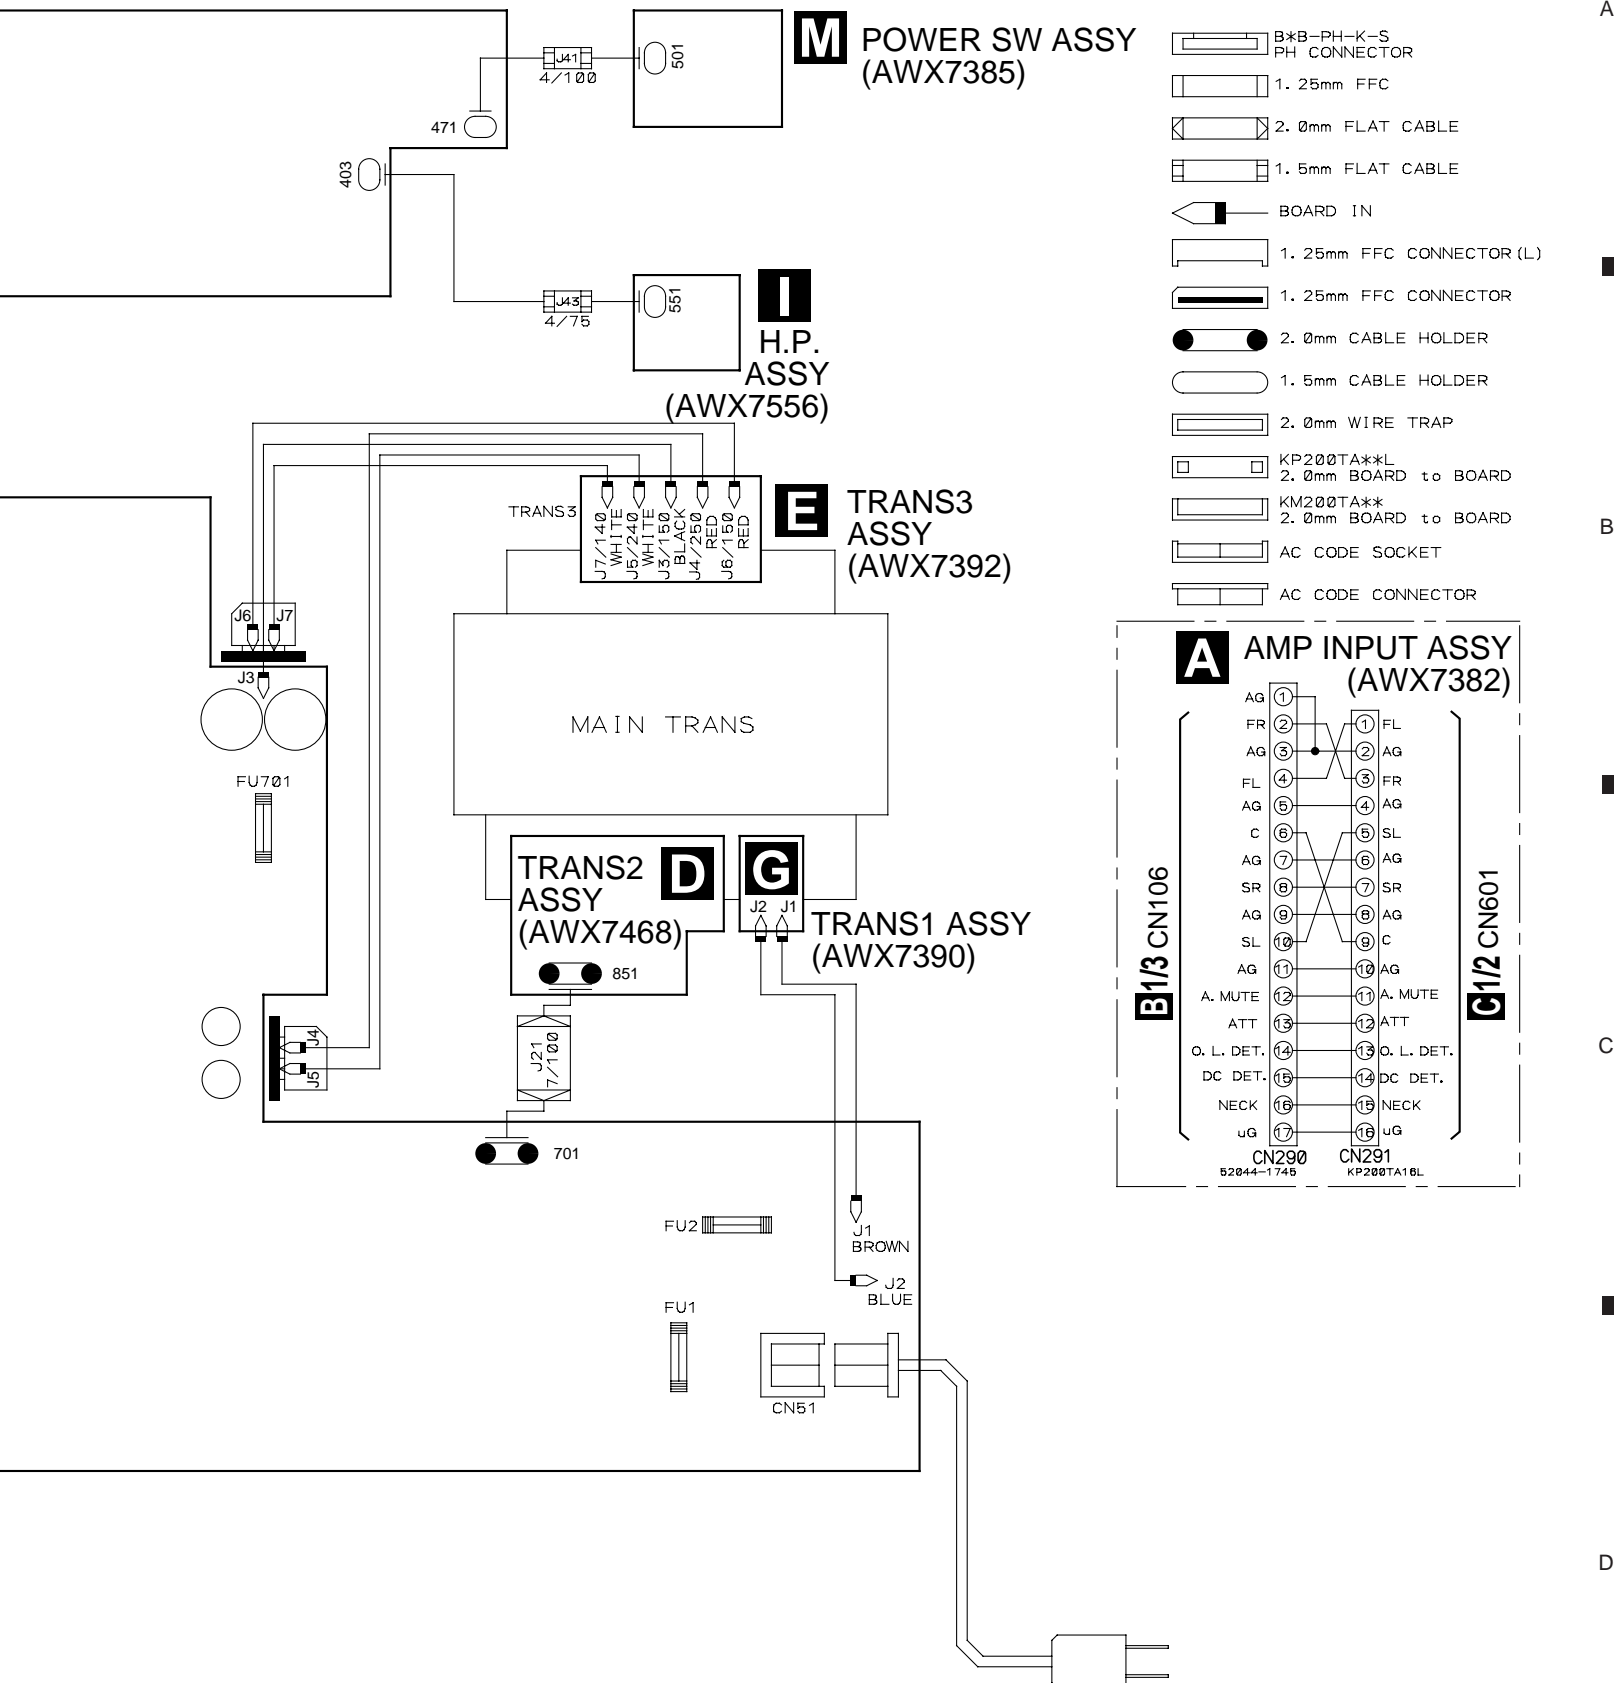

3.3 D.D & INPUT (1/3) ASSY


B 1/3 D.D & INPUT ASSY
(VSX-D409 : AWX7649)
(VSX-D309 : AWX7494)

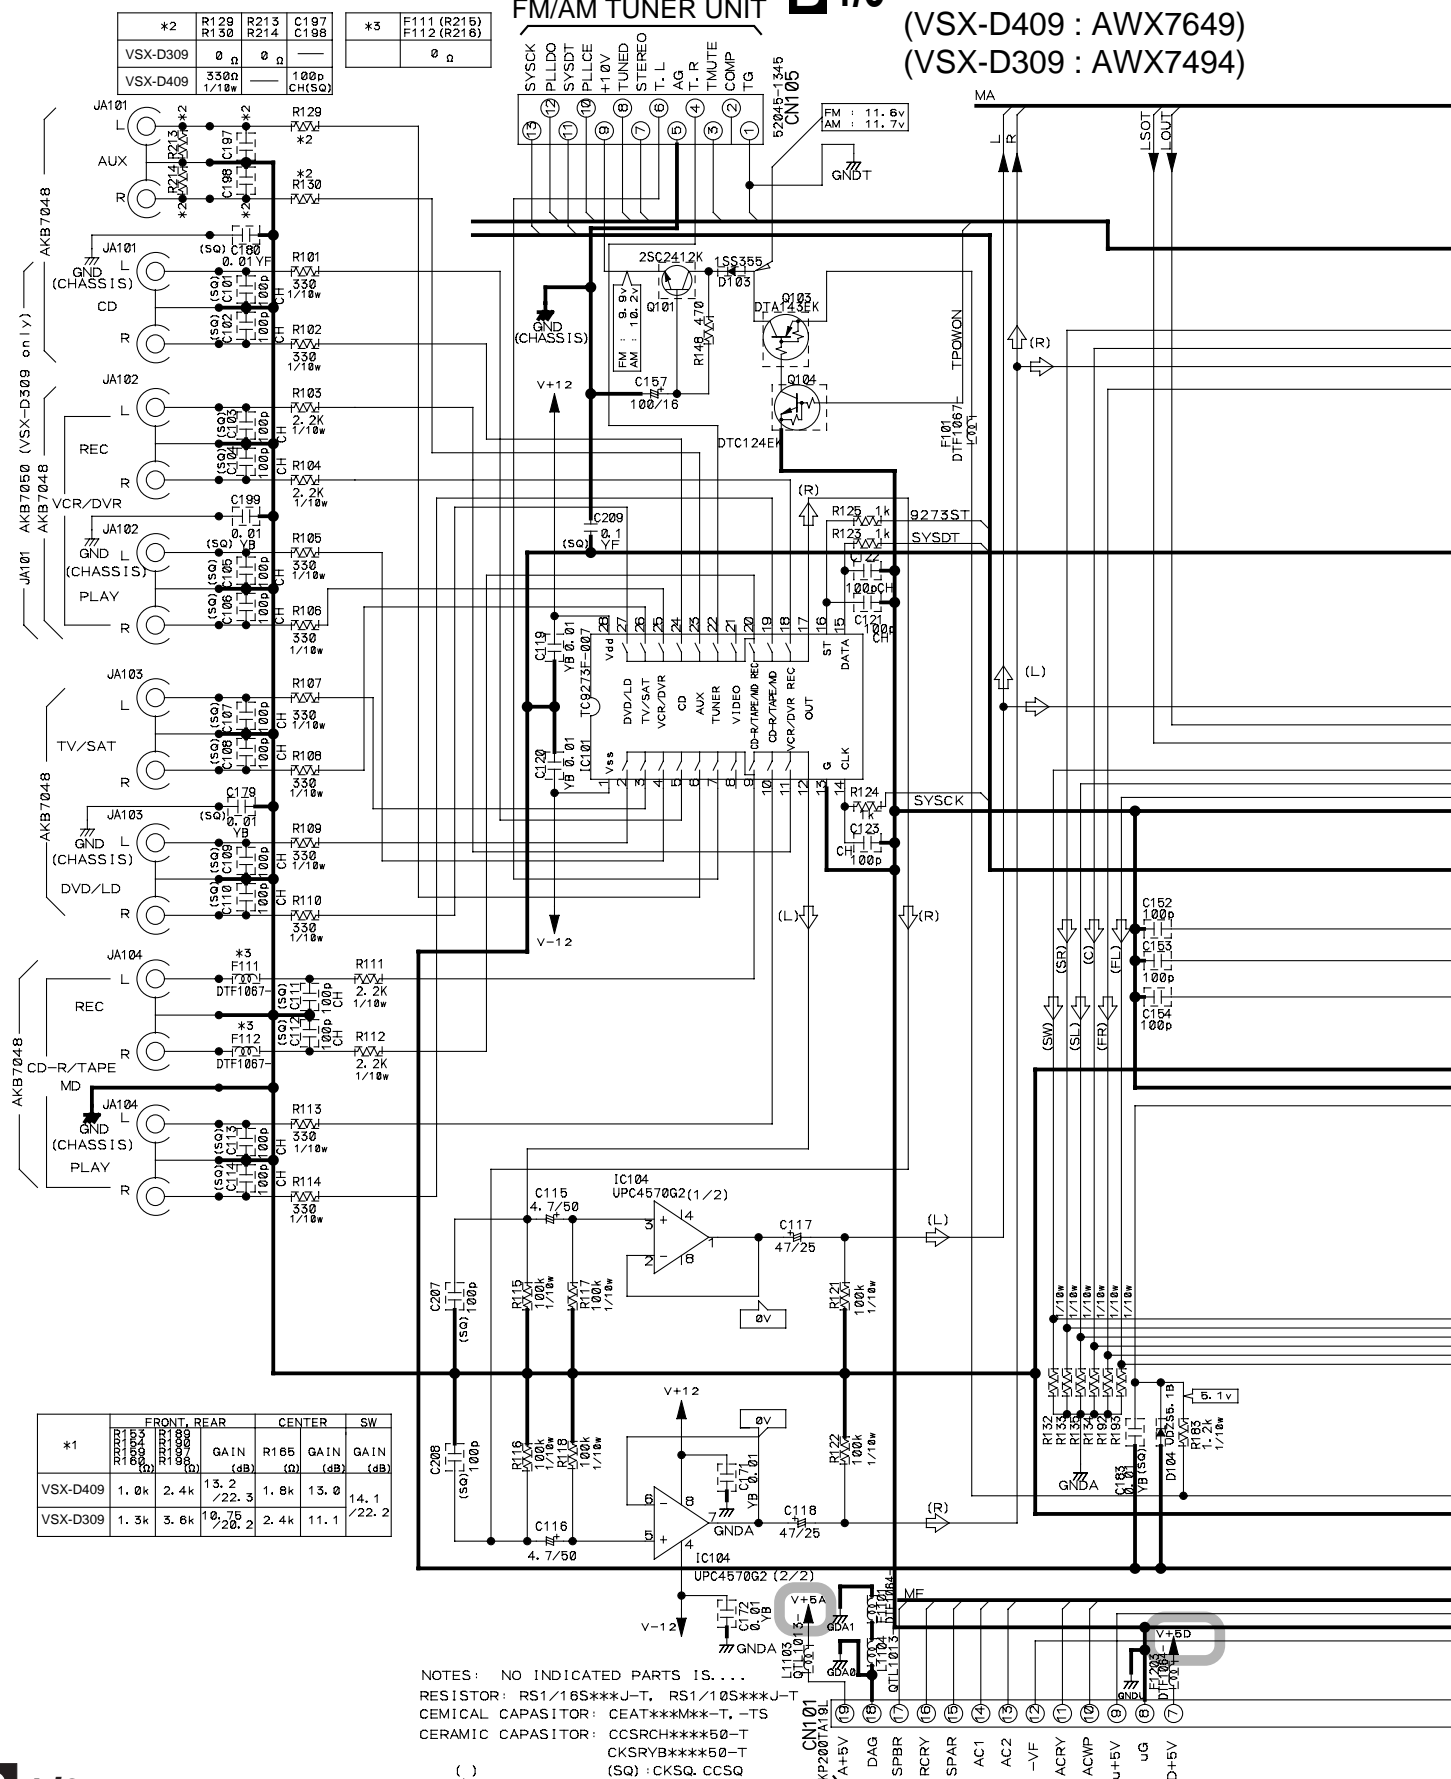


NOTES: NO INDICATED PARTS IS...
RESISTOR: RS1/16S***J-T, RS1/10S***J-T
CEMICAL CAPASITOR: CEAT****M**T, -TS
CERAMIC CAPASITOR: CCSRCH*****50-T
CKSRBY*****50-T
(SQ):CKSQ, CCSQ

() (SQ) : CKSQ
 : AUDIO SIGNAL FLOW

F CN802

: The power supply is shown with the marked box.

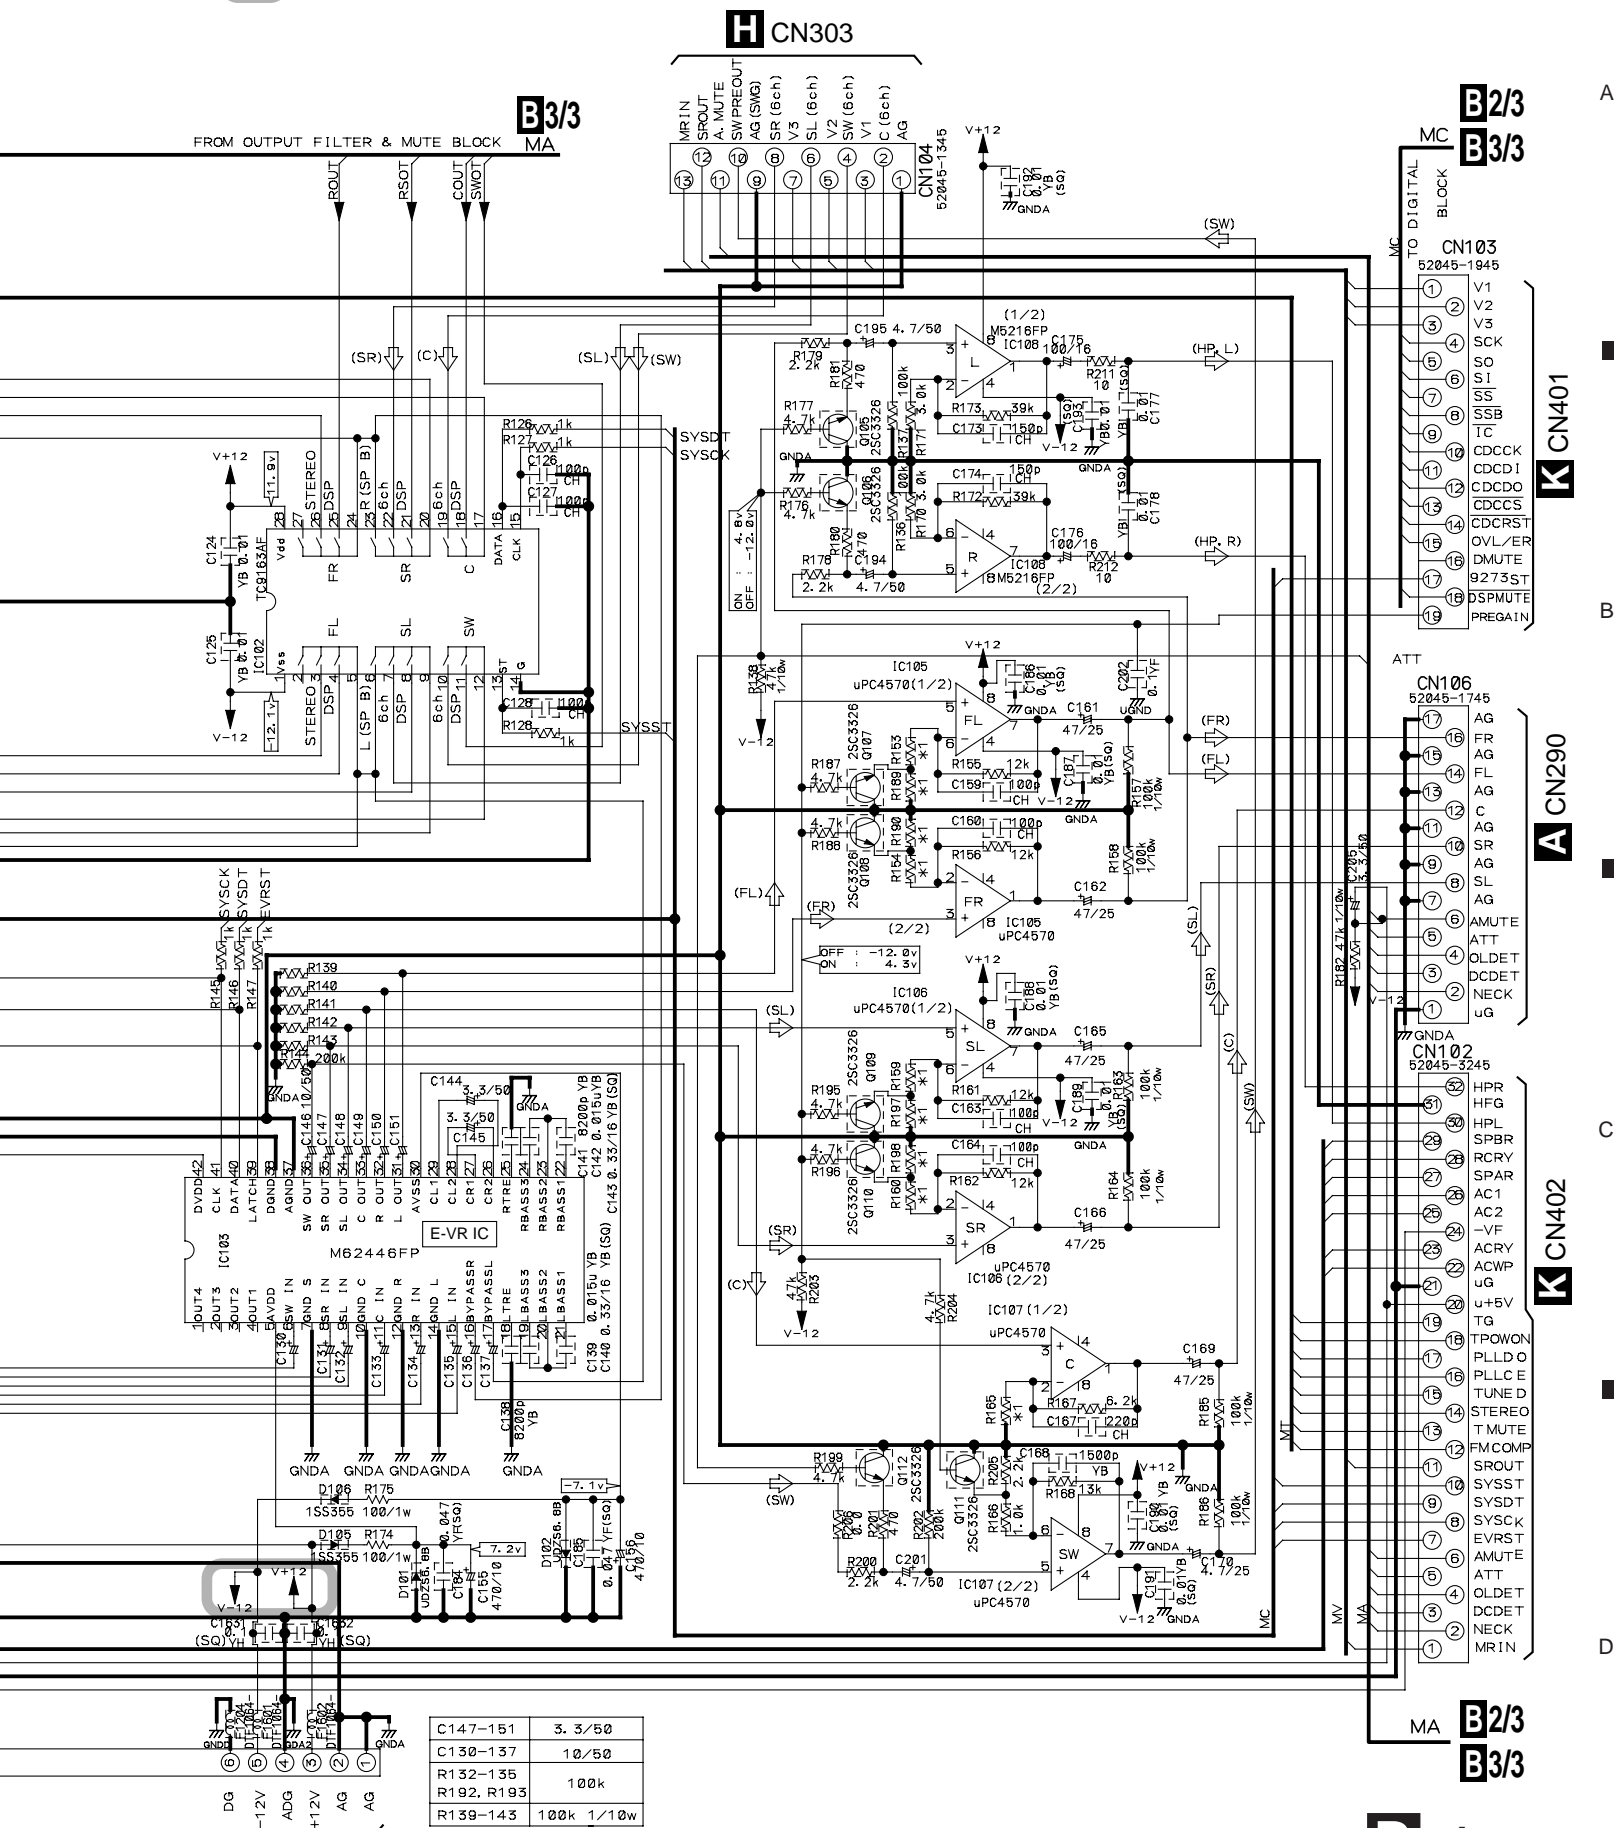


B




D

3.5 D.D & INPUT ASSY (3/3)

B 3/3 D.D & INPUT ASSY
(VSX-D409 : AWX7649)
(VSX-D309 : AWX7494)

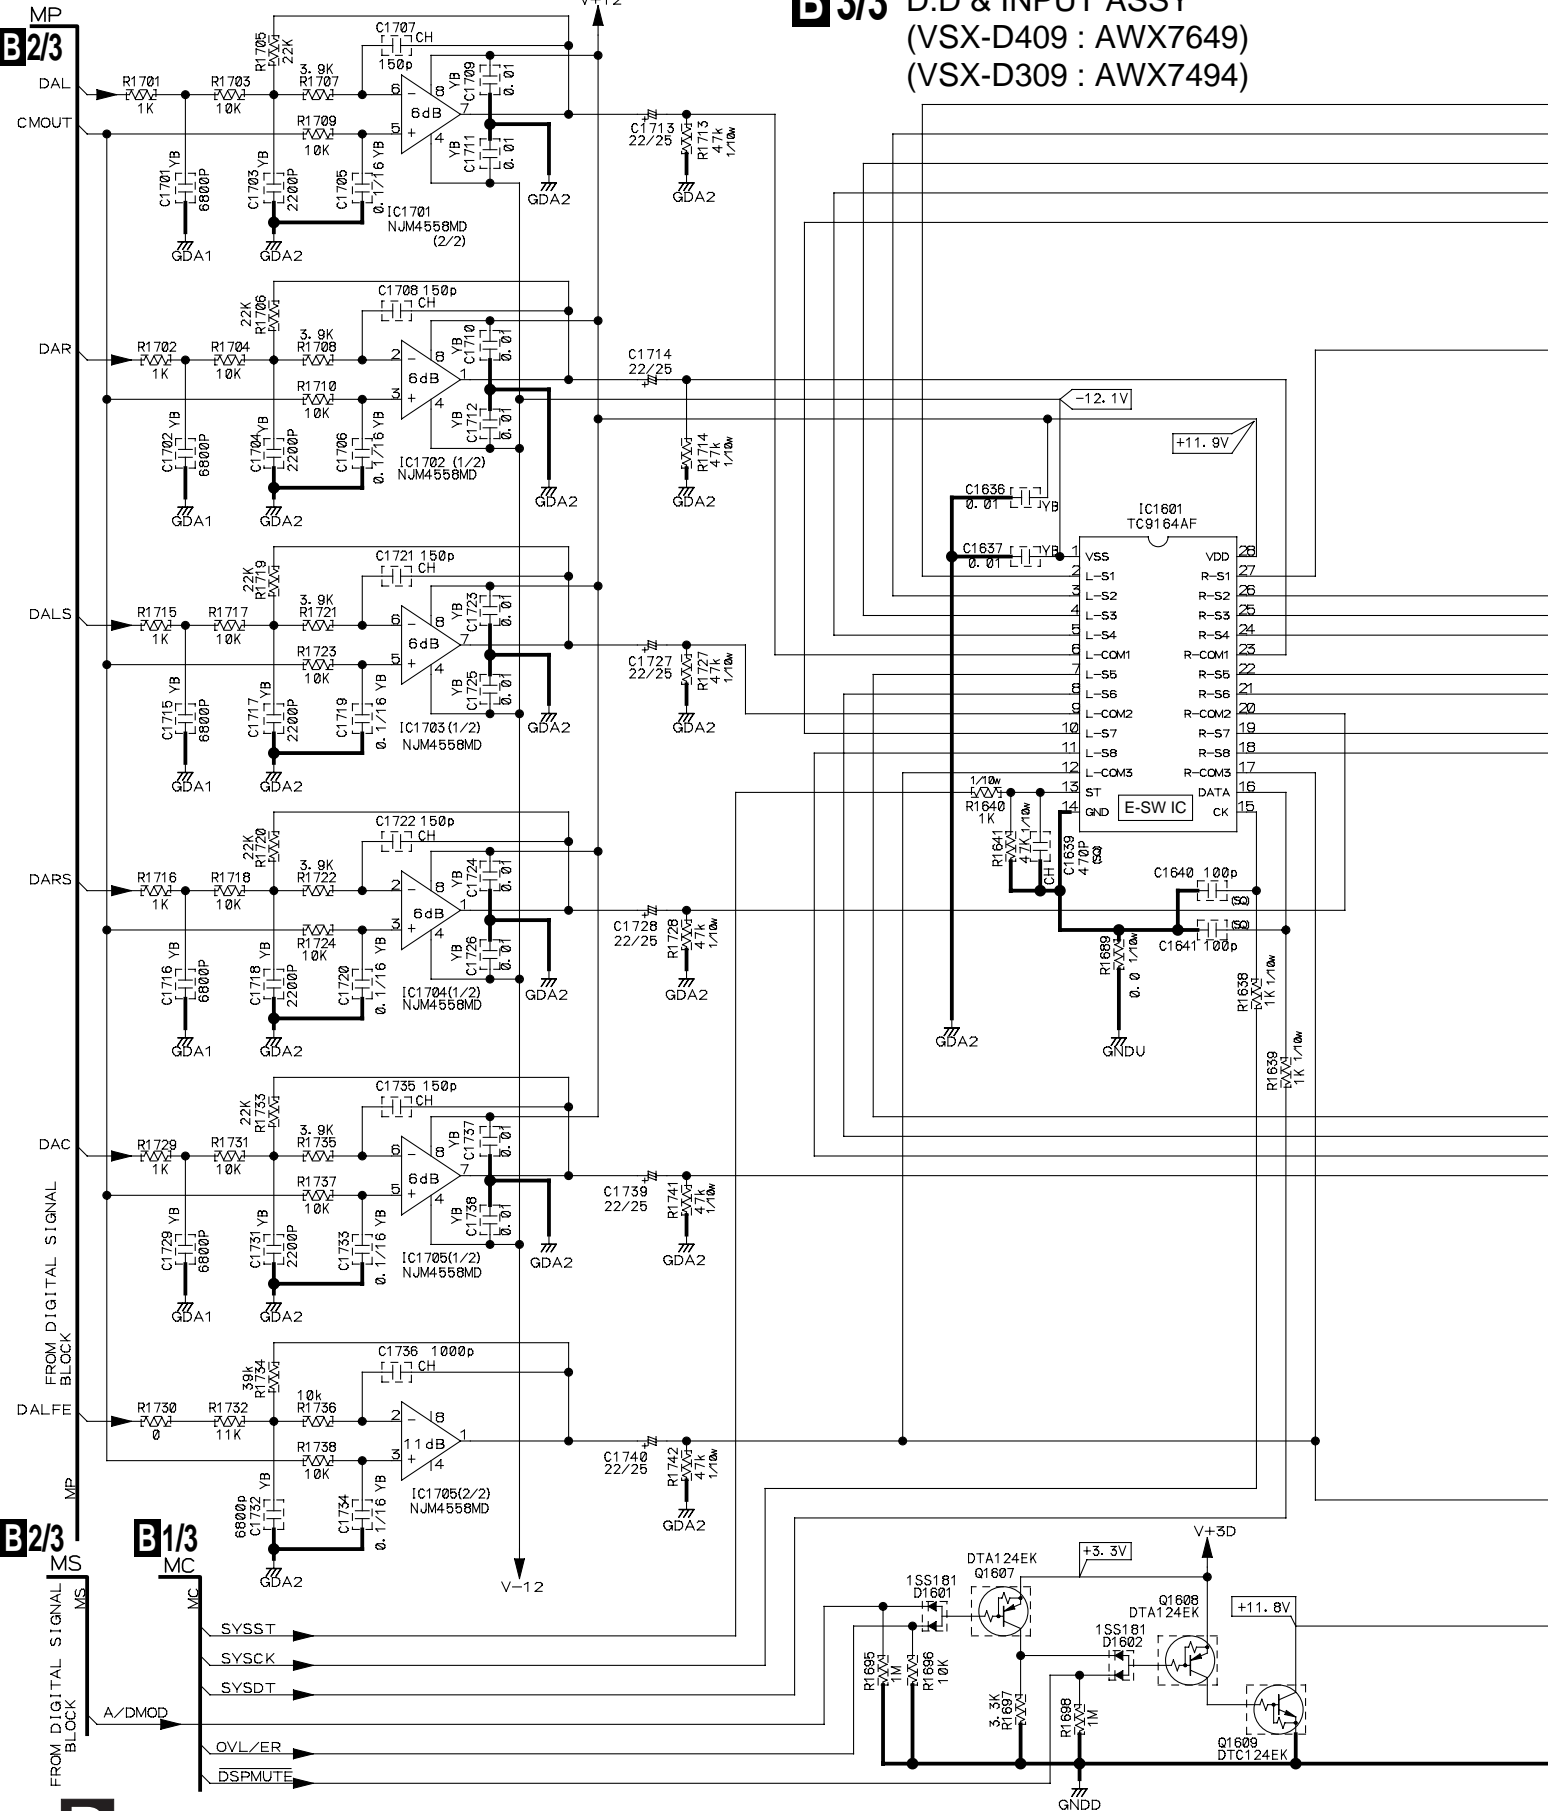


VSX-D409, VSX-D309

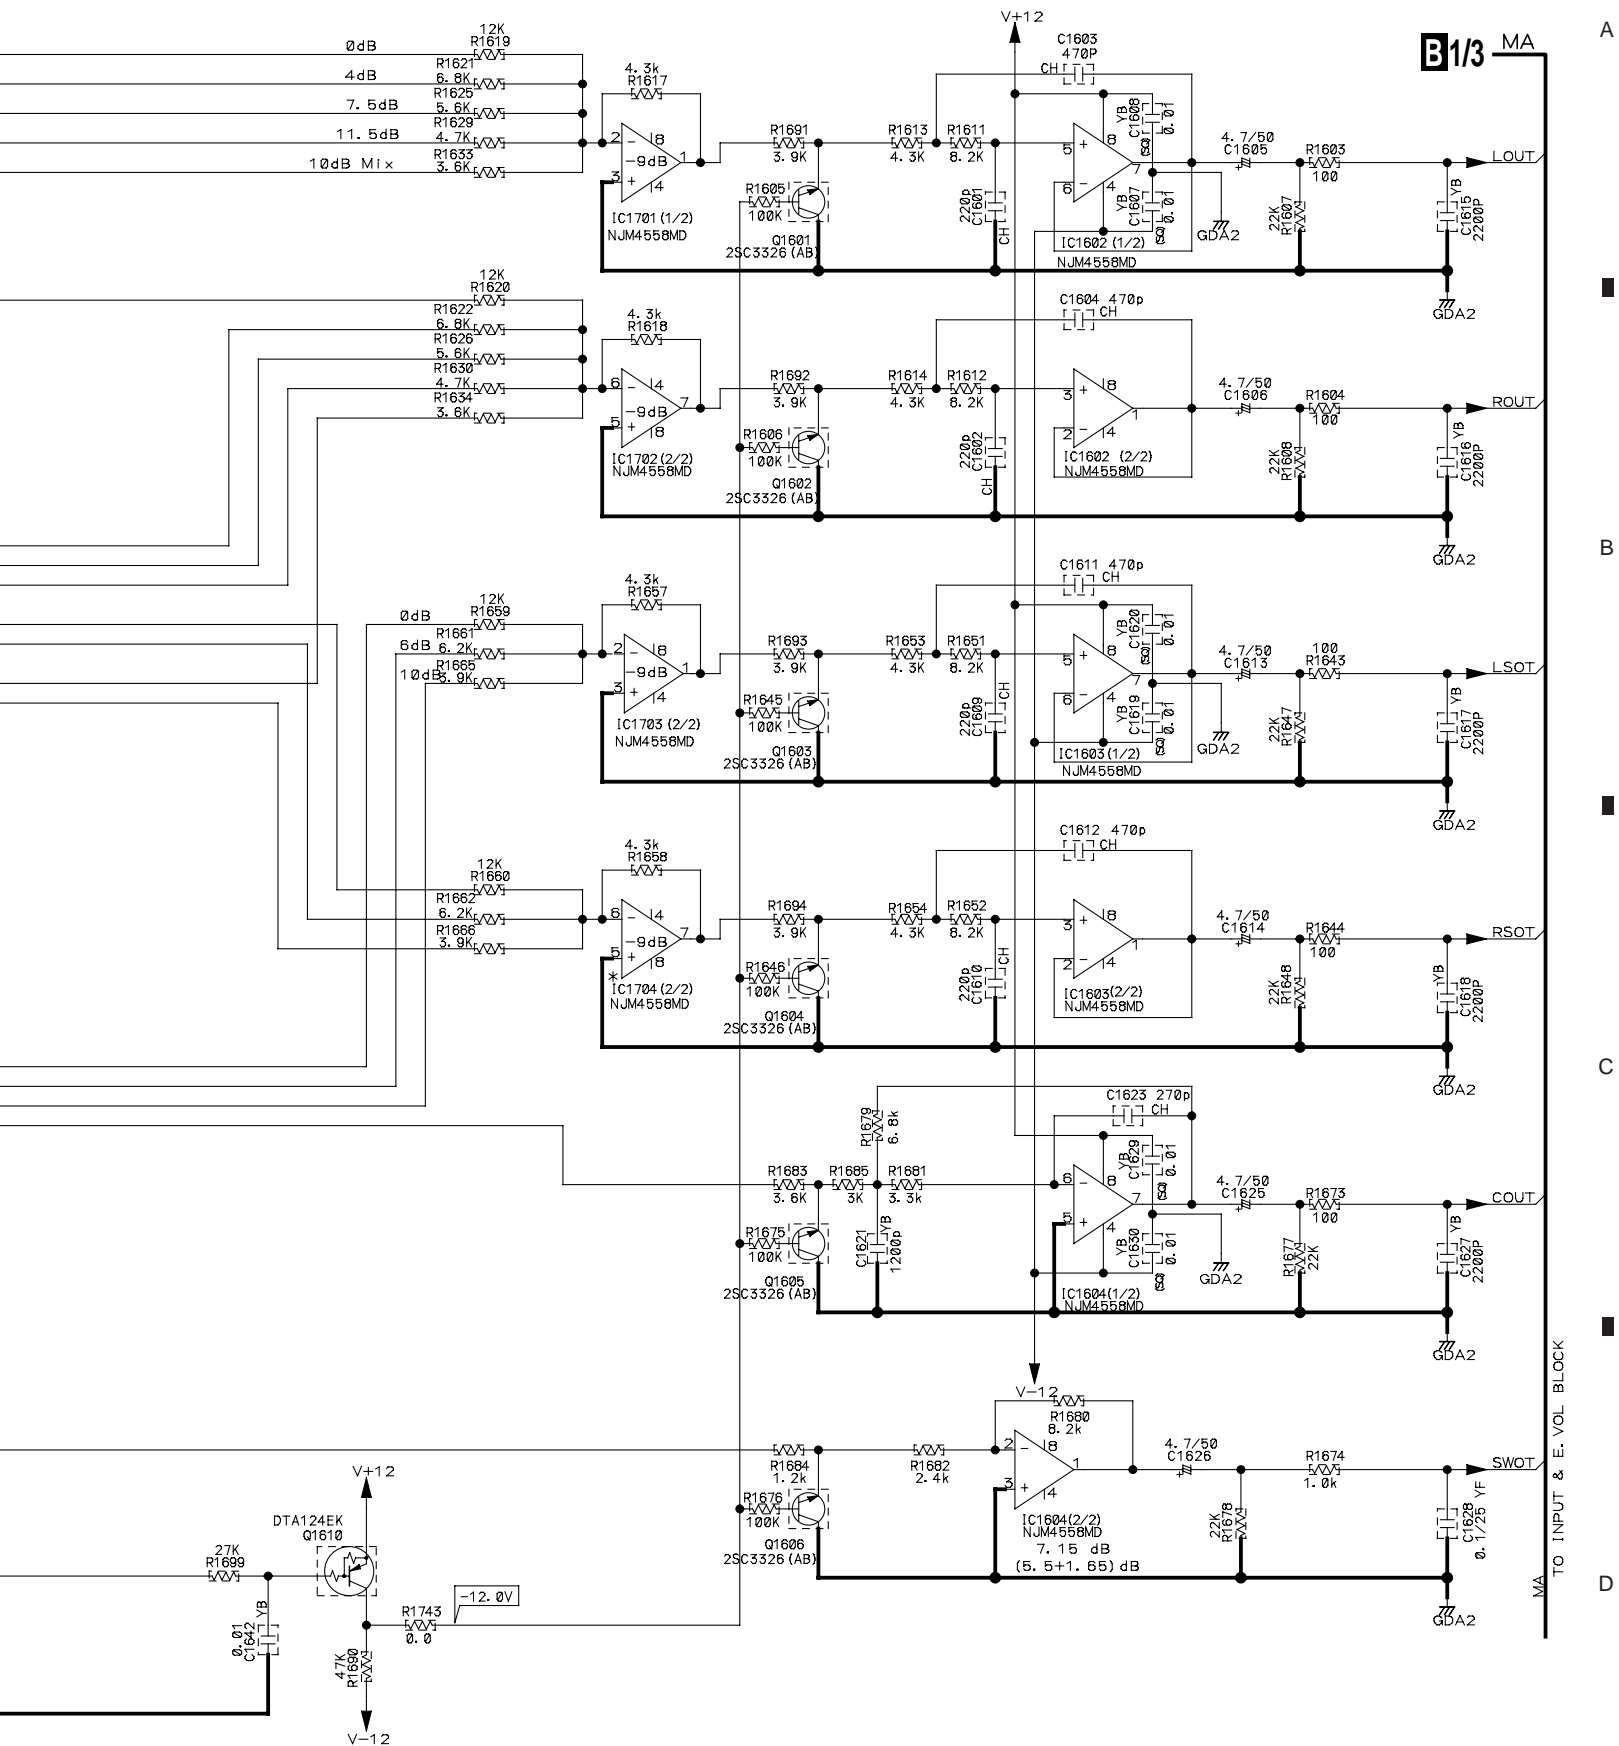

3.6 AMP&PRIMARY (1/2), TRANS2 and TRANS3 ASSYS

C 1/2 AMP&PRIMARY ASSY
(VSX-D407 : AWX7480) (VSX-D307 : AWX7506)

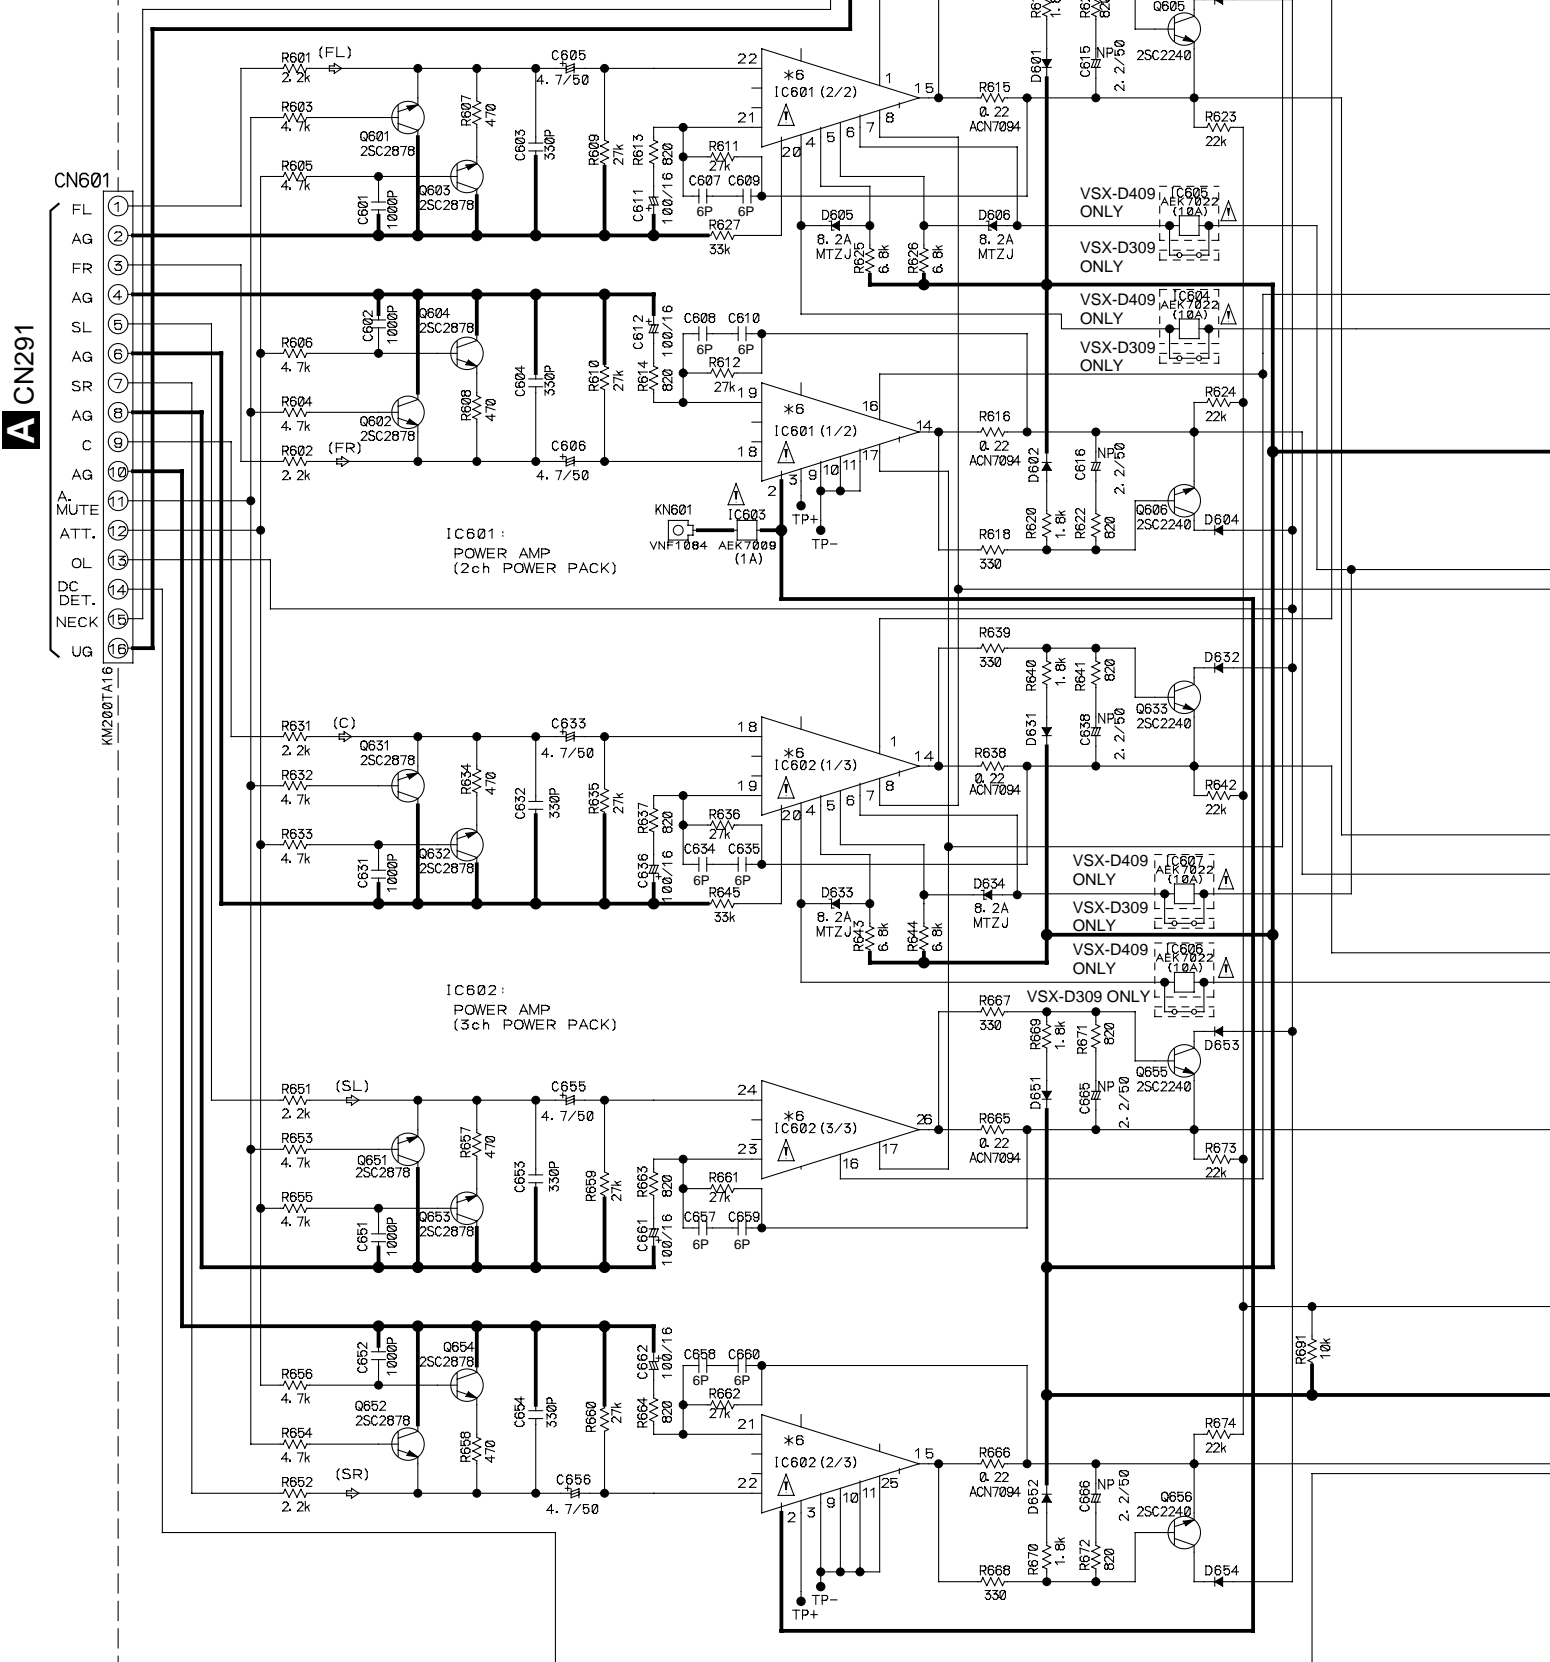

| | | |
|----|------------------------------|----------|
| *4 | R751, 752, 755 . 761, 762 | 100 1/4W |
|----|------------------------------|----------|


| | | |
|----|--------------------------|--------|
| *5 | C751, 752, 755, 761, 762 | 0.1 YA |
|----|--------------------------|--------|

| | | | |
|----|-------|----------|----------|
| *6 | | VSX-D309 | VSX-D409 |
| | IC601 | PAC012A | PAC010A |
| | IC602 | PAC013A | PAC011A |




3.7 AMP&PRIMARY (2/2), REGULATOR and TRANS1 ASSYS

F REGULATOR ASSY
(VSX-D409 : AWX7467)
(VSX-D309 : AWX7493)

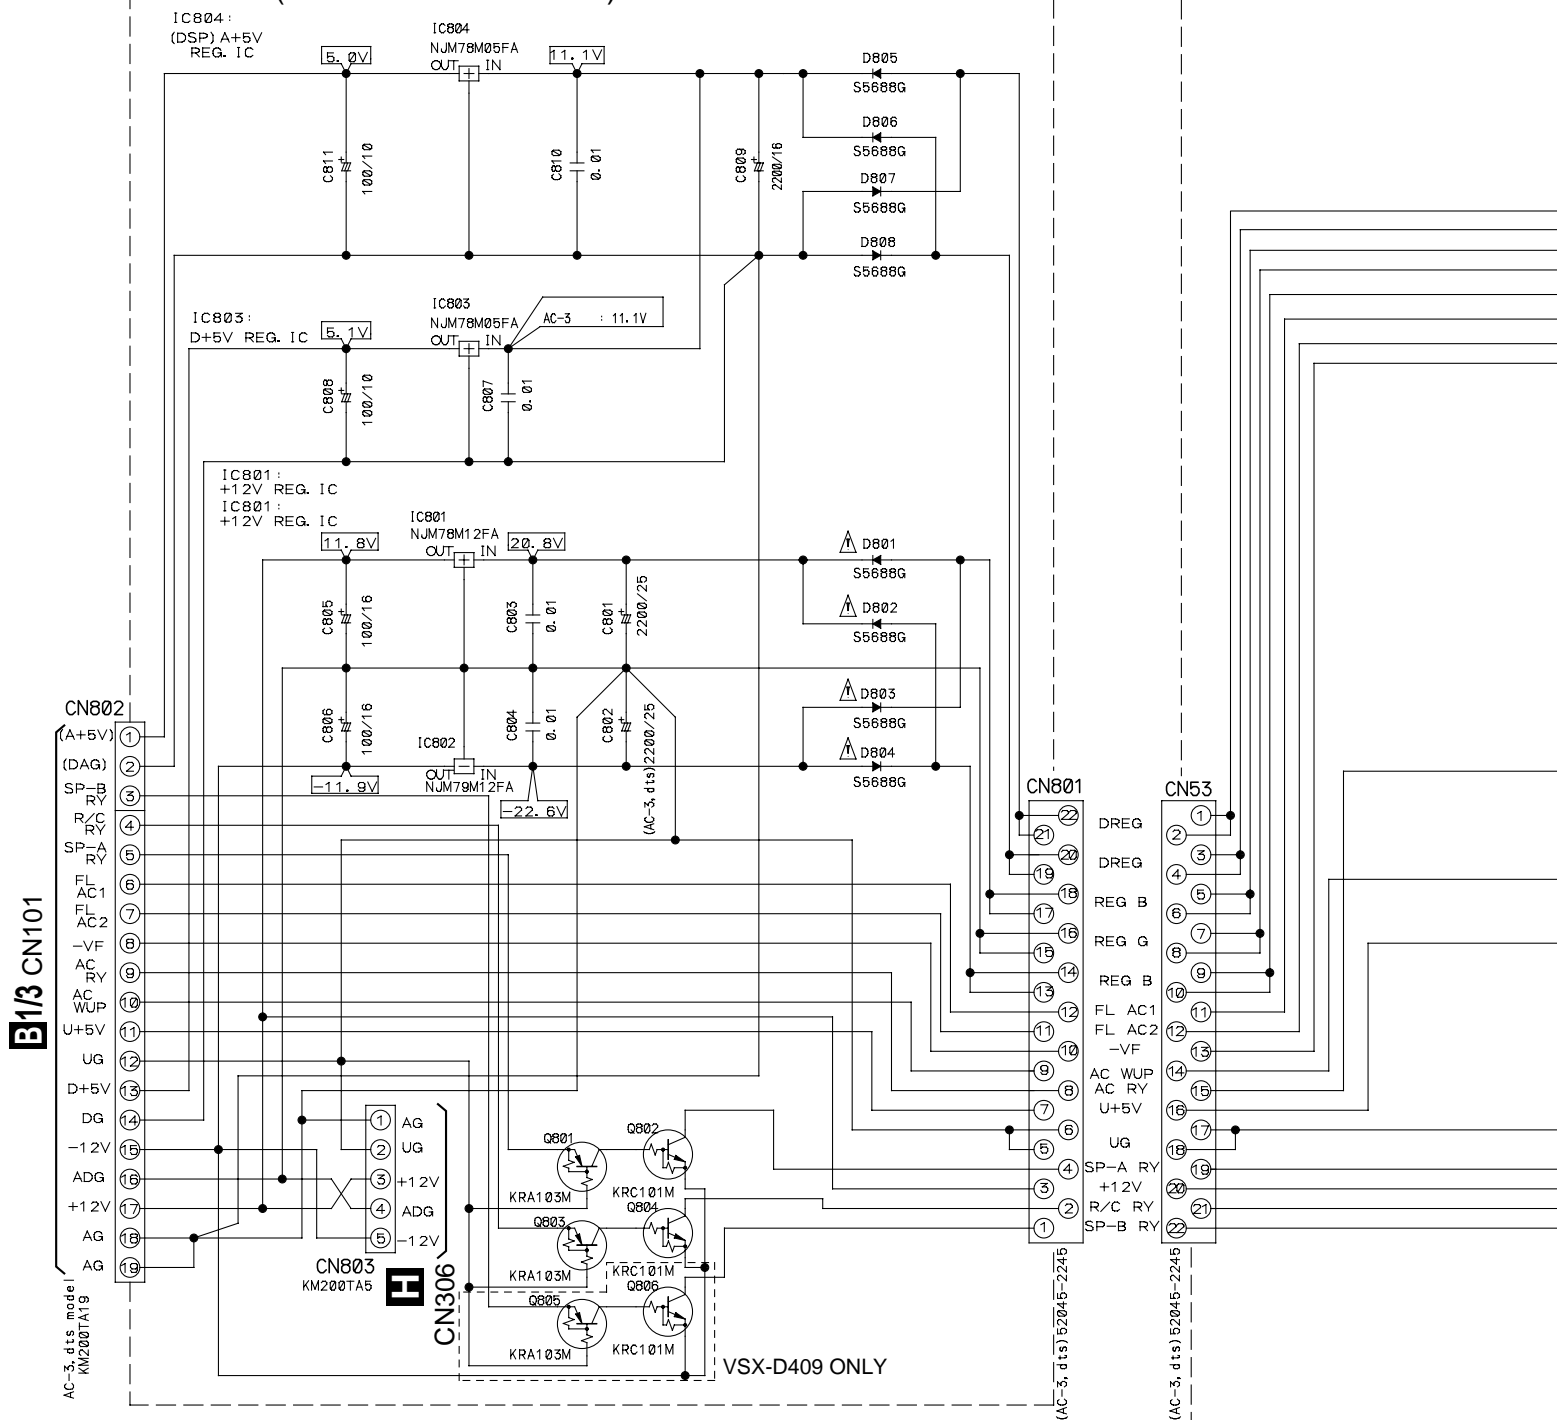


C2/2 AMP&PRIMARY ASSY
(VSX-D409 : AWX7480)
(VSX-D309 : AWX7506)

C1/2

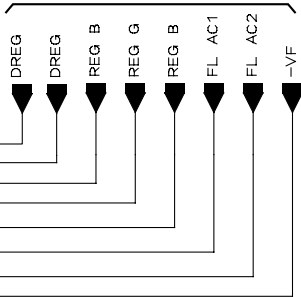

RV51 :
POWER RELAY

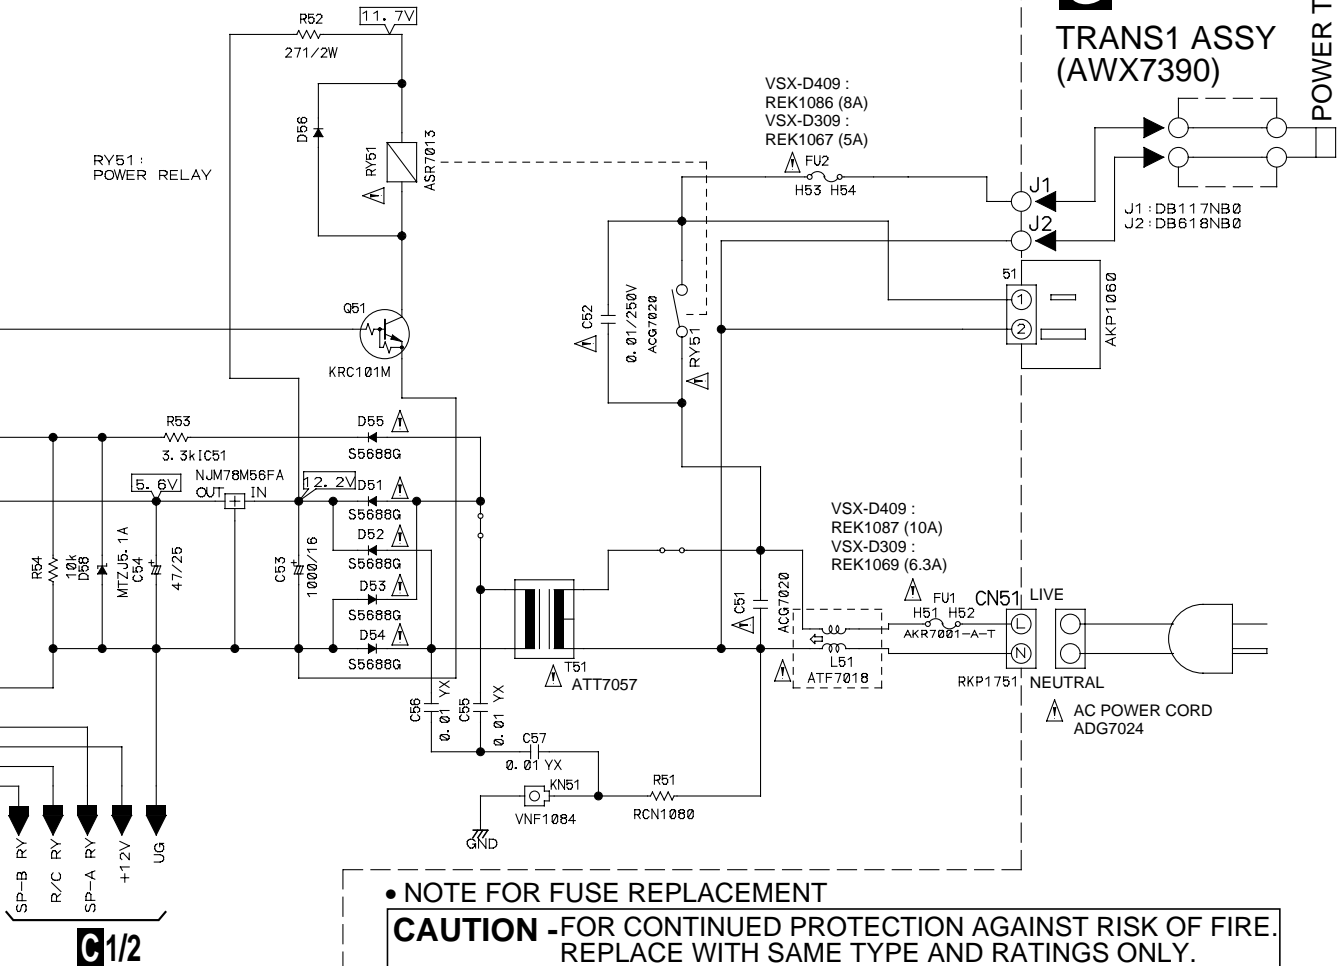

NJM2296D control port status

| SW1 | SW2 | SW3 | SW4 | SW5 | Vout1 | Vout2 | Vout3 |
|-----|-----|-----|-----|-----|-------|-------|-------|
| 1 | 0 | (1) | 0 | 1 | Vin2 | Vin2 | mute |
| 1 | 1 | (1) | 0 | 1 | Vin3 | Vin3 | Vin3 |
| 1 | 1 | 0 | 1 | 1 | Vin4 | Vin4 | Vin4 |
| 1 | 1 | 1 | 1 | 1 | Vin5 | Vin5 | Vin5 |
| 0 | 0 | (0) | (0) | 0 | mute | mute | mute |

VIN 2. VCR/DVR
VIN 3. DVD/LD
VIN 4. TV/SAT
VIN 5. FRONT VIDEO

Vout1. MONITOR out
Vout2. MR out
Vout3. VCR/DVR out

--NOTE--

1. RESISTORS

Unit: k- Ω , M- Ω or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J) $\pm 5\%$ unless otherwise noted.

2. CAPACITORS

Unit: p-pF or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.


3. DIODES

Indicated in 1SS355-TRB

← Video Signal Flow
↔ Audio Signal Flow


| *1 | | JA1903 (OPT. 2) | C1901 | R1901 |
|----|----------|-----------------|----------|----------|
| | VSX-D409 | GP1F32R | 0.1 YB | 100 |
| | VSX-D309 | Not used | Not used | Not used |

J DIGITAL IN ASSY (VSX-D409 : AWX7505) (VSX-D309 : AWX7476)

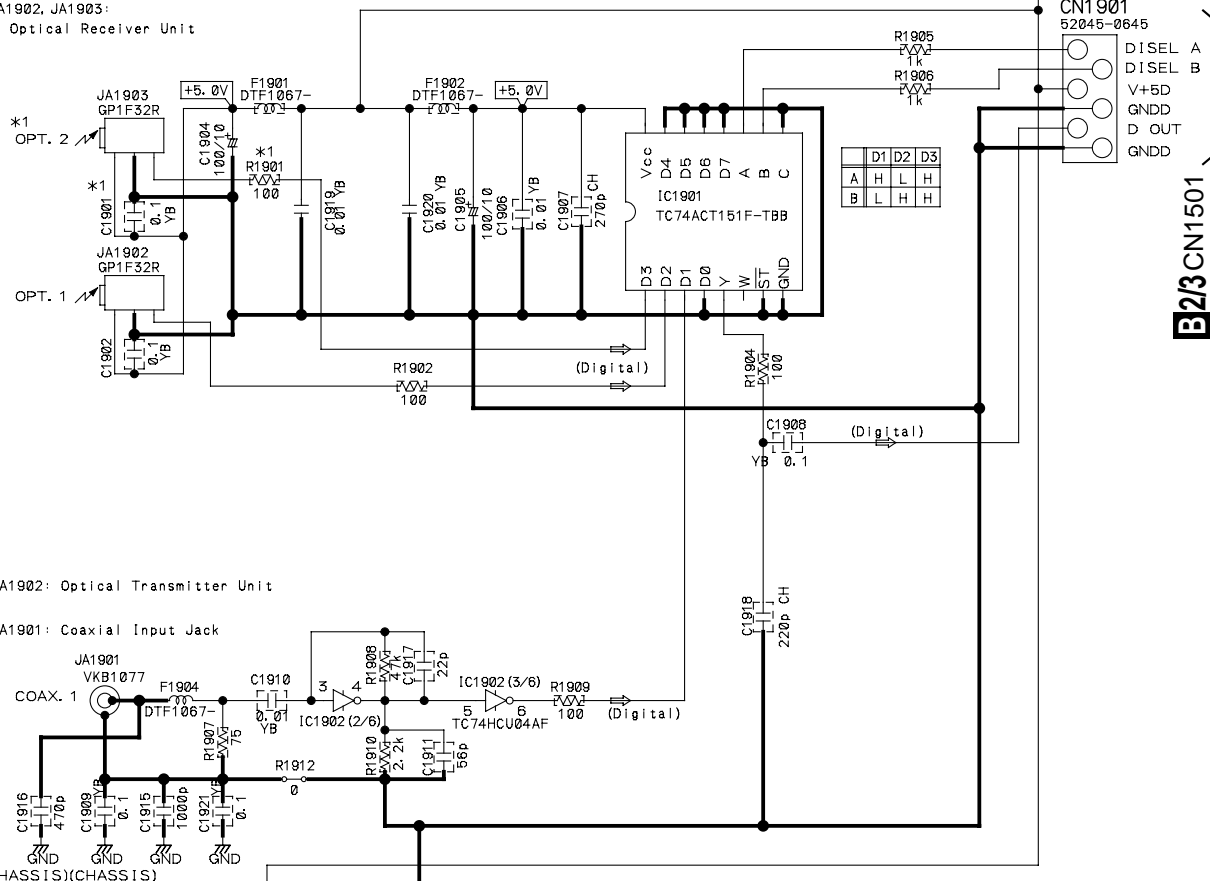
JA1902, JA1903:
Optical Receiver Unit

JA1902: Optical Transmitter Unit

JA1901: Coaxial Input Jack

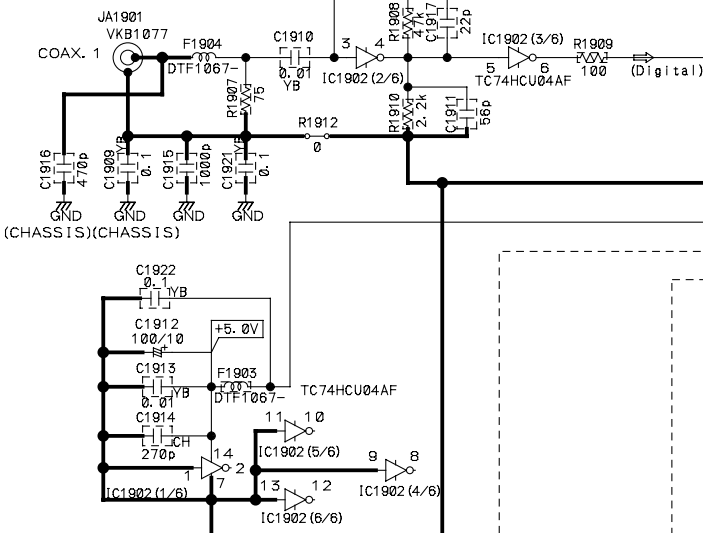

K 403

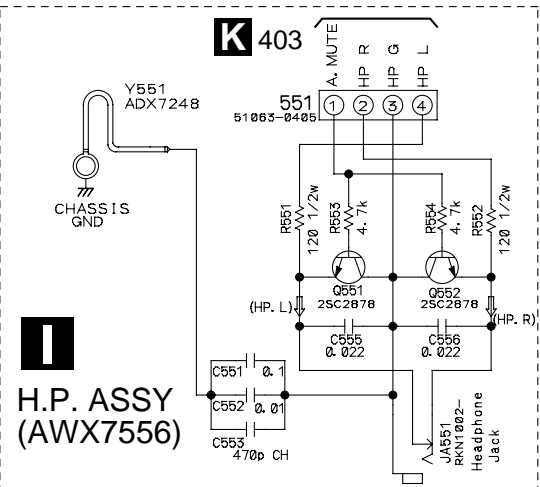


I H.P. ASSY (AWX7556)

V401

AAV7072-

(402 FL HOLDER VNF1096-)

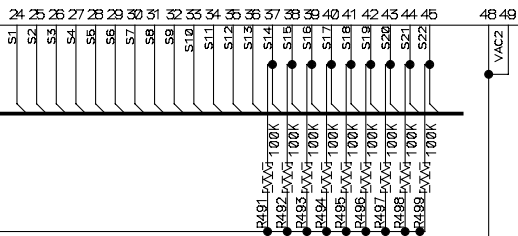

-NOTE-

1. RESISTORS

Unit: K-kΩ, M-MΩ or Ω unless otherwise noted.
 Rated power: 1/10W unless otherwise noted.
 Tolerance: (J)±5% unless otherwise noted.


2. CAPACITORS

Unit: p-pF or μF unless otherwise noted.
 Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
 Rated Voltage: 50V expect for electrolytic capacitors.
 JA-CEJA

3. DIODES

Indicated in 1SS355-TRB.




| Key | Name | #2 | #3 | #4 | #5 | #6 |
|----------|---------|------|------|------|------|------|
| VSX-D409 | MONITOR | S454 | S460 | S469 | S475 | S476 |
| VSX-D309 | DIMMER | S454 | S460 | S469 | S475 | S476 |

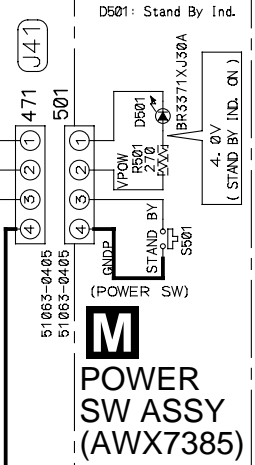

FRONT ASSY

- S451 : DOLBY PRO LOGIC
- S452 : DSP MODE
- S453 : SIGNAL SELECT
- S454 : MONITOR (VSX-D409)
- S455 : TREBLE (+)
- S456 : FM/AM
- S457 : LOUDNESS
- S458 : TREBLE (-)
- S459 : BASS (+)
- S460 : DVD 5.1CH
- S461 : TV/SAT
- S462 : CD
- S463 : DIRECT
- S464 : BASS (-)
- S465 : DVD/LD
- S466 : VCR/DVR
- S467 : SPEAKERS








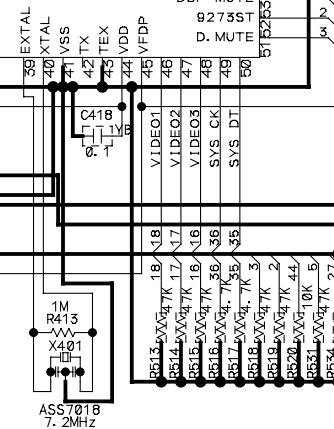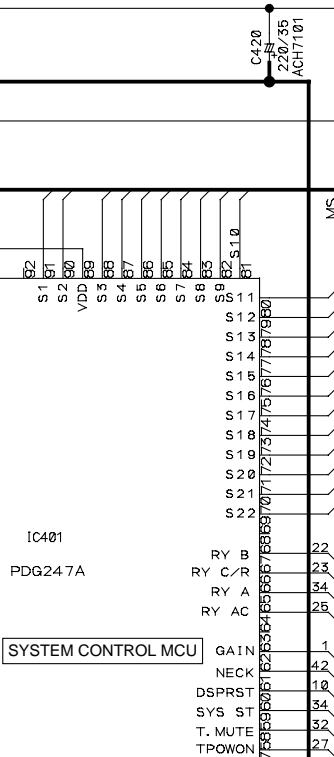
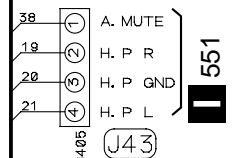

- S469 : MPX MODE
- S470 : MEMORY
- S471 : CLASS
- S472 : TUNING SELECT
- S473 : STATION (+)
- S474 : STATION (-)
- S475 : CD-R (VSX-D409)
- S476 : AUX (VSX-D409)
- S477 : CD-R (VSX-D309)

ASS701B
7.2MHz


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

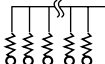
| Symbol In PCB Diagrams | Symbol In Schematic Diagrams | Part Name |
|--|--|--------------------------|
|  B C E |  B C E | Transistor |
|  B C E |  B C E | Transistor with resistor |
|  D G S |  D G S | Field effect transistor |
|  R1 R2 R3 R4 |  R1 R2 R3 R4 | Resistor array |
|  IN OUT GND |  IN OUT GND | 3-terminal regulator |

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

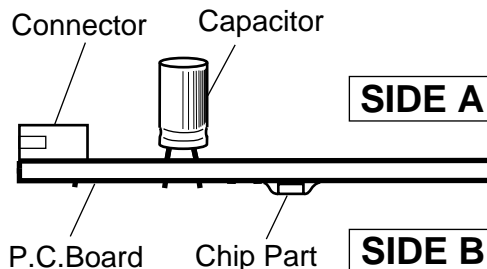


4.1 DIGITAL IN ASSY

J DIGITAL IN ASSY

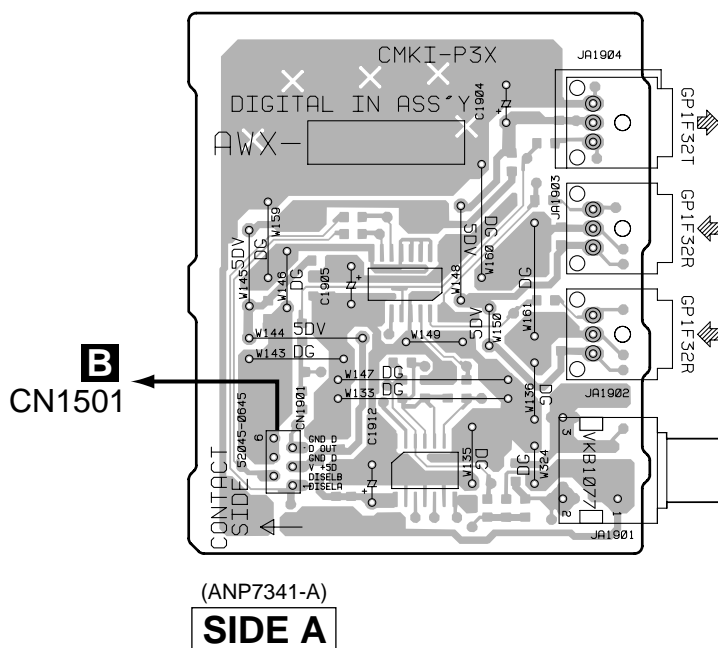

J DIGITAL IN ASSY

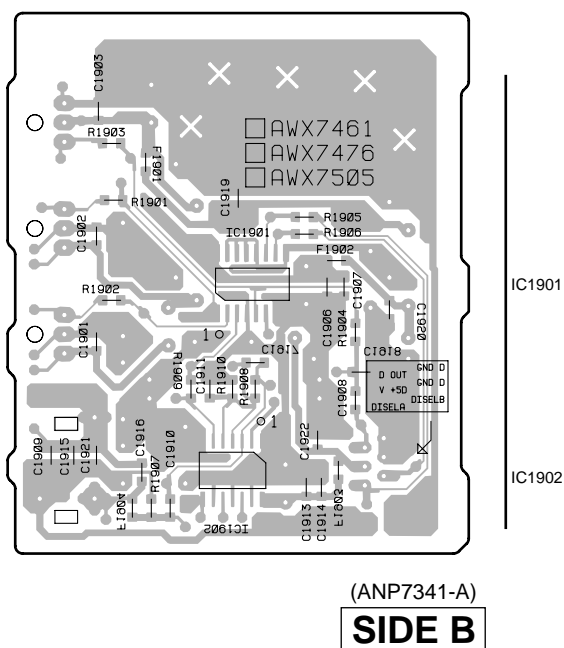

(ANP7331-B)

SIDE A

SIDE A

E J3

Q701

| | |
|------|------|
| Q691 | Q631 |
| | Q632 |
| Q692 | Q633 |
| | Q656 |

Q651
Q653

| | |
|-------|-------|
| IC602 | IC601 |
| | IC603 |

1

2


3

4



4.4 D.D & INPUT ASSY

B D.D & INPUT ASSY

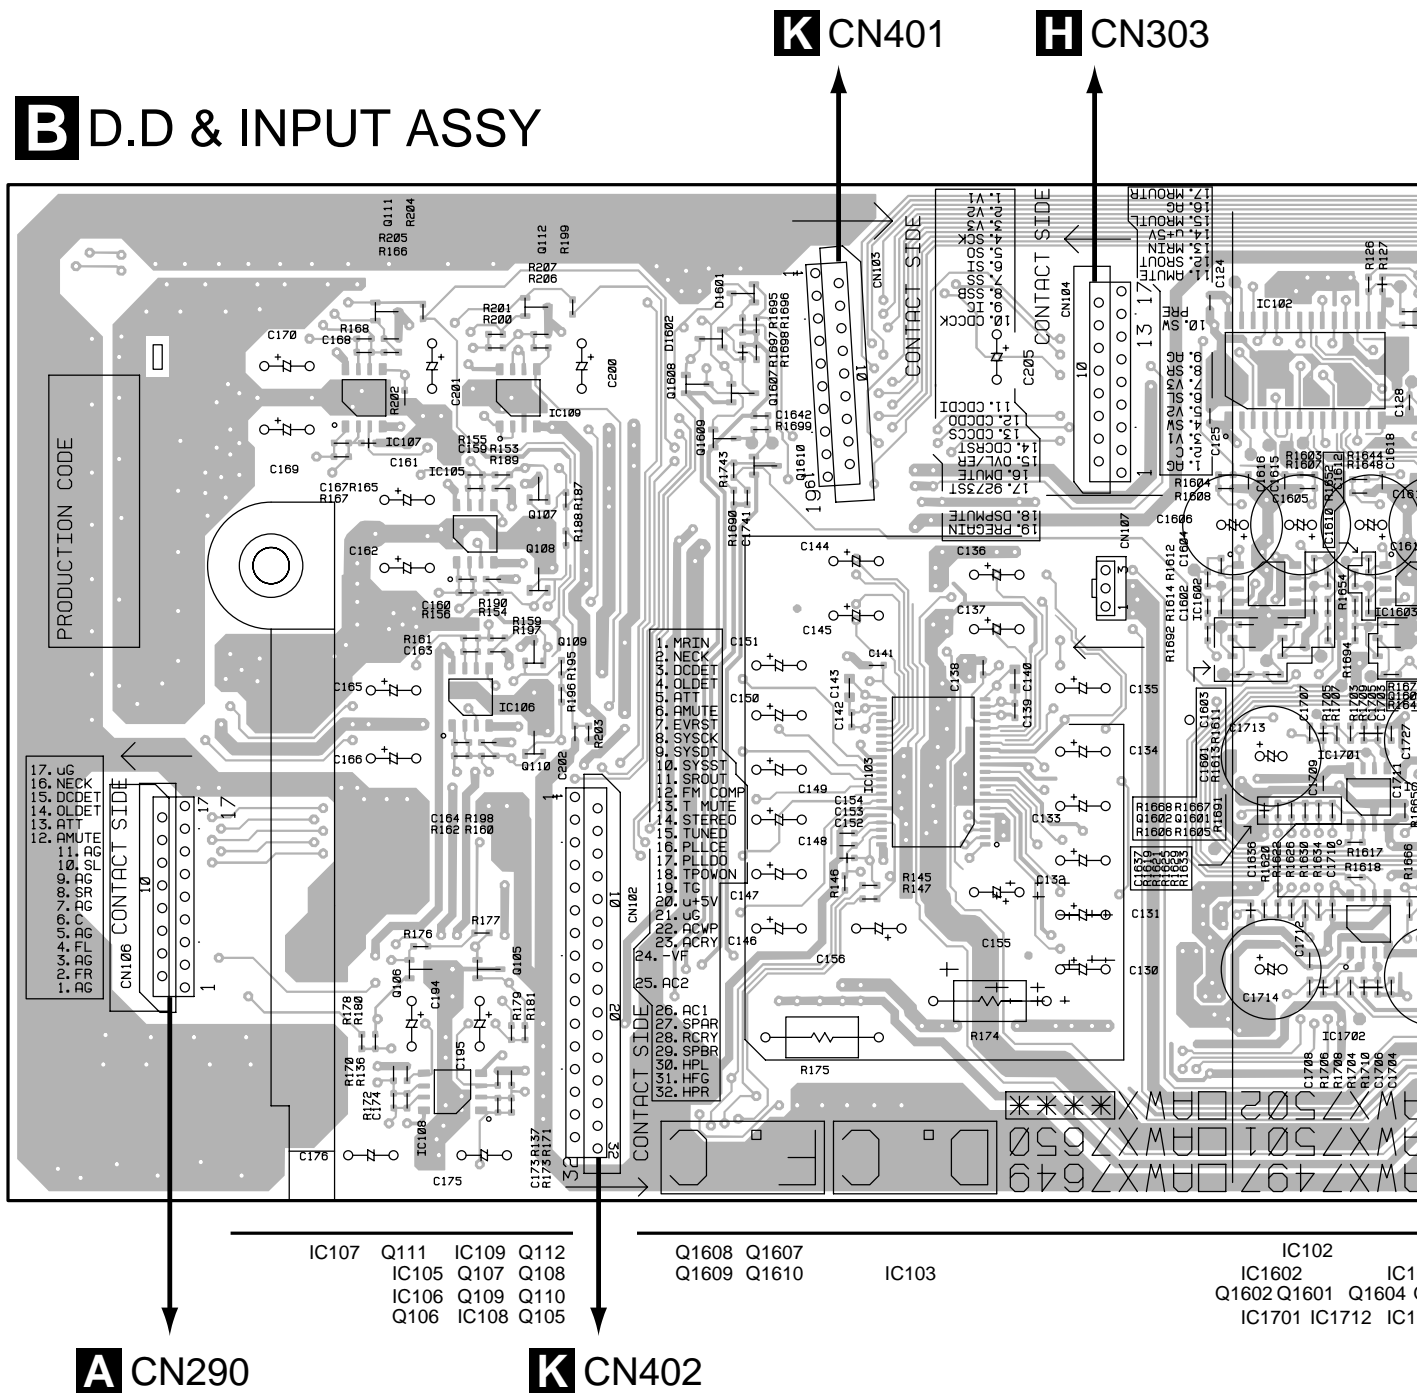




SIDE A

F CN802


IC1801

4.5 H.P., FRONT, R.ENCODER and POWER SW ASSYS


K FRONT ASSY

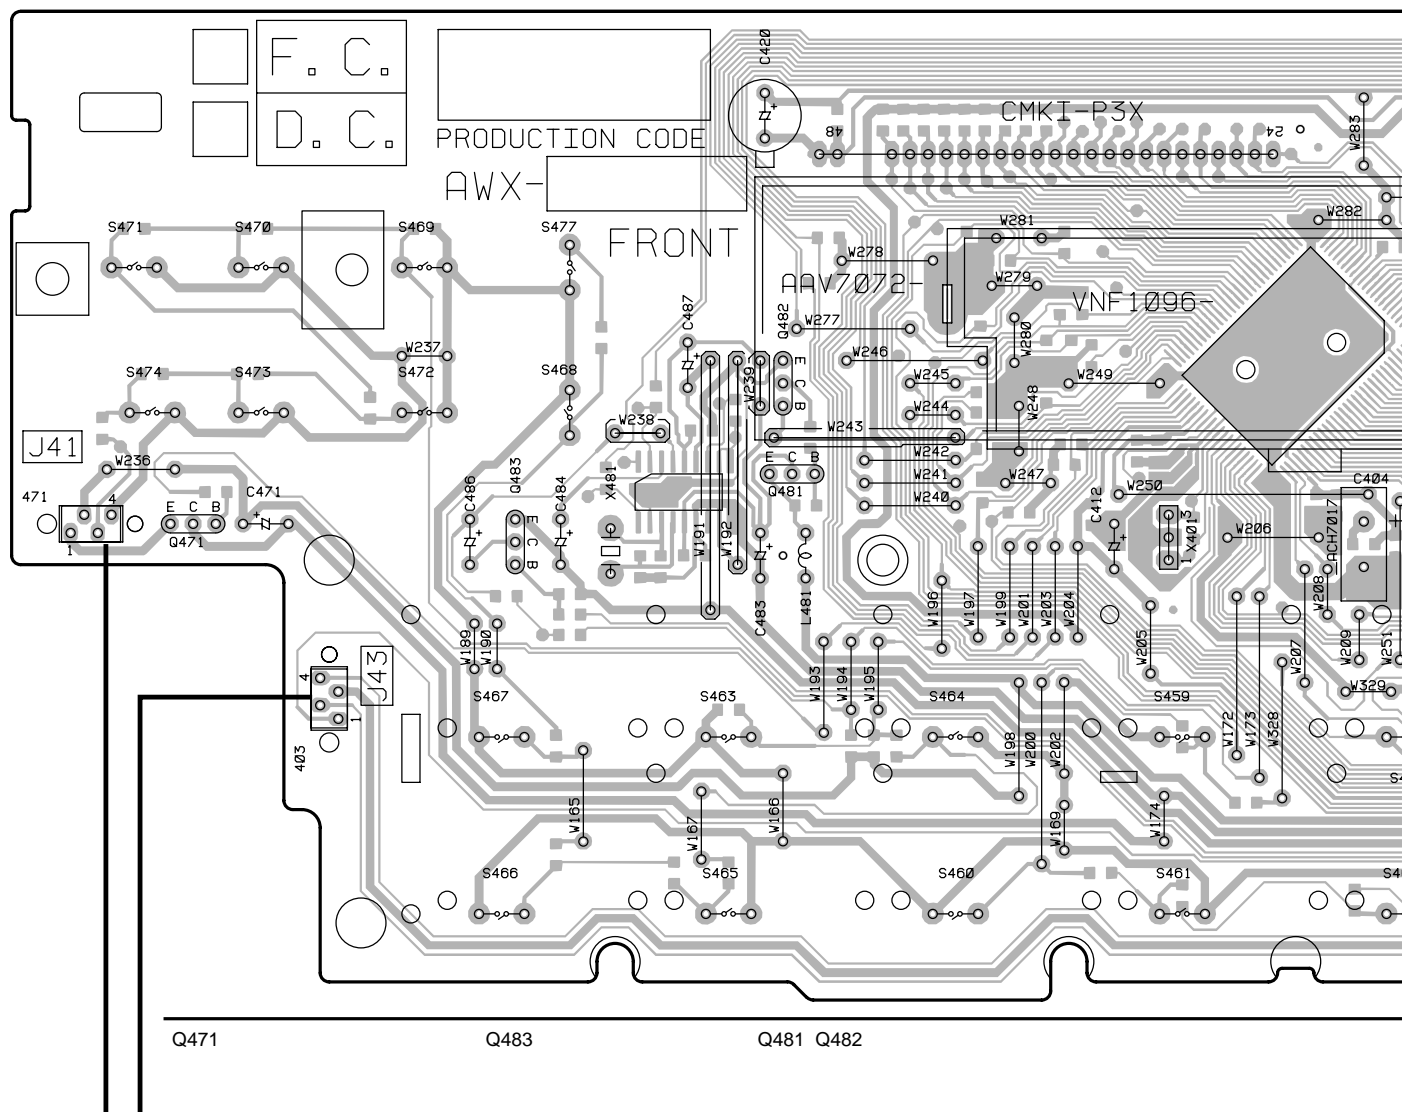


I H.P. ASSY

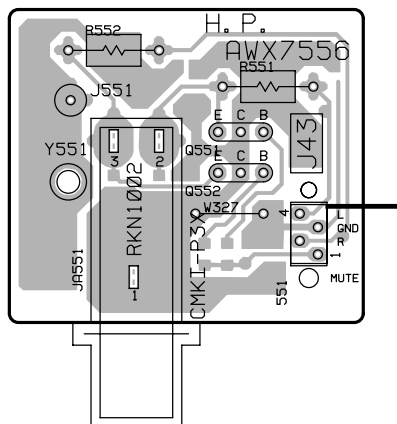

M POWER SW ASSY

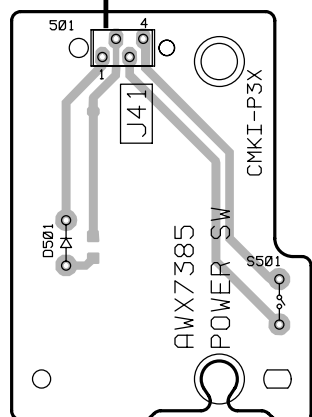


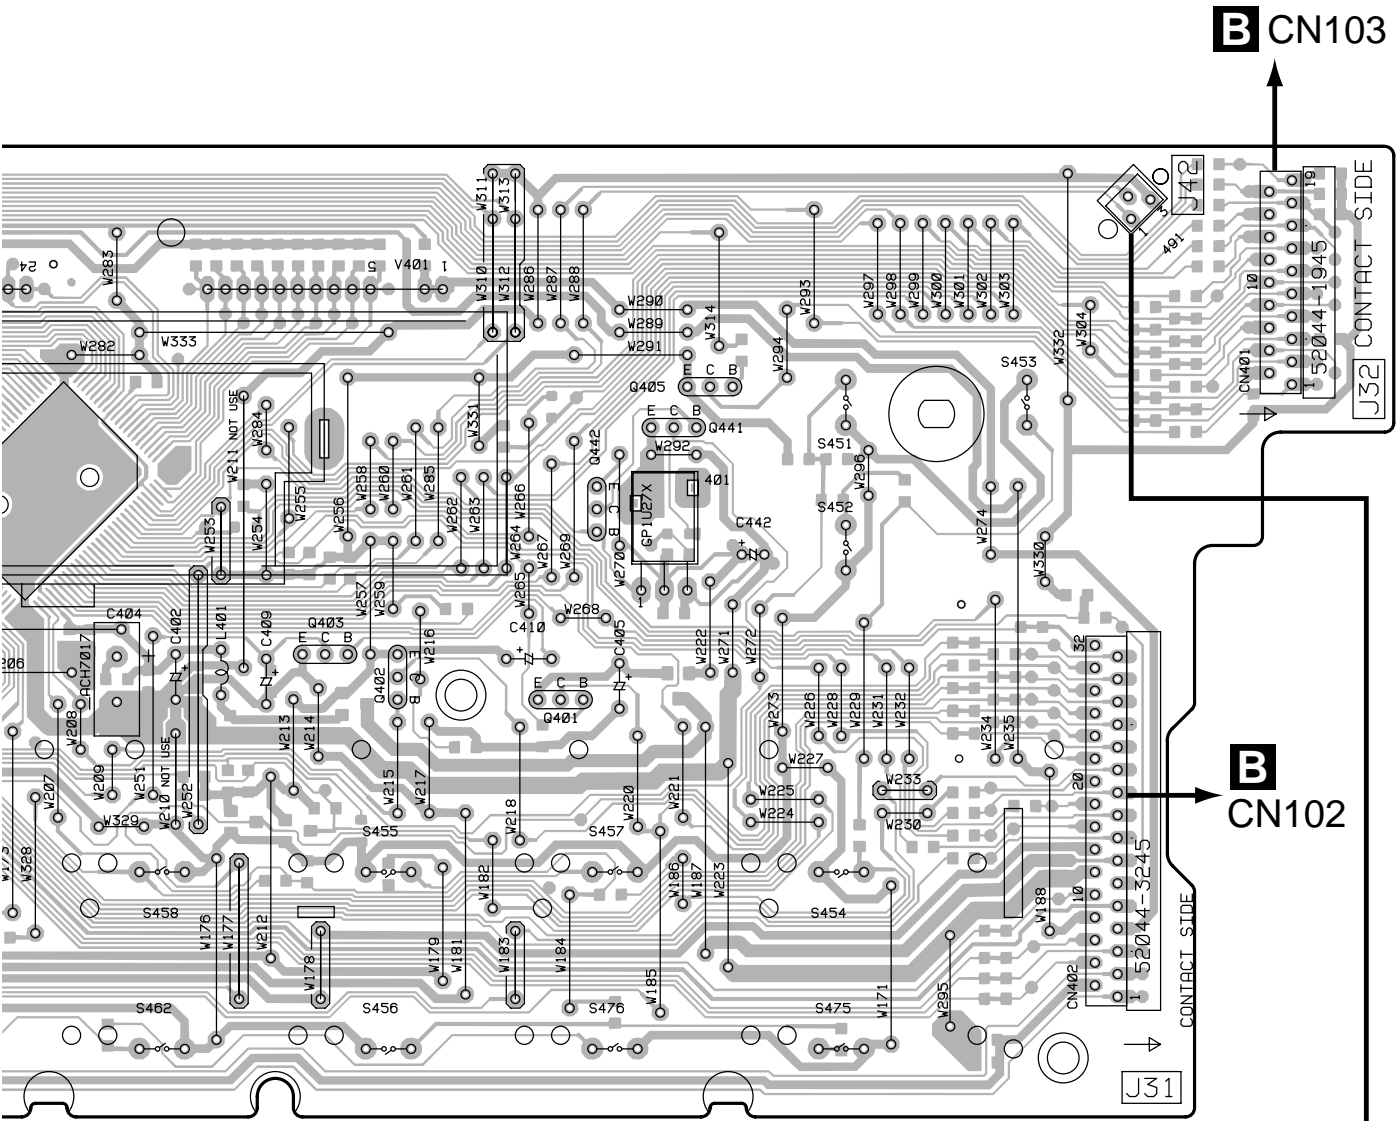


Q403 Q402 Q401 Q442 Q441 Q405

L R.ENCODER ASSY

(ANP7341-A)
SIDE A

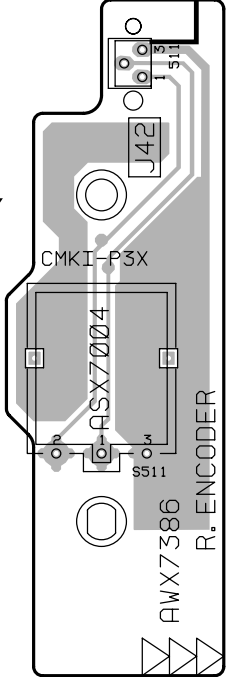


K FRONT ASSY

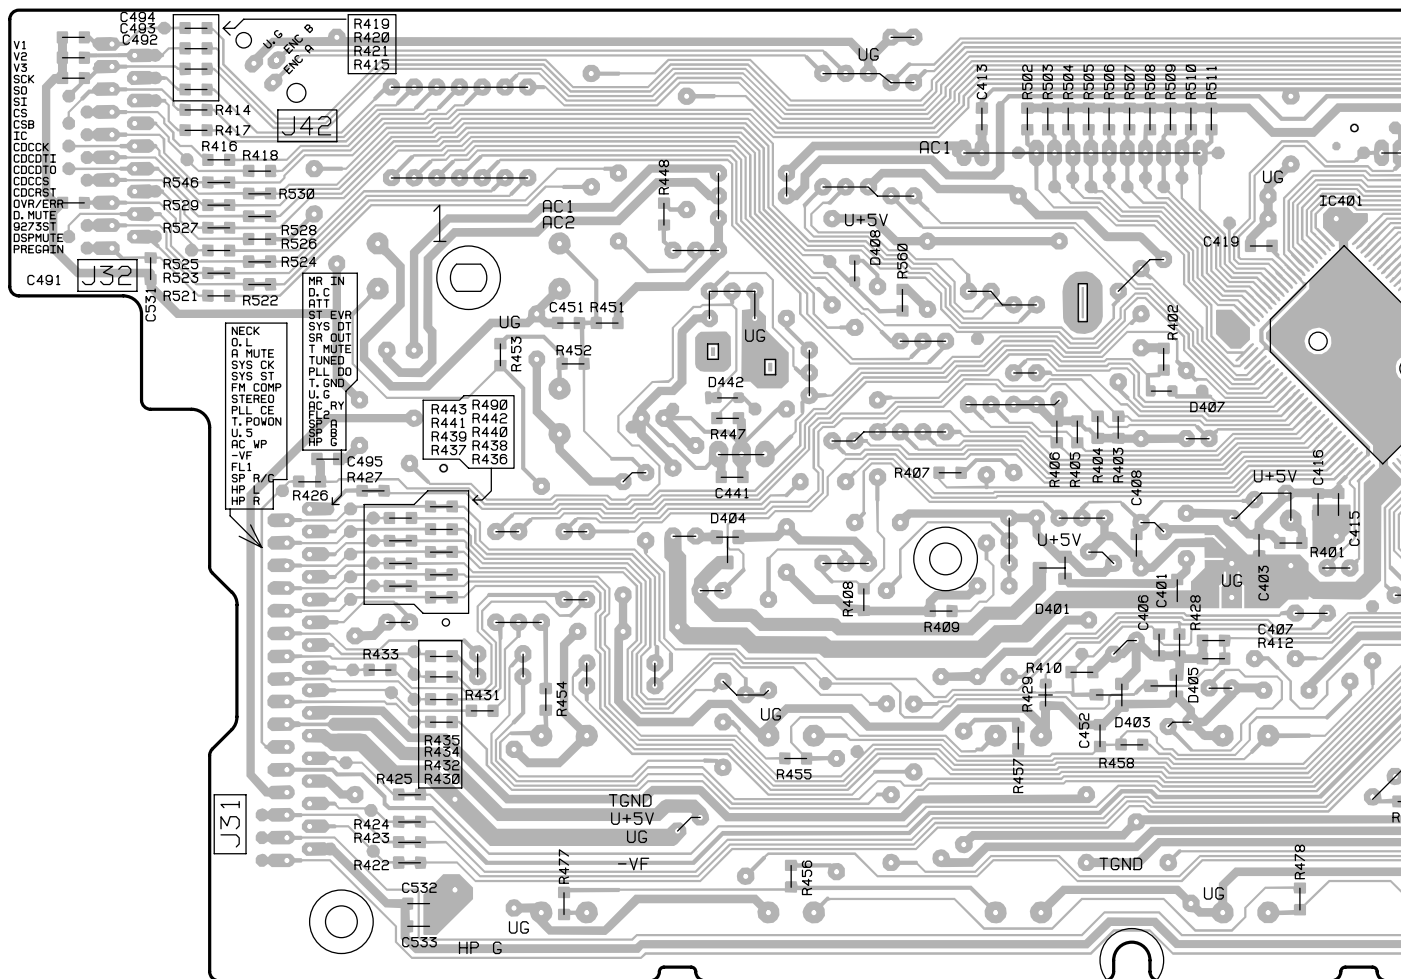


IC401

LR.ENCODER ASSY

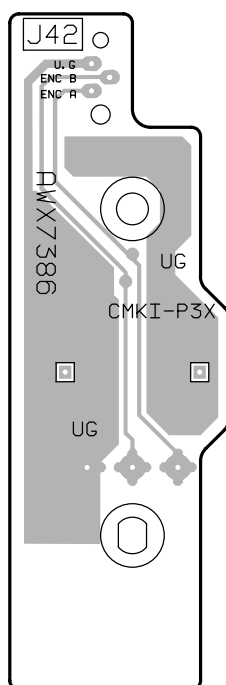

(ANP7341-A)


SIDE B

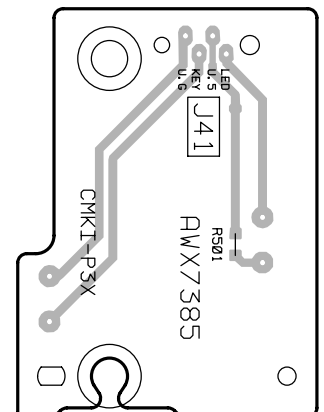

M POWER SW ASSY

4.6 VIDEO&6CH IN ASSY

VIDEO&6CH IN ASSY

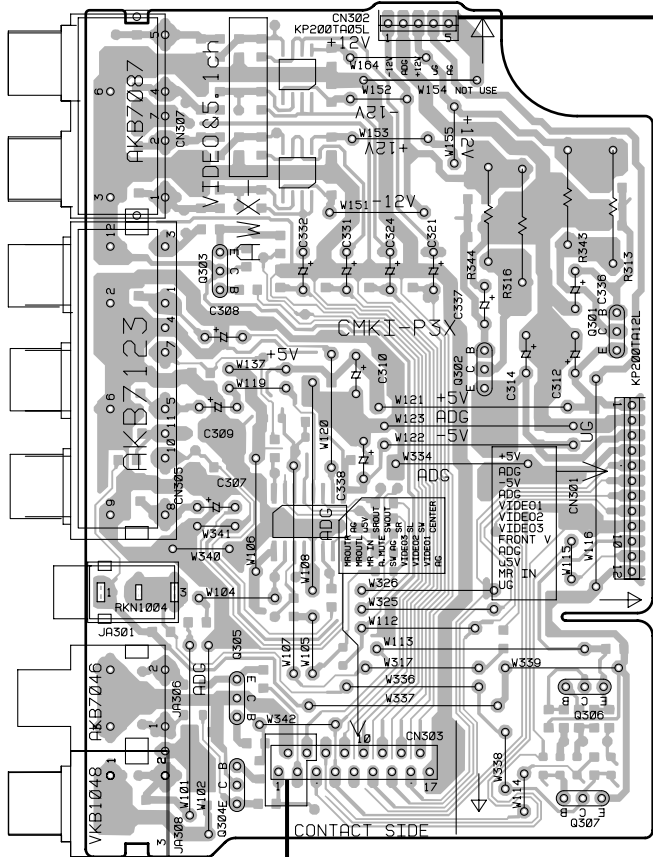

F CN803

(ANP7341-A)
SIDE A


Q303
Q301
Q302

Q306
Q305

Q304
Q307

B CN104

VIDEO&6CH IN ASSY

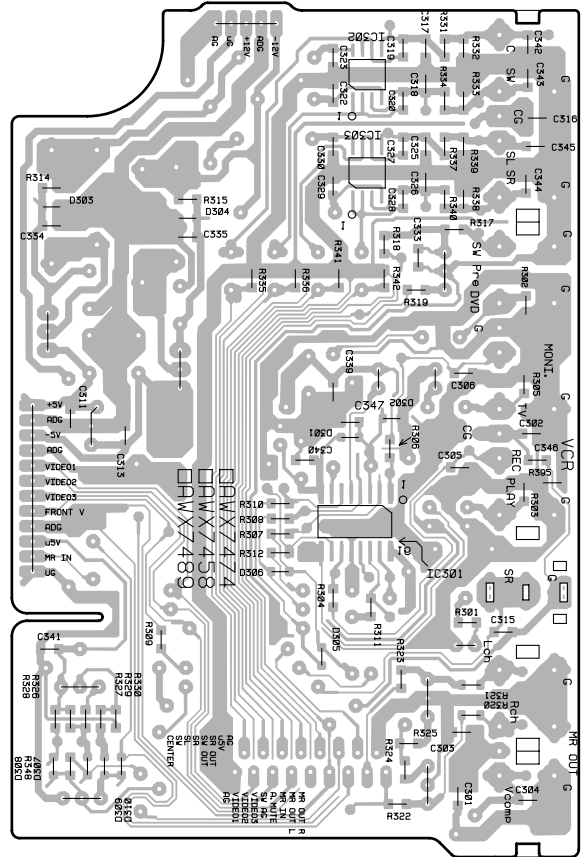

(ANP7341-A)
SIDE B

5. PCB PARTS LIST

NOTES: ● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56×10^1 \rightarrow 561 RD1/4PU 5 6 1 J

47k Ω \rightarrow 47×10^3 \rightarrow 473 RD1/4PU 4 7 3 J

0.5 Ω \rightarrow R50 RN2H R 5 0 K

1 Ω \rightarrow 1R0 RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562×10^1 \rightarrow 5621 RN1/4PC 5 6 2 1 F

■ CONTRAST OF PCB ASSEMBLIES

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|---------------------------|---------------------------|---------|
| | | VSX-D409 /KUXJI, KCXJI | VSX-D309 /KUXJI, KCXJI | |
| NSP | COMPLEX ASSY | AWK7569 | AWK7565 | |
| NSP | — POWER SW ASSY | AWX7385 | AWX7385 | |
| | — R.ENCODER ASSY | AWX7386 | AWX7386 | |
| | — VIDEO&6CH IN ASSY | AWX7474 | AWX7474 | |
| | — FRONT ASSY | AWX7479 | AWX7475 | |
| NSP | — DIGITAL IN ASSY | AWX7505 | AWX7476 | |
| | — H.P. ASSY | AWX7556 | AWX7556 | |
| NSP | AMP&PS ASSY | AWK7570 | AWK7566 | |
| NSP | — AMP INPUT ASSY | AWX7382 | AWX7382 | |
| | — REGULATOR ASSY | AWX7467 | AWX7493 | |
| NSP | — TRANS2 ASSY | AWX7468 | AWX7468 | |
| | — TRANS1 ASSY | AWX7390 | AWX7390 | |
| NSP | — TRANS3 ASSY | AWX7392 | AWX7392 | |
| | — AMP&PRIMARY ASSY | AWX7480 | AWX7506 | |
| | D.D & INPUT ASSY | AWX7649 | AWX7494 | |

■ CONTRAST OF PCB ASSEMBLIES

B D.D & INPUT ASSY

AWX7494 and AWX7649 are constructed the same except for the following :

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|--------------|-------------|---------|
| | | AWX7649 | AWX7494 | |
| | C197, C198 | CCSQCH101J50 | Not used | |
| | R129, R130 | RS1/10S331J | RS1/10S0R0J | |
| | R153, R154, R159, R160 | RS1/16S103J | RS1/16S132J | |
| | R165 | RS1/16S182J | RS1/16S242J | |
| | R189, R190, R197, R198 | RS1/16S242J | RS1/16S362J | |
| | R213, R214 | Not used | RS1/16S0R0J | |
| | JA101 PIN JACK(4P) | AKB7048 | AKB7050 | |
| | JA102 PIN JACK(4P) | AKB7048 | Not used | |

F REGULATOR ASSY

AWX7493 and AWX7467 are constructed the same except for the following :

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|----------|----------|---------|
| | | AWX7467 | AWX7493 | |
| | Q805 | KRA103M | Not used | |
| | Q806 | KRC101M | Not used | |

VSX-D409, VSX-D309

C AMP&PRIMARY ASSY

AWX7506 and AWX7480 are constructed the same except for the following :

| Mark | Symbol and Description | Part No. | | Remarks |
|-------------|--|--|--|---------|
| | | AWX7480 | AWX7506 | |
| △ △ △ | IC601 IC602 IC604-IC607 PROTECTOR (10A) D758 RY754 | PAC010A PAC011A AEK7022 1SS133 ASR7001 | PAC012A PAC013A Not used Not used Not used | |
| △ | C701, C702 C703, C704 C709, C710 R711 R757 | ACH7137(4700μF/71V) ACH7135 (3300μF/42V) Not used RS2LMF392J RD1/4PU223J | Not used CEAT222M35 ACH7136 (3300μF/56V) RS2LMF272J Not used | |
| | R758 CN753 PIN JACK 1-P CN754 SPEAKER TERMINAL 8-P 752 SPEAKER TERMINAL 4-P | RD1/4PU202J AKB7042 AKB7057 Not used | Not used Not used Not used AKE1012 | |

J DIGITAL IN ASSY

AWX7476 and AWX7505 are constructed the same except for the following :

| Mark | Symbol and Description | Part No. | | Remarks |
|------|--|--|----------------------------------|---------|
| | | AWX7505 | AWX7476 | |
| | C1901 R1901 JA1903 OPTICAL RECEIV MOD. | CKSQYB102K25 RS1/10S101J GP1F32R | Not used Not used Not used | |

K FRONT ASSY

AWX7475 and AWX7479 are constructed the same except for the following :

| Mark | Symbol and Description | Part No. | | Remarks |
|------|------------------------|-------------|-------------|---------|
| | | AWX7479 | AWX7475 | |
| | R429 | RS1/10S751J | RS1/10S182J | |

PCB PARTS LIST FOR VSX-D409 UNLESS OTHERWISE NOTED

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|-------------------------------|--------|-------------------|--------------|--------|--------------------|--------------|----------|
| A AMP INPUT ASSY | | | | IC1201 | DTS DECODER IC | YSS912C | |
| OTHERS | | | | IC1301 | SRAM(256K) | KM68257EJ-15 | |
| | CN290 | 17P CONNECTOR | 52044-1745 | IC1401 | REGULATOR IC | PQ20WZ51 | |
| | CN291 | 16P SOCKET | KP200TA16L | IC1601 | E-SW IC | TC9164AF | |
| | | | | IC1602 | IC | NJM4558MD | |
| | | | | IC1603 | IC | NJM4558MD | |
| | | | | IC1604 | IC | NJM4558MD | |
| | | | | IC1701 | IC | NJM4558MD | |
| | | | | IC1702 | IC | NJM4558MD | |
| | | | | IC1703 | IC | NJM4558MD | |
| | | | | IC1704 | IC | NJM4558MD | |
| | | | | IC1705 | IC | NJM4558MD | |
| | | | | Q101 | CHIP TRANSISTOR | 2SC2412K | |
| | | | | Q103 | TRANSISTOR | DTA143EK | |
| | | | | Q104 | DIGITAL TRANSISTOR | DTC124EK | |
| | | | | Q105 | CHIP MUTING TR | 2SC3326 | |
| | | | | Q106 | CHIP MUTING TR | 2SC3326 | |
| | | | | Q107 | CHIP MUTING TR | 2SC3326 | |
| | | | | Q108 | CHIP MUTING TR | 2SC3326 | |
| | | | | Q109 | CHIP MUTING TR | 2SC3326 | |
| B D.D & INPUT ASSY | | | | | | | |
| SEMICONDUCTORS | | | | | | | |
| | IC101 | ANALOG SWITCH IC | TC9273F-007 | | | | |
| | IC102 | E-SW IC | TC9163AF | | | | |
| | IC103 | E-VR IC | M62446FP | | | | |
| | IC104 | OP-AMP IC | UPC4570G2 | | | | |
| | IC105 | OP-AMP IC | UPC4570G2 | | | | |
| | IC106 | OP-AMP IC | UPC4570G2 | | | | |
| | IC107 | OP-AMP IC | UPC4570G2 | | | | |
| | IC108 | OP-AMP IC | M5216FP | | | | |
| | IC1001 | OP-AMP IC | NJM2100M | | | | |
| | IC1101 | MULTI CH CODEC IC | CS4226-KQ(J) | | | | |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|--------------------------|-------|---------------------|--------------|------|------|-------------------|--------------|
| | Q110 | CHIP MUTING TR | 2SC3326 | | C121 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q111 | CHIP MUTING TR | 2SC3326 | | C122 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q112 | CHIP MUTING TR | 2SC3326 | | C123 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q1001 | CHIP MUTING TR | 2SC3326 | | C124 | CHIP CERAMIC C. | CKSRYB103K50 |
| | Q1002 | CHIP MUTING TR | 2SC3326 | | C125 | CHIP CERAMIC C. | CKSRYB103K50 |
| | Q1003 | CHIP DIGITAL TRANS. | DTA124EK | | C126 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q1004 | DIGITAL TRANSISTOR | DTC124EK | | C127 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q1101 | CHIP DIGITAL TRANS. | DTA124EK | | C128 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | Q1102 | DIGITAL TRANSISTOR | DTC124EK | | C130 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1601 | CHIP MUTING TR | 2SC3326 | | C131 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1602 | CHIP MUTING TR | 2SC3326 | | C132 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1603 | CHIP MUTING TR | 2SC3326 | | C133 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1604 | CHIP MUTING TR | 2SC3326 | | C134 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1605 | CHIP MUTING TR | 2SC3326 | | C135 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1606 | CHIP MUTING TR | 2SC3326 | | C136 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1607 | CHIP DIGITAL TRANS. | DTA124EK | | C137 | ELECT. CAPACITOR | CEAT100M50 |
| | Q1608 | CHIP DIGITAL TRANS. | DTA124EK | | C138 | CHIP CERAMIC C. | CKSRYB822K50 |
| | Q1609 | DIGITAL TRANSISTOR | DTC124EK | | C139 | CHIP CERAMIC C. | CKSRYB153K50 |
| | Q1610 | CHIP DIGITAL TRANS. | DTA124EK | | C140 | CERAMIC CAPACITOR | CKSQYB334K16 |
| | D101 | CHIP ZENER DIODE | UDZS6.8B | | C141 | CHIP CERAMIC C. | CKSRYB822K50 |
| | D102 | CHIP ZENER DIODE | UDZS6.8B | | C142 | CHIP CERAMIC C. | CKSRYB153K50 |
| | D103 | DIODE | 1SS355 | | C143 | CERAMIC CAPACITOR | CKSQYB334K16 |
| | D104 | CHIP ZENER DIODE | UDZS5.1B | | C144 | ELECT. CAPACITOR | CEAT3R3M50 |
| | D105 | DIODE | 1SS355 | | C145 | ELECT. CAPACITOR | CEAT3R3M50 |
| | D106 | DIODE | 1SS355 | | C146 | ELECT. CAPACITOR | CEAT100M50 |
| | D1601 | DIODE | 1SS181 | | C147 | ELECT. CAPACITOR | CEAT3R3M50 |
| | D1602 | DIODE | 1SS181 | | C148 | ELECT. CAPACITOR | CEAT3R3M50 |
| COILS AND FILTERS | | | | | C149 | ELECT. CAPACITOR | CEAT3R3M50 |
| | F101 | CHIP BEAD | DTF1067 | | C150 | ELECT. CAPACITOR | CEAT3R3M50 |
| | F1101 | CHIP BEAD | DTF1064 | | C151 | ELECT. CAPACITOR | CEAT3R3M50 |
| | F1123 | CHIP BEAD | DTF1064 | | C152 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | F1124 | CHIP BEAD | DTF1064 | | C153 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | F1203 | CHIP BEAD | DTF1064 | | C154 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | F1204 | CHIP BEAD | DTF1064 | | C155 | ELECT. CAPACITOR | CEAT471M10 |
| | F1302 | CHIP BEAD | DTF1064 | | C156 | ELECT. CAPACITOR | CEAT471M10 |
| | F1601 | CHIP BEAD | DTF1064 | | C157 | ELECT. CAPACITOR | CEAT101M16 |
| | F1602 | CHIP BEAD | DTF1064 | | C159 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | L1101 | CHIP SOLID INDUCTOR | QTL1013 | | C160 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | L1102 | CHIP SOLID INDUCTOR | QTL1013 | | C161 | ELECT. CAPACITOR | CEAT470M25 |
| | L1103 | CHIP SOLID INDUCTOR | QTL1013 | | C162 | ELECT. CAPACITOR | CEAT470M25 |
| | L1104 | CHIP SOLID INDUCTOR | QTL1013 | | C163 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | L1401 | CHIP SOLID INDUCTOR | ATL7002 | | C164 | CERAMIC CAPACITOR | CCSRCH101J50 |
| CAPACITORS | | | | | C165 | ELECT. CAPACITOR | CEAT470M25 |
| | C101 | CHIP CAPACITOR | CCSQCH101J50 | | C166 | ELECT. CAPACITOR | CEAT470M25 |
| | C102 | CHIP CAPACITOR | CCSQCH101J50 | | C167 | CHIP CERAMIC C. | CCSRCH221J50 |
| | C103 | CHIP CAPACITOR | CCSQCH101J50 | | C168 | CERAMIC CAPACITOR | CKSRYB152K50 |
| | C104 | CHIP CAPACITOR | CCSQCH101J50 | | C169 | ELECT. CAPACITOR | CEAT470M25 |
| | C105 | CHIP CAPACITOR | CCSQCH101J50 | | C170 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C106 | CHIP CAPACITOR | CCSQCH101J50 | | C171 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C107 | CHIP CAPACITOR | CCSQCH101J50 | | C172 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C108 | CHIP CAPACITOR | CCSQCH101J50 | | C173 | CHIP CERAMIC C. | CCSRCH151J50 |
| | C109 | CHIP CAPACITOR | CCSQCH101J50 | | C174 | CHIP CERAMIC C. | CCSRCH151J50 |
| | C110 | CHIP CAPACITOR | CCSQCH101J50 | | C175 | ELECT. CAPACITOR | CEAT101M16 |
| | C111 | CHIP CAPACITOR | CCSQCH101J50 | | C176 | ELECT. CAPACITOR | CEAT101M16 |
| | C112 | CHIP CAPACITOR | CCSQCH101J50 | | C177 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C113 | CHIP CAPACITOR | CCSQCH101J50 | | C178 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C114 | CHIP CAPACITOR | CCSQCH101J50 | | C179 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C115 | ELECT. CAPACITOR | CEAT4R7M50 | | C180 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C116 | ELECT. CAPACITOR | CEAT4R7M50 | | C183 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C117 | ELECT. CAPACITOR | CEAT470M25 | | C184 | CERAMIC CAPACITOR | CKSQYF473Z50 |
| | C118 | ELECT. CAPACITOR | CEAT470M25 | | C185 | CERAMIC CAPACITOR | CKSQYF473Z50 |
| | C119 | CHIP CERAMIC C. | CKSRYB103K50 | | C186 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C120 | CHIP CERAMIC C. | CKSRYB103K50 | | C187 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | | | | | C188 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | | | | | C189 | CERAMIC CAPACITOR | CKSQYB103K50 |

VSX-D409, VSX-D309

| Mark | No. | Description | Part No. |
|------|-------|-------------------|--------------|
| | C190 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C191 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C192 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C193 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C194 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C195 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C197 | CHIP CAPACITOR | CCSQCH101J50 |
| | C198 | CHIP CAPACITOR | CCSQCH101J50 |
| | C199 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C201 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C202 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C205 | ELECT. CAPACITOR | CEAT3R3M50 |
| | C207 | CHIP CAPACITOR | CCSQCH101J50 |
| | C208 | CHIP CAPACITOR | CCSQCH101J50 |
| | C209 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1001 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | C1002 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | C1003 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1004 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1005 | ELECT. CAPACITOR | CEAT221M6R3 |
| | C1006 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1007 | ELECT. CAPACITOR | CEJANP100M10 |
| | C1008 | ELECT. CAPACITOR | CEJANP100M10 |
| | C1009 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1101 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1102 | CERAMIC CAPACITOR | CCSRCH102J50 |
| | C1103 | CERAMIC CAPACITOR | CCSRCH390J50 |
| | C1104 | CERAMIC CAPACITOR | CCSRCH390J50 |
| | C1105 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1106 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1107 | CHIP CERAMIC C. | CKSRYB223K50 |
| | C1108 | CERAMIC CAPACITOR | CKSQYB224K16 |
| | C1109 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1110 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1111 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1112 | ELECT. CAPACITOR | CEAT1R0M50 |
| | C1113 | CERAMIC CAPACITOR | CCSRCH180J50 |
| | C1114 | CERAMIC CAPACITOR | CCSRCH180J50 |
| | C1115 | ELECT. CAPACITOR | CEATR47M50 |
| | C1116 | ELECT. CAPACITOR | CEAT101M10 |
| | C1117 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1118 | CHIP CERAMIC C. | CCSQCH471J50 |
| | C1119 | CHIP CERAMIC C. | CCSQCH271J50 |
| | C1121 | ELECT. CAPACITOR | CEAT101M10 |
| | C1122 | ELECT. CAPACITOR | CEAT101M10 |
| | C1123 | CHIP CAPACITOR | CCSQCH331J50 |
| | C1124 | CHIP CAPACITOR | CCSQCH331J50 |
| | C1128 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1129 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1130 | CHIP CERAMIC C. | CCSQCH471J50 |
| | C1132 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1133 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1134 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1201 | ELECT. CAPACITOR | CEAT101M10 |
| | C1202 | ELECT. CAPACITOR | CEAT221M6R3 |
| | C1203 | CHIP CERAMIC C. | CCSRCH200J50 |
| | C1204 | CHIP CERAMIC C. | CCSRCH200J50 |
| | C1205 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1206 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1207 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1208 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1209 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1210 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1211 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1212 | CERAMIC CAPACITOR | CCSRCH101J50 |

| Mark | No. | Description | Part No. |
|------|-------|-------------------|--------------|
| | C1213 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1214 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1215 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1216 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1217 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1218 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1219 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1220 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1221 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1222 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1223 | CERAMIC CAPACITOR | CCSRCH101J50 |
| | C1224 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1225 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1226 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1227 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1228 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1229 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1230 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1231 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1232 | CERAMIC CAPACITOR | CKSRYF104Z16 |
| | C1301 | ELECT. CAPACITOR | CEJA101M10 |
| | C1302 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1303 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1304 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1401 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1404 | ELECT. CAPACITOR | CEAT101M10 |
| | C1601 | CHIP CERAMIC C. | CCSRCH221J50 |
| | C1602 | CHIP CERAMIC C. | CCSRCH221J50 |
| | C1603 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1604 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1605 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1606 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1607 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1608 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1609 | CHIP CERAMIC C. | CCSRCH221J50 |
| | C1610 | CHIP CERAMIC C. | CCSRCH221J50 |
| | C1611 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1612 | CHIP CERAMIC C. | CCSRCH471J50 |
| | C1613 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1614 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1615 | CHIP CERAMIC C. | CKSRYB222K50 |
| | C1616 | CHIP CERAMIC C. | CKSRYB222K50 |
| | C1617 | CHIP CERAMIC C. | CKSRYB222K50 |
| | C1618 | CHIP CERAMIC C. | CKSRYB222K50 |
| | C1619 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1620 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1621 | CHIP CERAMIC C. | CKSRYB122K50 |
| | C1623 | CHIP CERAMIC C. | CCSRCH271J50 |
| | C1625 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1626 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C1627 | CHIP CERAMIC C. | CKSRYB222K50 |
| | C1628 | CERAMIC CAPACITOR | CKSRYF104Z50 |
| | C1629 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1630 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C1631 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1632 | CERAMIC CAPACITOR | CKSQYF104Z25 |
| | C1636 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1637 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1639 | CHIP CERAMIC C. | CCSQCH471J50 |
| | C1640 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1641 | CHIP CAPACITOR | CCSQCH101J50 |
| | C1642 | CHIP CERAMIC C. | CKSRYB103K50 |
| | C1701 | CERAMIC CAPACITOR | CKSRYB682K50 |
| | C1702 | CERAMIC CAPACITOR | CKSRYB682K50 |
| | C1703 | CHIP CERAMIC C. | CKSRYB222K50 |

| Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------------------|-------|-------------------|--------------|---------------|-----------------|----------------------------------|-------------|
| | C1704 | CHIP CERAMIC C. | CKSRYB222K50 | | R135 | CHIP RESISTOR | RS1/10S104J |
| | C1705 | CERAMIC CAPACITOR | CKSRYB104K16 | | R138 | CHIP RESISTOR | RS1/10S473J |
| | C1706 | CERAMIC CAPACITOR | CKSRYB104K16 | | R139 | CHIP RESISTOR | RS1/10S104J |
| | C1707 | CHIP CERAMIC C. | CCSRCH151J50 | | R140 | CHIP RESISTOR | RS1/10S104J |
| | C1708 | CHIP CERAMIC C. | CCSRCH151J50 | | R141 | CHIP RESISTOR | RS1/10S104J |
| | C1709 | CHIP CERAMIC C. | CKSRYB103K50 | | R142 | CHIP RESISTOR | RS1/10S104J |
| | C1710 | CHIP CERAMIC C. | CKSRYB103K50 | | R143 | CHIP RESISTOR | RS1/10S104J |
| | C1711 | CHIP CERAMIC C. | CKSRYB103K50 | | R144 | CHIP RESISTOR | RS1/10S204J |
| | C1712 | CHIP CERAMIC C. | CKSRYB103K50 | | R157 | CHIP RESISTOR | RS1/10S104J |
| | C1713 | ELECT. CAPACITOR | CEAT220M25 | | R158 | CHIP RESISTOR | RS1/10S104J |
| | C1714 | ELECT. CAPACITOR | CEAT220M25 | | R163 | CHIP RESISTOR | RS1/10S104J |
| | C1715 | CERAMIC CAPACITOR | CKSRYB682K50 | | R164 | CHIP RESISTOR | RS1/10S104J |
| | C1716 | CERAMIC CAPACITOR | CKSRYB682K50 | △ | R174 | METAL OXIDE RESISTOR | RS1LMF101J |
| | C1717 | CHIP CERAMIC C. | CKSRYB222K50 | △ | R175 | METAL OXIDE RESISTOR | RS1LMF101J |
| | C1718 | CHIP CERAMIC C. | CKSRYB222K50 | | R182 | CHIP RESISTOR | RS1/10S473J |
| | C1719 | CERAMIC CAPACITOR | CKSRYB104K16 | | R183 | CHIP RESISTOR | RS1/10S122J |
| | C1720 | CERAMIC CAPACITOR | CKSRYB104K16 | | R185 | CHIP RESISTOR | RS1/10S104J |
| | C1721 | CHIP CERAMIC C. | CCSRCH151J50 | | R186 | CHIP RESISTOR | RS1/10S104J |
| | C1722 | CHIP CERAMIC C. | CCSRCH151J50 | | R192 | CHIP RESISTOR | RS1/10S104J |
| | C1723 | CHIP CERAMIC C. | CKSRYB103K50 | | R193 | CHIP RESISTOR | RS1/10S104J |
| | C1724 | CHIP CERAMIC C. | CKSRYB103K50 | | R211 | CHIP RESISTOR | RS1/10S100J |
| | C1725 | CHIP CERAMIC C. | CKSRYB103K50 | | R212 | CHIP RESISTOR | RS1/10S100J |
| | C1726 | CHIP CERAMIC C. | CKSRYB103K50 | | R1206 | CHIP RESISTOR | RS1/10S102J |
| | C1727 | ELECT. CAPACITOR | CEAT220M25 | | R1207 | CHIP RESISTOR | RS1/10S102J |
| | C1728 | ELECT. CAPACITOR | CEAT220M25 | | R1208 | CHIP RESISTOR | RS1/10S102J |
| | C1729 | CERAMIC CAPACITOR | CKSRYB682K50 | | R1211 | CHIP RESISTOR | RS1/10S472J |
| | C1731 | CHIP CERAMIC C. | CKSRYB222K50 | | R1212 | CHIP RESISTOR | RS1/10S472J |
| | C1732 | CERAMIC CAPACITOR | CKSRYB682K50 | | R1213 | CHIP RESISTOR | RS1/10S472J |
| | C1733 | CERAMIC CAPACITOR | CKSRYB104K16 | | R1302 | CHIP RESISTOR | RS1/10S0R0J |
| | C1734 | CERAMIC CAPACITOR | CKSRYB104K16 | | R1638 | CHIP RESISTOR | RS1/10S102J |
| | C1735 | CHIP CERAMIC C. | CCSRCH151J50 | | R1639 | CHIP RESISTOR | RS1/10S102J |
| | C1736 | CERAMIC CAPACITOR | CCSRCH102J50 | | R1640 | CHIP RESISTOR | RS1/10S102J |
| | C1737 | CHIP CERAMIC C. | CKSRYB103K50 | | R1641 | CHIP RESISTOR | RS1/10S473J |
| | C1738 | CHIP CERAMIC C. | CKSRYB103K50 | | R1689 | CHIP RESISTOR | RS1/10S0R0J |
| | C1739 | ELECT. CAPACITOR | CEAT220M25 | | R1713 | CHIP RESISTOR | RS1/10S473J |
| | C1740 | ELECT. CAPACITOR | CEAT220M25 | | R1714 | CHIP RESISTOR | RS1/10S473J |
| | | | | | R1727 | CHIP RESISTOR | RS1/10S473J |
| | | | | | R1728 | CHIP RESISTOR | RS1/10S473J |
| | | | | | R1741 | CHIP RESISTOR | RS1/10S473J |
| | | | | | R1742 | CHIP RESISTOR | RS1/10S473J |
| | | | | | Other Resistors | | RS1/16S□□□J |
| RESISTORS | | | | OTHERS | | | |
| | R101 | CHIP RESISTOR | RS1/10S331J | | CN101 | 19P SOCKET | KP200TA19L |
| | R102 | CHIP RESISTOR | RS1/10S331J | | CN102 | 32P CONNECTOR | 52045-3245 |
| | R103 | CHIP RESISTOR | RS1/10S222J | | CN103 | 20P CONNECTOR | 52045-1945 |
| | R104 | CHIP RESISTOR | RS1/10S222J | | CN104 | CONNECTOR | 52045-1345 |
| | R105 | CHIP RESISTOR | RS1/10S331J | | CN105 | CONNECTOR | 52045-1345 |
| | R106 | CHIP RESISTOR | RS1/10S331J | | CN106 | CONNECTOR | 52045-1745 |
| | R107 | CHIP RESISTOR | RS1/10S331J | | CN1501 | CONNECTOR 6P | 52045-0645 |
| | R108 | CHIP RESISTOR | RS1/10S331J | | JA101 | PIN JACK(4P) | AKB7048 |
| | R109 | CHIP RESISTOR | RS1/10S331J | | JA102 | PIN JACK(4P) | AKB7048 |
| | R110 | CHIP RESISTOR | RS1/10S331J | | JA103 | PIN JACK(4P) | AKB7048 |
| | R111 | CHIP RESISTOR | RS1/10S222J | | JA104 | PIN JACK(4P) | AKB7048 |
| | R112 | CHIP RESISTOR | RS1/10S222J | | X1101 | CRYSTAL RESONATOR (18.432MHz) | RSS1052 |
| | R113 | CHIP RESISTOR | RS1/10S331J | | X1201 | CRYSTAL RESONATOR (12.288MHz) | VSS1140 |
| | R114 | CHIP RESISTOR | RS1/10S331J | | | | |
| | R115 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R116 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R117 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R118 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R121 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R122 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R129 | CHIP RESISTOR | RS1/10S331J | | | | |
| | R130 | CHIP RESISTOR | RS1/10S331J | | | | |
| | R132 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R133 | CHIP RESISTOR | RS1/10S104J | | | | |
| | R134 | CHIP RESISTOR | RS1/10S104J | | | | |

VSX-D409, VSX-D309

| Mark | No. | Description | Part No. |
|-------------------------------|-------|-----------------|------------|
| C AMP&PRIMARY ASSY | | | |
| SEMICONDUCTORS | | | |
| | IC51 | REGULATOR IC | NJM78M56FA |
| △ | IC601 | AUDIO IC | PAC010A |
| △ | IC602 | AUDIO IC | PAC011A |
| △ | IC603 | PROTECTOR (1A) | AEK7009 |
| △ | IC604 | PROTECTOR (10A) | AEK7022 |
| △ | IC605 | PROTECTOR (10A) | AEK7022 |
| △ | IC606 | PROTECTOR (10A) | AEK7022 |
| △ | IC607 | PROTECTOR (10A) | AEK7022 |
| | Q51 | TRANSISTOR | KRC101M |
| | Q601 | TRANSISTOR | 2SC2878 |
| | Q602 | TRANSISTOR | 2SC2878 |
| | Q603 | TRANSISTOR | 2SC2878 |
| | Q604 | TRANSISTOR | 2SC2878 |
| | Q605 | TRANSISTOR | 2SC2240 |
| | Q606 | TRANSISTOR | 2SC2240 |
| | Q631 | TRANSISTOR | 2SC2878 |
| | Q632 | TRANSISTOR | 2SC2878 |
| | Q633 | TRANSISTOR | 2SC2240 |
| | Q651 | TRANSISTOR | 2SC2878 |
| | Q652 | TRANSISTOR | 2SC2878 |
| | Q653 | TRANSISTOR | 2SC2878 |
| | Q654 | TRANSISTOR | 2SC2878 |
| | Q655 | TRANSISTOR | 2SC2240 |
| | Q656 | TRANSISTOR | 2SC2240 |
| | Q691 | TRANSISTOR | 2SC1740S |
| | Q692 | TRANSISTOR | 2SC1740S |
| | Q701 | TRANSISTOR | 2SD1859X |
| | Q702 | TRANSISTOR | 2SB1238X |
| | Q703 | TRANSISTOR | 2SA1145 |
| | Q704 | TRANSISTOR | 2SC1845 |
| △ | D51 | DIODE | S5688G |
| △ | D52 | DIODE | S5688G |
| △ | D53 | DIODE | S5688G |
| △ | D54 | DIODE | S5688G |
| △ | D55 | DIODE | S5688G |
| | D56 | DIODE | 1SS133 |
| | D58 | ZENER DIODE | MTZJ5.1A |
| | D601 | DIODE | 1SS133 |
| | D602 | DIODE | 1SS133 |
| | D603 | DIODE | 1SS133 |
| | D604 | DIODE | 1SS133 |
| | D605 | ZENER DIODE | MTZJ8.2A |
| | D606 | ZENER DIODE | MTZJ8.2A |
| | D631 | DIODE | 1SS133 |
| | D632 | DIODE | 1SS133 |
| | D633 | ZENER DIODE | MTZJ8.2A |
| | D634 | ZENER DIODE | MTZJ8.2A |
| | D651 | DIODE | 1SS133 |
| | D652 | DIODE | 1SS133 |
| | D653 | DIODE | 1SS133 |
| △ | D654 | DIODE | 1SS133 |
| △ | D701 | DIODE | D5SBA20(B) |
| △ | D702 | DIODE | D5SBA20(B) |
| | D711 | ZENER DIODE | MTZJ22D |
| | D712 | ZENER DIODE | MTZJ5.1B |
| | D752 | DIODE | 1SS133 |
| | D754 | DIODE | 1SS133 |
| | D756 | DIODE | 1SS133 |
| | D758 | DIODE | 1SS133 |

| Mark | No. | Description | Part No. |
|----------------------------|-------|-------------------------------|-------------|
| COILS AND FILTERS | | | |
| △ | L51 | LINE FILTER | ATF7018 |
| | L751 | COIL | ATH1004 |
| | L752 | COIL | ATH1004 |
| | L753 | COIL | ATH1004 |
| | L761 | COIL | ATH1004 |
| | L762 | COIL | ATH1004 |
| SWITCHES AND RELAYS | | | |
| △ | RY51 | JOE LOWPOWER RELAY | ASR7013 |
| | RY751 | RELAY | ASR7001 |
| | RY752 | RELAY | ASR7001 |
| | RY753 | RELAY | ASR7001 |
| | RY754 | RELAY | ASR7001 |
| CAPACITORS | | | |
| △ | C51 | CKA (10000pF/AC250V) | ACG7020 |
| △ | C52 | CKA (10000pF/AC250V) | ACG7020 |
| | C53 | ELECT. CAPACITOR | CEAT102M16 |
| | C54 | ELECT. CAPACITOR | CEAT470M25 |
| | C55 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C56 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C57 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C601 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C602 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C603 | CERAMIC CAPACITOR | CKCYB331K50 |
| | C604 | CERAMIC CAPACITOR | CKCYB331K50 |
| | C605 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C606 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C607 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C608 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C609 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C610 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C611 | ELECT. CAPACITOR | CEAT101M16 |
| | C612 | ELECT. CAPACITOR | CEAT101M16 |
| | C615 | ELECT. CAPACITOR | CEANP2R2M50 |
| | C616 | ELECT. CAPACITOR | CEANP2R2M50 |
| | C631 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C632 | CERAMIC CAPACITOR | CKCYB331K50 |
| | C633 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C634 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C635 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C636 | ELECT. CAPACITOR | CEAT101M16 |
| | C638 | ELECT. CAPACITOR | CEANP2R2M50 |
| | C651 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C652 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C653 | CERAMIC CAPACITOR | CKCYB331K50 |
| | C654 | CERAMIC CAPACITOR | CKCYB331K50 |
| | C655 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C656 | ELECT. CAPACITOR | CEAT4R7M50 |
| | C657 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C658 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C659 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C660 | CERAMIC CAPACITOR | CCCSL6R0D50 |
| | C661 | ELECT. CAPACITOR | CEAT101M16 |
| | C662 | ELECT. CAPACITOR | CEAT101M16 |
| | C665 | ELECT. CAPACITOR | CEANP2R2M50 |
| | C666 | ELECT. CAPACITOR | CEANP2R2M50 |
| | C691 | CERAMIC CAPACITOR | CKCYB102K50 |
| | C692 | ELECT. CAPACITOR | CEAT221M10 |
| | C701 | ELECT. CAPACITOR (4700μF/71V) | ACH7137 |

| Mark | No. | Description | Part No. |
|------|------|---------------------------------|-------------|
| | C702 | ELECT.CAPACITOR (4700μF/71V) | ACH7137 |
| | C703 | ELECT.CAPACITOR (3300μF/42V) | ACH7135 |
| | C704 | ELECT.CAPACITOR (3300μF/42V) | ACH7135 |
| | C705 | ELECT. CAPACITOR | CEAT100M2A |
| | C706 | ELECT. CAPACITOR | CEAT100M2A |
| | C707 | CKA (0.01μF/AC250V) | ACG1005 |
| | C708 | CKA (0.01μF/AC250V) | ACG1005 |
| | C711 | ELECT. CAPACITOR | CEAT101M35 |
| | C712 | ELECT. CAPACITOR | CEAT101M10 |
| | C751 | AUDIO FILM CAPACITOR | CFTYA104J50 |
| | C752 | AUDIO FILM CAPACITOR | CFTYA104J50 |
| | C755 | AUDIO FILM CAPACITOR | CFTYA104J50 |
| | C761 | AUDIO FILM CAPACITOR | CFTYA104J50 |
| | C762 | AUDIO FILM CAPACITOR | CFTYA104J50 |

RESISTORS

| | | | |
|---|-----------------|-----------------------|--------------|
| △ | R51 | RESISTOR(2.2MΩ/ 1/2W) | RCN1080 |
| △ | R52 | CARBON FILM RESISTOR | RD1/2PM270J |
| △ | R615 | RESISTOR (0.22Ω/5W) | ACN7094 |
| △ | R616 | RESISTOR (0.22Ω/5W) | ACN7094 |
| △ | R638 | RESISTOR (0.22Ω/5W) | ACN7094 |
| △ | R665 | RESISTOR (0.22Ω/5W) | ACN7094 |
| △ | R666 | RESISTOR (0.22Ω/5W) | ACN7094 |
| △ | R711 | METAL OXIDE RESISTOR | RS2LMF392J |
| △ | R751 | CARBON FILM RESISTOR | RD1/4PMF101J |
| △ | R752 | CARBON FILM RESISTOR | RD1/4PMF101J |
| △ | R753 | METAL OXIDE RESISTOR | RS1LMF4R7J |
| △ | R754 | METAL OXIDE RESISTOR | RS1LMF4R7J |
| △ | R755 | CARBON FILM RESISTOR | RD1/4PMF101J |
| △ | R756 | METAL OXIDE RESISTOR | RS1LMF4R7J |
| △ | R761 | CARBON FILM RESISTOR | RD1/4PMF101J |
| △ | R762 | CARBON FILM RESISTOR | RD1/4PMF101J |
| △ | R763 | METAL OXIDE RESISTOR | RS1LMF4R7J |
| △ | R764 | METAL OXIDE RESISTOR | RS1LMF4R7J |
| | Other Resistors | | RD1/4PU□□□J |

OTHERS

| | | | |
|---|-------|----------------------|------------|
| | 51 | AC SOCKET 1-P | AKP1060 |
| | 701 | 7P CABLE HOLDER | 51048-0700 |
| | CN51 | AC CODE SOCKET | RKP1751 |
| | CN53 | 22P CONNECTOR | 52045-2245 |
| | CN601 | 16P PLUG | KM200TA16 |
| | CN751 | SPEAKER TERMINAL 6-P | AKE7020 |
| | CN753 | PIN JACK 1-P | AKB7042 |
| | CN754 | SPEAKER TERMINAL 8-P | AKE7057 |
| | H51 | FUSE CLIP | AKR7001 |
| | H52 | FUSE CLIP | AKR7001 |
| | H53 | FUSE CLIP | AKR7001 |
| | H54 | FUSE CLIP | AKR7001 |
| | H701 | FUSE CLIP | AKR7001 |
| | H702 | FUSE CLIP | AKR7001 |
| △ | T51 | STANDBY TRANSFORMER | ATT7057 |
| | KN51 | EARTH METAL FITTING | VNF1084 |
| | KN601 | EARTH METAL FITTING | VNF1084 |

D TRANS2 ASSY**SEMICONDUCTORS**

| | | | |
|---|-------|------------------|---------|
| △ | IC851 | PROTECTOR (1.6A) | AEK7012 |
| △ | IC852 | PROTECTOR (1.6A) | AEK7012 |
| △ | IC853 | PROTECTOR (1.6A) | AEK7012 |

| Mark | No. | Description | Part No. |
|---------------|-----|-----------------|------------|
| OTHERS | | | |
| | 851 | 7P CABLE HOLDER | 51048-0700 |

E TRANS3 ASSY

TRANS3 ASSY has no service part.

F REGULATOR ASSY**SEMICONDUCTORS**

| | | | |
|---|-------|--------------|------------|
| | IC801 | REGULATOR IC | NJM78M12FA |
| | IC802 | REGULATOR IC | NJM79M12FA |
| | IC803 | REGULATOR IC | NJM78M05FA |
| | IC804 | REGULATOR IC | NJM78M05FA |
| | Q801 | TRANSISTOR | KRA103M |
| | Q802 | TRANSISTOR | KRC101M |
| | Q803 | TRANSISTOR | KRA103M |
| | Q804 | TRANSISTOR | KRC101M |
| | Q805 | TRANSISTOR | KRA103M |
| | Q806 | TRANSISTOR | KRC101M |
| △ | D801 | DIODE | S5688G |
| △ | D802 | DIODE | S5688G |
| △ | D803 | DIODE | S5688G |
| △ | D804 | DIODE | S5688G |
| △ | D805 | DIODE | S5688G |
| △ | D806 | DIODE | S5688G |
| △ | D807 | DIODE | S5688G |
| △ | D808 | DIODE | S5688G |

CAPACITORS

| | | | |
|--|------|-------------------|-------------|
| | C801 | ELECT. CAPACITOR | CEAT222M25 |
| | C802 | ELECT. CAPACITOR | CEAT222M25 |
| | C803 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C804 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C805 | ELECT. CAPACITOR | CEAT101M16 |
| | C806 | ELECT. CAPACITOR | CEAT101M16 |
| | C807 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C808 | ELECT. CAPACITOR | CEAT101M10 |
| | C809 | ELECT. CAPACITOR | CEAT222M16 |
| | C810 | CERAMIC CAPACITOR | CGCYX103M25 |
| | C811 | ELECT. CAPACITOR | CEAT101M10 |

OTHERS

| | | | |
|--|-------|---------------|------------|
| | CN801 | 22P CONNECTOR | 52045-2245 |
| | CN802 | 19P PLUG | KM200TA19 |
| | CN803 | 5P PLUG | KM200TA5 |

G TRANS1 ASSY

TRANS1 ASSY has no service part.

H VIDEO&6CH IN ASSY**SEMICONDUCTORS**

| | | | |
|--|-------|-------------|-----------|
| | IC301 | VIDEO SW IC | NJM2296M |
| | IC302 | IC | NJM4558MD |
| | IC303 | IC | NJM4558MD |
| | Q301 | TRANSISTOR | 2SC3377 |
| | Q302 | TRANSISTOR | 2SA1515 |

VSX-D409, VSX-D309

| Mark | No. | Description | Part No. |
|------|------|------------------|----------|
| | Q303 | TRANSISTOR | 2SC2878 |
| | D301 | DIODE | 1SS355 |
| | D302 | DIODE | 1SS355 |
| | D303 | CHIP ZENER DIODE | UDZS6.2B |
| | D304 | CHIP ZENER DIODE | UDZS6.2B |
| | D305 | DIODE | 1SS355 |
| | D306 | DIODE | 1SS355 |

CAPACITORS

| | | |
|------|-------------------|--------------|
| C302 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C304 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C305 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C306 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C307 | ELECT. CAPACITOR | CEAT470M25 |
| C308 | ELECT. CAPACITOR | CEAT470M25 |
| C309 | ELECT. CAPACITOR | CEAT470M25 |
| C310 | ELECT. CAPACITOR | CEAT470M25 |
| C311 | CERAMIC CAPACITOR | CKSQYB473K50 |
| C312 | ELECT. CAPACITOR | CEAT470M25 |
| C313 | CERAMIC CAPACITOR | CKSQYB473K50 |
| C314 | ELECT. CAPACITOR | CEAT470M25 |
| C315 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C316 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C317 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C318 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C319 | CHIP CAPACITOR | CCSQCH101J50 |
| C320 | CHIP CAPACITOR | CCSQCH101J50 |
| C321 | ELECT. CAPACITOR | CEAT4R7M50 |
| C322 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C323 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C324 | ELECT. CAPACITOR | CEAT4R7M50 |
| C325 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C326 | CERAMIC CAPACITOR | CKSQYB221K50 |
| C327 | CHIP CAPACITOR | CCSQCH101J50 |
| C328 | CHIP CAPACITOR | CCSQCH101J50 |
| C329 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C330 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C331 | ELECT. CAPACITOR | CEAT4R7M50 |
| C332 | ELECT. CAPACITOR | CEAT4R7M50 |
| C333 | CERAMIC CAPACITOR | CKSQYB331K50 |
| C338 | ELECT. CAPACITOR | CEAT470M25 |
| C342 | CHIP CAPACITOR | CCSQCH101J50 |
| C343 | CHIP CAPACITOR | CCSQCH101J50 |
| C344 | CHIP CAPACITOR | CCSQCH101J50 |
| C345 | CHIP CAPACITOR | CCSQCH101J50 |
| C346 | CERAMIC CAPACITOR | CKSQYB104K16 |
| C347 | CHIP CAPACITOR | CCSQCH470J50 |

RESISTORS

| | | | |
|---|-----------------|----------------------|-------------|
| △ | R343 | METAL OXIDE RESISTOR | RS1LMF820J |
| △ | R344 | METAL OXIDE RESISTOR | RS1LMF820J |
| | Other Resistors | | RS1/10S□□□J |

OTHERS

| | | |
|-------|---------------|------------|
| CN302 | 5P SOCKET | KP200TA5L |
| CN303 | 13P CONNECTOR | 52044-1345 |
| CN305 | 6P PIN JACK | AKB7123 |
| CN307 | PIN JACK(4P) | AKB7087 |
| JA301 | JACK | RKN1004 |

| Mark | No. | Description | Part No. |
|------|------|-----------------------|----------|
| | | H.P. ASSY | |
| | | SEMICONDUCTORS | |
| | Q551 | TRANSISTOR | 2SC2878 |
| | Q552 | TRANSISTOR | 2SC2878 |

CAPACITORS

| | | |
|------|-------------------|--------------|
| C551 | CERAMIC CAPACITOR | CKSQYB104K16 |
| C552 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C553 | CHIP CERAMIC C. | CCSQCH471J50 |
| C555 | CHIP CAPACITOR | CKSQYB223K50 |
| C556 | CHIP CAPACITOR | CKSQYB223K50 |

RESISTORS

| | | | |
|---|-----------------|----------------------|--------------|
| △ | R551 | METAL OXIDE RESISTOR | RS1/2LMF121J |
| △ | R552 | METAL OXIDE RESISTOR | RS1/2LMF121J |
| | Other Resistors | | RS1/10S□□□J |

OTHERS

| | | |
|-------|------------------|------------|
| 551 | CABLE HOLDER(4P) | 51063-0405 |
| JA551 | JACK | RKN1002 |

J DIGITAL IN ASSY

SEMICONDUCTORS

| | | |
|--------|----------|-------------|
| IC1901 | LOGIC IC | TC74ACT151F |
| IC1902 | LOGIC IC | TC74HCU04AF |

COILS AND FILTERS

| | | |
|-------|-----------|---------|
| F1901 | CHIP BEAD | DTF1067 |
| F1902 | CHIP BEAD | DTF1067 |
| F1903 | CHIP BEAD | DTF1067 |
| F1904 | CHIP BEAD | DTF1067 |

CAPACITORS

| | | |
|-------|-------------------|--------------|
| C1901 | CERAMIC CAPACITOR | CKSQYB104K25 |
| C1902 | CERAMIC CAPACITOR | CKSQYB104K25 |
| C1904 | ELECT. CAPACITOR | CEAT101M10 |
| C1905 | ELECT. CAPACITOR | CEAT101M10 |
| C1906 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C1907 | CHIP CERAMIC C. | CCSQCH271J50 |
| C1908 | CERAMIC CAPACITOR | CKSQYB104K25 |
| C1909 | CERAMIC CAPACITOR | CKSQYB104K25 |
| C1910 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C1911 | CERAMIC CAPACITOR | CCSQCH560J50 |
| C1912 | ELECT. CAPACITOR | CEAT101M10 |
| C1913 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C1914 | CHIP CERAMIC C. | CCSQCH271J50 |
| C1915 | CHIP CAPACITOR | CKSQYB102K50 |
| C1916 | CHIP CERAMIC C. | CCSQCH471J50 |
| C1917 | CHIP CERAMIC C. | CCSQCH220J50 |
| C1918 | CHIP CERAMIC C. | CCSQCH221J50 |
| C1919 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C1920 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C1921 | CERAMIC CAPACITOR | CKSQYB104K25 |
| C1922 | CERAMIC CAPACITOR | CKSQYB103K50 |

RESISTORS

| | | |
|---------------|--|-------------|
| All Resistors | | RS1/10S□□□J |
|---------------|--|-------------|

OTHERS

| | | |
|--------|---------------------|------------|
| CN1901 | CONNECTOR 6P | 52045-0645 |
| JA1901 | JACK | VKB1077 |
| JA1902 | OPTICAL RECEIV MOD. | GP1F32R |
| JA1903 | OPTICAL RECEIV MOD. | GP1F32R |

| Mark | No. | Description | Part No. |
|----------|-----------------------|------------------|----------|
| K | FRONT ASSY | | |
| | SEMICONDUCTORS | | |
| | IC401 | CONTROL MCU | PDG247A |
| | Q401 | TRANSISTOR | KRA103M |
| | Q402 | TRANSISTOR | KRA103M |
| | Q403 | TRANSISTOR | KRC101M |
| | Q405 | TRANSISTOR | 2SA933S |
| | Q441 | TRANSISTOR | KRC101M |
| | Q442 | TRANSISTOR | KRA103M |
| | Q471 | TRANSISTOR | KRA103M |
| | D401 | CHIP DIODE ARRAY | DAP202K |
| | D403 | DIODE | DAN217 |
| | D404 | CHIP DIODE ARRAY | DAP202K |
| | D405 | DIODE | DAN217 |
| | D407 | DIODE | 1SS355 |
| | D408 | DIODE | 1SS355 |
| | D442 | DIODE | 1SS355 |

COILS AND FILTERS

| | | |
|------|-----------------|----------|
| L401 | RADIAL INDUCTOR | LFEA2R2J |
|------|-----------------|----------|

SWITCHES AND RELAYS

| | | |
|------|--------|---------|
| S451 | SWITCH | XSG3001 |
| S452 | SWITCH | XSG3001 |
| S453 | SWITCH | XSG3001 |
| S454 | SWITCH | XSG3001 |
| S455 | SWITCH | XSG3001 |
| S456 | SWITCH | XSG3001 |
| S457 | SWITCH | XSG3001 |
| S458 | SWITCH | XSG3001 |
| S459 | SWITCH | XSG3001 |
| S460 | SWITCH | XSG3001 |
| S461 | SWITCH | XSG3001 |
| S462 | SWITCH | XSG3001 |
| S463 | SWITCH | XSG3001 |
| S464 | SWITCH | XSG3001 |
| S465 | SWITCH | XSG3001 |
| S466 | SWITCH | XSG3001 |
| S467 | SWITCH | XSG3001 |
| S469 | SWITCH | XSG3001 |
| S470 | SWITCH | XSG3001 |
| S471 | SWITCH | XSG3001 |
| S472 | SWITCH | XSG3001 |
| S473 | SWITCH | XSG3001 |
| S474 | SWITCH | XSG3001 |
| S475 | SWITCH | XSG3001 |
| S476 | SWITCH | XSG3001 |

CAPACITORS

| | | |
|------|--------------------------------|--------------|
| C401 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C402 | ELECT. CAPACITOR | CEAT221M6R3 |
| C403 | CERAMIC CAPACITOR | CKSQYB103K50 |
| C404 | EDL CAPACITOR (0.047F/5.5V) | ACH7017 |
| C405 | ELECT. CAPACITOR | CEAT221M6R3 |
| C406 | CERAMIC CAPACITOR | CKSQYB473K16 |
| C407 | CERAMIC CAPACITOR | CKSQYB473K16 |
| C408 | CERAMIC CAPACITOR | CKSQYB104K16 |
| C409 | ELECT. CAPACITOR | CEAT2R2M50 |
| C410 | ELECT. CAPACITOR | CEAT2R2M50 |

| Mark | No. | Description | Part No. |
|------|------|-------------------------------------|--------------|
| | C411 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C412 | ELECT. CAPACITOR | CEAT470M50 |
| | C416 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C418 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C420 | ELECTROLYTIC CAPACIT (220μF/35V) | ACH7101 |
| | C441 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C442 | ELECT. CAPACITOR | CEJA470M10 |
| | C451 | CHIP CAPACITOR | CKSQYB102K50 |
| | C452 | CHIP CAPACITOR | CKSQYB102K50 |
| | C453 | CHIP CAPACITOR | CKSQYB102K50 |
| | C454 | CHIP CAPACITOR | CKSQYB102K50 |
| | C491 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C492 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C493 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C494 | CERAMIC CAPACITOR | CKSQYB104K16 |
| | C495 | CHIP CAPACITOR | CKSQYB102K50 |
| | C531 | CERAMIC CAPACITOR | CKSQYB103K50 |
| | C532 | CERAMIC CAPACITOR | CKSQYB223K25 |

RESISTORS

| | |
|---------------|-------------|
| All Resistors | RS1/10S□□□J |
|---------------|-------------|

OTHERS

| | | |
|-------|-------------------------------|------------|
| 401 | REMOTE RECEIVER UNIT | GP1U27X |
| 403 | CABLE HOLDER(4P) | 51063-0405 |
| 471 | CABLE HOLDER(4P) | 51063-0405 |
| 491 | CABLE HOLDER(3P) | 51063-0305 |
| CN401 | 19P CONNECTOR | 52044-1945 |
| CN402 | 32P CONNECTOR | 52044-3245 |
| V401 | FL TUBE | AAV7072 |
| X401 | CERAMIC RESONATOR (7.2MHz) | ASS7018 |

L R.ENCODER ASSY**SWITCHES AND RELAYS**

| | | |
|------|----------------|---------|
| S511 | ROTARY ENCODER | ASX7004 |
|------|----------------|---------|

OTHERS

| | | |
|-----|------------------|------------|
| 511 | CABLE HOLDER(3P) | 51063-0305 |
|-----|------------------|------------|

M POWER SW ASSY**SEMICONDUCTORS**

| | | |
|------|-----|-------------|
| D501 | LED | BR3371XJ30A |
|------|-----|-------------|

SWITCHES AND RELAYS

| | | |
|------|--------|---------|
| S501 | SWITCH | XSG3001 |
|------|--------|---------|

RESISTORS

| | | |
|------|---------------|-------------|
| R501 | CHIP RESISTOR | RS1/10S271J |
|------|---------------|-------------|

OTHERS

| | | |
|-----|------------------|------------|
| 501 | CABLE HOLDER(4P) | 51063-0405 |
|-----|------------------|------------|


6. ADJUSTMENT

There is no information to be shown in this chapter.


7. GENERAL INFORMATION

7.1 DISASSEMBLY


■ Diagnosis

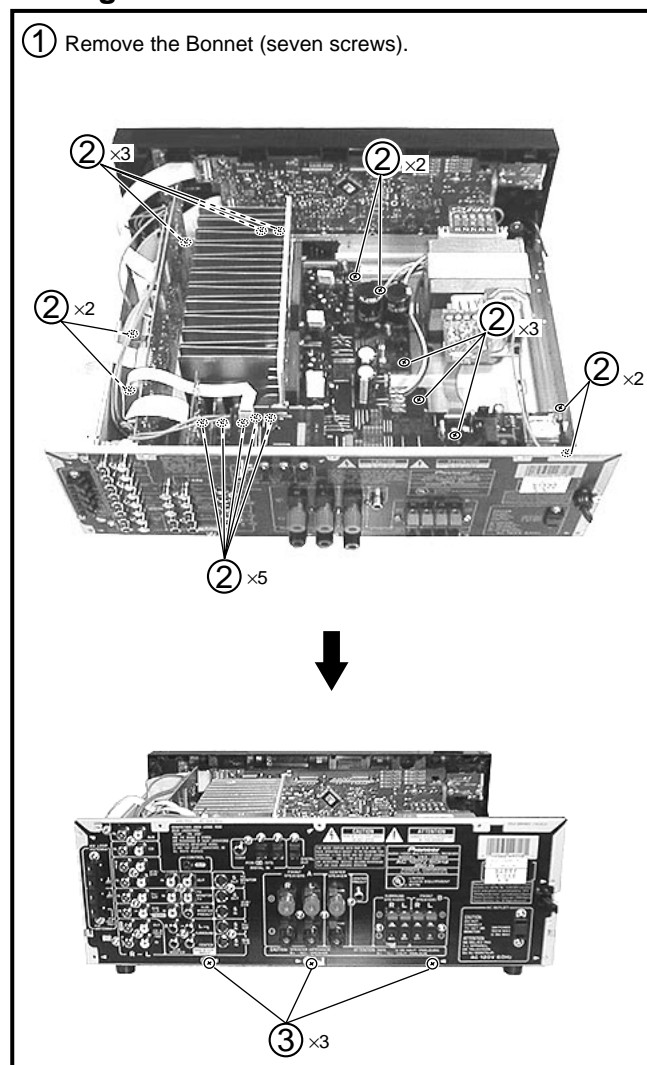

Note : This photograph shows other models.
However, the work method is the same.

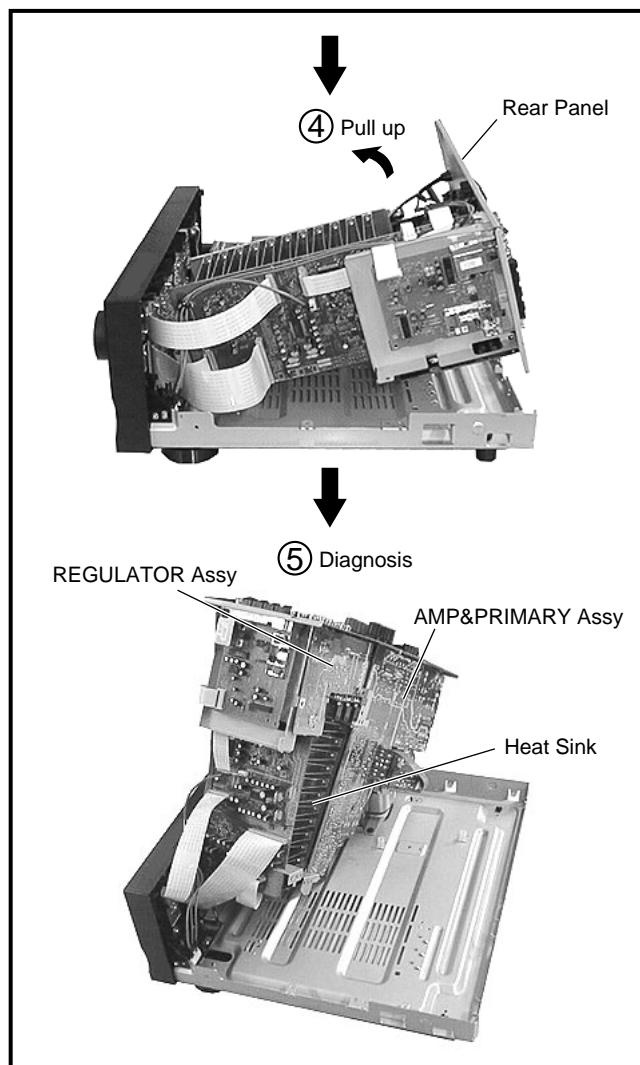

■ PCB Location

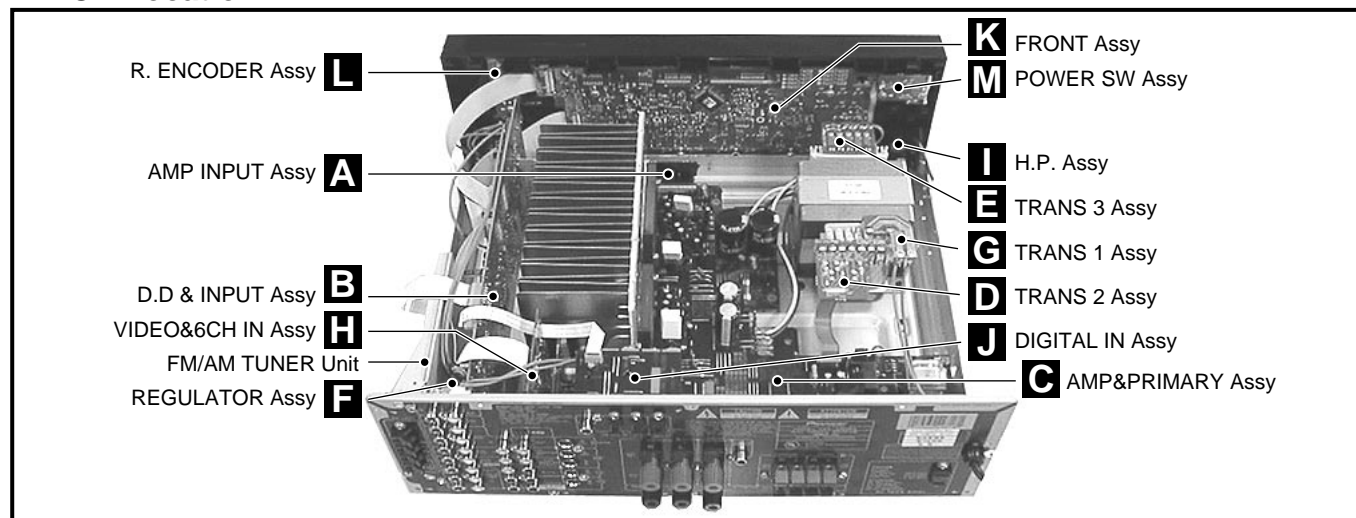

7.2 PARTS


7.2.1 IC

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

■ PDG247A (FRONT ASSY : IC401)

- System Control MCU

- Pin Arrangement (Top View)

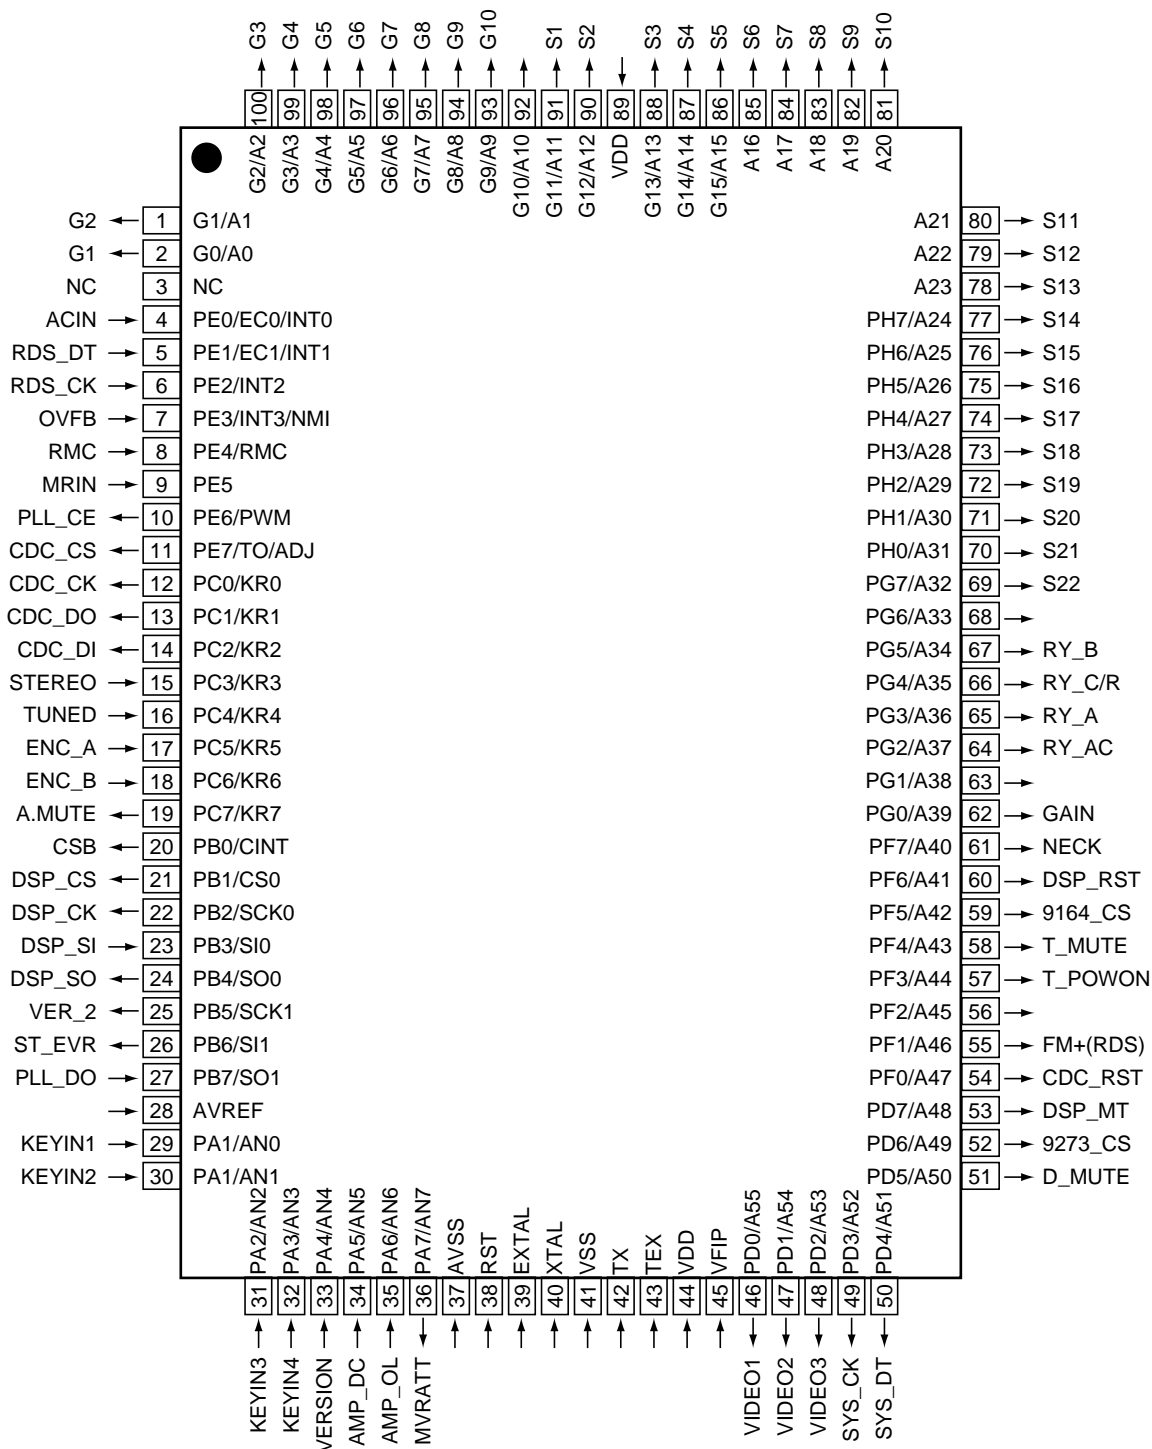

VSX-D409, VSX-D309

● Pin Function


| No. | Pin Name | I/O | Pin Function | Active |
|-----|----------|-----|--|--------|
| 1 | G2 | O | Grid output 2 | H |
| 2 | G1 | O | Grid output 1 | H |
| 3 | NC | – | Connect to VDD | |
| 4 | ACIN | I | AC pulse input | |
| 5 | RDS_DT | I | Serial control DATA signal of RDS communication | |
| 6 | RDS_CK | I | Serial control CLOCK signal of RDS communication | |
| 7 | DIRLOCK | I | ERR/OVER input from CODEC | |
| 8 | RMC | I | Remote control signal input (no-carrier signal) | |
| 9 | MRIN | I | MULTI-ROOM input | |
| 10 | PLL_CE | O | Chip select signal for communication with LC72131 (tuner) | H |
| 11 | CDC_CS | O | CODEC chip select | |
| 12 | CDC_CK | O | CODEC, TC9164 control clock | |
| 13 | CDC_DO | O | CODEC, TC9164 control data output | |
| 14 | CDC_DI | I | Data input from CODEC | |
| 15 | STEREO | I | Stereo/Monoral signal judgment signal | |
| 16 | TUNED | I | TUNED information | |
| 17 | ENC_A | I | Rotary encoder signal input A | |
| 18 | ENC_B | I | Rotary encoder signal input B | |
| 19 | AMUTE | O | Audio mute | L |
| 20 | CSB | O | Chip select for control of YSS912 sub DSP | L |
| 21 | DSP_CS | O | Chip select for control of YSS912 main DSP | L |
| 22 | DSP_CK | O | Clock signal for communication with YSS912 | H |
| 23 | DSP_SI | I | DATA input for communication with YSS912 | |
| 24 | DSP_SO | O | DATA output signal for communication with YSS912 | H |
| 25 | VER_2 | I | Destination switch 2 | |
| 26 | ST_EVR | O | Strobe signal for communication with electric volume IC | H |
| 27 | PLL_DO | I | Data input signal for communication with LC72131 (tuner) | |
| 28 | AVref | – | Connect to VDD | |
| 29 | KEYIN1 | I | Key input A/D conversion port 1 | |
| 30 | KEYIN2 | I | Key input A/D conversion port 2 | |
| 31 | KEYIN3 | I | Key input A/D conversion port 3 | |
| 32 | KEYIN4 | I | Key input A/D conversion port 4 | |
| 33 | VER_1 | I | Destination switch (A/D input) | |
| 34 | AMP_DC | I | DC abnormality detection of protection circuit (L : Abnormality detection) | L |
| 35 | AMP_OL | I | Over-load detection of protection circuit (L : Abnormality detection) | L |
| 36 | MVRATT | O | ATT control of master volume (L : Less than -15dB) | H |
| 37 | AVSS | – | Connect to VSS | |
| 38 | RST | – | Reset | |
| 39 | EXTAL | – | Connect to the oscillator (7.2MHz) | |
| 40 | XTAL | – | | |
| 41 | VSS | – | Connect to VSS | |
| 42 | TX | – | Open | |
| 43 | TEX | – | Connect to VSS | |
| 44 | VDD | – | +5V | |
| 45 | VFDP | – | -30V | |
| 46 | VIDEO1 | O | NJM2296D control | H |
| 47 | VIDEO2 | | | |
| 48 | VIDEO3 | | | |
| 49 | SYS_DT | O | Data signal for communication with M62446, TC9163, TC9164 and PLL | H |
| 50 | SYS_CK | O | Clock signal for communication with M62446, TC9163, TC9164 and PLL | H |

| No. | Pin Name | I/O | Pin Function | Active |
|-----|----------|-----|---|--------|
| 51 | D_MUTE | O | Digital mute (Not used) | H |
| 52 | 9273_CS | O | TC9273 Chip select | H |
| 53 | DSP_MT | O | DSP mute (ASSY mute) | H |
| 54 | CDC_RST | O | CODEC reset | H |
| 55 | FM+(RDS) | O | Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other) | H |
| 56 | | O | Not used | |
| 57 | T_POWON | O | Tuner module ON/OFF (North America model only) | H |
| 58 | T_MUTE | O | Tuner mute | H |
| 59 | 9164_CS | O | TC9163, TC9164 Chip select | H |
| 60 | DSP_RST | O | YSS912 reset | |
| 61 | NECK_SEL | O | 5.1ch, surround mode and A+B Stereo : H / Stereo : L | H/L |
| 62 | GAIN_SEL | O | Gain select (5.1ch and Stereo of analog input : H) | H |
| 63 | | O | Not used | H |
| 64 | RY_AC | O | AC relay ON/OFF | H |
| 65 | RY_A | O | Speaker A relay ON/OFF | H |
| 66 | RY_C/R | O | Rear/Center Speaker relay ON/OFF | H |
| 67 | | O | Not used | H |
| 68 | | O | Not used | H |
| 69 | S22 | O | Segment output 22 | H |
| 70 | S21 | | Segment output 21 | |
| 71 | S20 | | Segment output 20 | |
| 72 | S19 | | Segment output 19 | |
| 73 | S18 | | Segment output 18 | |
| 74 | S17 | | Segment output 17 | |
| 75 | S16 | | Segment output 16 | |
| 76 | S15 | | Segment output 15 | |
| 77 | S14 | | Segment output 14 | |
| 78 | S13 | | Segment output 13 | |
| 79 | S12 | | Segment output 12 | |
| 80 | S11 | | Segment output 11 | |
| 81 | S10 | | Segment output 10 | |
| 82 | S9 | | Segment output 9 | |
| 83 | S8 | | Segment output 8 | |
| 84 | S7 | | Segment output 7 | |
| 85 | S6 | | Segment output 6 | |
| 86 | S5 | | Segment output 5 | |
| 87 | S4 | | Segment output 4 | |
| 88 | S3 | | Segment output 3 | |
| 89 | VDD | – | 5V | |
| 90 | S2 | O | Segment output 2 | H |
| 91 | S1 | | Segment output 1 | |
| 92 | | | Not used (Fixed Vfdp) | |
| 93 | G10 | O | Grid output 10 | H |
| 94 | G9 | | Grid output 9 | |
| 95 | G8 | | Grid output 8 | |
| 96 | G7 | | Grid output 7 | |
| 97 | G6 | | Grid output 6 | |
| 98 | G5 | | Grid output 5 | |
| 99 | G4 | | Grid output 4 | |
| 100 | G3 | | Grid output 3 | |

■ M62446FP (D.D & INPUT ASSY : IC103)

• Sound Controller IC (Volume and Tone Control)

● Block Diagram

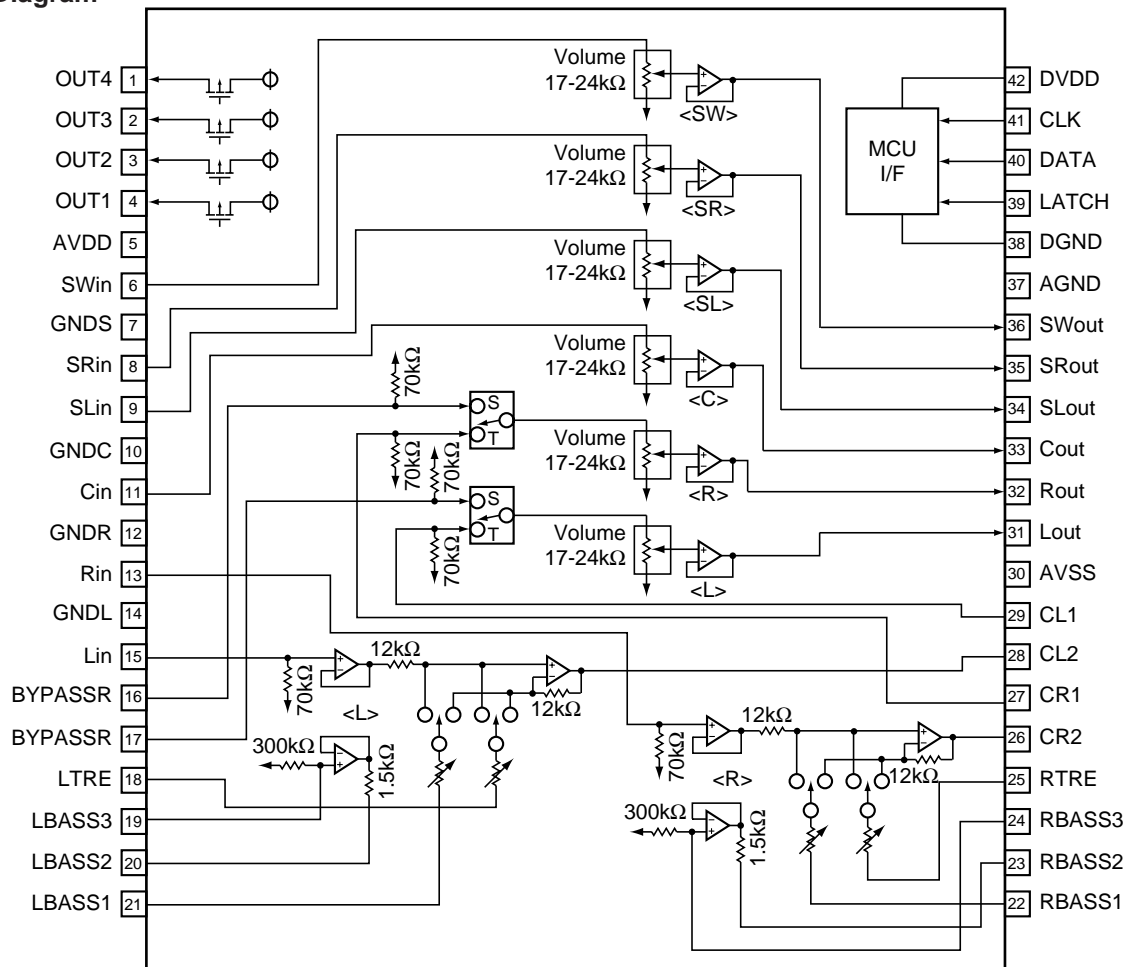

● Pin Function


| No. | Pin Name | Function |
|-----|----------|-----------------------------------|
| 1 | OUT4 | Output port (open drain of PchTr) |
| 2 | OUT3 | |
| 3 | OUT2 | |
| 4 | OUT1 | |
| 5 | AVDD | Analog positive power supply port |
| 7 | GNDS | GND (connect to analog ground) |
| 10 | GNDC | |
| 12 | GNDR | |
| 14 | GNDL | |
| 6 | SWin | Volume input |
| 8 | SRin | |
| 9 | SLin | |
| 11 | Cin | Volume output |
| 36 | SWout | |
| 35 | SRout | |
| 34 | SLout | |
| 33 | Cout | TONE input |
| 13 | Rin | |
| 15 | Lin | L and R Volume input at bypass |
| 16 | BYPASSR | |
| 17 | BYPASSL | L output |
| 31 | Lout | |
| 32 | Rout | R output |

| No. | Pin Name | Function |
|-----|----------|--|
| 18 | LTRE | TONE TREBLE frequency control port |
| 25 | RTRE | |
| 19 | LBASS3 | TONE BASS frequency control port |
| 24 | RBASS3 | |
| 20 | LBASS2 | |
| 23 | RBASS2 | |
| 21 | LBASS1 | TONE output port |
| 22 | RBASS1 | |
| 26 | CR2 | L and R volume input |
| 28 | CL2 | |
| 27 | CR1 | |
| 29 | CL1 | L output |
| 31 | Lout | |
| 32 | Rout | R output |
| 30 | AVSS | Analog negative power supply port |
| 37 | AGND | Analog ground port |
| 38 | DGND | Digital ground port |
| 39 | LATCH | Latch input port |
| 40 | DATA | Data input port |
| 41 | CLK | Clock input port for data transmission |
| 42 | DVDD | Digital power supply port |

■ W24257AJ-12 (D.D & INPUT ASSY : IC1301)

• 32K × 8 High-Speed CMOS Static RAM

● Block Diagram

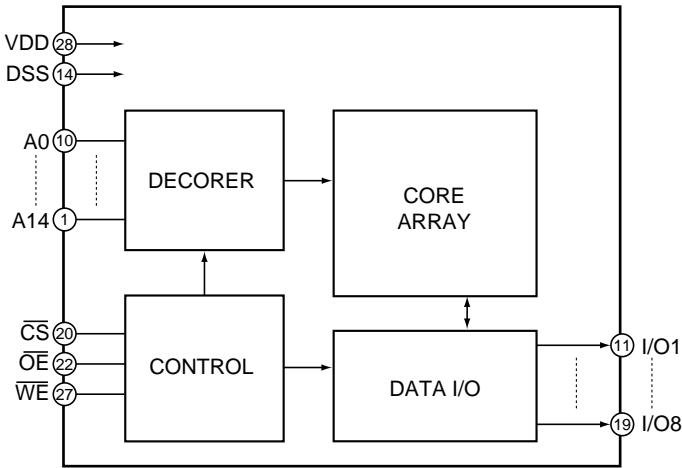


● Pin Function

| No. | Pin Name | Function |
|-----|----------|---------------------|
| 1 | A14 | Addres Inputs |
| 2 | A12 | |
| 3 | A7 | |
| 4 | A6 | |
| 5 | A5 | |
| 6 | A4 | |
| 7 | A3 | |
| 8 | A2 | |
| 9 | A1 | |
| 10 | A0 | |
| 21 | A10 | Data Inputs/Outputs |
| 23 | A11 | |
| 24 | A9 | |
| 25 | A8 | |
| 26 | A13 | |
| 11 | I/O1 | |
| 12 | I/O2 | |
| 13 | I/O3 | |
| 15 | I/O4 | |
| 16 | I/O5 | |
| 17 | I/O6 | Ground |
| 18 | I/O7 | |
| 19 | I/O8 | |
| 14 | Vss | |
| 20 | CS | Chip Select Input |
| 22 | OE | Output Enable Input |
| 27 | WE | Write Enable Input |
| 28 | Vdd | Power Supply |

■ TC9273F-007 (D.D & INPUT ASSY : IC101)

• Analog Switch Array

● Block Diagram

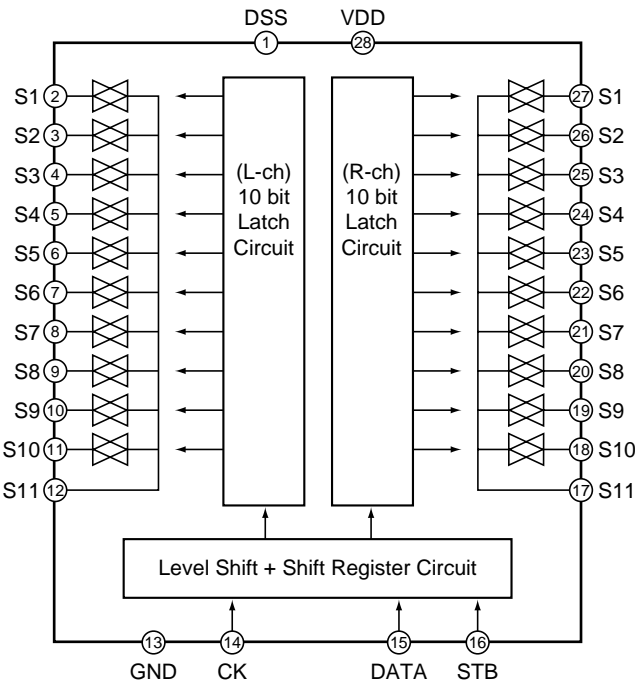

● Pin Function

| No. | Pin Name | Function |
|--------|----------|--------------------|
| 1 | VSS | Minus Power Supply |
| 2, 27 | S1 | Input and Output |
| 3, 26 | S2 | |
| 4, 25 | S3 | |
| 5, 24 | S4 | |
| 6, 23 | S5 | |
| 7, 22 | S6 | |
| 8, 21 | S7 | |
| 9, 20 | S8 | |
| 10, 19 | S9 | |
| 21, 18 | S10 | |
| 26, 17 | S11 | Digital Ground |
| 13 | GND | |
| 14 | CK | |
| 15 | DATA | |
| 16 | STB | |
| 28 | VDD | Plus Power Supply |

■ AAV7072 (FRONT ASSY : V401)

- **Pin Assignment**



NOTE 1) F1, F2 --- Filament
2) NP ----- No pin
3) NX ----- No extend pin
4) DL ----- Datum Line
5) 1G~10G --- Grid

- **Grid Assignment**



● Anode Connection


| | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|-----|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-------|
| P1 | STEREO | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | dB |
| P2 | TUNED | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | 2a |
| P3 | MONO | h | h | h | h | h | h | h | h | 2b |
| P4 | B | j | j | j | j | j | j | j | j | 2f |
| P5 | A | k | k | k | k | k | k | k | k | 2g |
| P6 | SP | b | b | b | b | b | b | b | b | 2c |
| P7 | MONITOR | f | f | f | f | f | f | f | f | 2e |
| P8 | S. BASS | m | m | m | m | m | m | m | m | 2d |
| P9 | DIRECT | g | g | g | g | g | g | g | g | 1a |
| P10 | LOUDNESS | c | c | c | c | c | c | c | c | 1b |
| P11 | MIDNIGHT | e | e | e | e | e | e | e | e | 1f |
| P12 | ATT | r | r | r | r | r | r | r | r | 1g |
| P13 | DSP | p | p | p | p | p | p | p | p | 1c |
| P14 | ○ | n | n | n | n | n | n | n | n | 1e |
| P15 | DIGITAL | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | 1d |
| P16 | PRO LOGIC | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | |
| P17 | DTS | Dp2 | Dp2 | Dp2 | Dp2 | Dp2 | Dp2 | Dp2 | Dp2 | RDS |
| P18 | DIGITAL | Dp1 | Dp1 | Dp1 | Dp1 | Dp1 | Dp1 | Dp1 | Dp1 | RFATT |
| P19 | DIGITAL | S1 | S1 | S1 | S1 | S1 | S1 | S1 | S1 | EON |
| P20 | ANALOG | S4 | S4 | S4 | S4 | S4 | S4 | S4 | S4 | (EON) |
| P21 | S5 | S2 | S2 | S2 | S2 | S2 | S2 | S2 | S2 | - |
| P22 | dB | S3 | S3 | S3 | S3 | S3 | S3 | S3 | S3 | - |

8. PANEL FACILITIES AND SPECIFICATIONS

8.1 PANEL FACILITIES

Front Panel

The illustration shows VSX-D309.

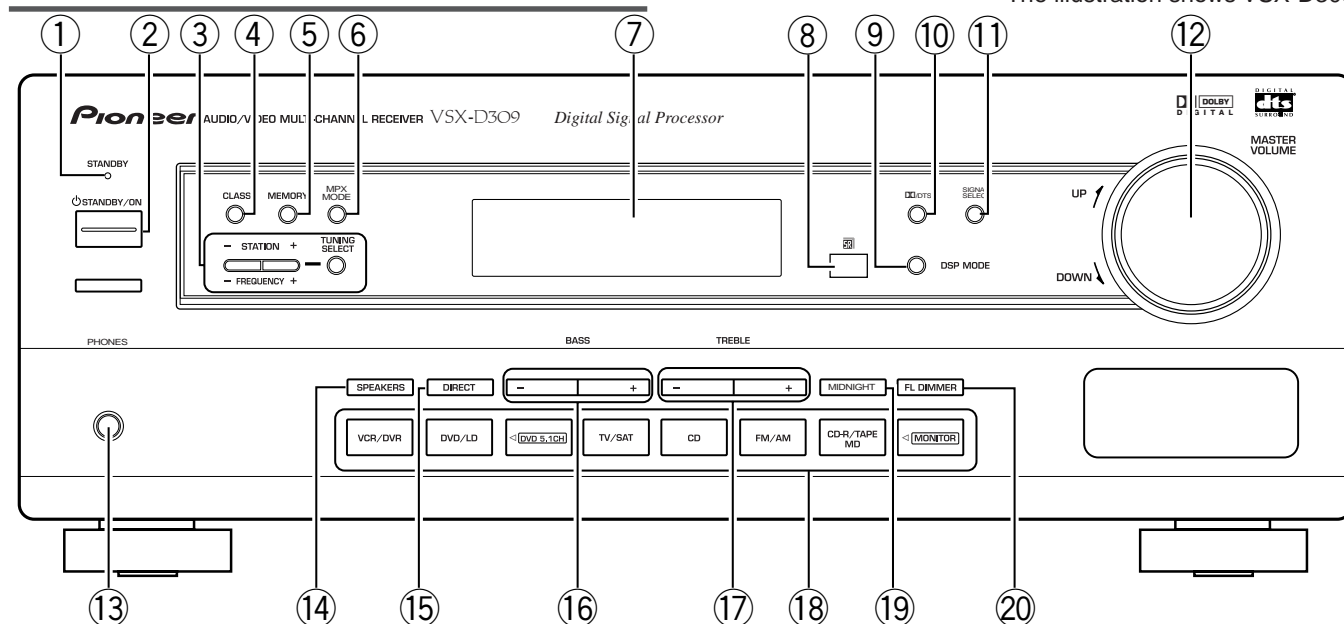

① STANDBY indicator

Lights when the receiver is in standby mode (note that the receiver consumes a small amount of power (1W) in standby mode).

② STANDBY/ON button

Switches the receiver between on and standby.(note that the receiver consumes a small amount of power (1W) in standby mode).

③ STATION (+/-), FREQUENCY (+/-), TUNING SELECT buttons

STATION (+/-)

Selects station memories when using the tuner.

FREQUENCY (+/-)

Selects the frequency when using the tuner.

TUNING SELECT

Switches between station memory and frequency select modes.

④ CLASS button

Switches between the three banks (classes) of station memories.

⑤ MEMORY button

Press to memorize a station for recall using the STATION (+/-) buttons.

⑥ MPX button

If the **TUNED** or **STEREO** indicators don't light when tuning to an FM station because the signal is weak, press the MPX button to switch the receiver into mono reception mode. This should improve the sound quality and allow you to enjoy the broadcast.

⑦ Display

⑧ Remote sensor

Receives the signals from the remote control.

⑨ DSP MODE button

Use to switch between the various DSP modes available (**HALL1**, **HALL 2**, **JAZZ**, **DANCE**, **THEATER1**, **THEATER 2**) and **DSP off**. Use to create different surround sound effects from any stereo source.

⑩ /DTS button

Use to switch between the various Dolby/DTS surround modes.

⑪ SIGNAL SELECT button

Use to select between an analog or digital signal.

⑫ MASTER VOLUME

Use to set the overall listening volume.

⑬ PHONES jack

Use to connect headphones but this does not switch the speakers off.

⑭ SPEAKER button

Use to switch the speaker system on or off.

⑮ DIRECT button

Use to switch DIRECT playback on or off. This mode bypasses the tone controls and channel levels for the most accurate reproduction of a program source.

⑯ BASS (+/-) buttons

Use to increase/decrease bass (within a range of -6dB to 6dB in 2dB steps).

⑰ TREBLE (+/-) buttons

Use to increase/decrease treble (within a range of -6dB to 6dB in 2dB steps).

⑱ Function buttons

Use to select a source for playback or recording.

⑲ MIDNIGHT button

Use when listening to movie soundtracks at low volume. This feature will enable you to hear quiet sounds and not get jolted by loud or sudden sound effects.


⑳ FL DIMMER button (VSX-D309)

Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

MONITOR button (VSX-D409)

Press to switch tape monitoring on/off.

Display

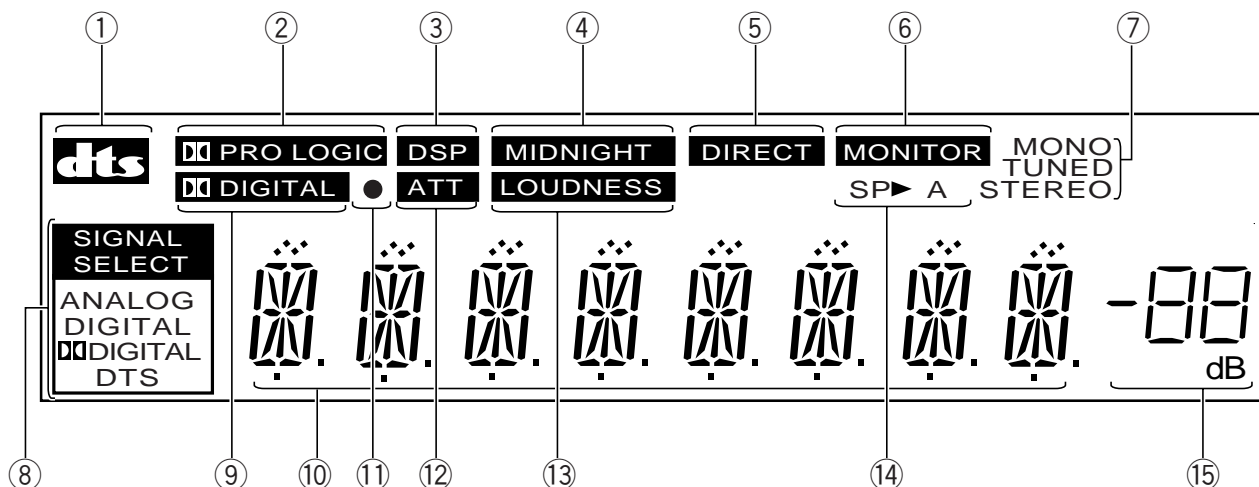

① DTS indicator

Lights when DTS mode is being used.

② PRO LOGIC indicator

When the PRO LOGIC Surround/DTS mode of the receiver is on, this lights to indicate playback of a two channel source.

③ DSP indicator

Lights when any Advanced Theater or DSP mode is selected.

④ MIDNIGHT indicator

Lights when MIDNIGHT listening mode is in use.

⑤ DIRECT indicator

Lights when source DIRECT is in use. This function bypasses all tone, balance, DSP and Dolby Surround effects.

⑥ MONITOR indicator

Lights when MONITOR is selected to hear a recording as it's being made.

⑦ TUNER indicators

MONO:

Lights when the mono mode is set using the MPX MODE button.

TUNED:

Lights when a broadcast is being received.

STEREO:

Lights when a stereo FM broadcast is being received in auto stereo mode.

⑧ SIGNAL SELECT indicators

Light to indicate the type of input signal assigned for the current component (see "Front Panel", ⑪, SIGNAL SELECT).

ANALOG : Lights when an analog signal is selected.

DIGITAL : Lights when a digital audio signal is selected.

DOLBY DIGITAL : Lights when a DOLBY DIGITAL signal is played.

DTS: Lights when a source with DTS audio signals is played.

⑨ DIGITAL indicator

When the DIGITAL Surround/DTS mode of the receiver is on, this lights to indicate playback of a Dolby Digital signal.

⑩ CHARACTER display

Shows the radio frequency or function (DVD/LD, CD, etc.) receiver is using .

⑪ OVERLOAD indicator

This lights when an analog signal is too strong (the SIGNAL SELECT needs to be on ANALOG). It indicates the sound is distorting and the signal should be reduced.

⑫ ATT indicator

Lights when ATT is used to attenuate (reduce) the level of the input signal (can only be used in ANALOG mode).

⑬ LOUDNESS indicator

Lights when the LOUDNESS, used to boost the bass and treble in quiet listening, is on.

⑭ SPEAKER indicator


Shows if the speaker system is on or not. SP > A means speakers are switched on. SP > means speakers are switched off.

⑮ MASTER VOLUME LEVEL

Shows the overall volume level. Volume level is maintained even when the power is off. ---dB indicates the minimum level, and 0dB indicates the maximum level.

- Depending on the level settings you make for individual channels, the MAX level can range between -10dB and 0dB.

Remote Control

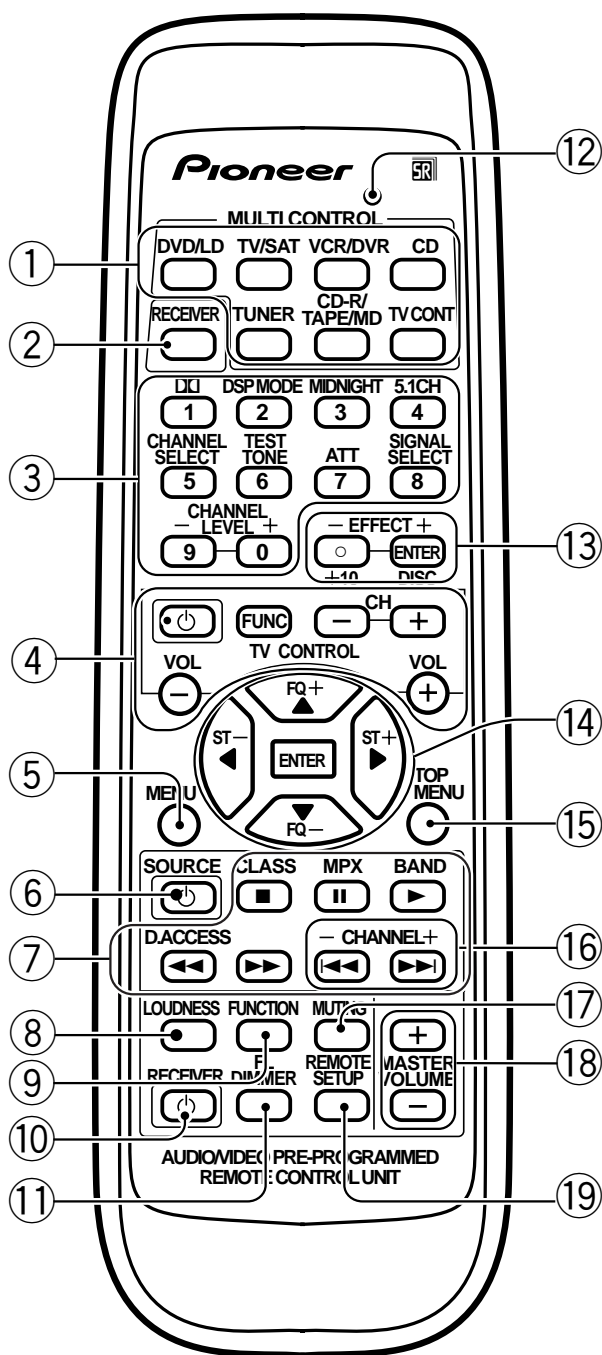

① MULTI CONTROL buttons

Use to put the receiver/remote control in the stated mode. For other equipment controls, see Controlling the Rest of Your System.

② RECEIVER button

Use this button when setting up the surround sound for the receiver.

③ NUMBER/MODE buttons

Use the number buttons to select the radio frequency in tuner DIRECT ACCESS mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 CH setting is on).

DD
Use to put receiver in DOLBY DIGITAL and DTS modes. To use first press the RECEIVER button then operate this button.

DSP mode

Use to put receiver in one of the DSP modes. To use first press the RECEIVER button then operate this button.

MIDNIGHT

Use to put receiver in MIDNIGHT mode. To use first press the RECEIVER button then operate this button.

5.1 CH

When the DVD/LD or DVD 5.1 CH function is selected each press switches the DVD/LD input between DVD/LD and DVD 5.1 CH. To use first press the RECEIVER button then operate this button.

CHANNEL SELECT

Use to select a speaker when setting up the surround sound of the receiver. To use first press the RECEIVER button then operate this button.

TEST TONE

Use to sound the TEST TONE when setting up the surround sound of the receiver. To use first press the RECEIVER button then operate this button.

ATT

Use to attenuate (lower) the level of an analog input signal and prevent distortion. To use first press the RECEIVER button then operate this button.

CHANNEL LEVEL +/-

Use to set up the levels of the surround sound of the receiver. To use first press the RECEIVER button then operate this button.

SIGNAL SELECT

Use to select the proper signal (analog, digital) for the source you are inputting. To use first press the RECEIVER button then operate this button.

- ④ **THE FOLLOWING FOUR SETS OF BUTTONS ARE DEDICATED TV CONTROL. THEY ARE ONLY USED FOR CONTROLLING YOUR TV.**

FUNC button

Use select the TV function.

TV POWER button

Use to turn on the power of the TV.

TV CHANNEL +/- buttons

Use to change channels on your TV.

TV VOLUME +/- buttons

Use to adjust the volume on your TV.

- ⑤ **MENU button**

Use to access different menus associated with your DVD player.

- ⑥ **SOURCE button**

Use to turn on/off other components connected to the receiver.

- ⑦ **THE FOLLOWING BUTTONS ARE BOTH CONTROLS FOR OTHER COMPONENTS (LIKE A DVD PLAYER) AND DEDICATED TUNER CONTROLS. THE TUNER CONTROLS ARE EXPLAINED HERE. YOU CAN USE THEM AFTER YOU HAVE PUSHED THE TUNER MULTI CONTROL BUTTON.**

CLASS button

Use to switch between the three banks (classes) of station memories.

MPX MODE button

Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality. Also, this is the pause button for CDs, tapes, DVDs, etc.

BAND button

Use to switch between the AM and FM band when in TUNER mode.

D. ACCESS button


Use to directly access a radio station by pressing the number of the station you want.

- ⑧ **LOUDNESS button**

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

- ⑨ **FUNCTION button**

Use select the playback or recording source. This button lets you cycle through the different functions of the receiver in the following order: CD, tuner, CDR/TAPE, VCDR/DVR, DVD/LD, DVD 5.1 CH., and TV/SAT. etc.

- ⑩ **RECEIVER  (POWER) button**

This switches between STANDBY mode and power ON for this receiver.

- ⑪ **FL DIMMER button**





Use this button to make the fluorescent display (FL) dimmer or brighter. There are three brightness settings as well as an off setting.

- ⑫ **LED DISPLAY**

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes, with specific meanings.

- ⑬ **EFFECT +/- buttons**

Use to add or subtract the amount of effect in different DSP sound modes or advanced listening modes.

- ⑭ **    (FQ +/-) & ENTER buttons**

Use these arrow buttons when setting up your surround sound system. These buttons are also used to control DVD menus/options and for deck 1 of a double cassette deck player. The FQ +/- buttons can be used to find radio frequencies.

- ⑮ **TOP MENU button**

In DVD mode this button brings you to the top or most fundamental menu.

- ⑯ **CHANNEL +/- buttons**

Use to select the stations of memorized radio frequencies. Also use to skip tracks backward or forward on CDs, DVDs, etc.

- ⑰ **MUTING button**

Use to mute the sound or restore the sound if it has been muted.

- ⑱ **MASTER VOLUME +/- buttons**


Use to set the overall listening volume.

- ⑲ **REMOTE SETUP button**

Use this button when setting up the remote control to control other components.

Connecting Audio Components

Connect your audio components as shown below. These are analog connections. When connecting equipment, always make sure the power switched off and the power cord is disconnected from the wall outlet.

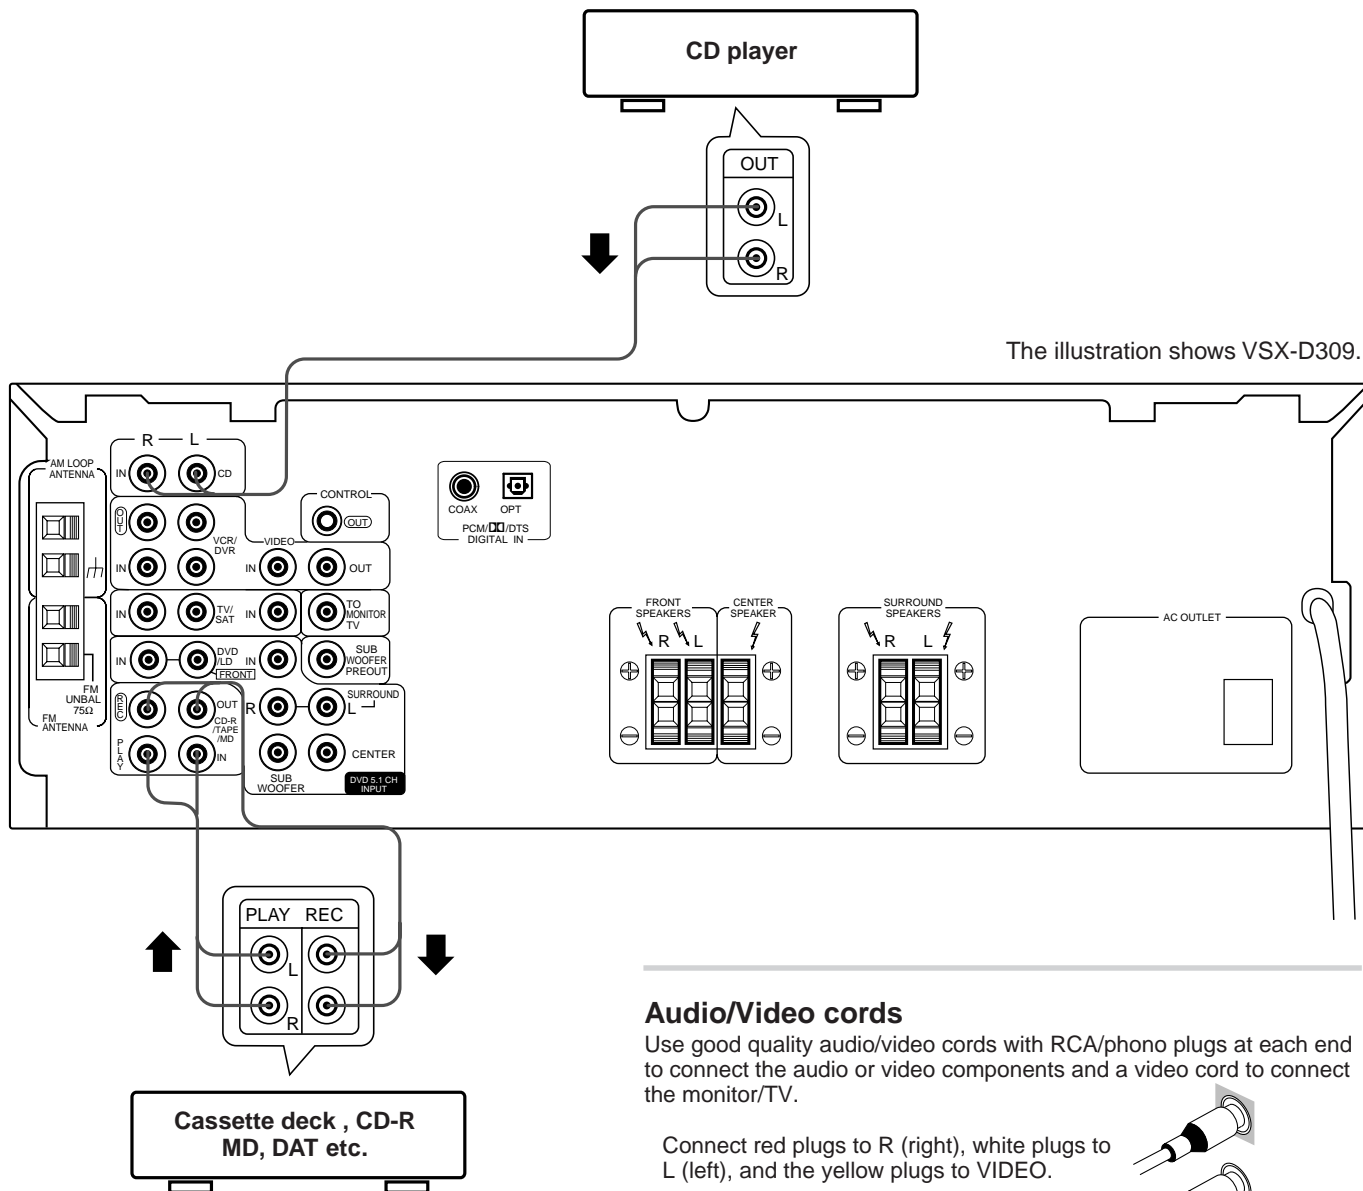


Audio/Video cords

Use good quality audio/video cords with RCA/phono plugs at each end to connect the audio or video components and a video cord to connect the monitor/TV.

Connect red plugs to R (right), white plugs to L (left), and the yellow plugs to VIDEO.

Be sure to push home the plugs into their sockets.

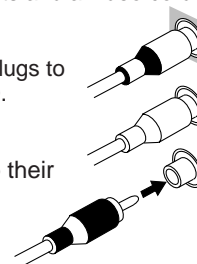

Cassette deck placement

Depending on where the cassette deck is placed, noise caused by leakage flux from the transformer in the receiver may occur during playback. If you experience noise, move the cassette deck farther away from the receiver.

8.2 SPECIFICATIONS

Amplifier Section

Continuous average power output of 60 watts* per channel, min., at 8 ohms, from 40 Hz to 20,000 Hz with no more than 0.2 % total harmonic distortion (front). (VSX-D309)**

Continuous average power output of 100 watts* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.2 % total harmonic distortion (front). (VSX-D409)**

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.

** Measured by Audio Spectrum Analyzer.

Continuous Power Output

Front 60 W per channel (1kHz, 0.8 %, 8 Ω) (VSX-D309)
Center 60 W (1kHz, 0.8 %, 8 Ω) (VSX-D309)
Surround 60 W per channel (1kHz, 0.8 %, 8 Ω) (VSX-D309)

Front 100 W per channel (1kHz, 0.8 %, 8 Ω) (VSX-D409)
Center 100 W (1kHz, 0.8 %, 8 Ω) (VSX-D409)
Surround 100 W per channel (1kHz, 0.8 %, 8 Ω) (VSX-D409)

Input (Sensitivity/Impedance)

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 200 mV/47 k Ω

Frequency Response

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 5 Hz to 100,000 Hz ± 3 dB

Output (Level/Impedance)

VCR/DVR REC, CD-R/TAPE/MD REC
..... 200 mV/2.2 k Ω

Tone Control

BASS ± 6 dB (100 Hz)
TREBLE ± 6 dB (10 kHz)
LOUDNESS +9 dB/+9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio (IHF, short circuited, A network)

CD, VCR/DV-R, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 96 dB

Signal to Noise Ratio [EIA, at 1 W (1 kHz)]

CD, VCR/DV-R, CD-R/TAPE/MD, DVD/LD, TV/SAT
..... 79 dB

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other worldwide patents issues and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. © 1996 Digital Theater Systems, Inc. All rights reserved.

Video Section

Input (Sensitivity/Impedance)

VCR/DVR, DVD/LD, TV/SAT 1 Vp-p/75 Ω

Output (Level/Impedance)

VCR/DVR, MONITOR 1 Vp-p/75 Ω

Frequency Response

VCR/DVR, MONITOR 5 Hz to 7 MHz ± 0 dB

Signal-to-Noise Ratio 55 dB

Cross Talk 55 dB

FM Tuner Section

Frequency Range 87.5 MHz to 108 MHz

Usable Sensitivity Mono: 13.2 dBf, IHF (1.3 μ V/ 75 Ω)

50 dB Quieting Sensitivity Mono: 20.2 dB
Stereo: 38.6 dBf

Signal-to-Noise Ratio Mono: 73 dB (at 85 dBf)

Stereo: 70 dB (at 85 dBf)

Distortion Stereo: 0.5 % (1 kHz)

Alternate Channel Selectivity 60 dB (400 kHz)

Stereo Separation 40 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz (± 1) dB

Antenna Input (DIN) 75 Ω unbalanced

AM Tuner Section

Frequency Range 530 kHz to 1,700 kHz

Sensitivity (IHF, Loop antenna) 350 μ V/m

Selectivity 25 dB

Signal-to-Noise Ratio 50 dB

Antenna Loop antenna

Miscellaneous

Power Requirements AC 120 V, 60 Hz

Power Consumption 180 W (VSX-D309)

Power Consumption 250 W (VSX-D409)

In Standby 1 W

Dimensions 420 (W) x 158 (H) x 391 (D) mm
(16-9/16 (W) x 6-4/16 (H) x 15-6/16 (D) in.)

Weight (without package) 8.4 kg
(18 lb 8 oz.)

Furnished Parts

FM Antenna 1

AM Loop Antenna 1

Dry Cell Batteries

size AA (IEC R6P) 2

Remote Control Unit 1


Operating Instructions 1

NOTE:


Specifications and the design are subject to possible modifications without notice, due to improvements.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.


Accessories

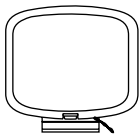


AM loop antenna
(ATB7009)

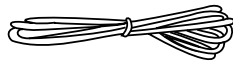

FM wire antenna
(ADH7004)

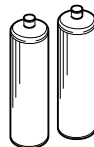

AA size IEC R6P
batteries (x2)

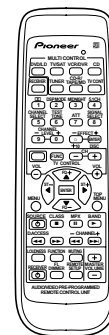

Remote control unit
(AXD7246)